



# ASSEMBLY INSTRUCTION














**SKU CODE: WF322373 / WF322374**

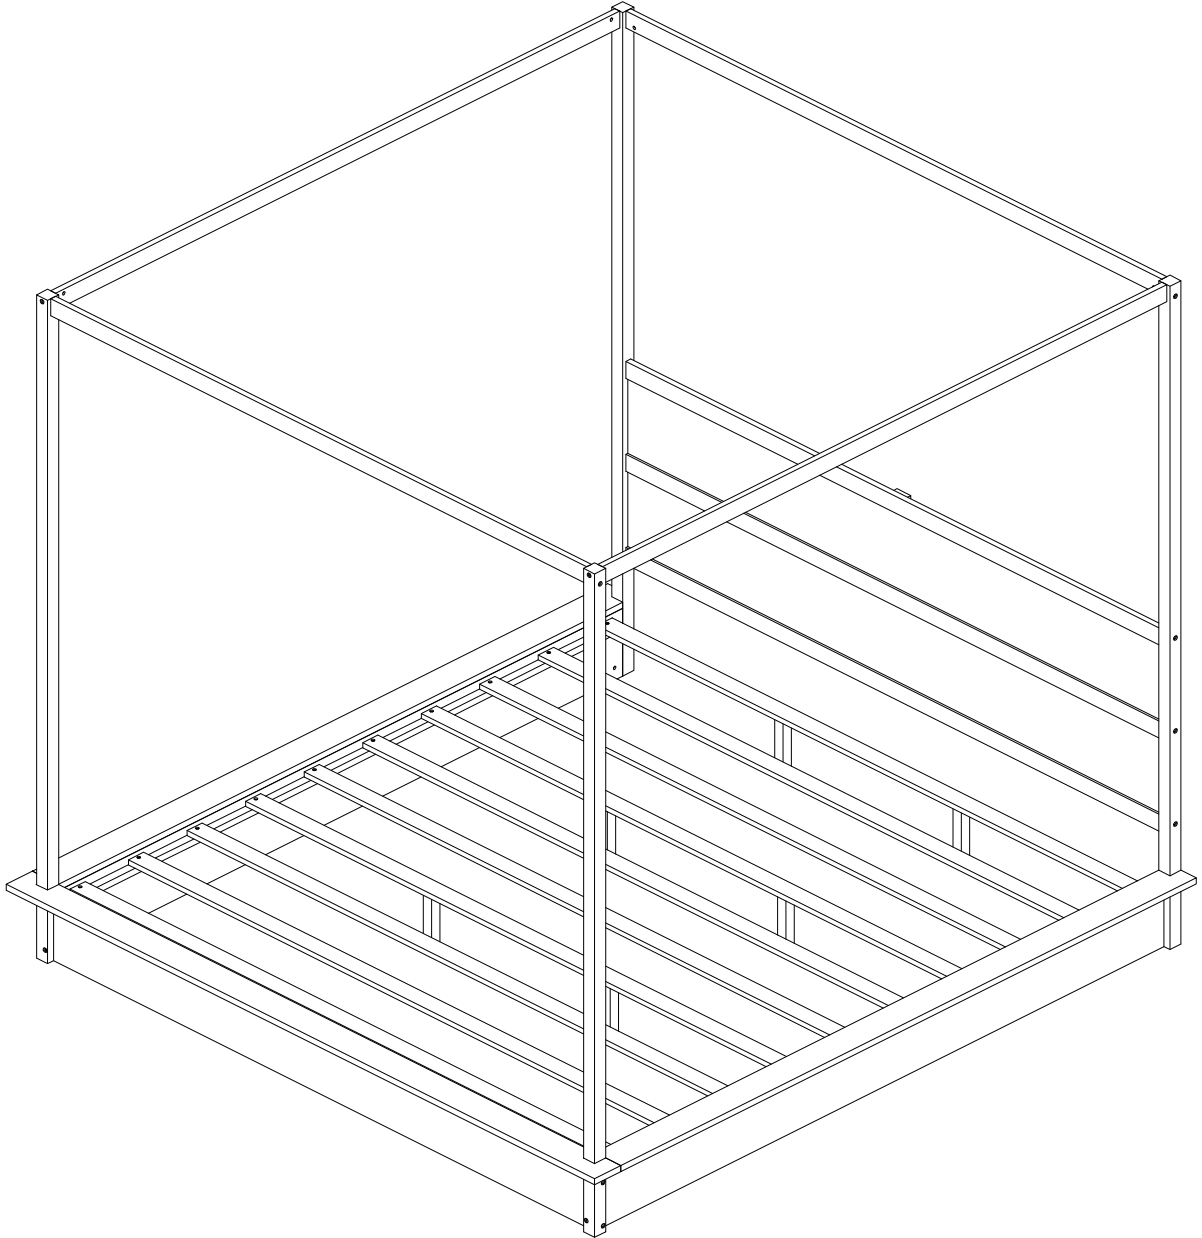


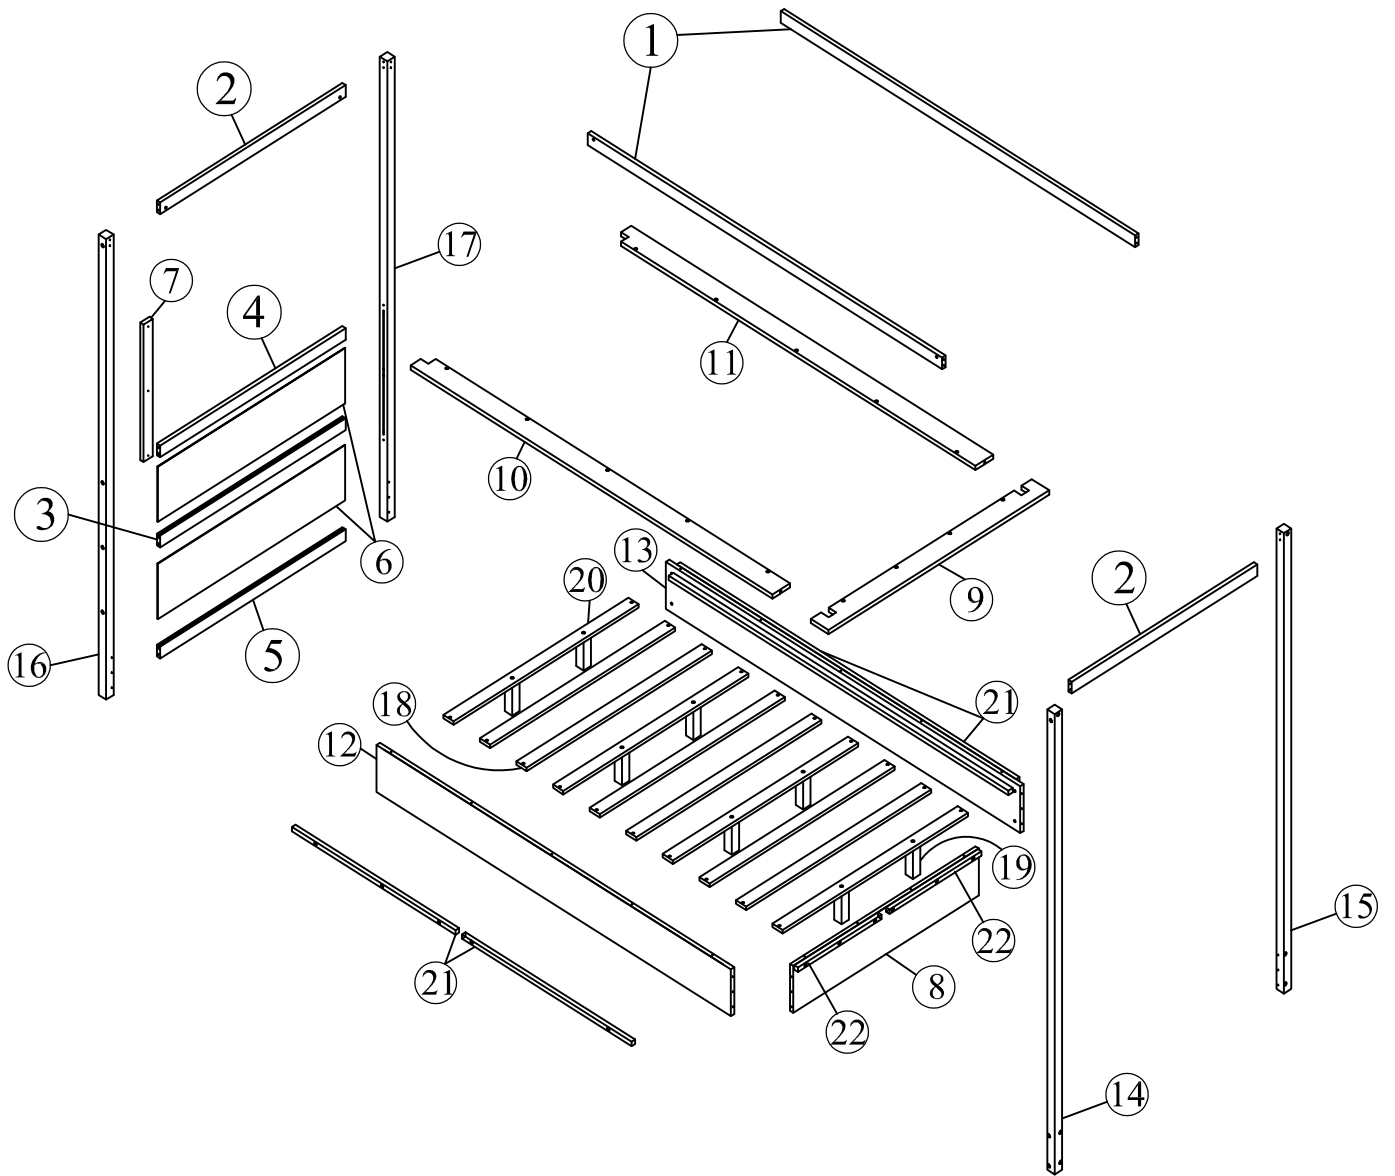



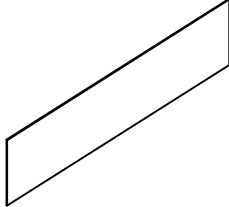




Detail:

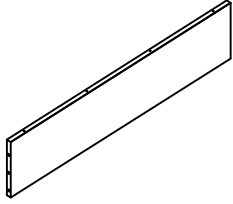













## Part List (WF322373 )

<p>⑦ x1</p>  <p style="text-align: center;"><b>Connected bar</b></p>	<p>⑧ x1</p>  <p style="text-align: center;"><b>Footboard</b></p>
<p>⑫ x1</p>  <p style="text-align: center;"><b>Back Side Rail</b></p>	<p>⑬ x1</p>  <p style="text-align: center;"><b>Front Side Rail</b></p>
<p>⑭ x1</p>  <p style="text-align: center;"><b>Back (left) Leg</b></p>	<p>⑮ x1</p>  <p style="text-align: center;"><b>Front (left) Leg</b></p>
<p>⑯ x1</p>  <p style="text-align: center;"><b>Back (right) Leg</b></p>	<p>⑰ x1</p>  <p style="text-align: center;"><b>Front (right) Leg</b></p>
<p>⑲ x8</p>  <p style="text-align: center;"><b>Support Leg</b></p>	<p>⑱ x4</p>  <p style="text-align: center;"><b>Slats</b></p>
<p>⑳ x4</p>  <p style="text-align: center;"><b>Slats</b></p>	<p>㉑ x4</p>  <p style="text-align: center;"><b>Wood Bar</b></p>
	<p>㉒ x2</p>  <p style="text-align: center;"><b>Wood Bar</b></p>


# Part List (WF322374 )

<p>① x2</p>  <p><b>Roof rill</b></p>	<p>② x2</p>  <p><b>Top guard</b></p>
<p>③ x1</p>  <p><b>Mid guard panel</b></p>	<p>④ x1</p>  <p><b>Top guard panel</b></p>
<p>⑤ x1</p>  <p><b>Bottom guard panel</b></p>	<p>⑥ x2</p>  <p><b>Panel heaboard</b></p>
<p>⑨ x1</p>  <p><b>Top Side Rail</b></p>	<p>⑩ x1</p>  <p><b>Top Side Rail</b></p>
<p>⑪ x1</p>  <p><b>Top Side Rail</b></p>	<p>⑱ x2</p>  <p><b>Slats</b></p>





## Hardware List (WF322374 )


No.	OUTLOOK	DESC	QTY
(A)		Dowel Ø8*30mm	20pcs
(B)		Bolts M6*80mm	26pcs
(C)		Bolts M6*30mm	8pcs
(D)		Bolts M6*35mm	14pcs
(E)		Cross dowel M6*13mm	26pcs
(G)		Flat head screw #8*25mm	27pcs
(H)		Flat head screw #7*12mm	30pcs
(I)		Pas wood	2pcs
(K)		Led Light	1pc
(L)		Plastic brace	15pcs
(O)		Allen key 60*22*4mm	1pc
(J)		Flat head screw #8*30mm	18pcs

**ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)**




# STEP 1

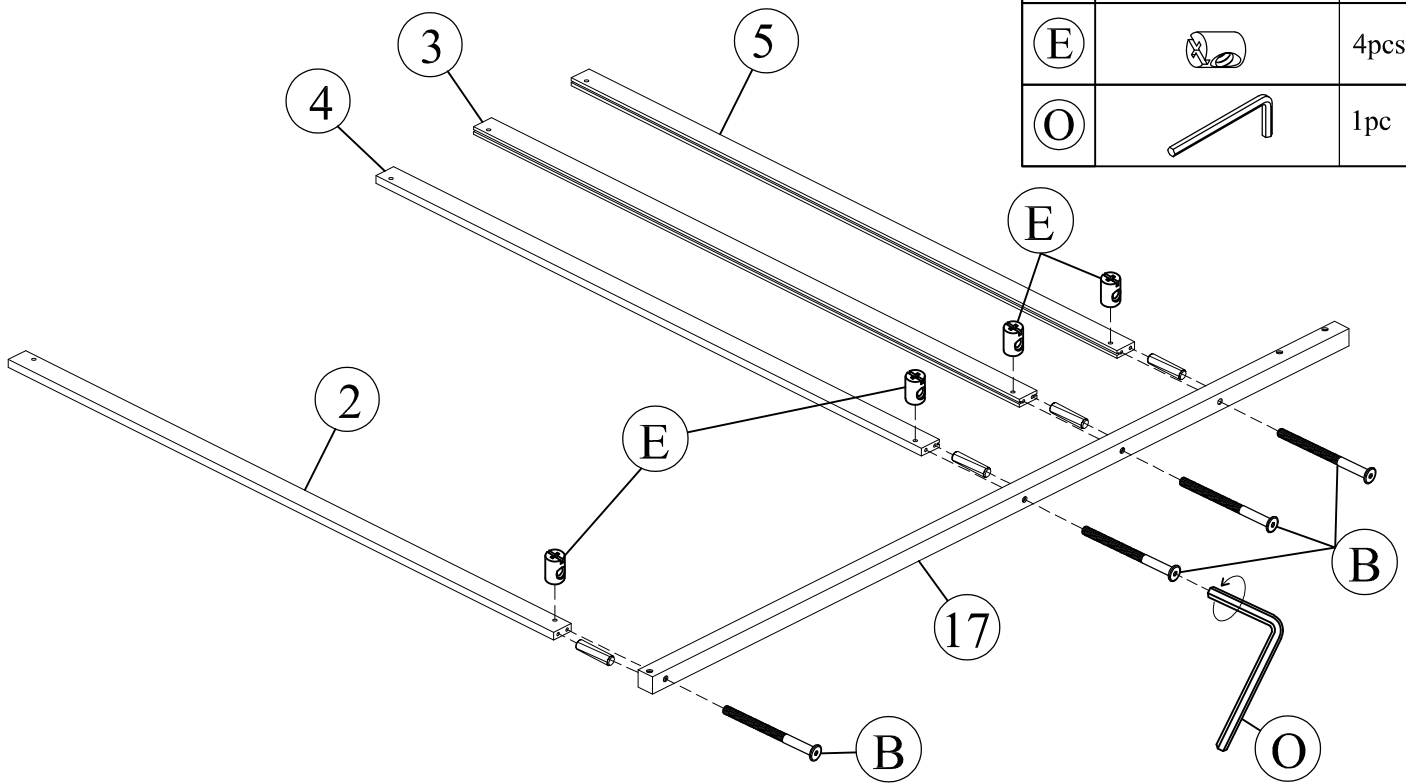



(A)		4pcs
(B)		4pcs
(E)		4pcs
(O)		1pc

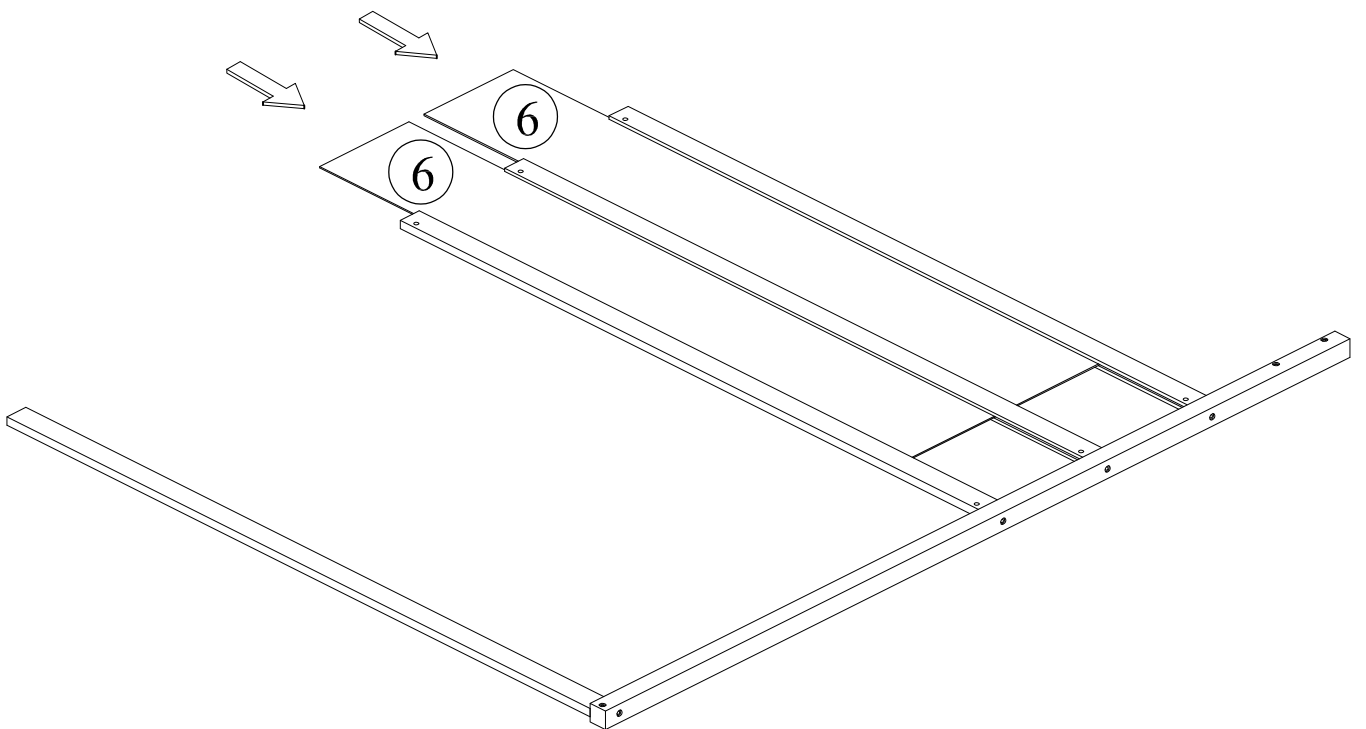


# STEP 2




### STEP 3

(A)		4pcs
(B)		4pcs
(E)		4pcs
(O)		1pc

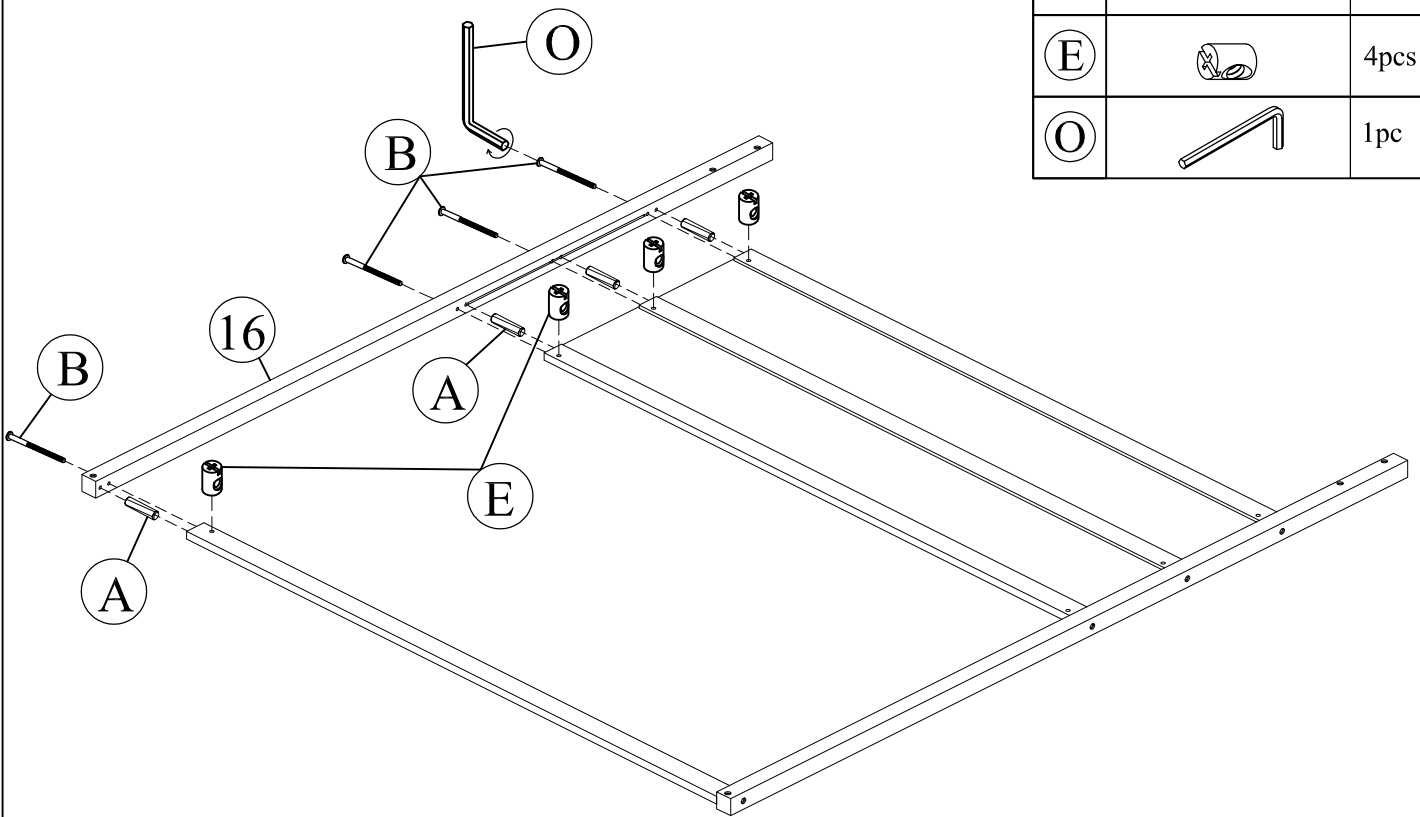


### STEP 4

(J)		12pcs
-----	---	-------

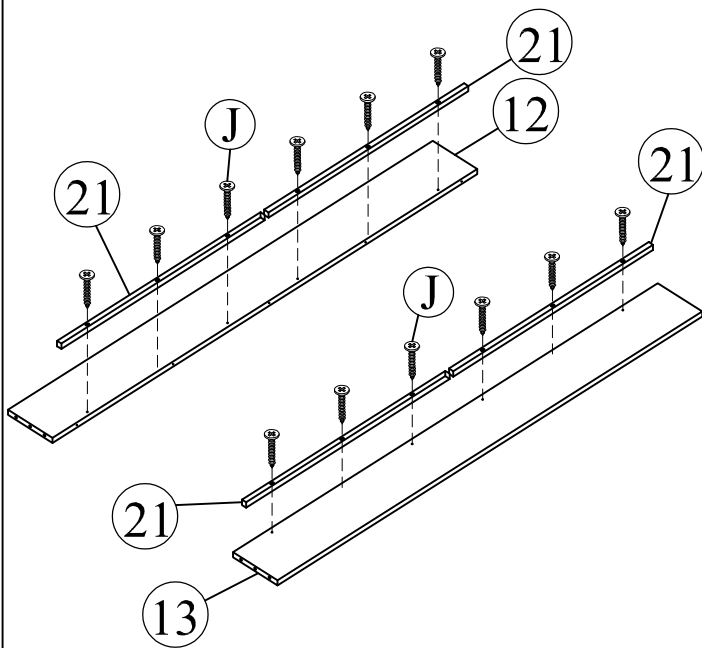


### STEP 4.1

(J)		6pcs
-----	---	------

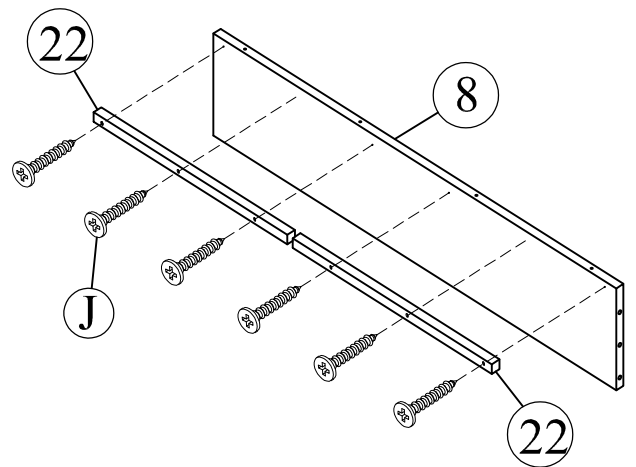





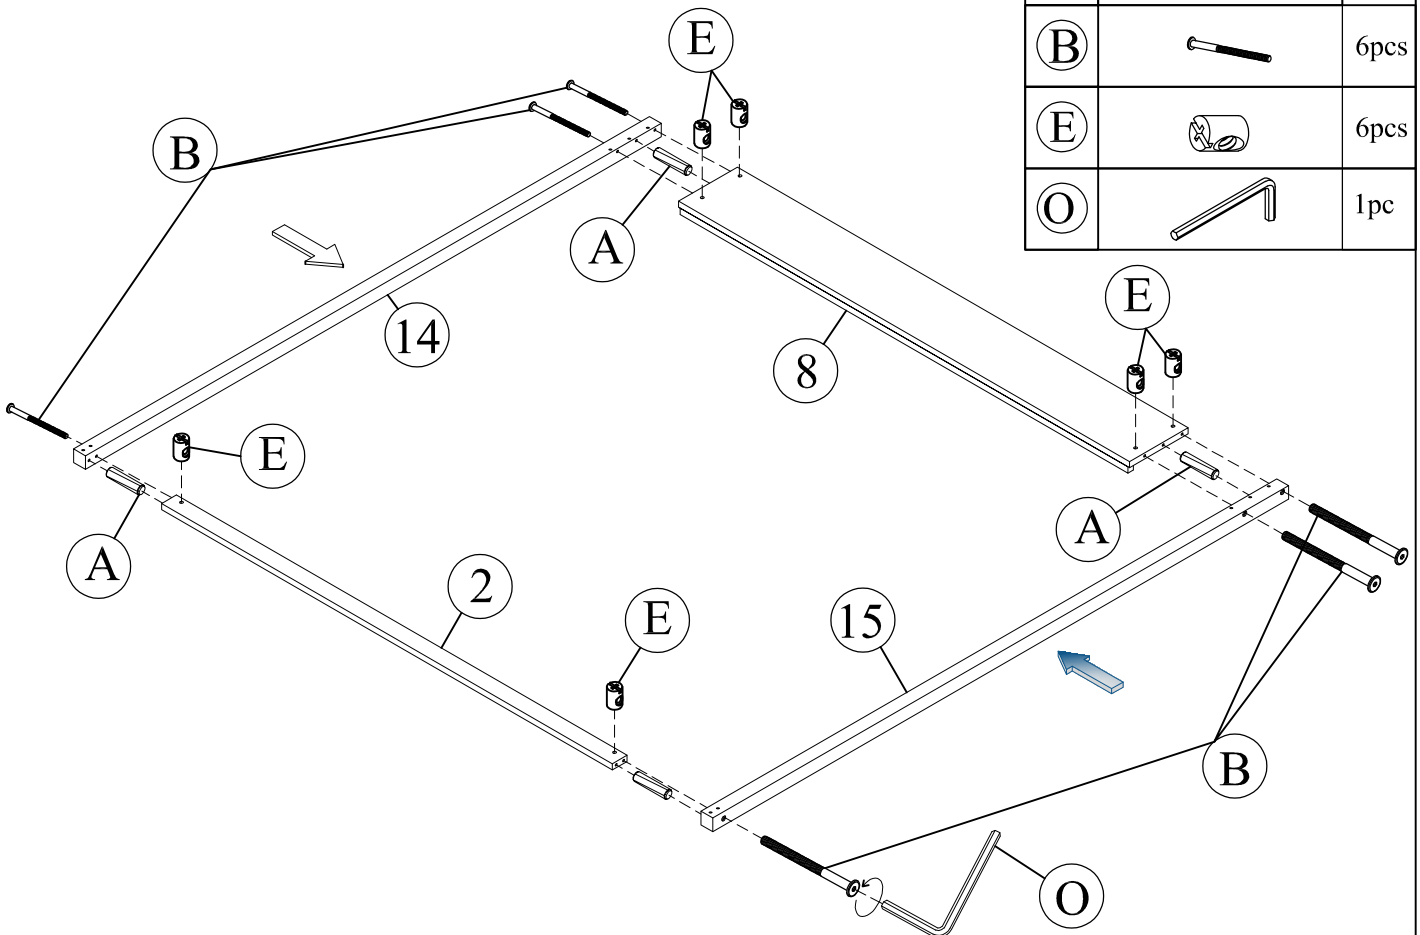
# STEP 5

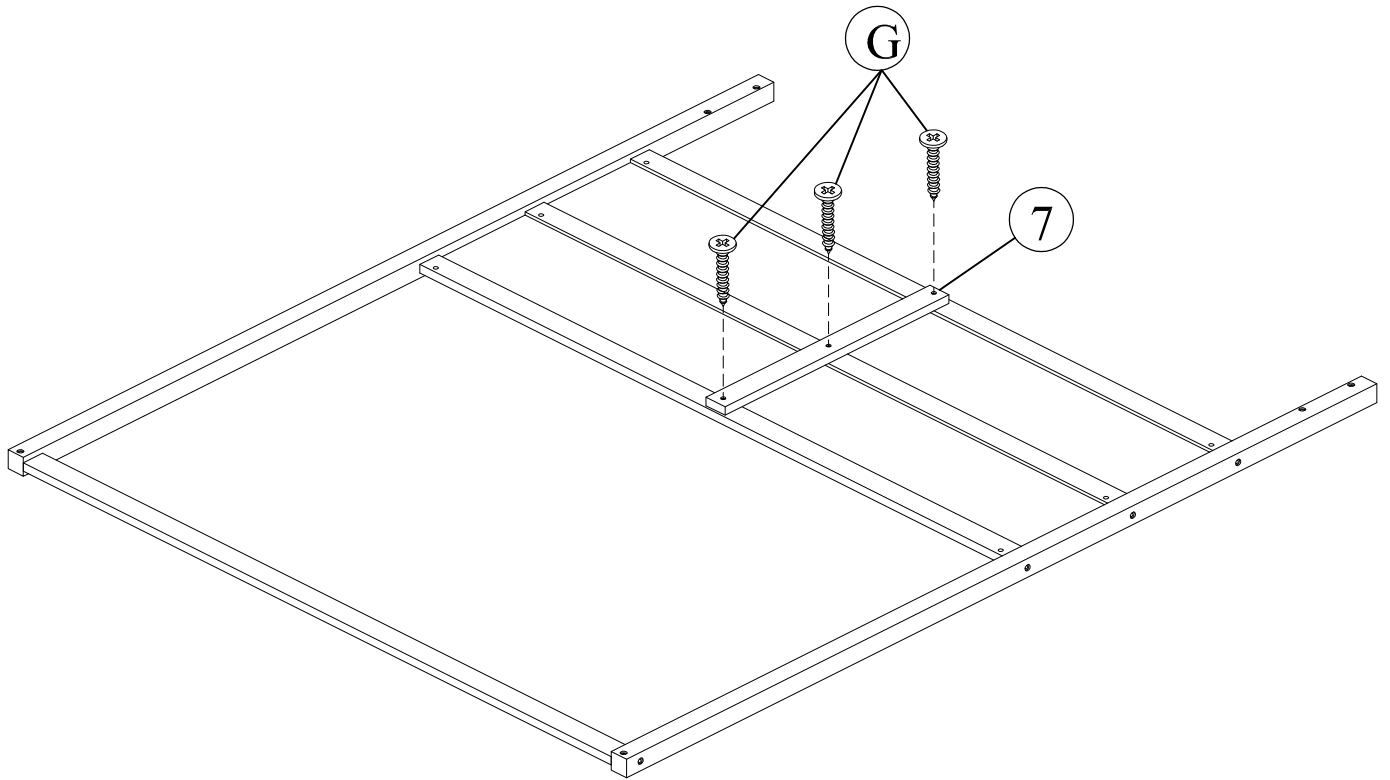G		3pcs
---	---	------







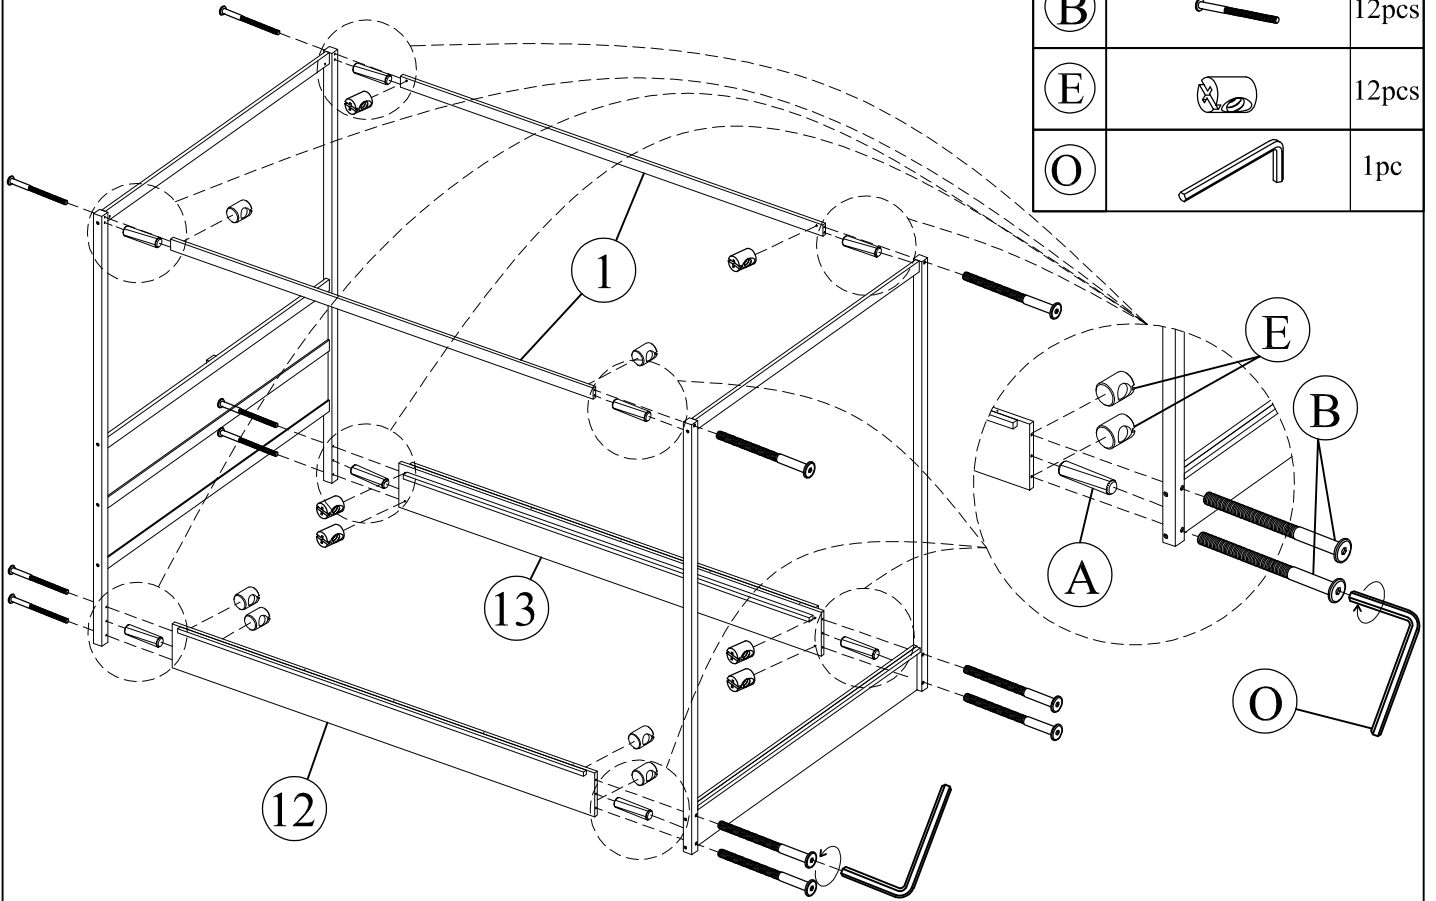
# STEP 6

A		4pcs
B		6pcs
E		6pcs
O		1pc




# STEP 7


(A)		8pcs
(B)		12pcs
(E)		12pcs
(O)		1pc



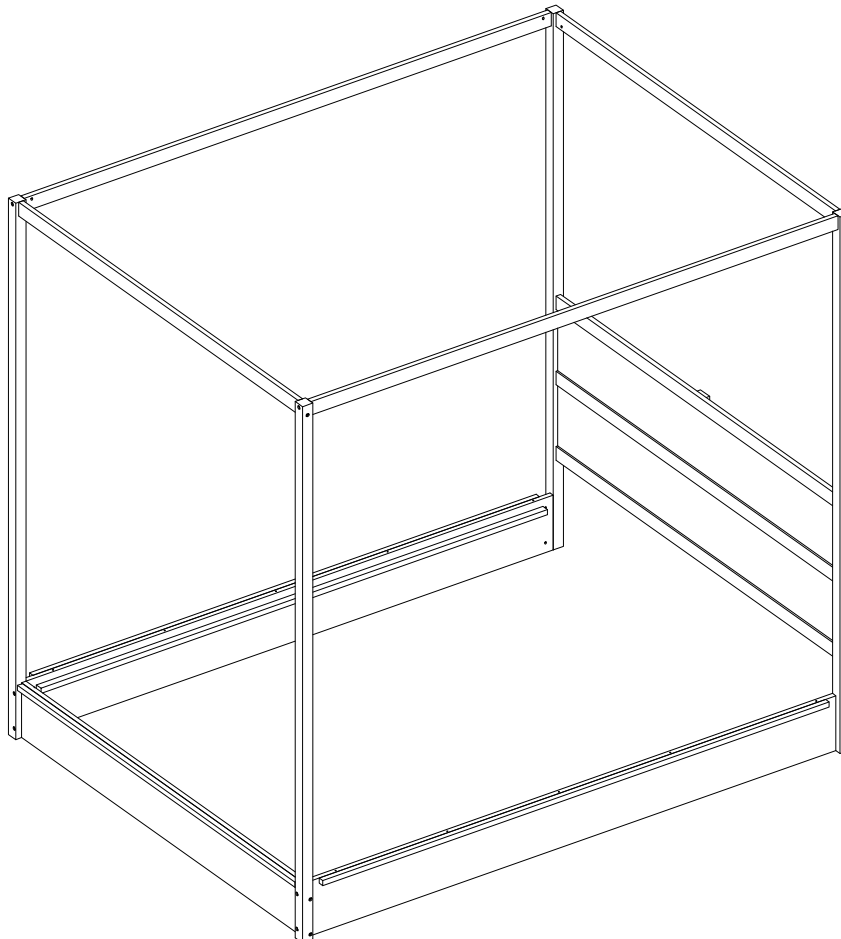

# STEP 8


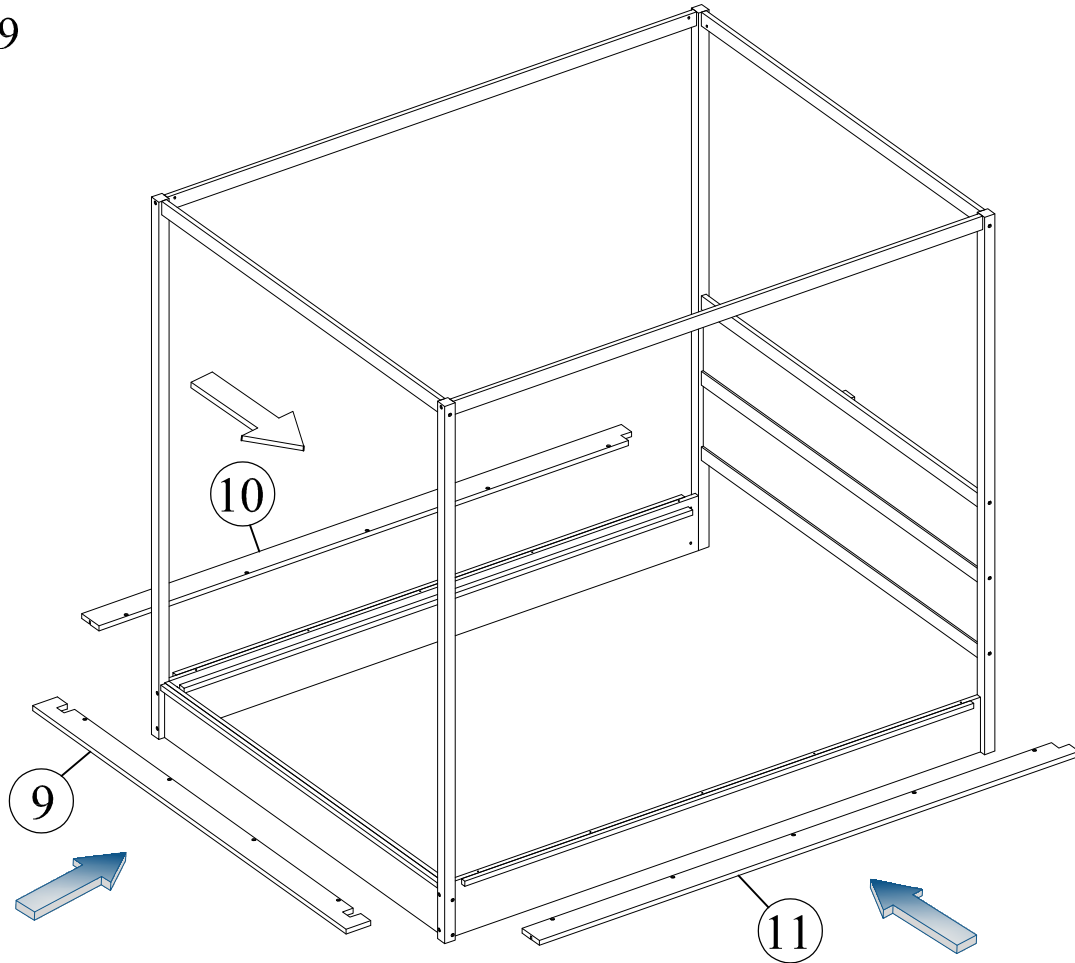


# STEP 9






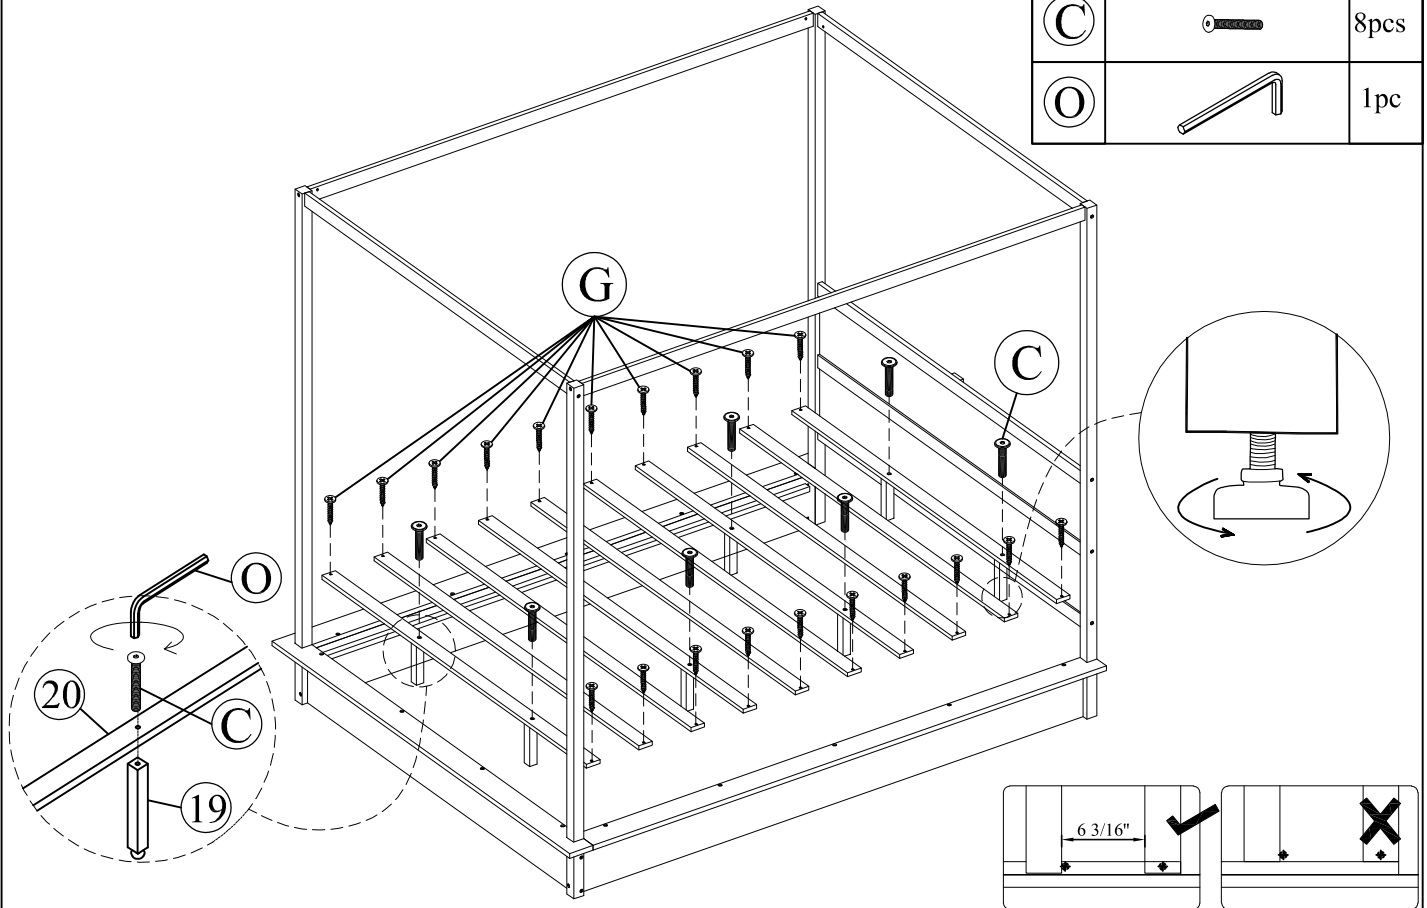
# STEP 10

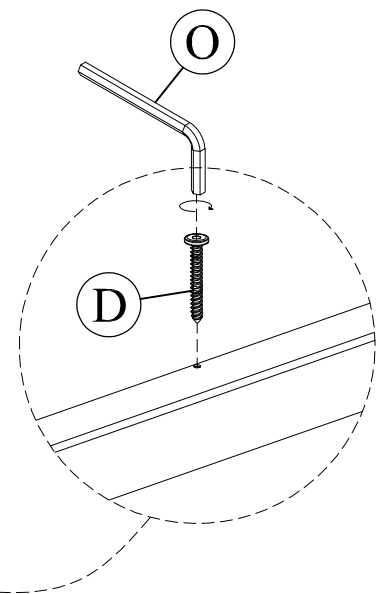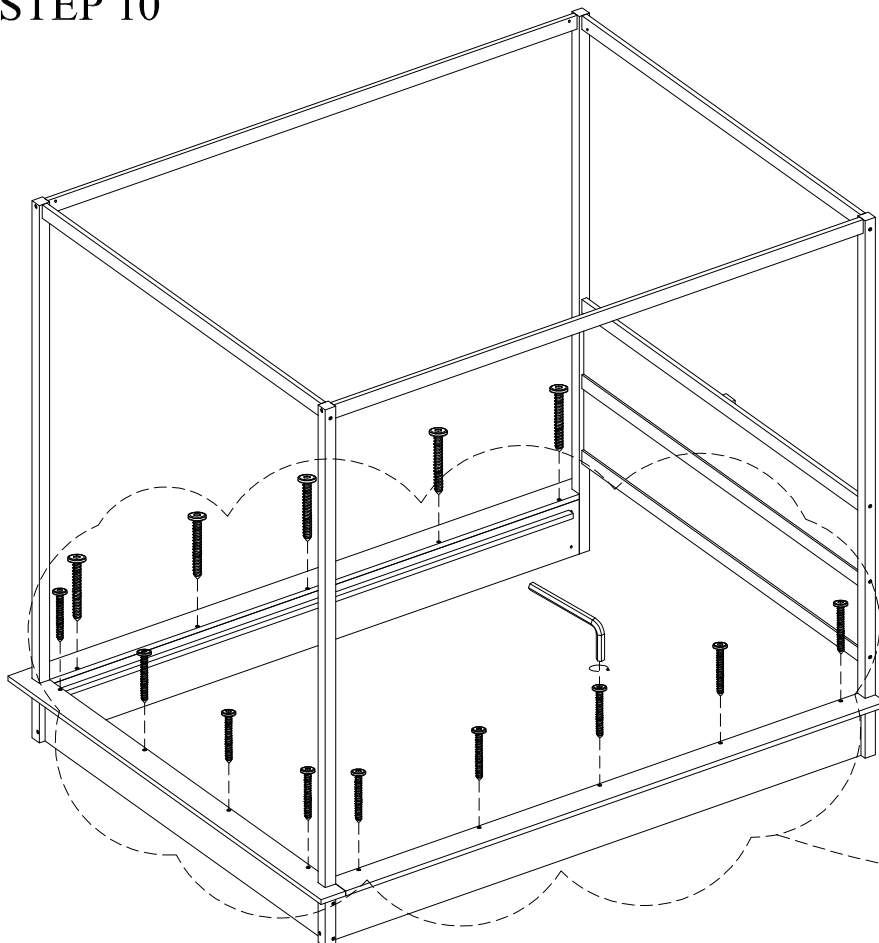(D)		14pcs
(O)		1pc




# STEP 11



G		20pcs
C		8pcs
O		1pc





# STEP 12

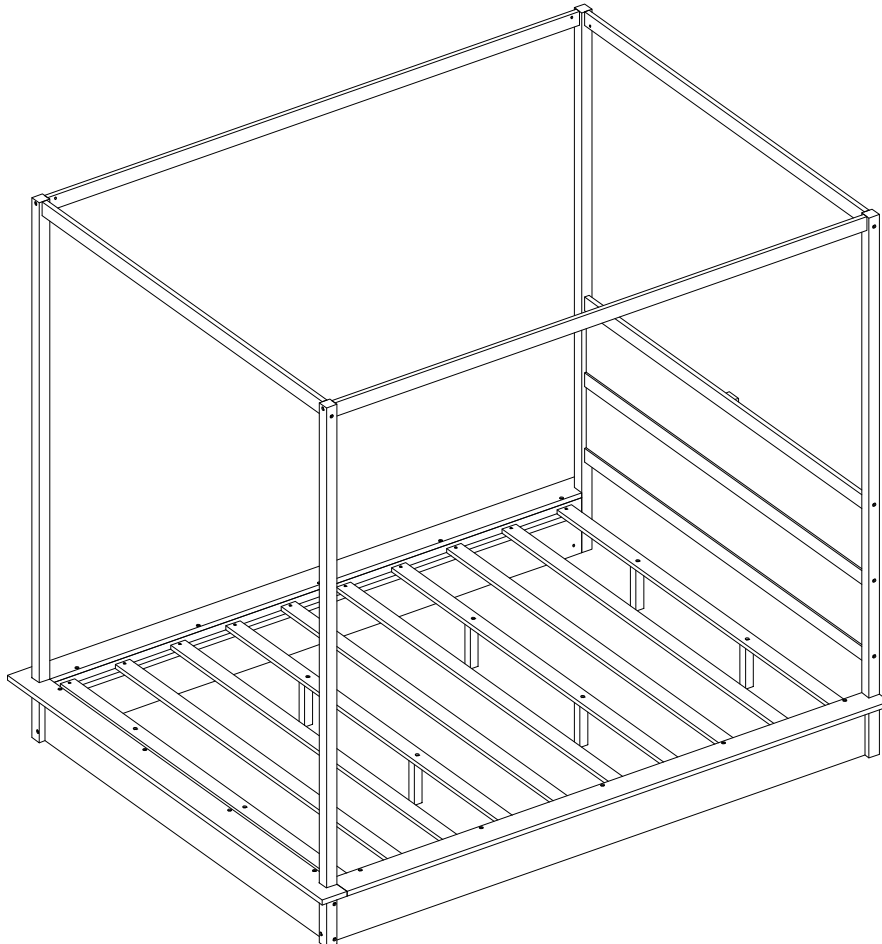


# STEP 13

<b>G</b>		4pcs
<b>I</b>		2pcs

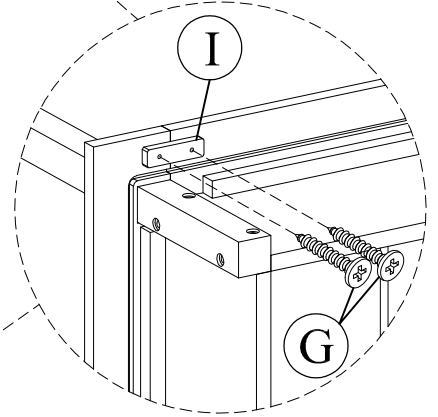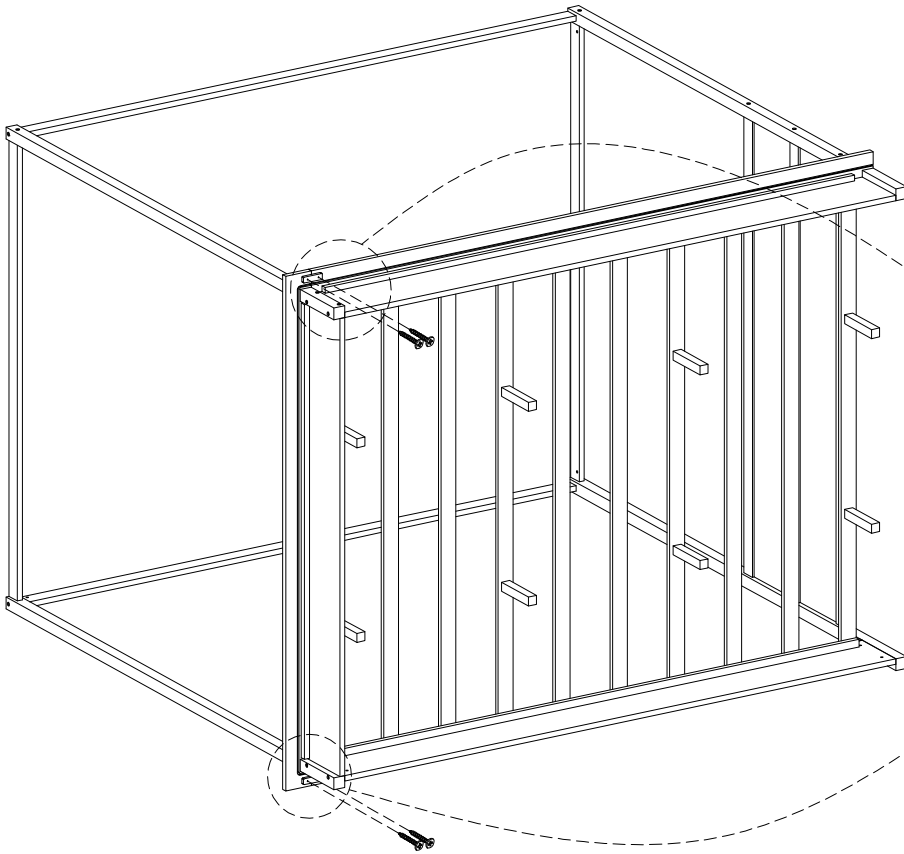




# STEP 14
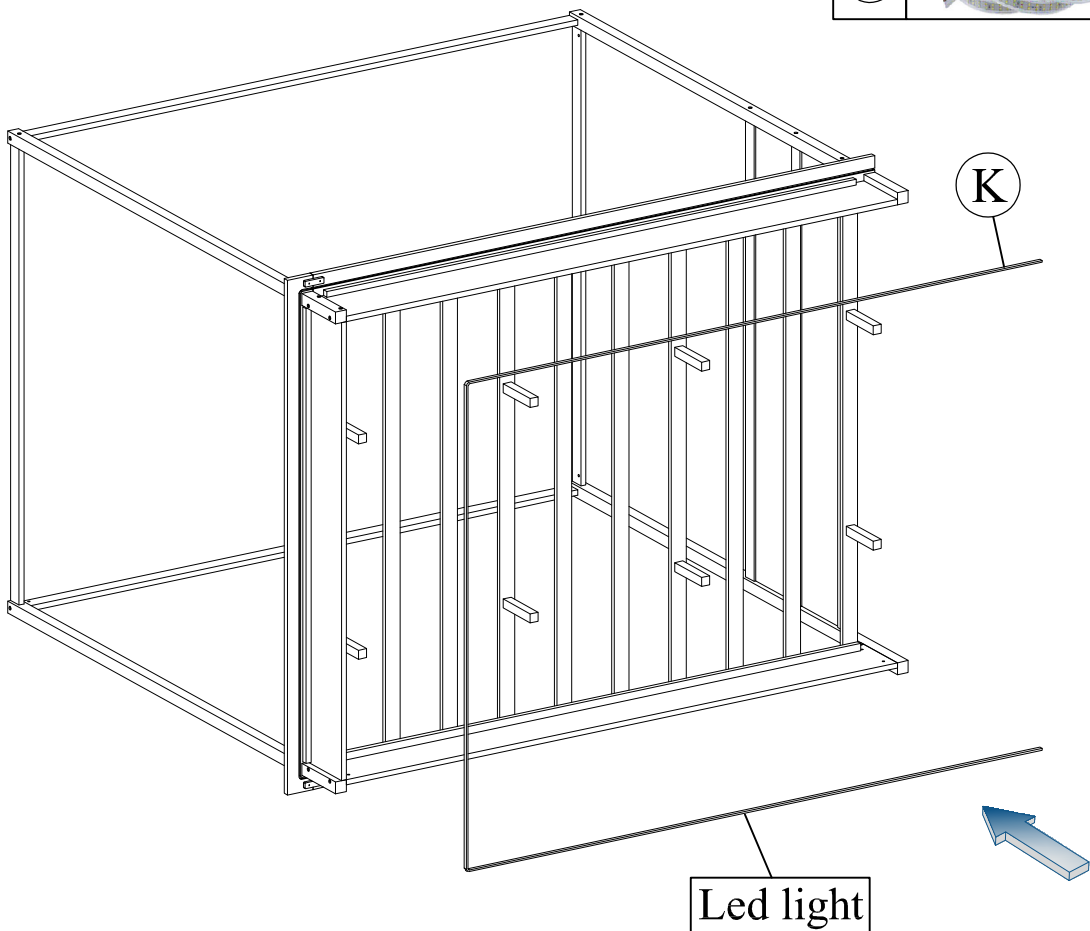
<b>K</b>		1pc
----------	---	-----



# STEP 15

<b>H</b>		30pcs
<b>L</b>		15pcs

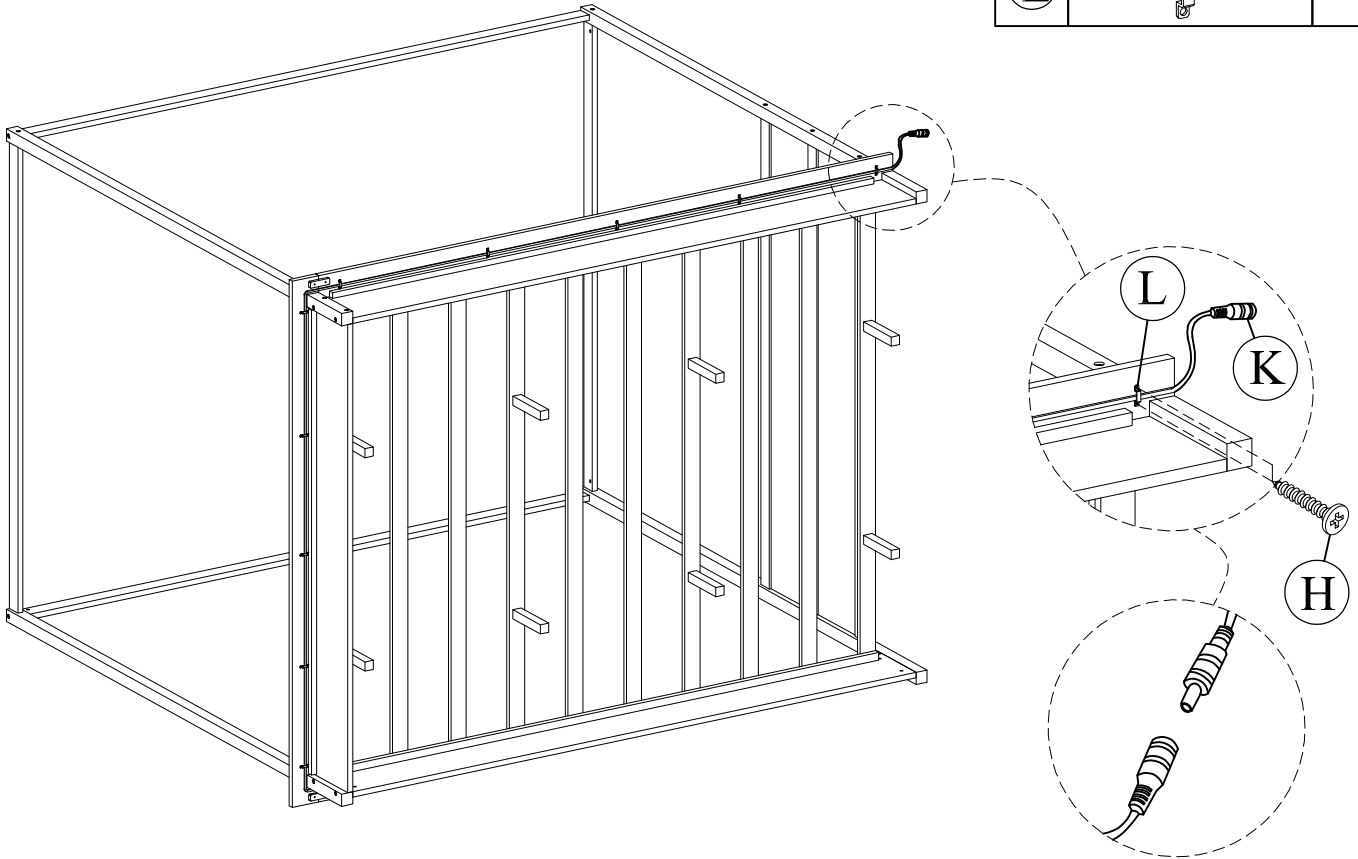

# FINAL

