

ASSEMBLY INSTRUCTIONS

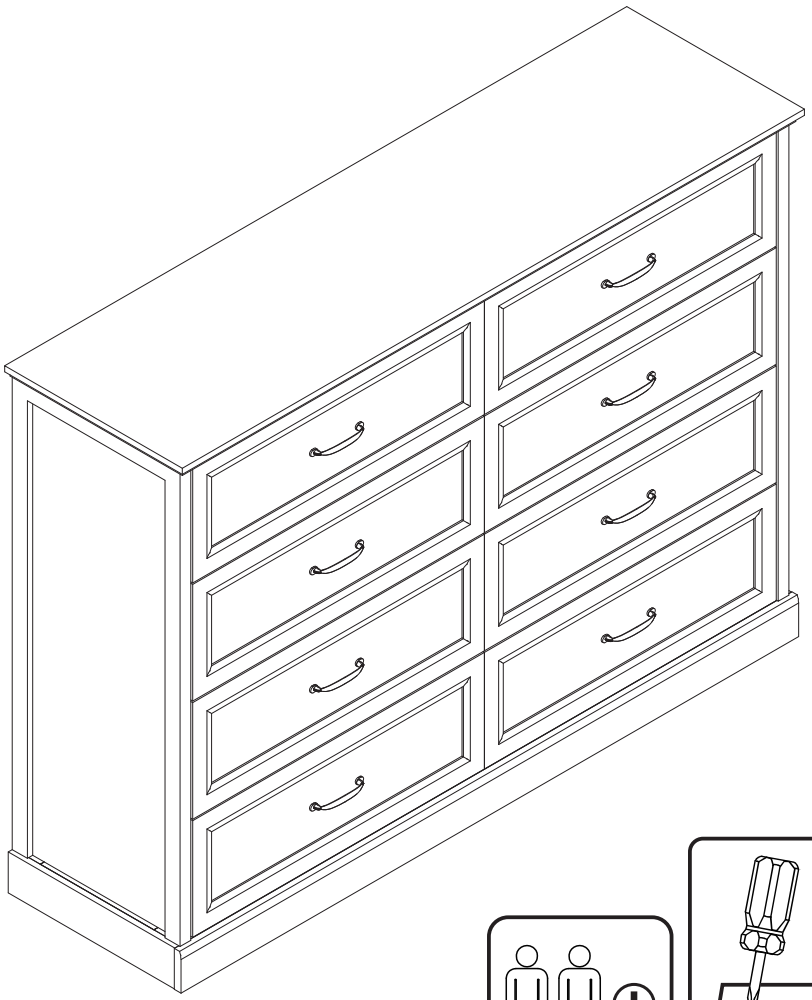

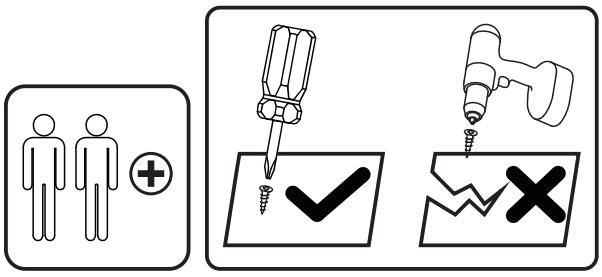

Tools Recommended

THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

Need Parts or Assistance?

IMPORTANT NOTICE

-This product contains small components, please ensure that they are kept away from small children.

-THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

-Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

-Make sure all parts are included. Most parts are labelled or stampled on the raw edge.

-Work in spacious area, preferably on a carpet, near the place the unit will be used.

-Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

-Move your new furniture carefully, with two people lift and carry the unit to it's new location.

-Never push, drag or pull your furniture (especially on carpet)

PLEASE DO NOT RETURN PRODUCT TO US IMMEDIATELY

If a part is missing or damaged, email our customer service.
We will gladly ship your replacement parts FREE of charge.

Need Parts or Assistance?

For Prompt, reliable service, please have your assemble instruction ready

⚠ WARNING







Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

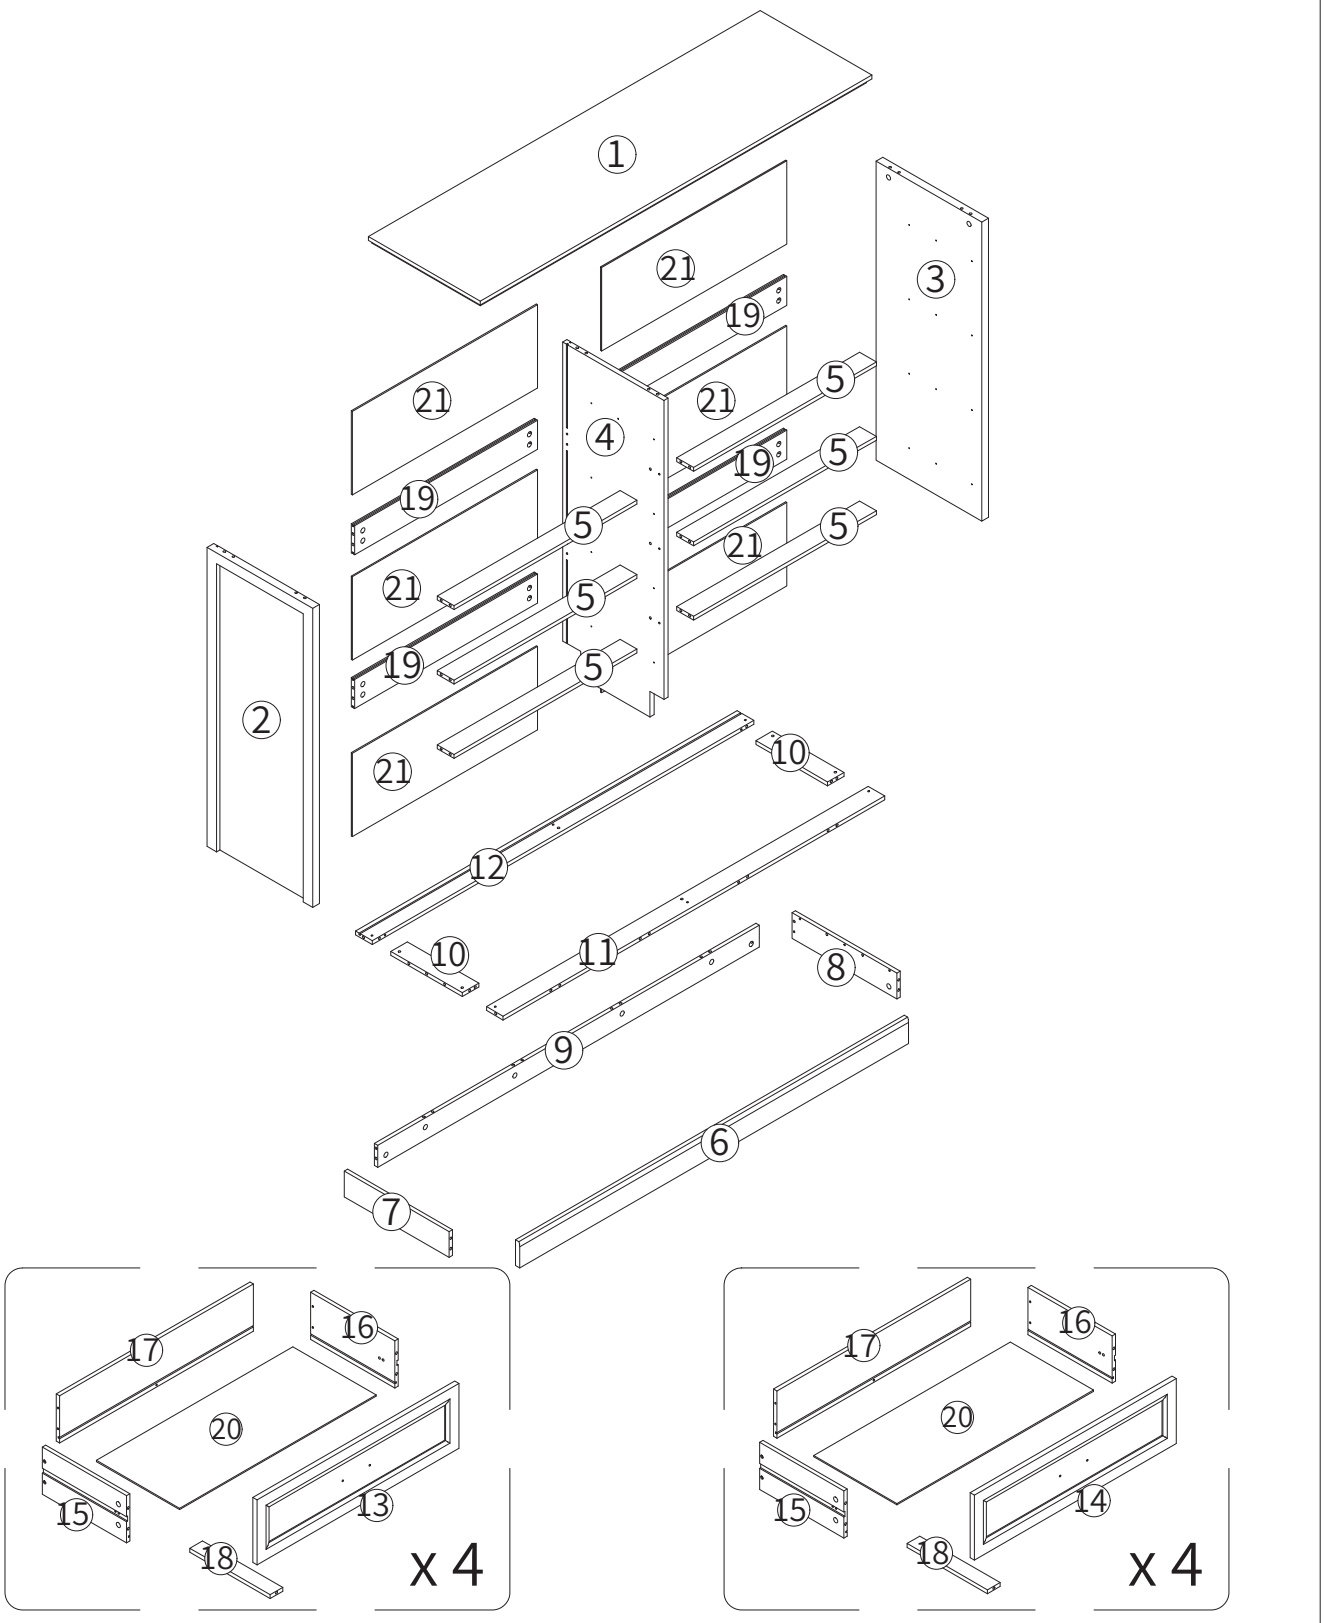





A x 96
M6*x 35 mm*




B x 96
Ø15*x 10 mm*



C x 38
Ø6*x 30 mm*



D x 46
Ø8*x M4 x 35 mm*




E x 48
Ø6.5*x M3 x 12 mm*




F x 8




G x 16
Ø9*x M4 x 8 mm*



H x 2




I x 20
15 *x 13 x 10 mm*




J x 16
278*mm*



K x 20
Ø6.5*x M3 x 16 mm*




L x 3
Ø6*x 50 mm*



M x 32
Ø9*x M4 x 11 mm*

Step 1


Insert screws(A) into corresponding holes in part ① ⑥ ⑦ ⑧ ⑪ ⑫ as shown.

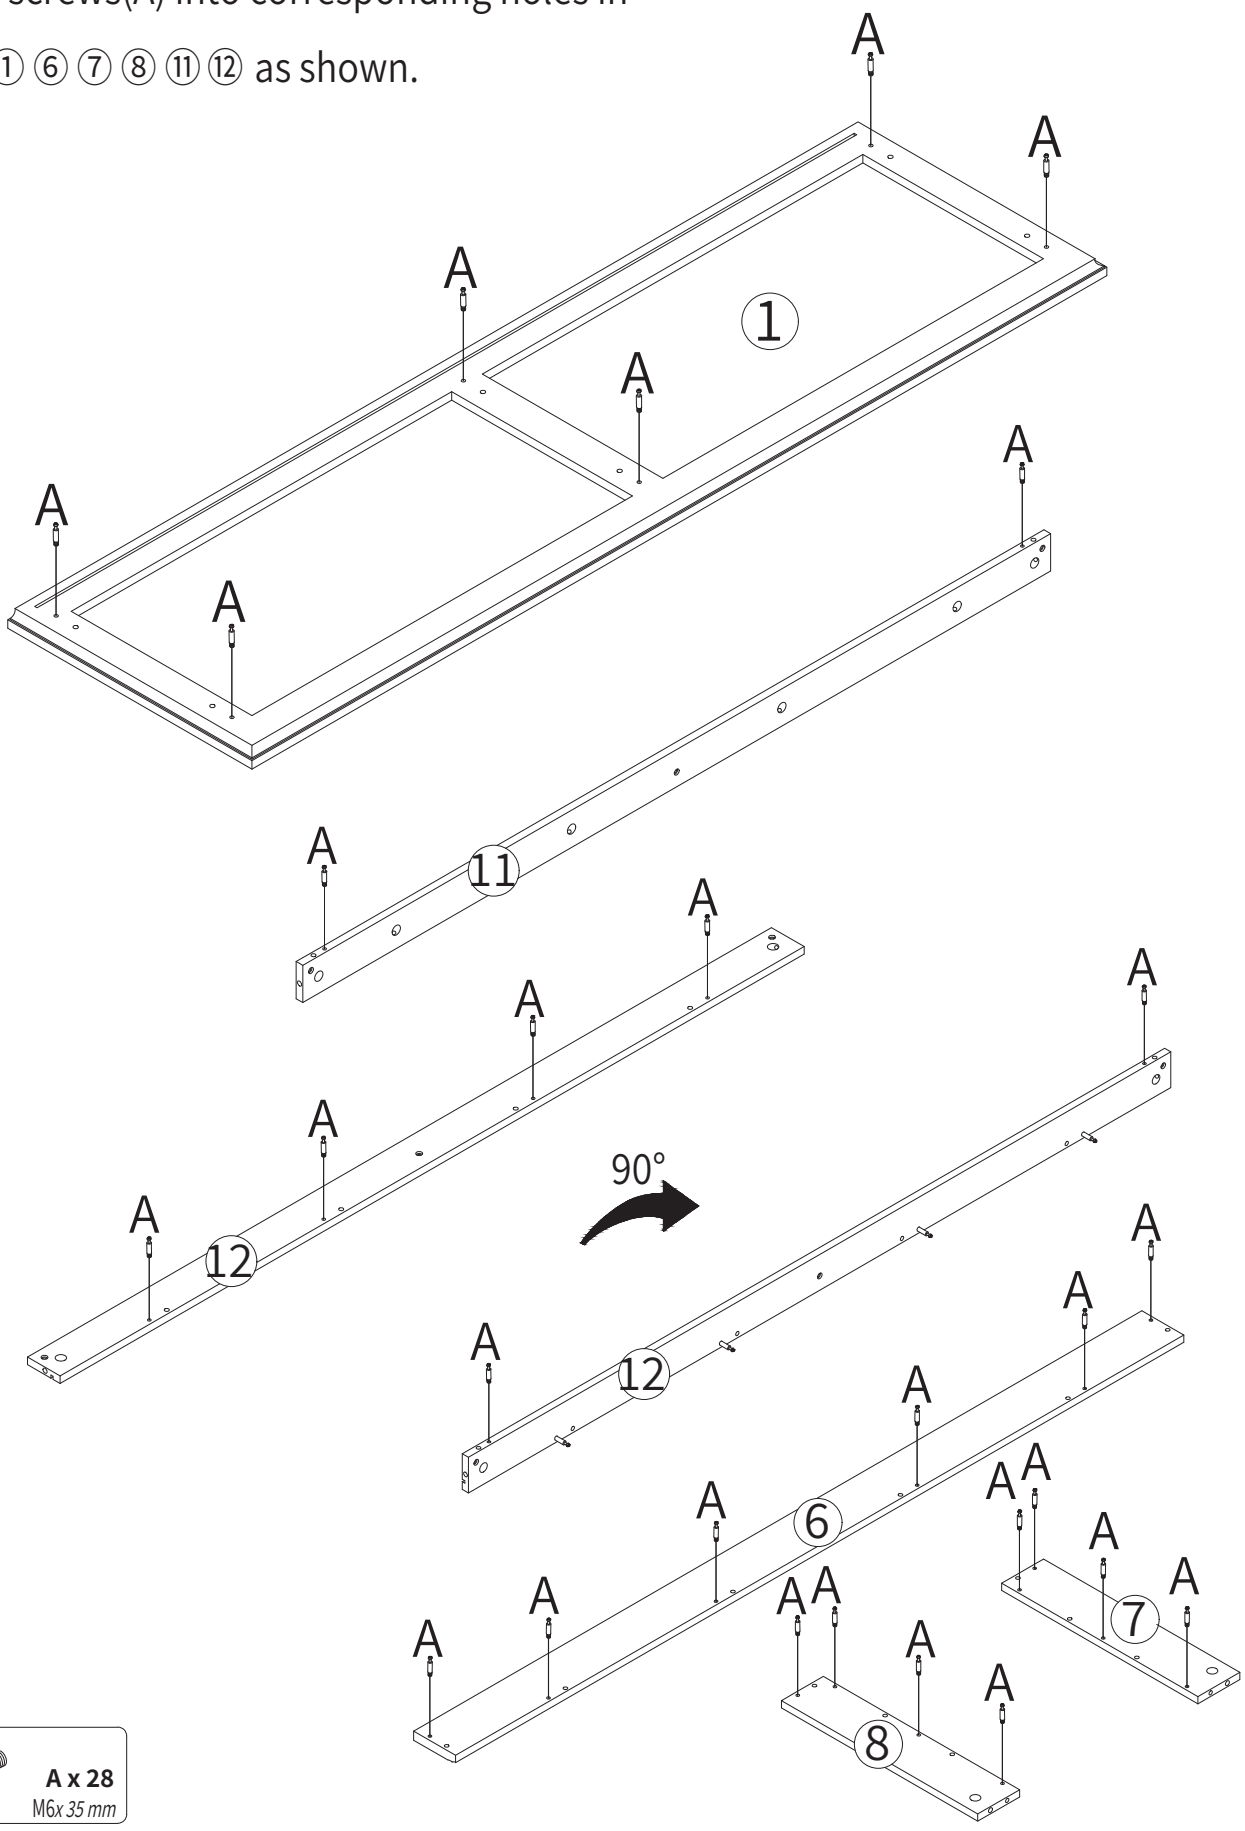

A x 28
M6*x 35 mm*

Step 2


Insert as shown. fix outer drawer runner (J) to part ② using screws (E).Insert screws(A)into corresponding holes in part ② as shown

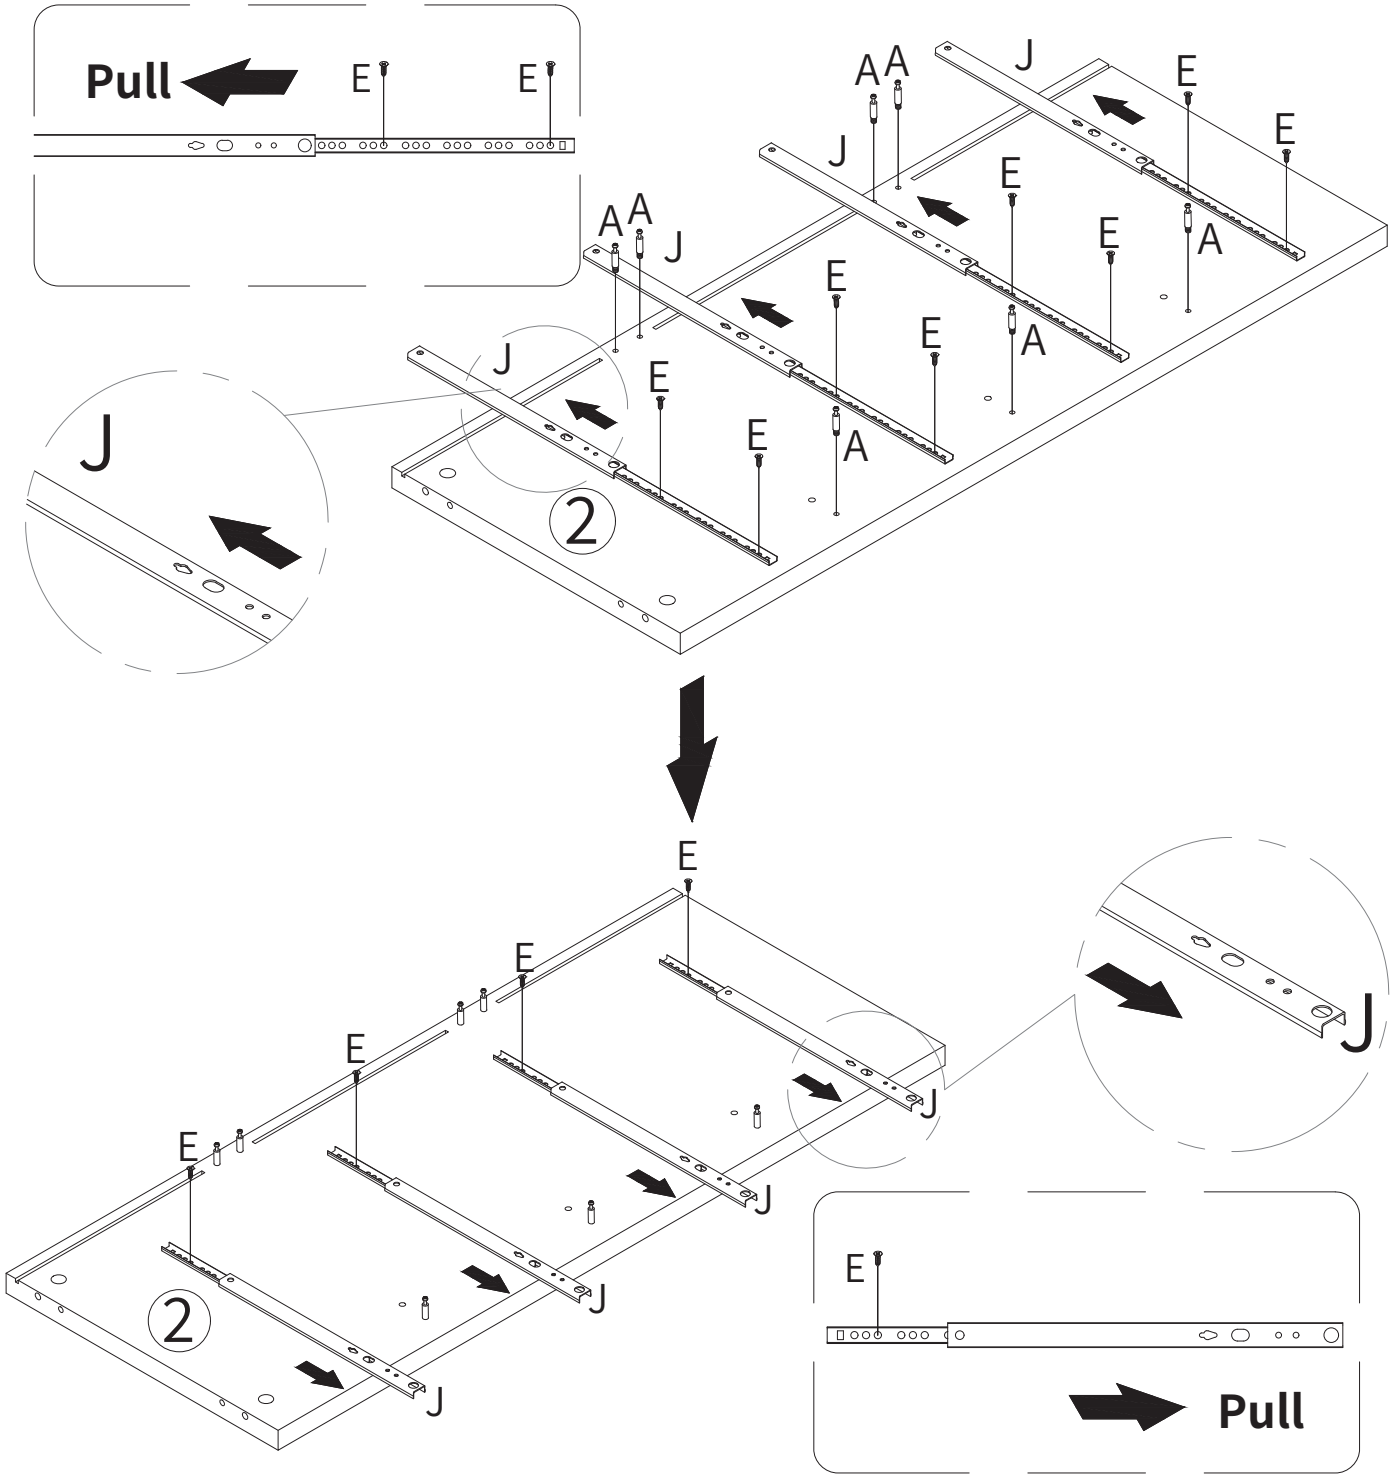

A x 7 M6*x 35 mm*	**E x 12** Ø6.5*x M3 x 12 mm*	**J x 4** 278*mm*

Step 3

Insert as shown. fix outer drawer runner (J) to part ③ using screws (E).Insert screws(A)into corresponding holes in part ③ as shown

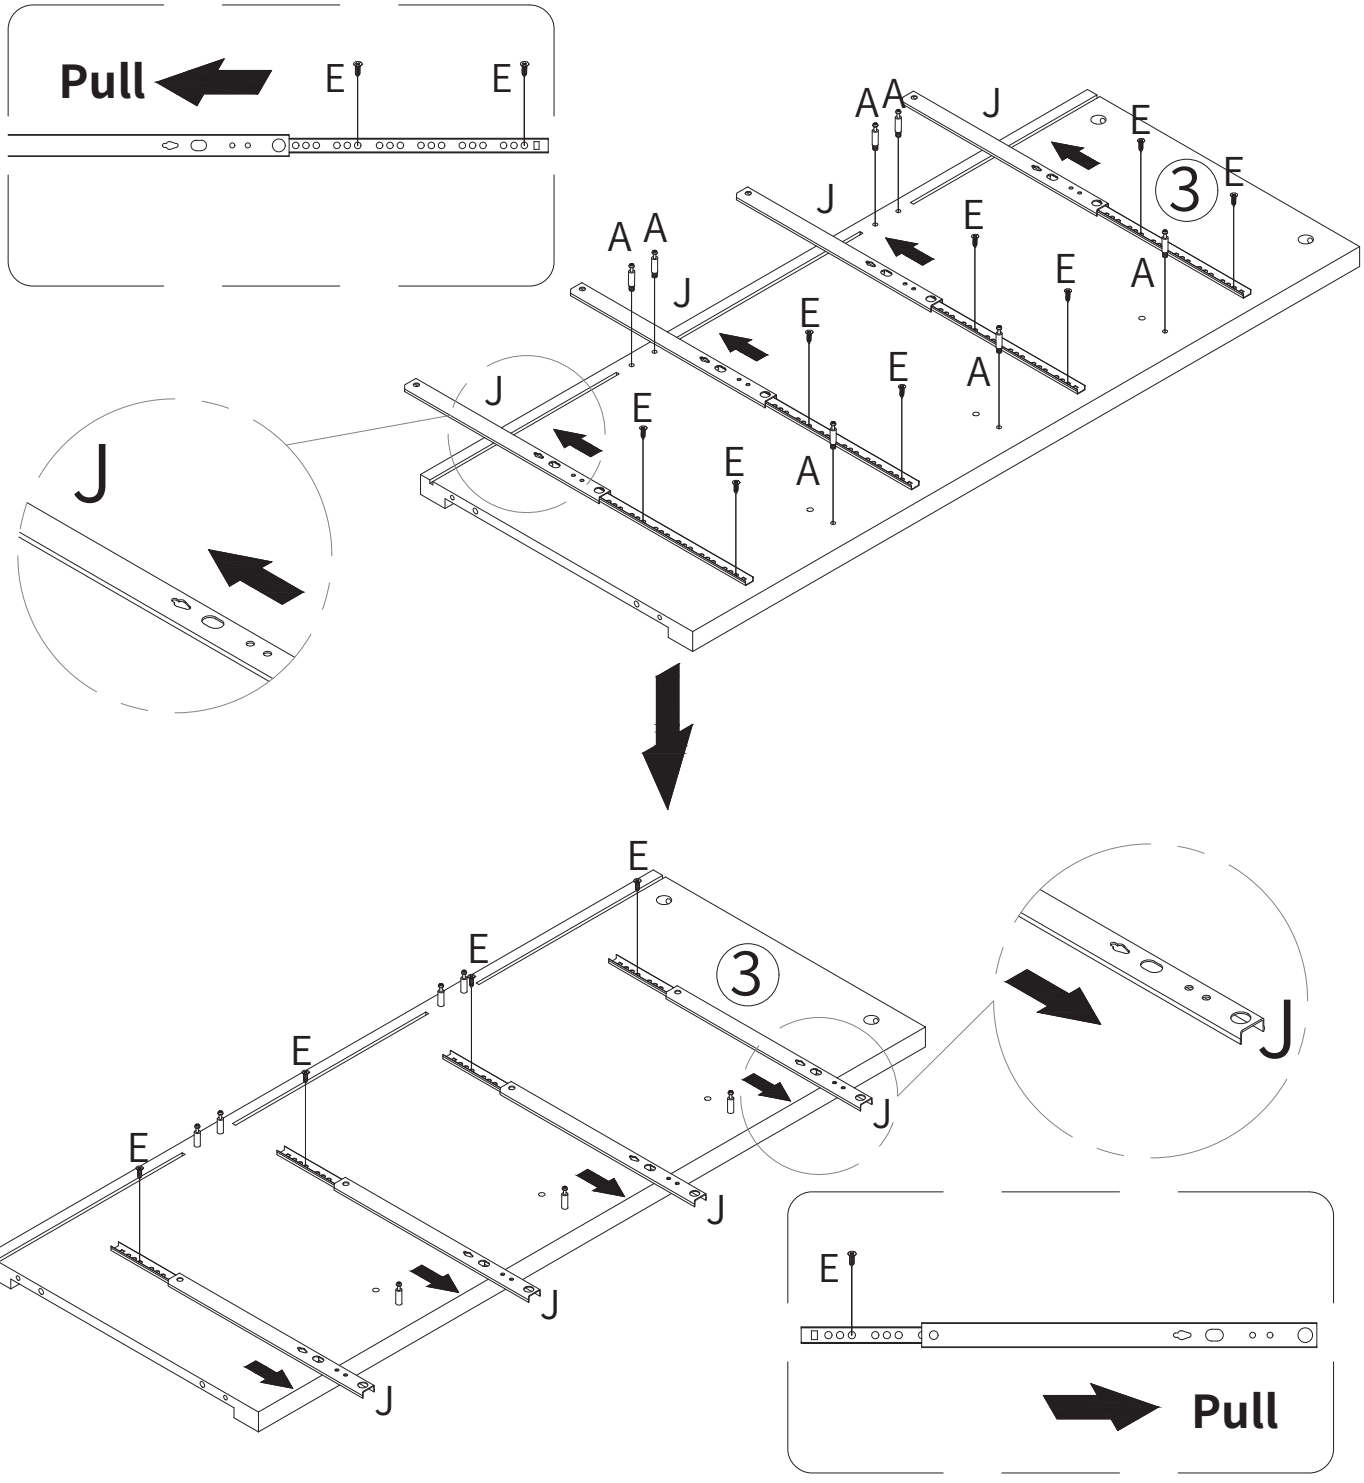


A x 7 M6*x 35 mm*	**E x 12** Ø6.5*x M3 x 12 mm*	**J x 4** 278*mm*


Step 4


Lock the guide rail (J) to part ④ with screws (E) as shown Turn part ④


180 degrees as shown and repeat the above operation.


Note: There is only one part ④

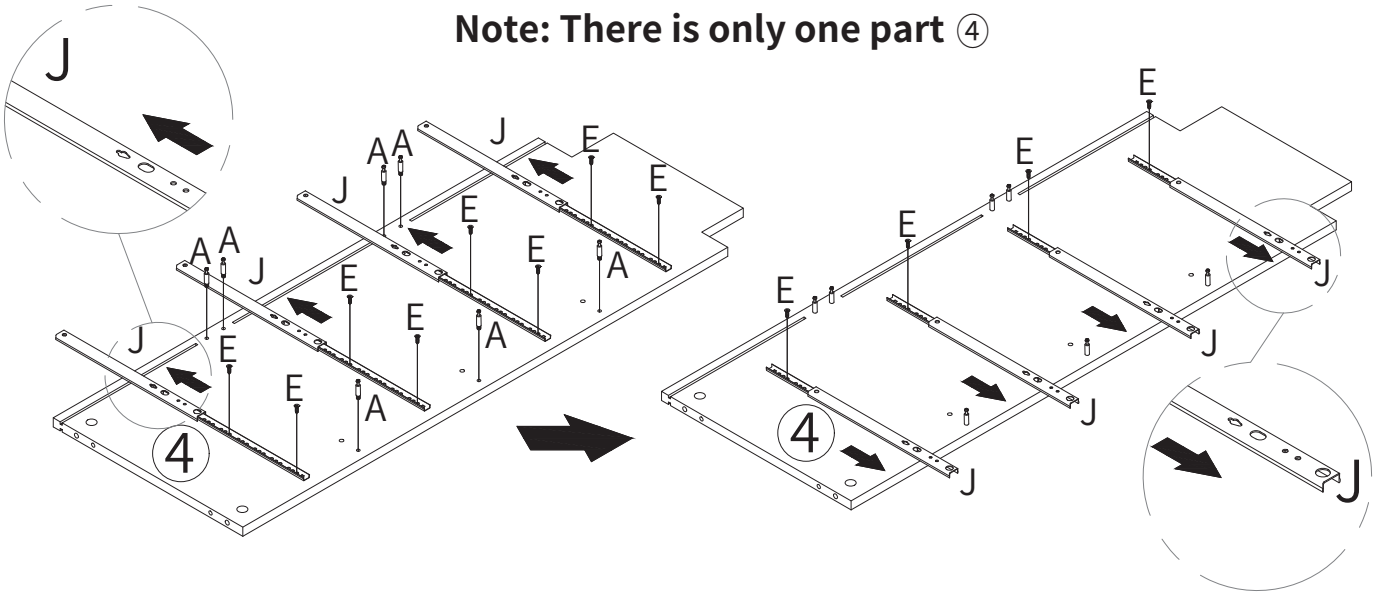

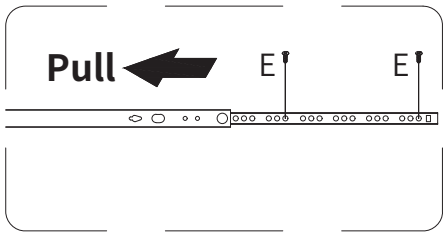


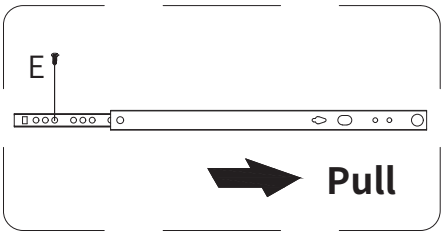

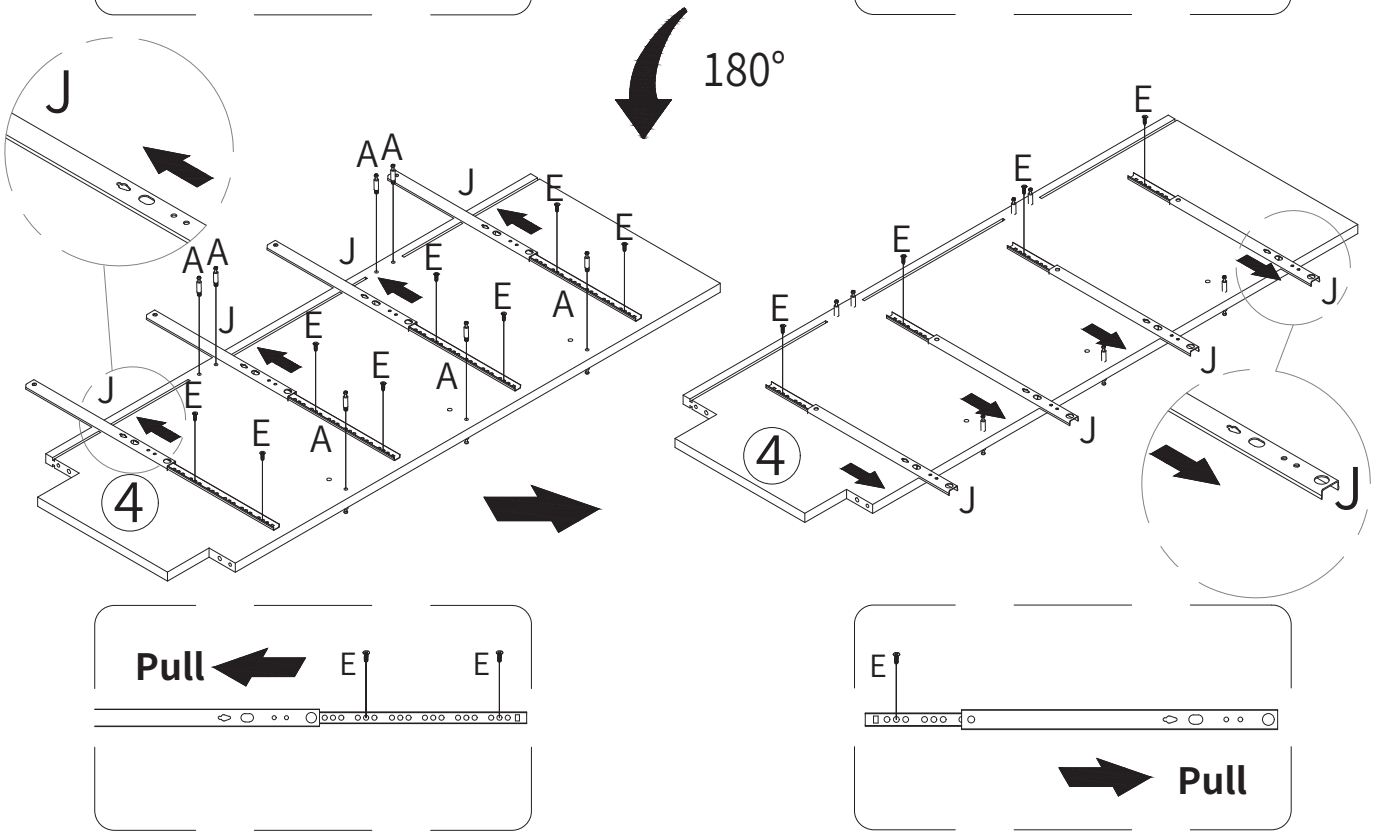




A x 14
M6*x 35 mm*




E x 24
Ø6.5*x M3 x 12 mm*




J x 8
278*mm*

Step 5

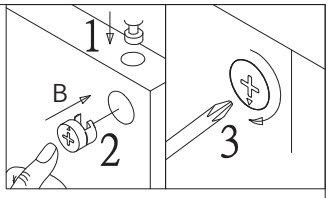

As shown in the figure, first put the cork (C) into part ② .
Then connect part ② to ⑤ ⑲ Finally, place the eccentric(B) in the pre-drilled hole and tighten it with a screwdriver

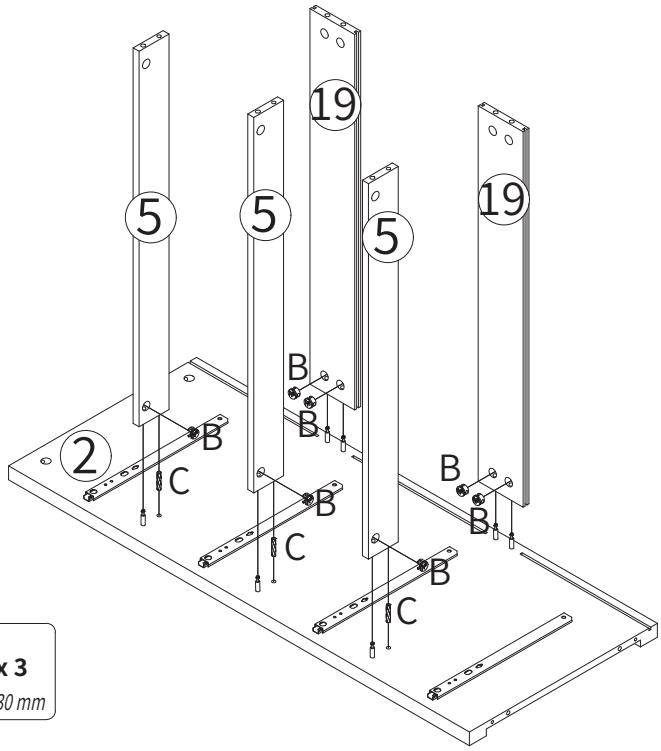




B x 7
Ø15x 10 mm



C x 3
Ø6x 30 mm


Step 6


As shown in the figure, part ㉑ is installed along the groove.

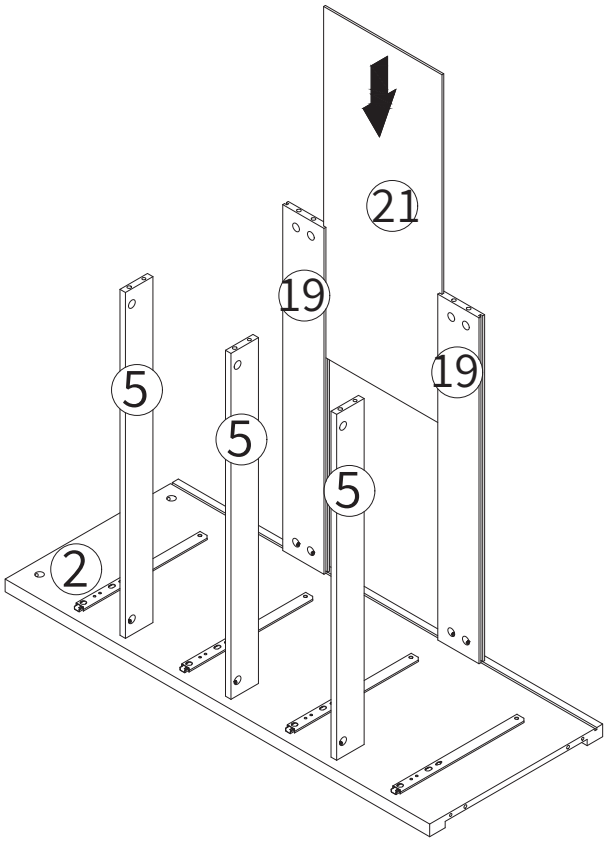


Step 7

Insert the wooden peg (L)into part ⑤ .connect part ⑤ ⑲ with part ④ Finally, place the eccentric (B)in the pre-drilled hole and tighten it clockwise with a screwdriver

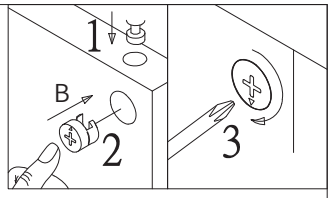

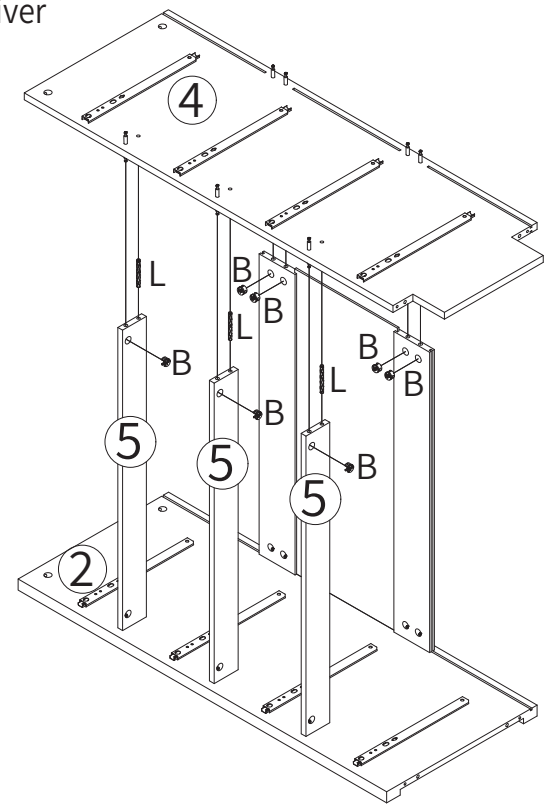




B x 7
Ø15x 10 mm



L x 3
Ø6x 50 mm

Step 8

As shown in the figure,connect part ⑤ ⑲ with part ④ place the eccentric(B) in the pre-drilled hole and tighten it with a screwdriver

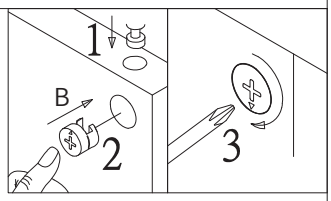


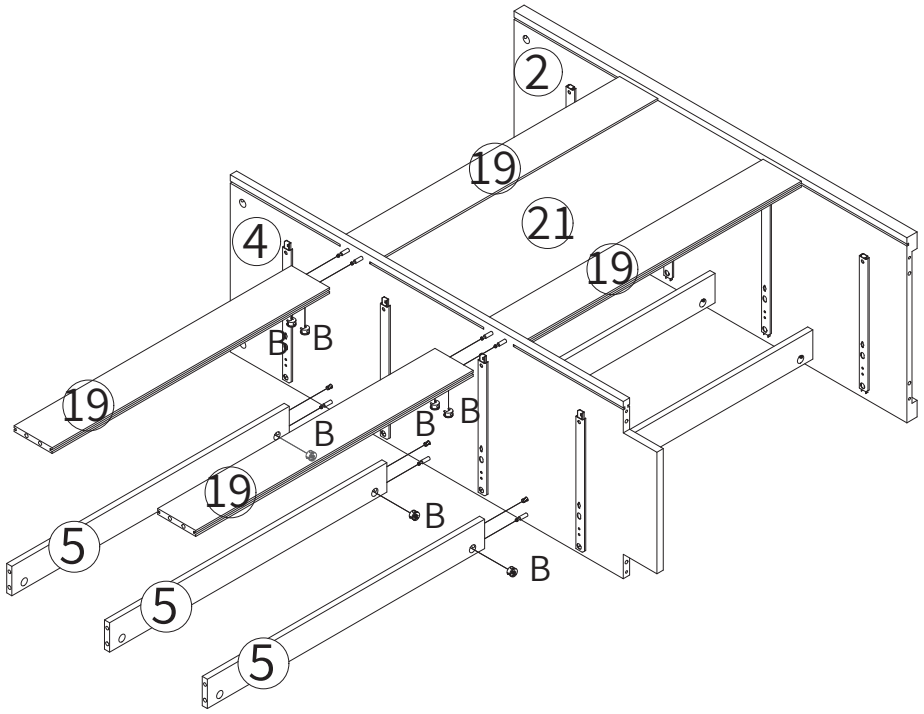


B x 7
Ø15x 10 mm


Step 9


As shown in the figure, part ㉑ is installed along the groove.

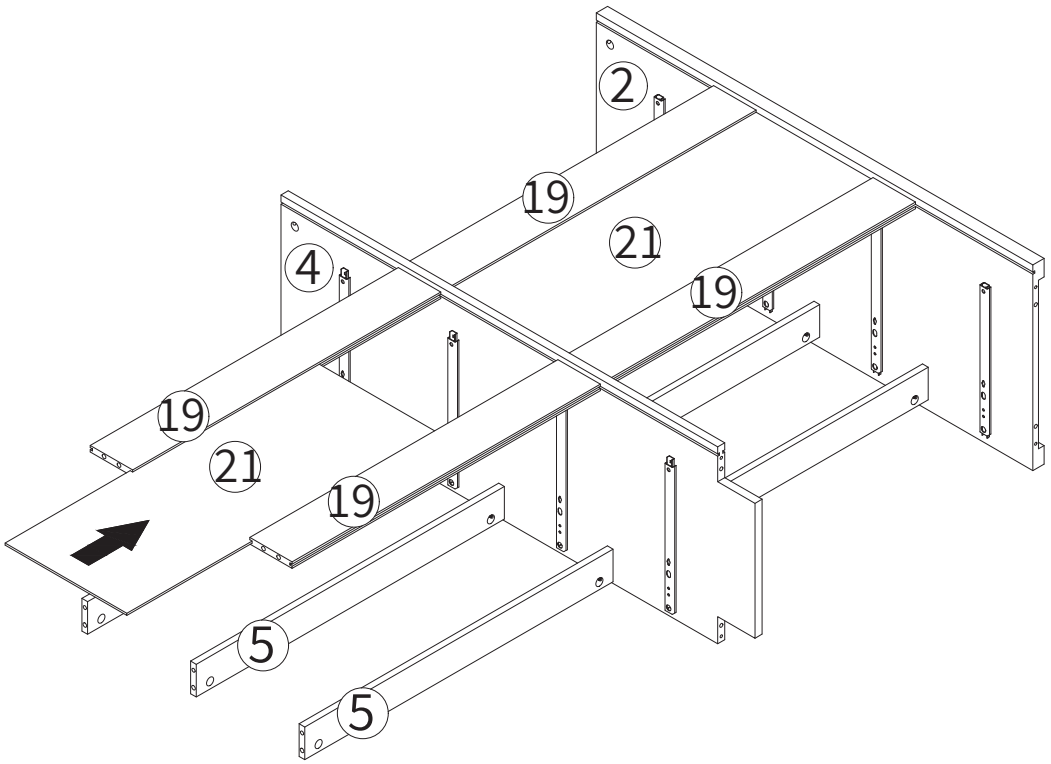

Step 10

As shown in the figure, first put the cork (C) into part ③ Then connect part ③ to ⑤ ⑲ Finally, place the eccentric(B) in the pre-drilled hole and tighten it with a screwdriver

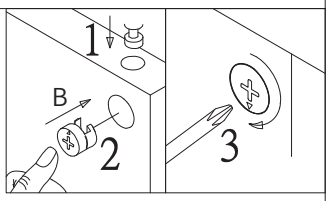


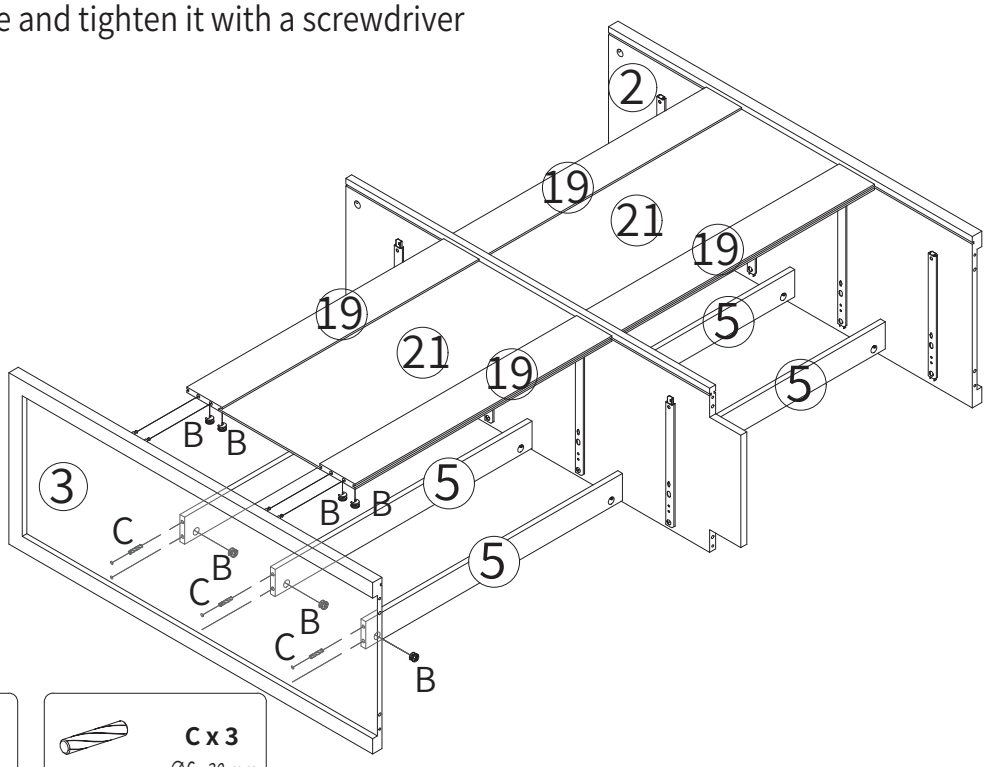




Step 11


As shown in the figure, part ㉑ is installed along the groove.

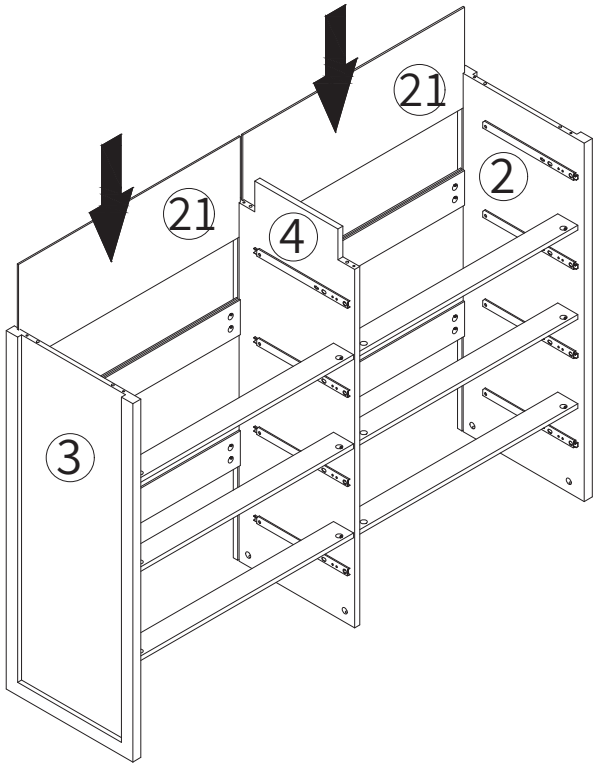

Step 12

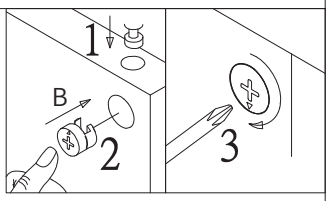

As shown in the figure,first, insert the wooden peg (C) into the two parts ⑩,and then connect the parts ⑩ and ⑪, ⑫. Finally, place the eccentric (B)in the pre-drilled hole and tighten it with a screwdriver

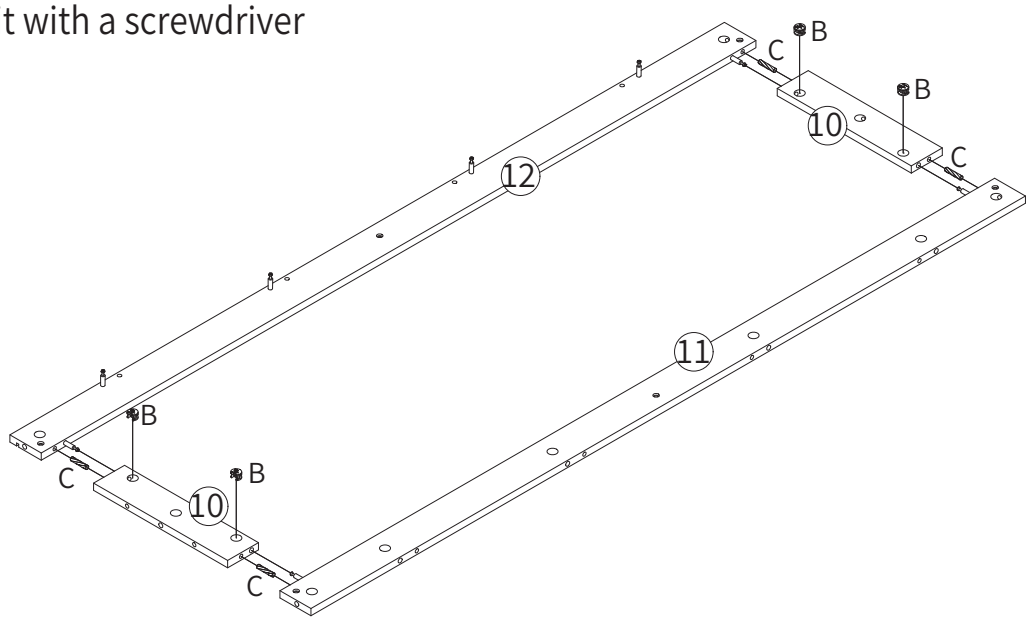




B x 4
Ø15x 10 mm



C x 4
Ø6x 30 mm

Step 13


First, place the wooden peg (C) in part ⑥ ⑦ ⑧ ⑨, and connect part ⑥ ⑦ ⑧ ⑨ and assembled unit. Then place the eccentric (B) in the pre-drilled hole and tighten it with a screwdriver.

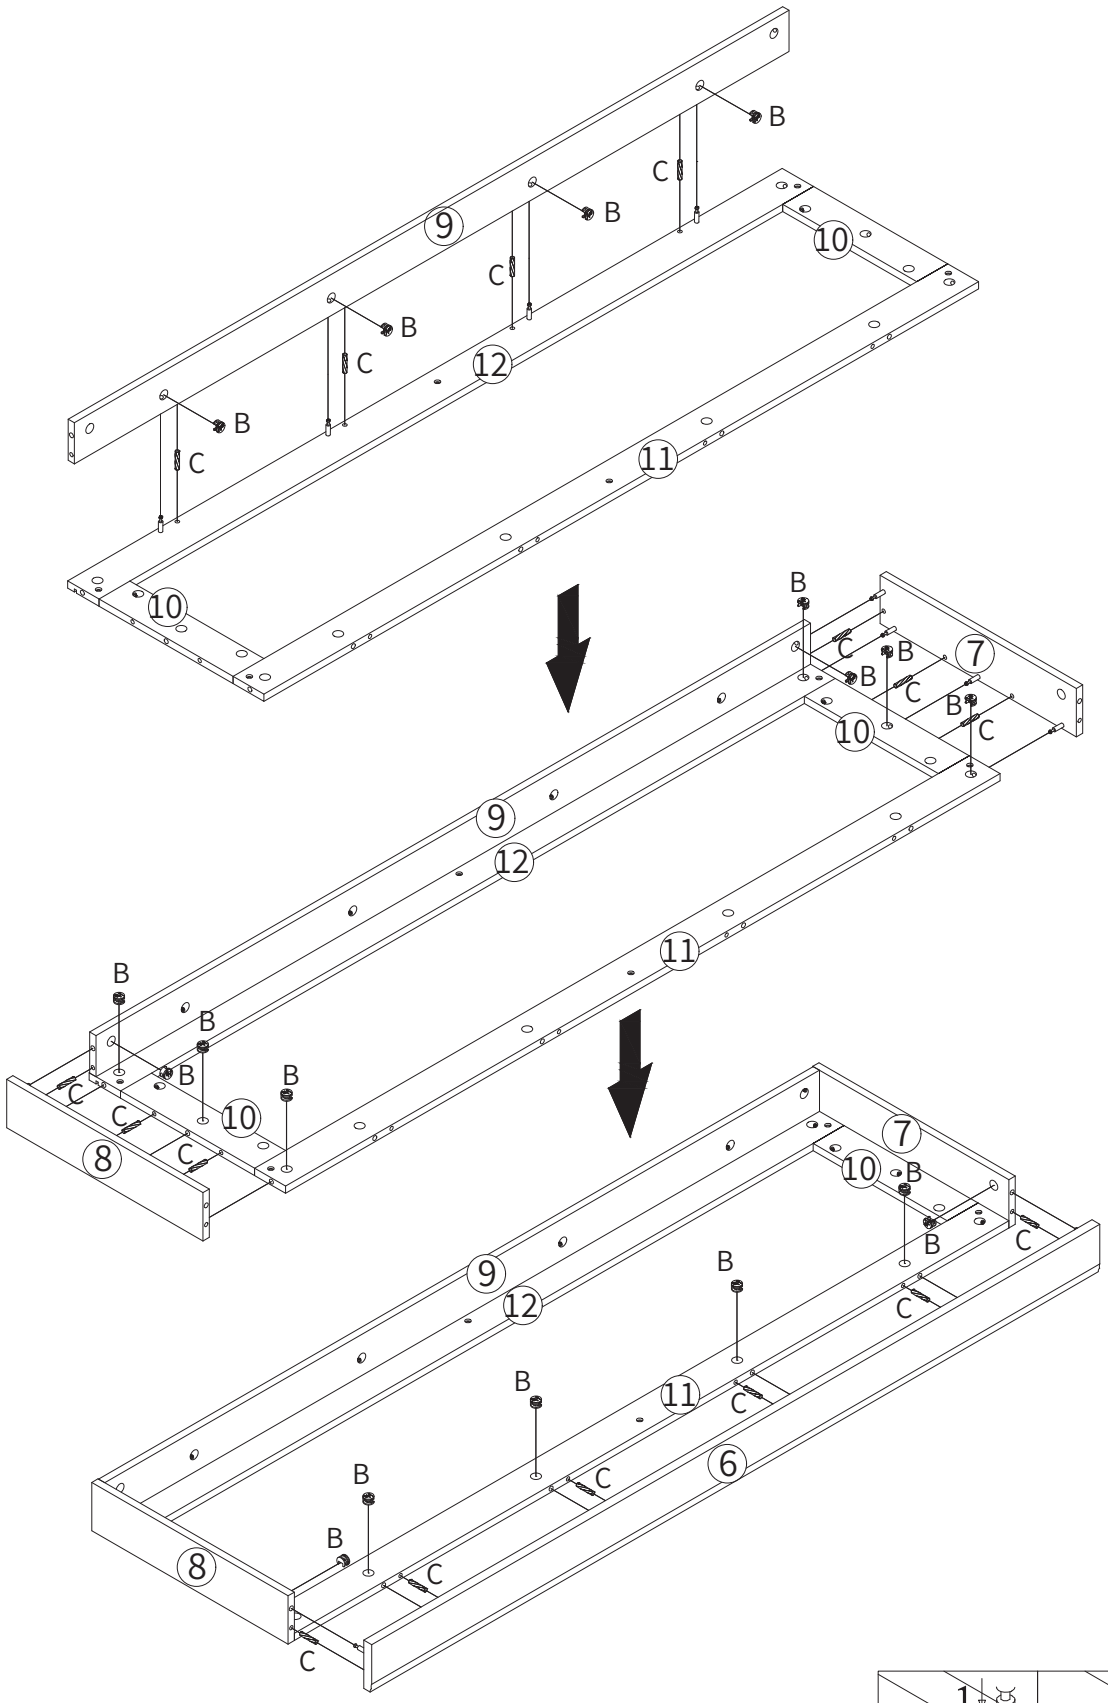




B x 18

Ø15x 10 mm




C x 16

Ø6x 30 mm

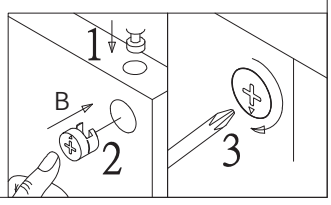

Step 14

First insert the wooden peg (C) into part ② ,③ and④ . Then use screws (D) to connect part ② ③ ④ and part pedestal

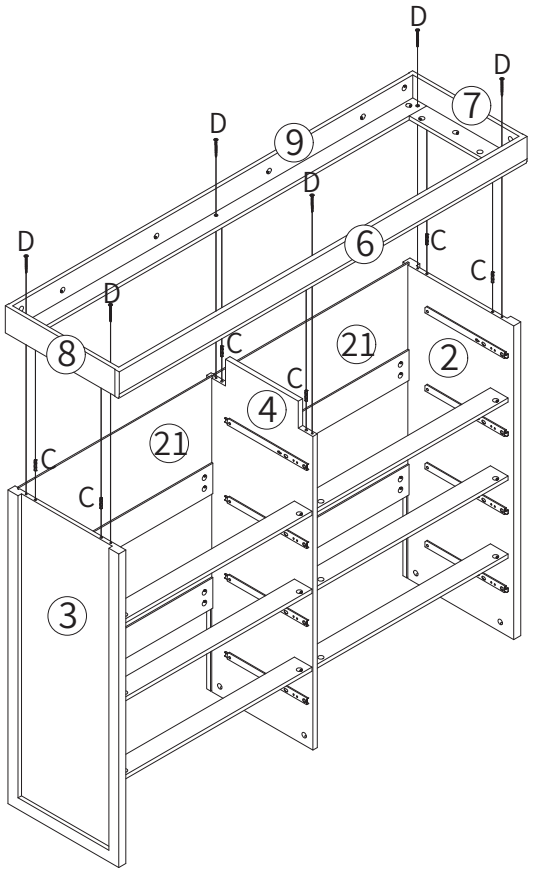



C x 6

Ø6x 30 mm




D x 6

Ø8x M4 x 35 mm


Step 15


As shown in the figure, part ㉑ is installed along the groove.

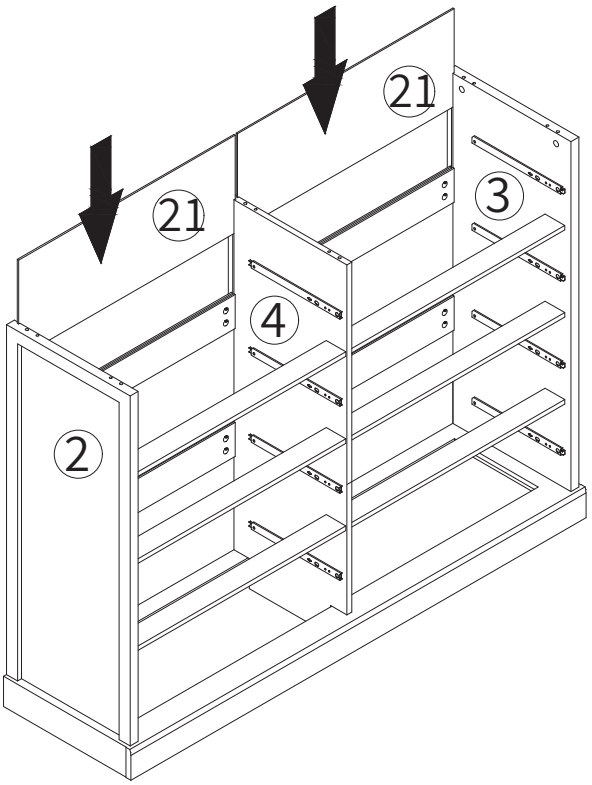

Step 16

First insert the wooden peg (C) into part② ③ and ④ Then connect part ① and part ② ③ ④.Finally, placethe eccentric (B) in the pre-drilled hole and tightenit with a screwdriver.

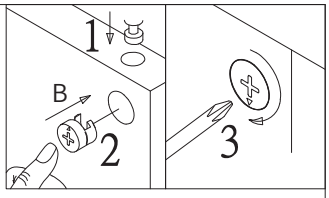

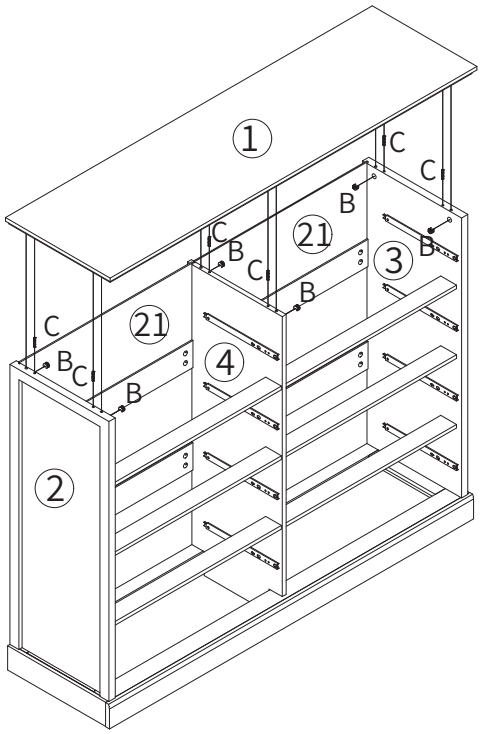




B x 6
Ø15x 10 mm





C x 6
Ø6x 30 mm

Step 17

As shown in the figure, use screws (D) to assemble panels ⑮ ⑯ ⑰ ⑱
Insert screws(A) into corresponding holes in part ⑬ ⑭

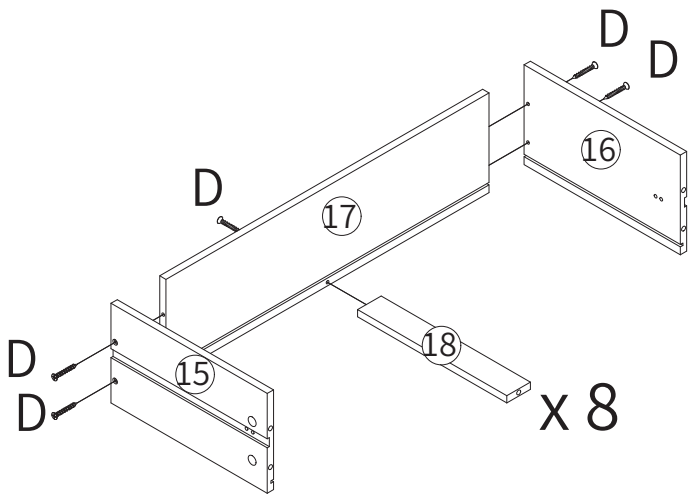

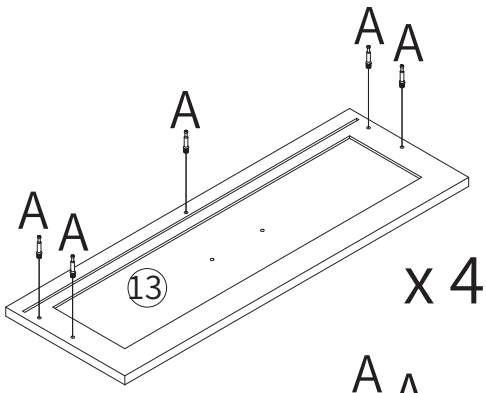

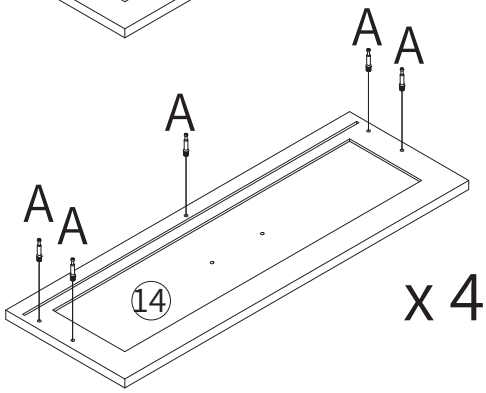




A x 40
M6x 35 mm





D x 40
Ø8x M4 x 35 mm

Step 18

As shown in the figure, part ⑳ is installed along the groove.
Use screws (G) to connect the handle (F) to part ⑬ ⑭ .Then connect part ⑬ ⑭ and part ⑮ ⑯ ⑱ .Finally, place the eccentric(B) in the pre-drilled hole and tighten it with a screwdriver

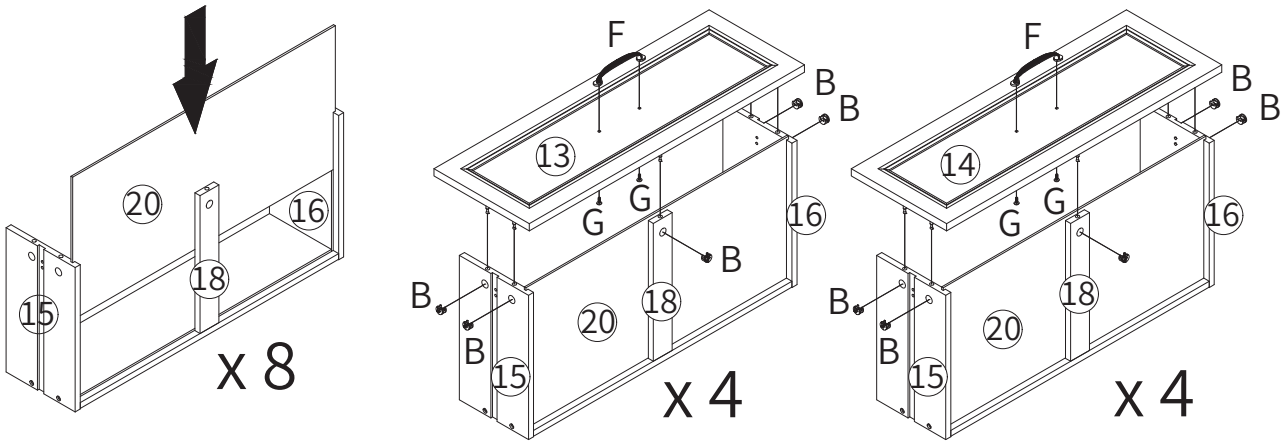




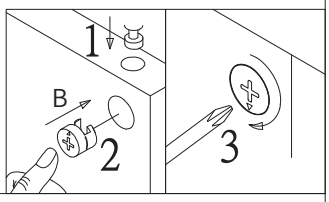


Step 19

As shown in the figure, after confirming that the sliding rails on both sides are close to the slot at the same time, push the drawer inward.

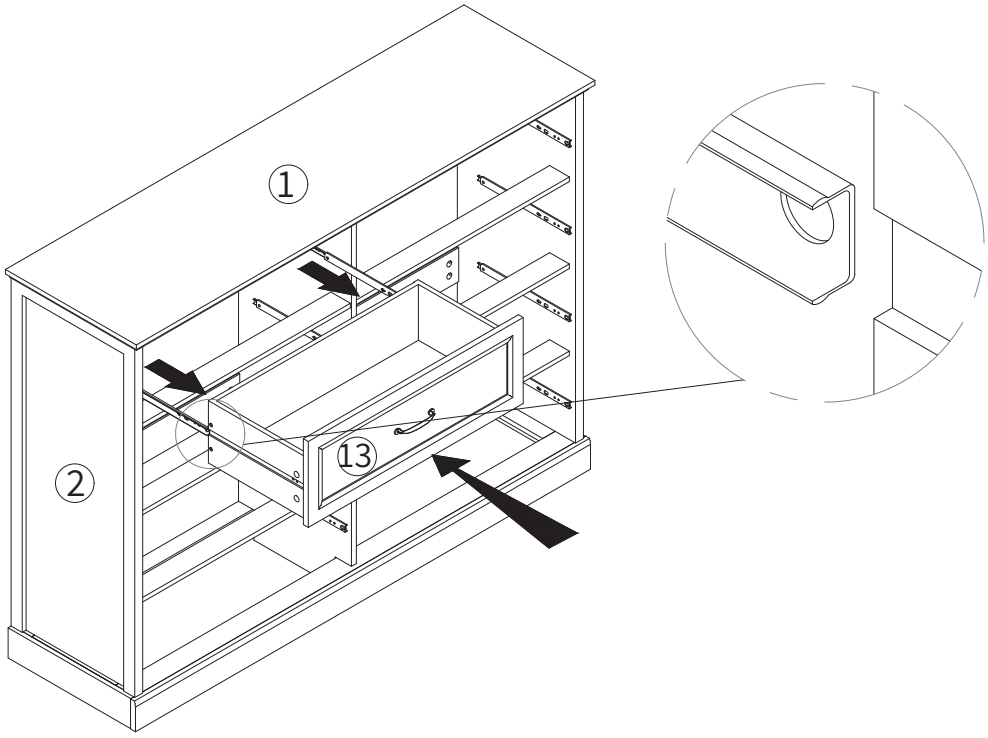

Step 20

Align the panel holes with the guide rail holes and secure them with screws(M).The installation position is as shown below.

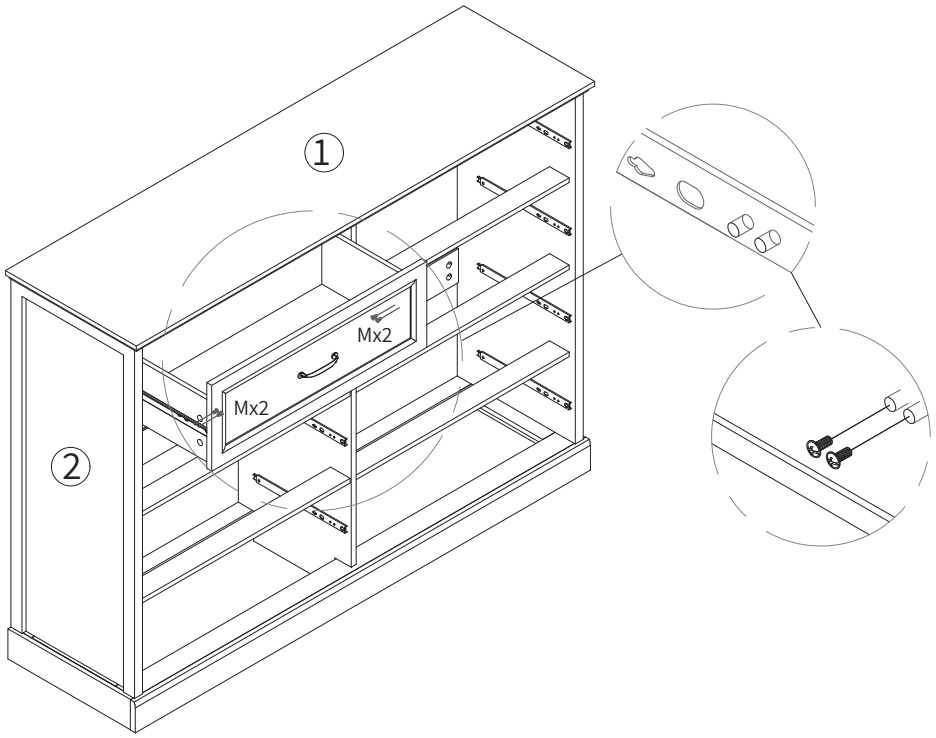




M x 32
Ø9 x M4 x 11 mm


Step 21


All left and right drawers assembled as shown in the figure

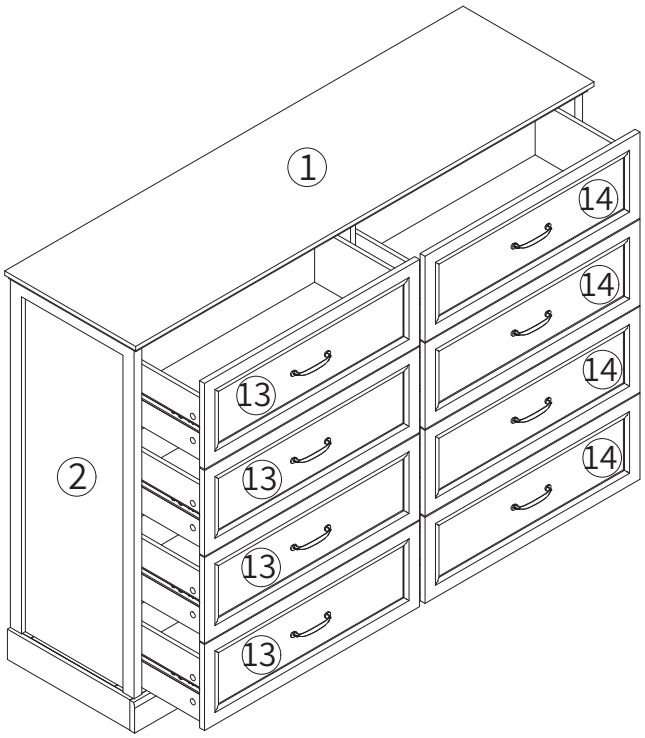

Step 22

As shown in the picture, first use screws (K) to fix part (I)to the back plate.
Use screws (H) to fix the back buckle (H) to part ①

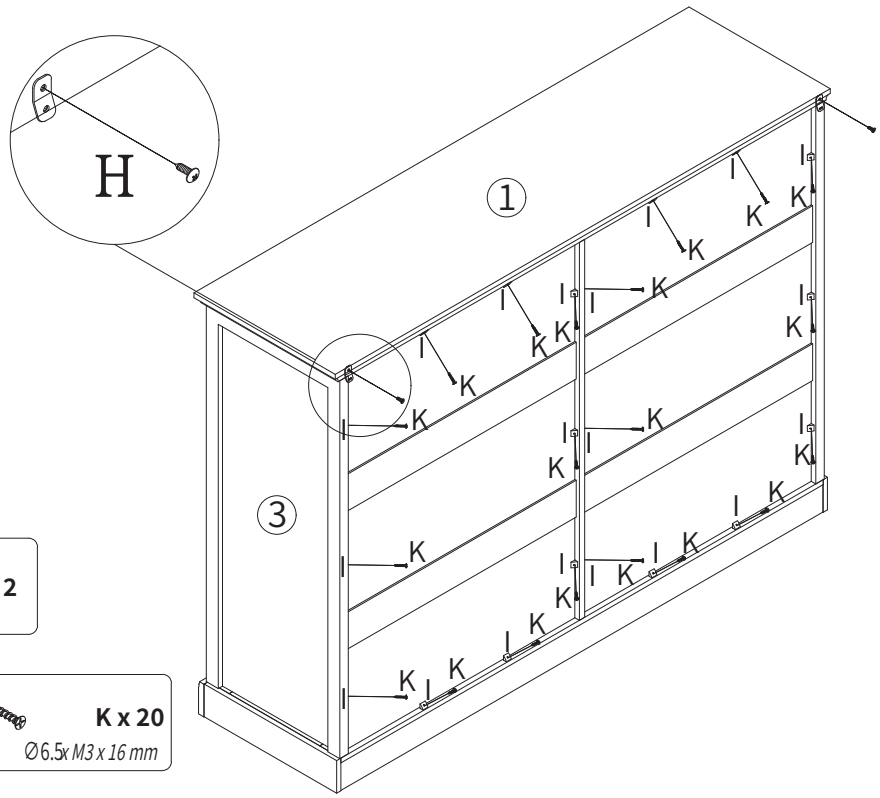





I x 20
15 x 13 x 10 mm


K x 20
Ø6.5x M3 x 16 mm

Step 23

Install (H)in the corresponding position as shown in the figure.

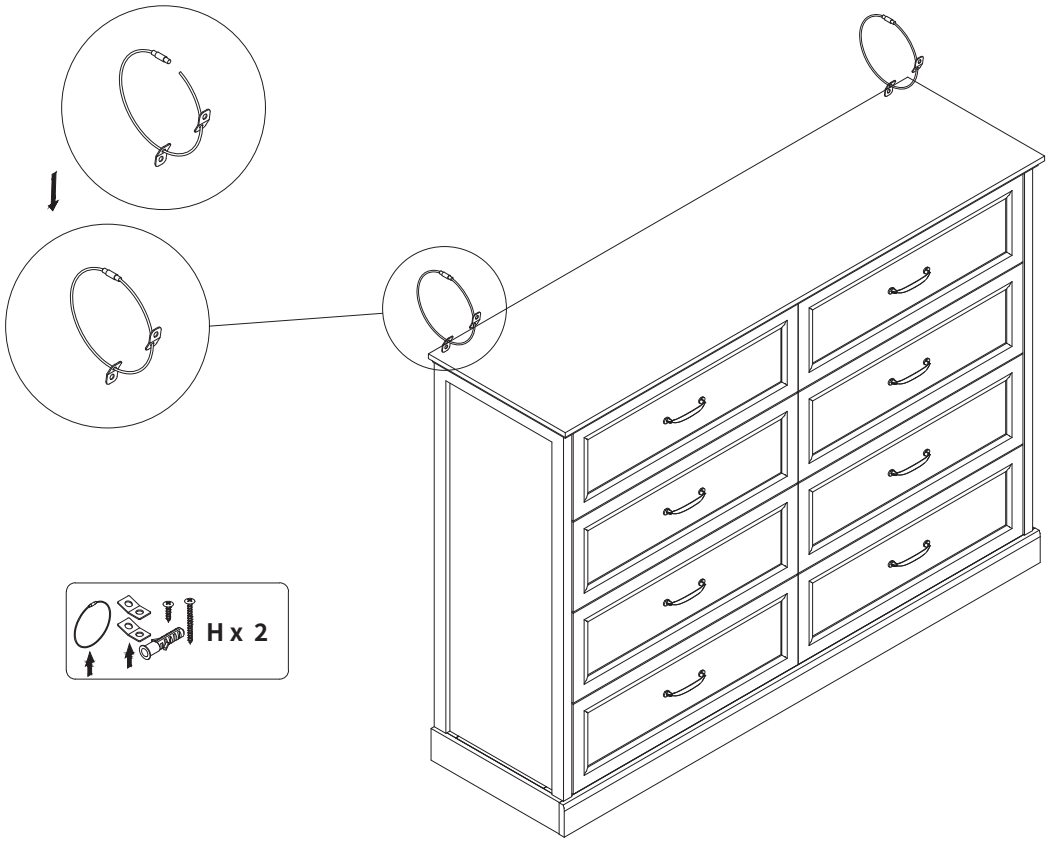

Step 24

WARNING:Alway ensure the area to bedrilled is free from hidden electrical wires,water and gas pipes.

