

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

Allen Wrench (Provided, Part D & E)
Phillips Screwdriver (Not provided)

BEFORE YOU START:

1. Check the hardwares against the hardware list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

Step 1. Insert the side frame+top panel and bottom stretcher into wire rack. Tighten Bolt by Allen Wrench (E) as shown in Figure 1.

Step 2. Lock the top panel to the top frame and tighten Bolt (A) with Flat Washer (C)+Lock Washer (B) by Allen Wrench (D) as shown in Figure 2.

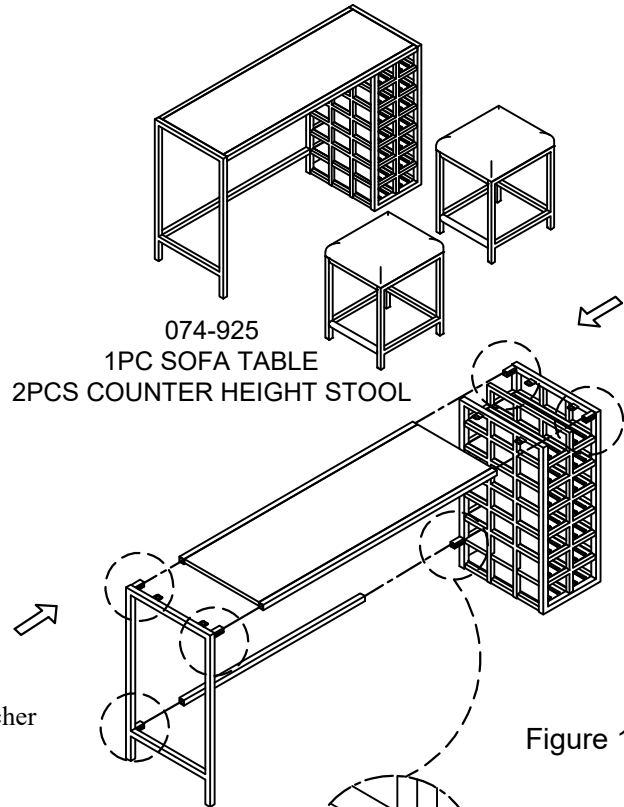


Figure 1

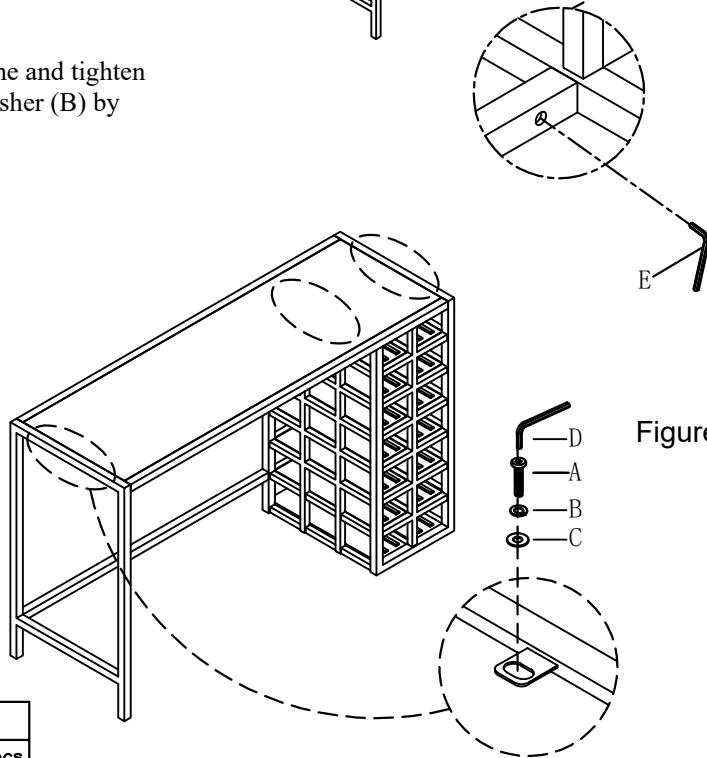



Figure 2

		HARDWARE LIST	
A		Bolt (Ø1/4"x5/8")	6pcs
B		Lock Washer (Ø1/4")	6pcs
C		Flat Washer (Ø1/4"*16*1.5mm)	6pcs
D		Allen Wrench (100*50*4mm)	1pcs
E		Allen Wrench (100*50*5mm)	1pcs
F		Screw (Φ8x5/8")	16pcs

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

Allen Wrench (Provided, Part D & E)
Phillips Screwdriver (Not provided)

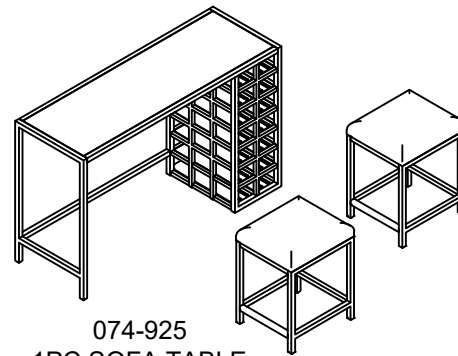

074-925
1PC SOFA TABLE
2PCS COUNTER HEIGHT STOOL

INSTRUCTIONS:

Step 3. Insert the stretchers to the side frame. Tighten Bolt by Allen Wrench (E) as shown in Figure 3.

Step 4. Turn the stool upside down. Use screwdriver to screw and secure the cushion as shown in Figure 4.

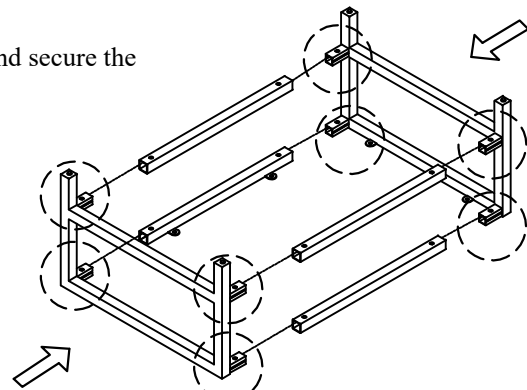


Figure 3

Figure 4

