


ASSEMBLY INSTRUCTION

36 INCH BATH VANITY

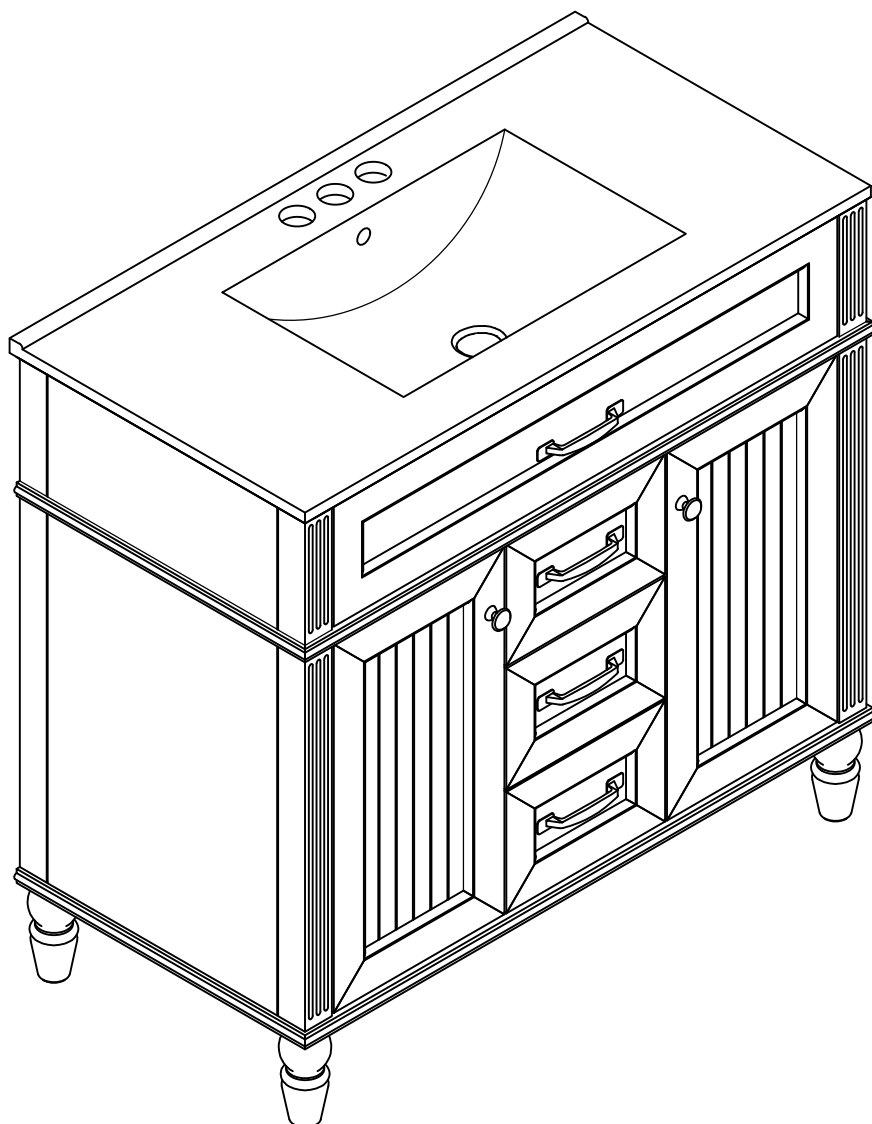


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present. "DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.

Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
Connect the panels together.		
ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		


Detail View - VANITY

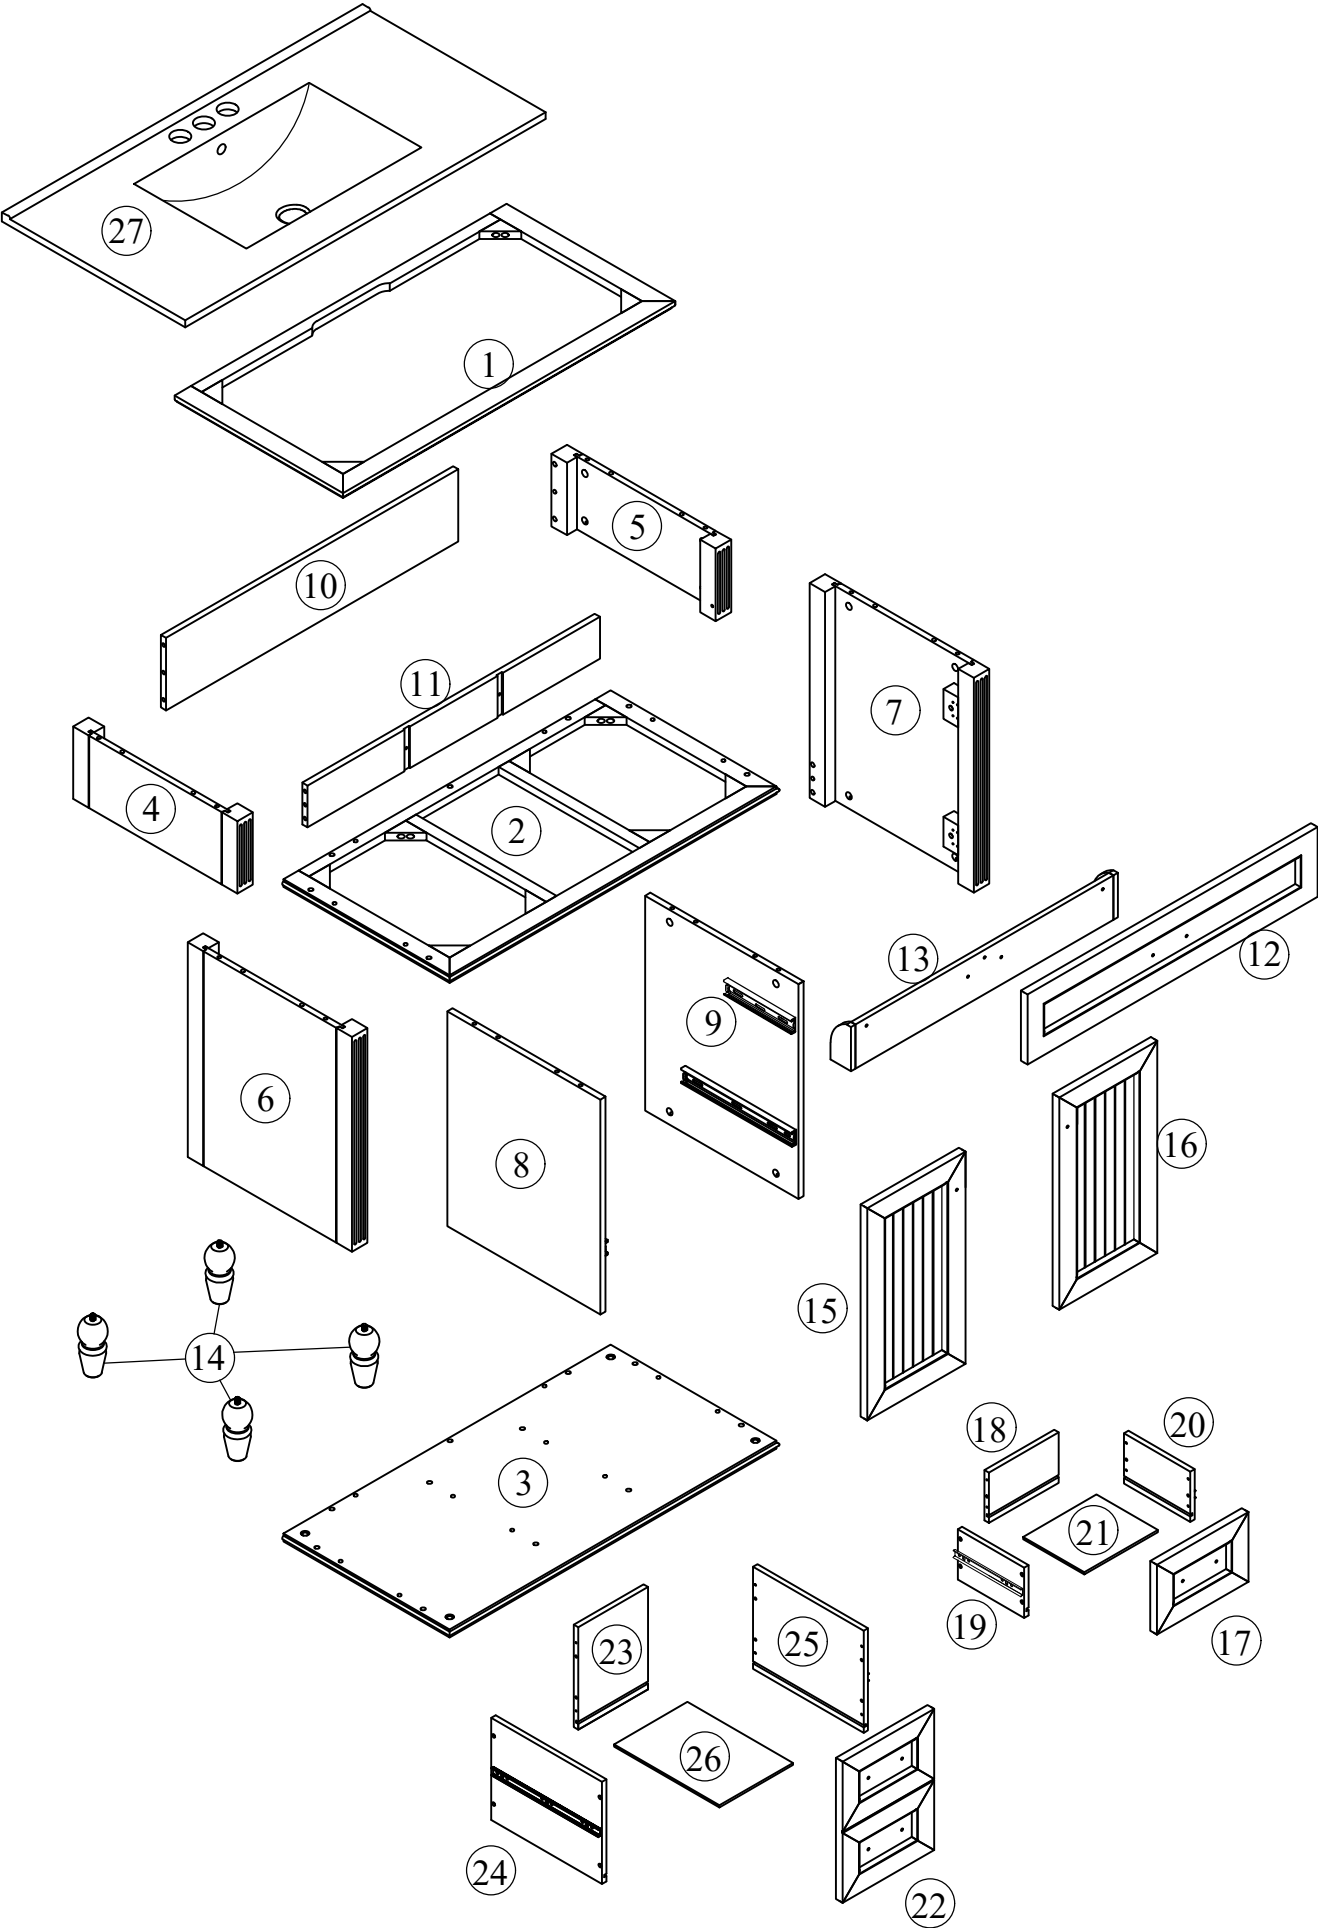

Identifying the Hardware -Identify the hardware using the illustrations below.


Part List

1

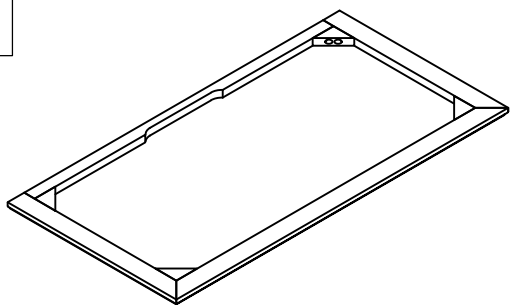


Frame Top - 1pc

2

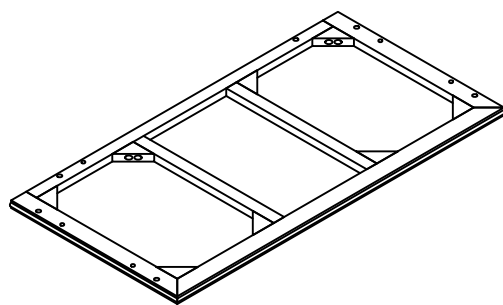


Frame Mid - 1pc

3

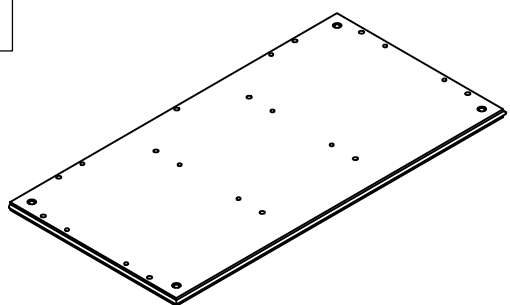


Bottom Panel - 1pc

4

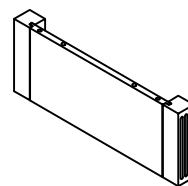


Top Side Panel (L) - 1pc

5

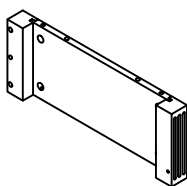


Top Side Panel (R) - 1pc

6

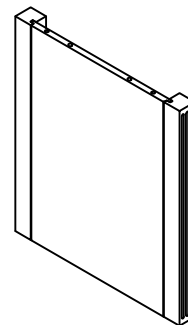


Bottom Side Panel (L) - 1pc

7

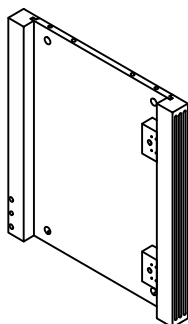


Bottom Side Panel (R) - 1pc

8

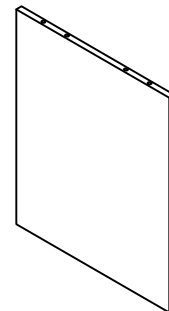


Mid Panel (L) - 1pc

9

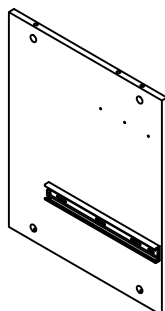

Mid Panel (R) - 1pc


10

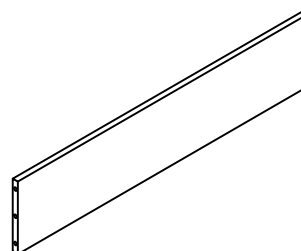

Top Rear Bar - 1pc


Part List

11

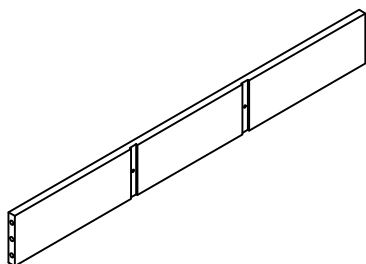


Bottom Rear Bar - 1pc

12

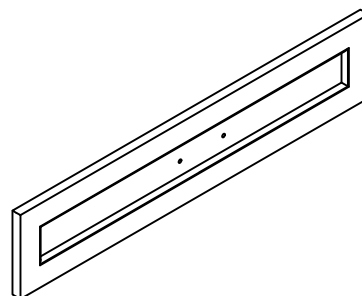

Flip Drawer Face - 1pc

13

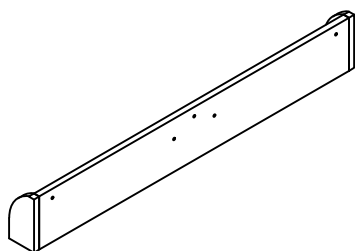


Flip Drawer - 1pc

14




Legs- 4pcs

15

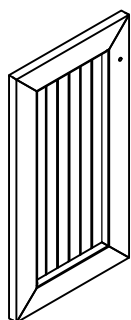


Left Door - 1pc

16

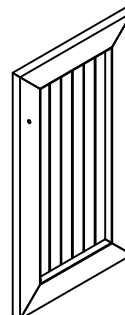


Right Door - 1pc

17

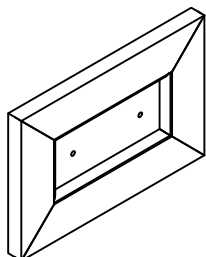


Top Drawer Face - 1pc

18

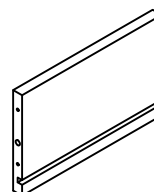


Top Back Drawer - 1pc

19

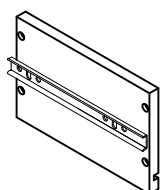

Top Side Drawer (L) - 1pc


20

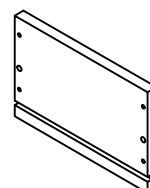

Top Side Drawer (R) - 1pc


Part List

21

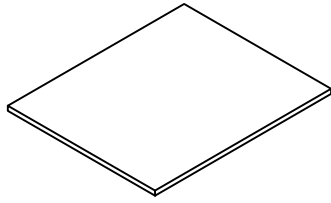


Top Bottom Drawer - 1pc

22

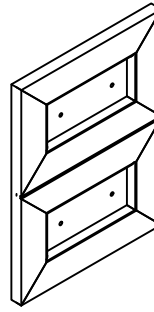


Bottom Drawer Face - 1pc

23




Bottom Back Drawer - 1pc

24

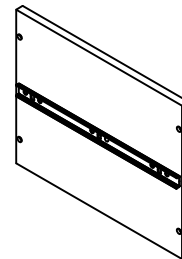


Bottom Side Drawer (1) - 2pc

25

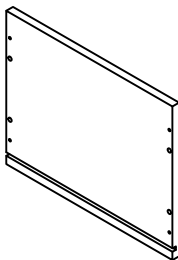


Bottom Side Drawer (R) - 1pc

26

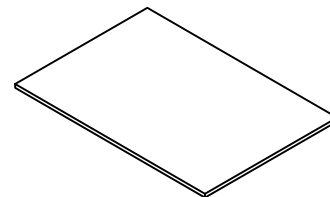









Bottom Bottom Drawer - 1pc

27

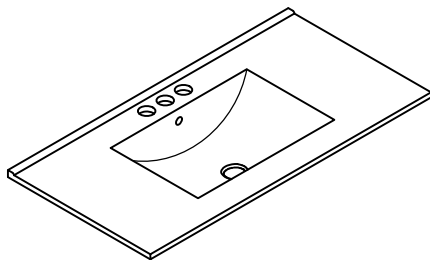


Sink - 1pc

Hardware List

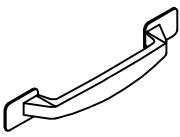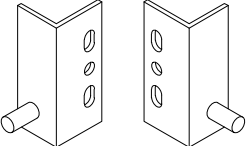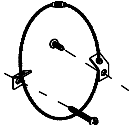A  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts - 38pcs	B  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock - 38pcs	C  $\varnothing 8 \times \varnothing 4 \times 15 \text{mm}$ Round head screw - 3pcs
D  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw - 2pcs	E  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw - 16pcs	F  Handle - 2pcs
G  Handle - 4pcs	H  $\varnothing 5/32" \times 25 \text{mm}$ Handle screw - 8pcs	I  $\varnothing 5/32" \times 30 \text{mm}$ Handle screw - 2pcs
J  Duo Forte (1pc)	K  Rotary Hinge(2pcs)	L  $\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$ Round head screw(8pcs)
M  Damping hinge - 4pcs	N  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw - 24pcs	O  $\varnothing 8 \times 30 \text{mm}$ Wood dowel - 32pcs
P  $\varnothing 6 \times 30 \text{mm}$ Wood dowel - 12pcs	Q  Anti fall hardware (2sets)	

STEP: 1

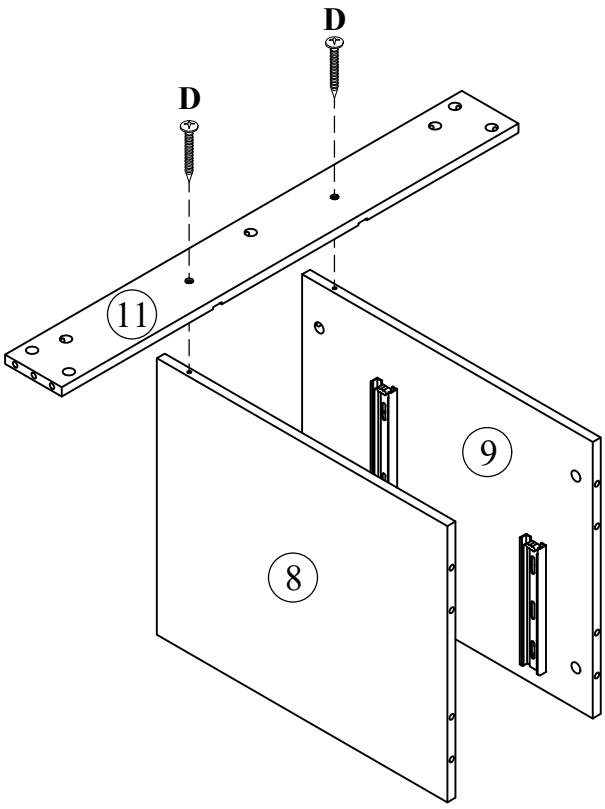


D




2PCS

STEP: 2

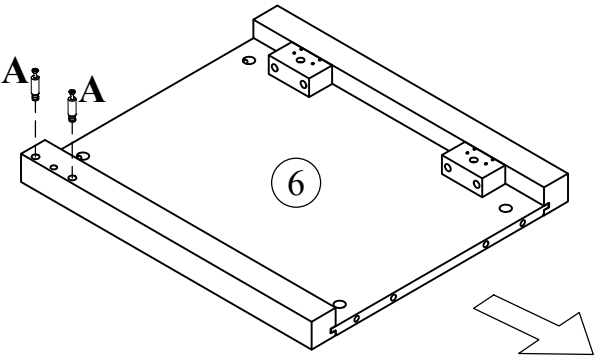

A




2PCS

B




2PCS


O




1PC

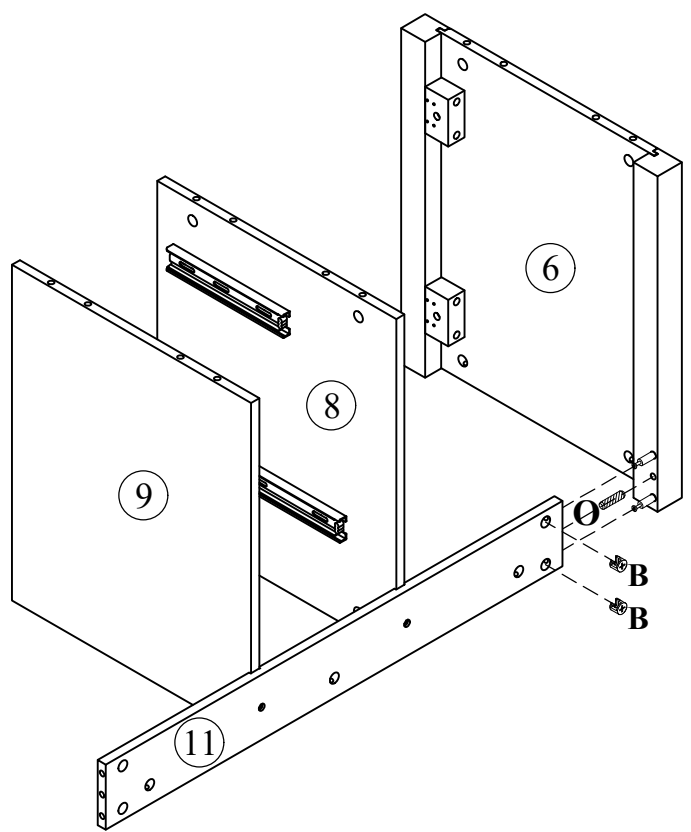


STEP: 3

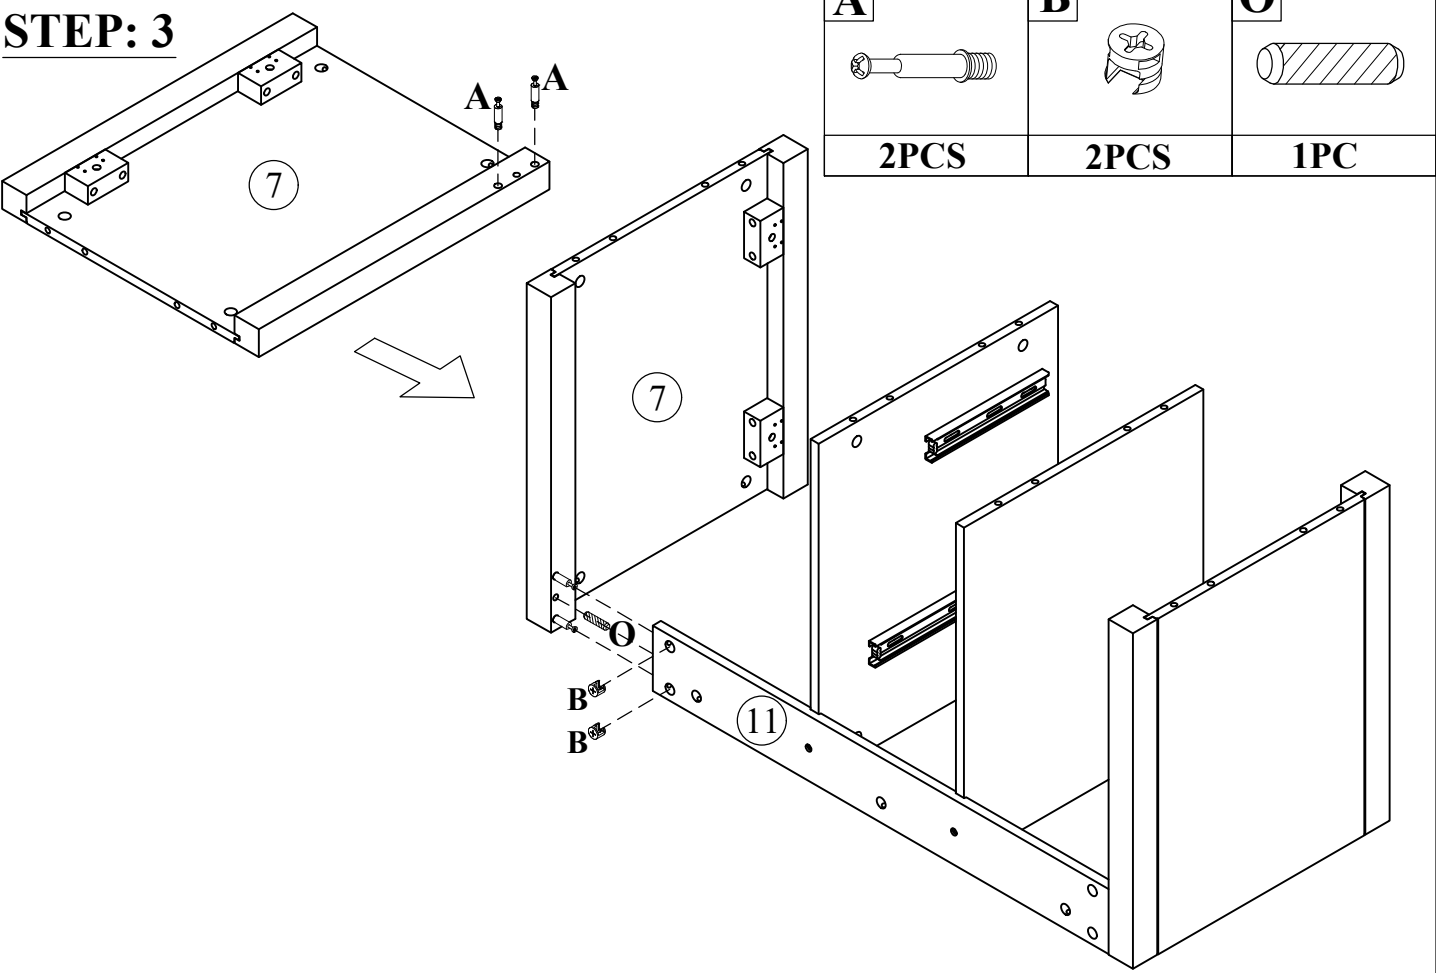

STEP: 4

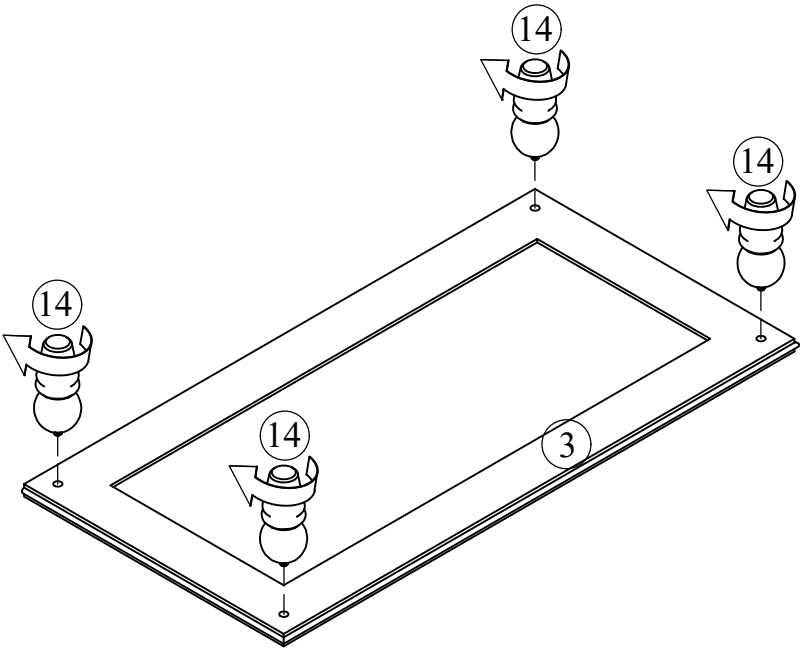

STEP: 5

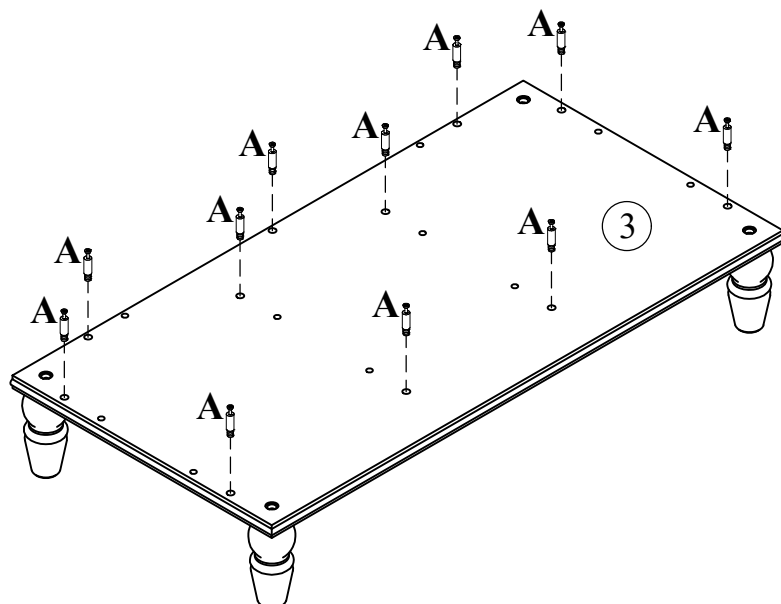


A




11PCS

STEP: 6

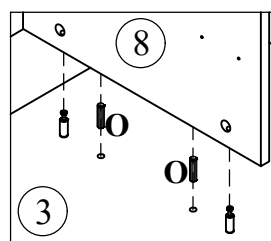

X2

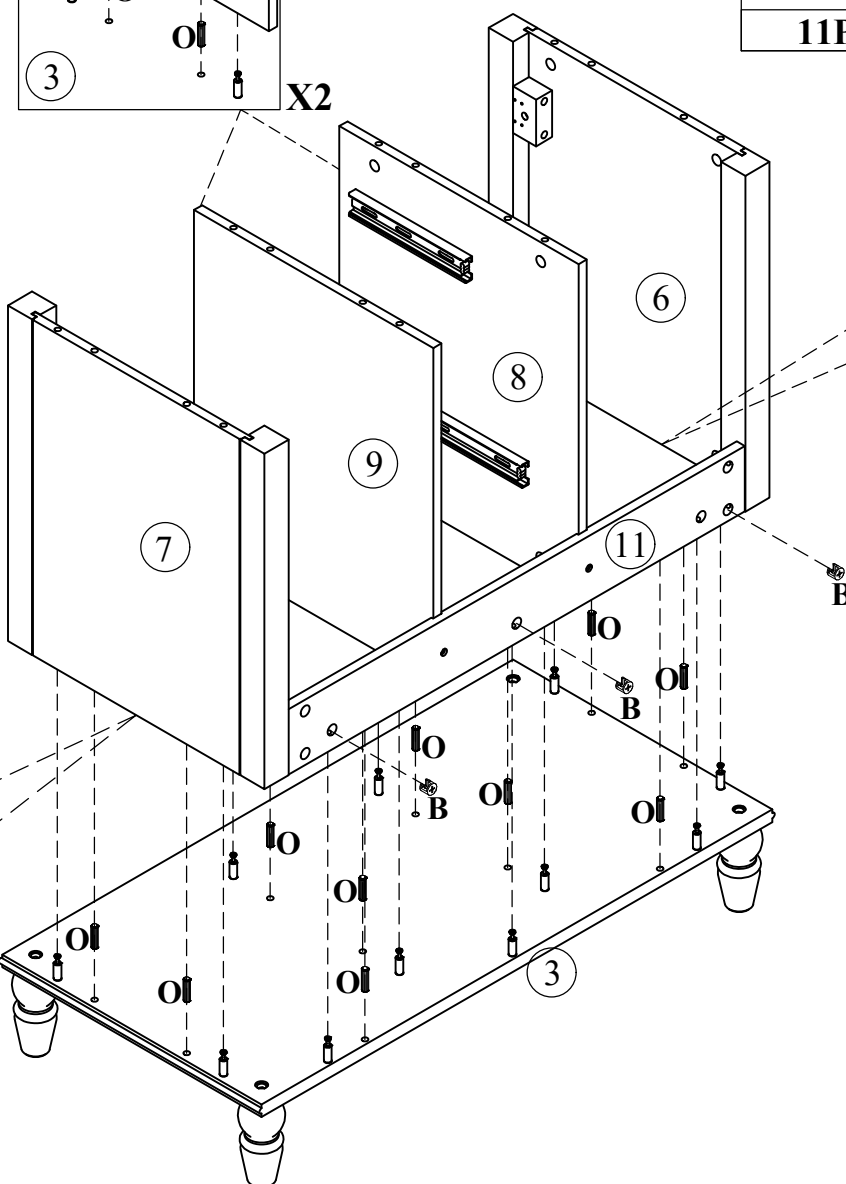


B




11PCS

O






10PCS

STEP: 7

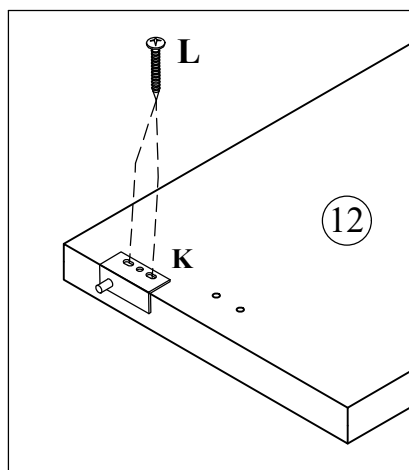


L	H	G	C
4PCS	2PCS	1PC	3PCS


K
2PCS

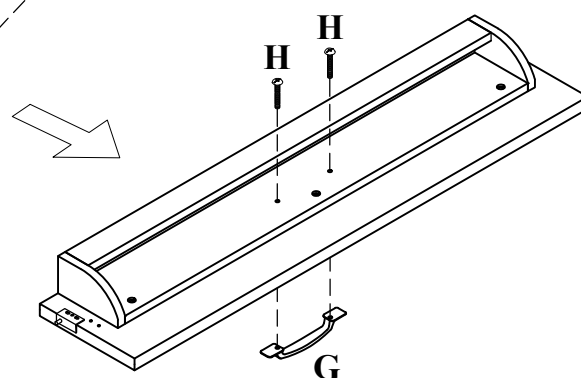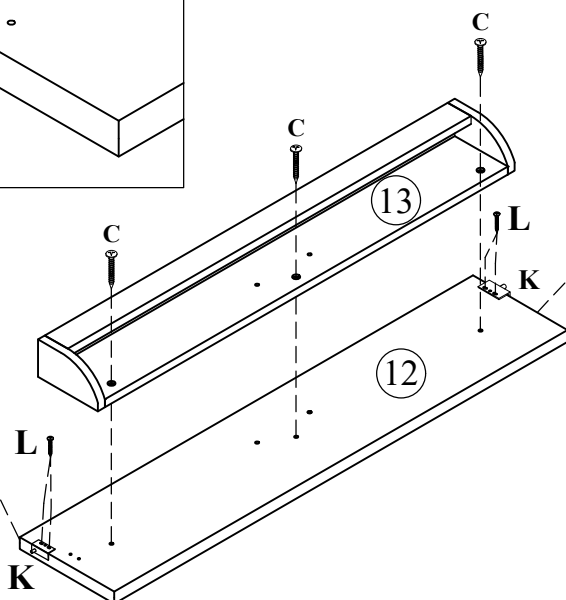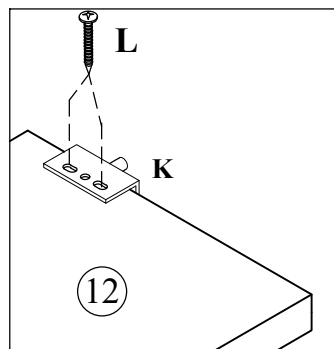


STEP: 8

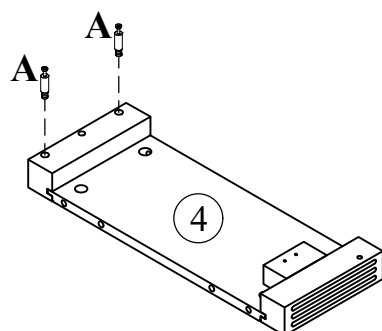



A	B	O
2PCS	2PCS	1PC

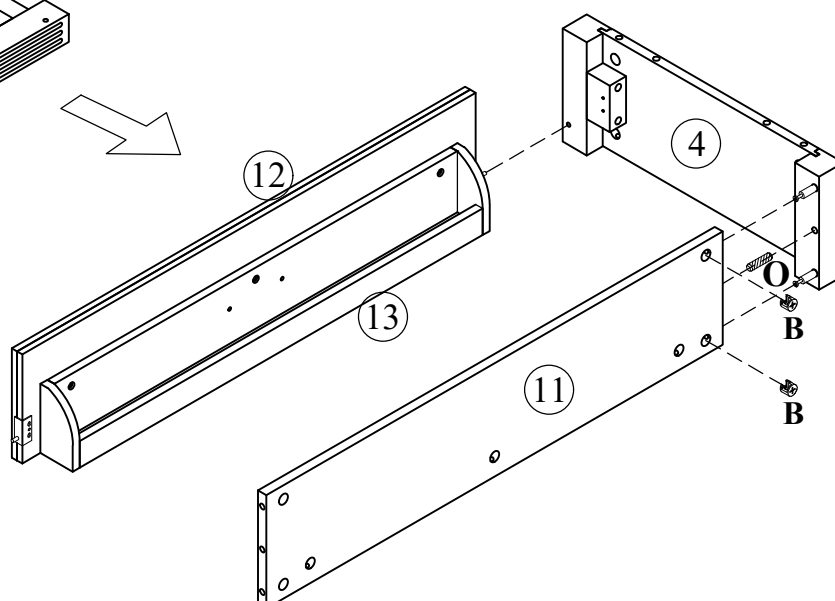


STEP: 9

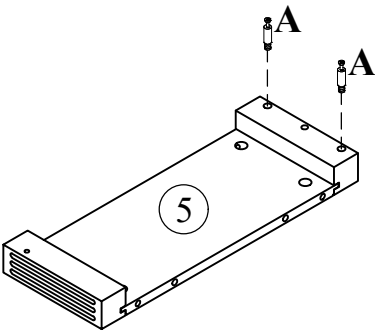


A	B	O
		
2PCS	2PCS	1PC

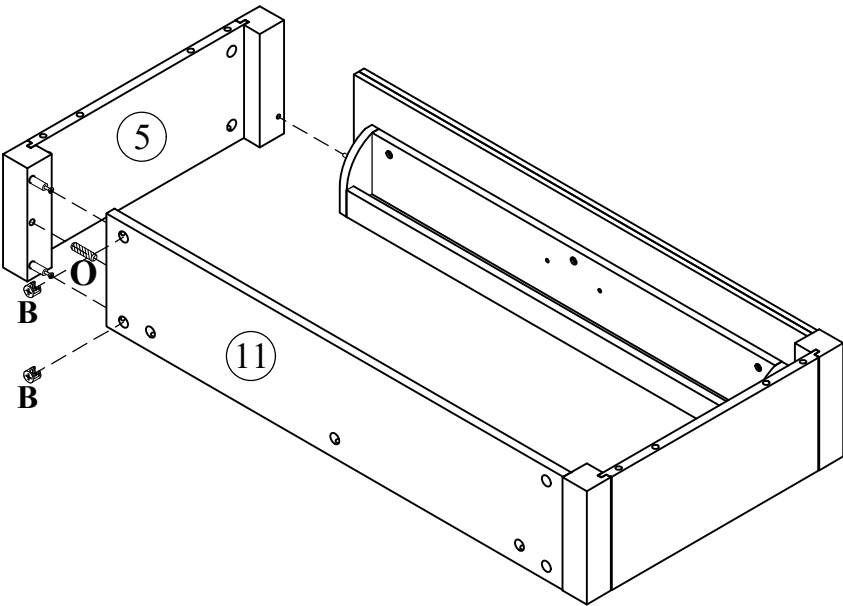


STEP: 10


A

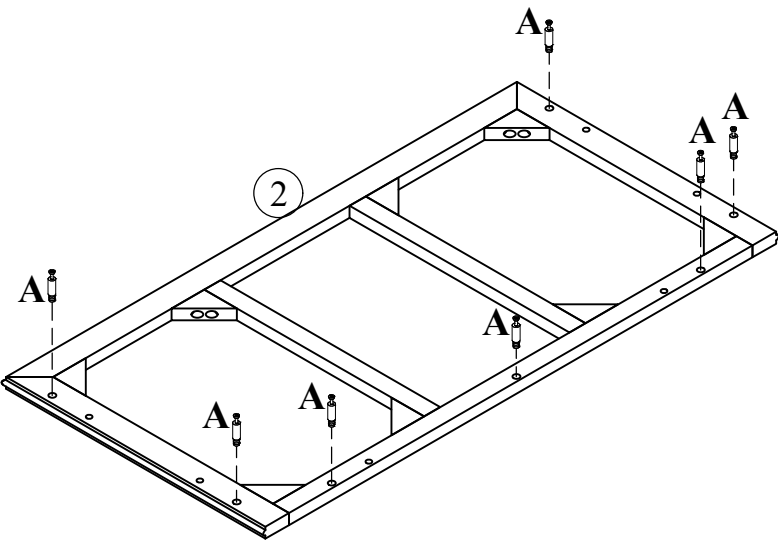7PCS

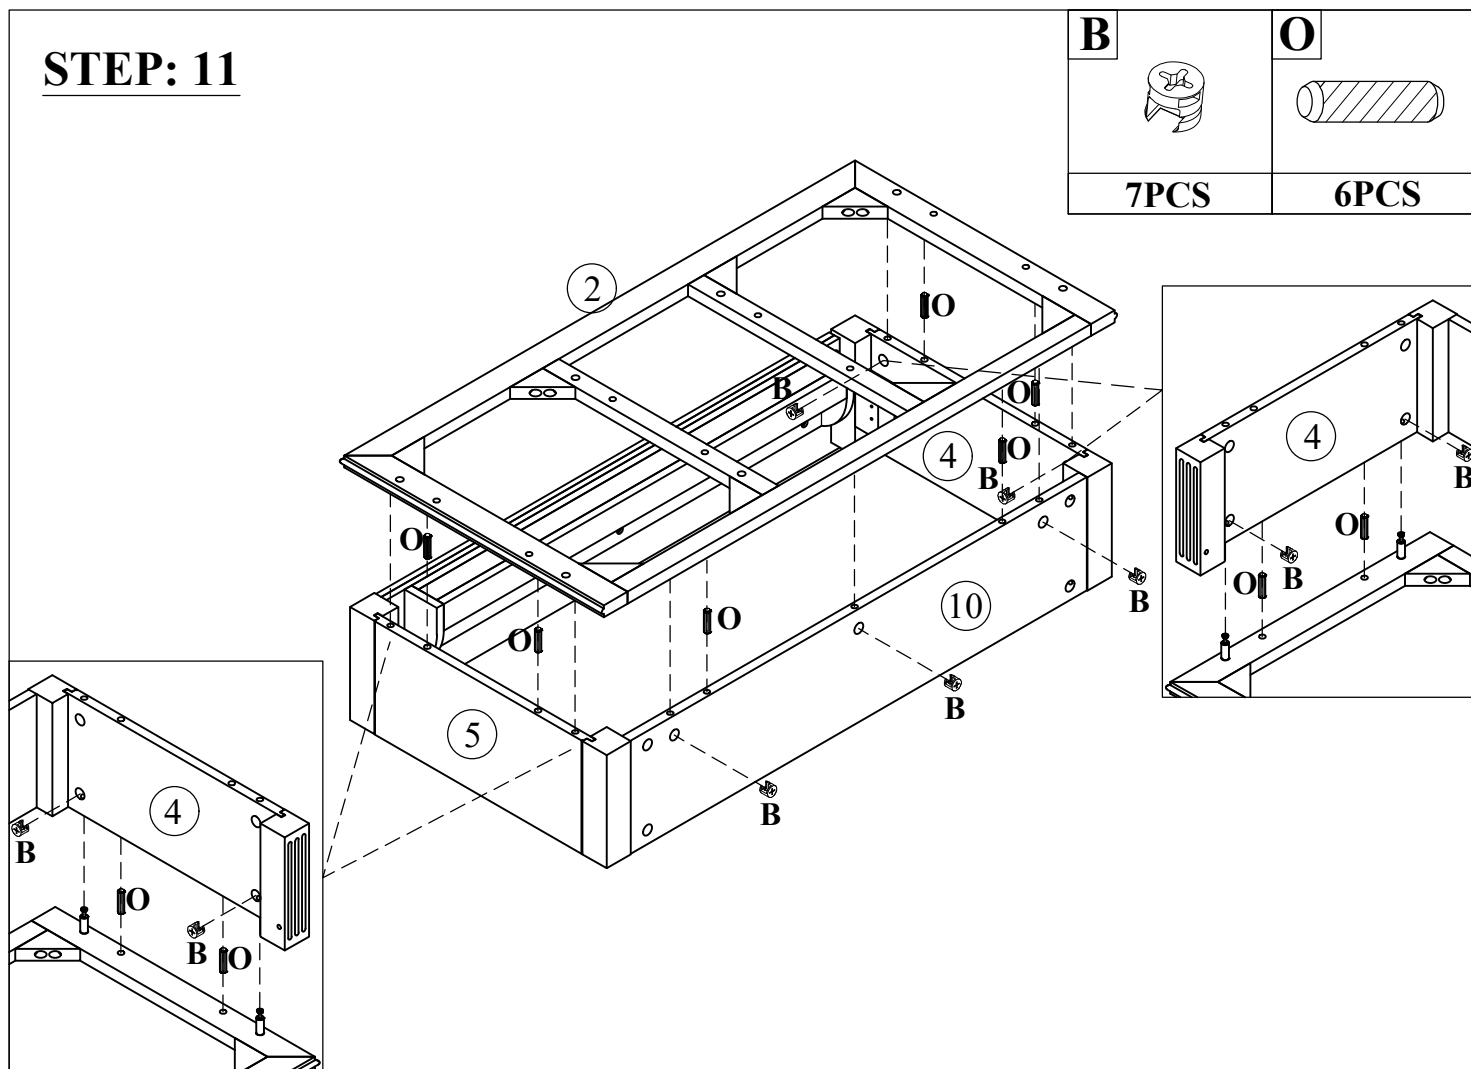

STEP: 11

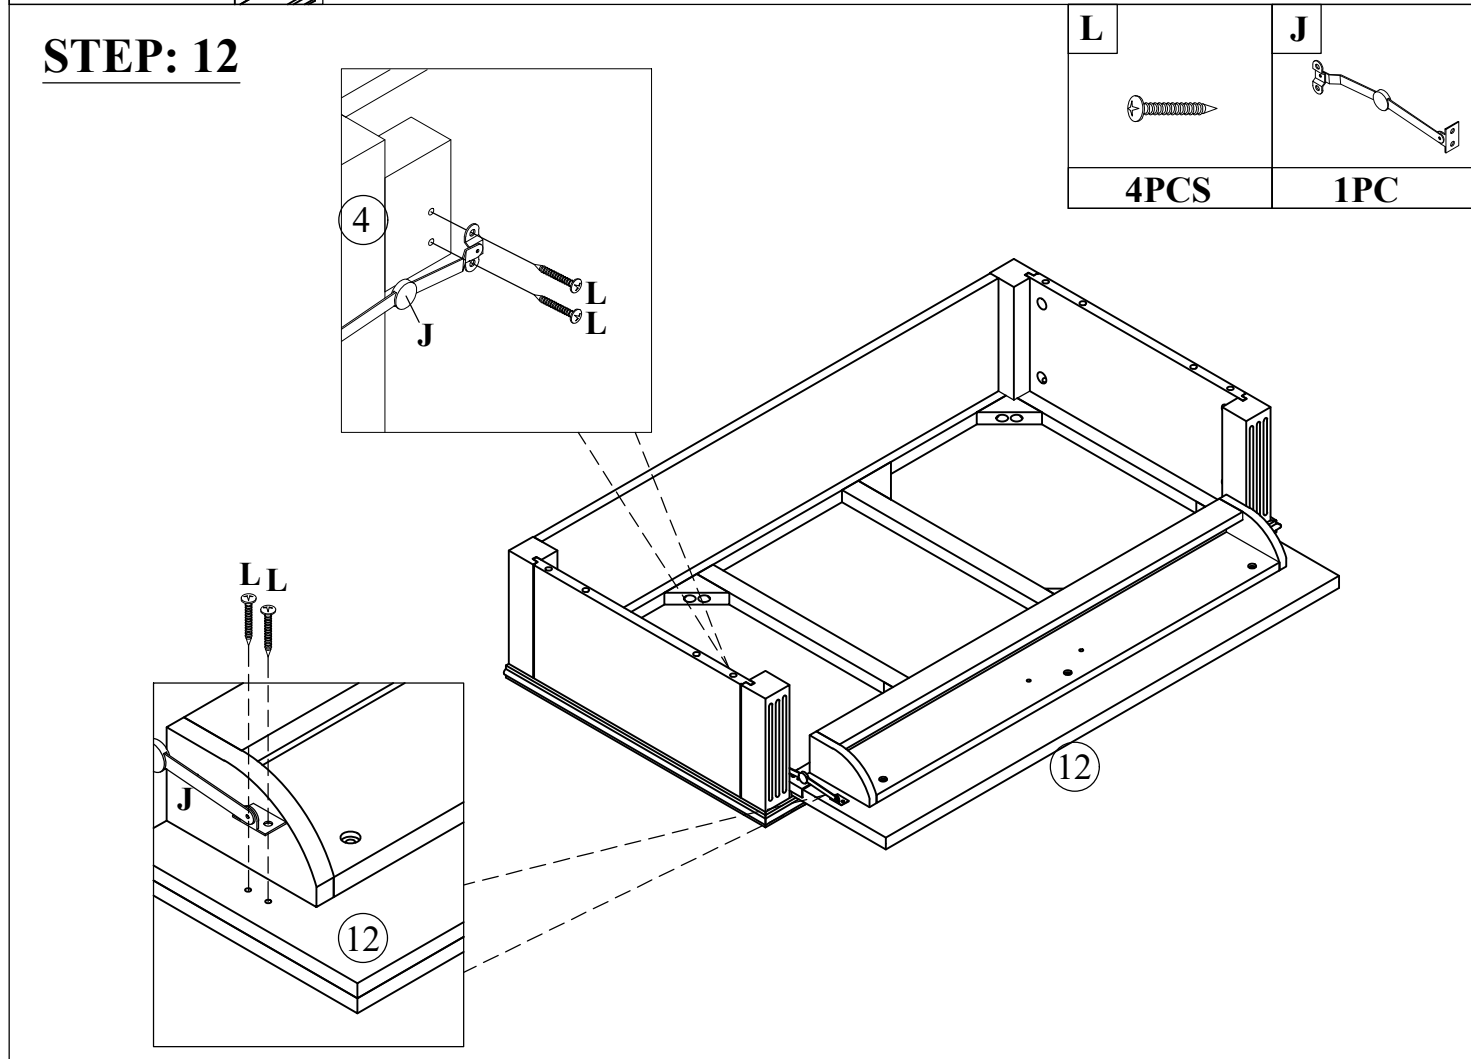


STEP: 12




STEP: 13

A



4PCS

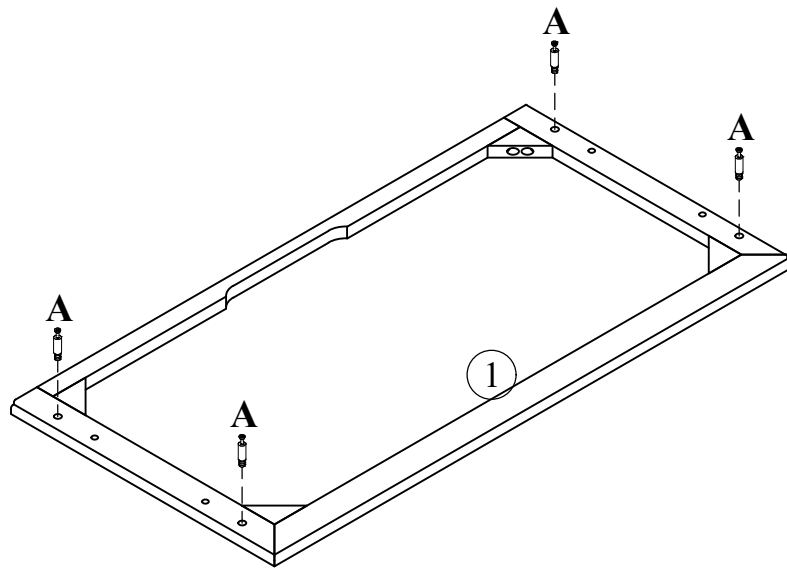


STEP: 14

B




4PCS

O



4PCS

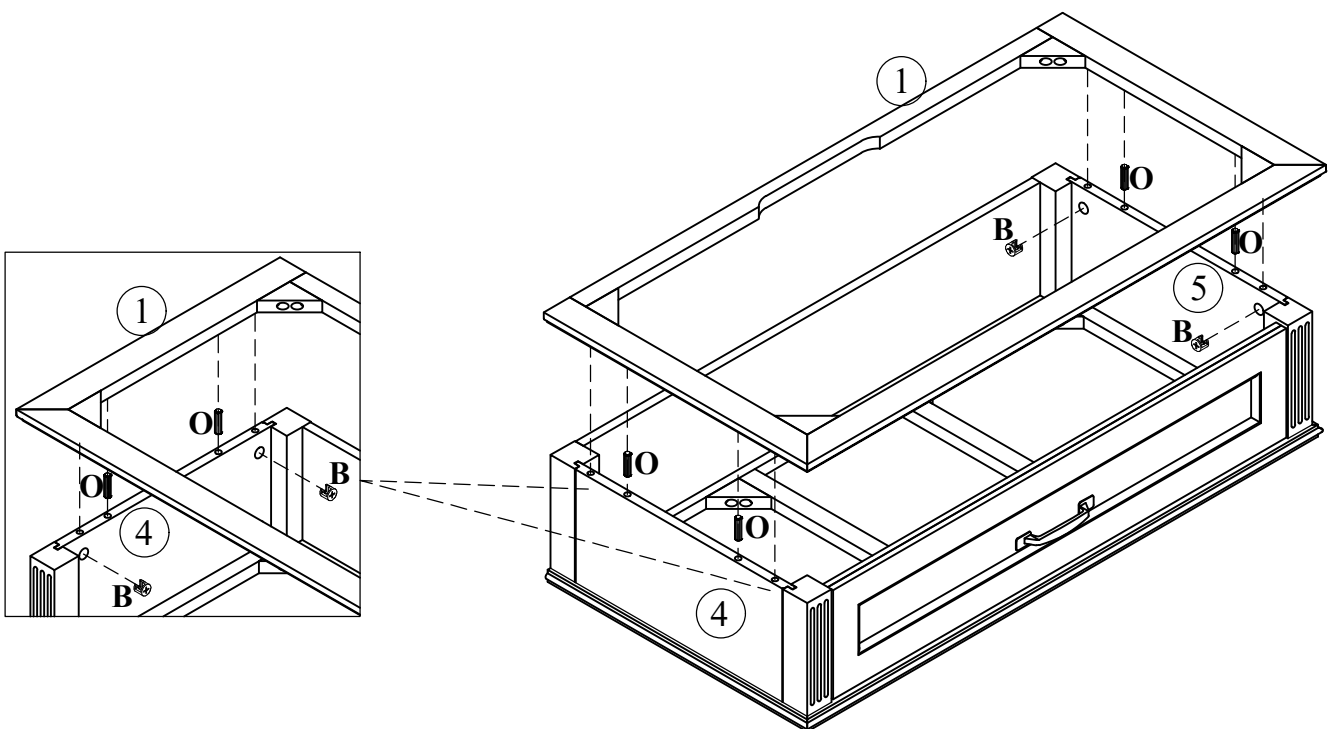


STEP: 15


A




8PCS

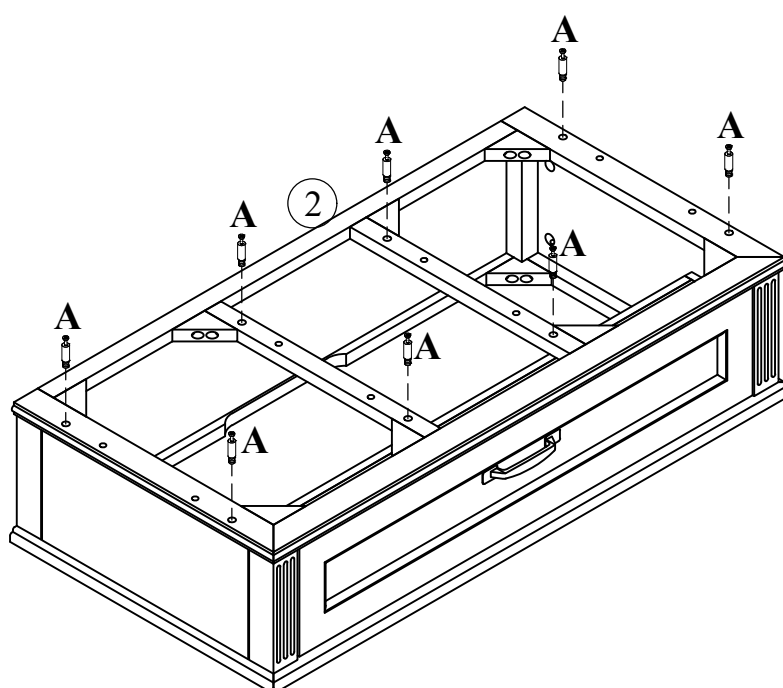



STEP: 16

B	O
	
8PCS	8PCS

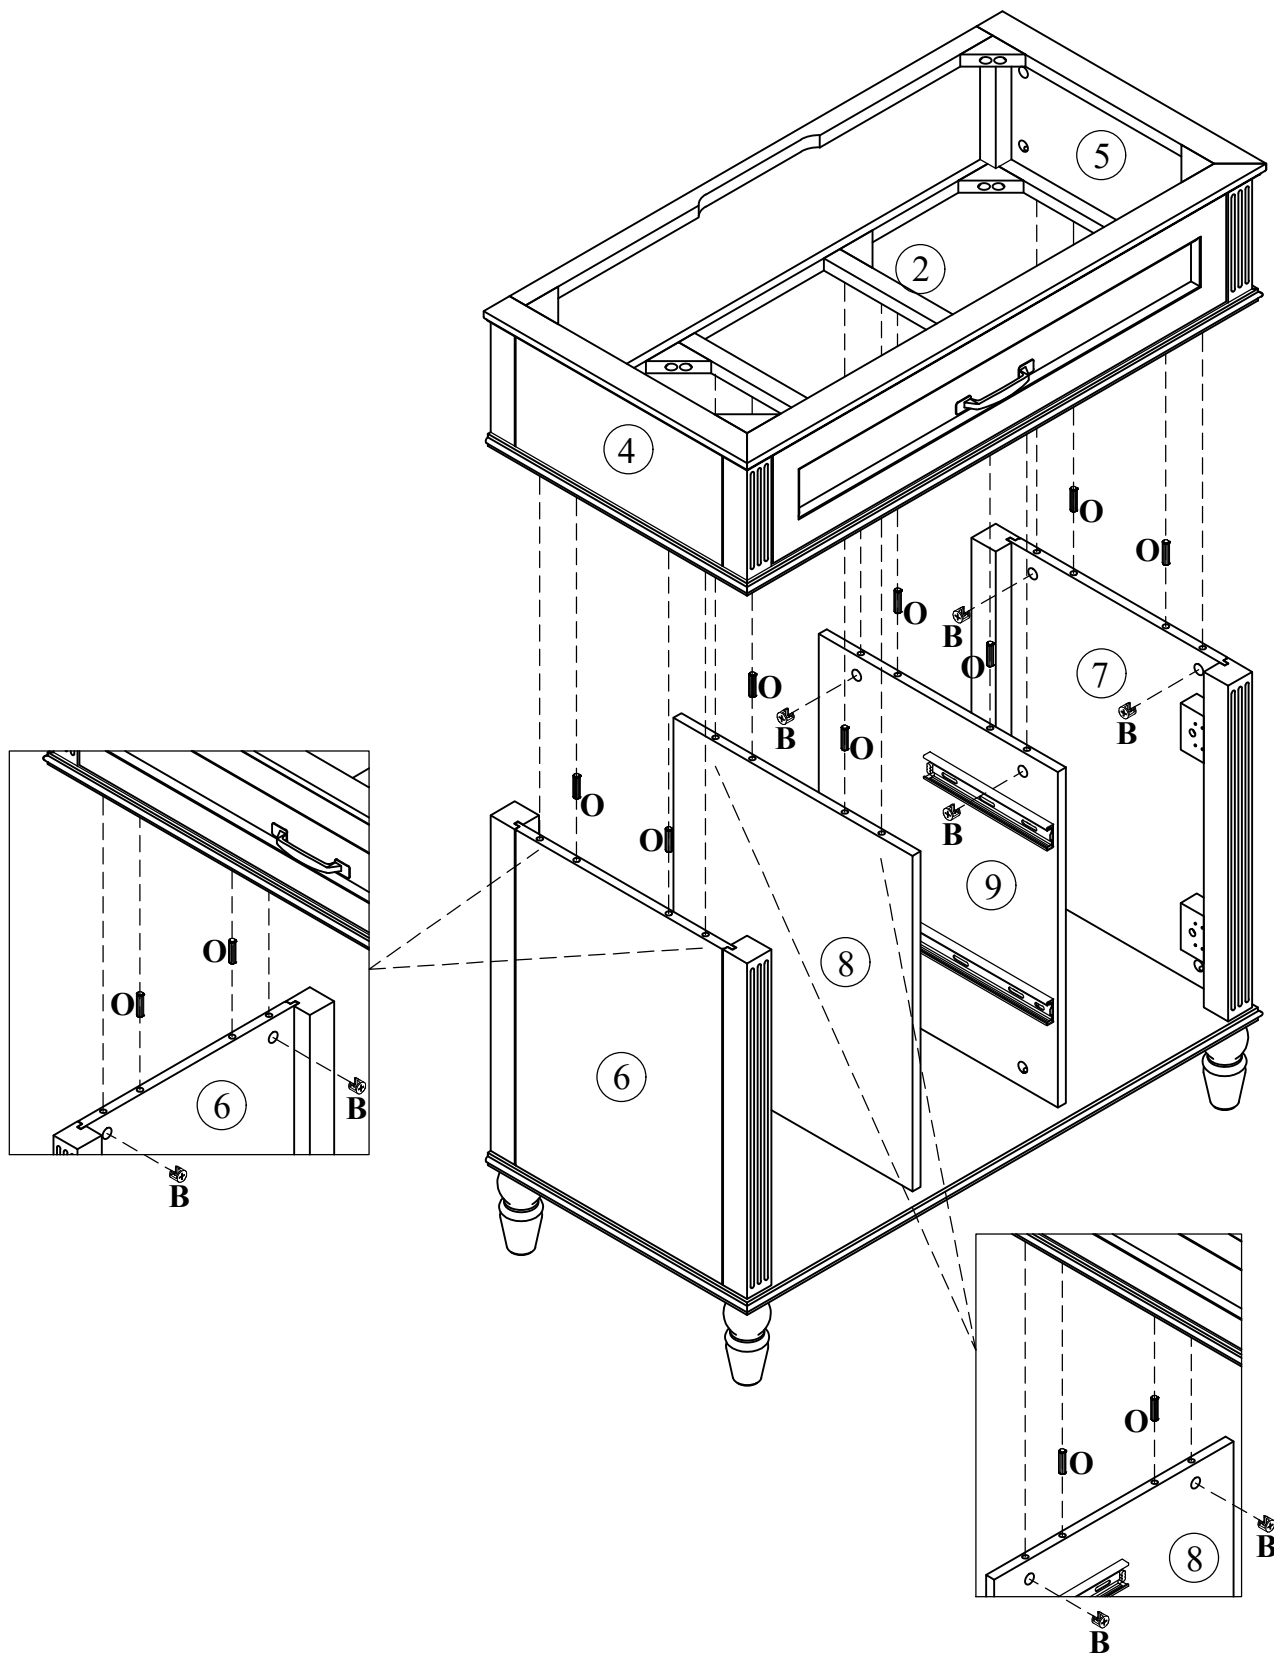



STEP: 17

N	M
	
8PCS	4PCS

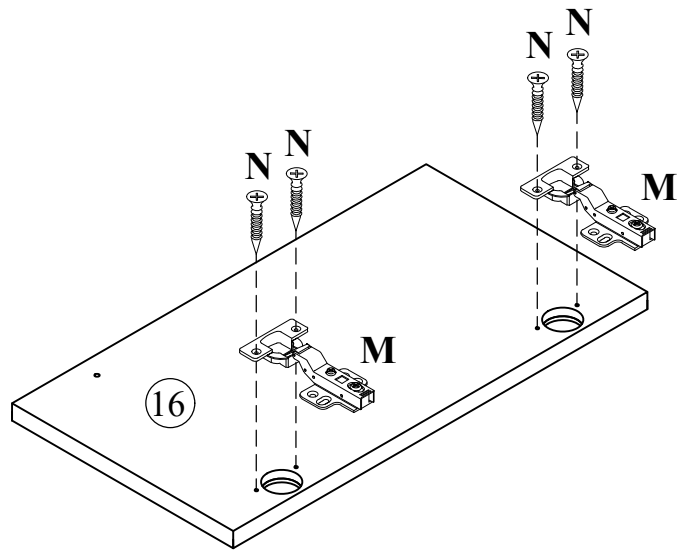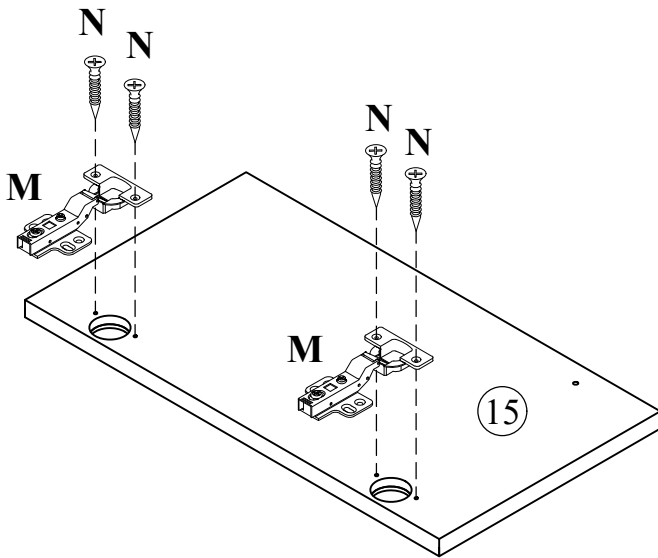



STEP: 18

F	I	N
		
2PCS	2PCS	16PCS

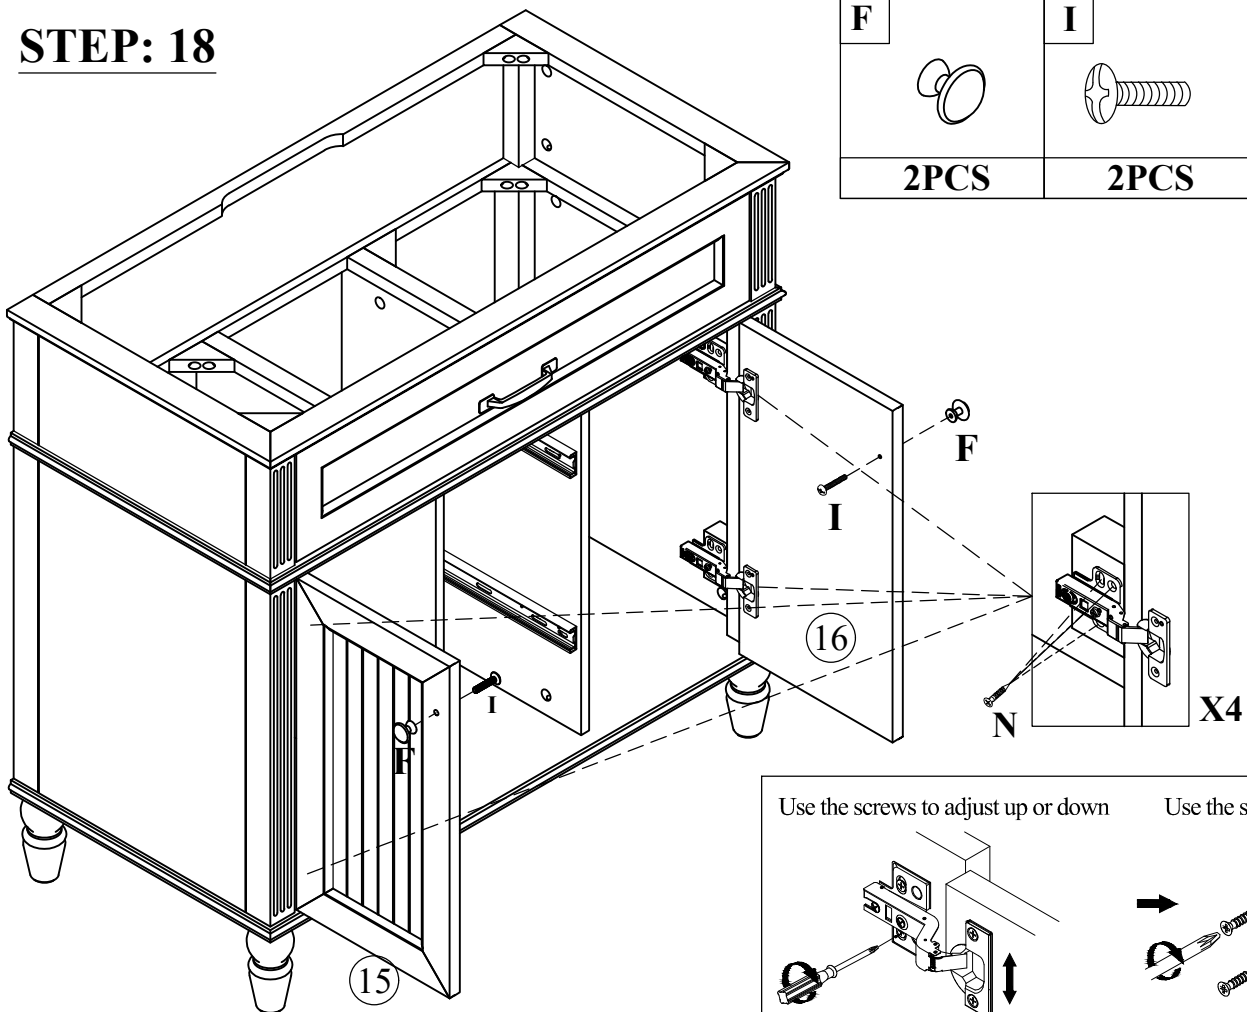



Use the screws to adjust up or down

Use the screws to permanent

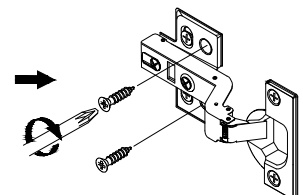
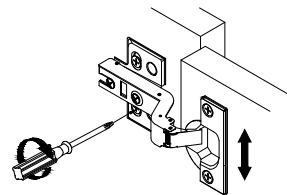






Use the screws to adjust left or right

Use the screws to adjust in or out

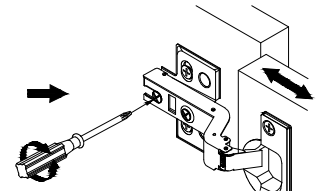
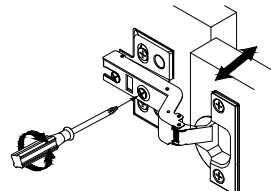









STEP: 19

E	P	G	H
			
8PCS	4PCS	1PC	2PCS

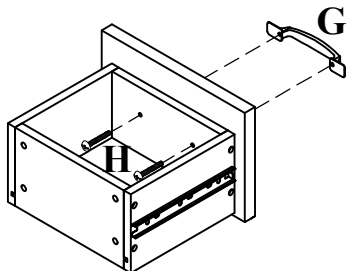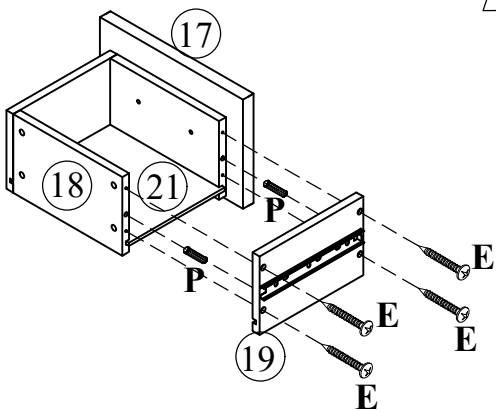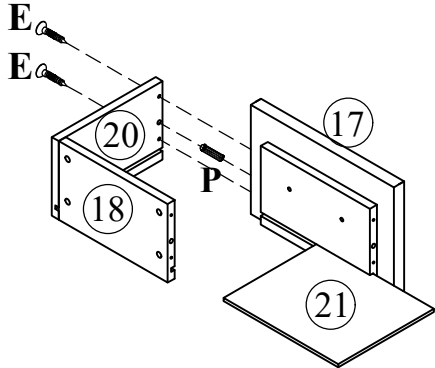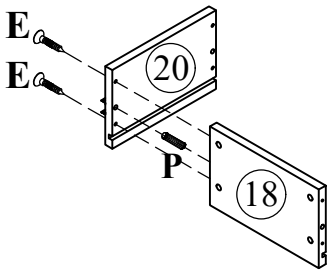


STEP: 20



E	P	G	H
			
8PCS	4PCS	2PCS	4PCS

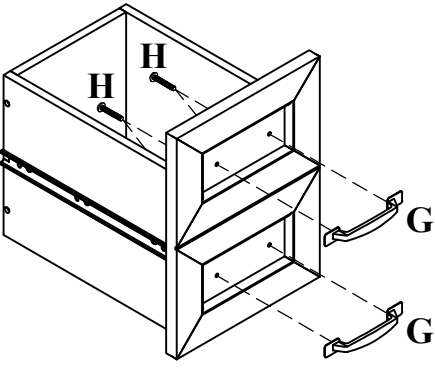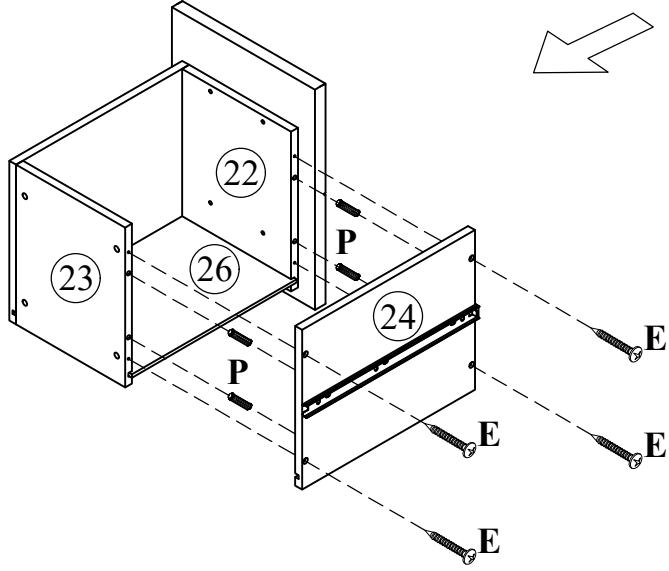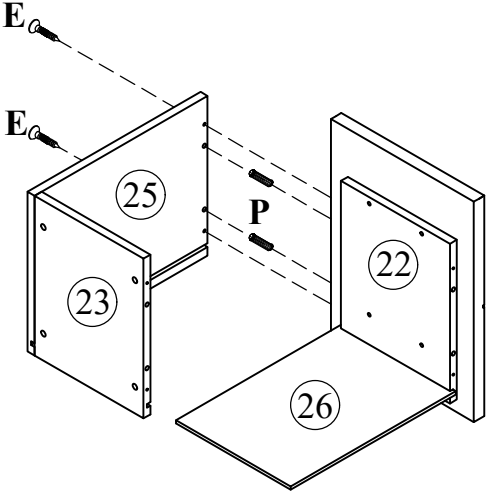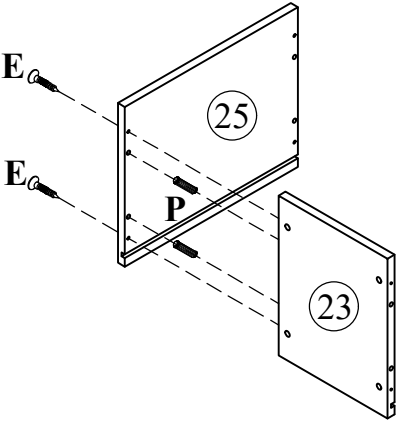

STEP: 21

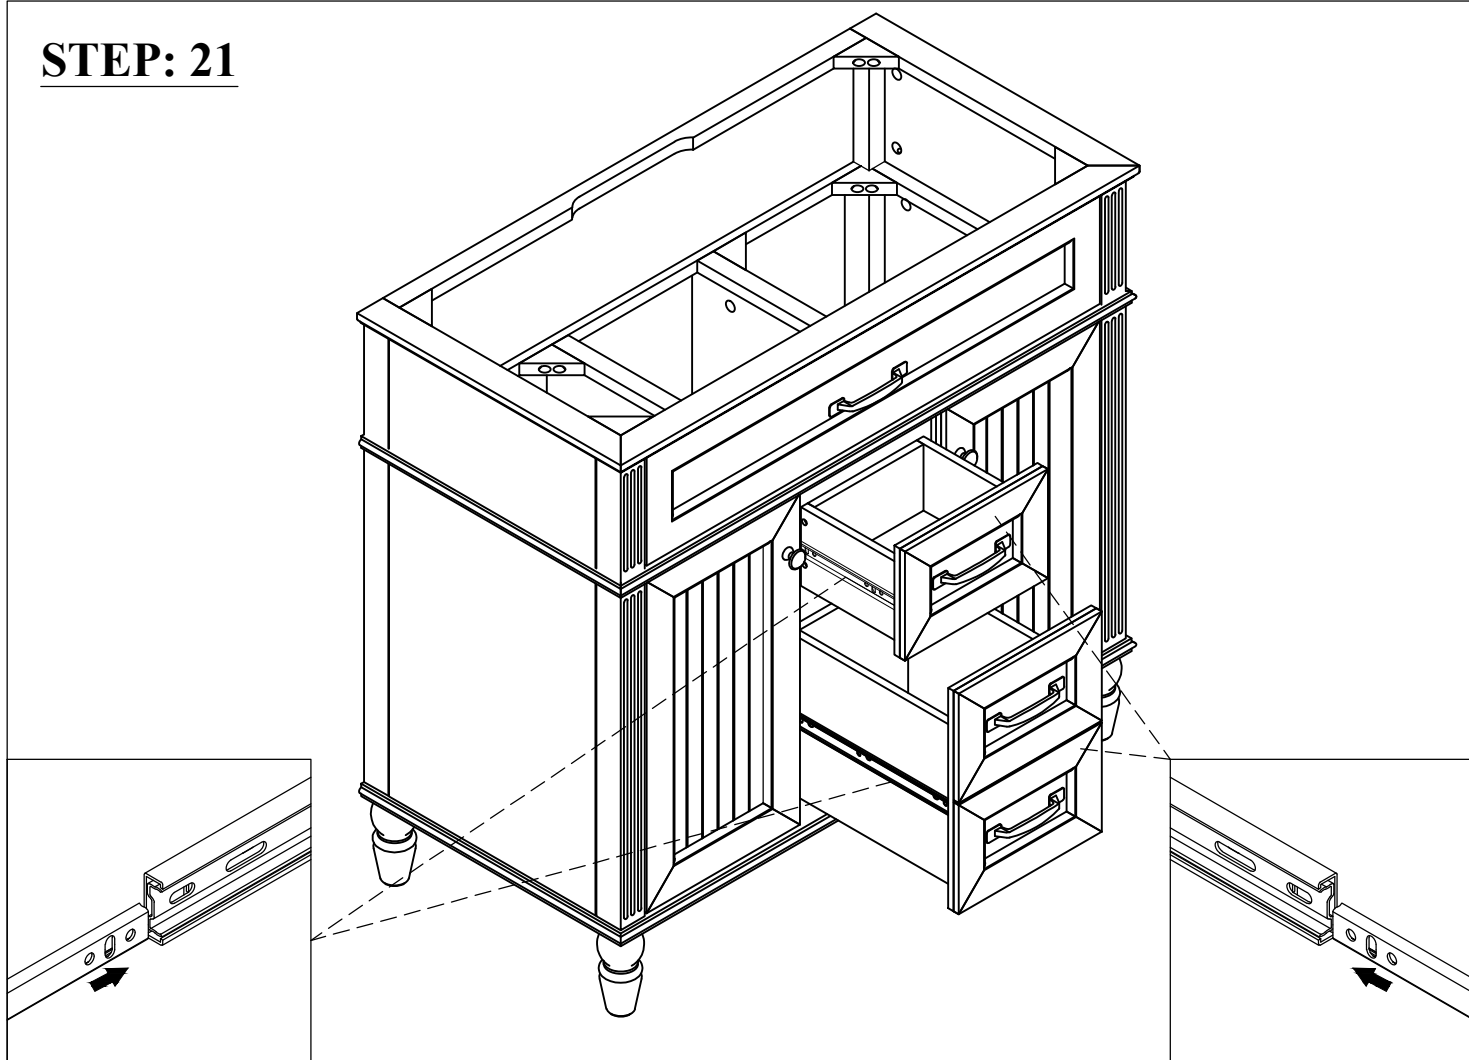

STEP: 22

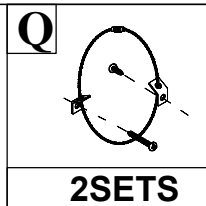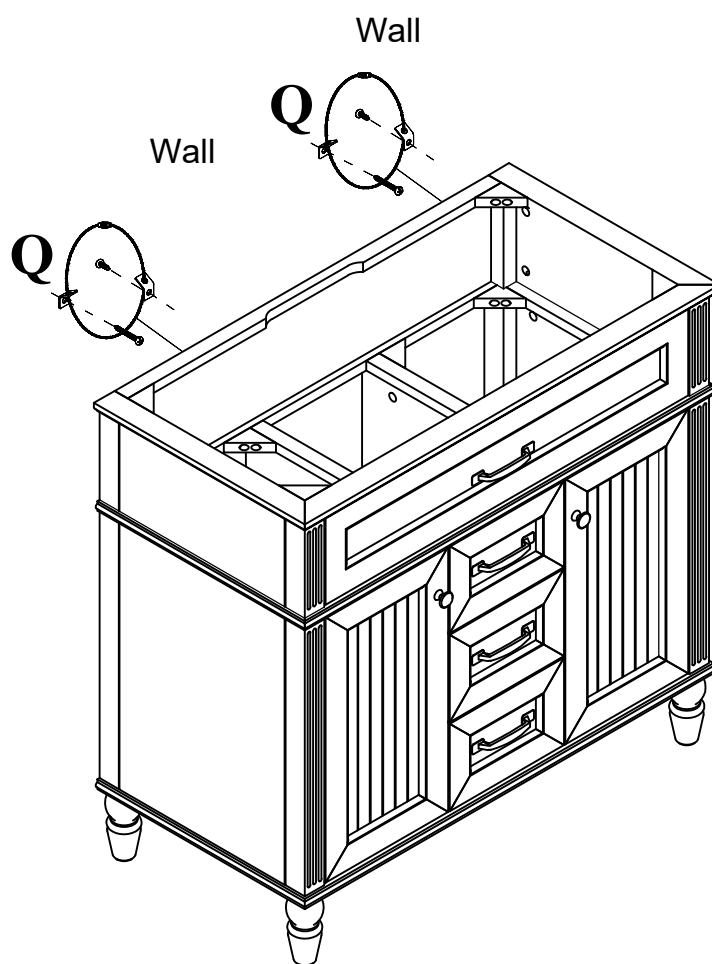



STEP: 23

Install the sink on the cabinet with glue.

Let stand for 24 hours

(Installez l'évier sur le meuble avec de la colle.



Laisser reposer 24 heures)

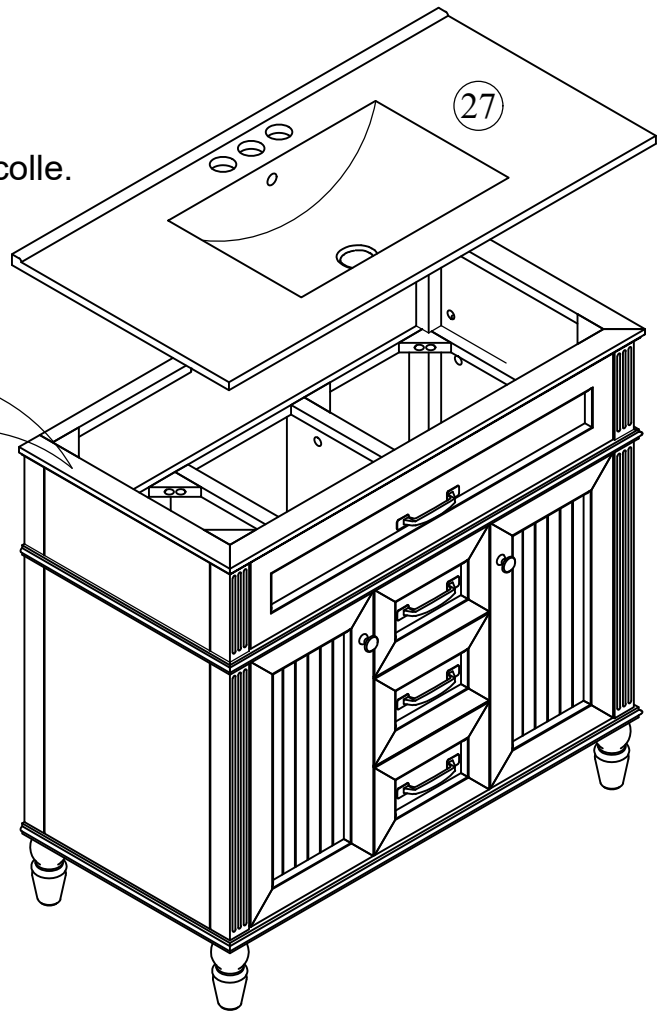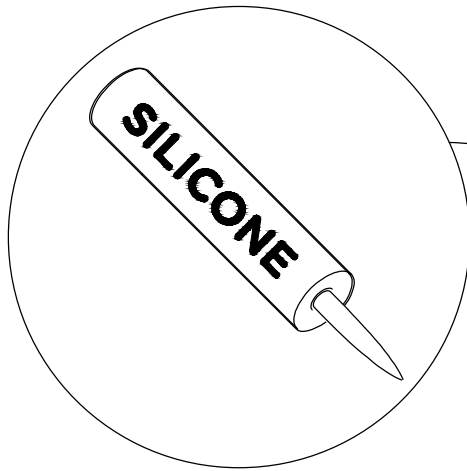


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

*La colle silicone n'est pas incluse dans le colis afin de respecter les règles de sécurité dans certaines conditions d'expédition.

STEP: 24

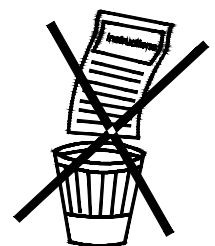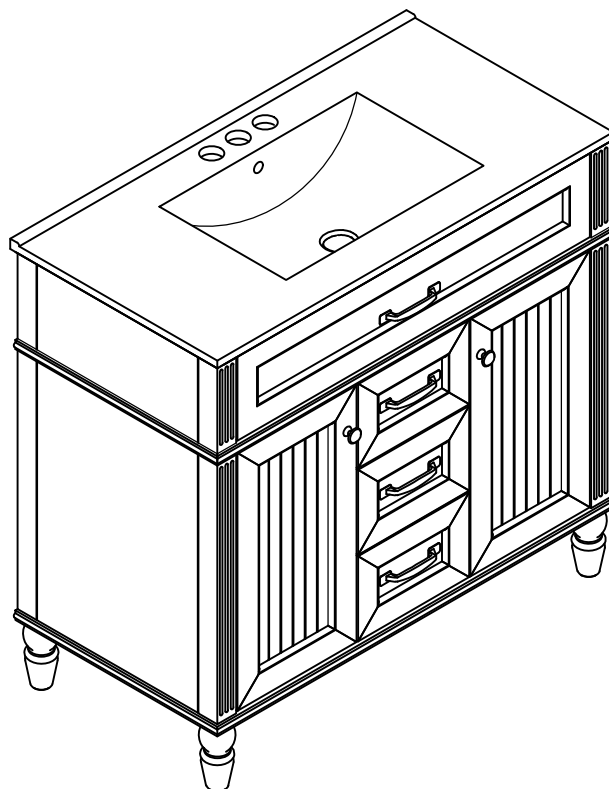


HINGE ADJUSTMENTS

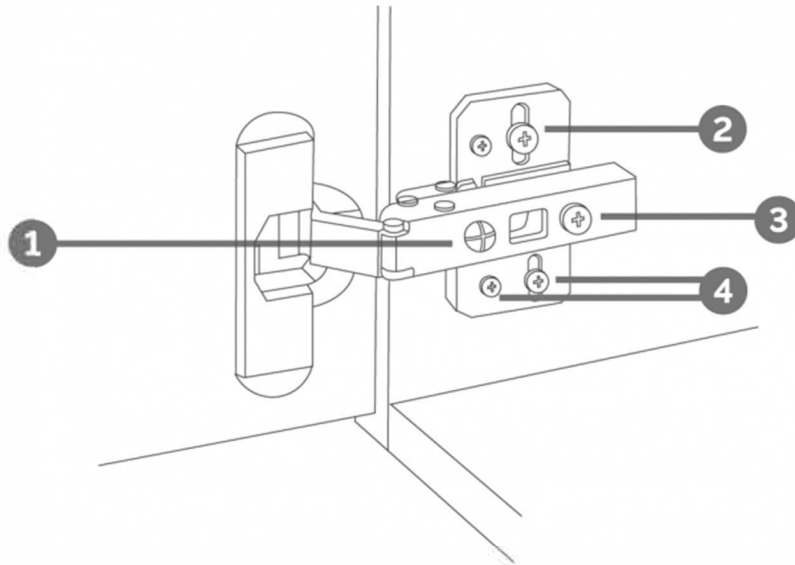


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

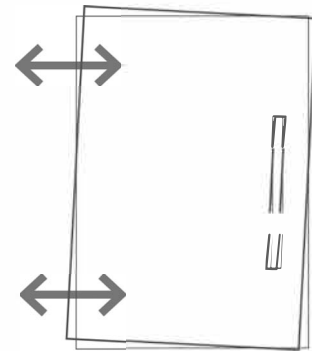

② ④ Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

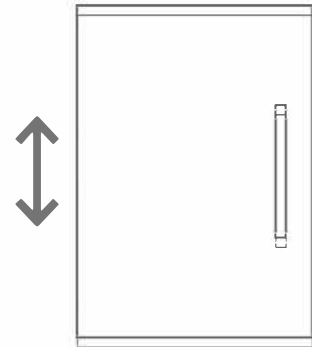

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

