


# Assembly Instructions

## SPACE SAVER

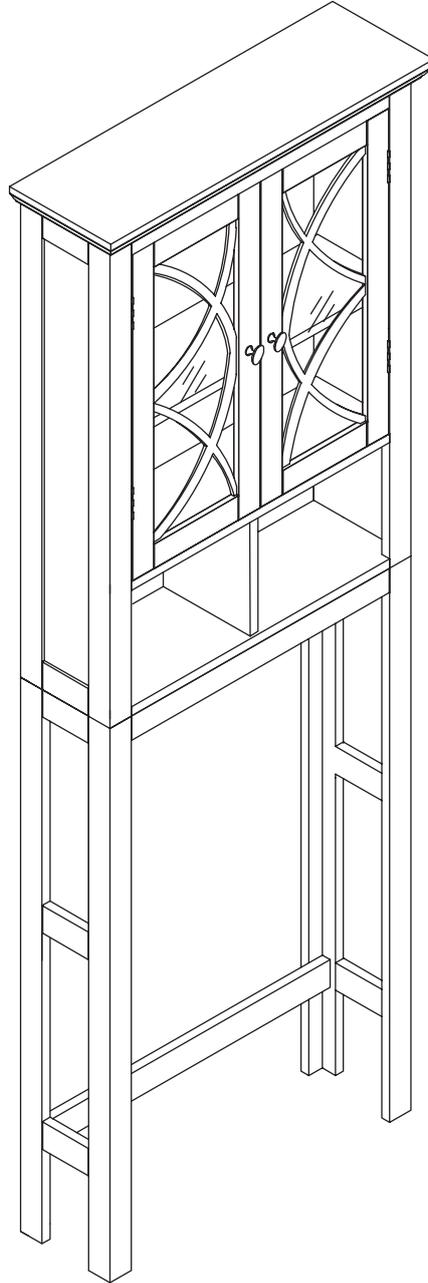


Carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface.












Get social with us and discover more about our products, tips and exclusive discounts!





Visit our YouTube channel for product assembly demonstrations

# Parts List

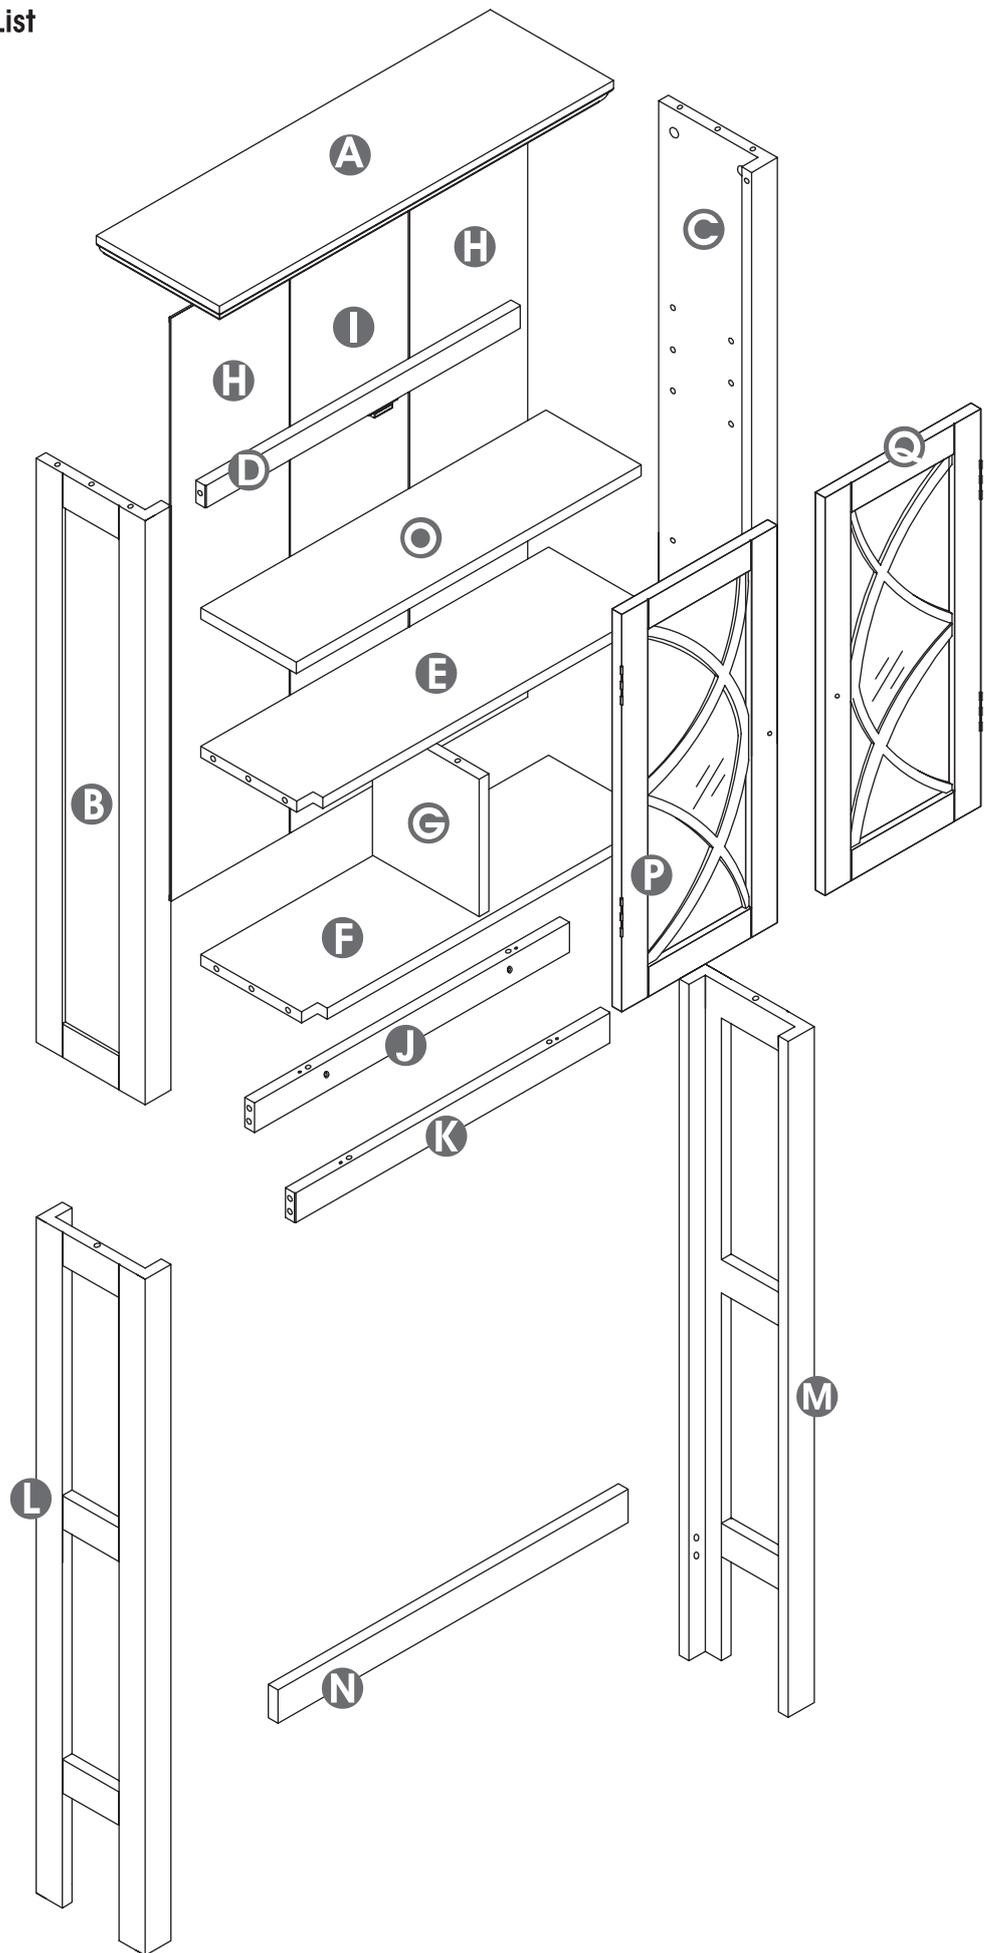

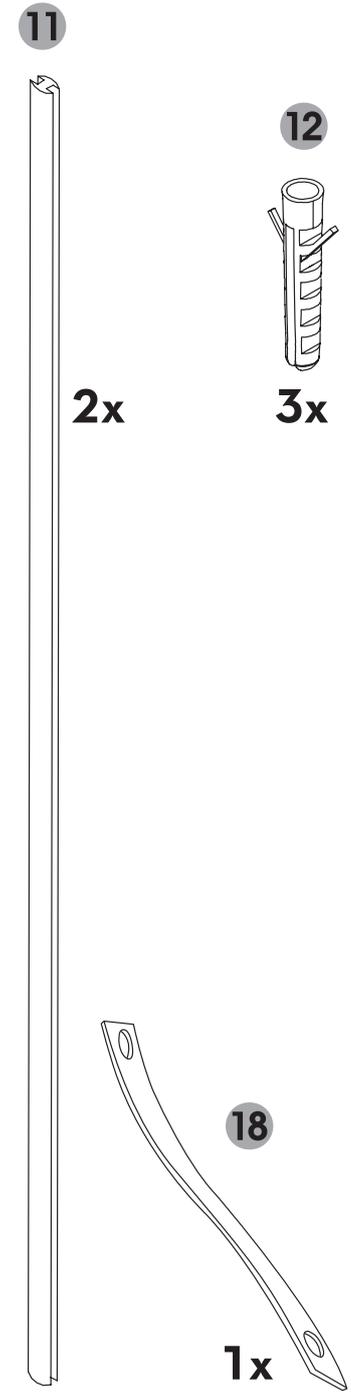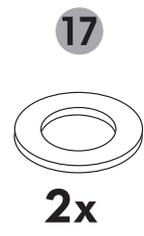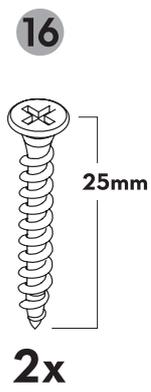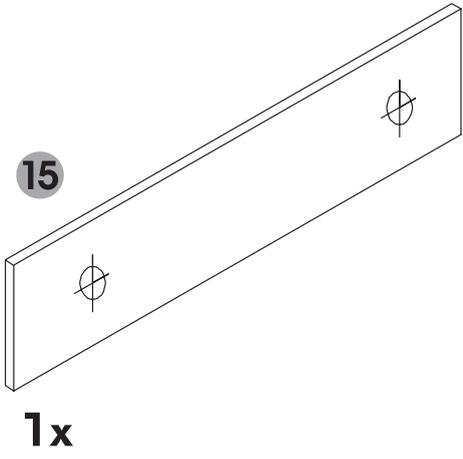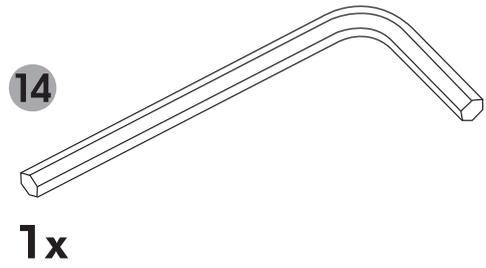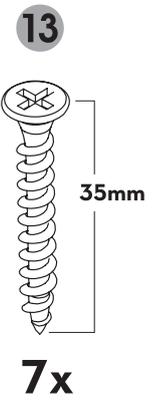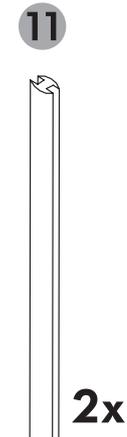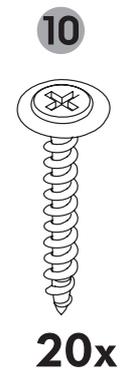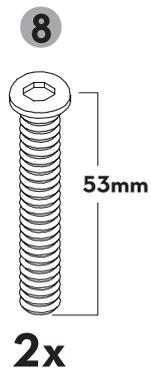



in **Step 1** you need **B C D E F G**

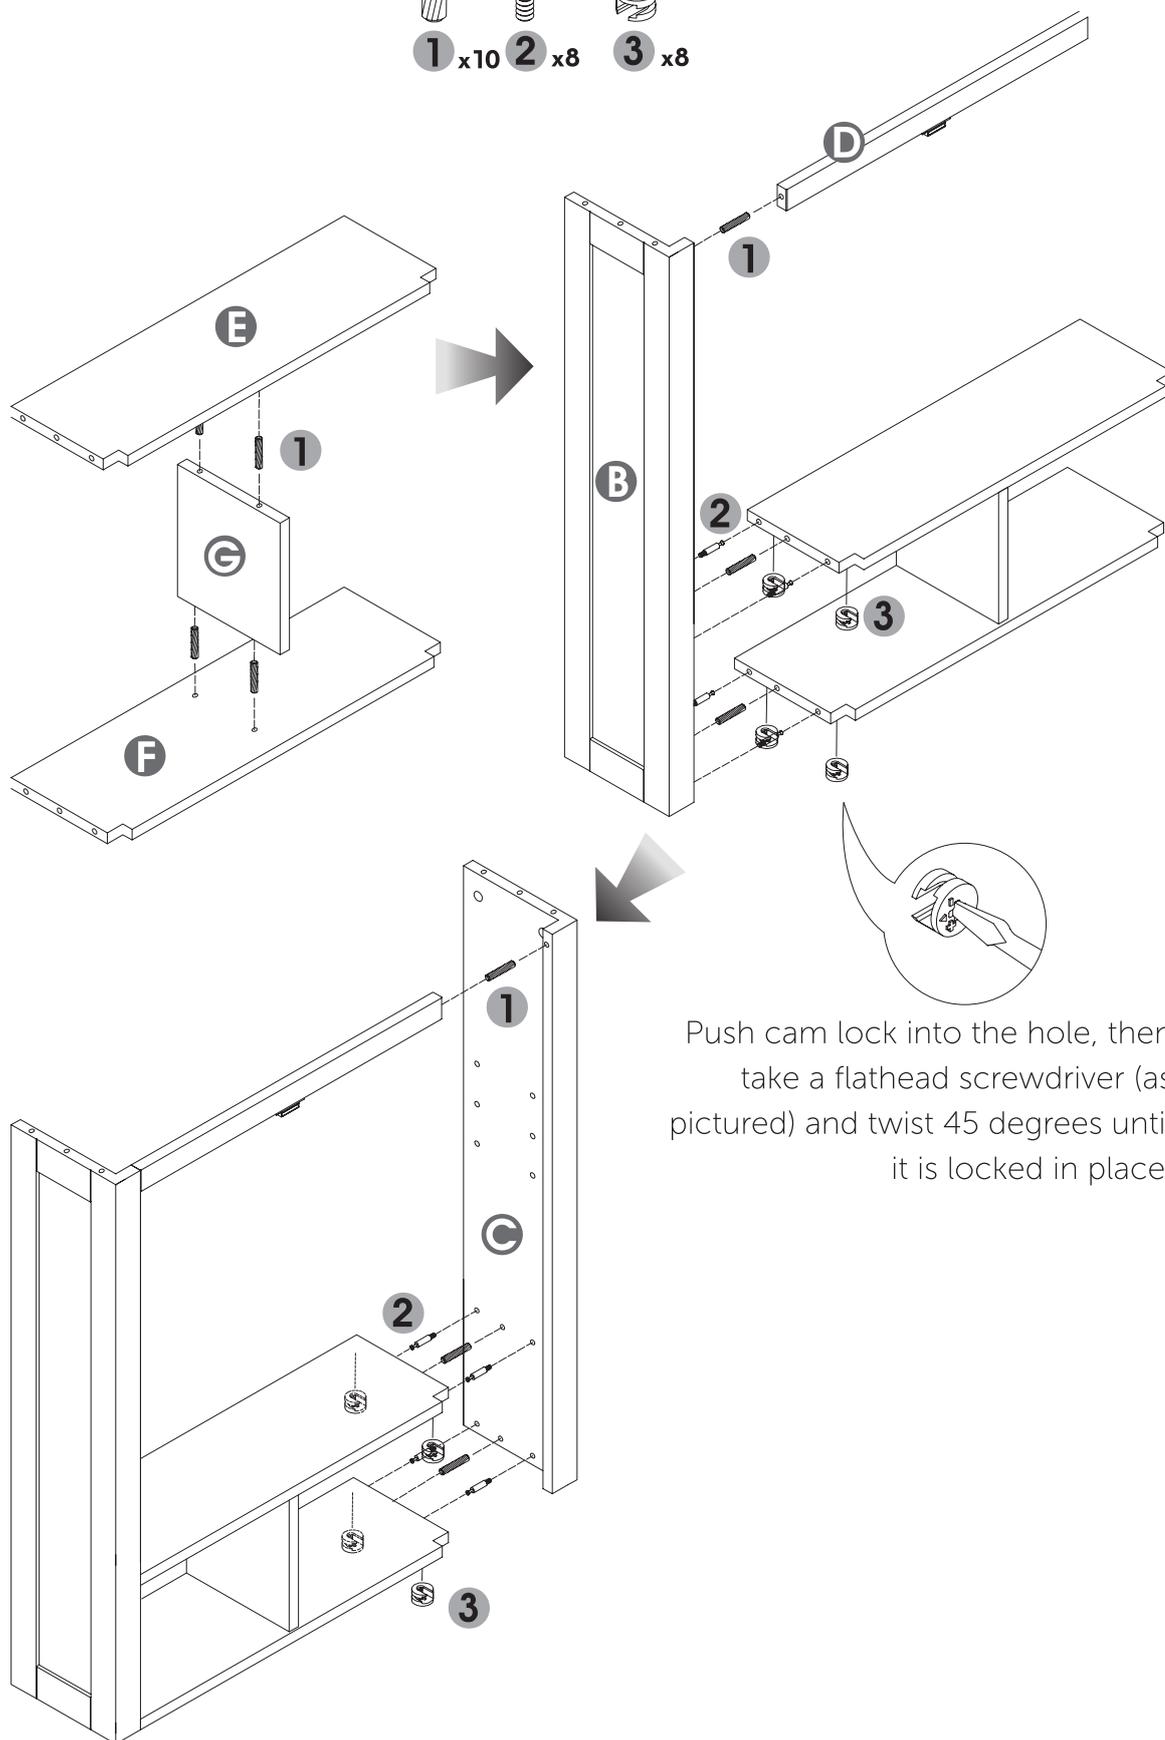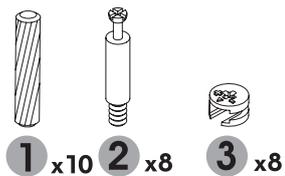


Push cam lock into the hole, then take a flathead screwdriver (as pictured) and twist 45 degrees until it is locked in place.

in **Step 2** you need


**A**

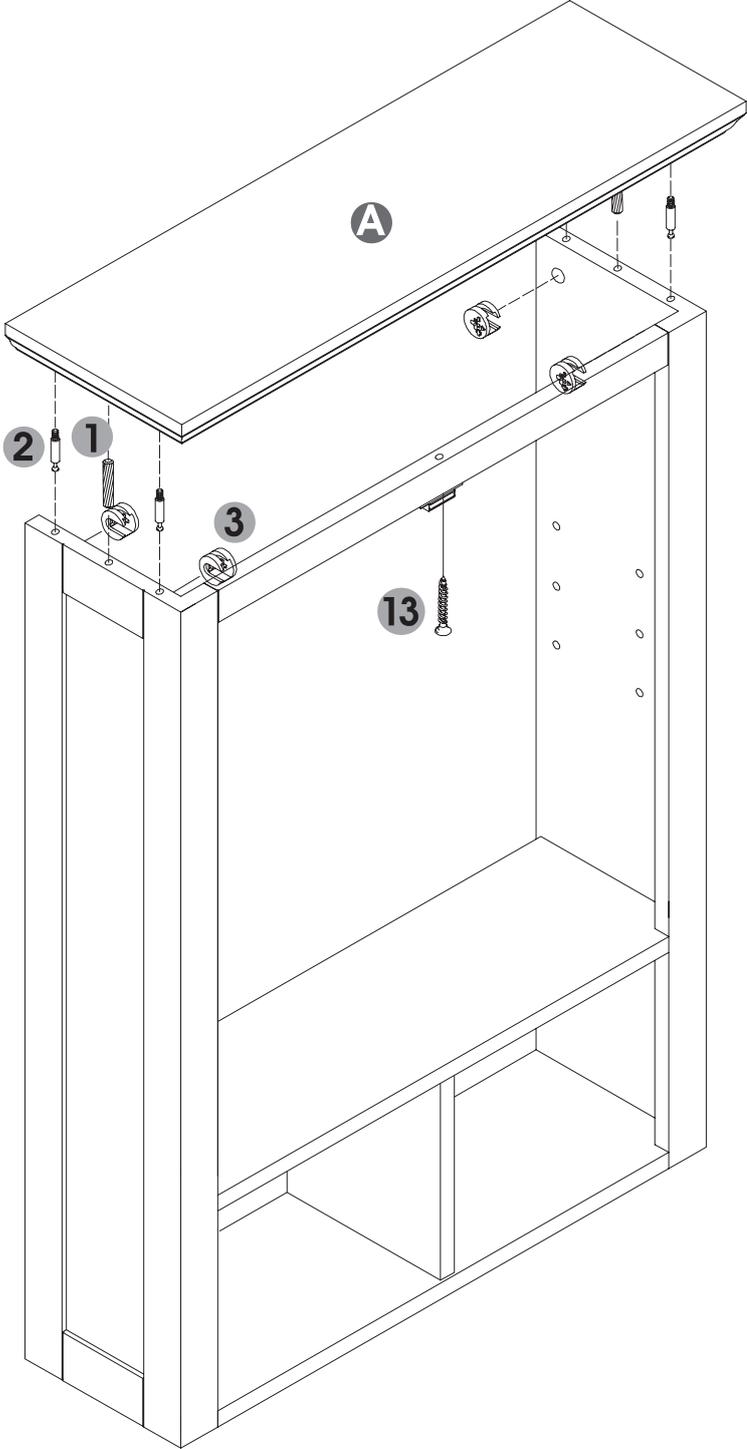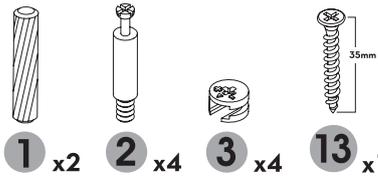

in **Step 3** you need **I** **H**

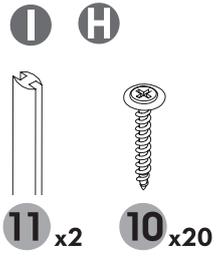

back connector slide

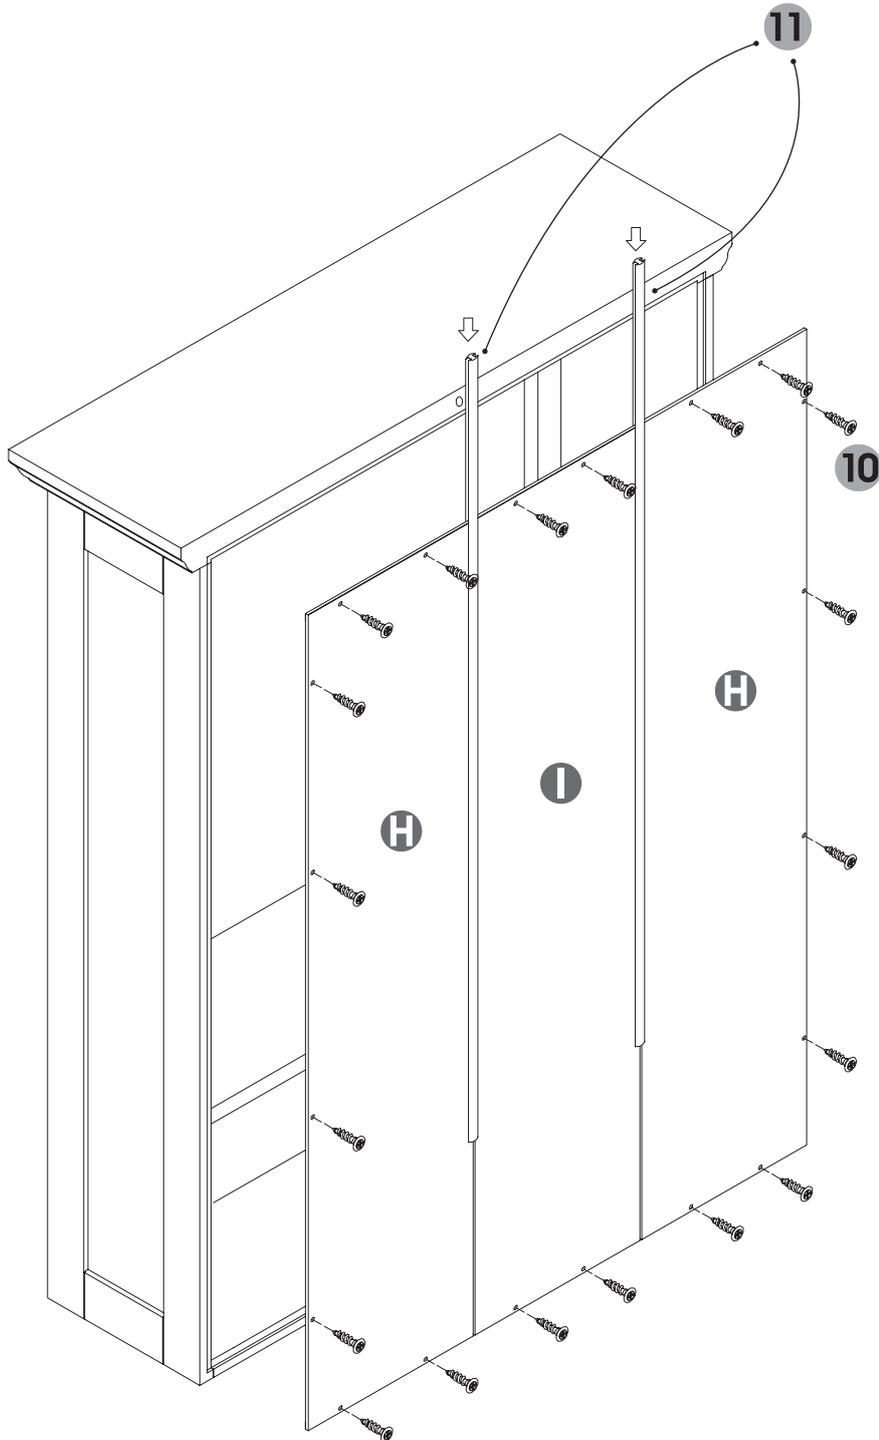

in **Step 4** you need

**L M J K**



**1** x4




**2** x4




**3** x4


Note the **L** bar (the bar with two holes) is backfacing.

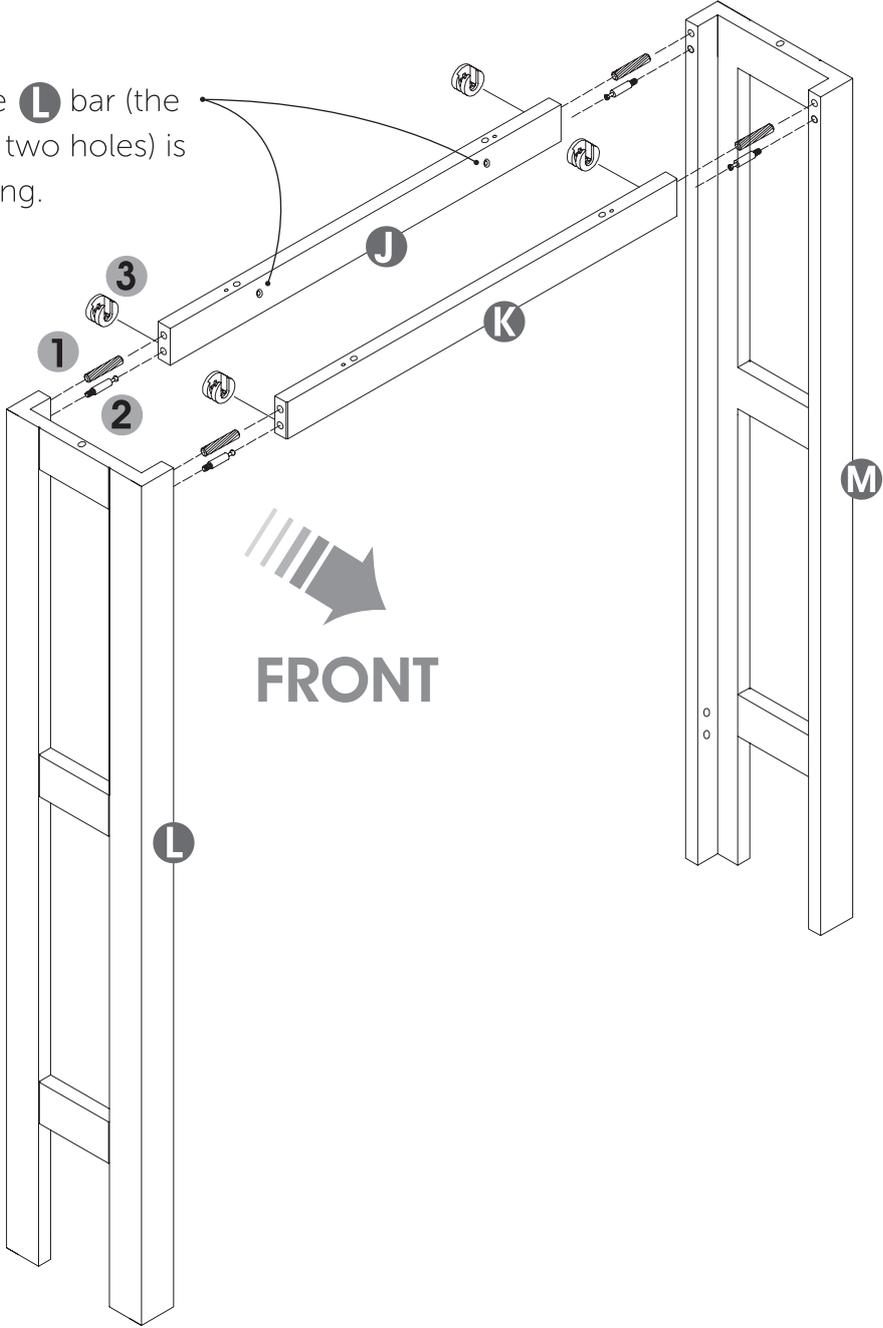


in **Step 5** you need **N**





**9** x4



**14** x1


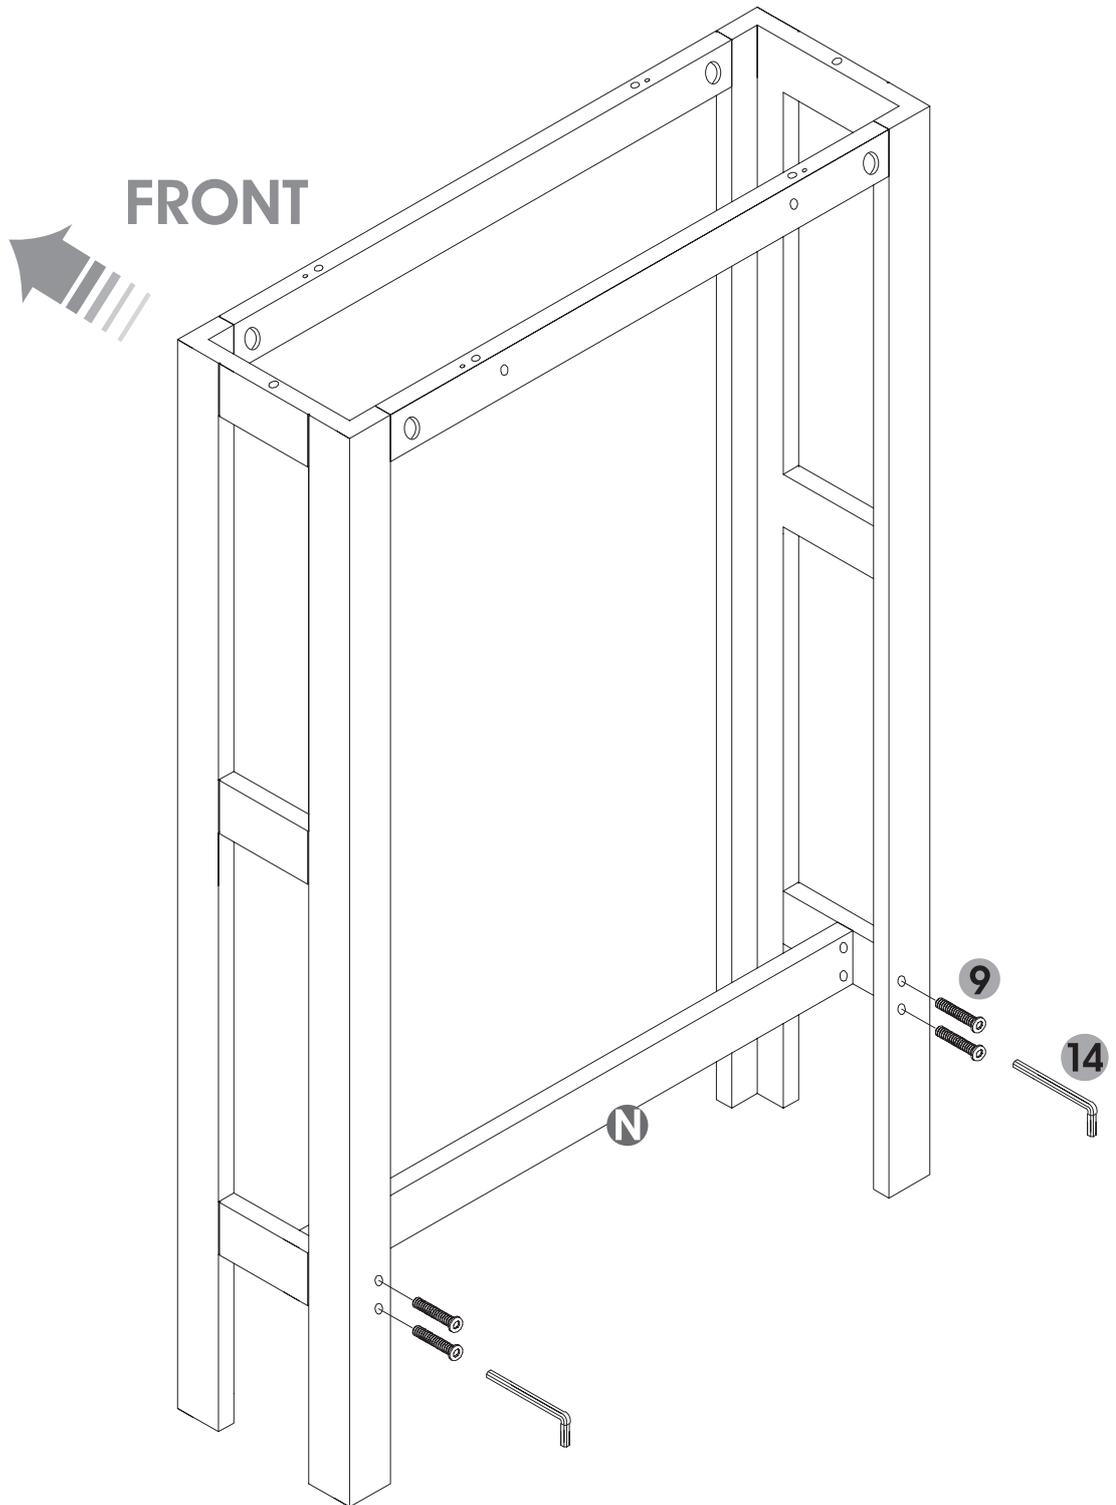


in **Step 6** you need

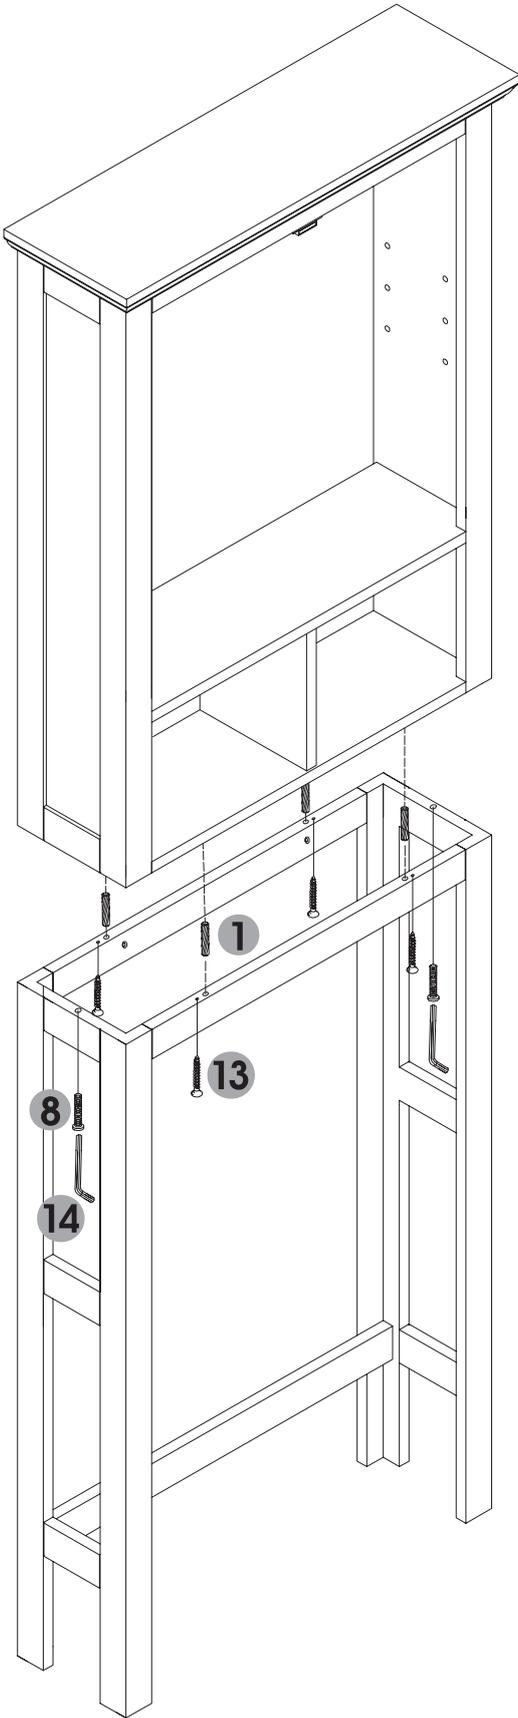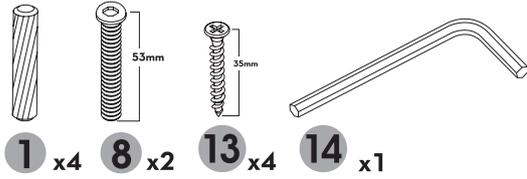

in **Step 7** you need


**P** **Q**

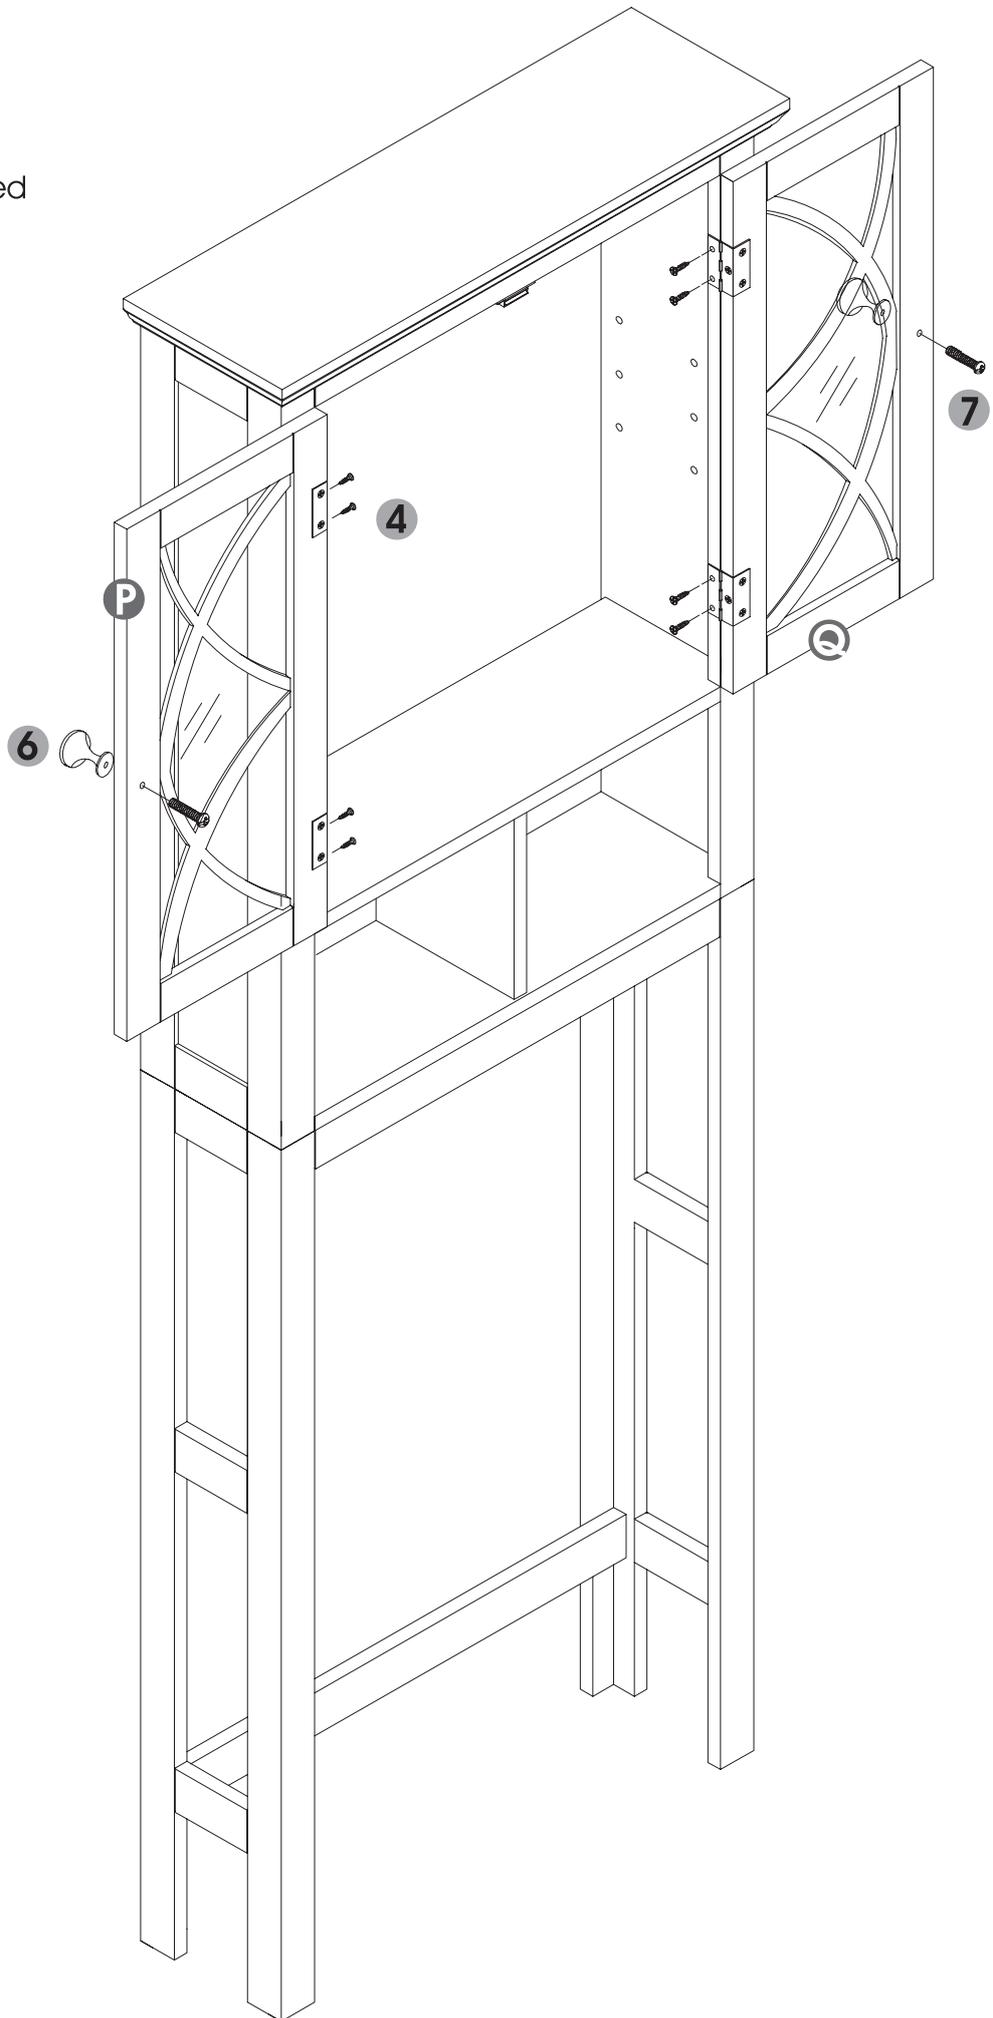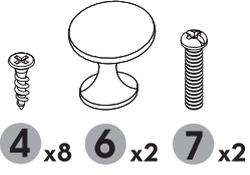



in **Step 8** you need



**5** x4


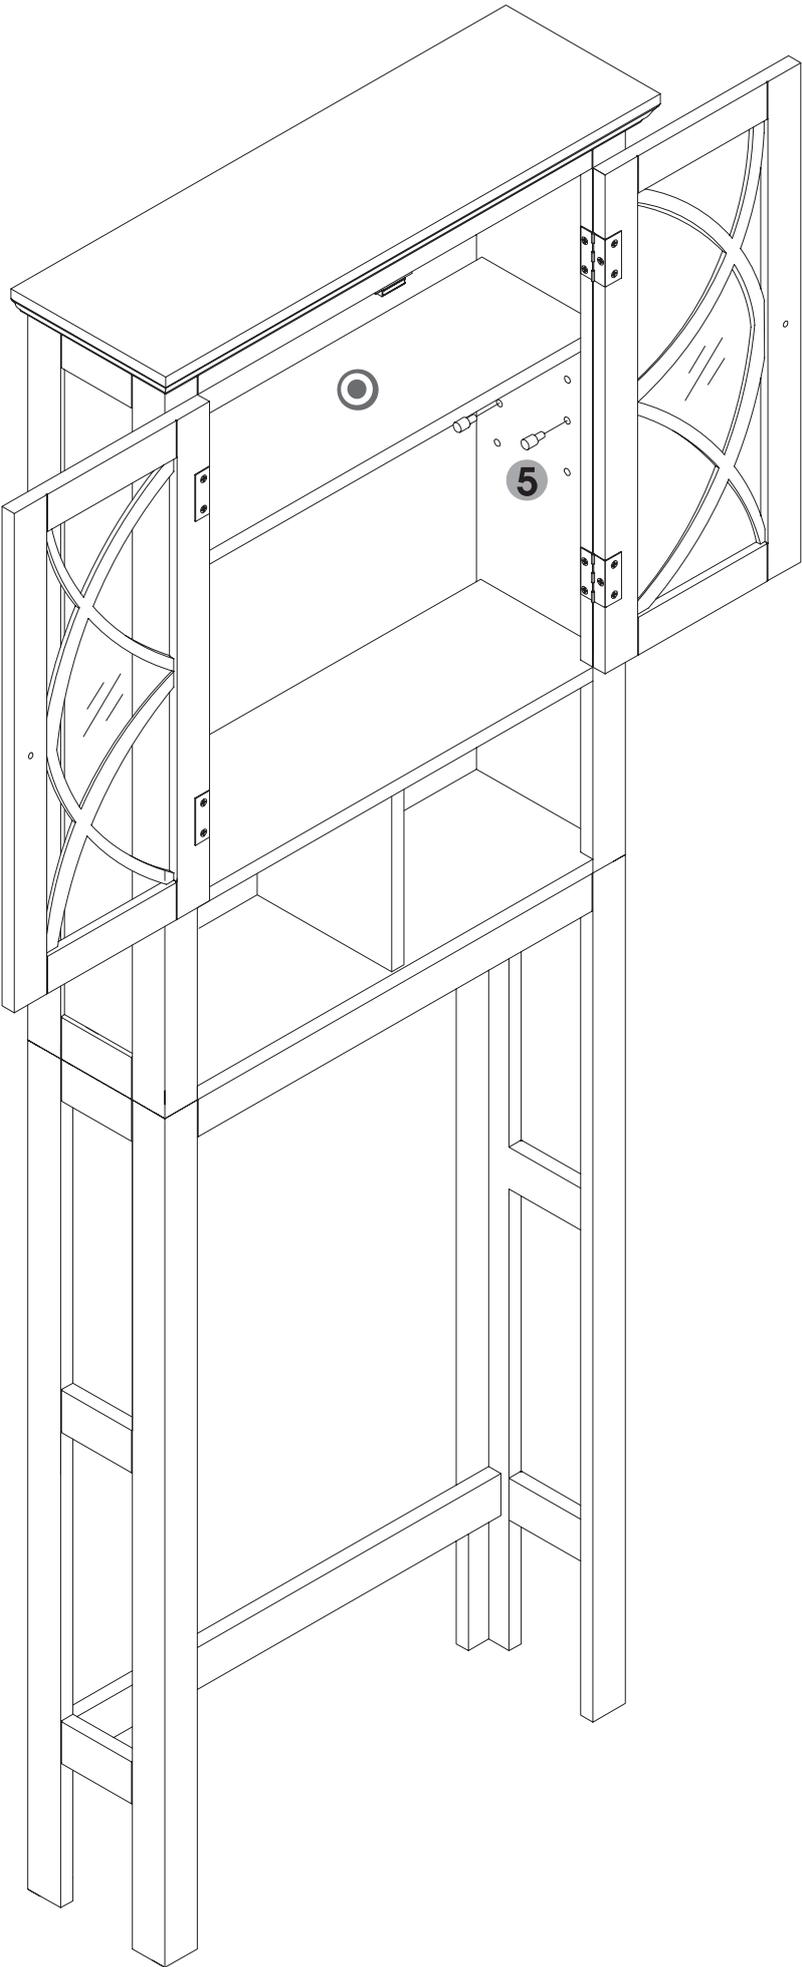


in **Step 9** you need

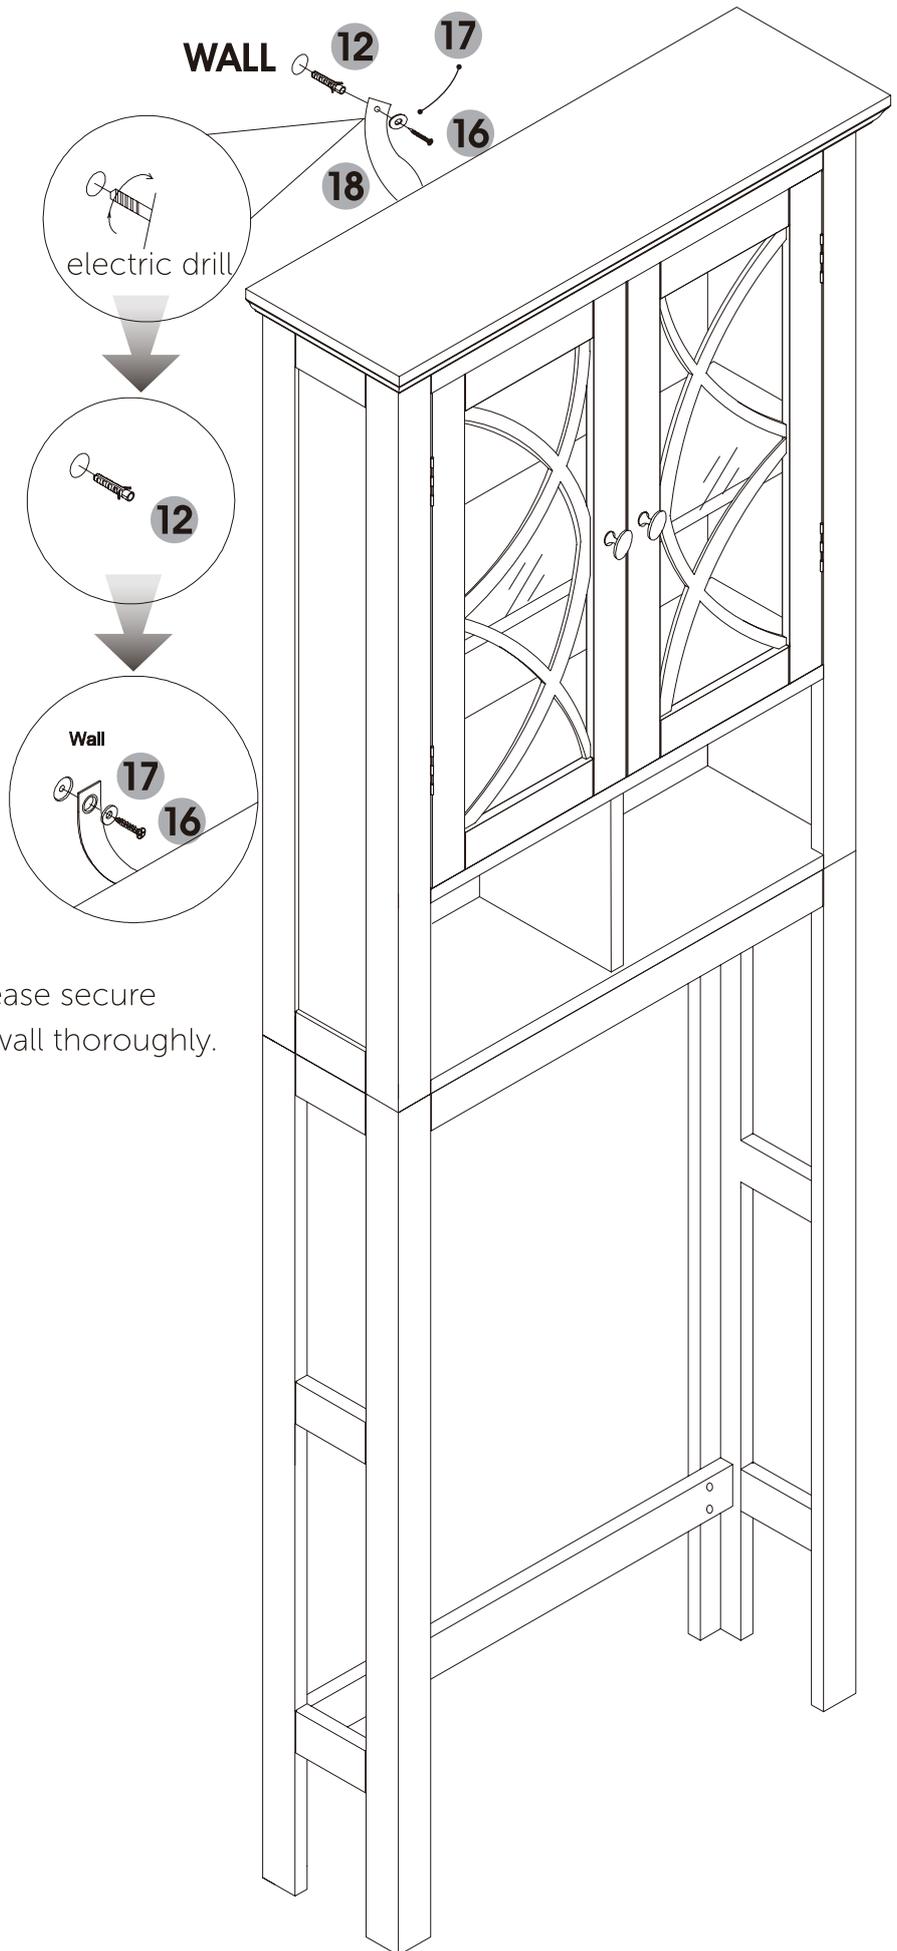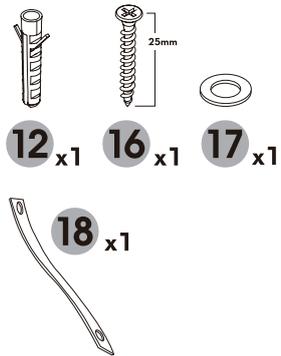

For your safety, please secure anchor-strap to a wall thoroughly.


in **Step 10** you need

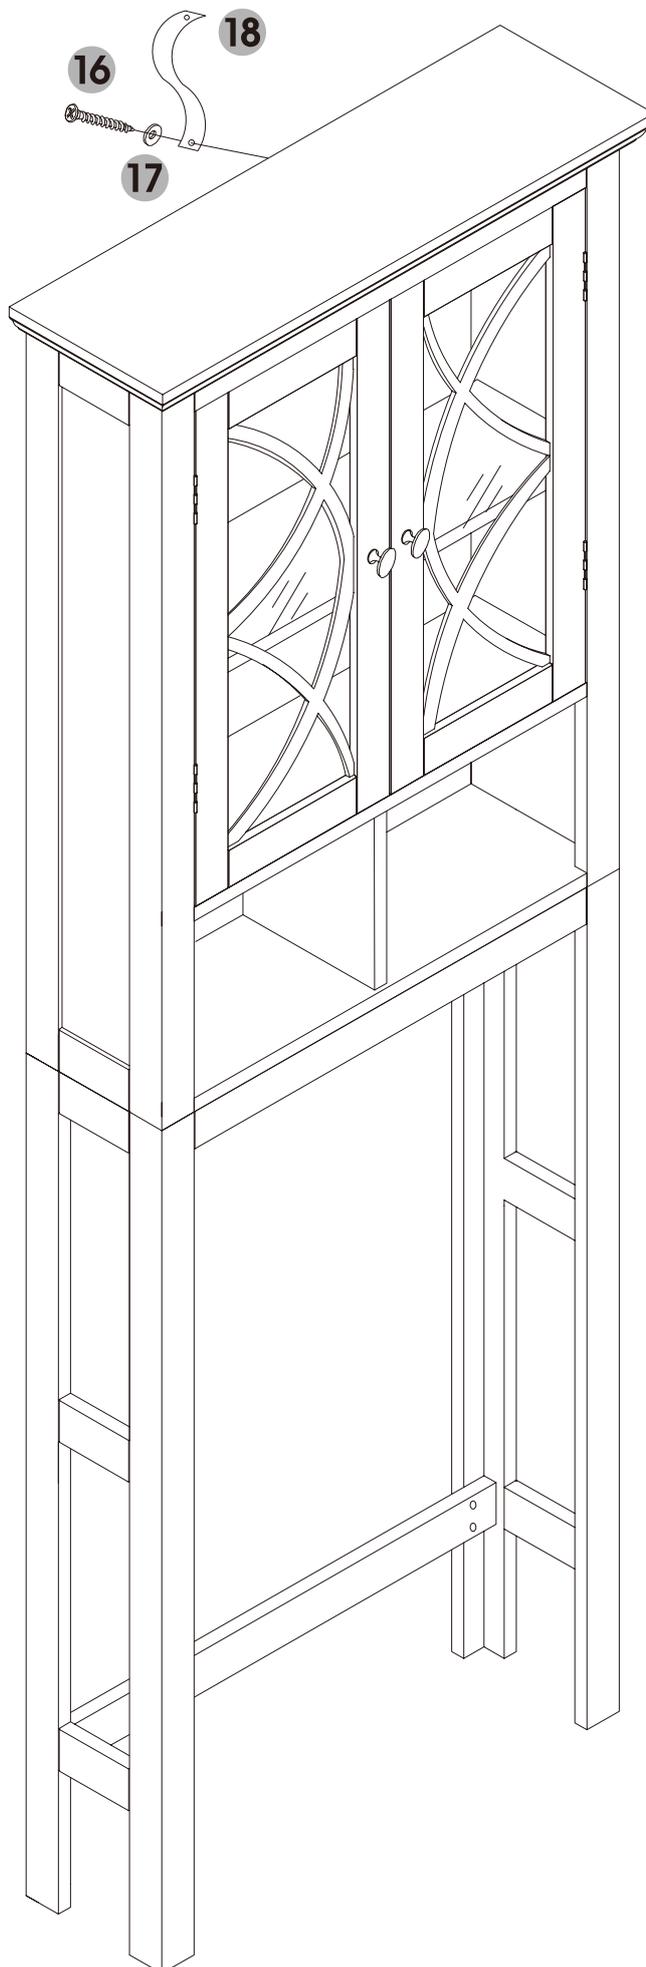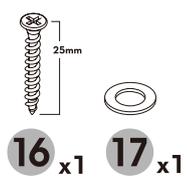


in **Step 11** you need



**12** x2



**13** x2

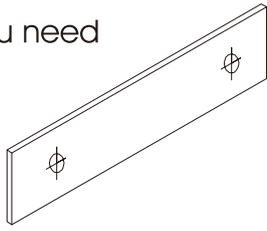

**15** x1

**WALL**

