
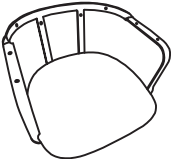
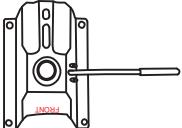






Please check that all fittings are available and in good condition before assembly.
If you have any questions, please contact us , we will solve your problem in the first time.


PARTS LIST

A*1 	B*1 
C*2 	D*1 
E*1 	F*1 
G*5 	H*8  M6*20mm
J*4  M6*16mm	K*1  5#


ASSEMBLE INSTRUCTION

①

Please do not remove
this foot cover.

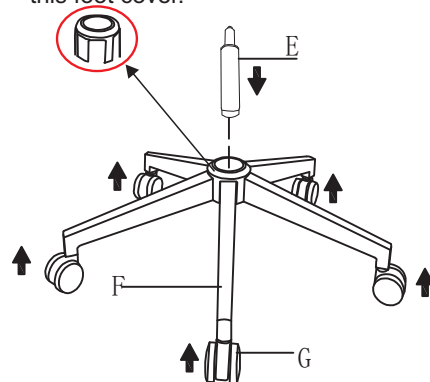


②

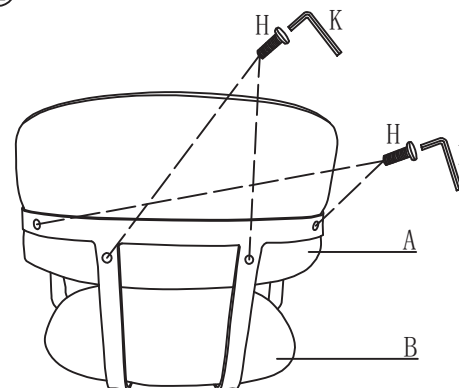


First, fasten the two middle screws
to 70% ,
then install the two side screws, and
finally fully tighten all.

③

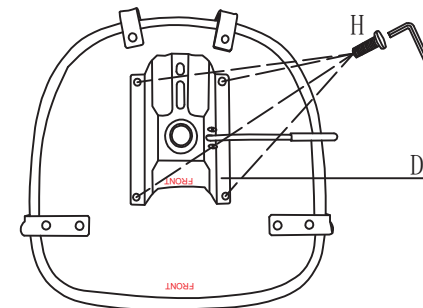


④

The armrest panel
is flushing
with the inner
panel.

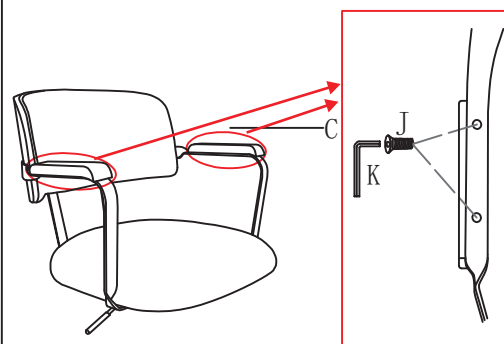

⑤

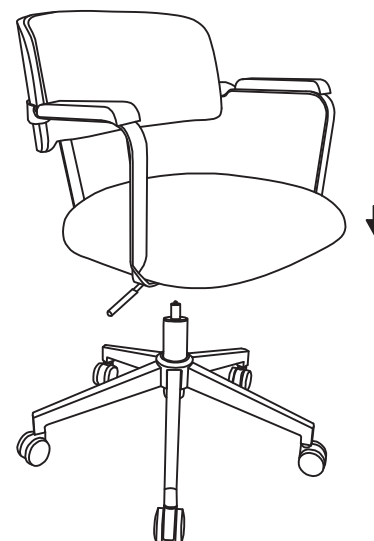

⑥

