

ASSEMBLY INSTRUCTIONS



BAR CABINET

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 90 MINUTES

PARTS IDENTIFICATION

A


TOP PANEL WITH LIGHT

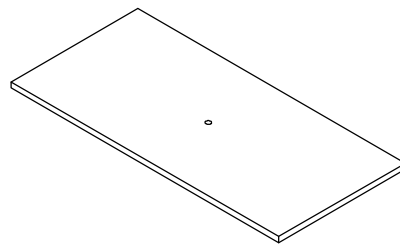

1PC

B


TOP SHELF

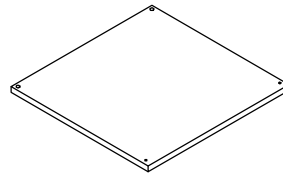

2PCS

C


BOTTOM SHELF

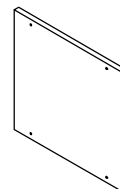

1PC

D


MIDDLE PANEL

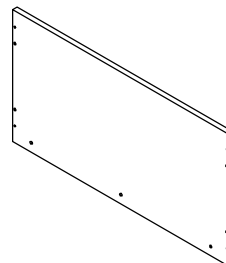

1PC

E

LEFT PANEL

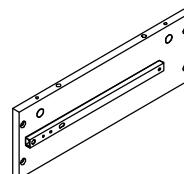


1PC

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

F


RIGHT PANEL

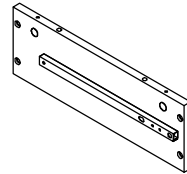

1PC

G


BACK PANEL

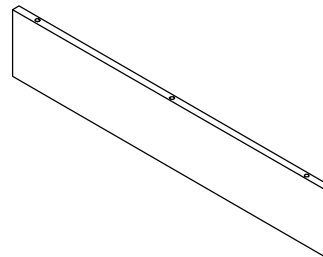

1PC

H


BOTTOM PANEL

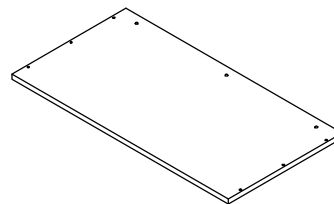

1PC

I


DRAWER FRONT PANEL

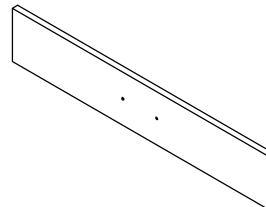

1PC

J


DRAWER LEFT PANEL

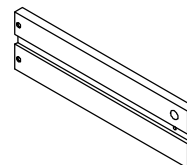

1PC

K

DRAWER RIGHT PANEL

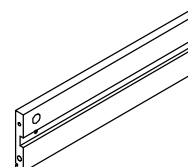


1PC

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

L


DRAWER BACK PANEL

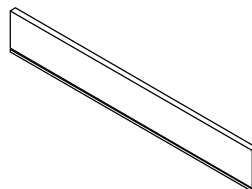

1PC

M


DRAWER BOTTOM PANEL

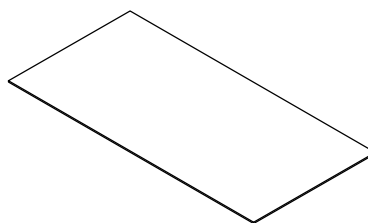

1PC

N


DRAWER SUPPORT PANEL

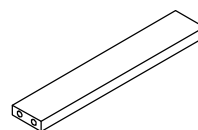

1PC

O


LEFT FRAME

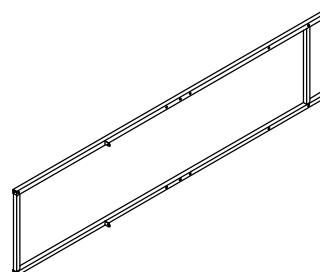

1PC

P


RIGHT FRAME

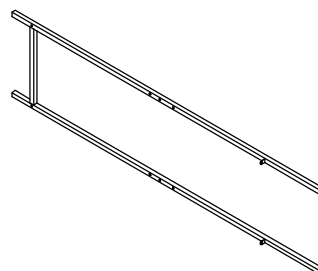

1PC

Q

TOP FRONT CROSSBAR

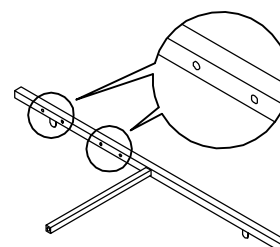


1PC

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

R


TOP BACK CROSSBAR

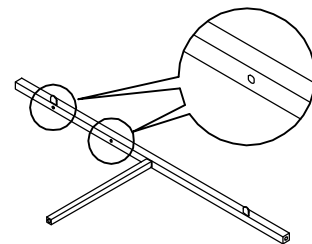

1PC

S


SHORT CROSSBAR



2PCS

T


MIDDLE CROSSBAR

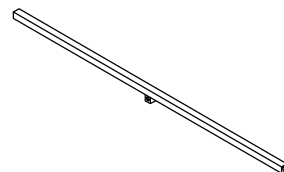

2PCS

U


SUPPORT CROSSBAR

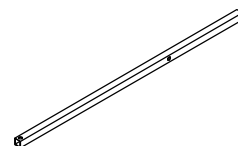

2PCS

V


METAL RACK

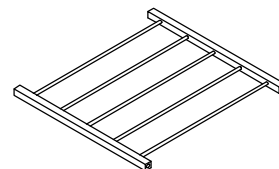

1PC

A1

BOTTOM FRAME

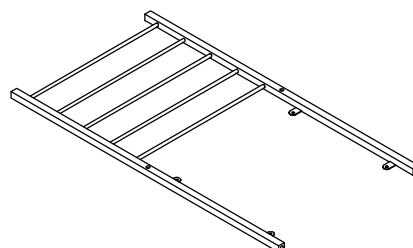


1PC

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

A2


HANDLE



1PC

A3


GLASS HOLDER

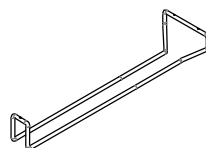

2PCS

A4


LIGHT

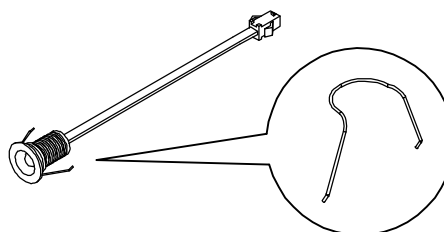

1PC

A5

POWER CORD

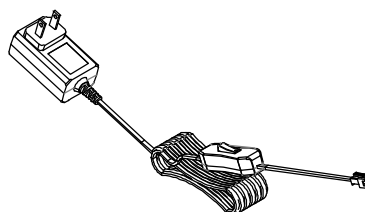

1PC

A6


POWER CORD CLAMP



3PCS

A7

POWER CORD FASTENER





















2PCS

ASSEMBLY INSTRUCTIONS


Z

HARDWARE IDENTIFICATION


1	CAM BOLT (38mm)		6PCS	10	LONG BOLT (1/4" x 38mm SR)		20PCS
2	CAM LOCK (Ø15mm)		6PCS	11	COVER		16PCS
3	WOOD DOWEL (8 x 30mm)		16PCS	12	BOTTOM CAP (20 x 20mm BLK)		4PCS
4	LONG SCREW (Ø8 x 38mm)		10PCS	13	TOP CAP (20 x 20mm SR)		4PCS
5	SHORT SCREW (3.5 x 12mm SR)		10PCS	14	HANGER BOLT		2PCS
6	SMALL BOLT (5/32" x 12mm SR)		2PCS	15	GLASS HOLDER BOLT (3/16" x 12mm SR)		6PCS
7	HANDLE BOLT (5/32" x 22mm SR)		2PCS	16	GLUE		1PC
8	SHORT BOLT (1/4" x 12mm SR)		2PCS	17	STICKER		4PCS
9	MEDIUM BOLT (1/4" x 25mm SR)		8PCS	18	ALLEN WRENCH (4mm)		1PC

ASSEMBLY INSTRUCTIONS

STEP 1

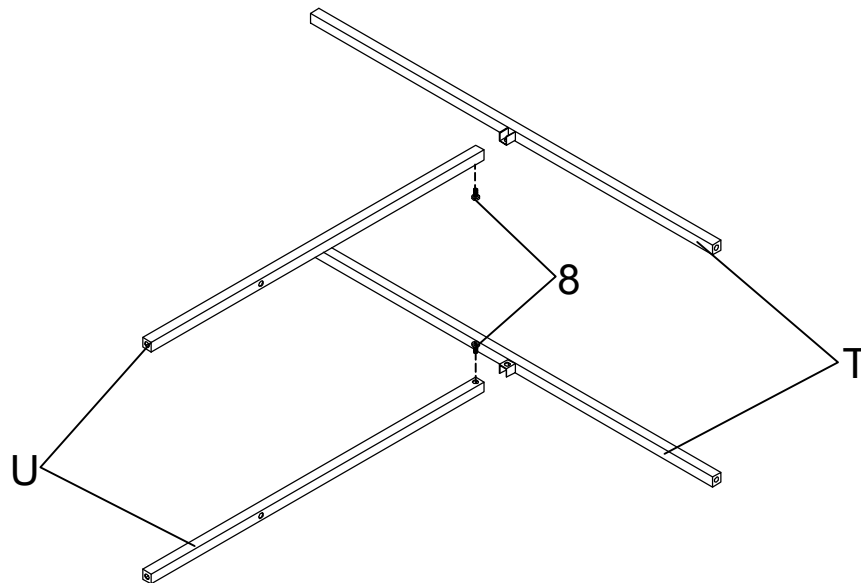


STEP 2

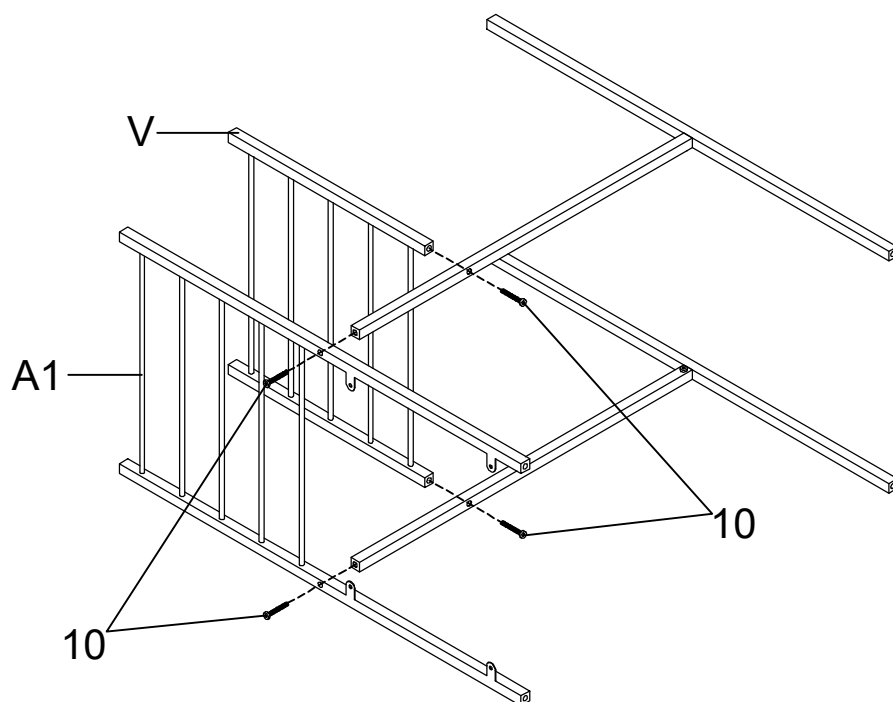


ASSEMBLY INSTRUCTIONS

STEP 3

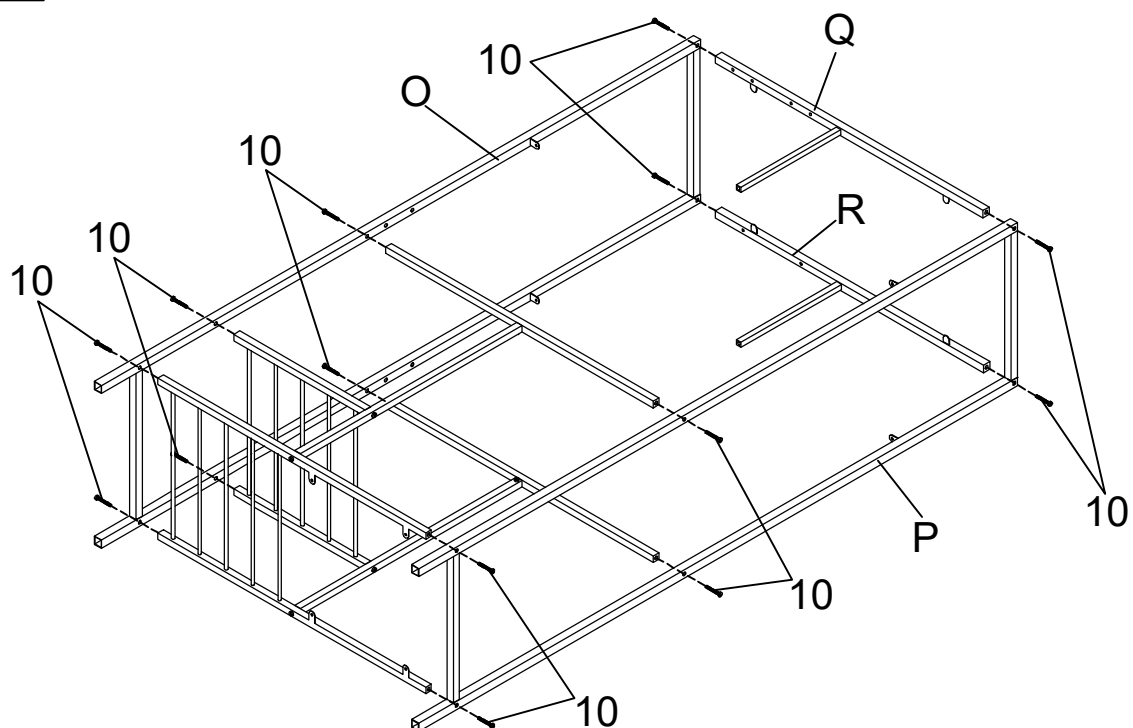


STEP 4

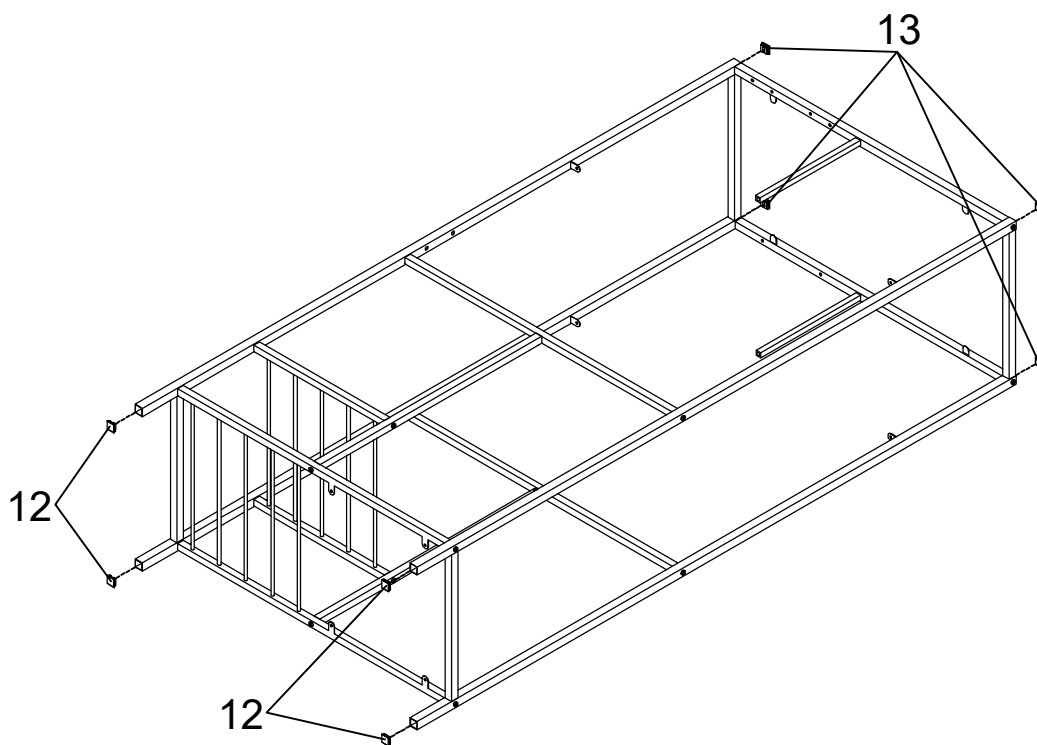


ASSEMBLY INSTRUCTIONS

STEP 5

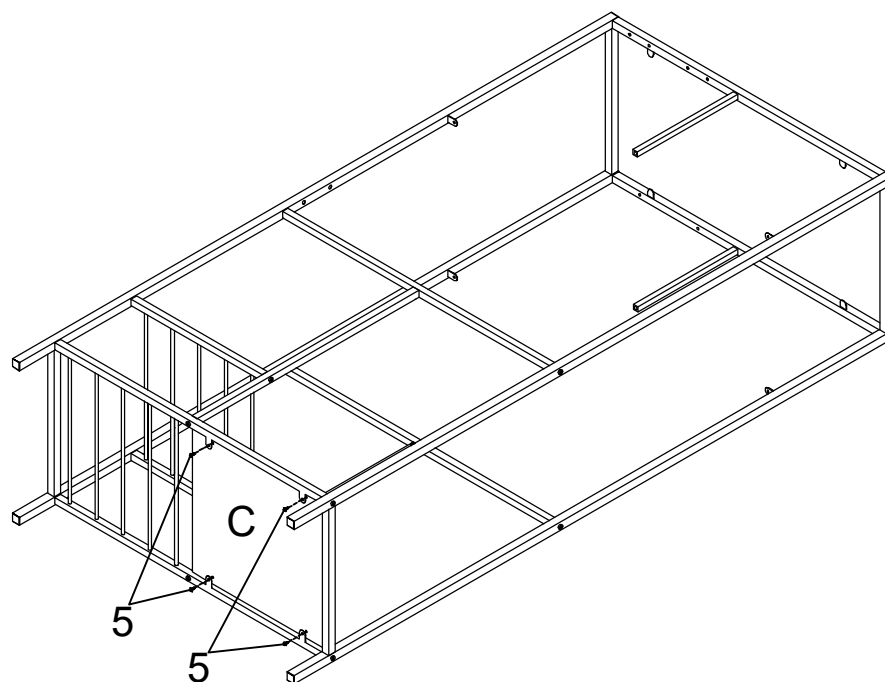


STEP 6

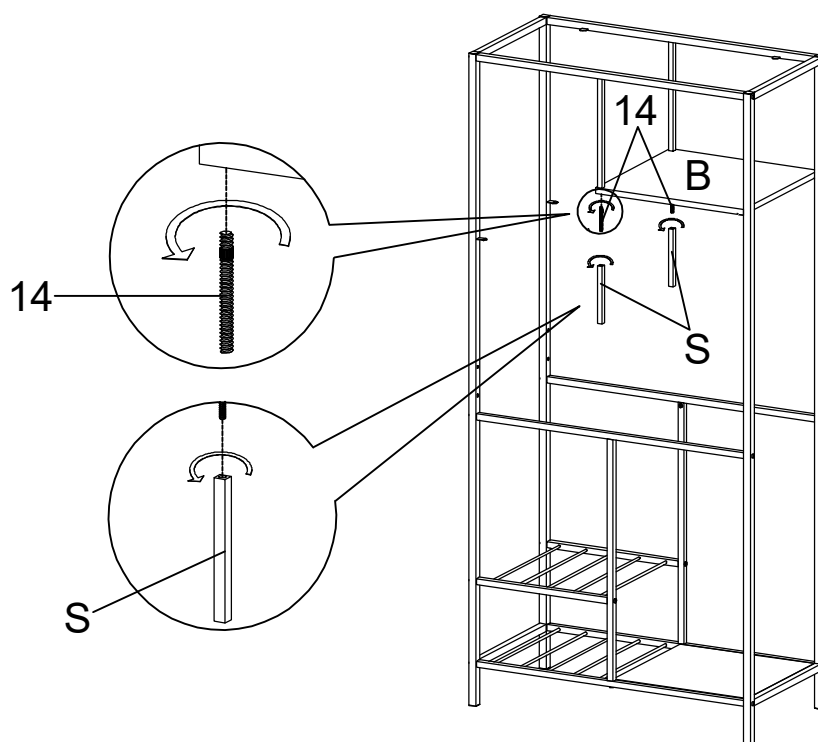


ASSEMBLY INSTRUCTIONS

STEP 7

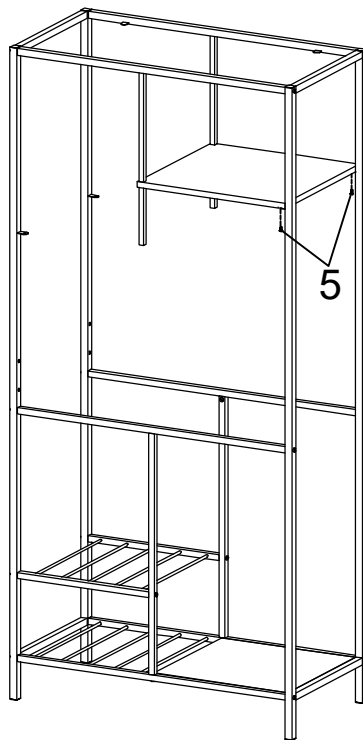


STEP 8


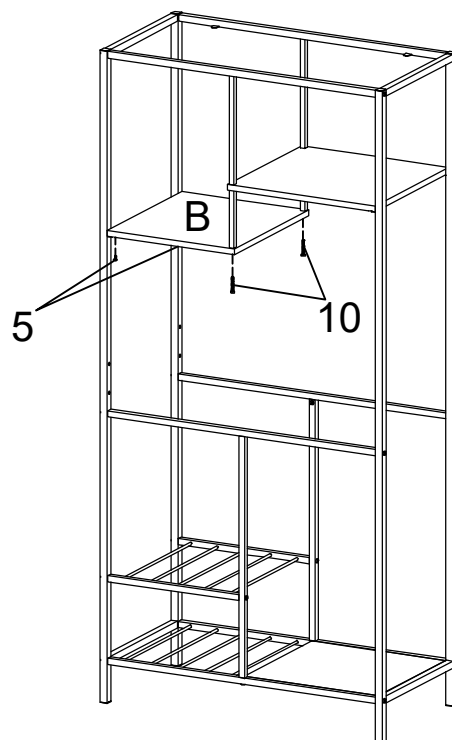


ASSEMBLY INSTRUCTIONS

STEP 9

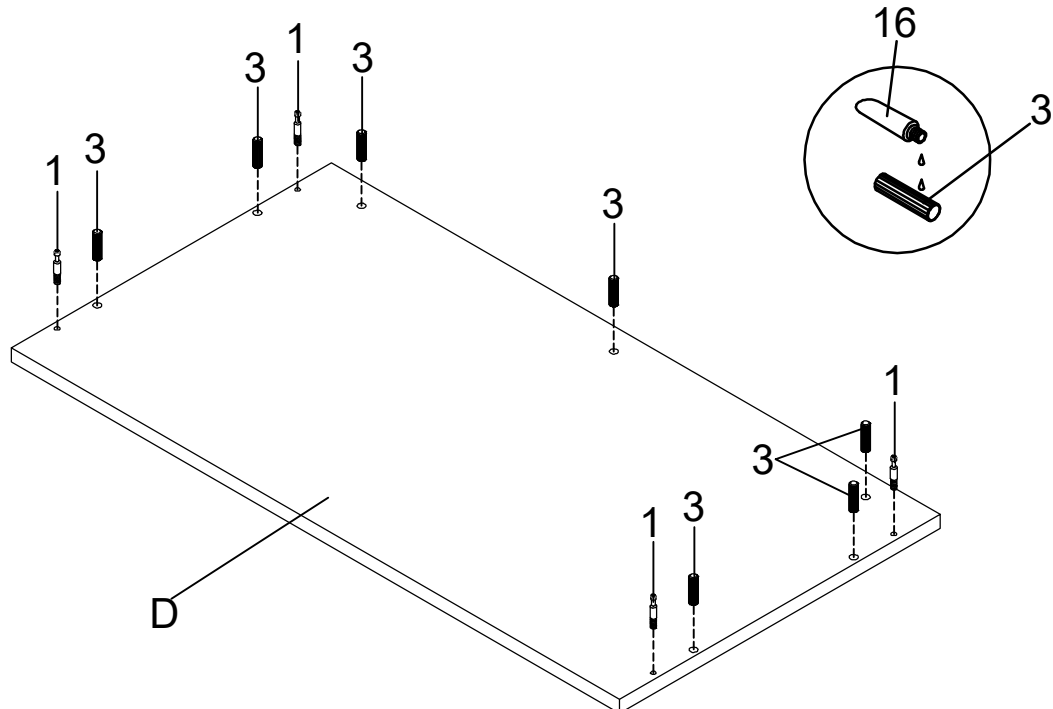


STEP 10

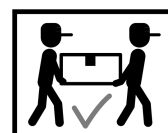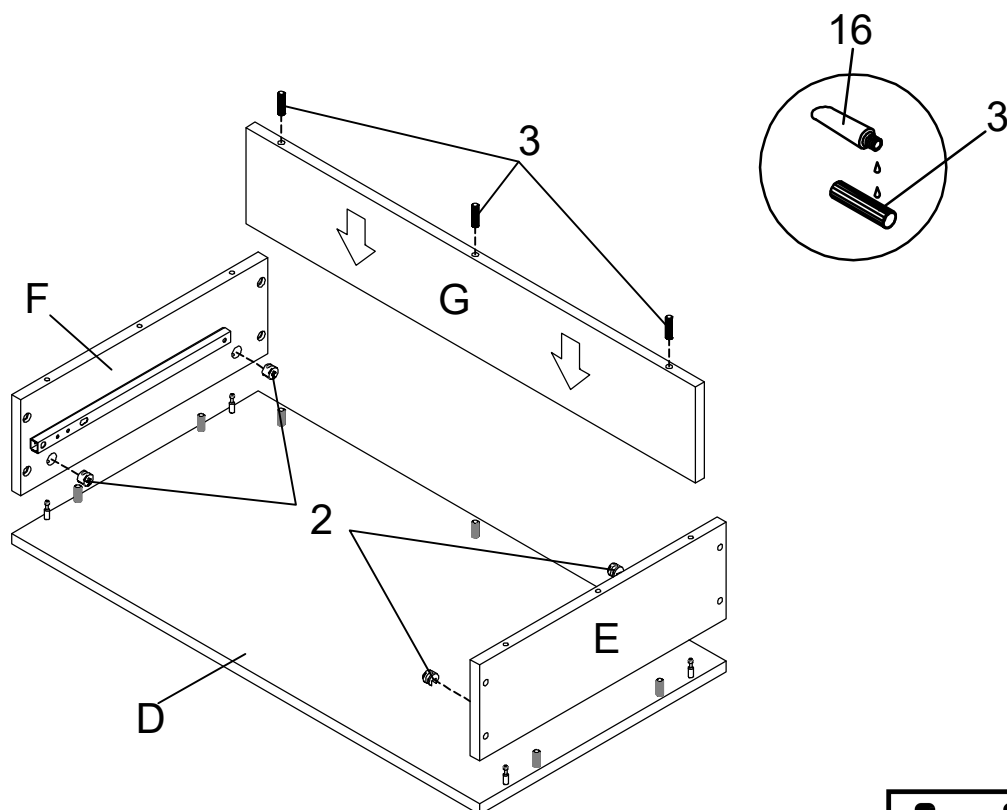


ASSEMBLY INSTRUCTIONS

STEP 11

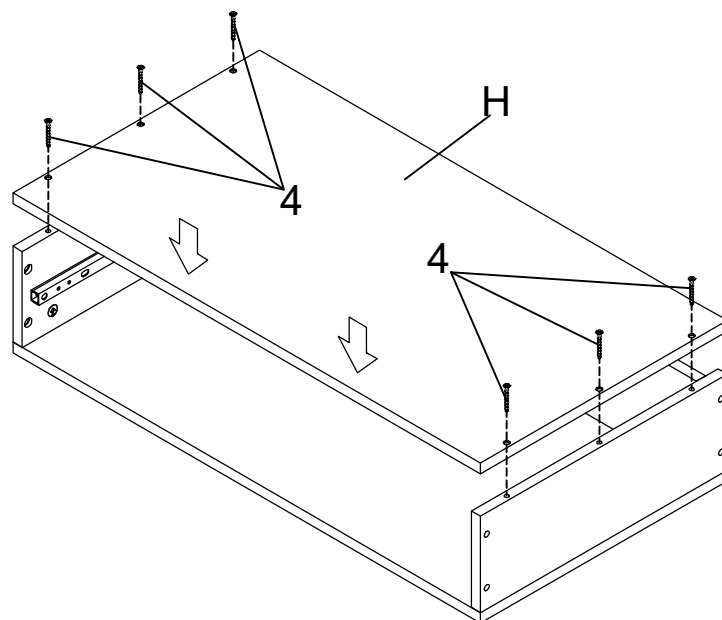


STEP 12

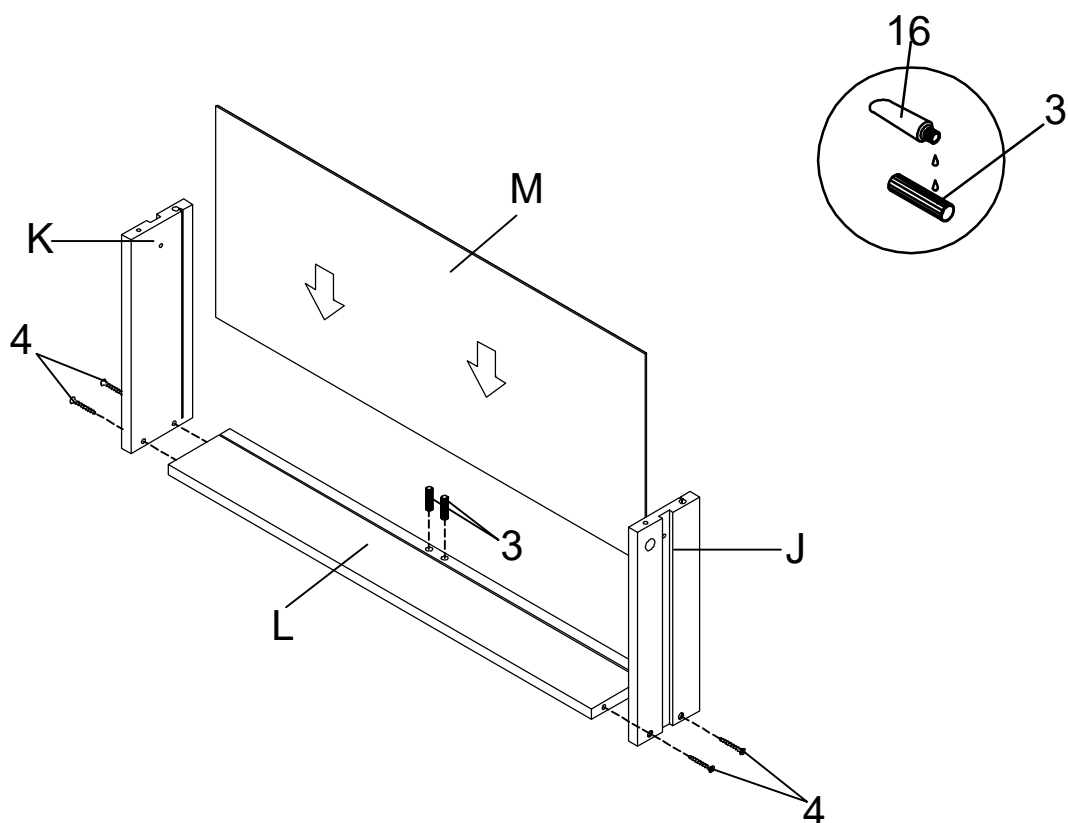


ASSEMBLY INSTRUCTIONS

STEP 13

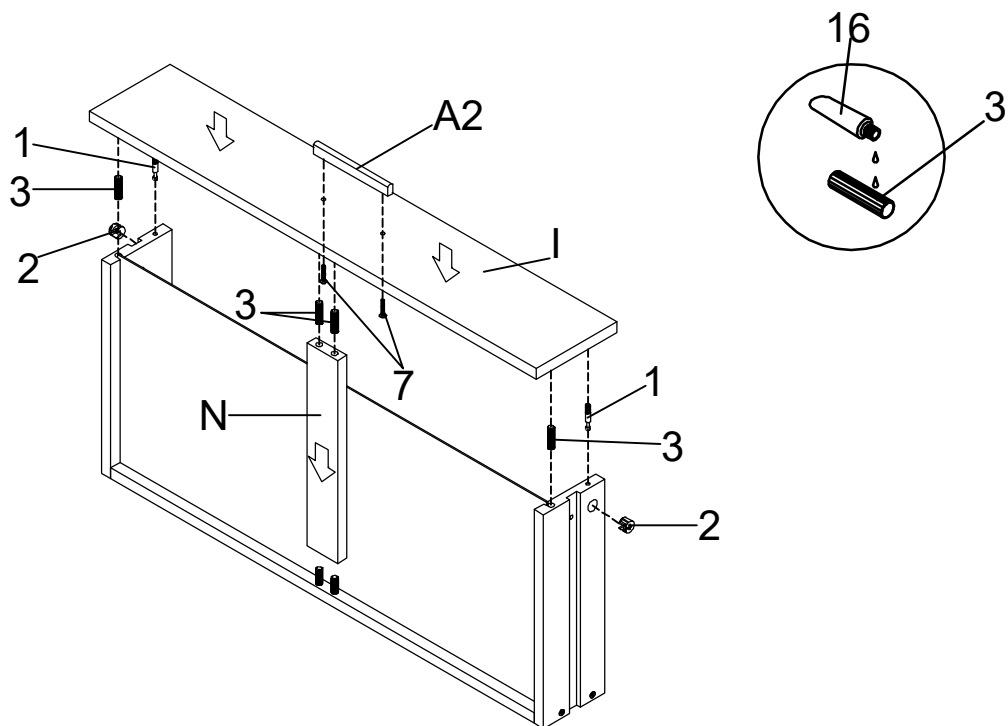


STEP 14

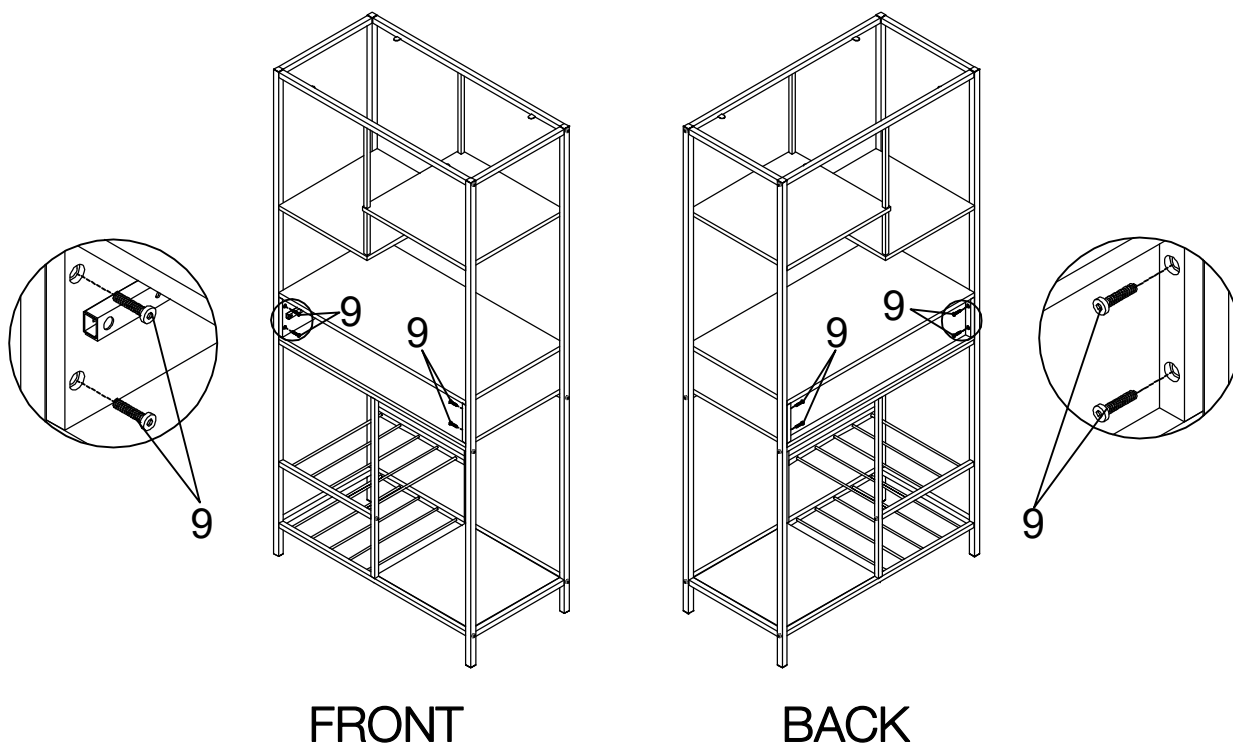


ASSEMBLY INSTRUCTIONS

STEP 15

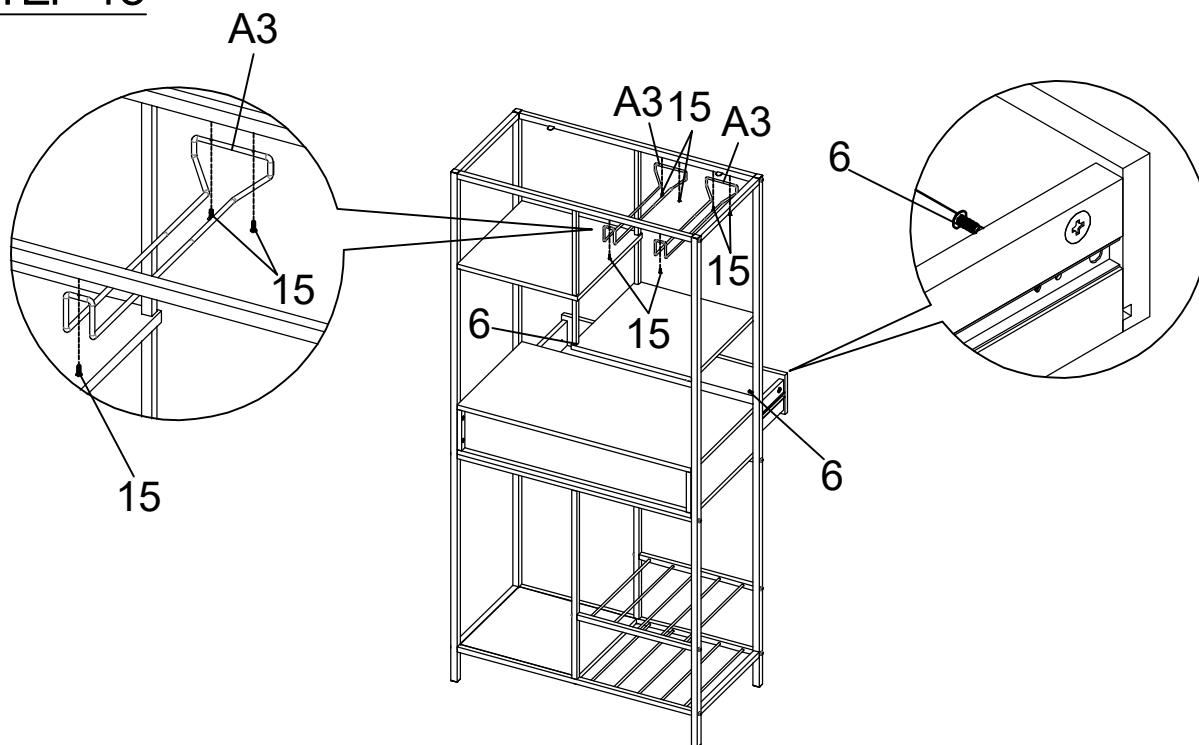


STEP 16

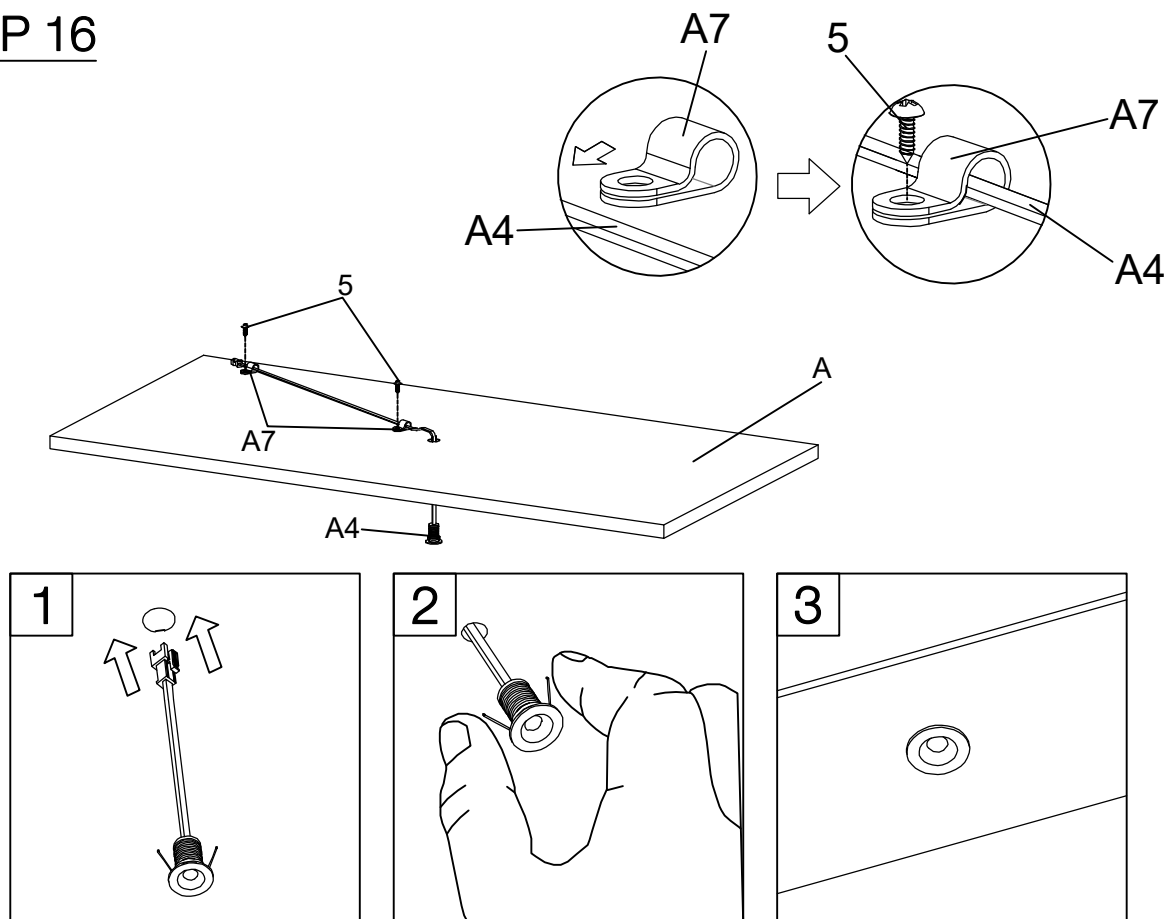


ASSEMBLY INSTRUCTIONS


STEP 17

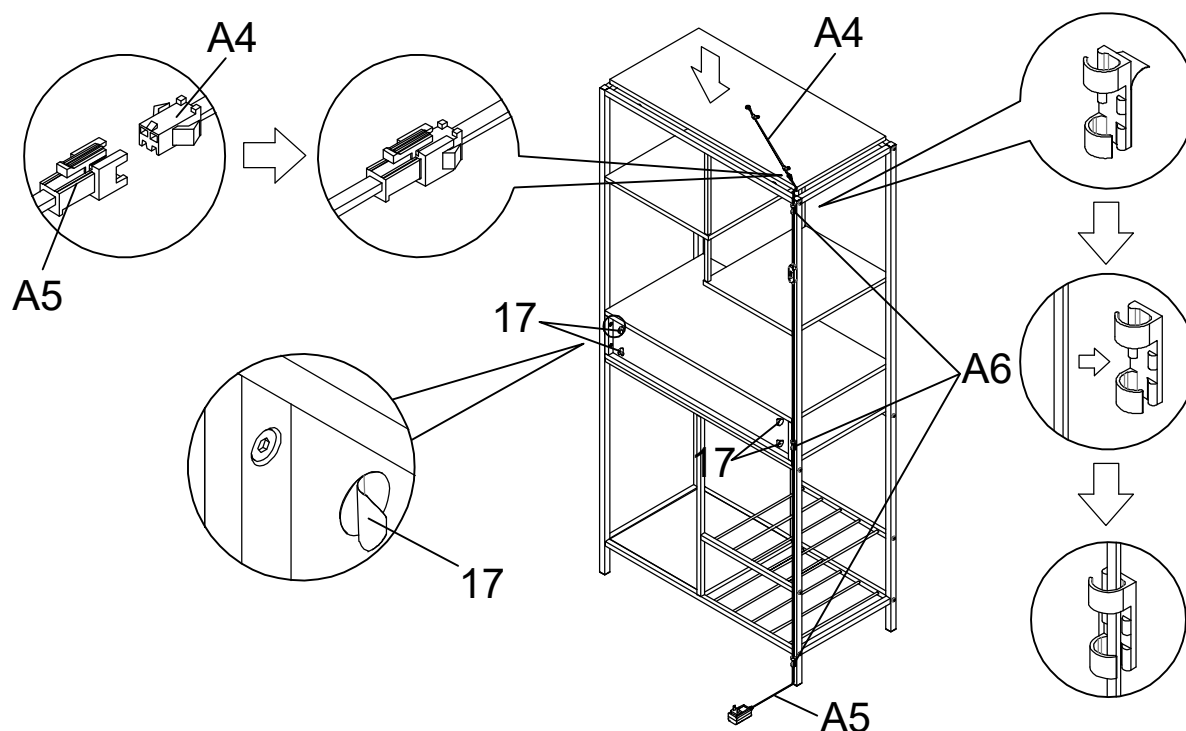

STEP 18

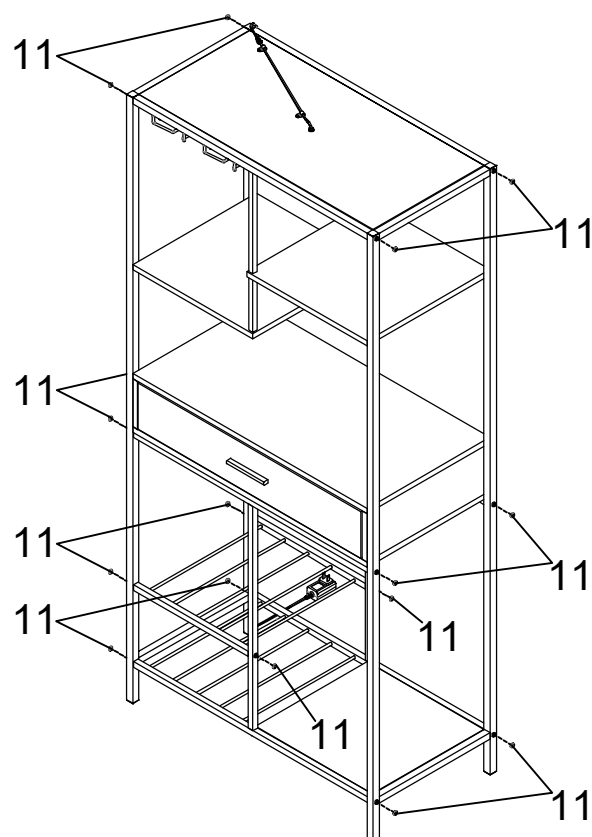


COMPLETE

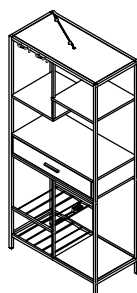

ASSEMBLY INSTRUCTIONS

Product Size : 800 X 419X 1702 H (MM)

Product Size : 31.5" X 16.5" X 67"

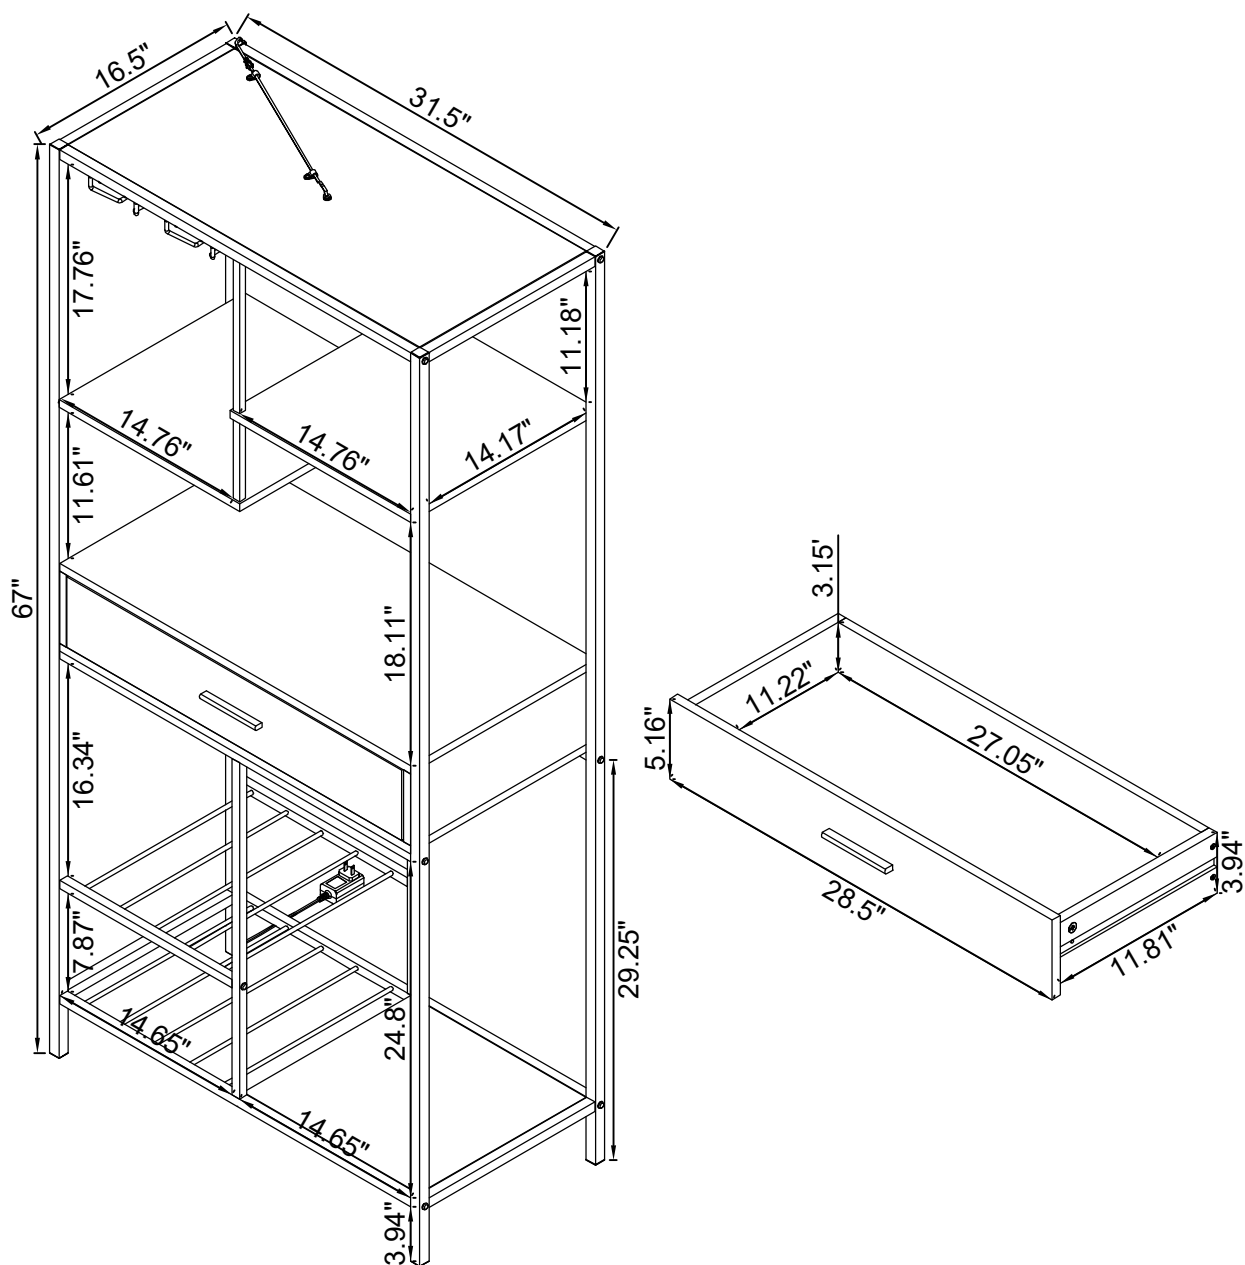

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT


WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

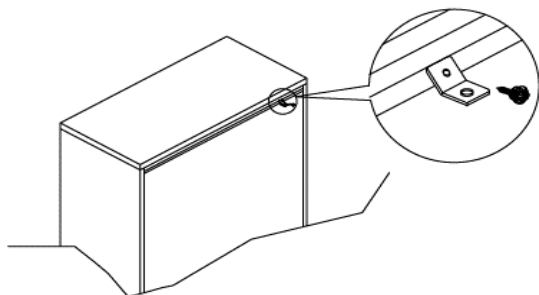

STEP 2

Locate the other bracket on the wall over a plastic wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

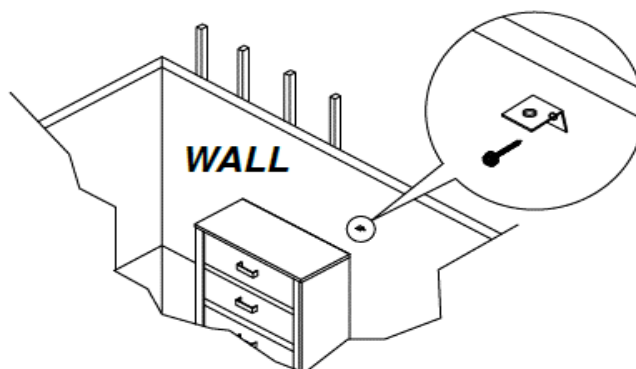

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

