
























INSTRUCTIONMANUAL















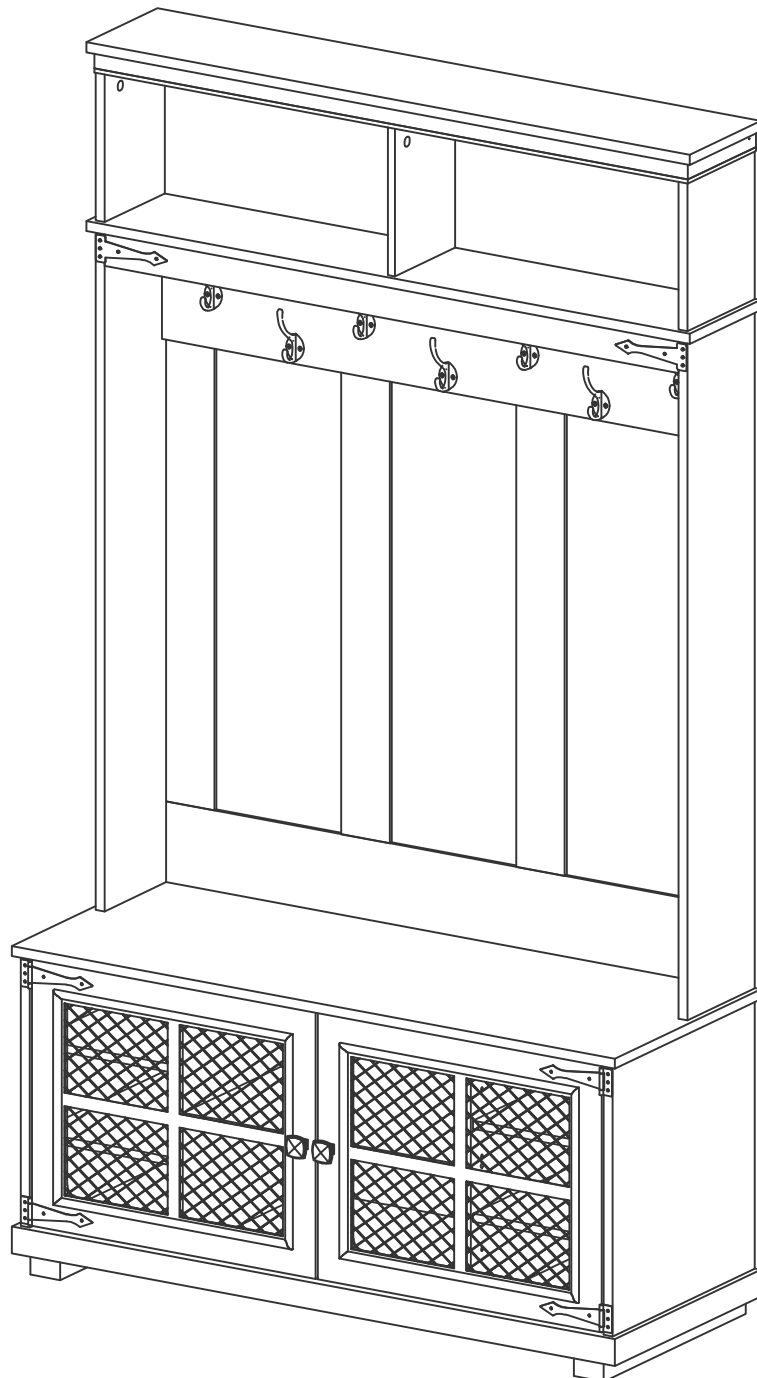


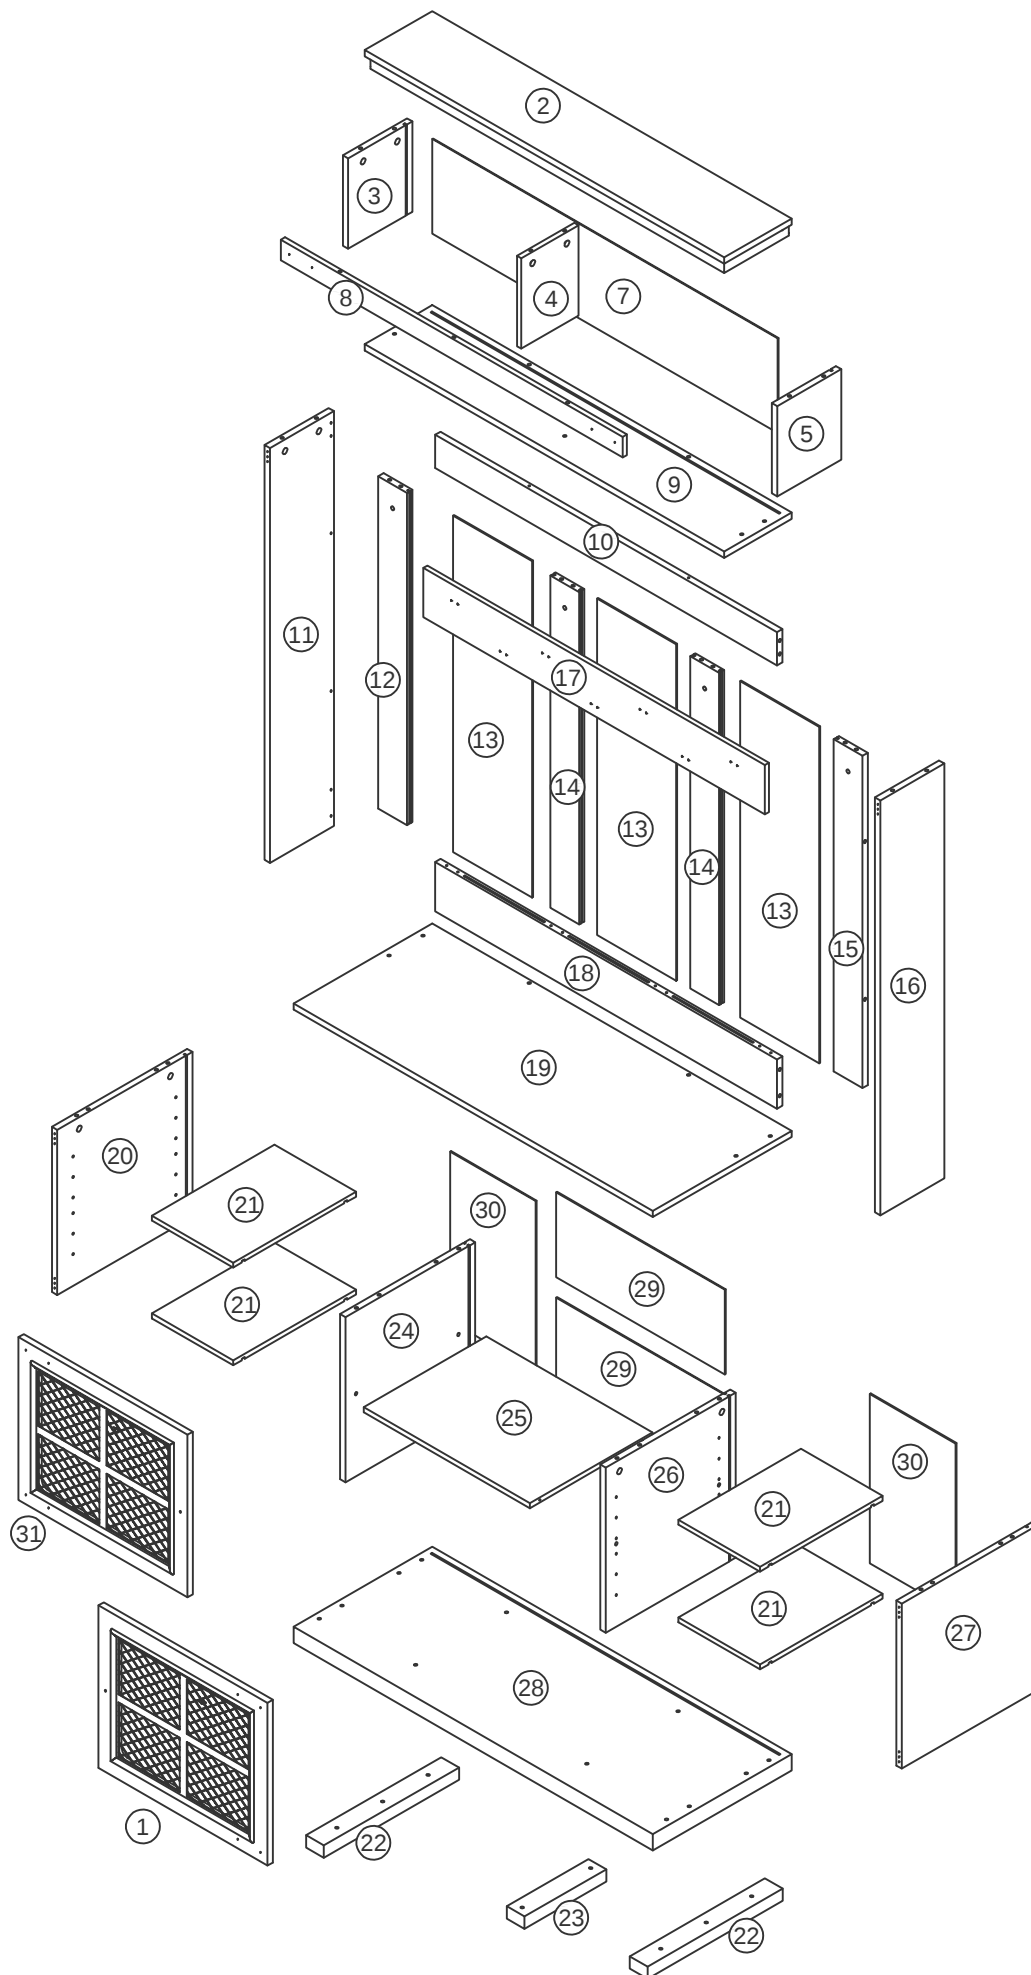

A	 M5X35	49
B	 Ø15X10	49
C	 Ø8X40	12
D	 M6X22	4
E	 M7X50	30
F	 M7X70	4
G	 M3.5X10	10
H	 M3.5X14	34
J	 Ø21X1	18
K	 M3.5X14	10
L	 M4X20	2
M	 111	2
N	 	16
P	 	7

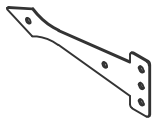Q	 M3X16	28
R	 	28
S	 	2
T	 	2
U	 	4
V	 Ø8X40	2
W	 	2
X	 M5X40	2
Y	 	2
	 4#	1
	 	1

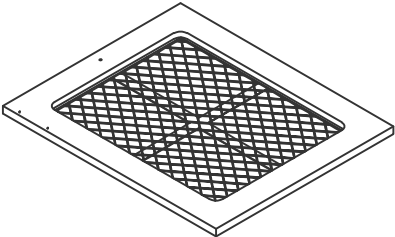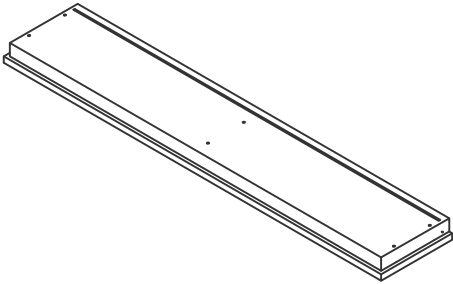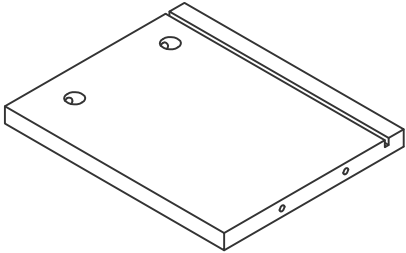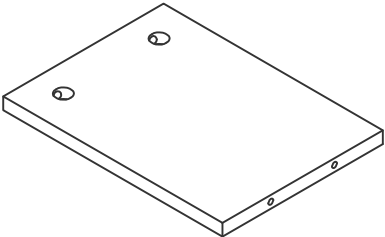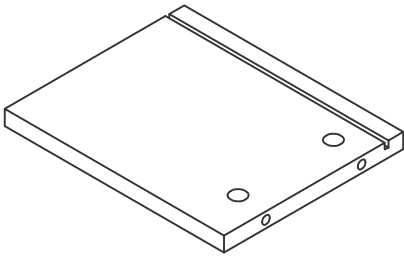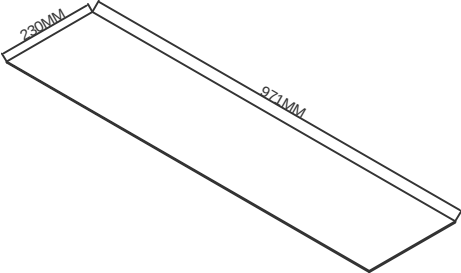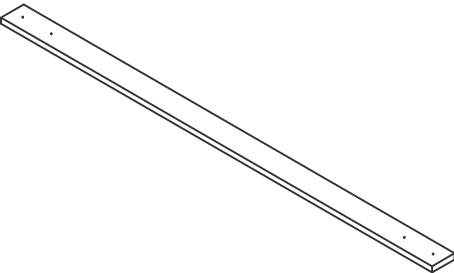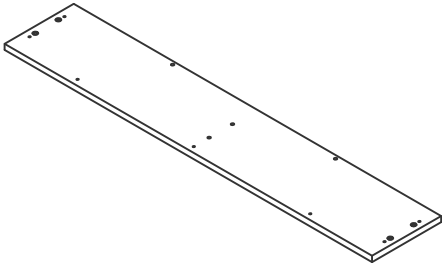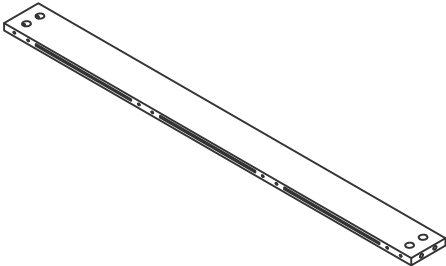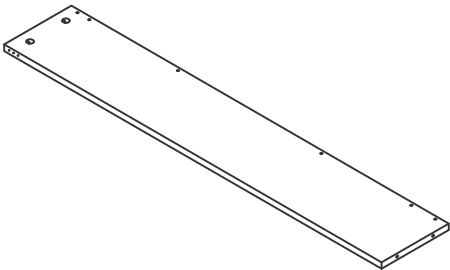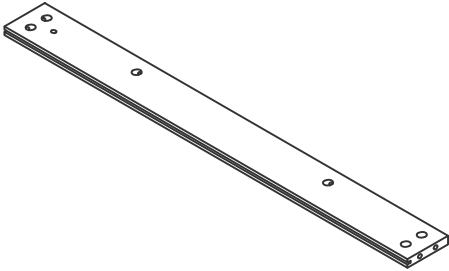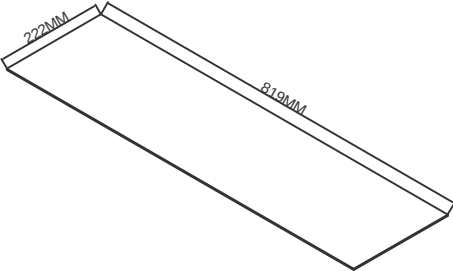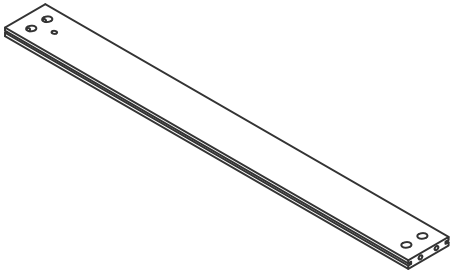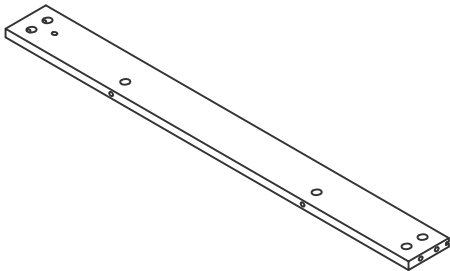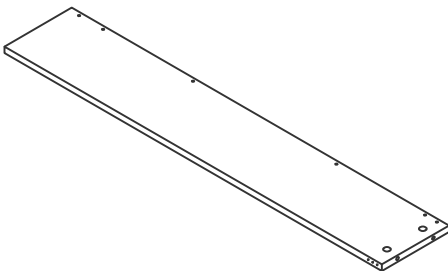①  1 PC	②  1 PC	③  1 PC
④  1 PC	⑤  1 PC	⑦  1 PC
⑧  1 PC	⑨  1 PC	⑩  1 PC
⑪  1 PC	⑫  1 PC	⑬  3 PCS
⑭  2 PCS	⑮  1 PC	⑯  1 PC

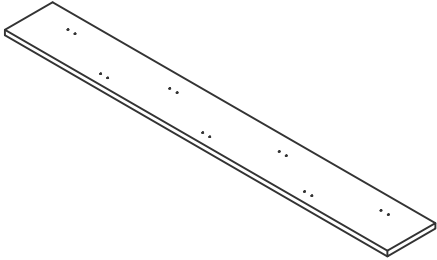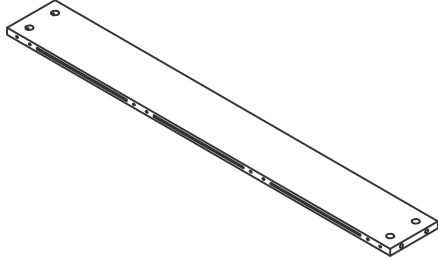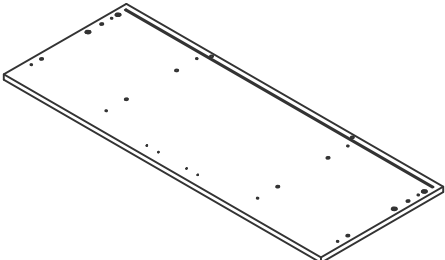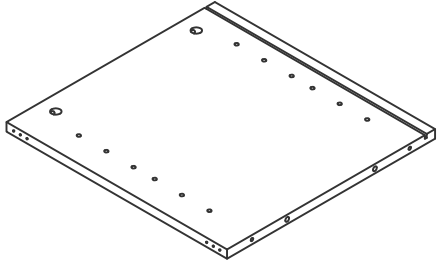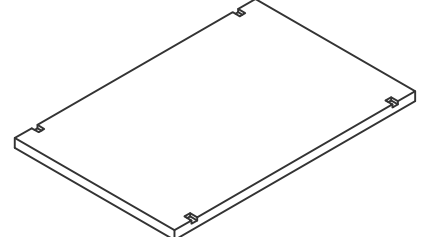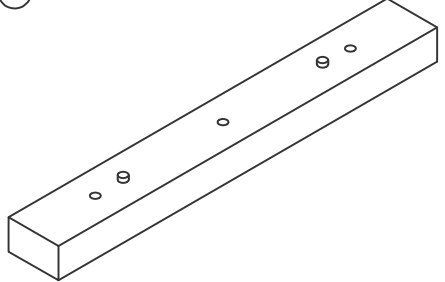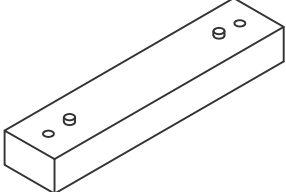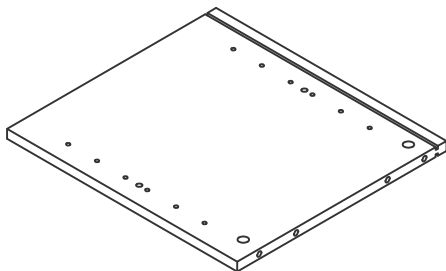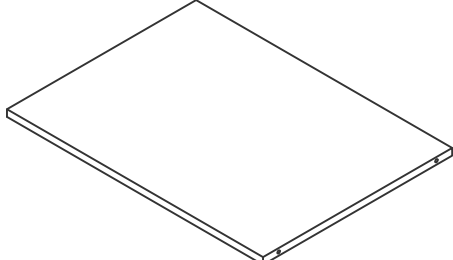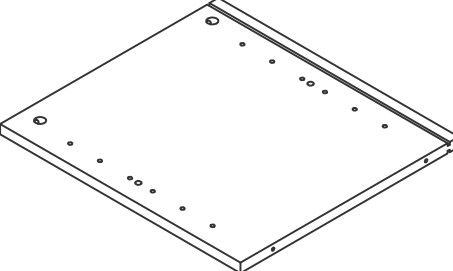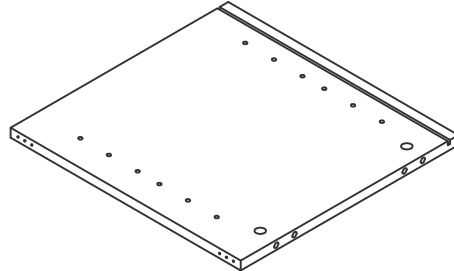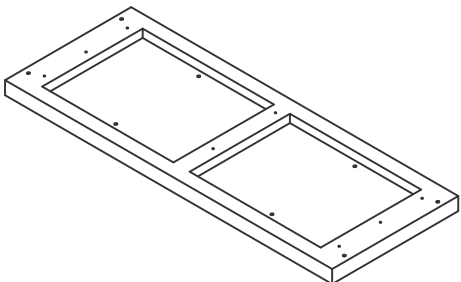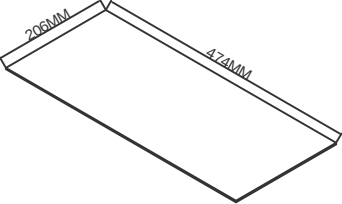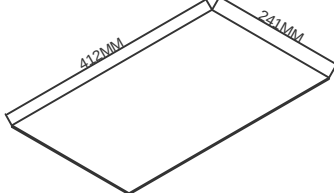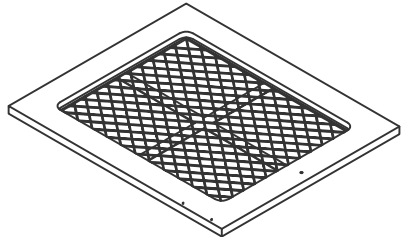⑰  1 PC	⑱  1 PC	⑲  1 PC
⑳  1 PC	㉑  4 PCS	㉒  2 PCS
㉓  1 PC	㉔  1 PC	㉕  1 PC
㉖  1 PC	㉗  1 PC	㉘  1 PC
㉙  2 PCS	㉚  2 PCS	㉛  1 PC


Step: 1

A



M5X35

16

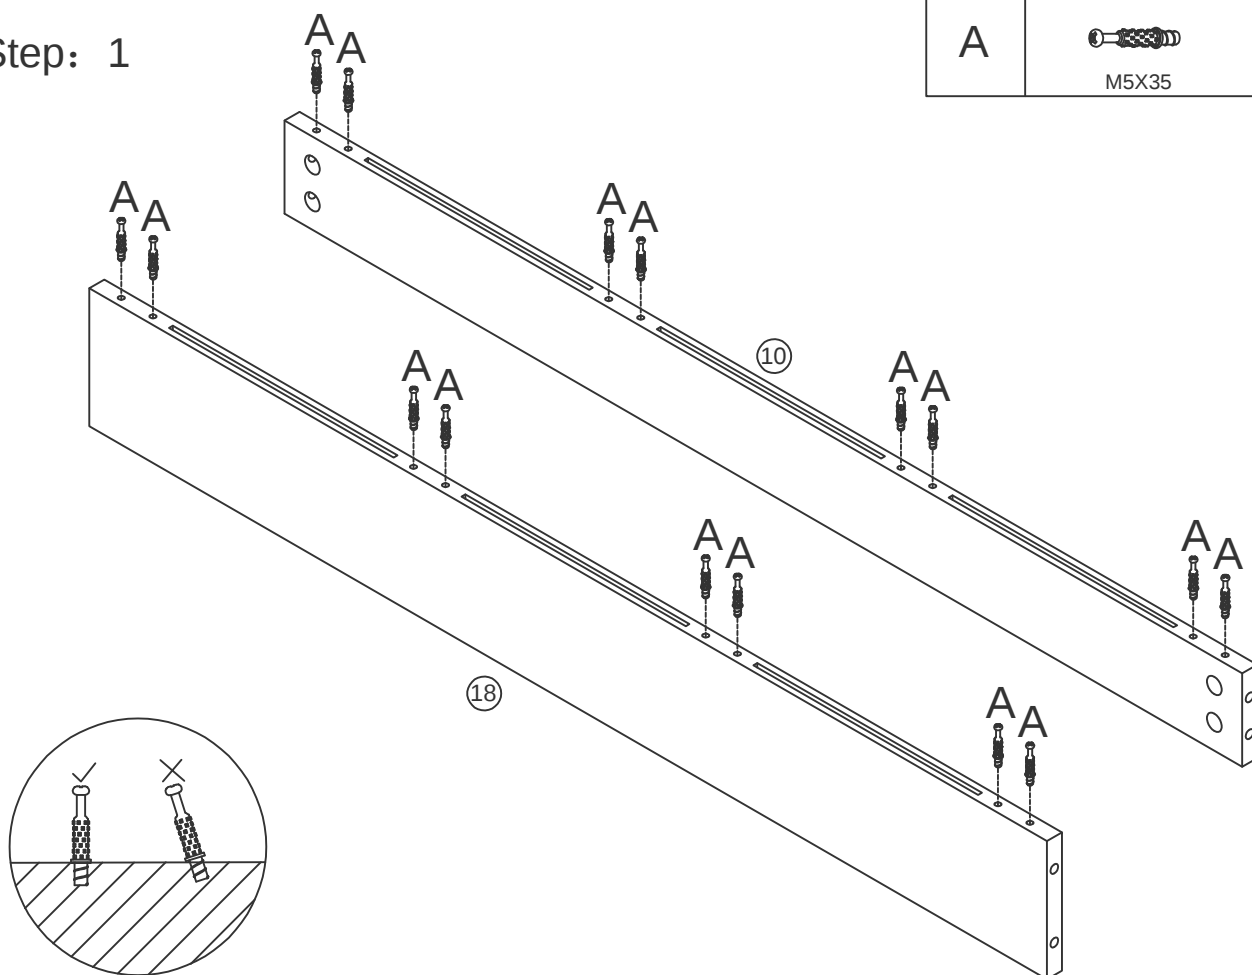


B




Ø15X10

8


Step: 2

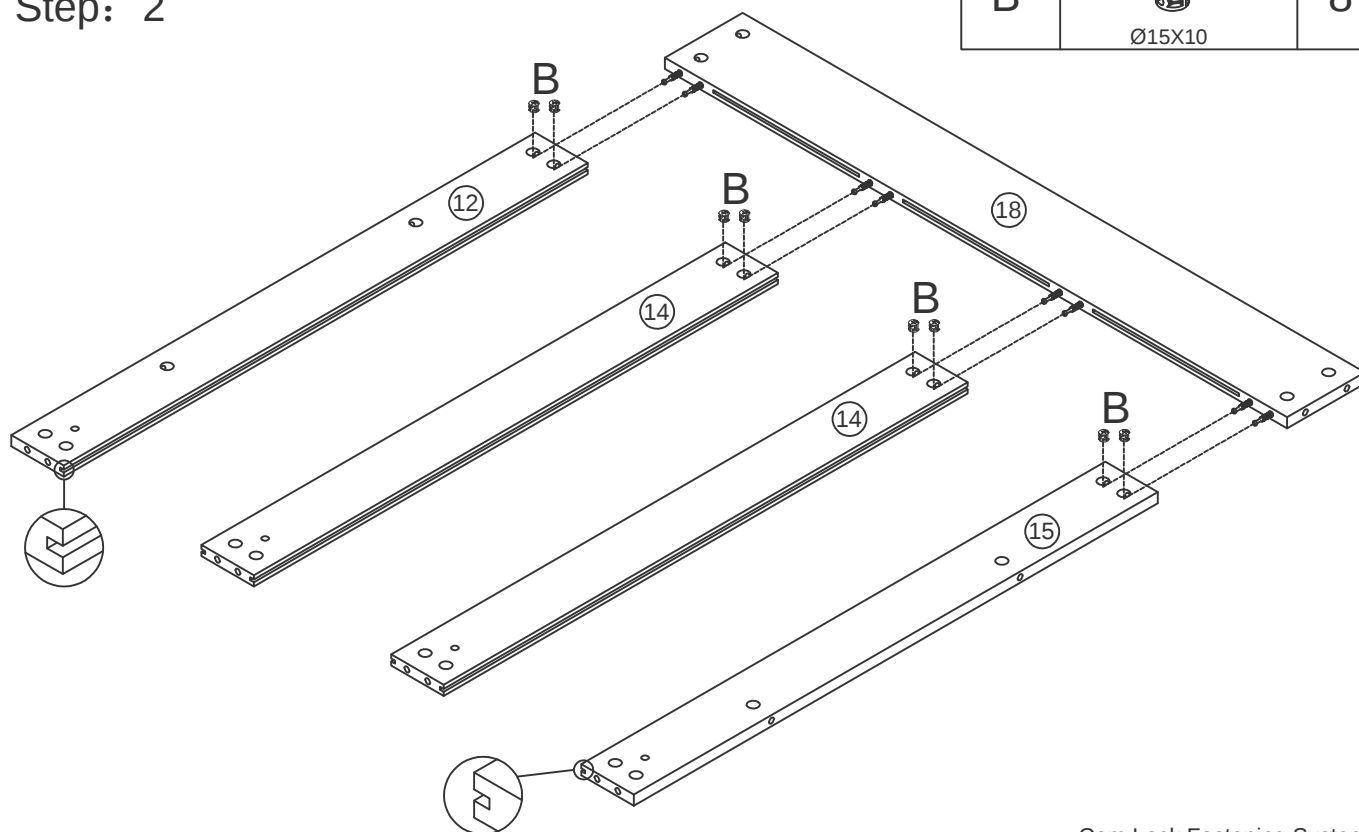

Cam Lock Fastening System




Step: 3

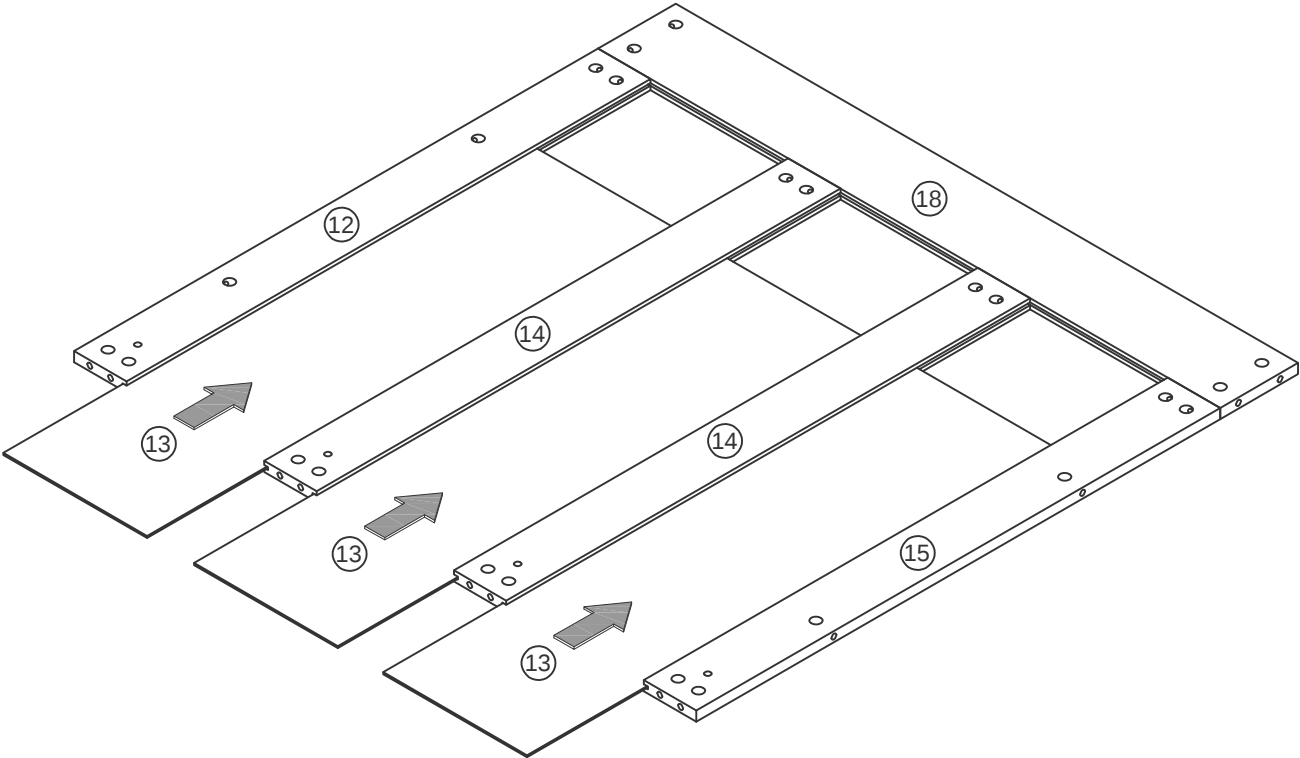


Step: 4

B	 Ø15X10	8
---	---	---

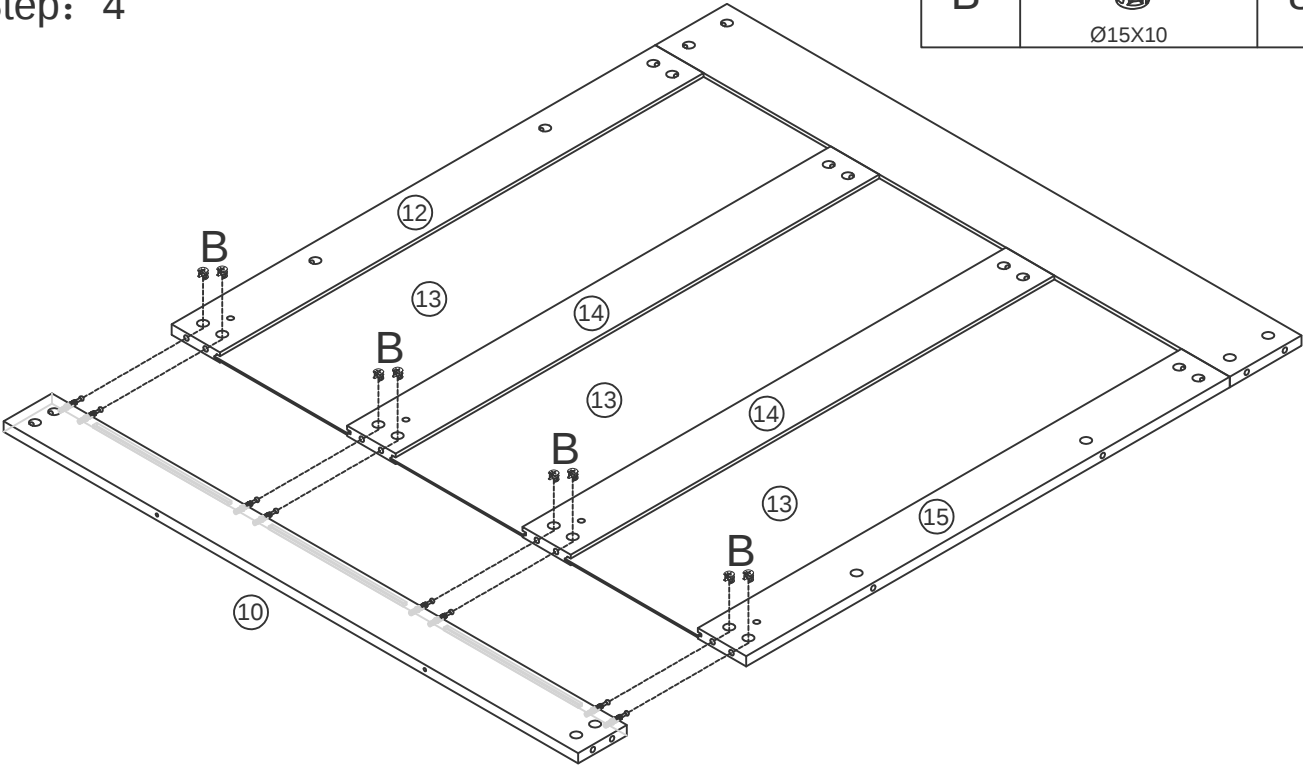

Cam Lock Fastening System




Step: 5

A



M5X35

12

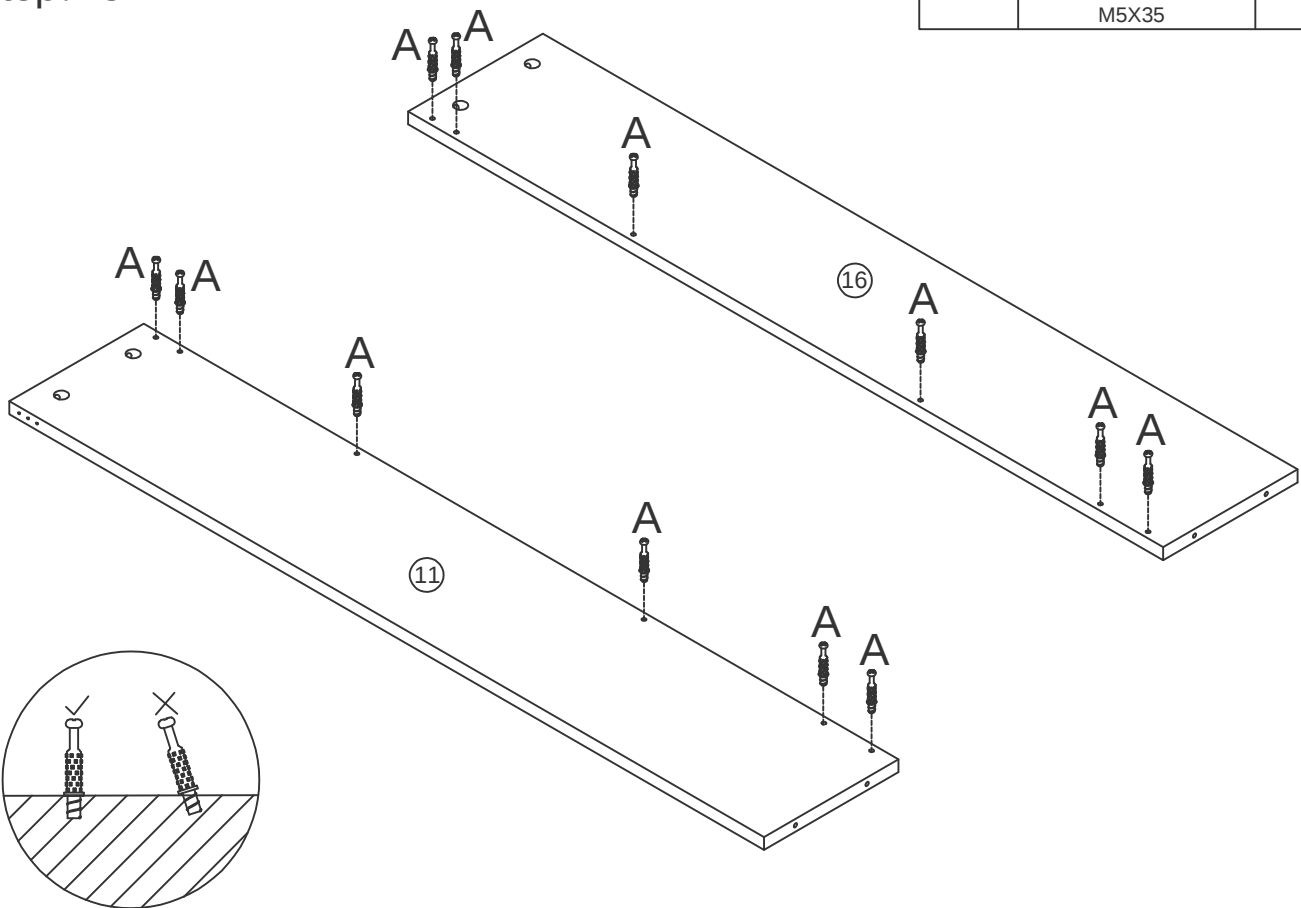


Step: 6

B





Ø15X10

6

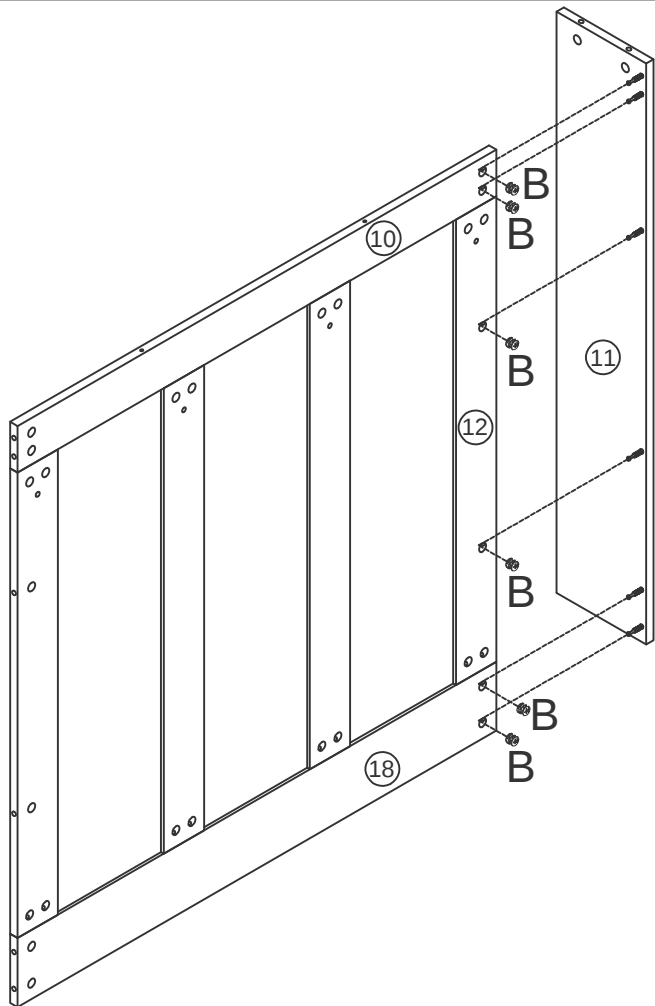


Cam Lock Fastening System



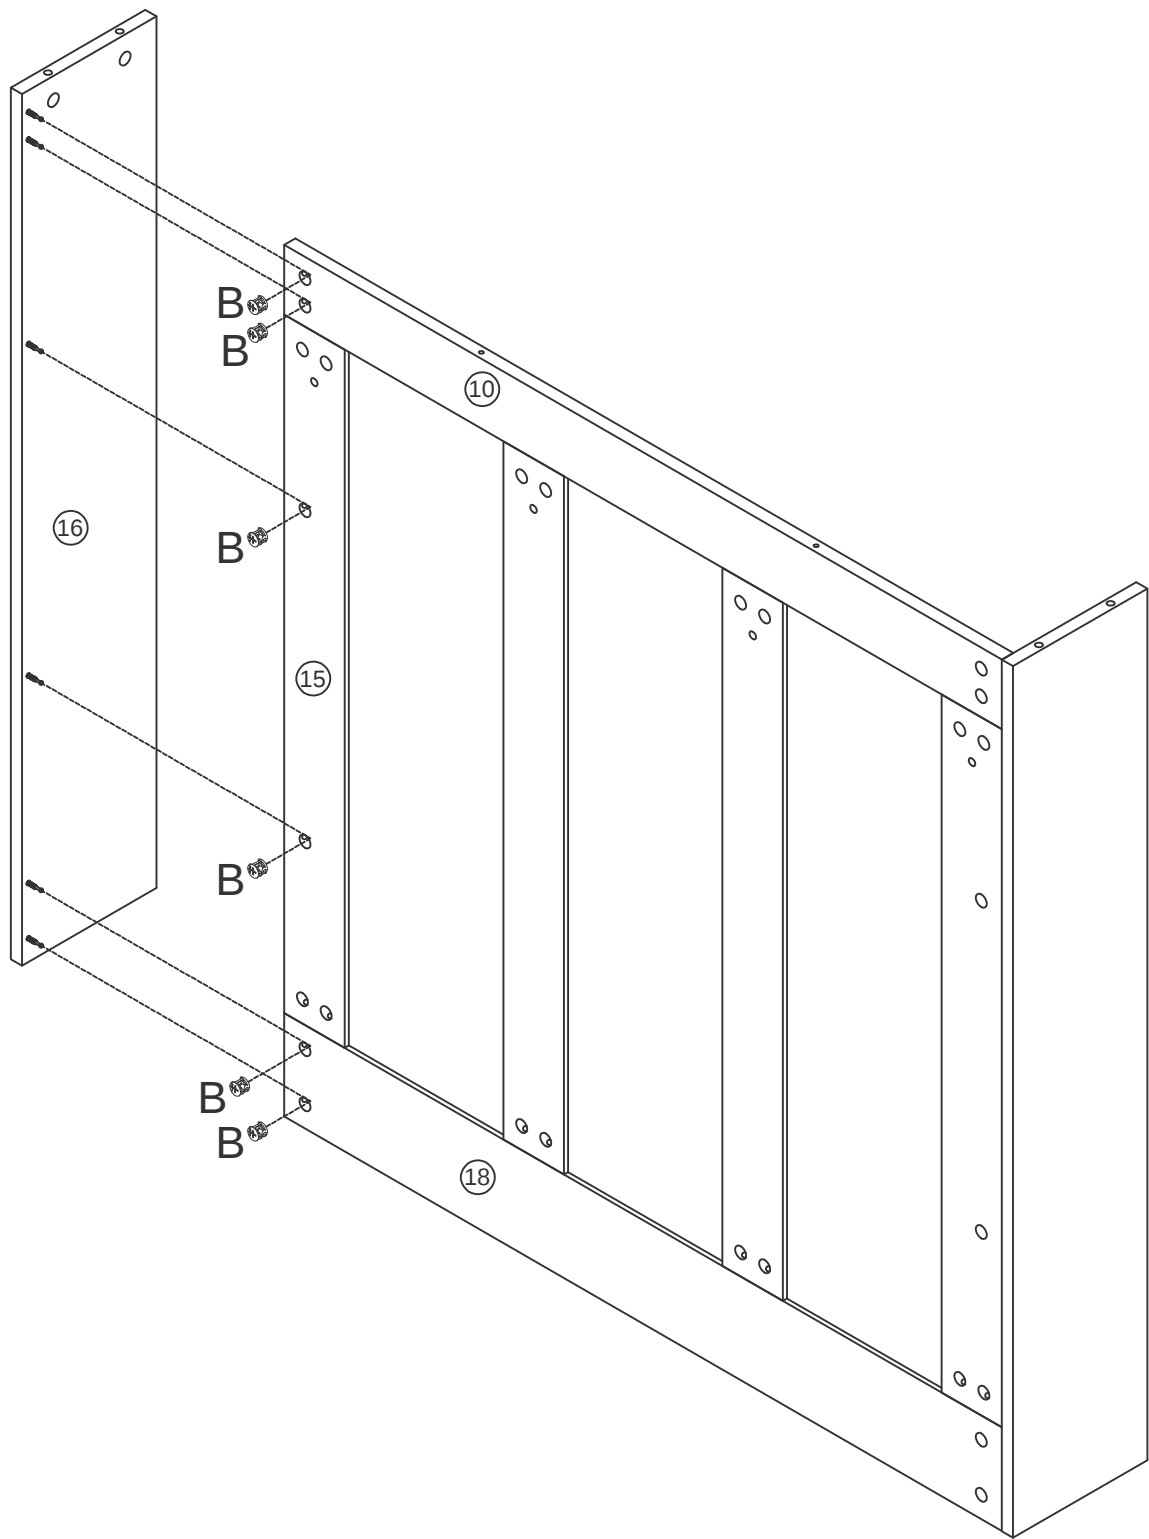

Cam Lock Fastening System





Step: 8

A



M5X35

7

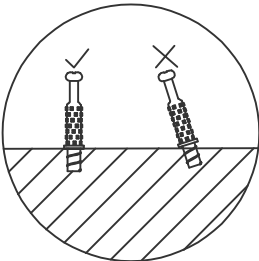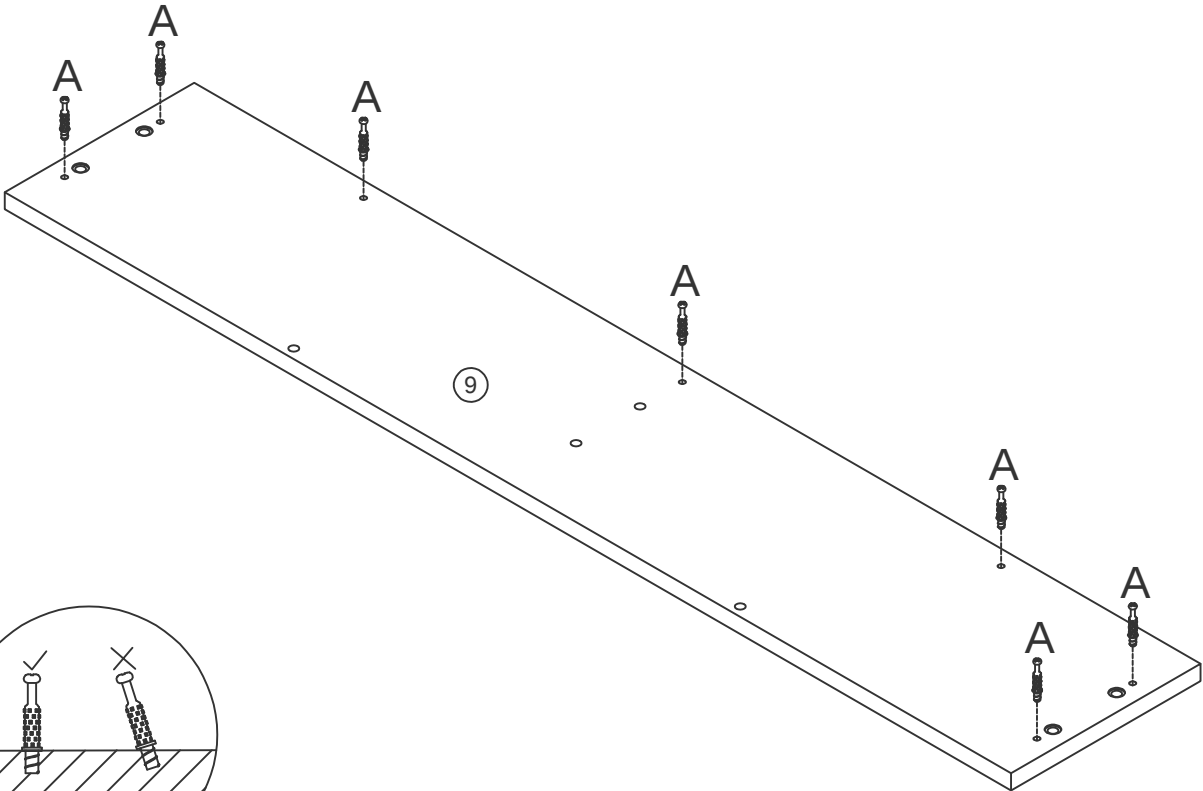


Step: 9

E




M7X50

6

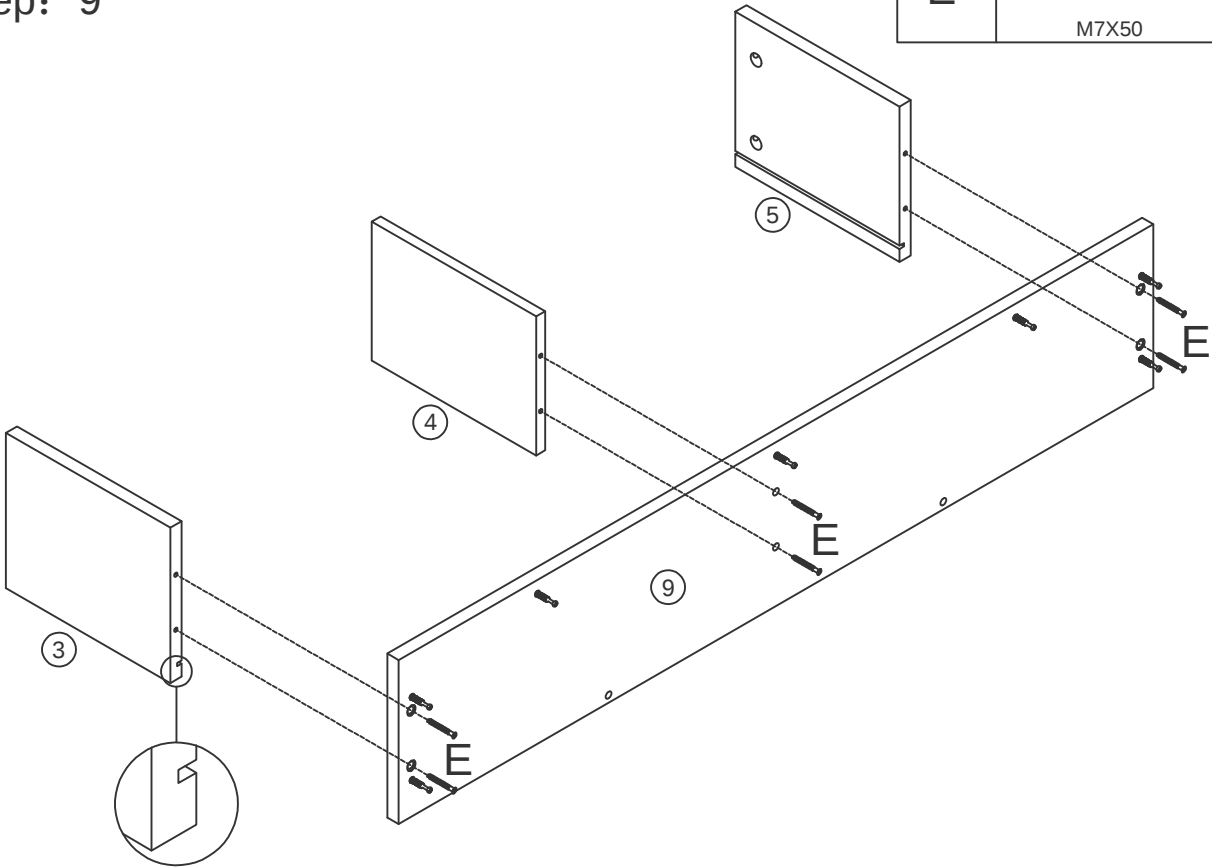


Step: 10

B	 Ø15X10	3
---	---	---

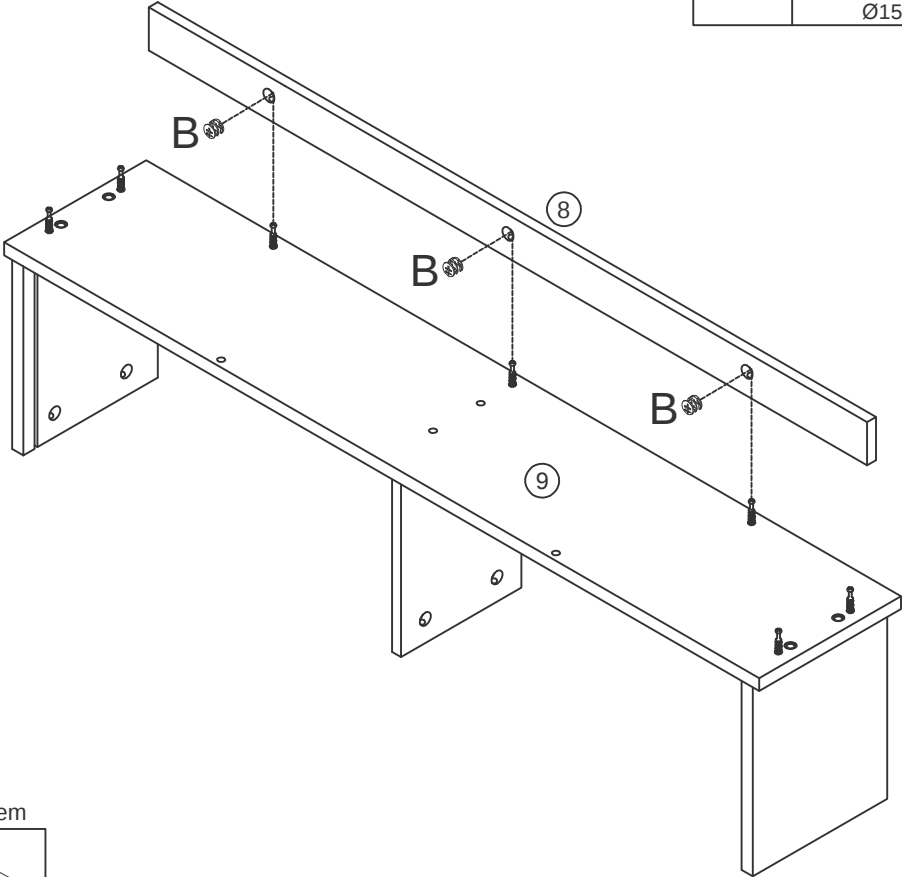


Cam Lock Fastening System




Step: 11


B	 Ø15X10	4
E	 M7X50	2

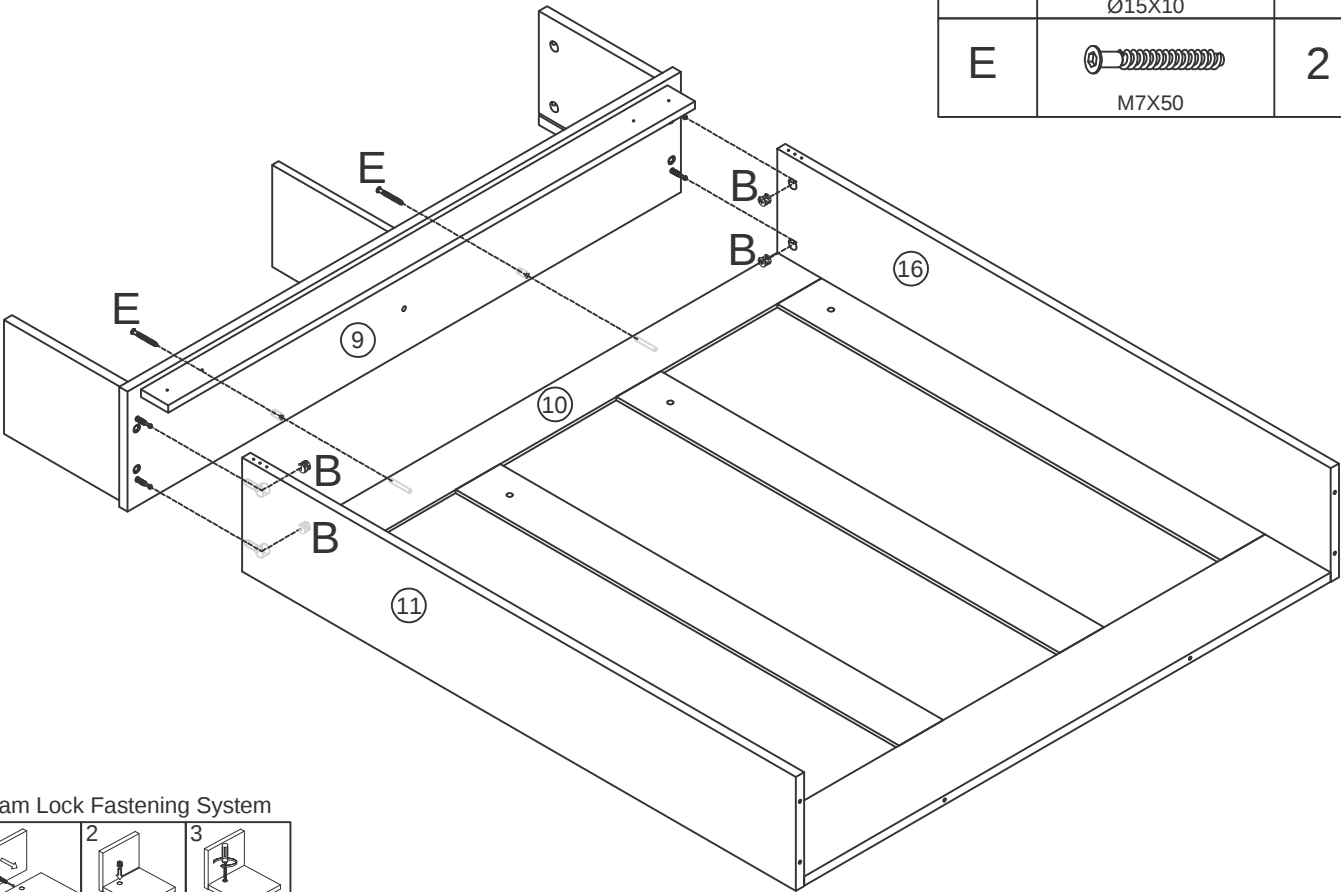


Cam Lock Fastening System



Step: 12

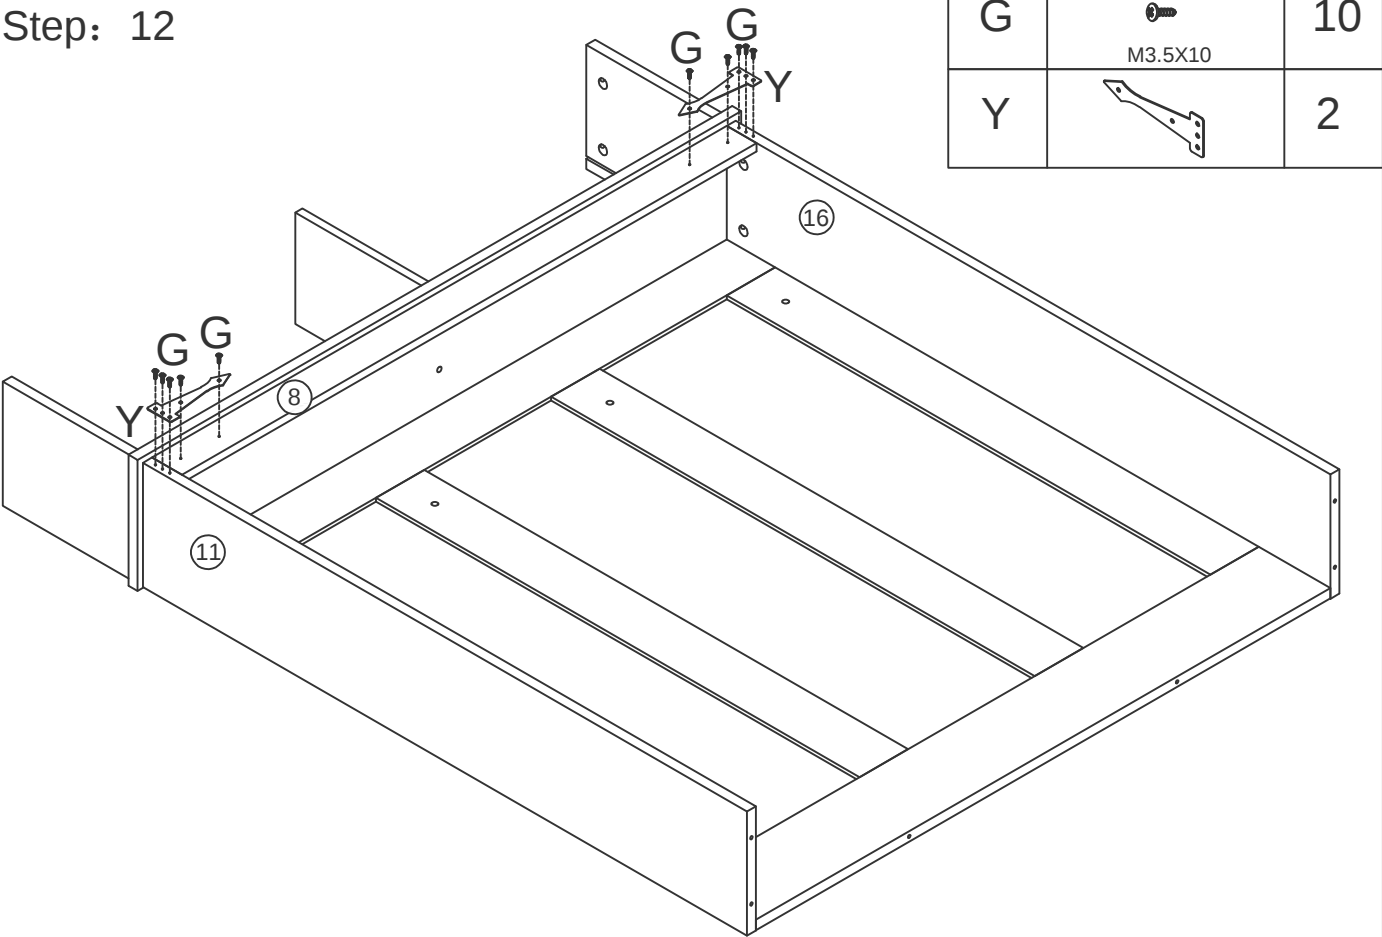


Step: 13

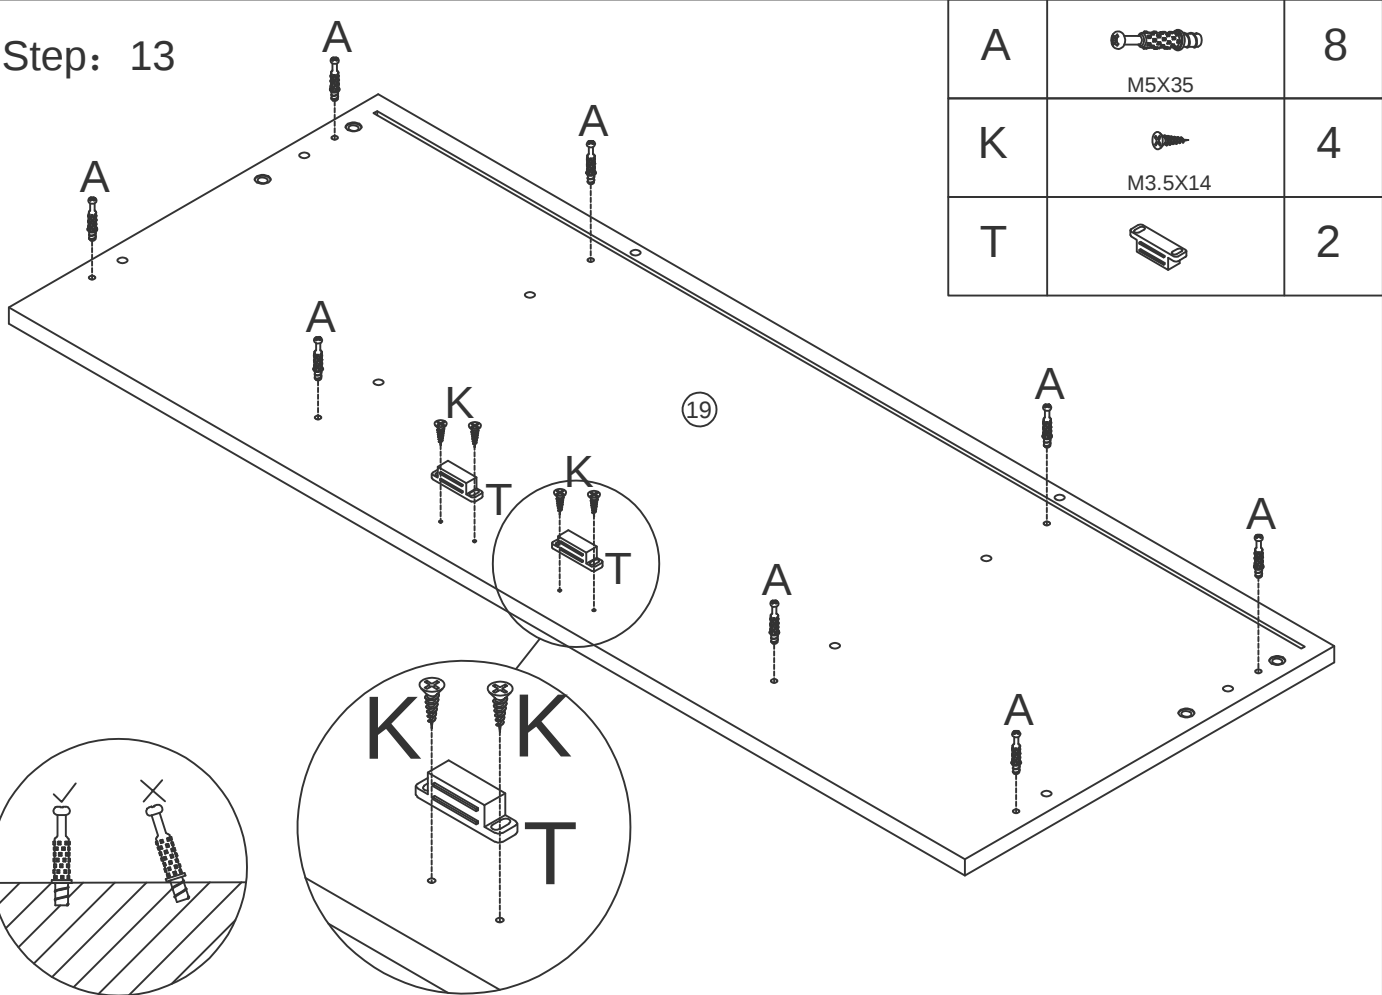


Step: 14

E		6
M7X50		

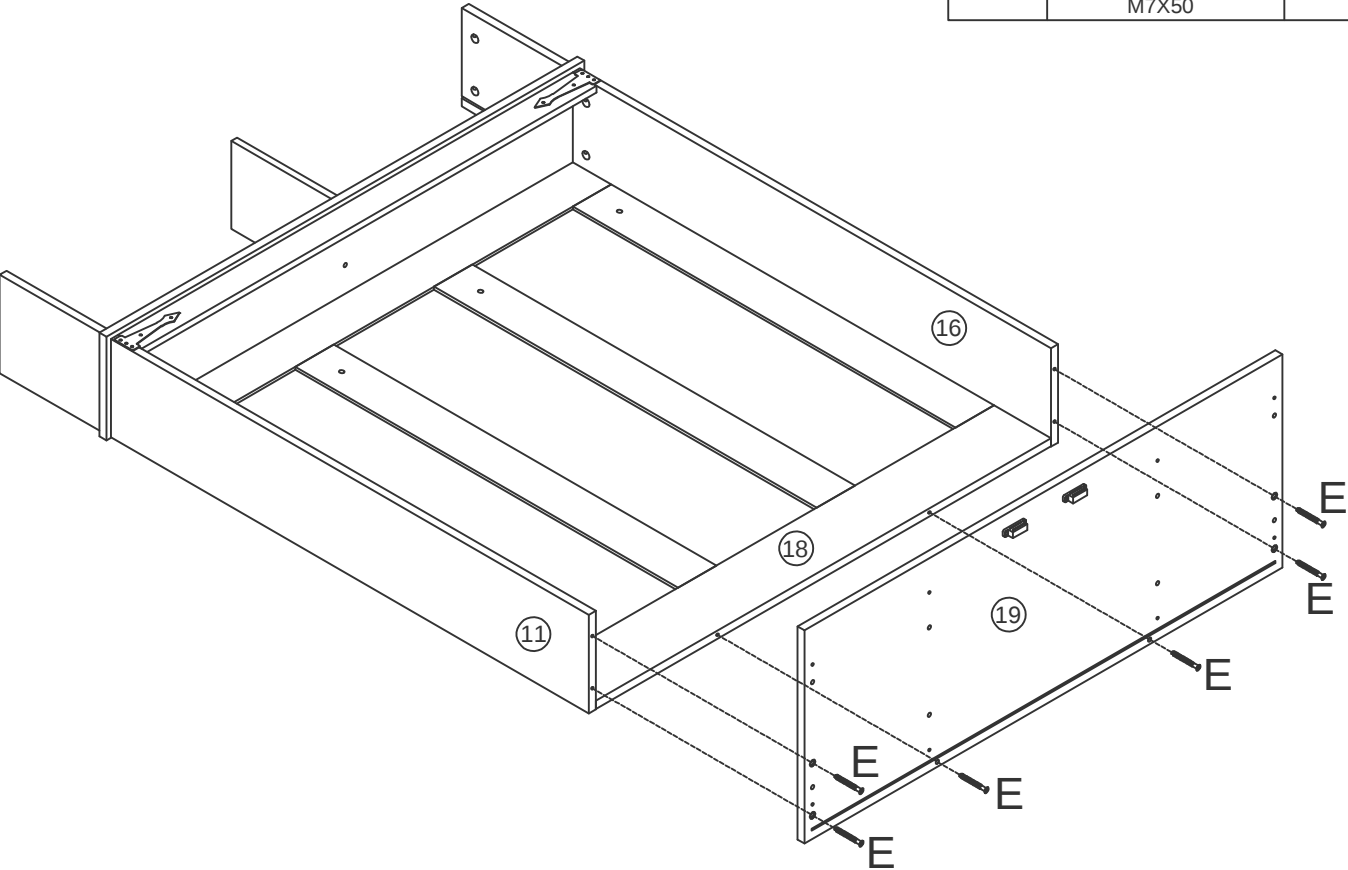


Step: 15

E		2
M7X50		

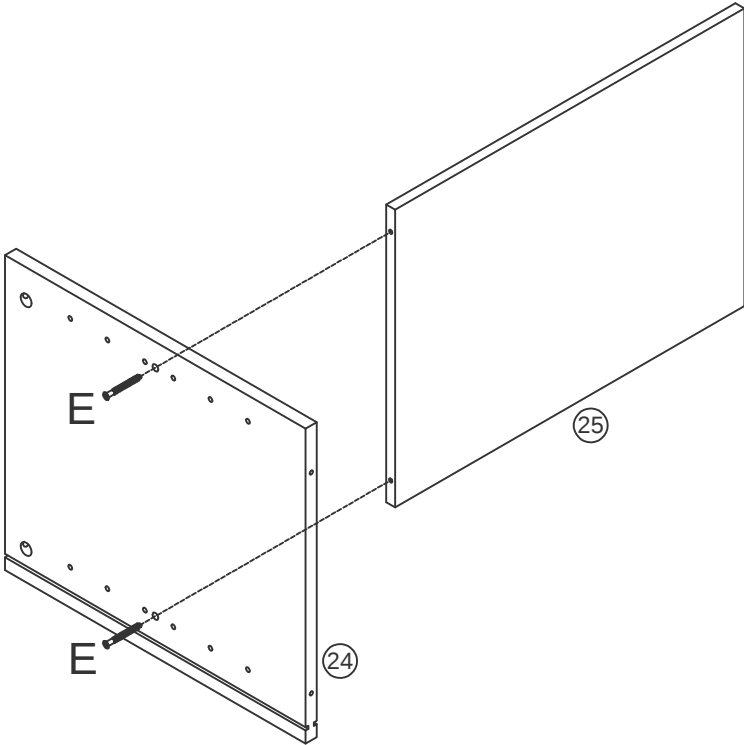


Step: 16

E		2
M7X50		


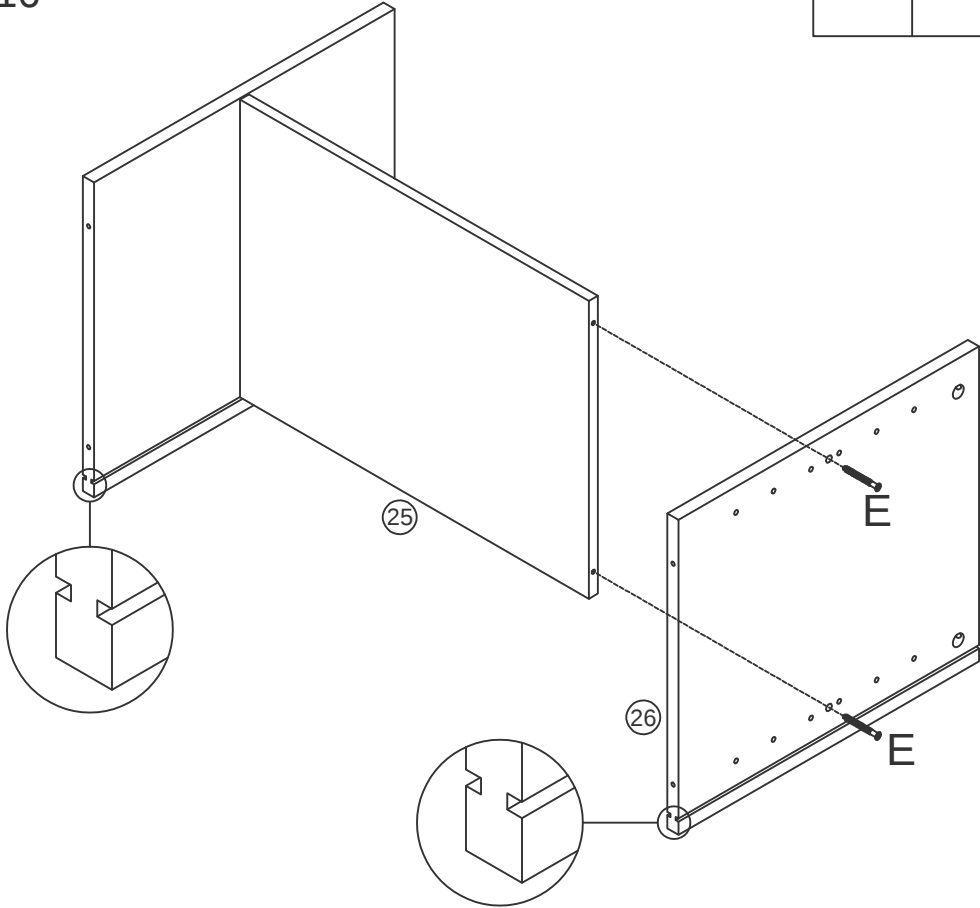


Step: 17

B		4
Ø15X10		
C		4
Ø8X40		

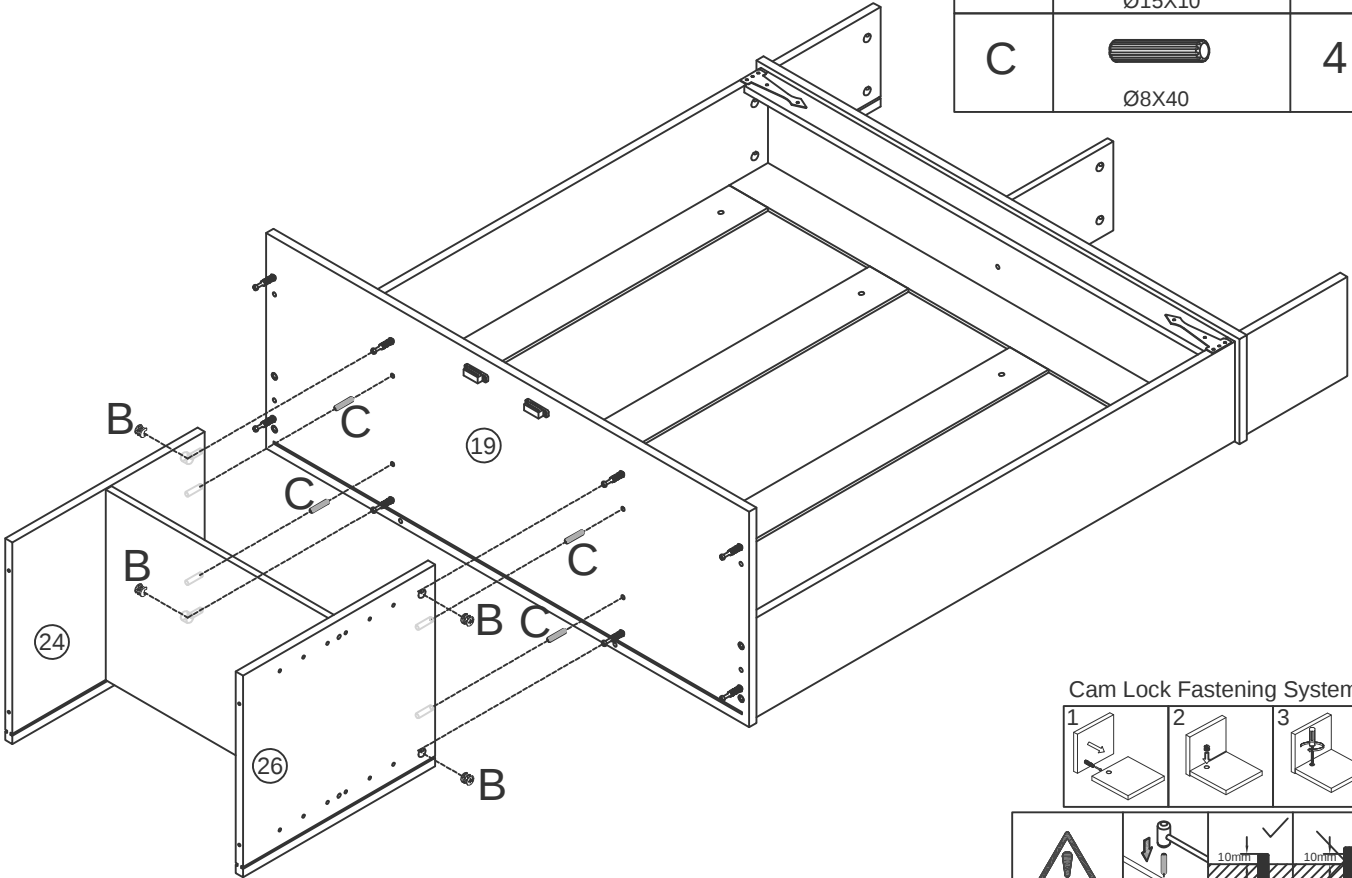


Cam Lock Fastening System




Step: 18


B	 Ø15X10	4
C	 Ø8X40	4

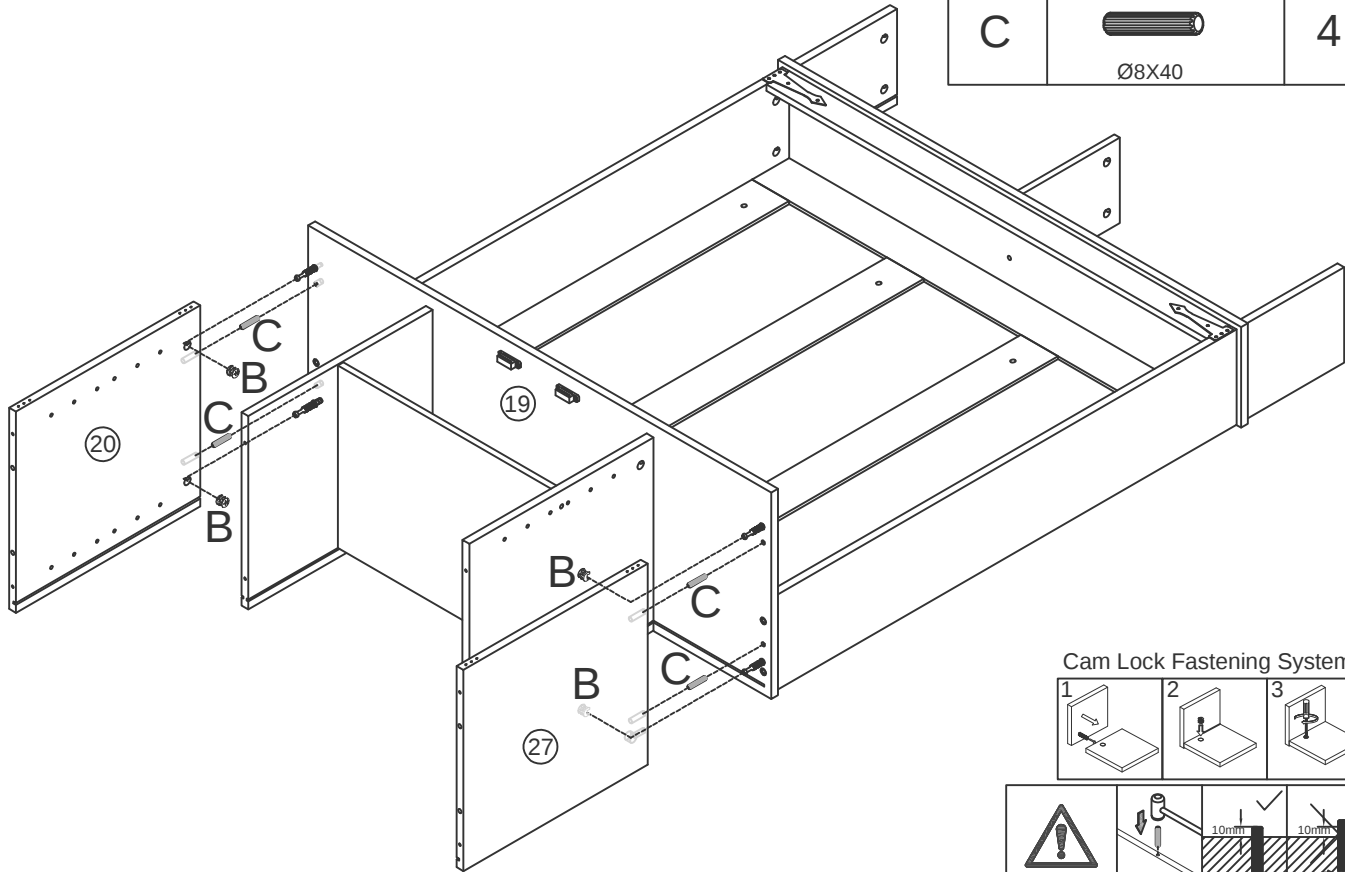


Step: 19

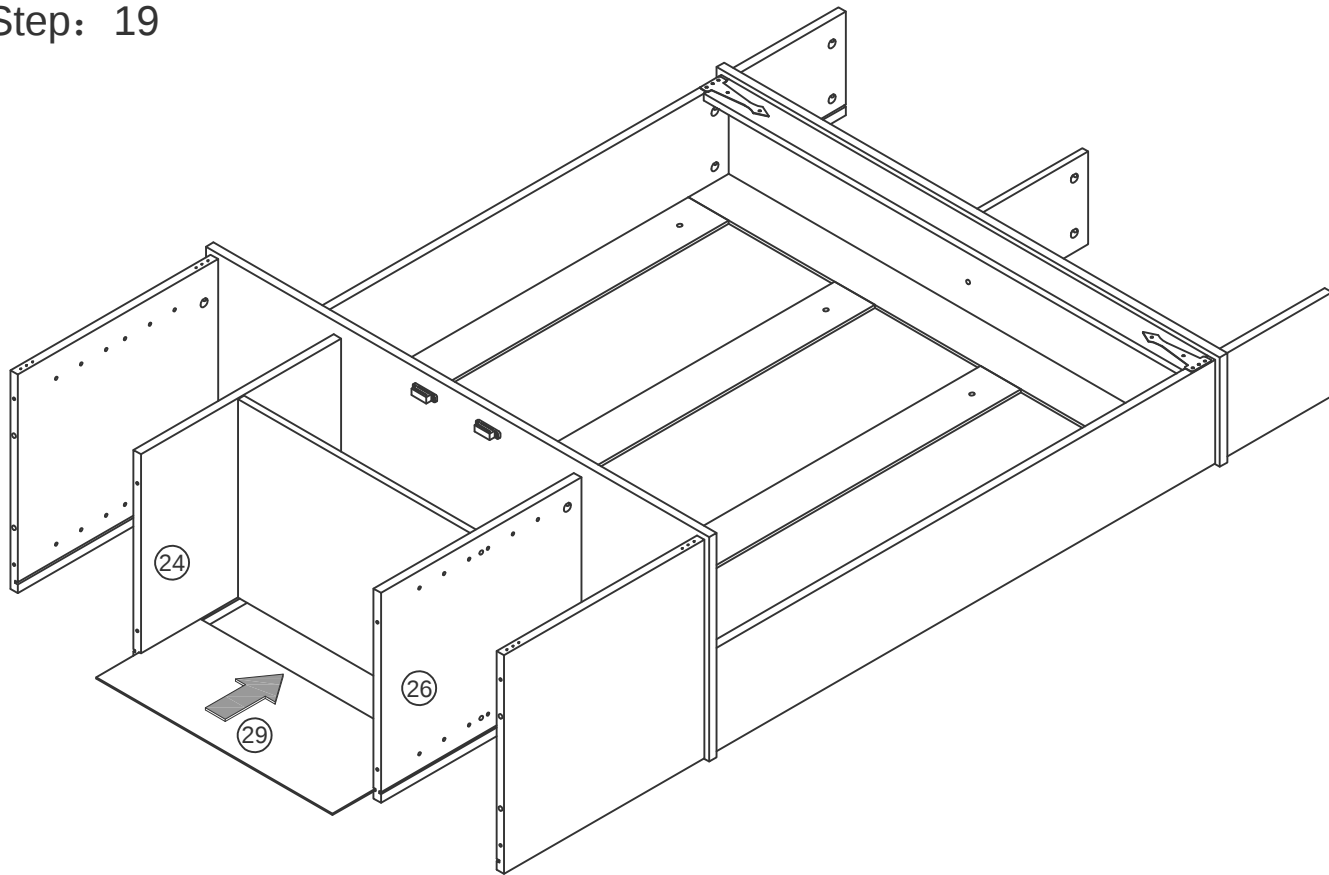


Step: 20

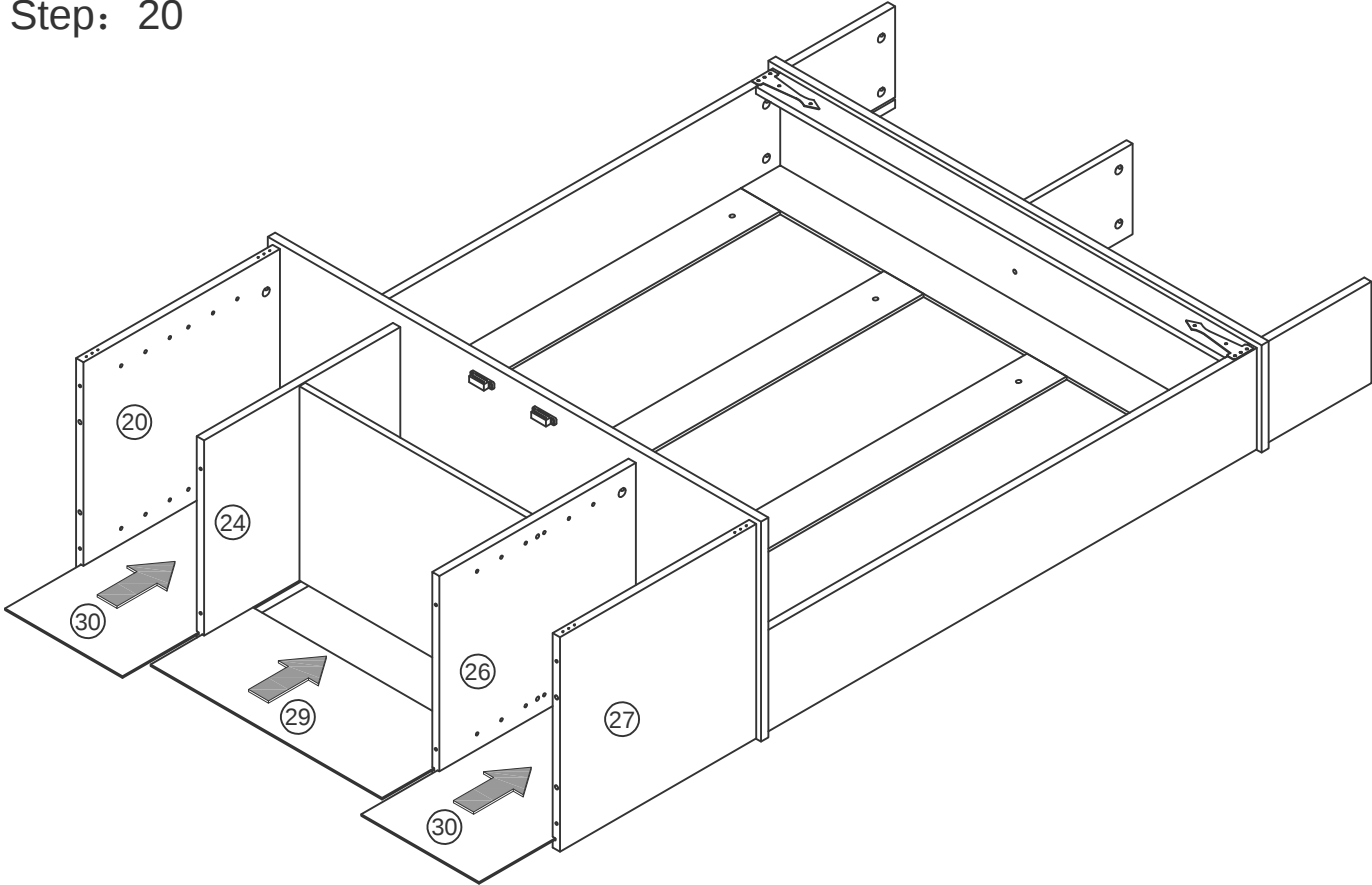

Step: 21

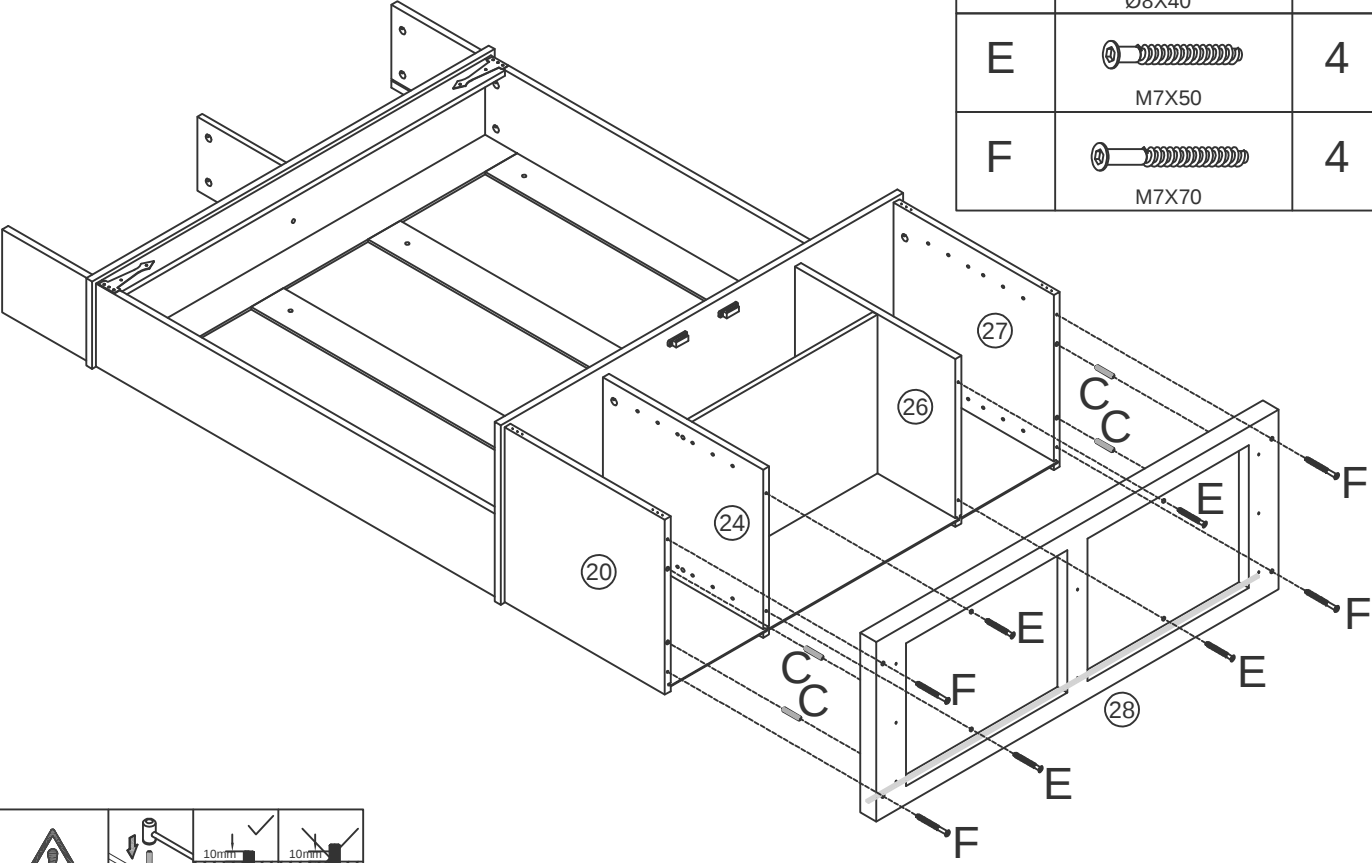


C	 Ø8X40	4
E	 M7X50	4
F	 M7X70	4




Step: 22

E		8
M7X50		

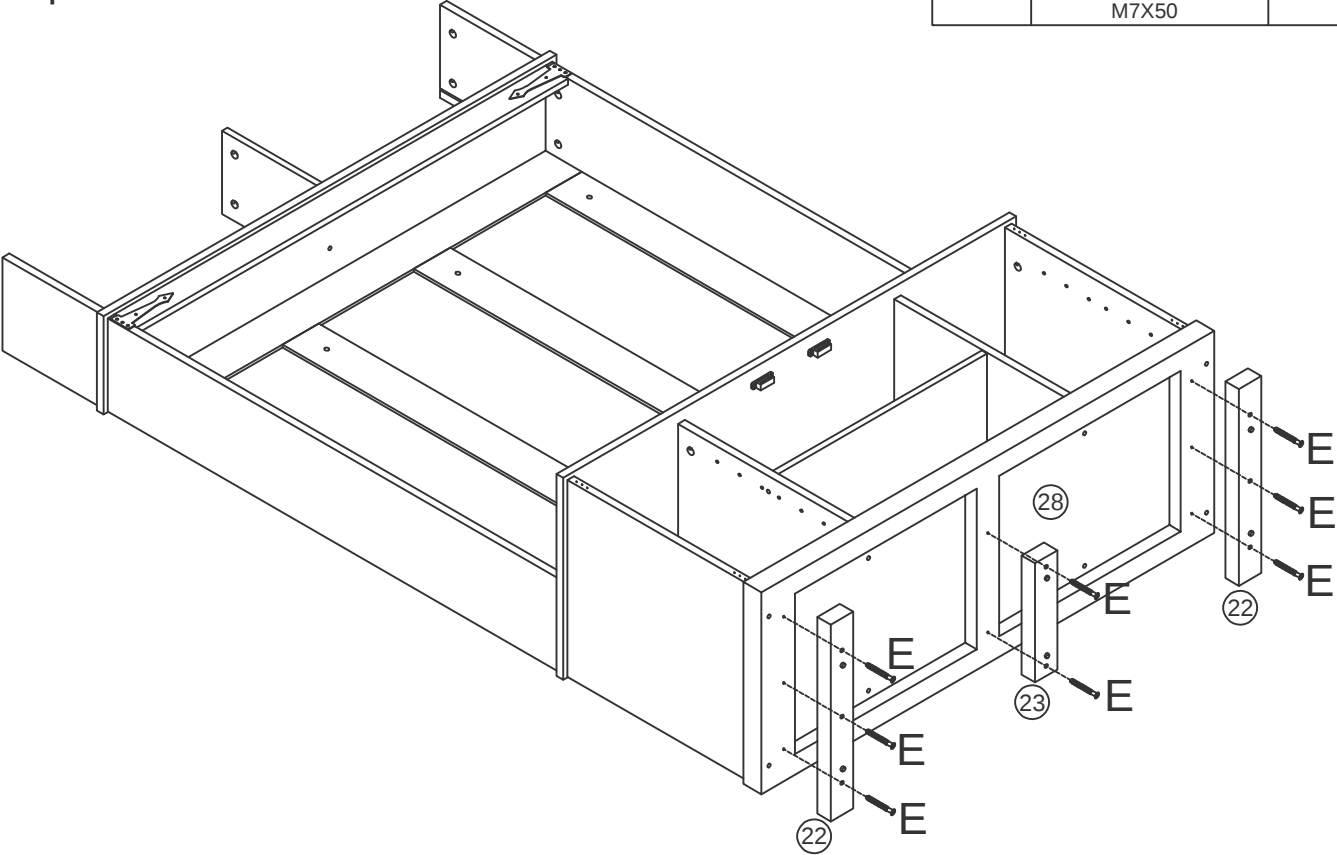


Step: 23

H		14
M3.5X14		
P		7

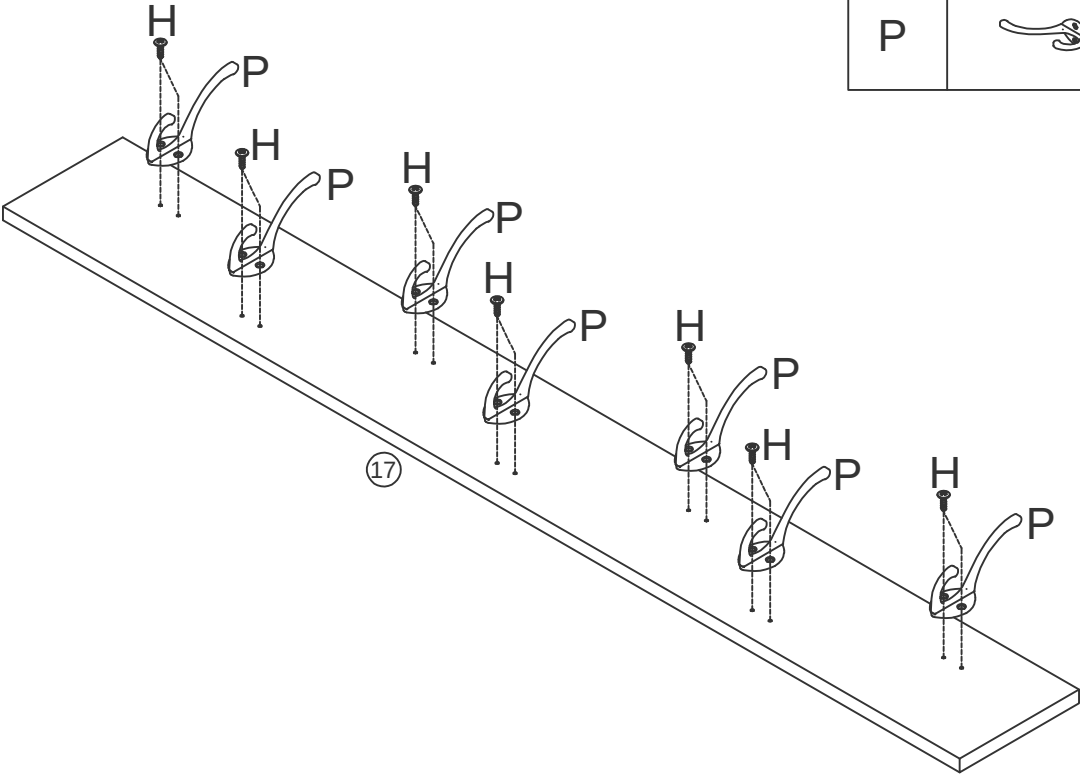

Step: 24

D	 M6X22	4
---	--	---


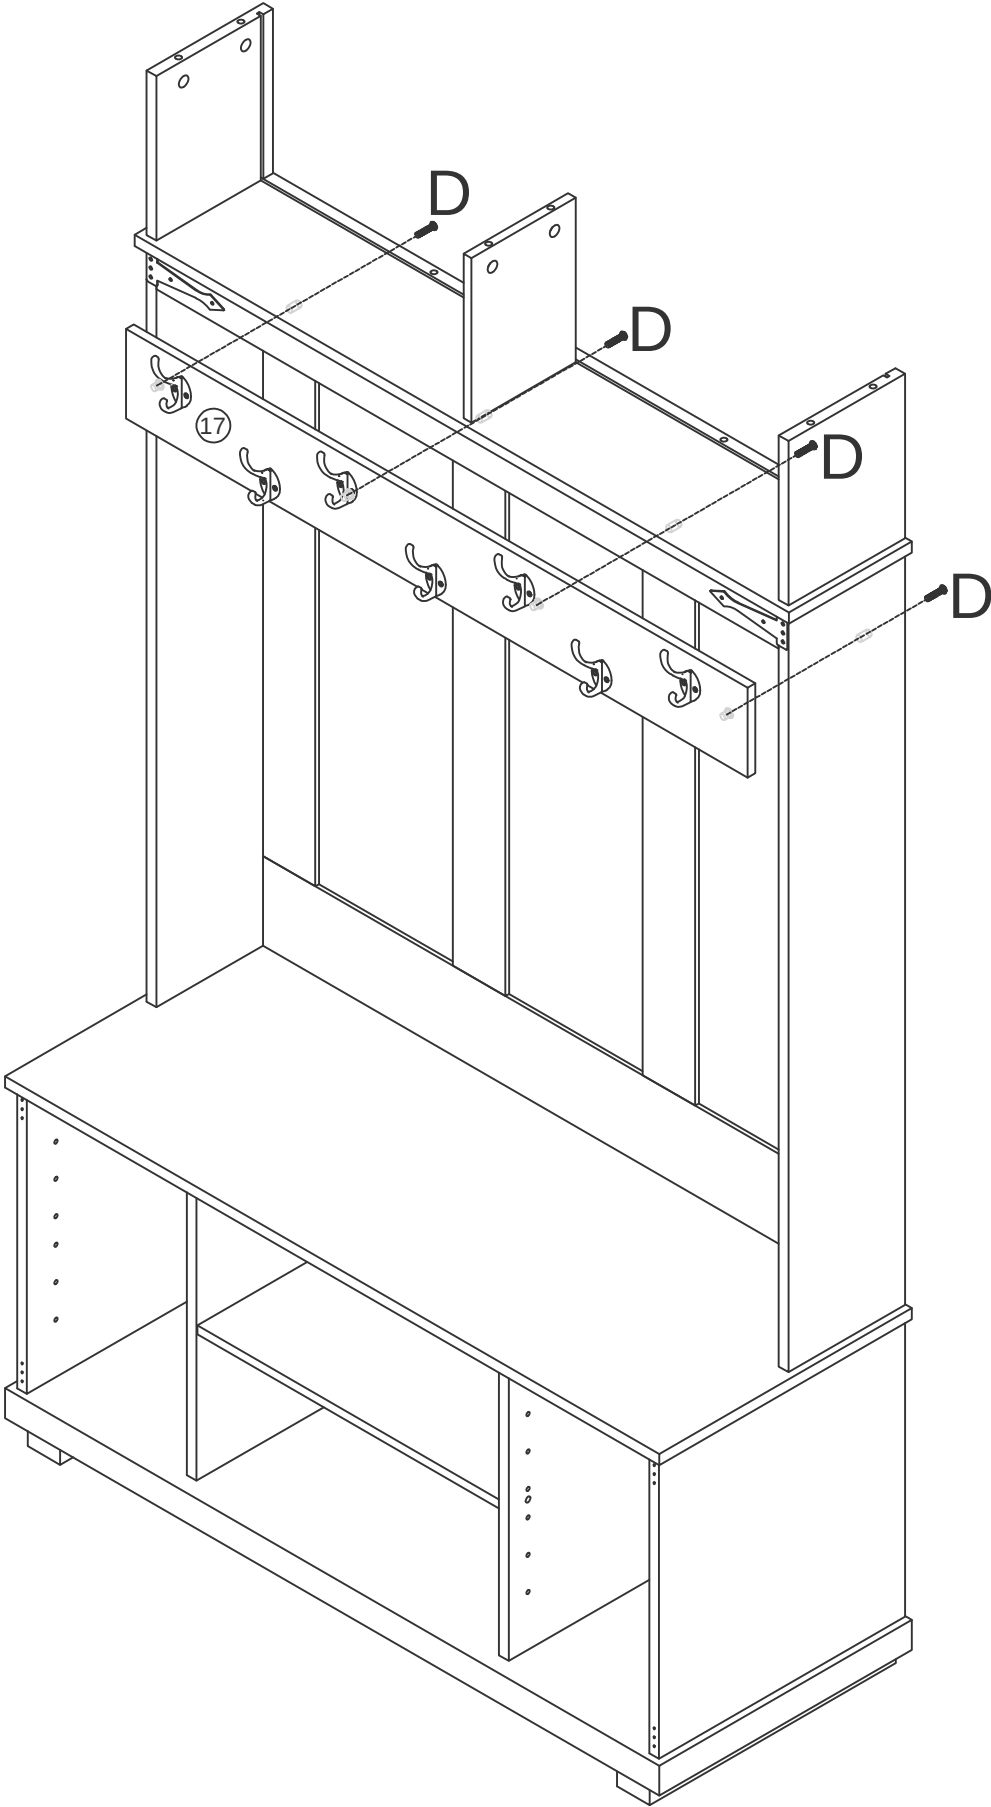


Step: 25



N







16

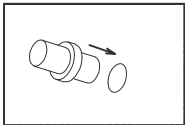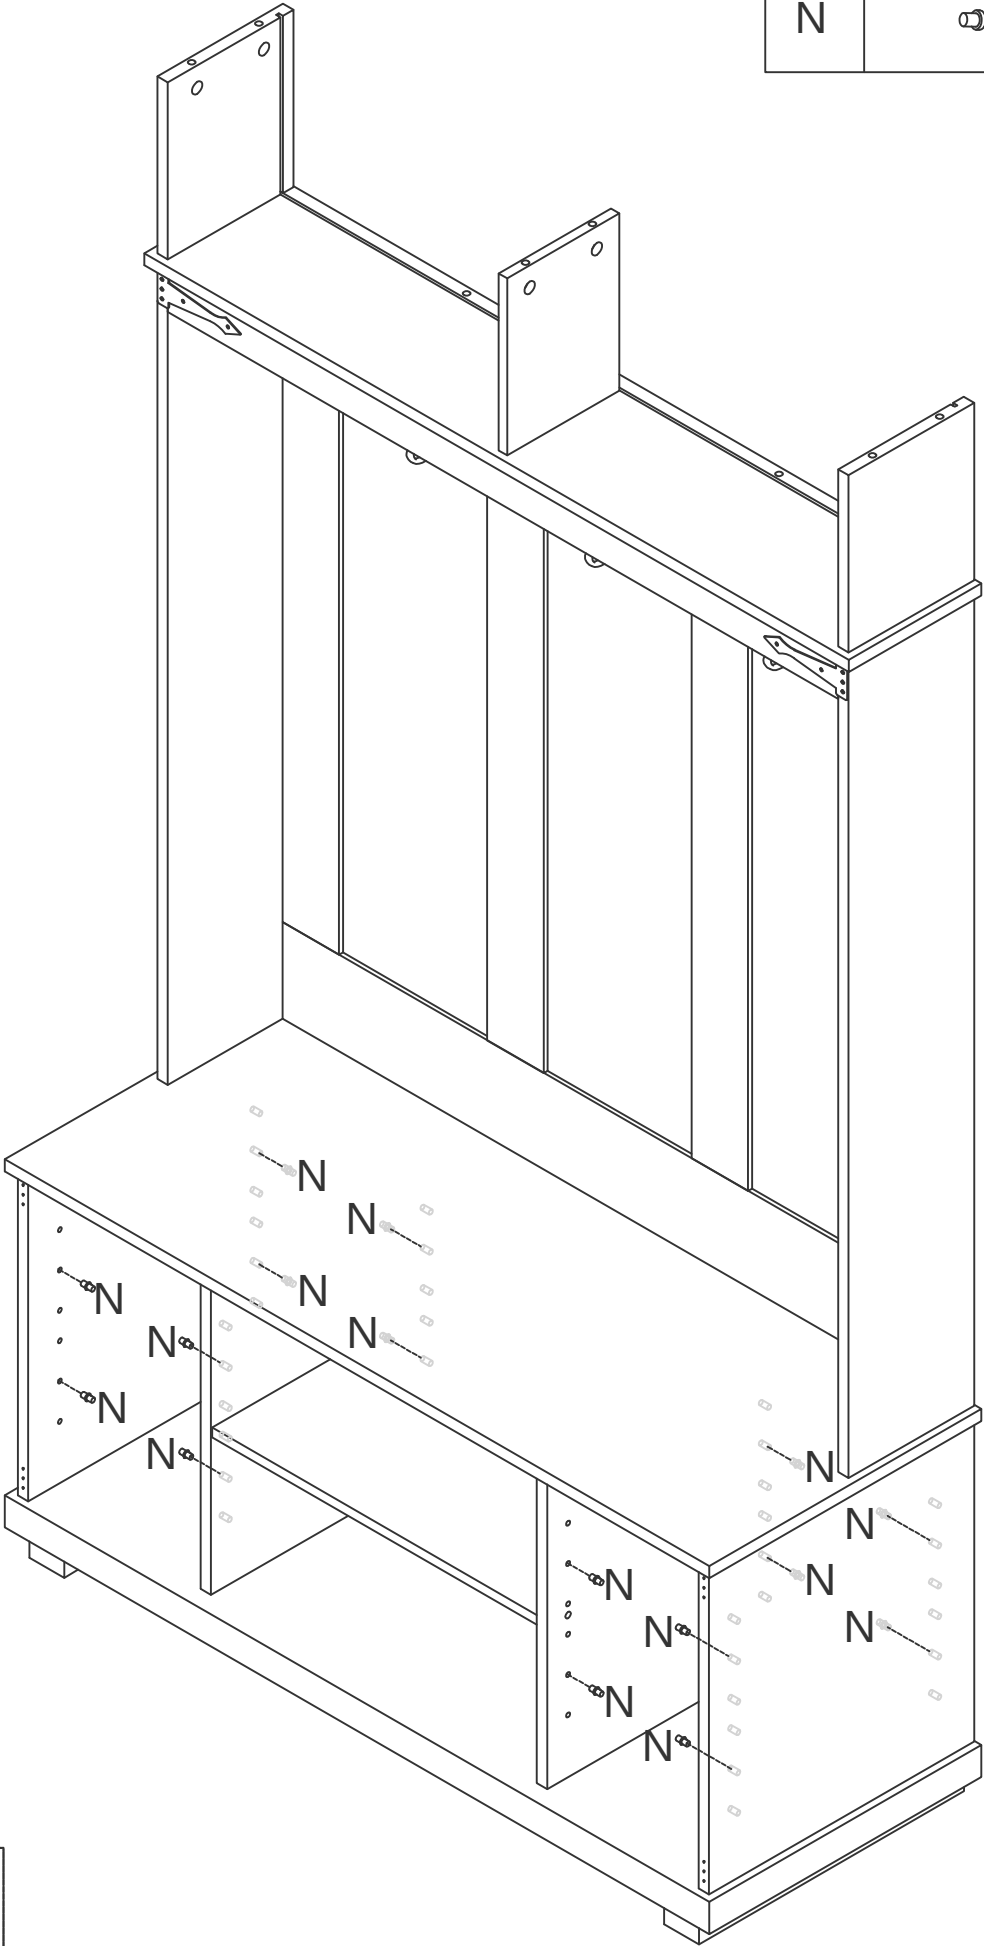

Step: 26

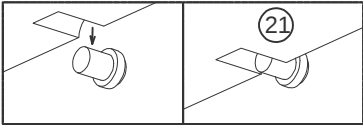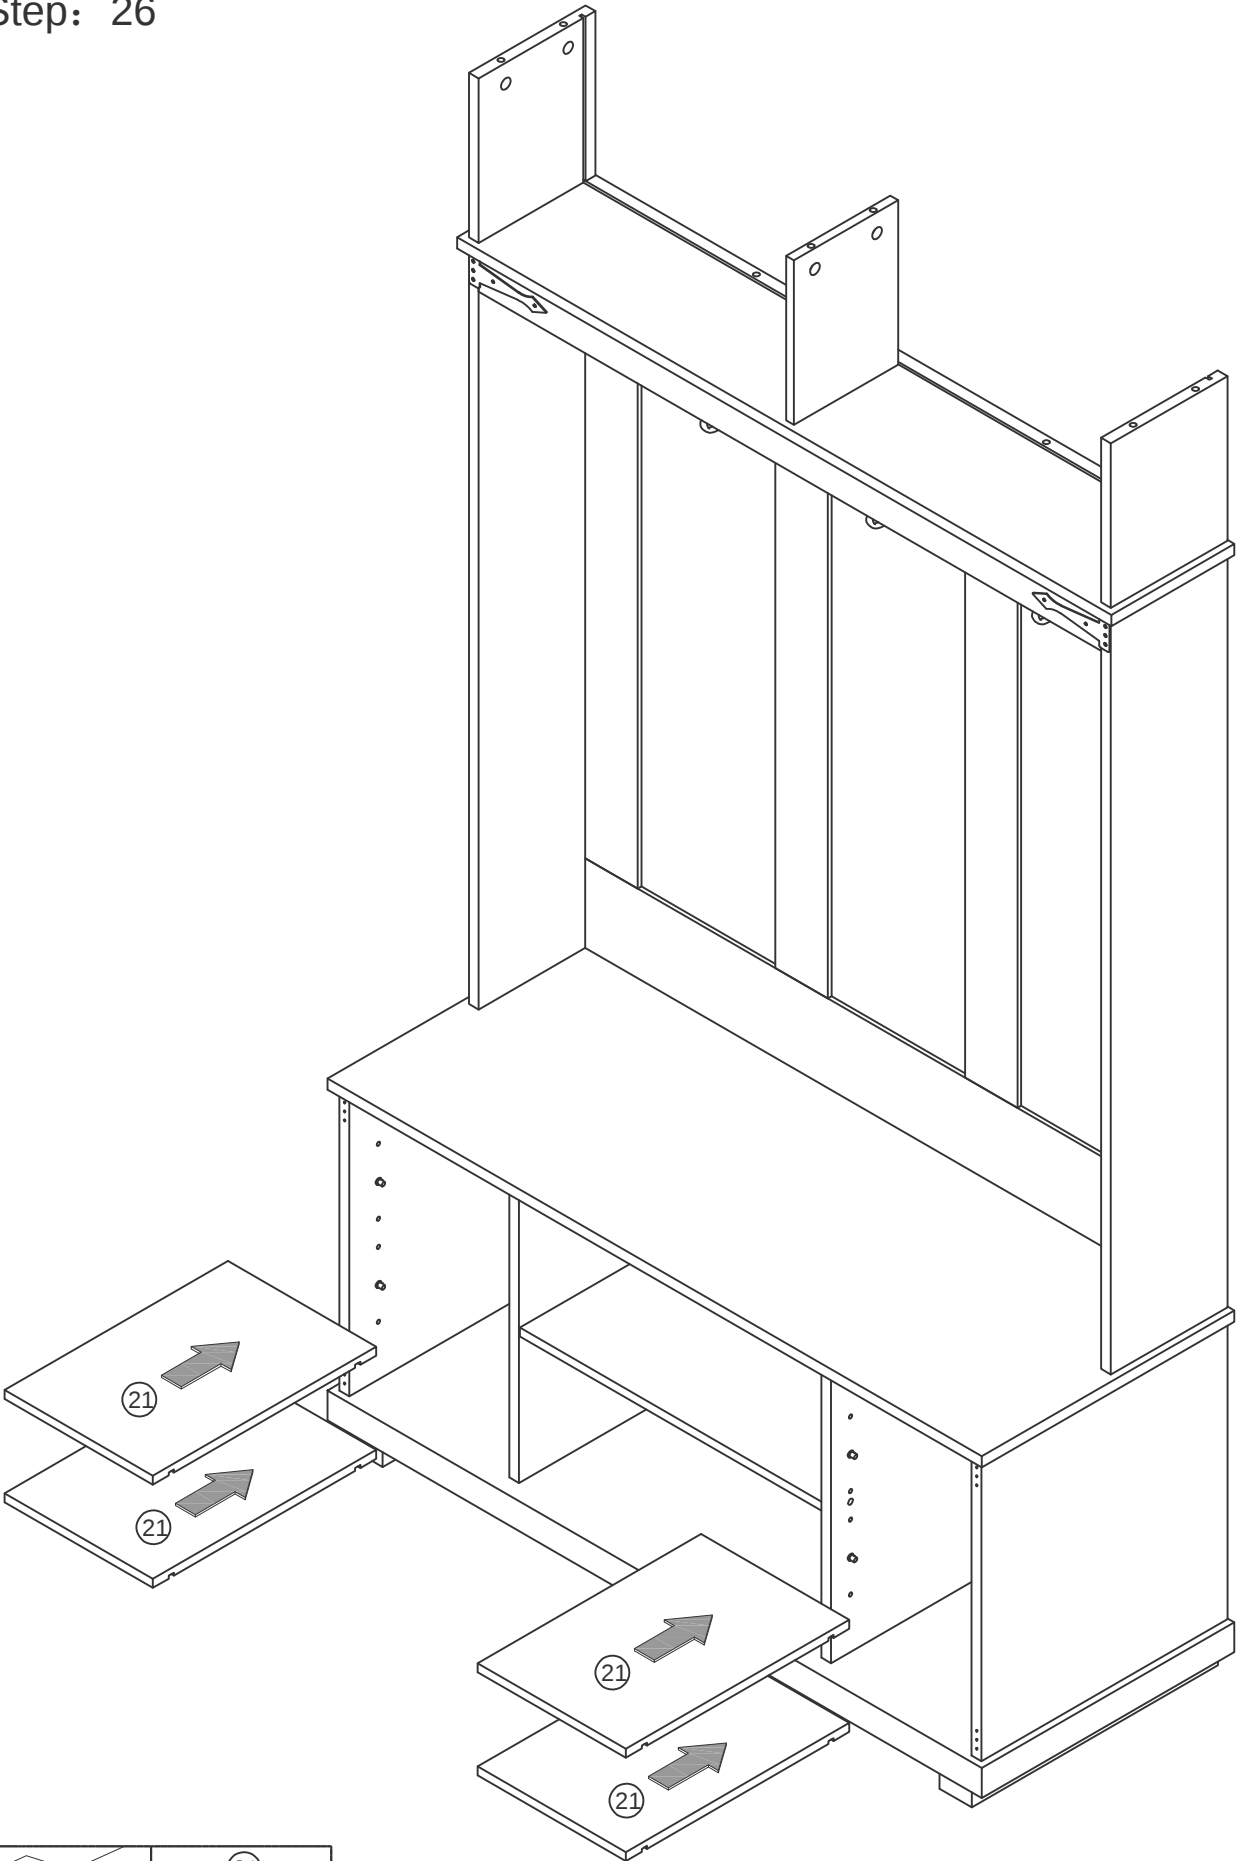


Step: 27

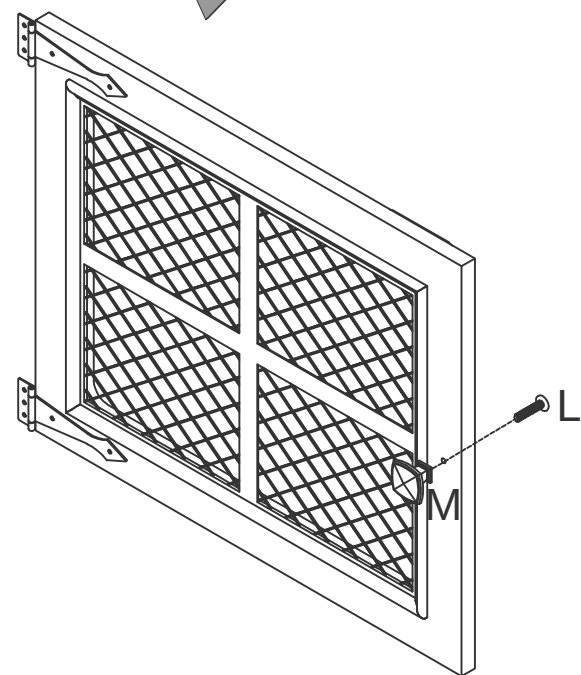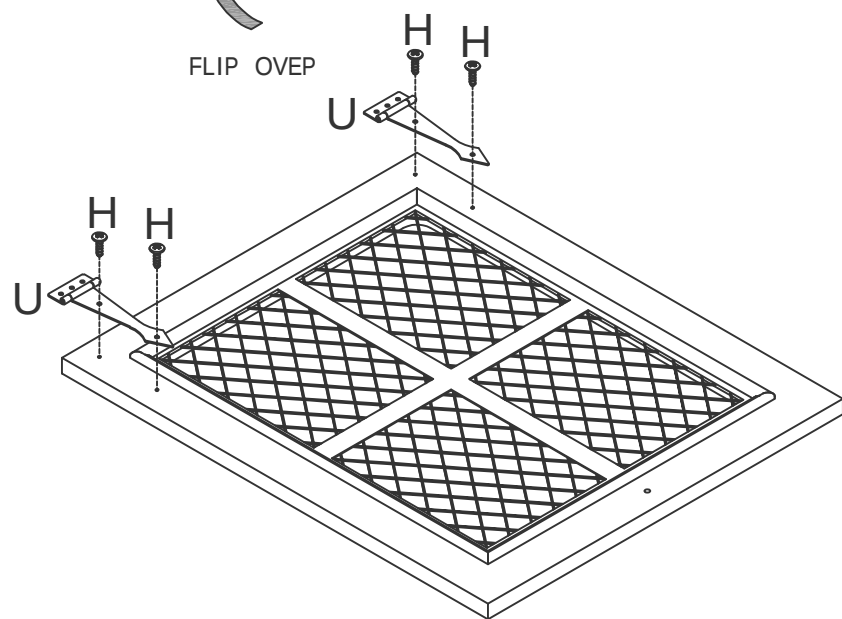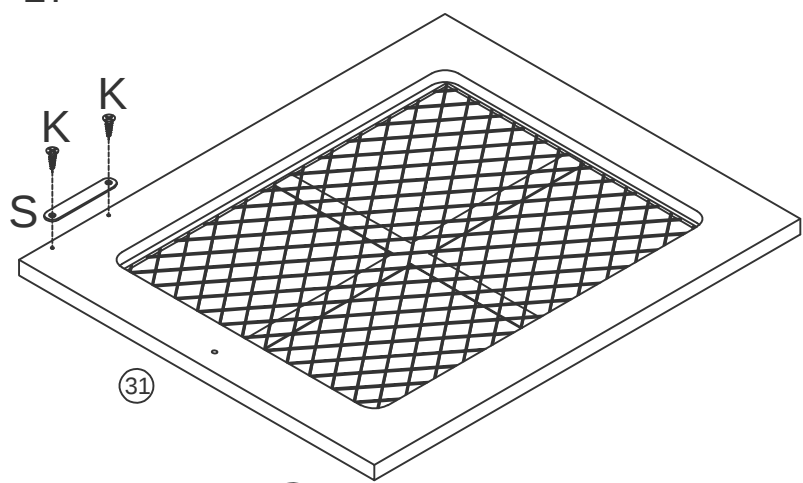


H	 M3.5X14	4
K	 M3.5X14	2
L	 M4X20	1
M	 111	1
S		1
U		2

Step: 28



H	 M3.5X14	6
---	--	---

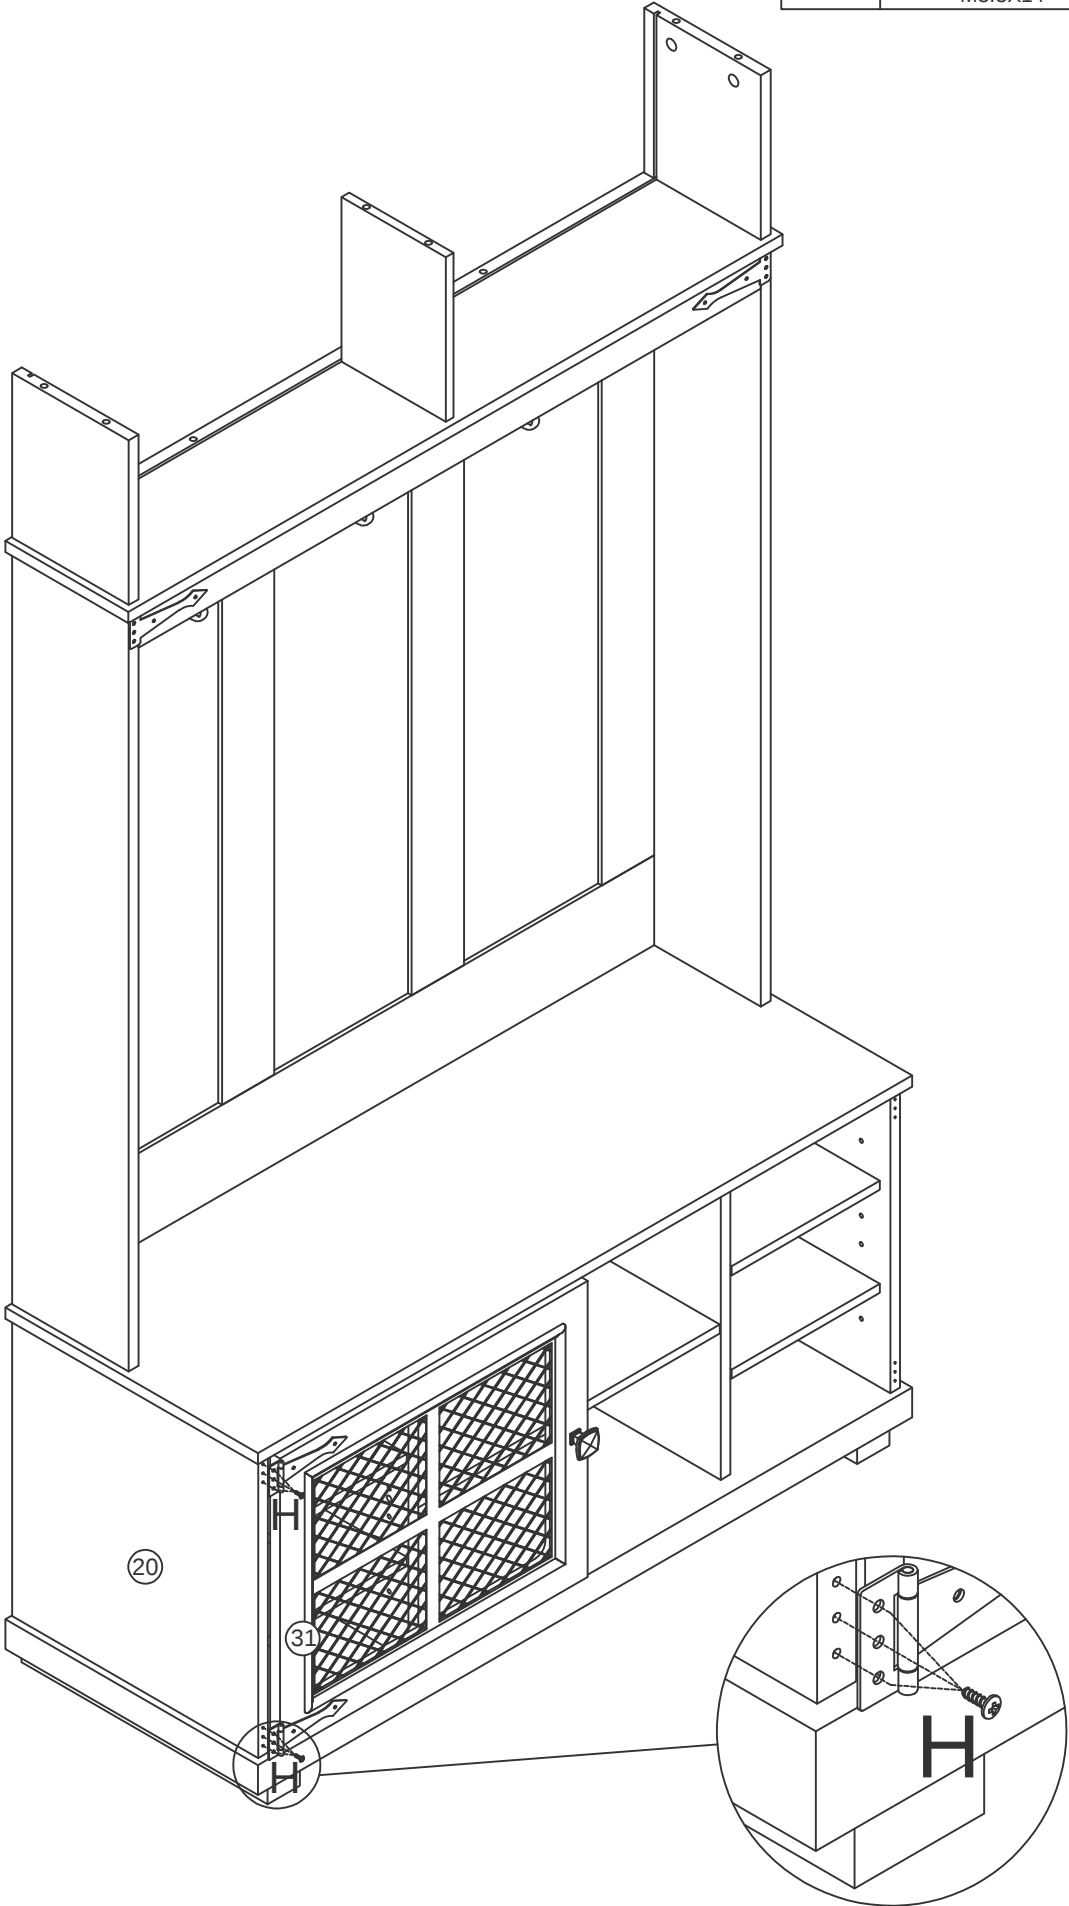

Step: 29

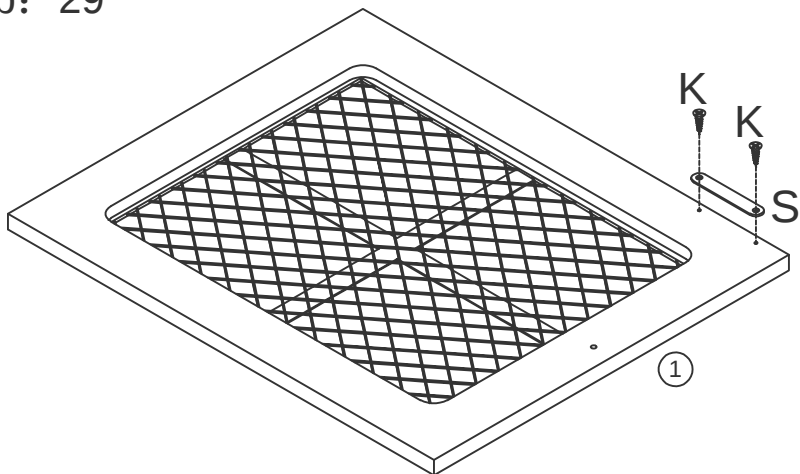


FLIP OVER

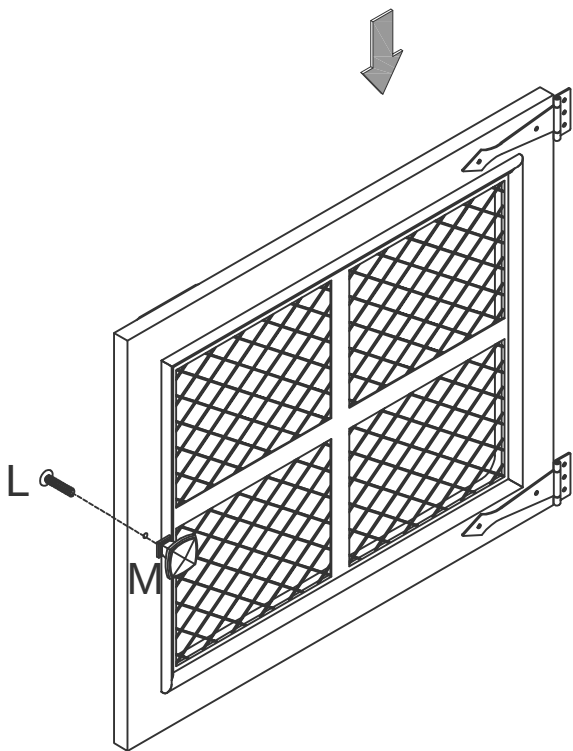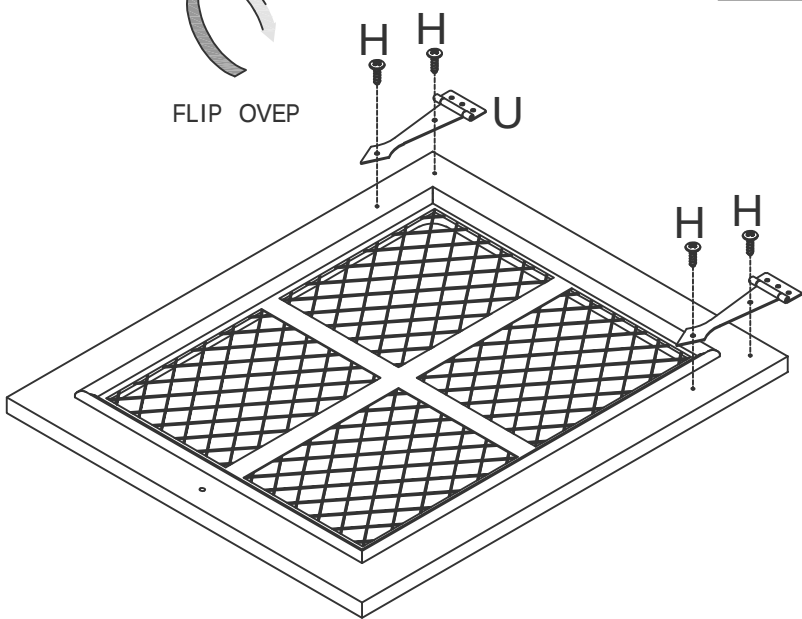


H	 M3.5X14	4
K	 M3.5X14	2
L	 M4X20	1
M	 111	1
S		1
U		2

Step: 30


H	 M3.5X14	6
---	--	---

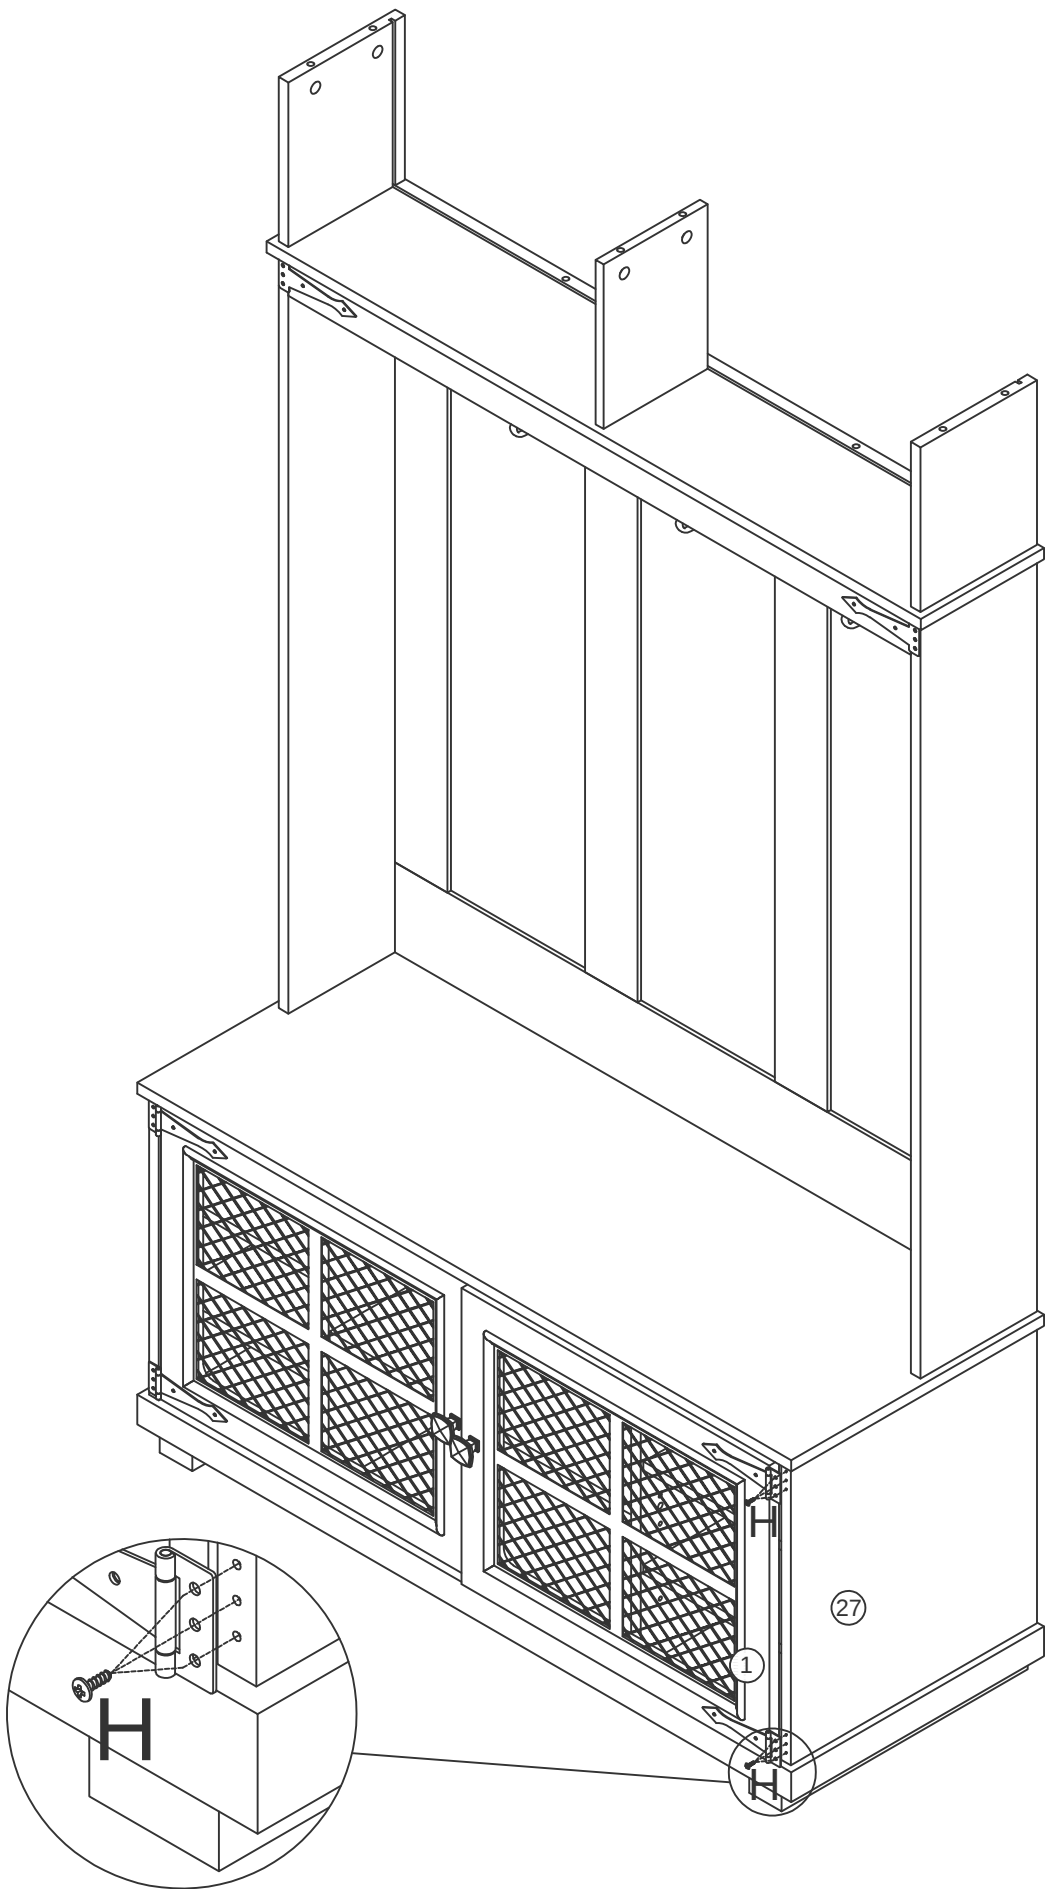

Step: 31

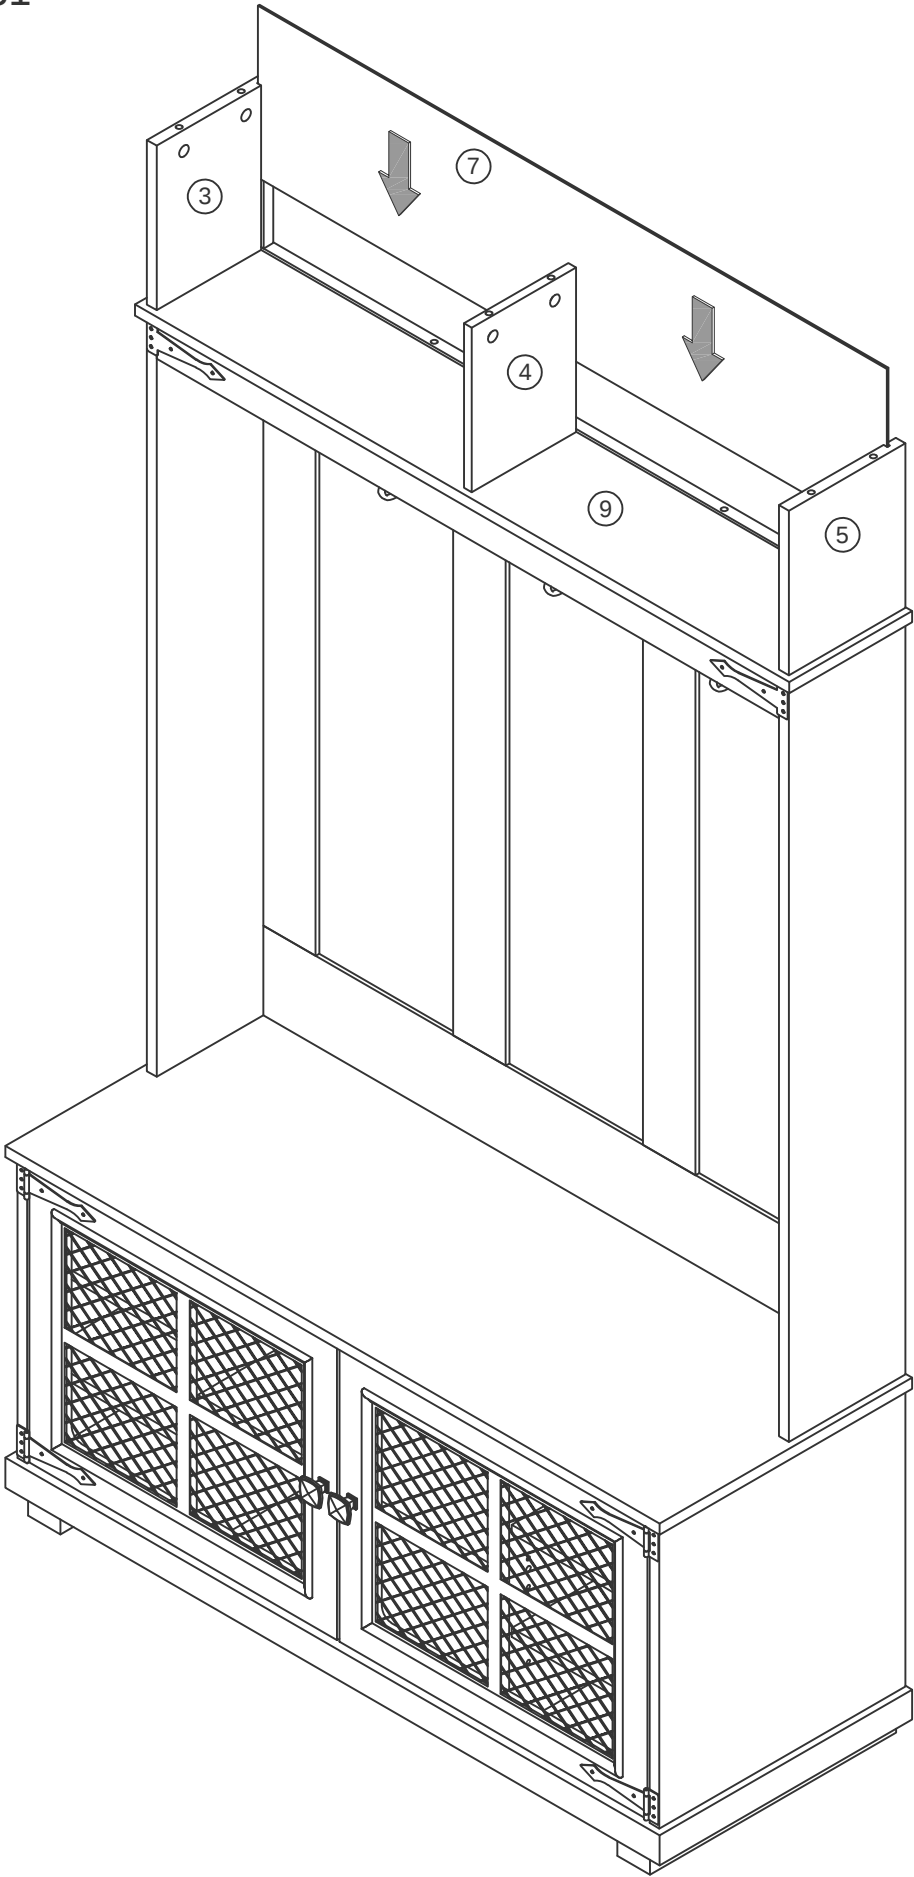




Step: 32

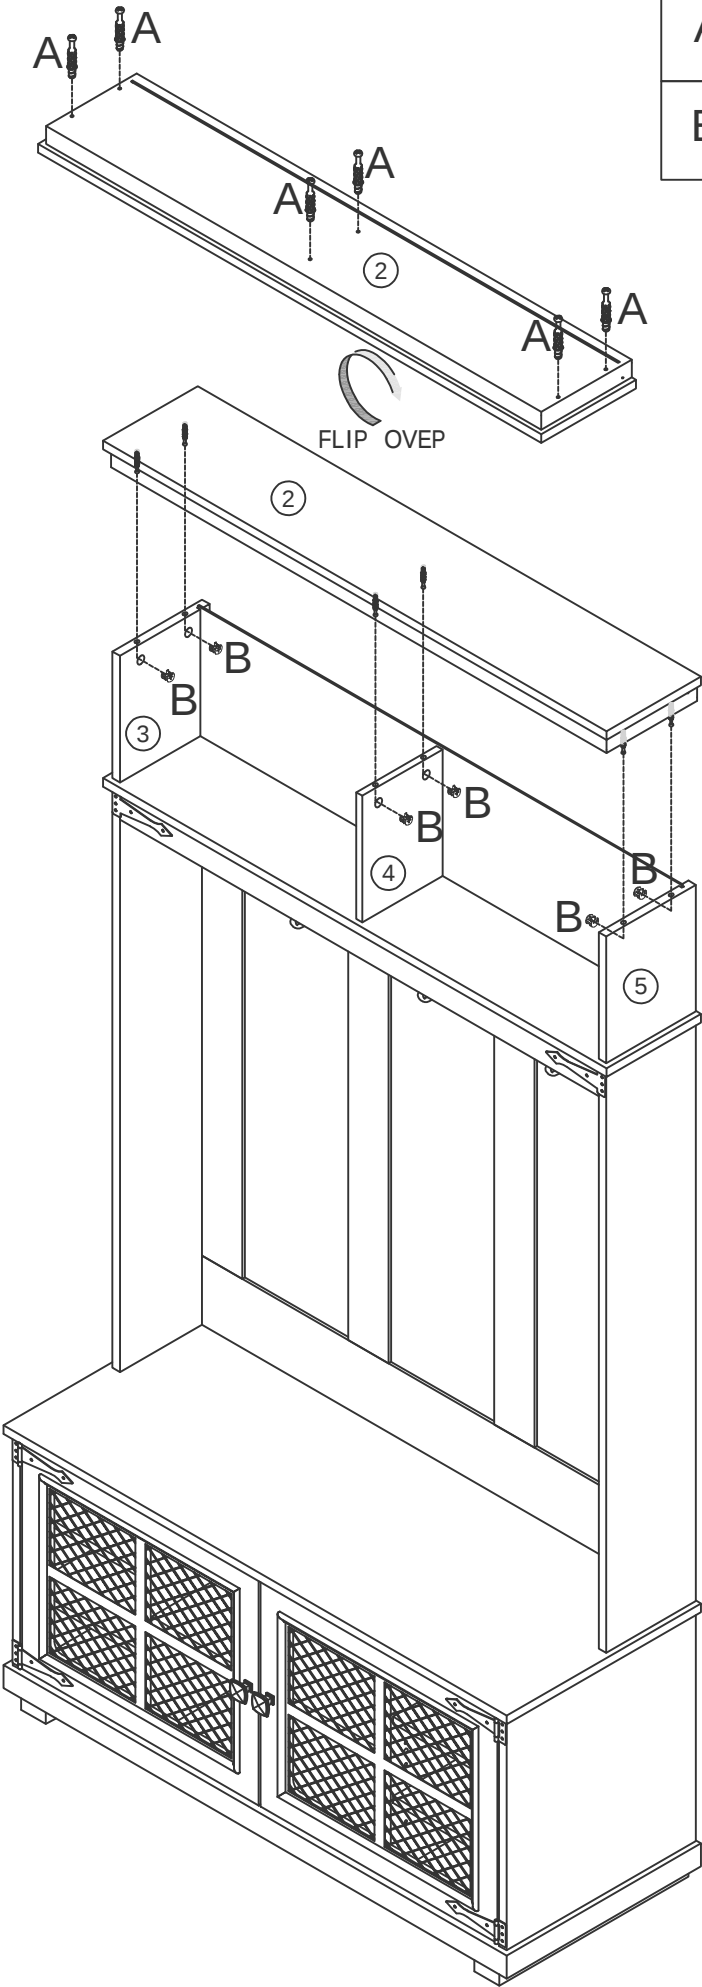


A	 M5X35	6
B	 Ø15X10	6

Step: 33

K	 M3.5X14	2
Q	 M3X16	28
R		28
W		2

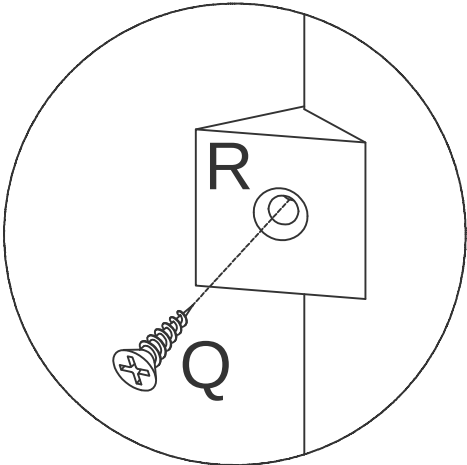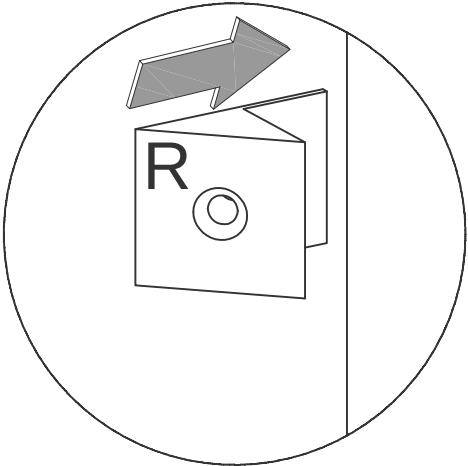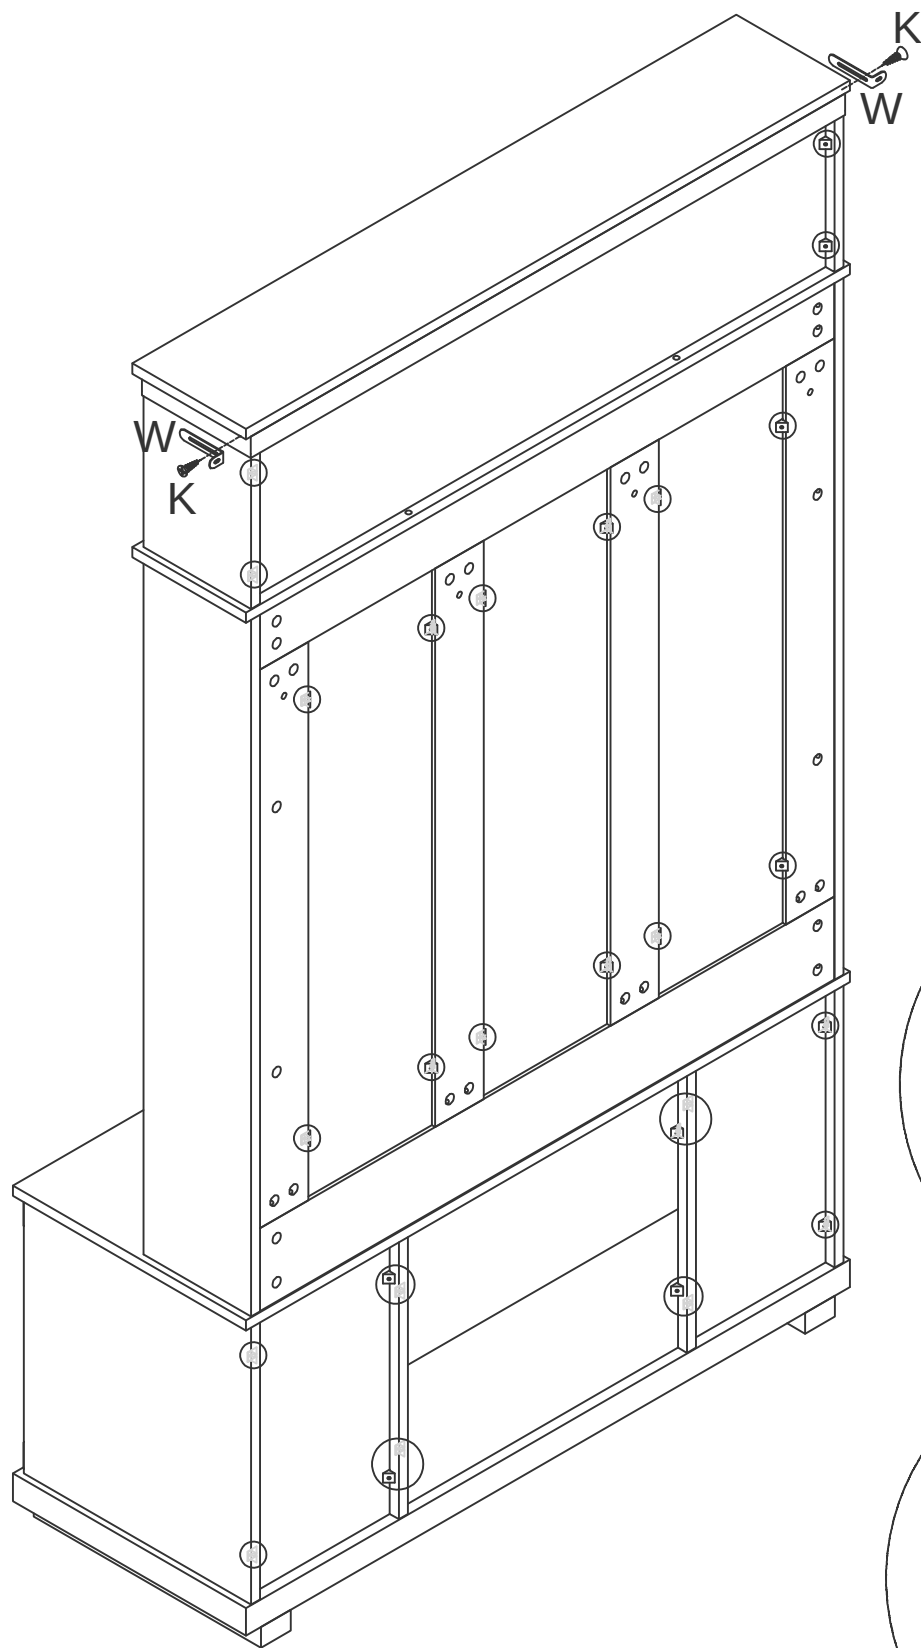

Step: 34

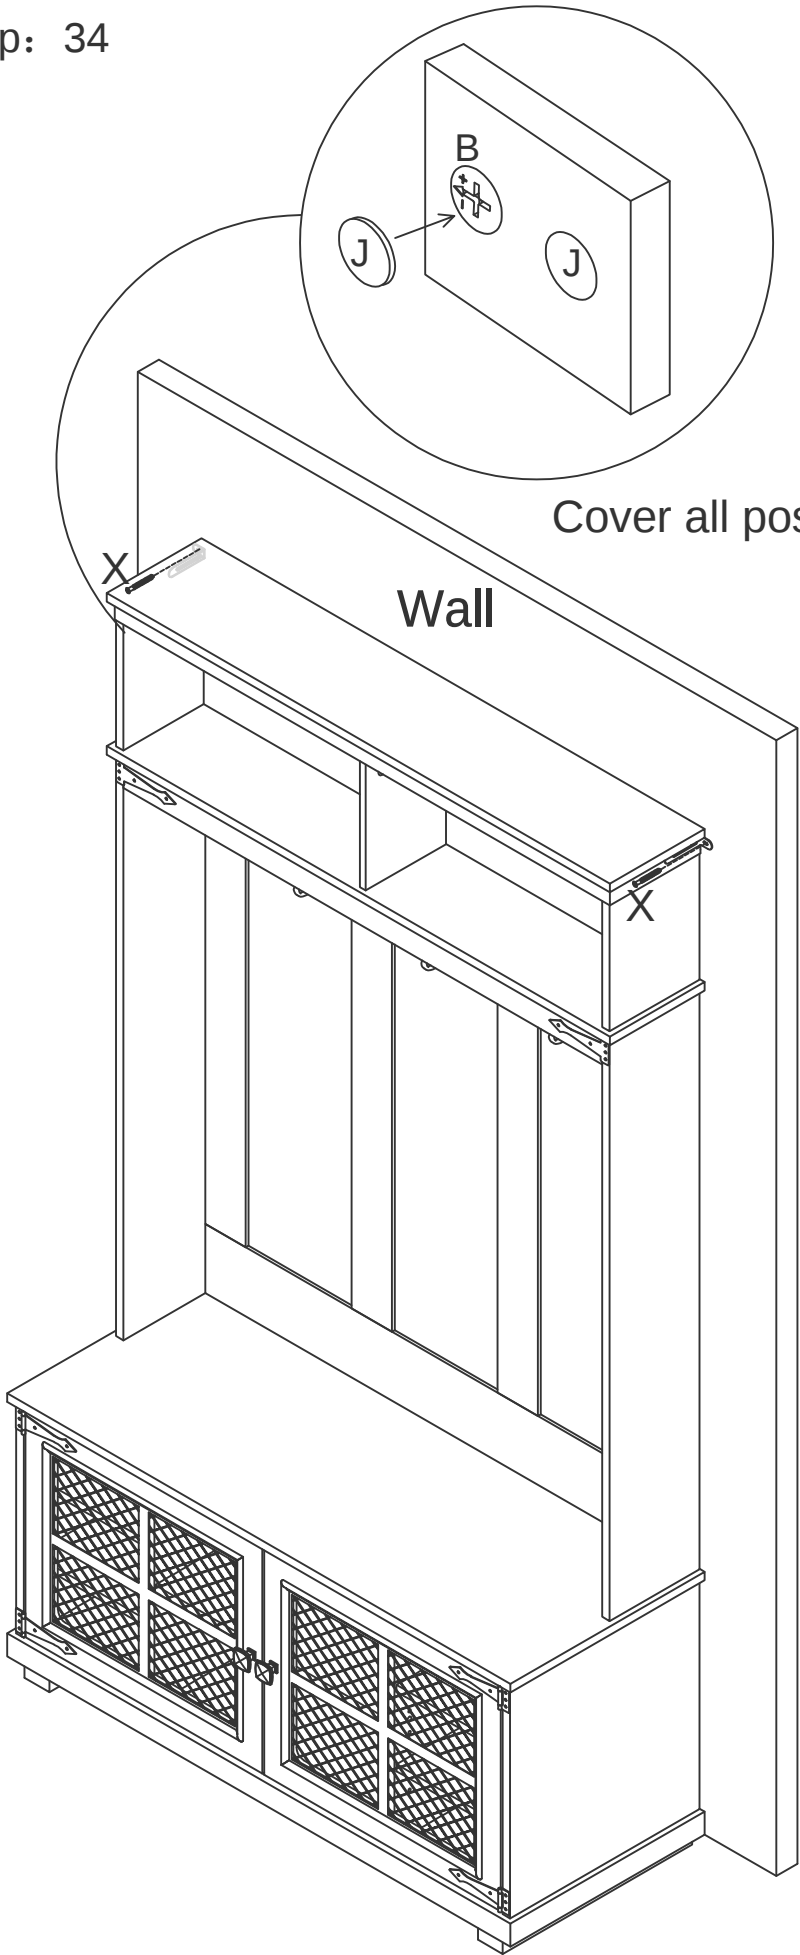

J	 Ø21X1	18
V	 Ø8X40	2
X	 M5X40	2

Cover all positive B parts with J parts.

