
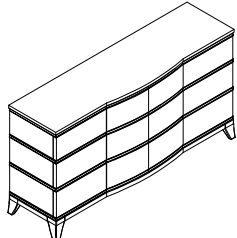
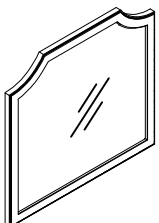





STANLEY

FURNITURE


ASSEMBLY INSTRUCTIONS

Item# 901-T1-006A,B - MIRROR


No.	PARTS NAME	Q.ty (pcs)
(A)		1
(B)		1
(C)		2

No.	LIST OF HARDWARE		Q.ty (pcs)
(1)		Bolts M6x40	8
(2)		Washers M6	8
(3)		Allen key 4	1


STEP 1

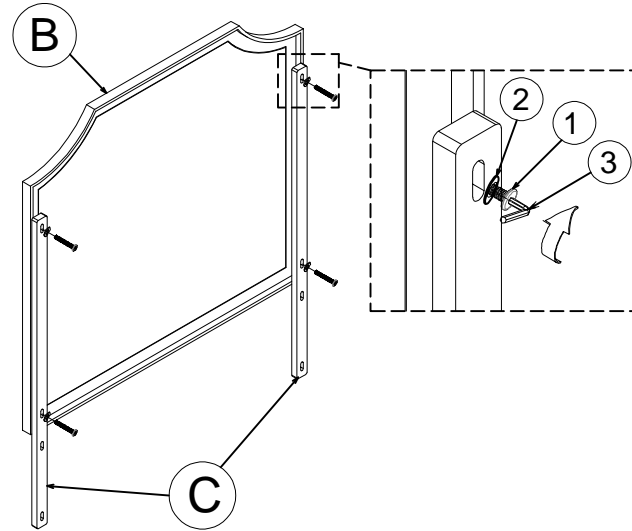

STEP 2

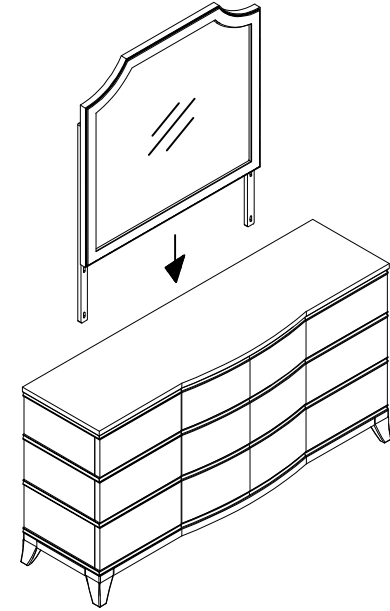

STEP 3

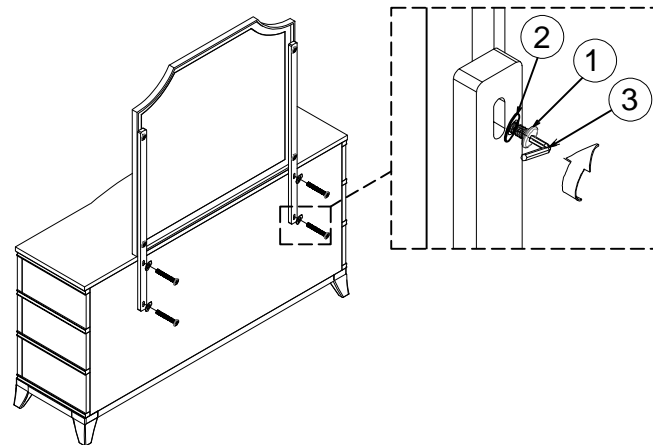

STEP 4

