

INSTRUCTION MANUAL

CABINET

1042



wonderful future start from the house

Remember

Following and properly storing this manual is essential for successful assembly and long-term maintenance of the product.

We recommend the following inspection

- **This product is made from natural fir wood. If it smells, please ventilate it out of door for 10 days before using it.**
- **Check all parts are present.**
- **Fasten all screws loosely during initial assembly. Only fully tighten them after the product is completely assembled. Be careful not to over-tighten, as excessive force can crack the wood.**
- **For larger screws, pre-drilled pilot holes are provided on only one side of the panel. For some small screws, no pilot holes are provided. Specific instructions are given in each step to ensure a strong, secure build. All you need is an electric screwdriver. A manual one will work but requires more effort.**
- **In rare cases, if the product is first assembled in a humid environment, continuously exposed to damp or rainy weather, and then subjected to intense sunlight, mold spots may appear. These can be cleaned using a mold remover or a baking soda solution.**
- **Strongly recommended that you treat the product with a clear timber preserver, and re-treat once a year to extend the life of your product.**
- **Reconfirm that all bolts, screws, and knobs are secure every 180 days.**
- **Keep away from open flames and flammable or combustible chemicals.**
- **Use on a flat ground.**
- **In cold weather, a harmless white or translucent substance may form on fir wood. This is a natural occurrence where resins and waxes within the wood crystallize at low tempera - tures. To clean: ① Gently scrape residue with a soft brush or plastic scraper. ② Wipe with a small amount of turpentine or mild neutral soap solution. Alternatively, apply a diluted white vinegar solution (1 part vinegar to 3 parts water) as a compress. After softening for several minutes, wipe clean. ③ Dry thoroughly with a clean cloth and ventilate well to pre- vent recurrence.**
- **If you have any questions during installation, please do not hesitate to mail us by aftersales365@outlook.com.**


TOOLS REQUIRED



PHILLIPS SCREWDRIVER



SMALL WRENCH

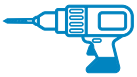

ELECTRIC DRILL (RECOMMENDED)



2 PERSON ASSEMBLY




UP TO 60 MINS. ASSEMBLY

- **This product is recommended to be assembled by 2 adults.**
- **We recommend using an electric screwdriver for ease, but a manual one will work - you will just need a little more elbow grease!**

Hardware Include

A


M3.0*25MM SCREW

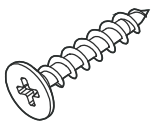

12PCS+1SPARE

B


M3.5*50MM SCREW

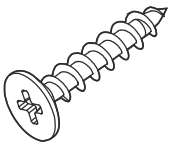

18PCS+1SPARE

C


M3.5*35MM SCREW

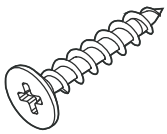

4PCS+1SPARE

D


M3.0*18MM SCREW

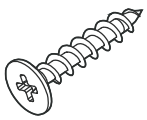

8PCS+1SPARE

E


REINFORCEMENT PLATE



2PCS

F


LATCH



1PC

G

HANDLE

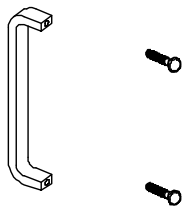

1PC

Parts Include

1


TOP PANEL



1PC

2


LEFT FRONT PANEL



1PC

3

RIGHT FRONT PANEL



1PC

4


TOP FRAME



1PC

5


BOTTOM FRAME



1PC

6


UPPER BACK PANEL

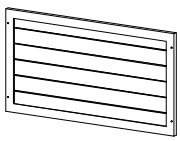

1PC

7


LOWER BACK PANEL

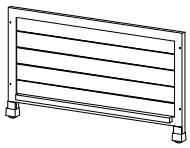

1PC

8


LEFT PANEL

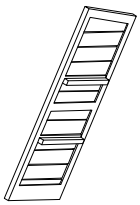

1PC

9


RIGHT PANEL

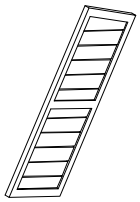

1PC

10


SHELF



2PCS

11

BOTTOM PANEL




1PC

Safety Note: Keep all small hardware away from children during assembly. Do not stand or climb on the cabinet.


STEP 1

Fasten the left and right front panel (Part 2 & Part 3), the top and bottom frame (Part 4 & Part 5) together with 4 x B screws.

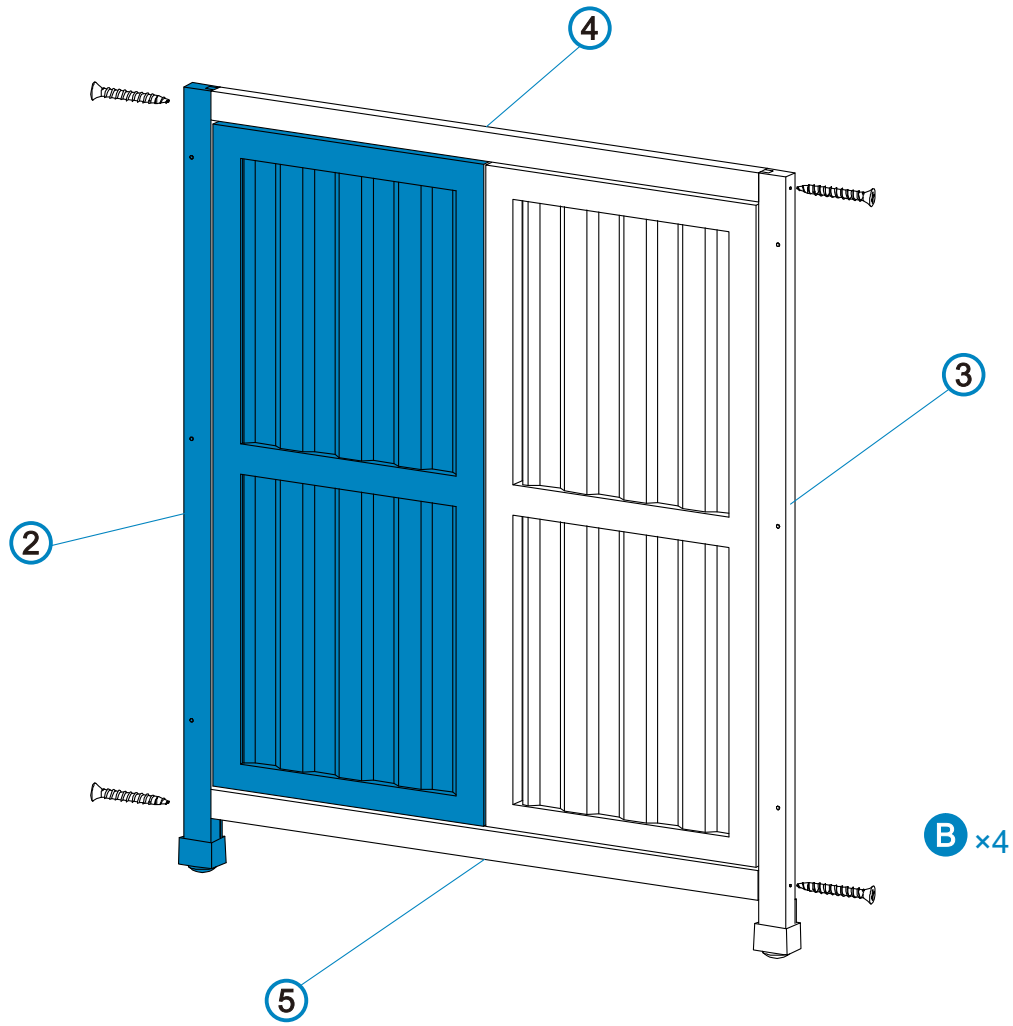


STEP 2

Attach the left and right panel (Part 8 & Part 9) to the assembly completed in Step 1 by 3 x B screws on each side (a total of 6 x B screws).

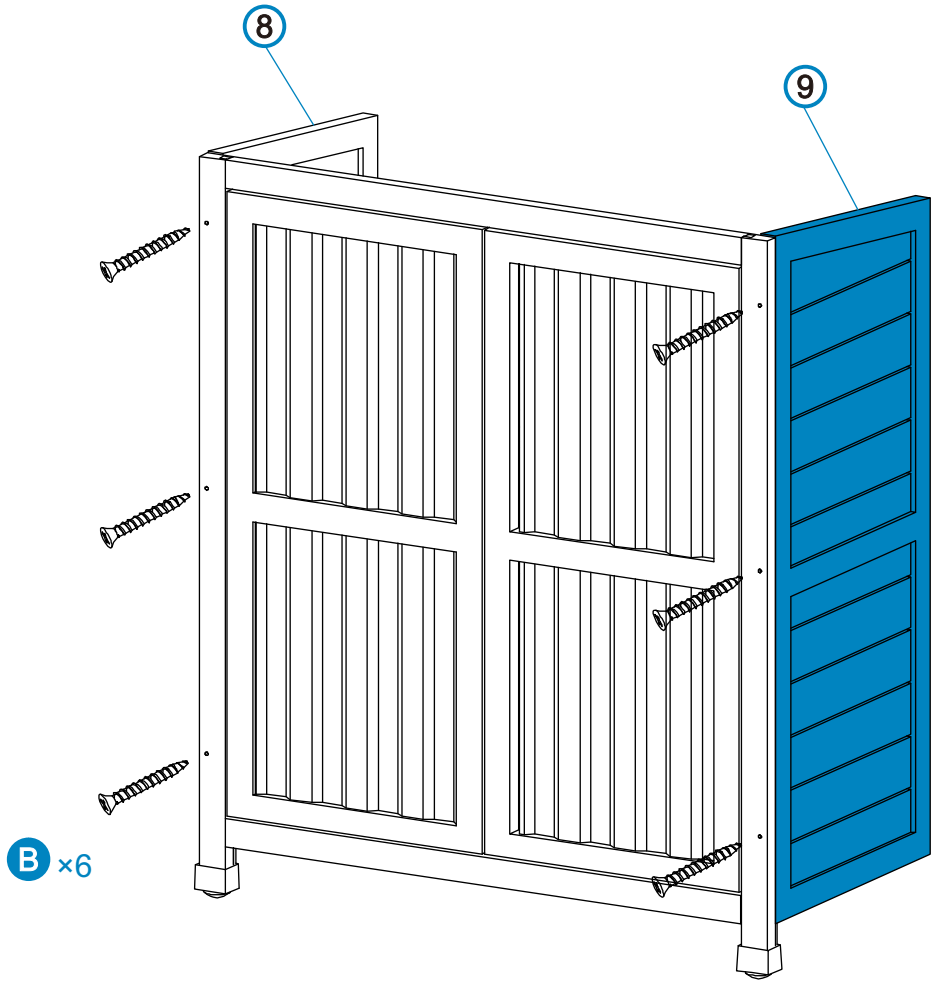


STEP 3

Attach the upper and lower back panel (Part 6 & Part 7) to the assembly completed in Step 2 by 4 x B screws on each side (a total of 8 x B screws). Secure 2 x reinforcement plates (Part E) at the joint of the upper back panel (Part 6) and lower back panel (Part 7) with 4 x D screws, 2 screws for each.

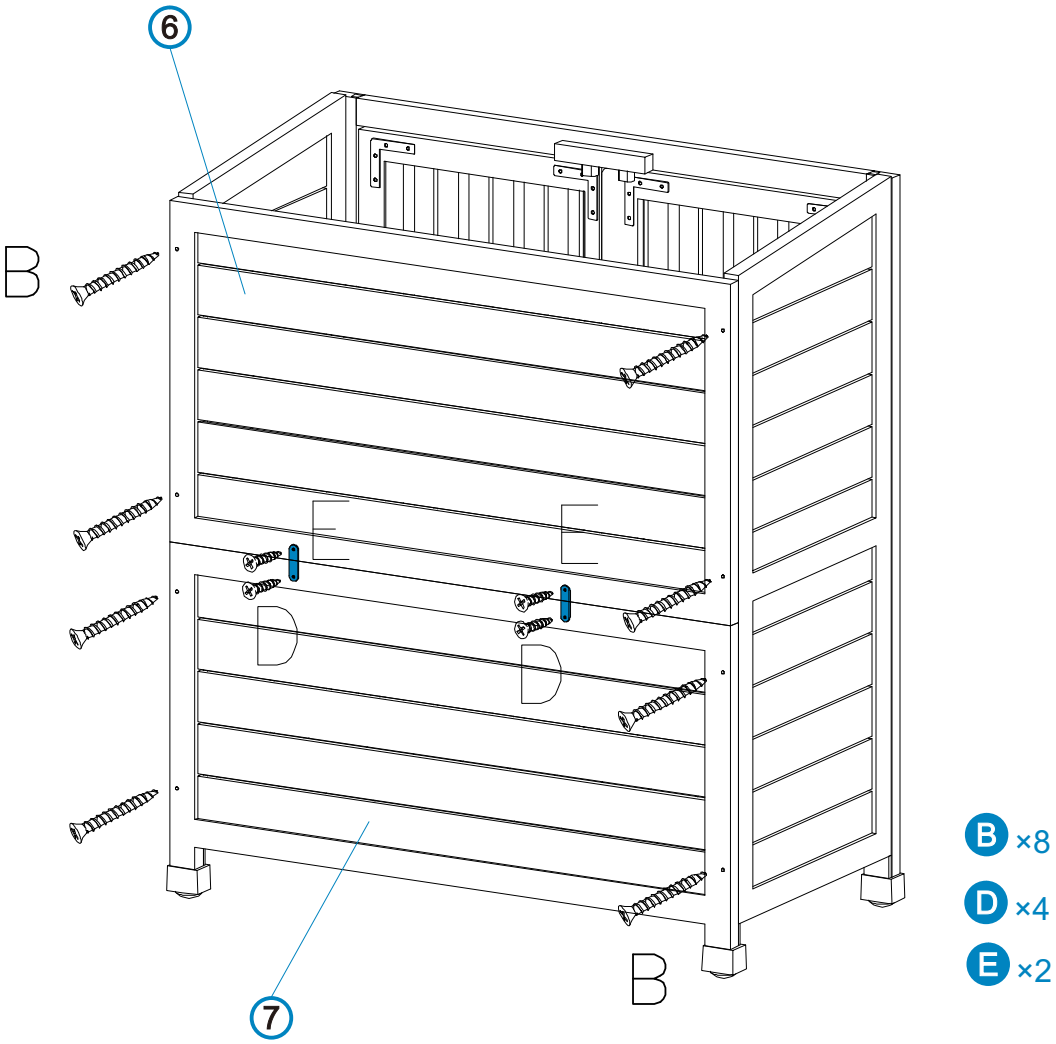


STEP 4

Secure the top panel (Part 1) with 4 x C screws, 2 screws on each side.

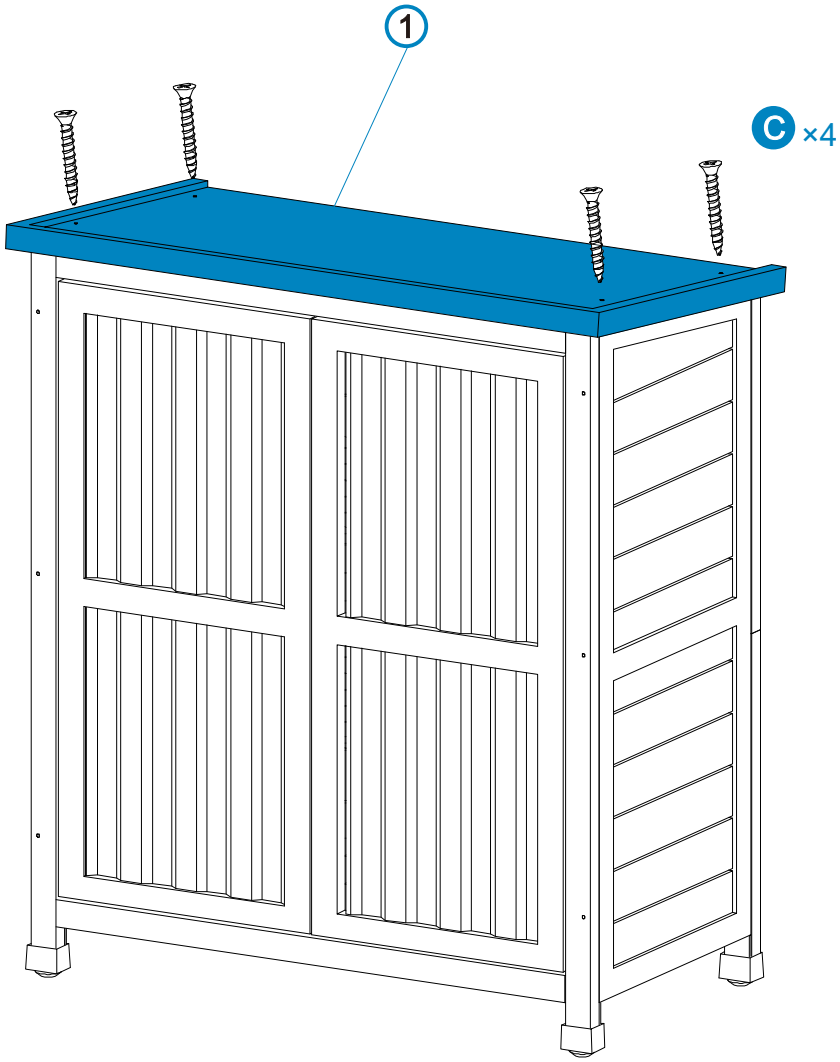


STEP 5

Open the cabinet doors. Insert the bottom panel (Part 11) into the cabinet, then place 2 x shelves (Part 10) onto the shelf supports.

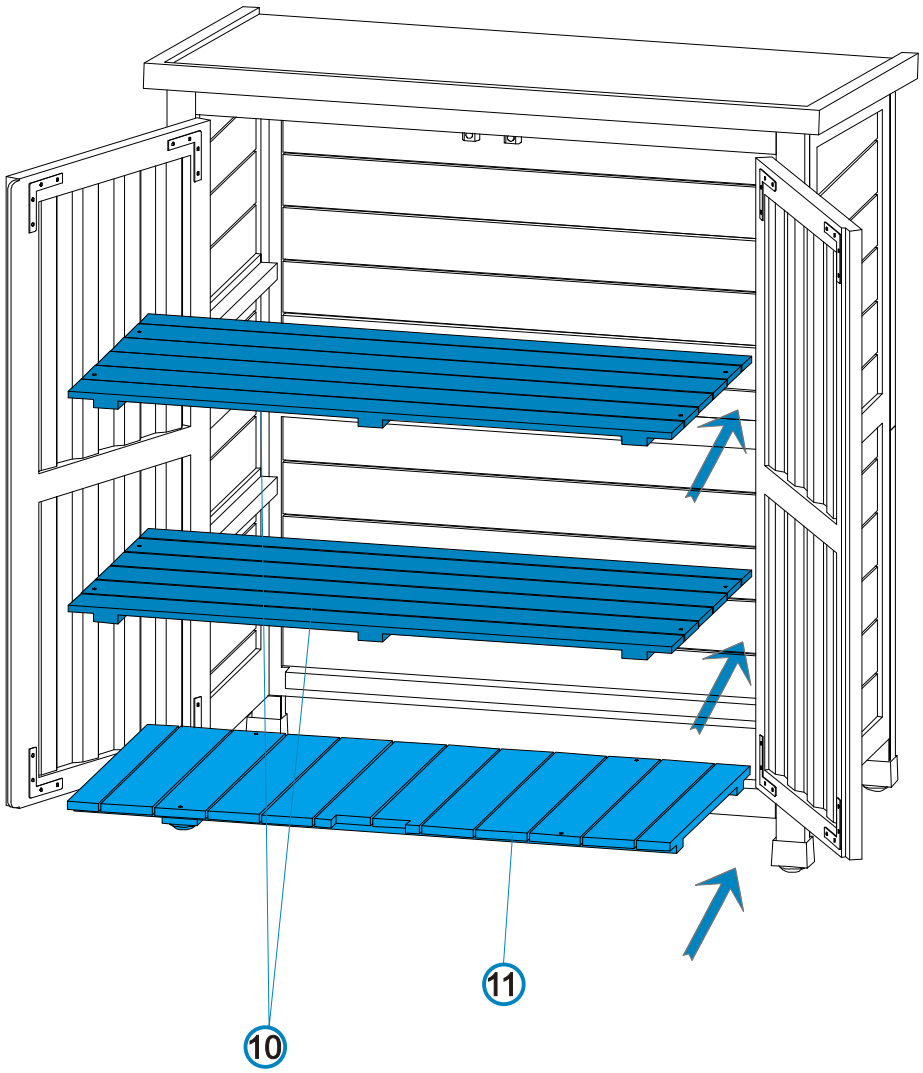

STEP 6


Secure the bottom panel (Part 11) with 4 x A screws, 2 screws on each side.
Secure 2 x shelves (Part 10) with 8 x A screws, 4 screws per shelf.

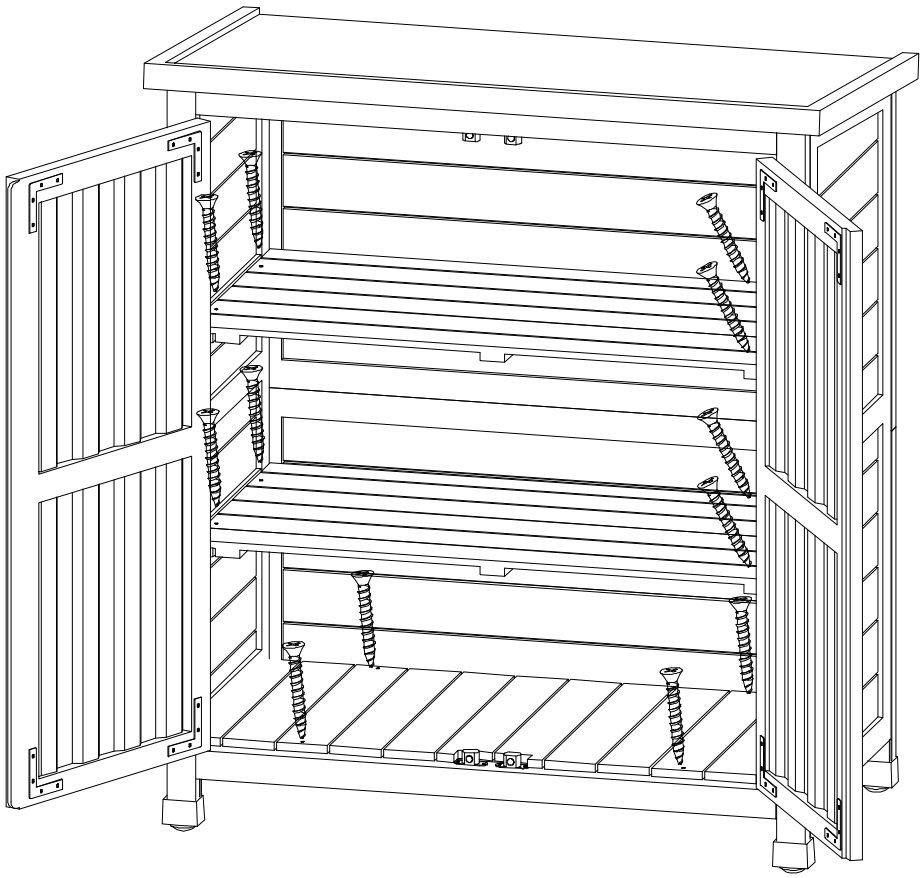

A ×12

STEP 7

Secure the latch (Part F) to the front panel with 4 x D screws.
Mount the handle (Part G), one on the left and the other on the right from the inside of panel using the included screws.

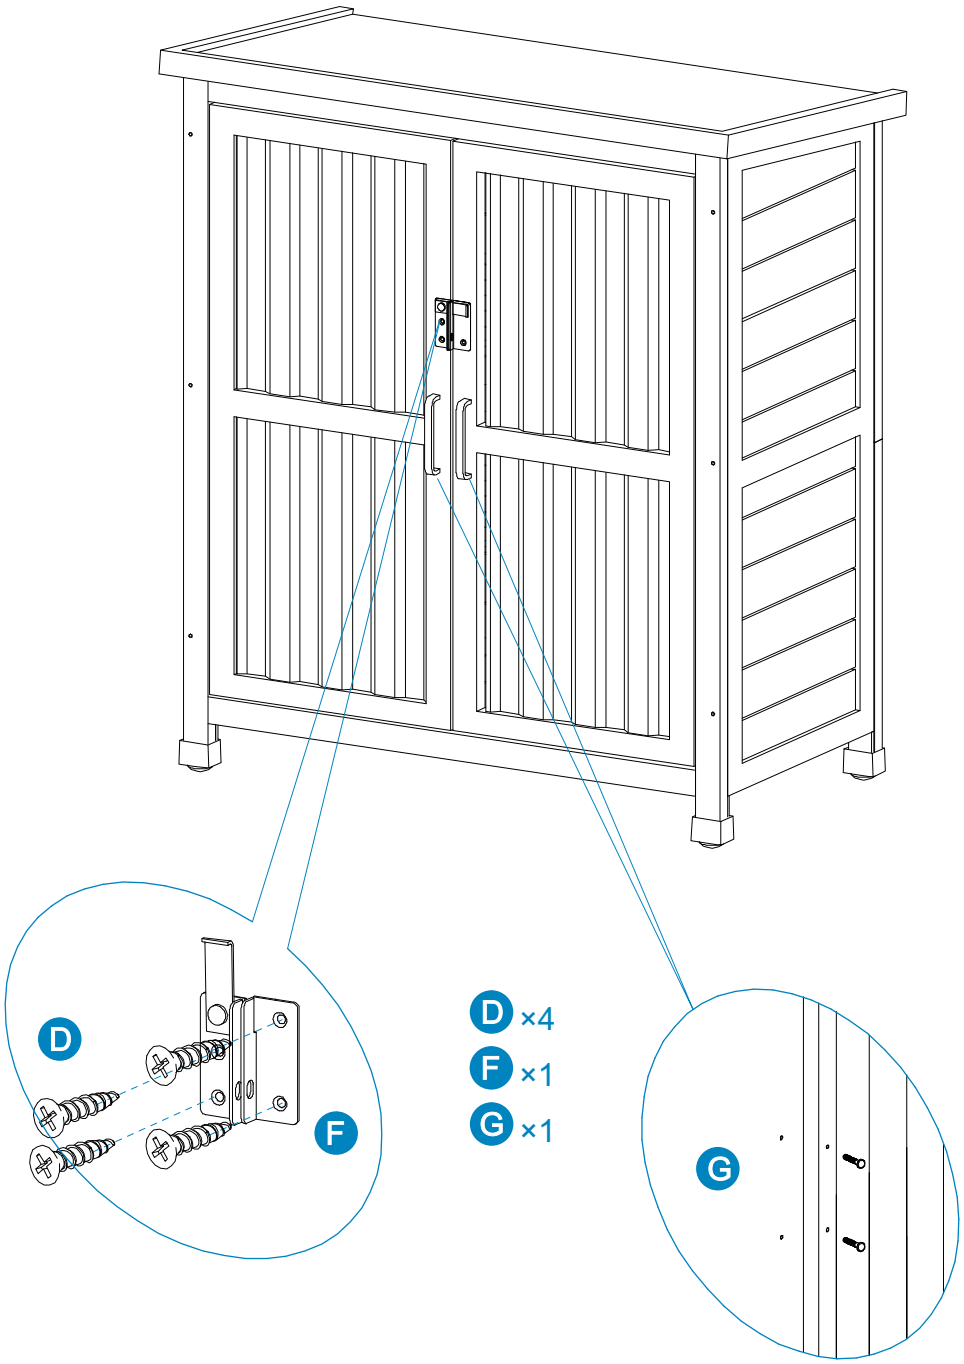

Installation Complete



CONGRATULATIONS
YOU ARE DONE!

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt. All returned items for non-personal reasons will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. The refund will be returned to the original payment method. If you have any questions about quality issue, please message us by **aftersales365@outlook.com.** Even if your order is fulfilled by Amazon, you can still contact us through the order or email **aftersales365@outlook.com.**
Once confirmed, we will arrange a best solution for you and make you satisfaction.



WARNING
Manufacturer and seller expressly disclaim any and all liability for personal injury,property damage or loss,whether direct,indirect,or incidental,resulting from the incorrect attachment, improper use,inadequate miantenance,or neglect of this product.