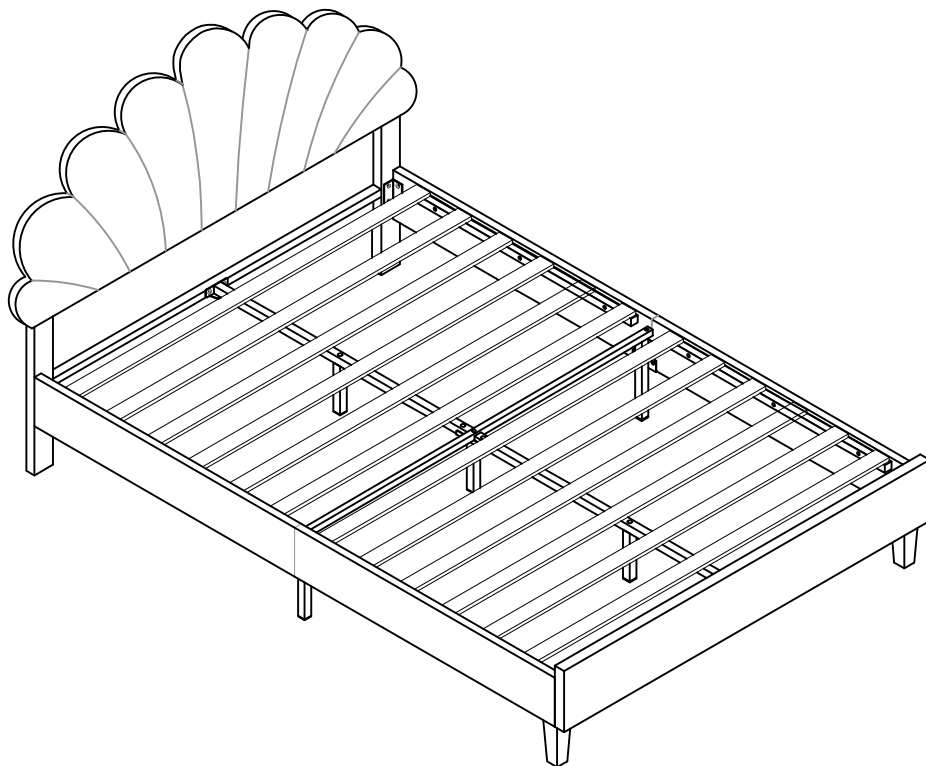
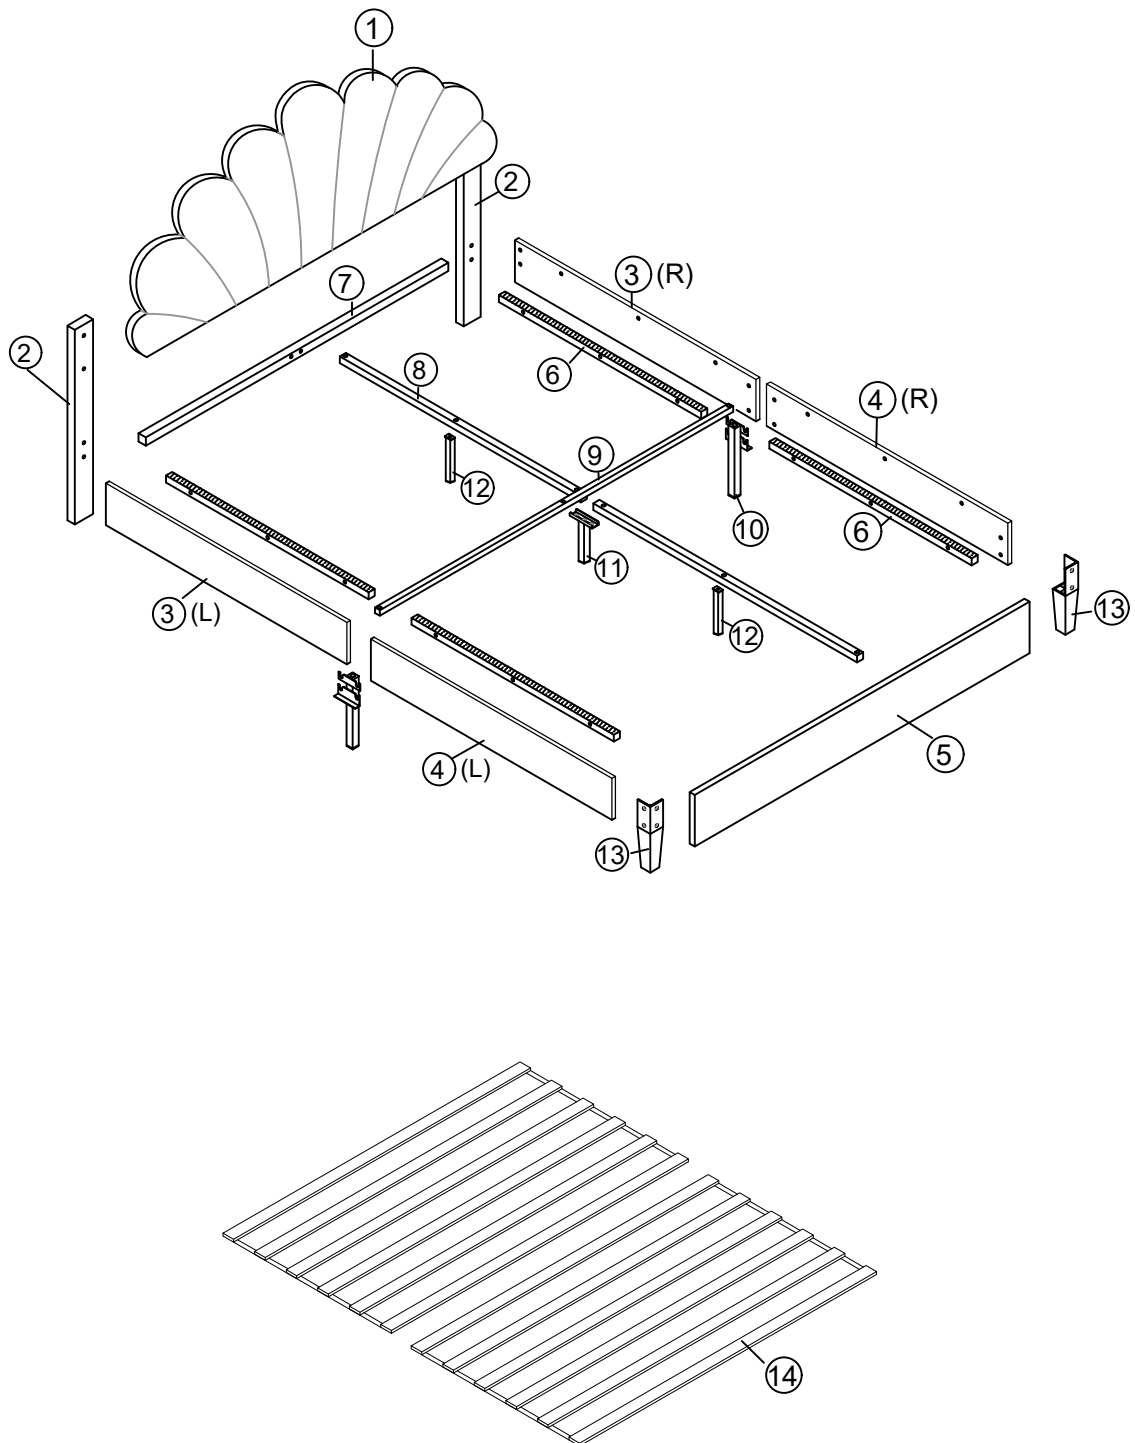


ASSEMBLY INSTRUCTION

SKU:WF305290

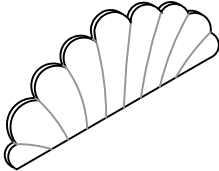

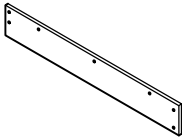
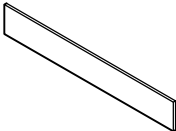
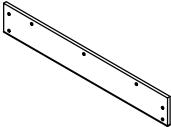
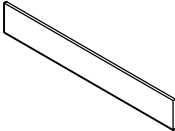
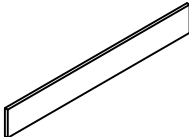

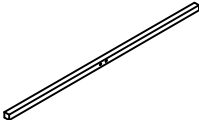
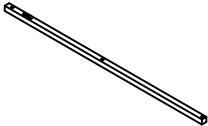
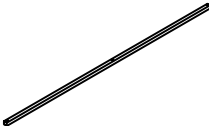




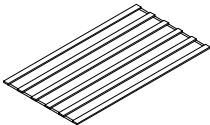


Detail View










Part List

WF305290

<div>1</div> <div></div> <div>Head board-1pc</div>	<div>2</div> <div></div> <div>Head board legs -2pcs</div>	<div>3R</div> <div></div> <div>Side rails-1pc</div>
<div>3L</div> <div></div> <div>Side rails-1pc</div>	<div>4R</div> <div></div> <div>Side rails-1pc</div>	<div>4L</div> <div></div> <div>Side rails-1pc</div>
<div>5</div> <div></div> <div>Foot board -1pc</div>	<div>6</div> <div></div> <div>Side rails support bar-4pcs</div>	<div>7</div> <div></div> <div>Head board cross bar-1pc</div>
<div>8</div> <div></div> <div>Center support bar-2pcs</div>	<div>9</div> <div></div> <div>Cross bar-1pc</div>	<div>10</div> <div></div> <div>Side rails support legs-2pcs</div>
<div>11</div> <div></div> <div>Connected support leg-1pc</div>	<div>12</div> <div></div> <div>Middle support leg-2pcs</div>	<div>13</div> <div></div> <div>Legs-2pcs</div>
<div>14</div> <div></div> <div>Slats-12pcs</div>		

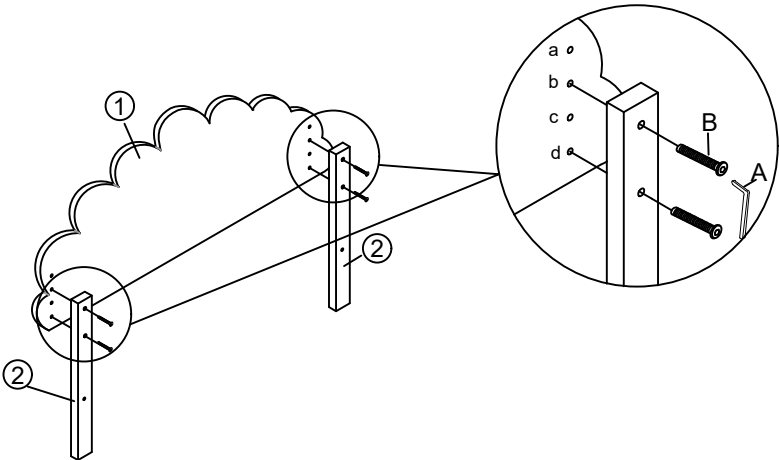
Hardware List



A  20*70mm	B  Ø8*45mm	C  Ø8*18mm
Allen Key(1pc)	Bolts(4pcs)	Bolts(32pcs)
D  Ø8*40mm	E  105*25*2mm	F  75*33*33mm
Bolts(21pcs)	Two hole iron(2pcs)	"7" Connector(2pcs)
G 		
Center support bar fittings(2pcs)		

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1 x2

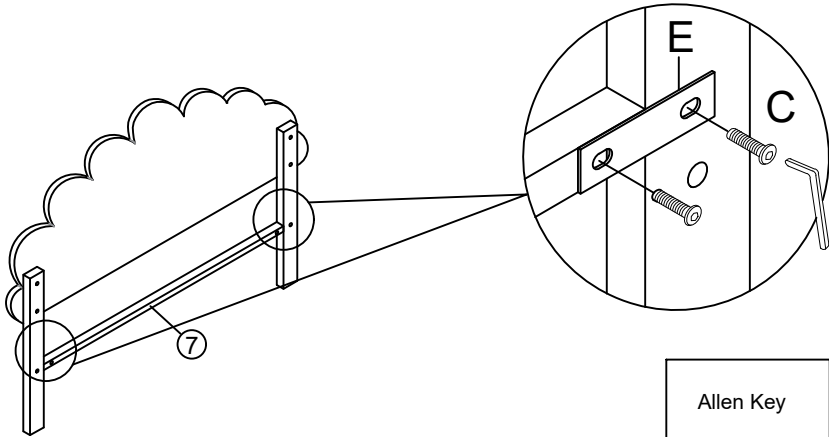
Fix the Headboard legs ② to the Headboard ① with Bolt B by using Allen key A. You can chose the holes a and c or b and d.






Allen Key	B Bolts x 4
	 M8X45mm

Step 2 x2

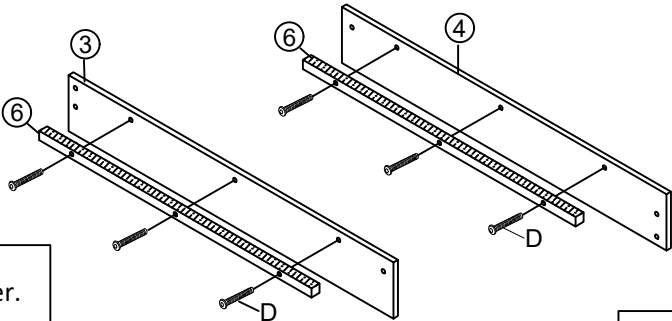
Fix the Headboard cross bar ⑦ to the Headboard legs ② with Bolt C and Two hole iron E by using Allen key A.





Allen Key	C Bolts x 4	E Two hole iron x 2
	 M8X18mm	

Step 3 x2

Connect to Siderail support bar ⑥ Siderails ③ and ④ with Bolts D by using Allen key A.

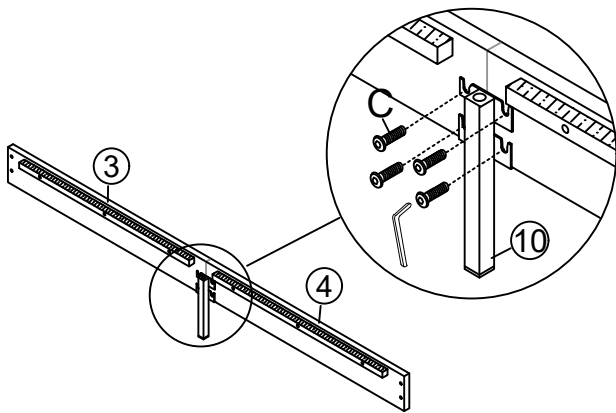




NOTICE:
Please assemble ③ and ④ together.

Allen Key	D Bolts x 12
	 M8X40mm

Step 4 x2

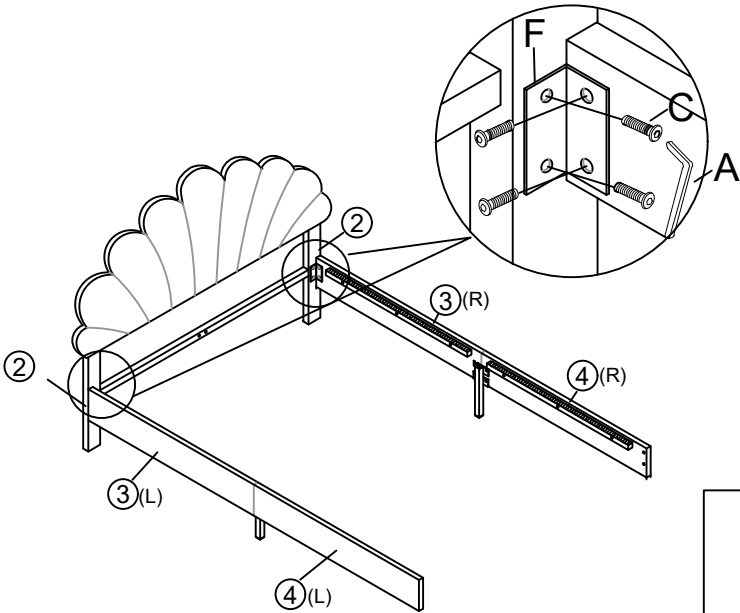
Fix the side rails support leg ⑩ to the side rail with Bolts C by using Allen key A






Allen Key	C Bolts x 8
	 M8X18mm

Step 5 x2

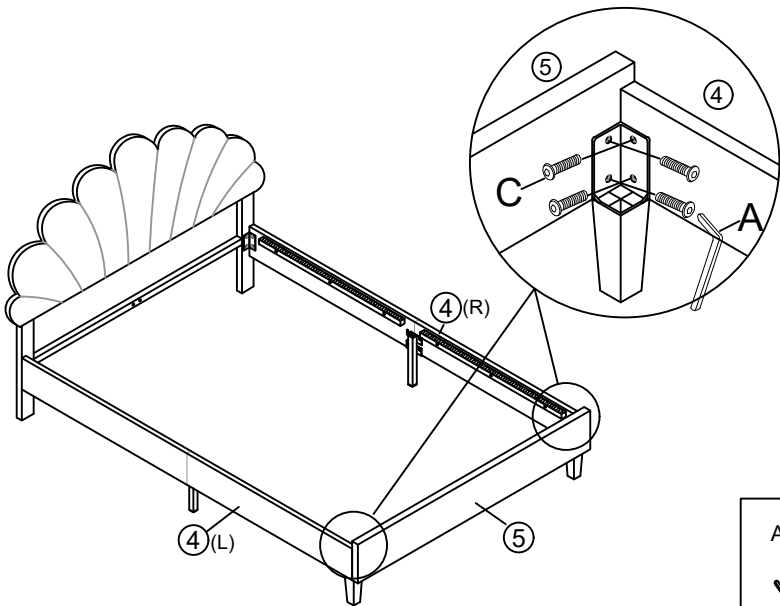
Fix the assembled siderail to the Headboard legs ② with Bolt C and "7" Connector F by using Allen key A.





Allen Key	C Bolts x 8	F "7" Connector x 2
	 M8X18mm	

Step 6 x2

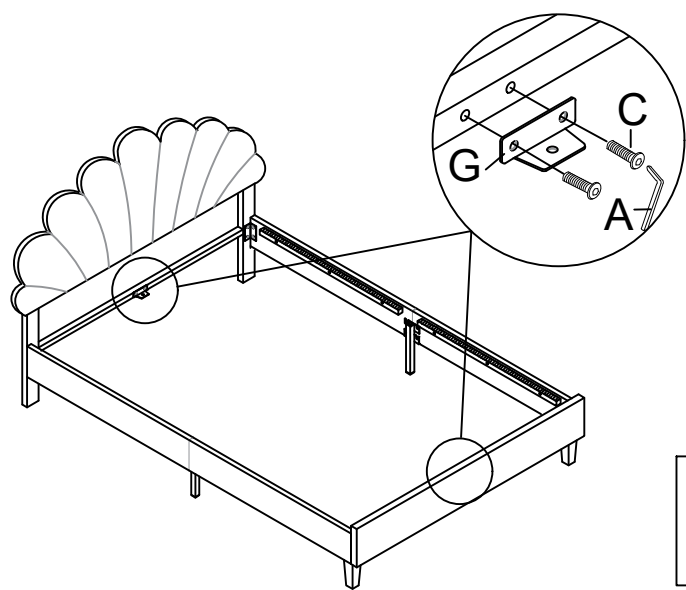
Fix the assembled siderail to the footboard ⑤ with Bolt C and legs ⑬ by using Allen key A.






Allen Key	C Bolts x 8
	 M8X18mm

Step 7 x2

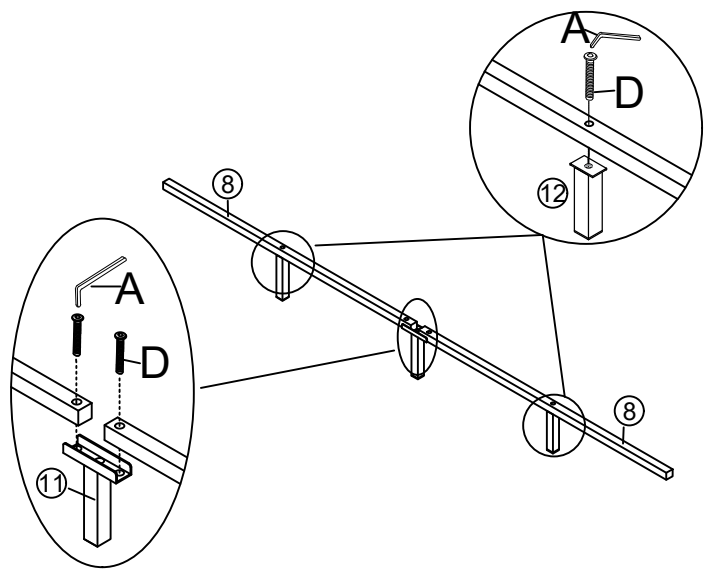
Fix the Center support bar fittings G to the Headboard cross bar ⑦ and foot board ⑤ with Bolts C by using Allen key A





Allen Key	C Bolts x 4	G Center support bar fittings x2
	 M8X18mm	

Step 8 x2

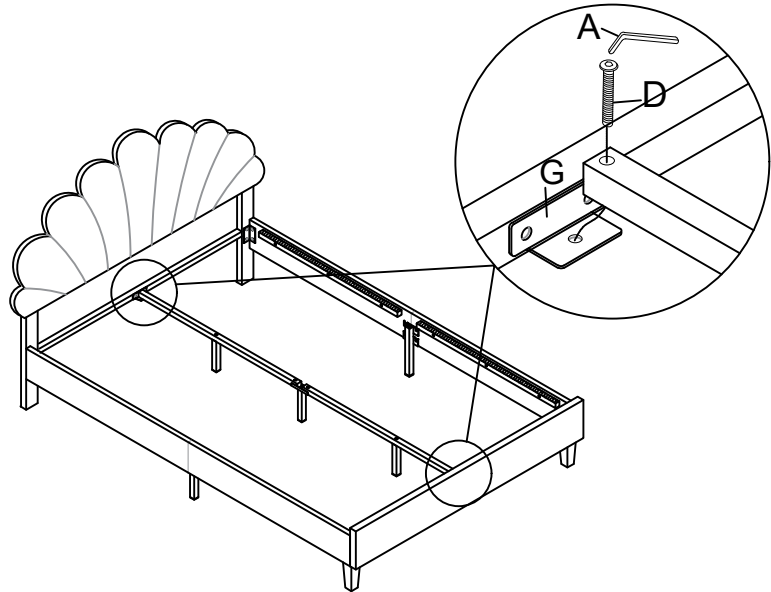
Connect Center support bar ⑧ with Connected support leg ⑪ with Bolts D by using Allen key A. Fix the Middle support leg ⑫ to the Center support bar ⑧ with Bolts D by using Allen key A.





Allen Key	D Bolts x 4
	 M8X40mm

Step 9

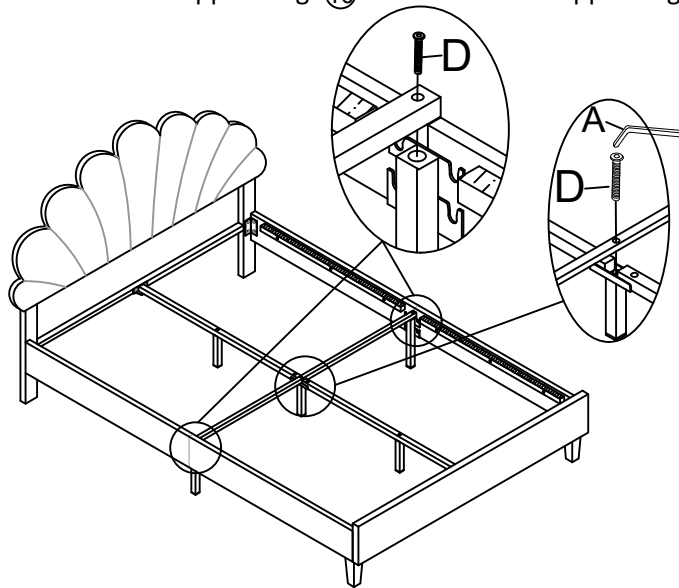
Fix the Center support bar ⑧ to the headboard cross bar ⑦ and foot board ⑤ with Bolts D by using Allen key A





Allen Key	D Bolts x 2
	 M8X40mm

Step 10

Fix the cross bar ⑨ to the side rails support legs ⑩ and Connected support legs ⑪ with Bolts D by using Allen key A



Allen Key	D Bolts x 3
	 M8X40mm

Step 11

Fix the slats ⑭ to the side support bar, then assemble is finished, now please tighten all hardware and enjoy the bed.

