
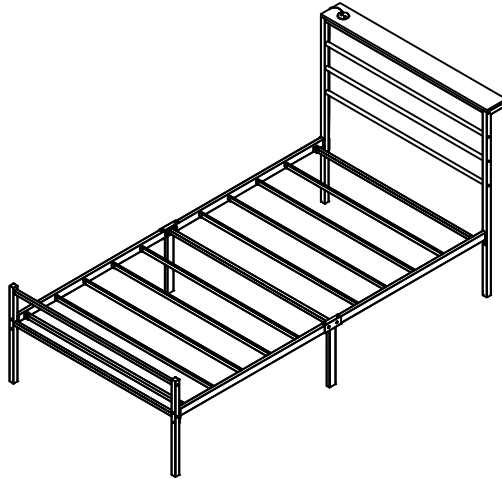




USER'S MANUAL

TWIN METAL BED











HARDWARE


A	 M6*25mm	14
B	 M6*35mm	10
C	 M8*35mm	12
D	 M8*50mm	4
E	 $\varnothing 3*12\text{mm}$	4
F	 4 #	1

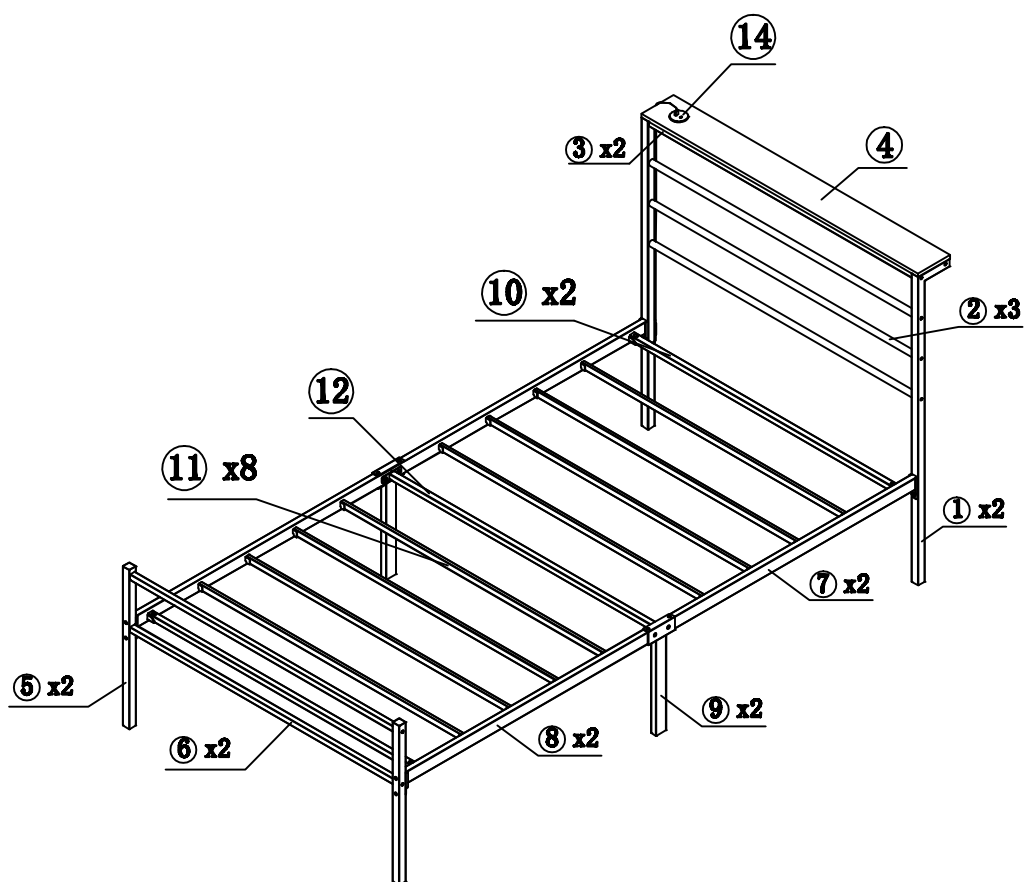


COMPONENTS

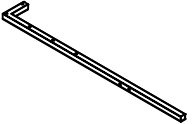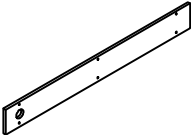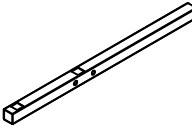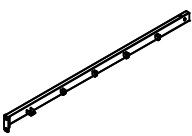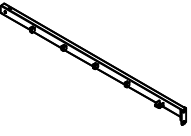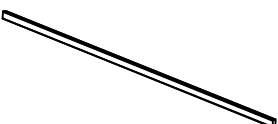			
① 2 pcs	② 3 pcs	③ 2 pcs	④ 1 pc
			
⑤ 2 pcs	⑥ 2 pcs	⑦ 2 pcs	⑧ 2 pcs
			
⑨ 2 pcs	⑩ 2 pcs	⑪ 8 pcs	⑫ 1 pc
			
⑬ 1 pc	⑭ 1 pc		


B	 M6*35mm	10
F	 4 #	1

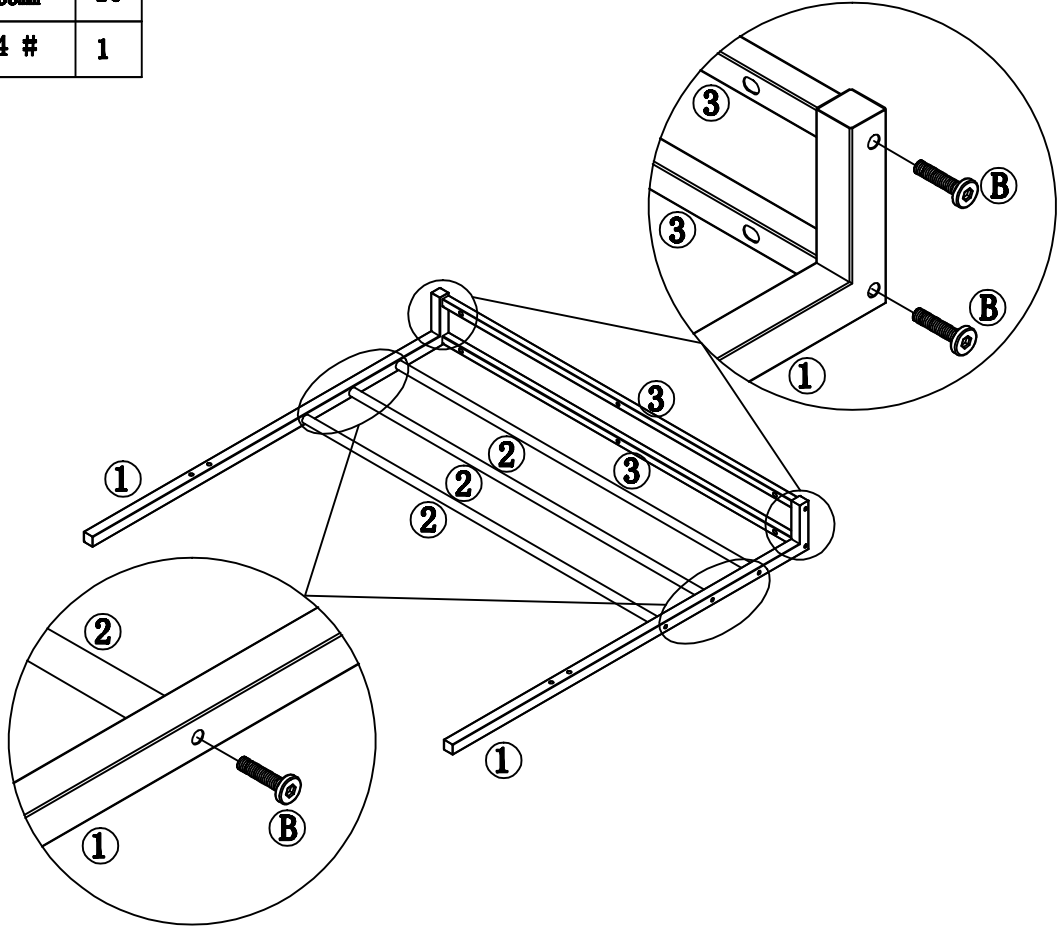


A	 M6*25mm	6
F	 4 #	1

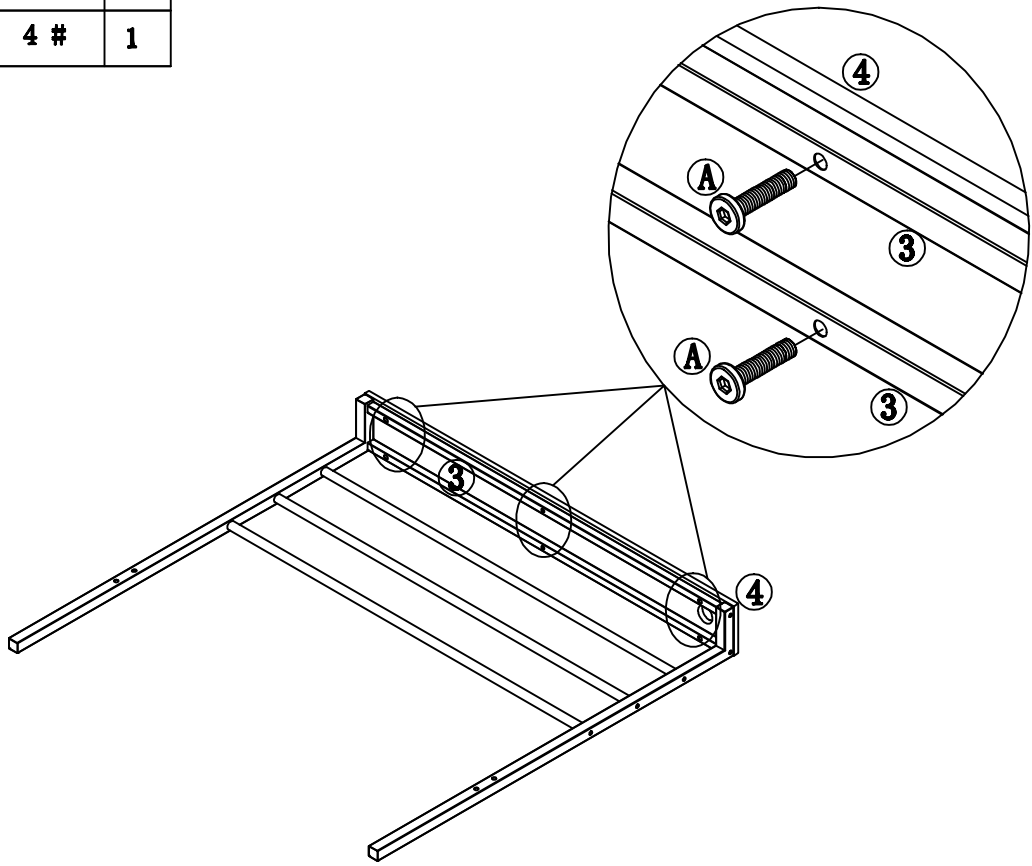


A	 M6*25mm	4
F	 4 #	1

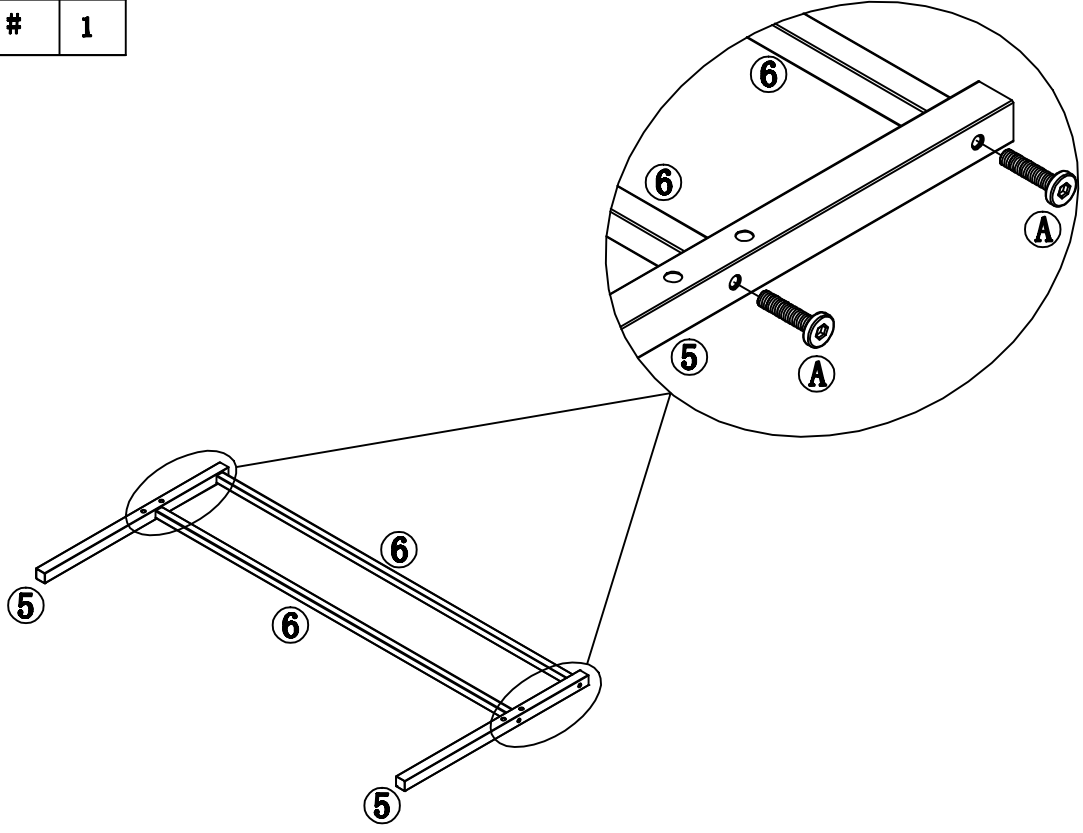


D	 M8*50mm	4
F	 4 #	1

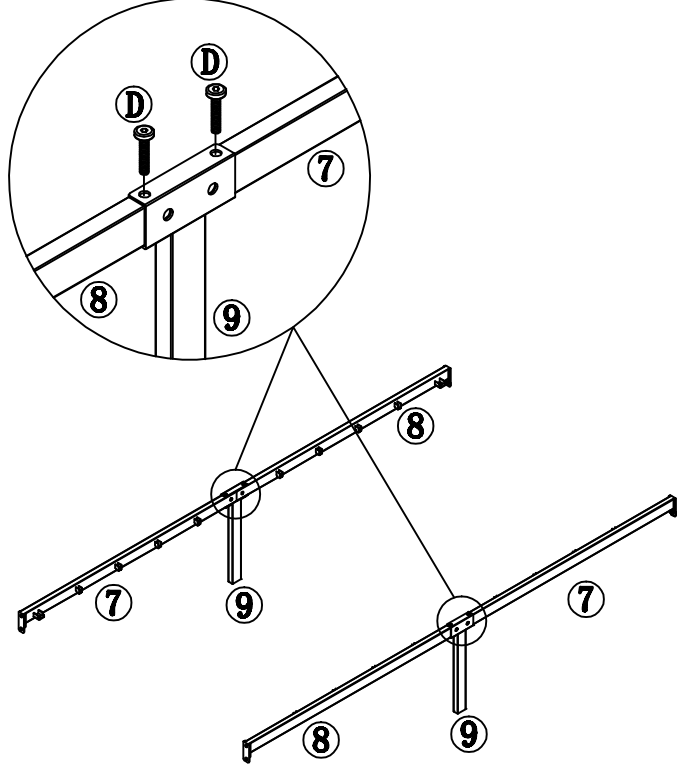


C	 M8*35mm	8
F	 4 #	1

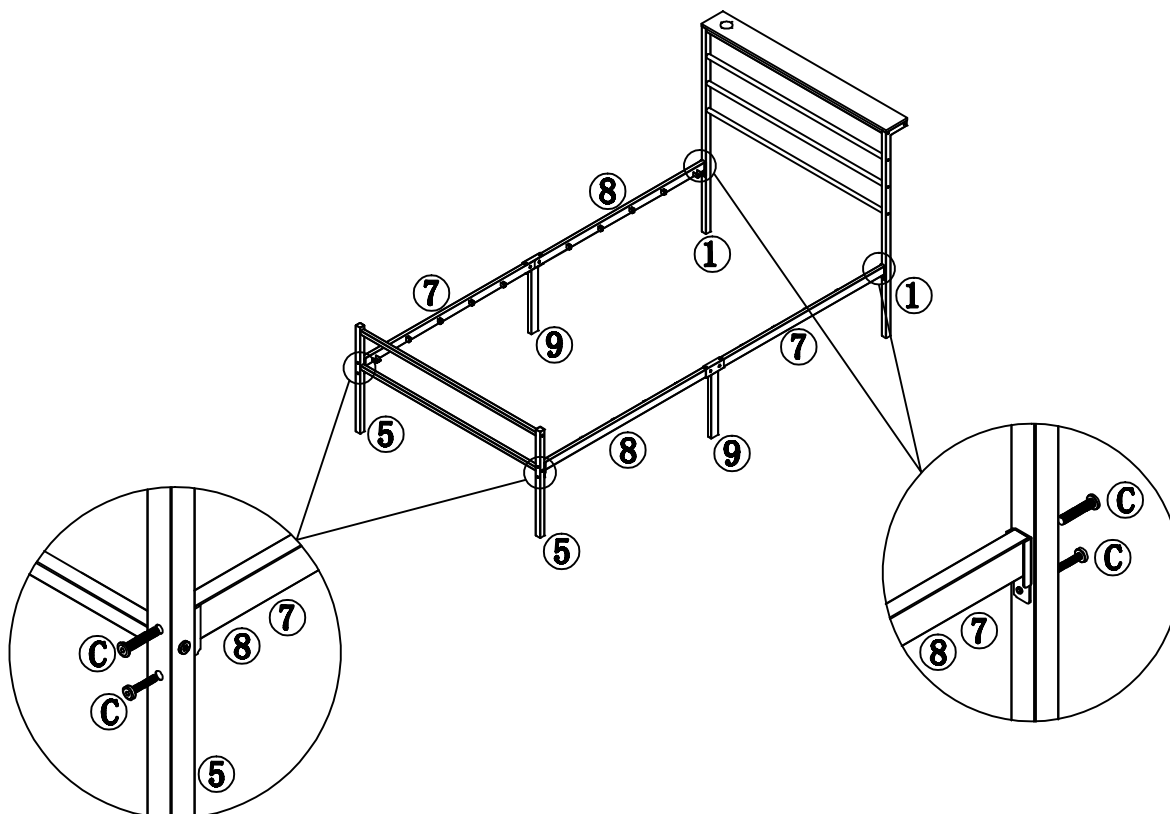



E	 $\varnothing 3 \times 12\text{mm}$	4
F	 4 #	1

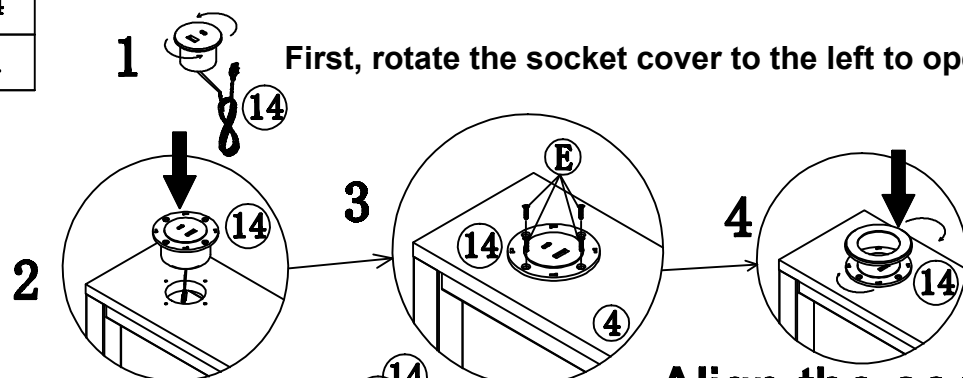

Align the socket cover that was removed earlier with the slot inside and rotate it to the right.

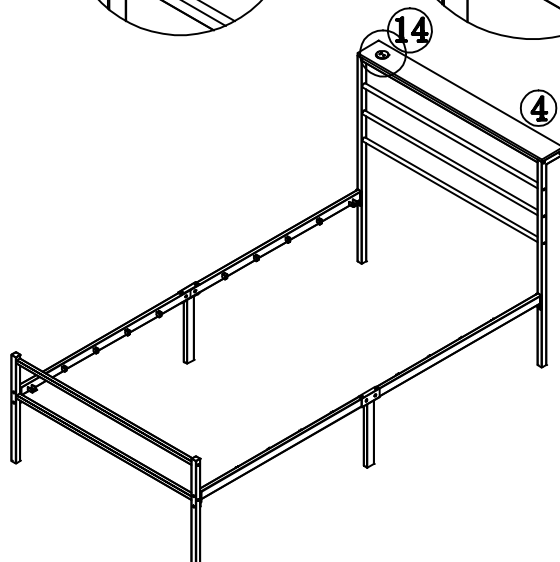

A	 M6*25mm	4
F	 4 #	1

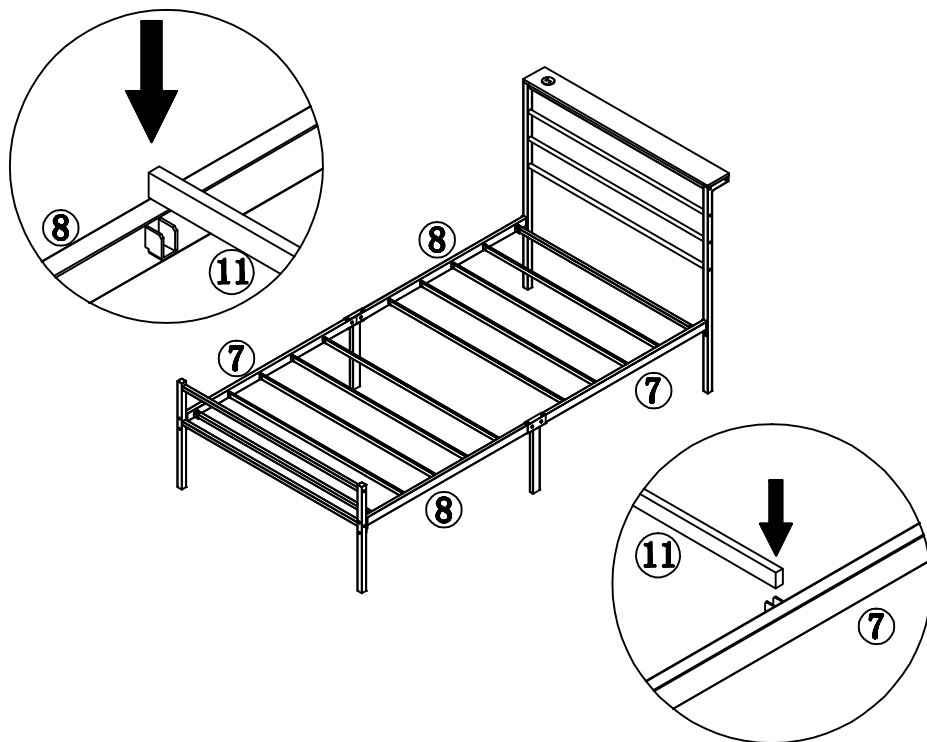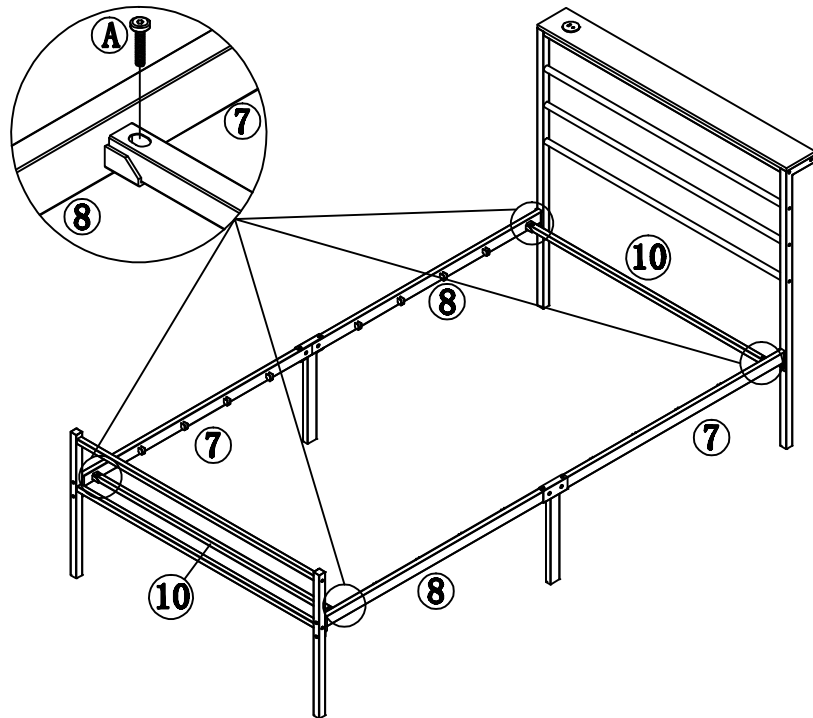

C	 M6*35mm	4
F	 4 #	1

Connect part 12 to part 9 and use the tool E to screw four part C.

