


SKU:S016

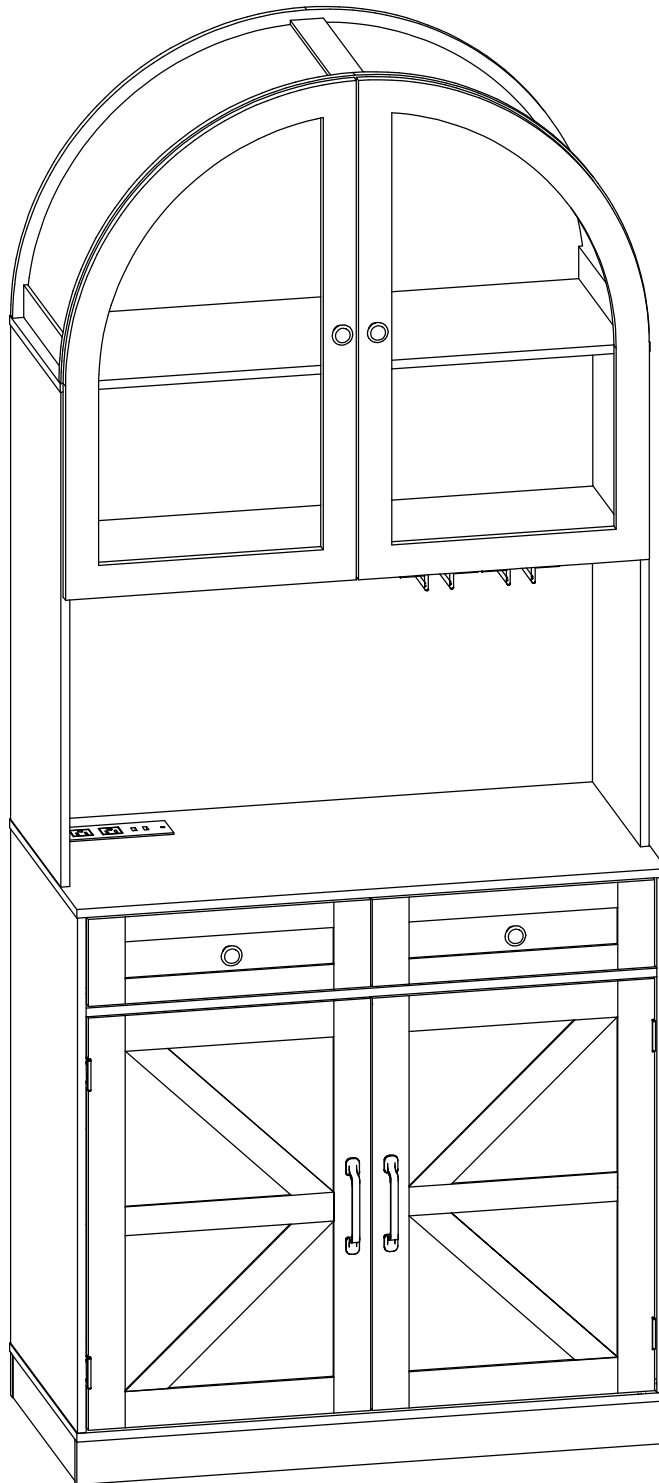


! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.


1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.



















2.All cabinets come with TRO, stainless steel or our "L-Bracket" when shipped.

















SKU:S016

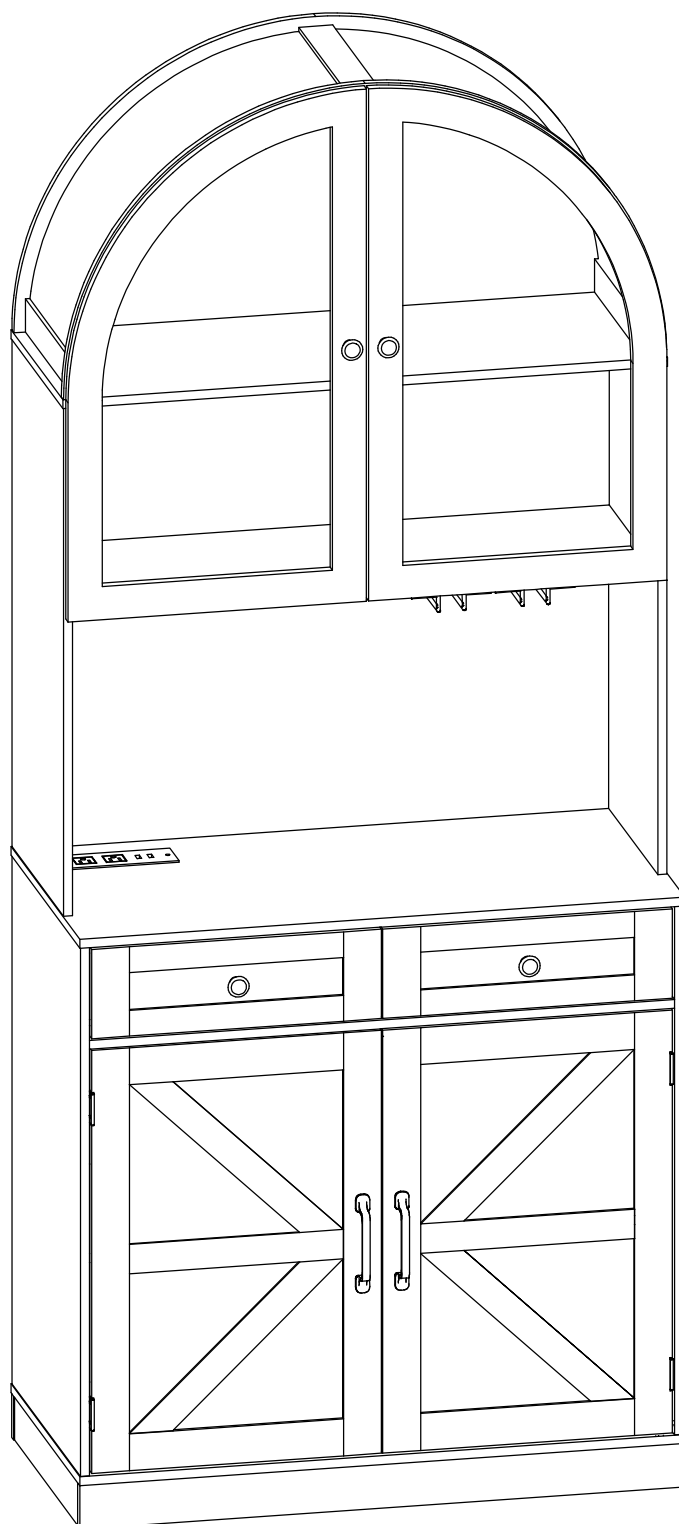





Part List

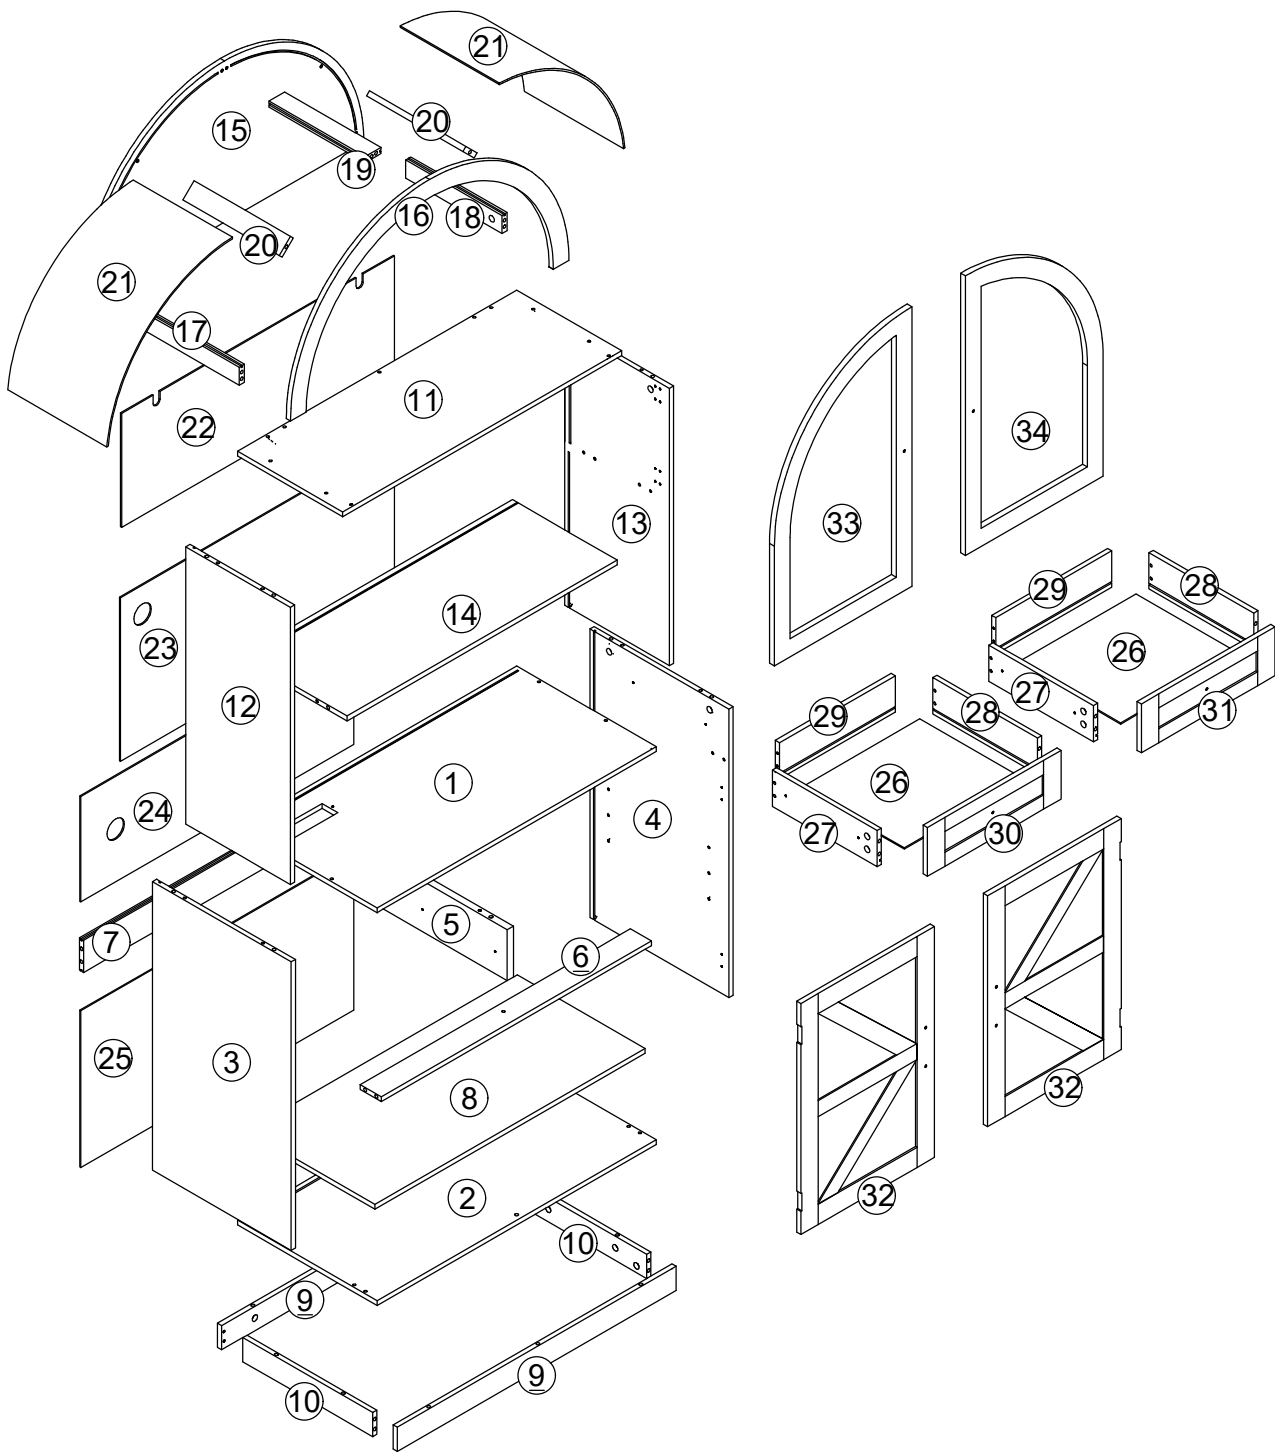


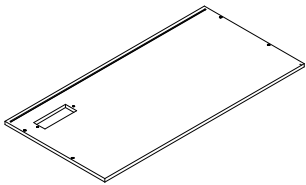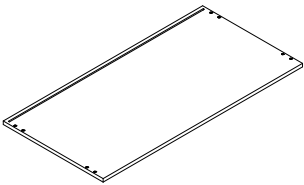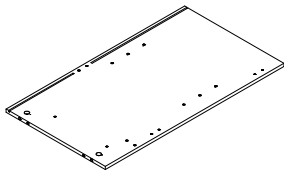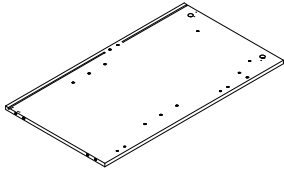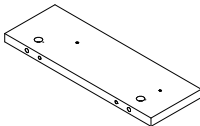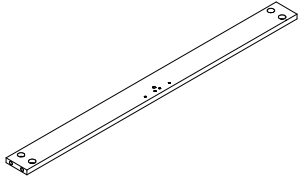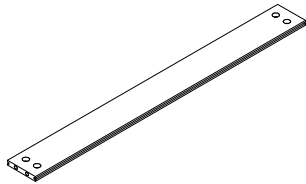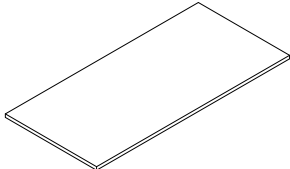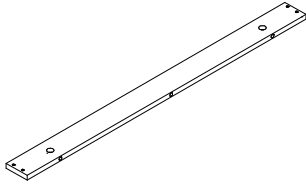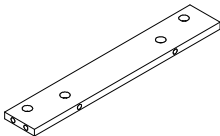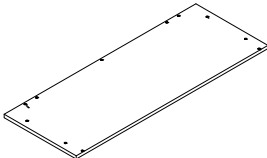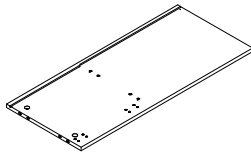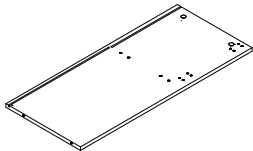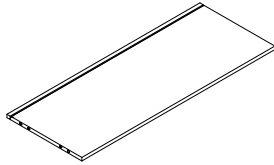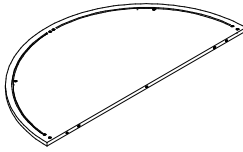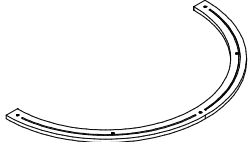

①  X1PC	②  X1PC	③  X1PC
④  X1PC	⑤  X1PC	⑥  X1PC
⑦  X1PC	⑧  X1PC	⑨  X2PCS
⑩  X2PCS	⑪  X1PC	⑫  X1PC
⑬  X1PC	⑭  X1PC	⑮  X1PC
⑯  X1PC	⑰  X1PC	⑱  X1PC

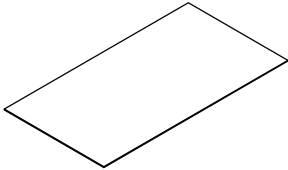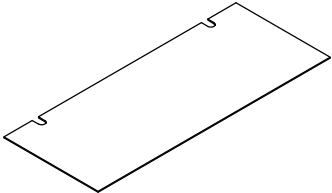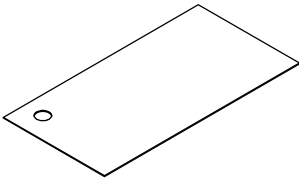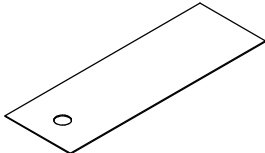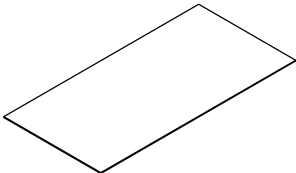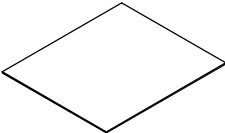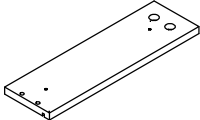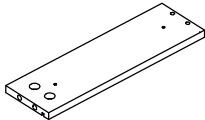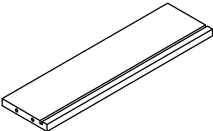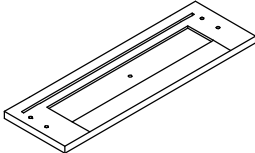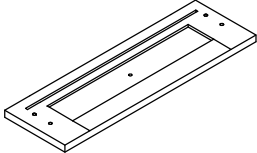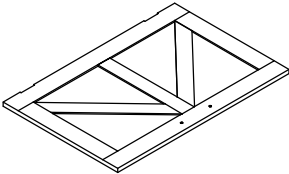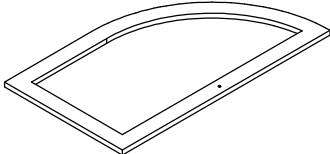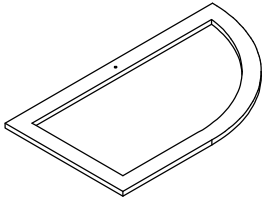19  X1PC	20  X2PCS	21  X2PCS
22  X1PC	23  X1PC	24  X1PC
25  X1PC	26  X2PCS	27  X2PCS
28  X2PCS	29  X2PCS	30  X1PC
31  X1PC	32  X2PCS	33  X1PC
34  X1PC		


Ⓐ	X47	Ⓑ	X47	Ⓒ	X26	Ⓓ	X8	Ⓔ	X34	Ⓕ	X62
						 Plug the hole					
Ø6*35mm		Ø15*9.5mm		Ø6*30mm		Ø20mm		Ø5*40mm		Ø3.5*12mm	

Ⓖ	X2	Ⓗ	X2	Ⓘ	X16	Ⓙ	X4	Ⓚ	X4	Ⓛ	X4
											
		Ø3*16mm		Ø3*16mm		300mm					

Ⓜ	X2	Ⓝ	X6	Ⓞ	X4	Ⓟ	X2	Ⓠ	X1	Ⓡ	X1
											
M4*8mm		M4*16mm									



Ⓢ	X2	Ⓣ	X4	Ⓤ	X1
					
Ø4*12&Ø6*30&Ø4*35mm				S4	


Step1

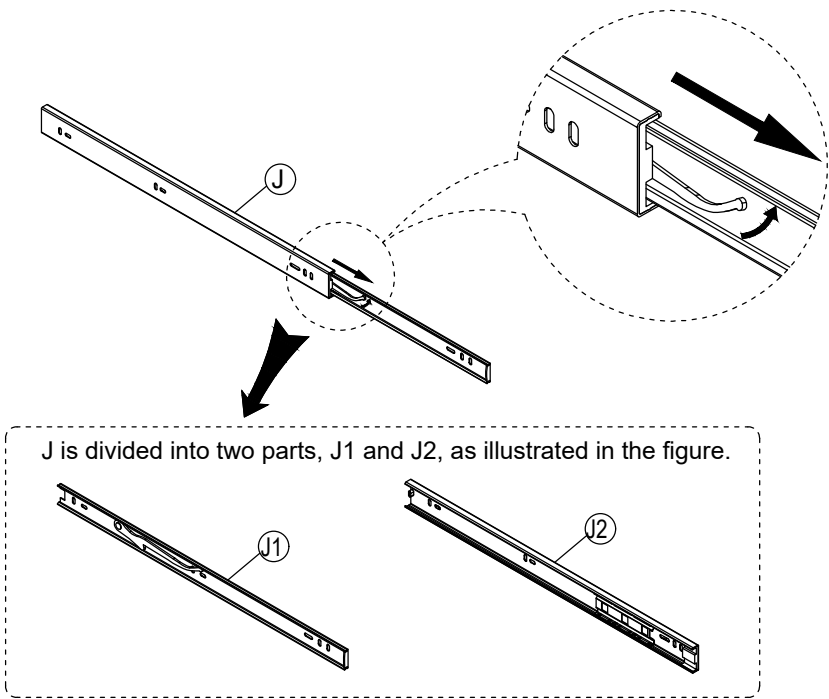



J	X4
	
300mm	

Step2

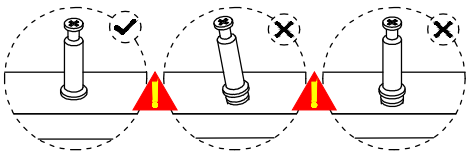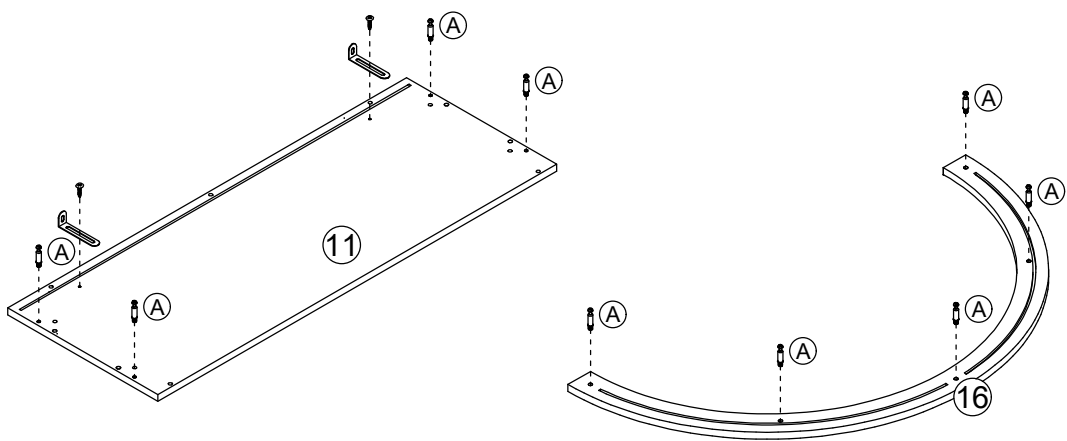


S	X2	A	X9
			
Ø4*12mm		Ø6*35mm	

Step3

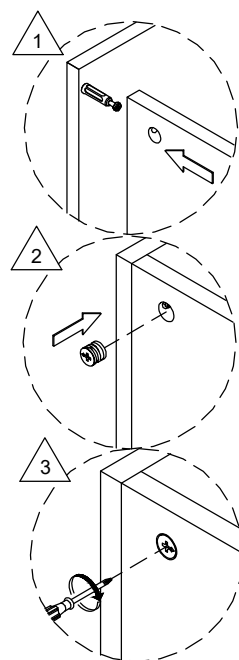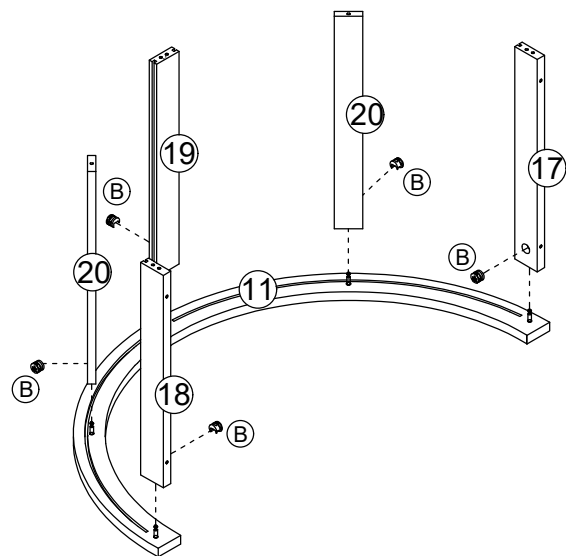


(B)	X5
Ø15*9.5mm	

Step4

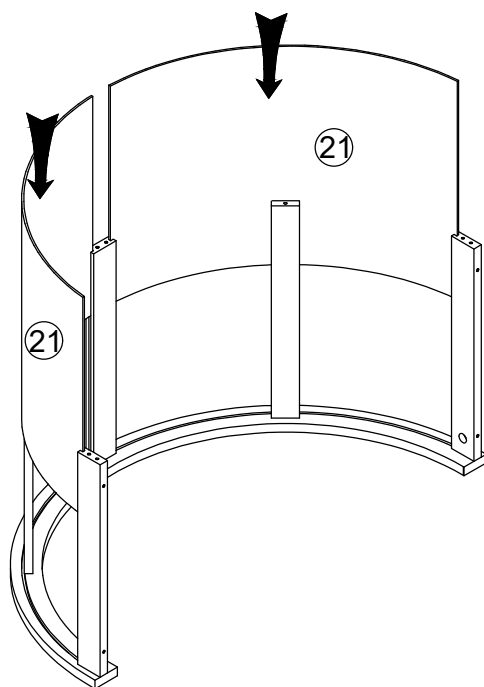


Step5

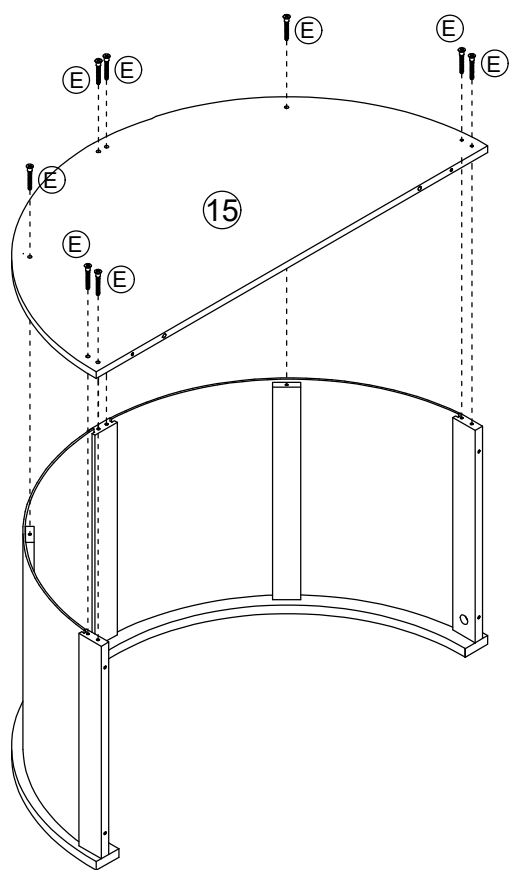





E	X8
	
Ø5*40mm	


Step6

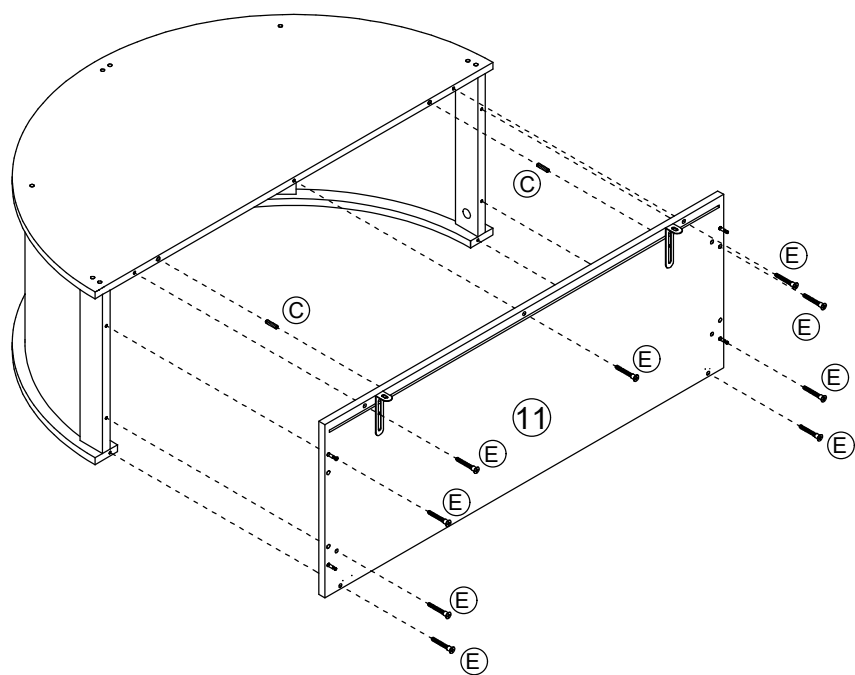


C	X2	E	X9
			
Ø6*30mm		Ø5*40mm	

Step7

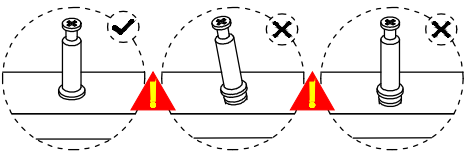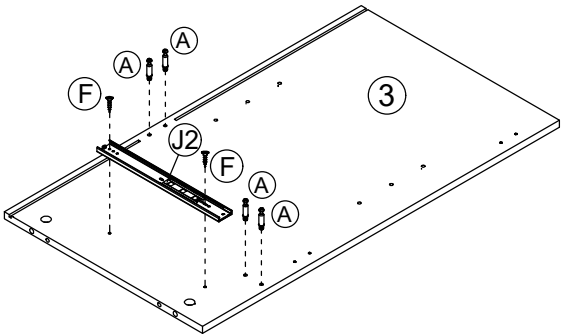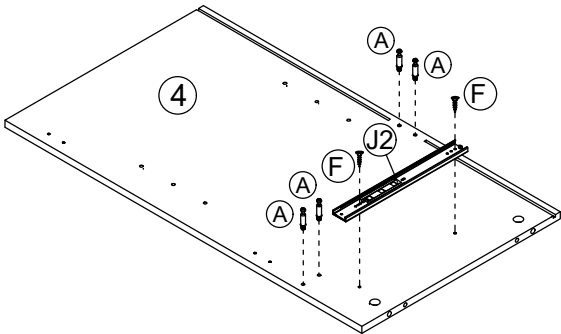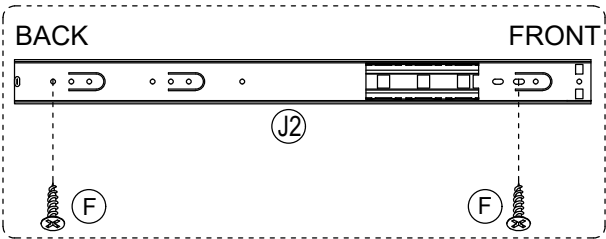



J	X2	F	X4	A	X8
					
300mm		Ø3.5*12mm		Ø6*35mm	

Step8

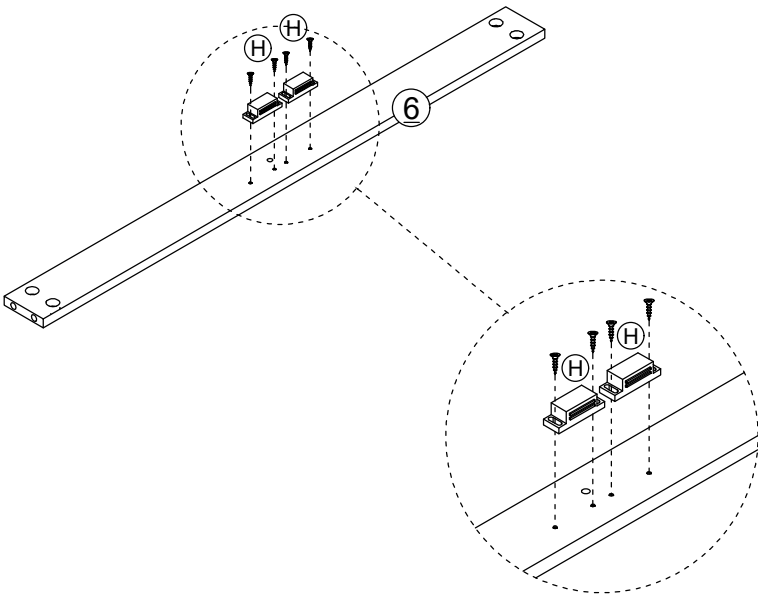



H	X2
 	
Ø3*16mm	

Step9

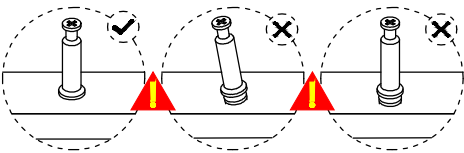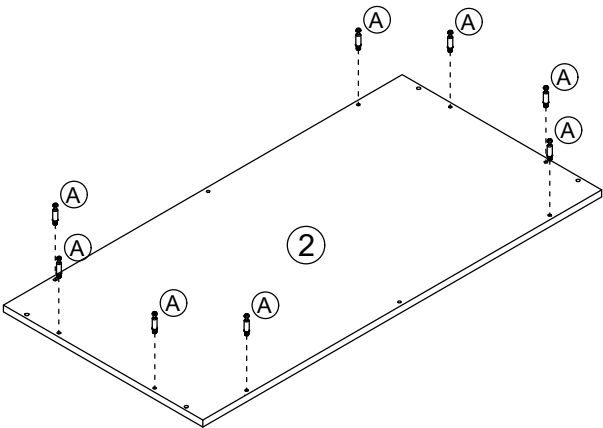


(A)	X8
	
Ø6*35mm	

Step10

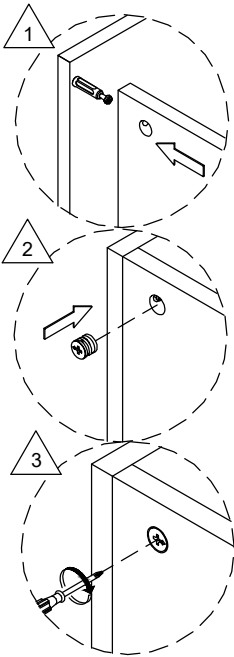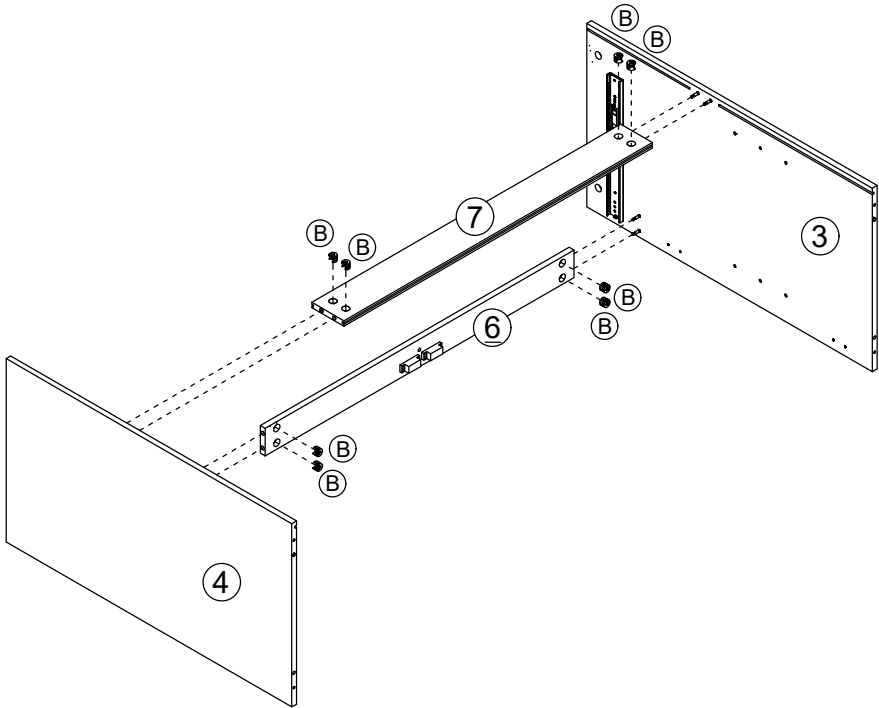


(B)	X8
	
Ø15*9.5mm	

Step11

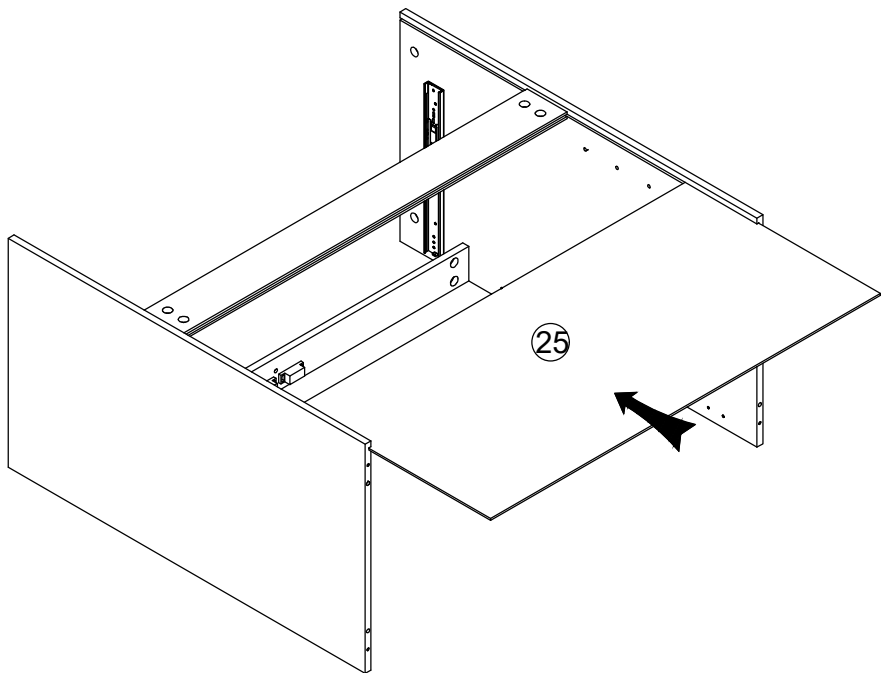


Step12

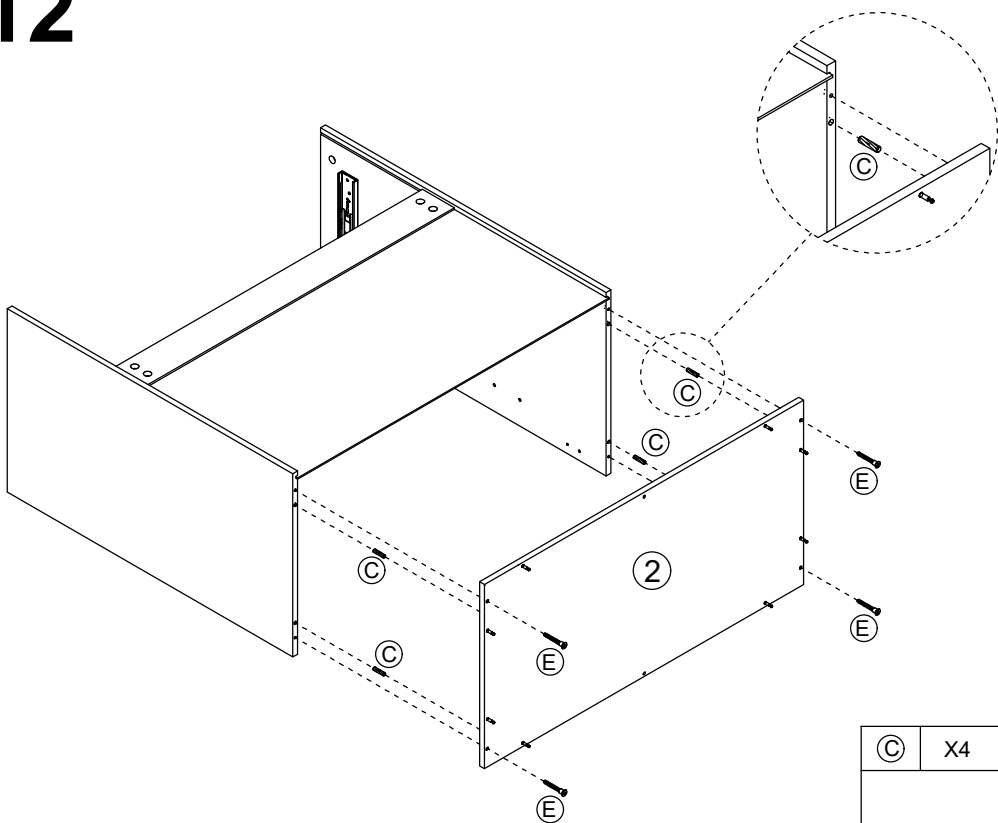


(C)	X4	(E)	X4
Ø6*30mm		Ø5*40mm	



Step13

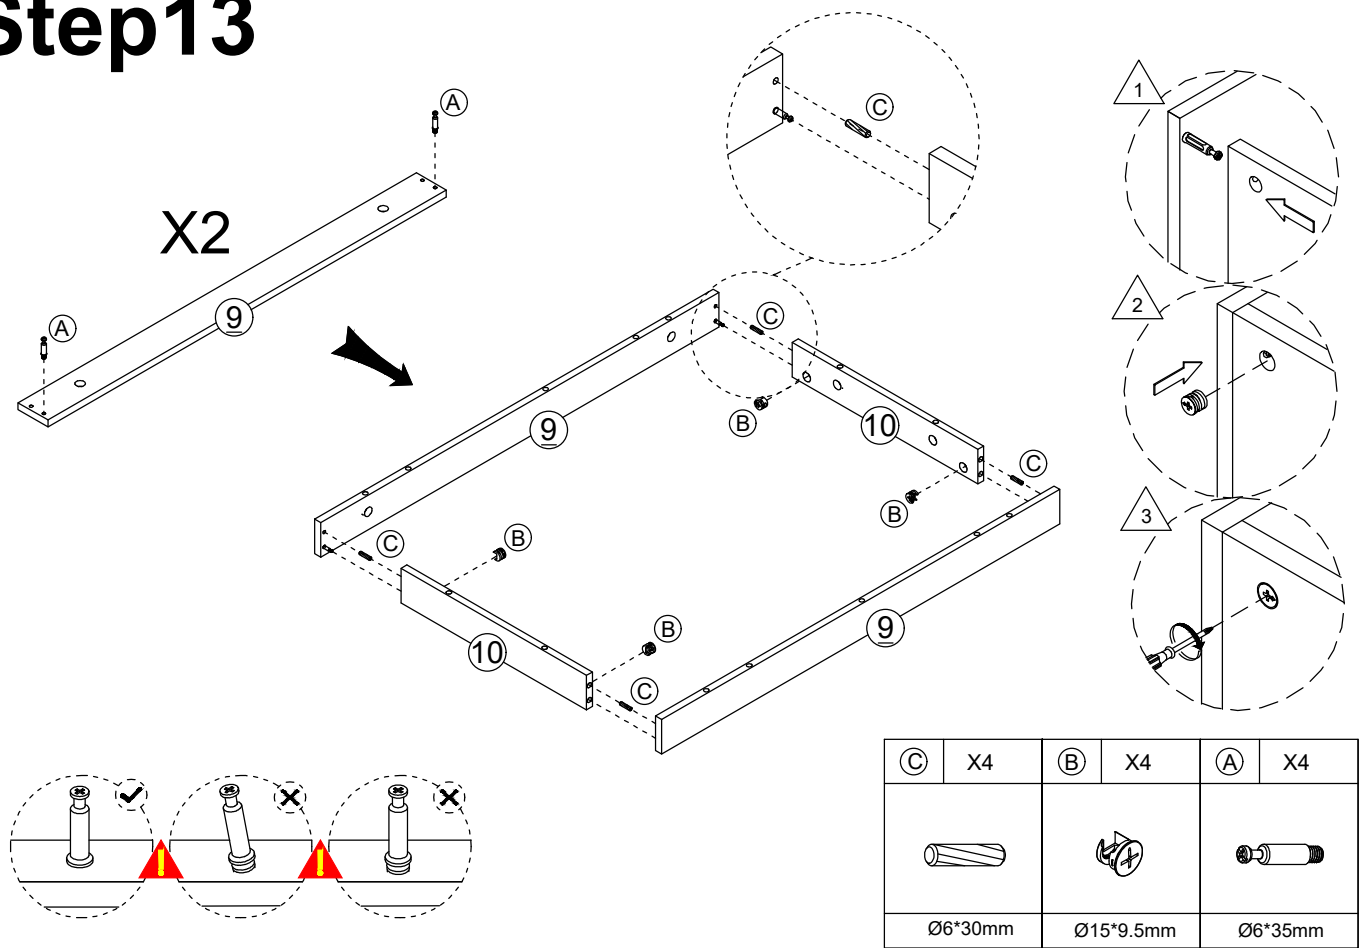

Step14


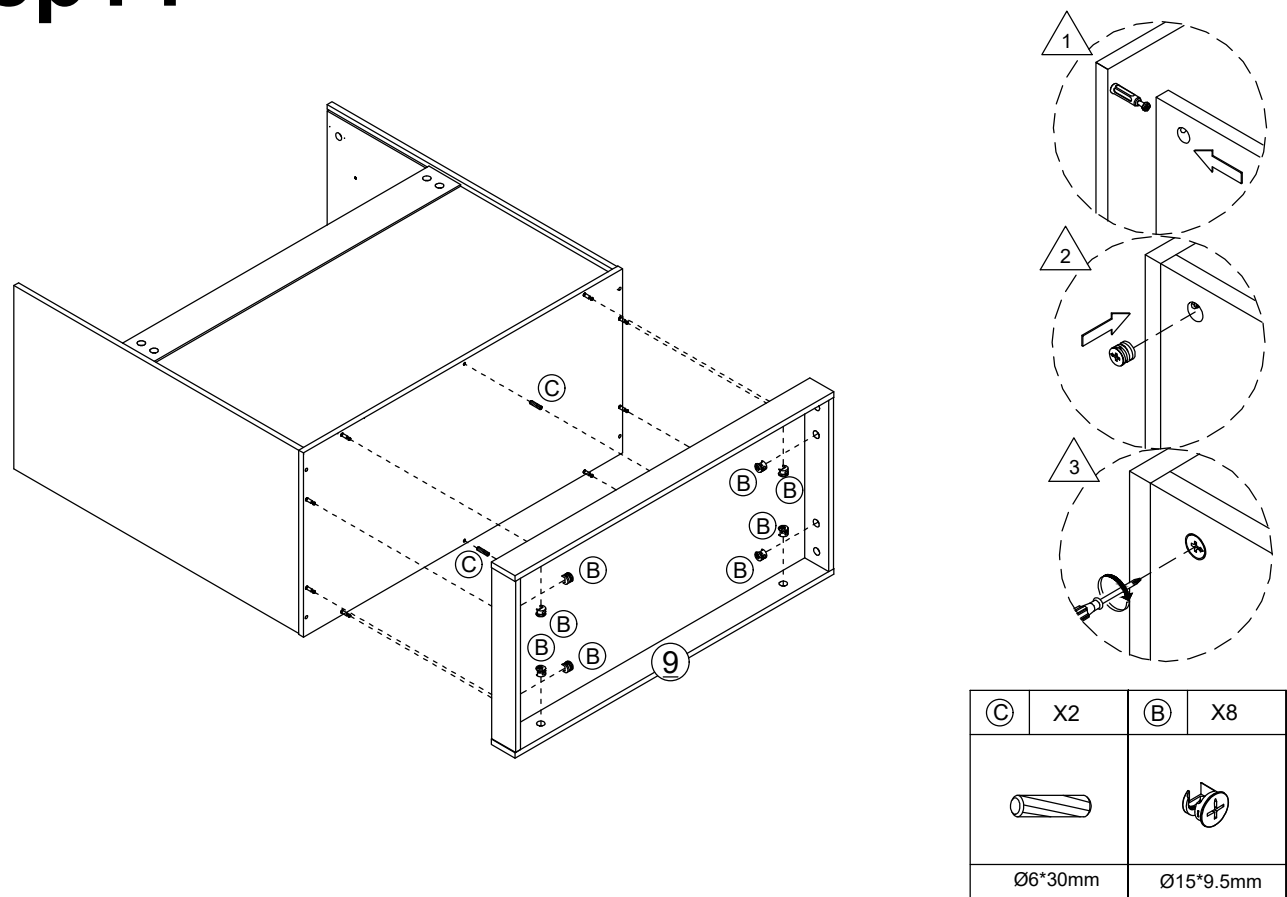


Step15

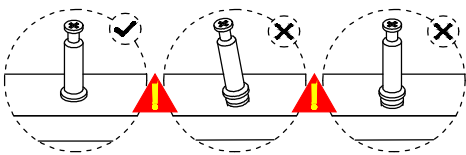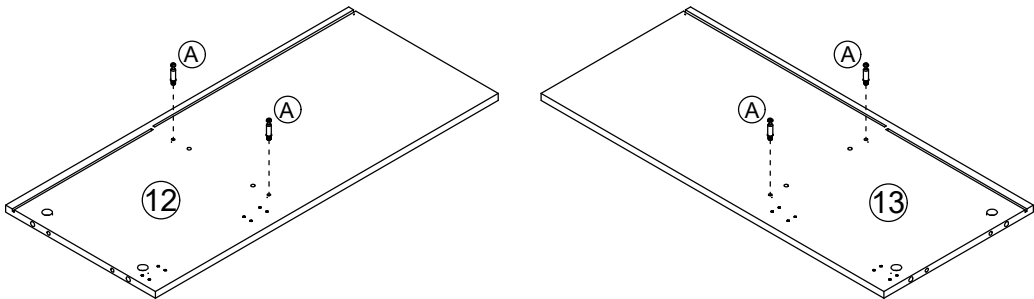


(A)	X4
	
Ø6*35mm	

Step16

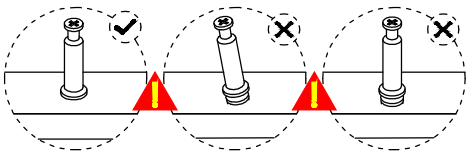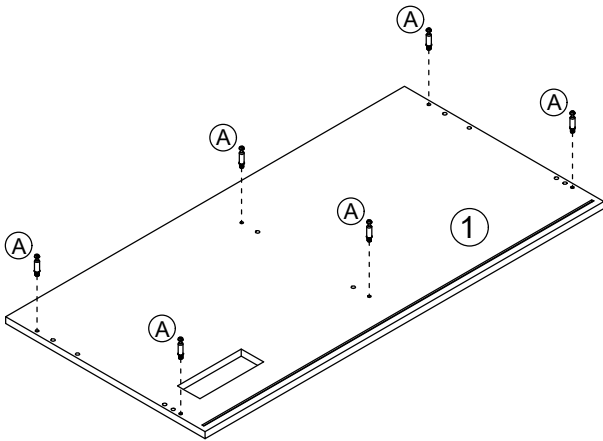



(A)	X6
	
Ø6*35mm	

Step17

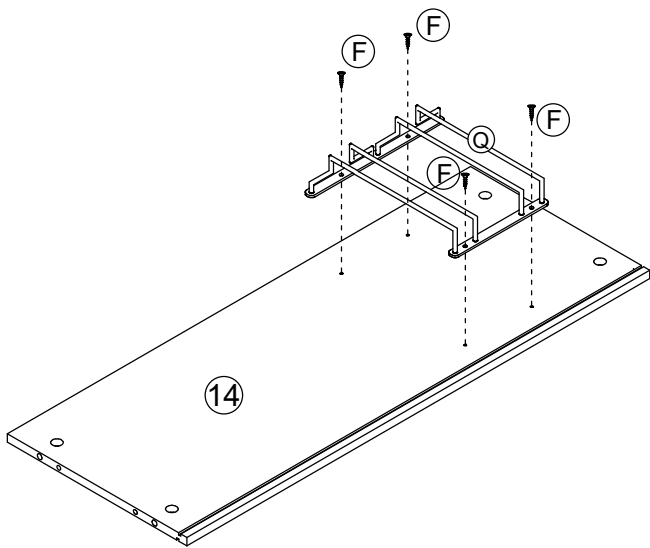


Q	X1	F	X4
		Ø3.5*12mm	

Step18

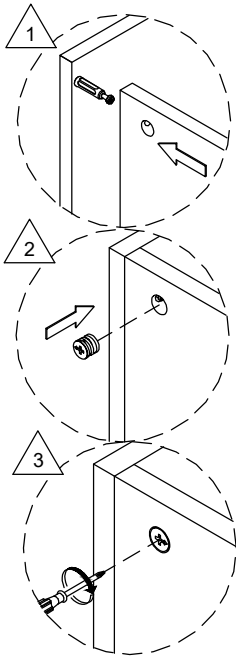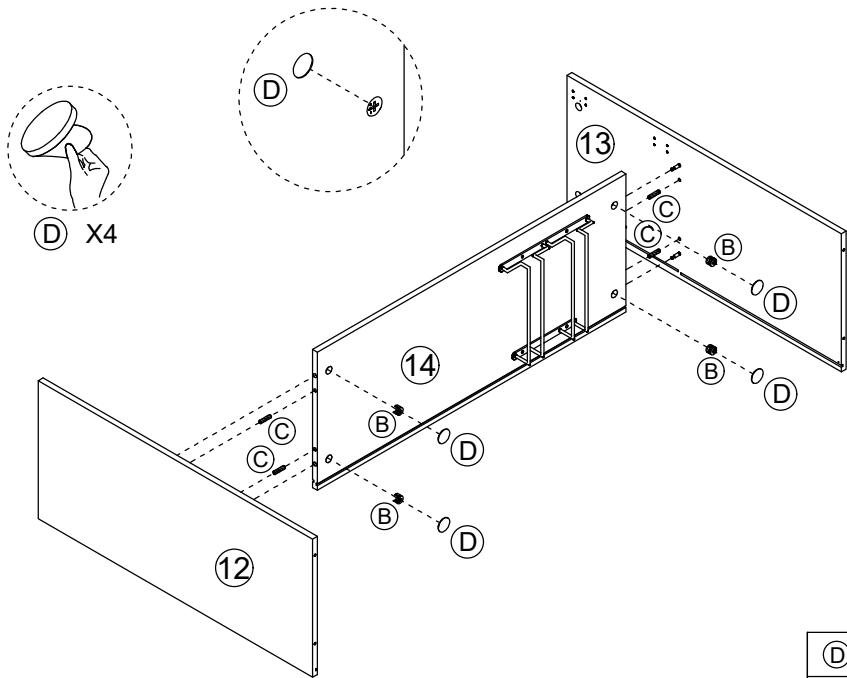


D	X4	C	X4	B	X4
Plug the hole		Ø6*30mm		Ø15*9.5mm	
Ø20mm		Ø6*30mm		Ø15*9.5mm	

Step19



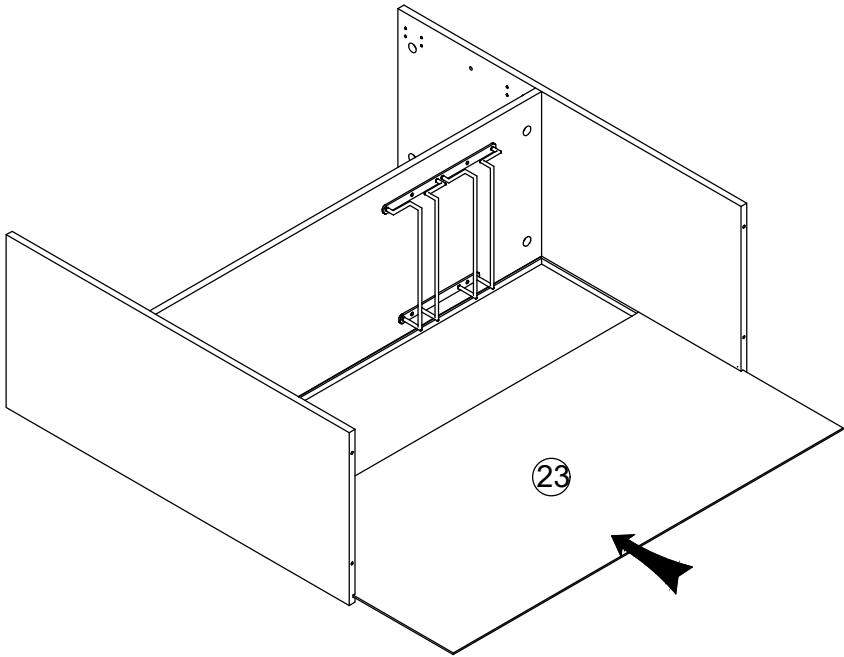


Step20

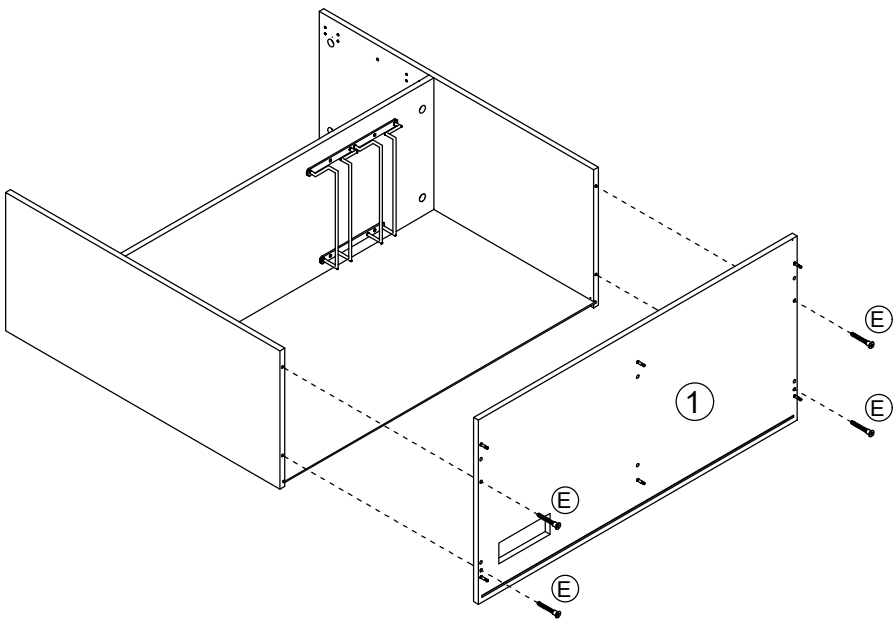



Ⓔ	X4
	
Ø5*40mm	

Step21

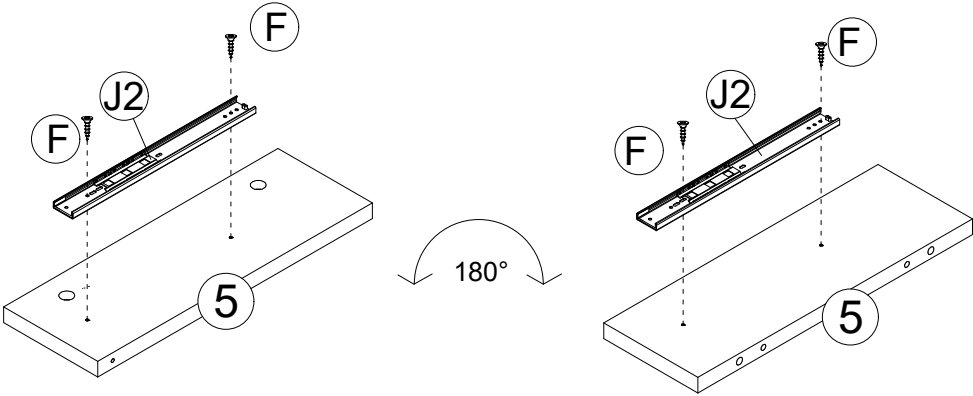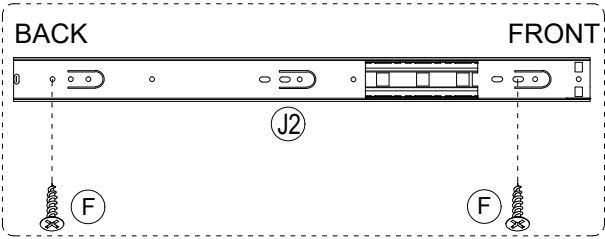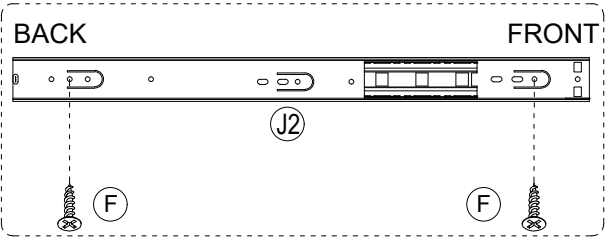


(J)	X2	(F)	X4
			
300mm		Ø3.5*12mm	

Step22

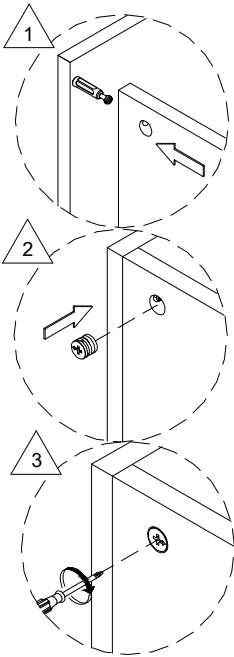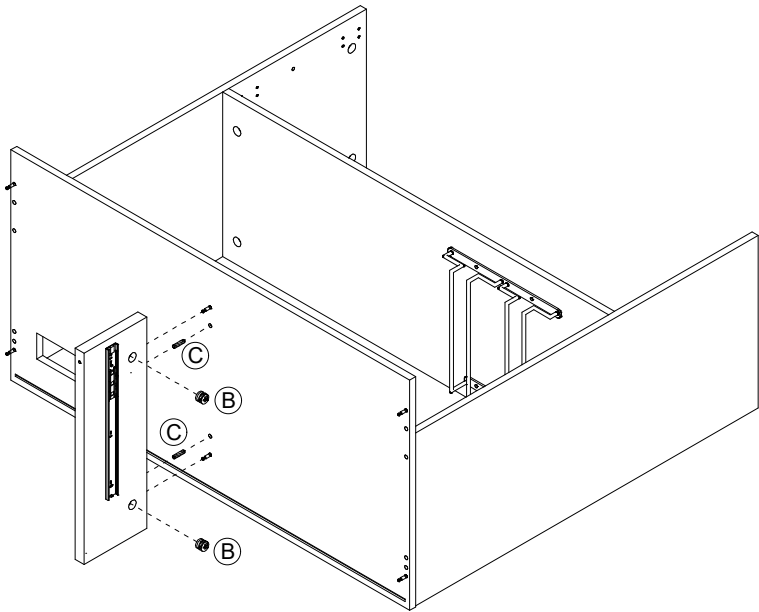




(C)	X2	(B)	X2
			
Ø6*30mm		Ø15*9.5mm	

Step23

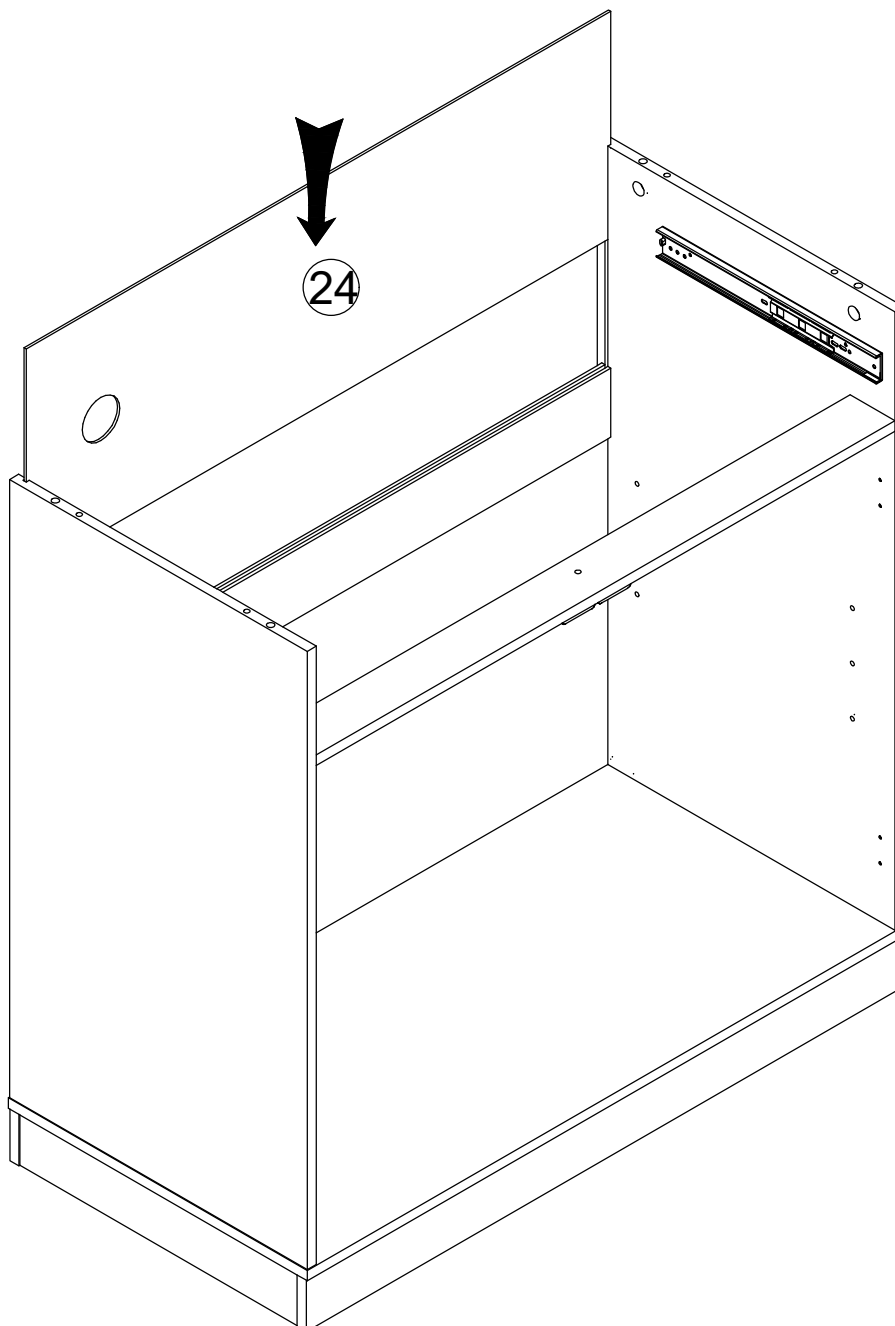


Step24

Two people are needed to install it

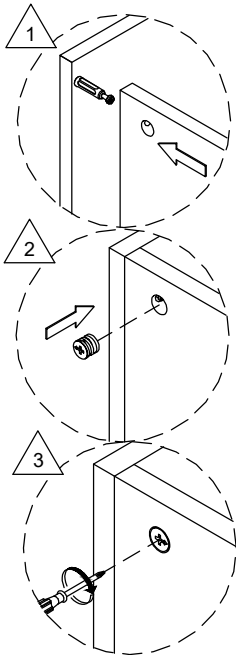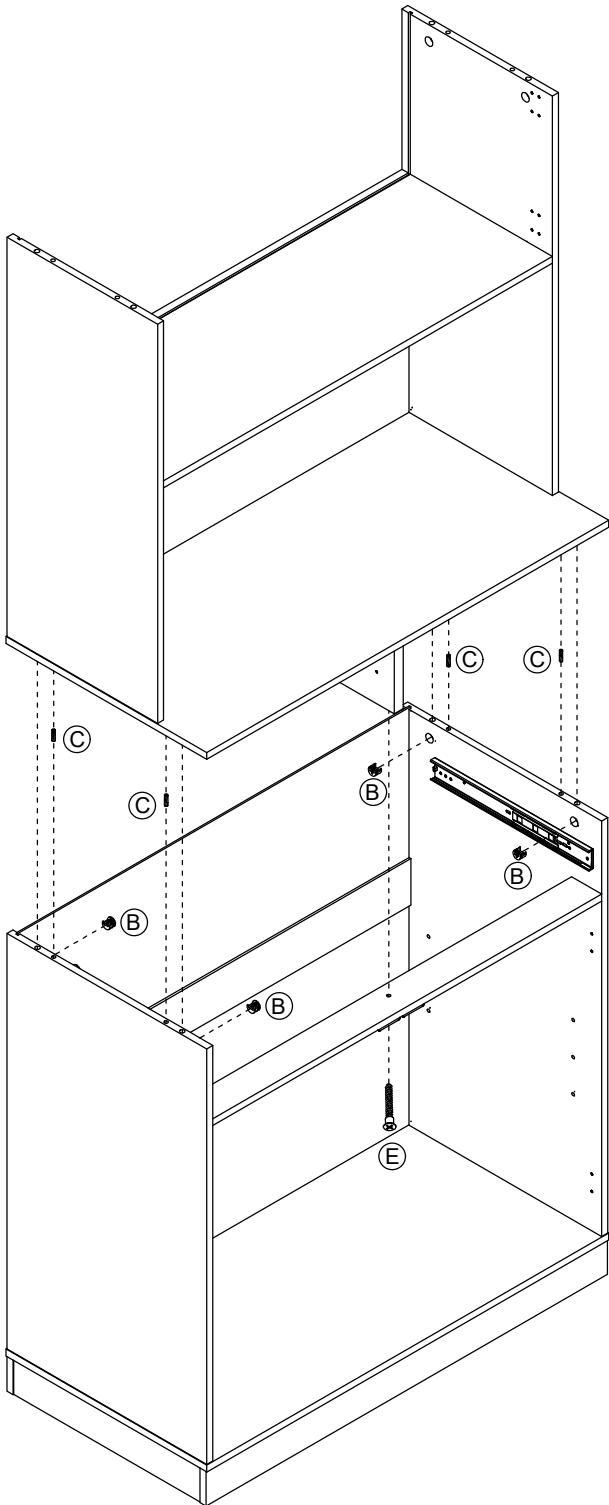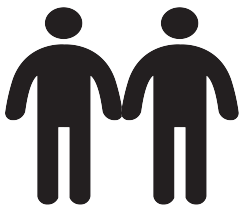





(E)	X1	(C)	X4	(B)	X4
					
Ø5*40mm		Ø6*30mm		Ø15*9.5mm	

Step25

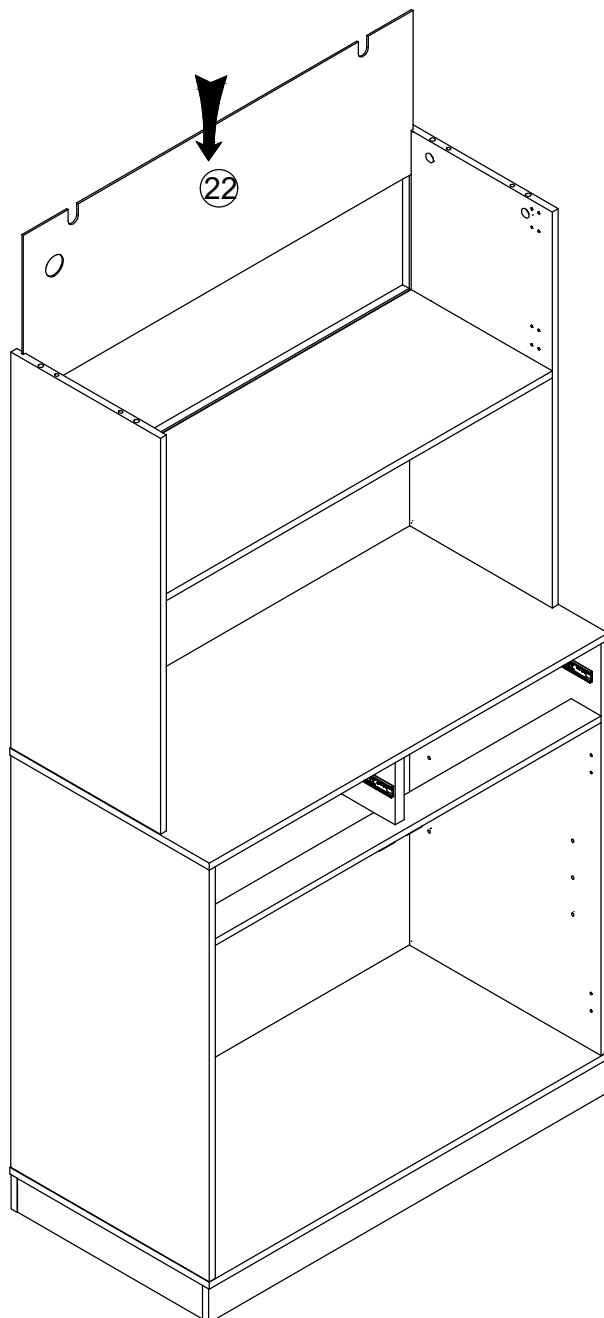



Step26


Two people are needed to install it

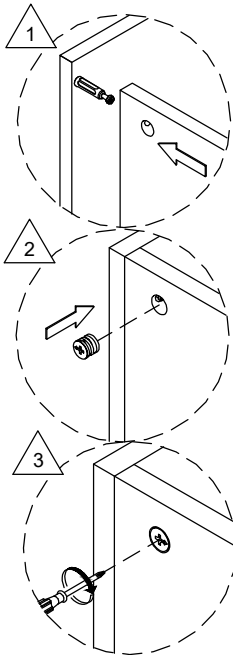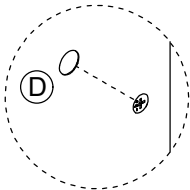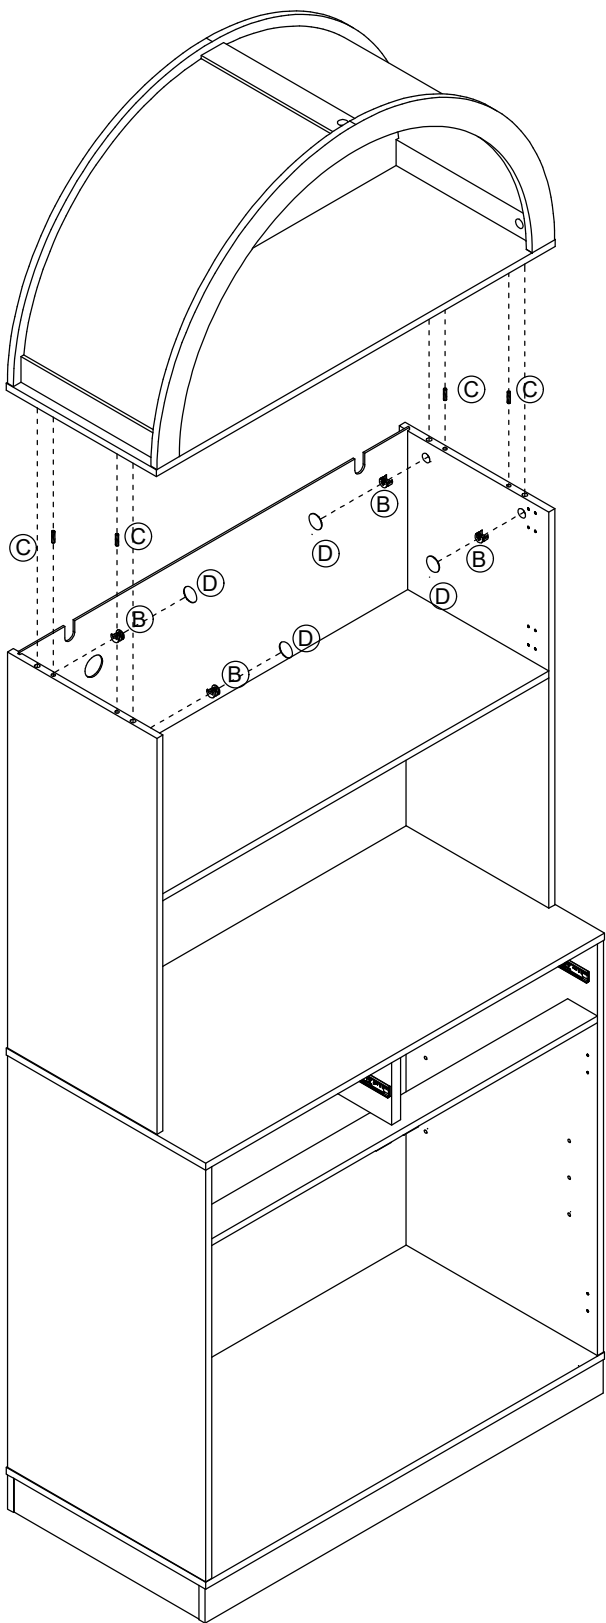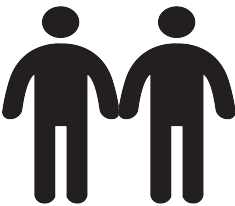




Ⓓ	X4	Ⓒ	X4	Ⓑ	X4
Plug the hole					
Ø20mm		Ø6*30mm		Ø15*9.5mm	

Step27

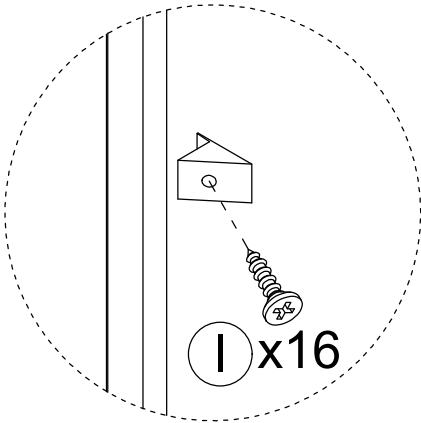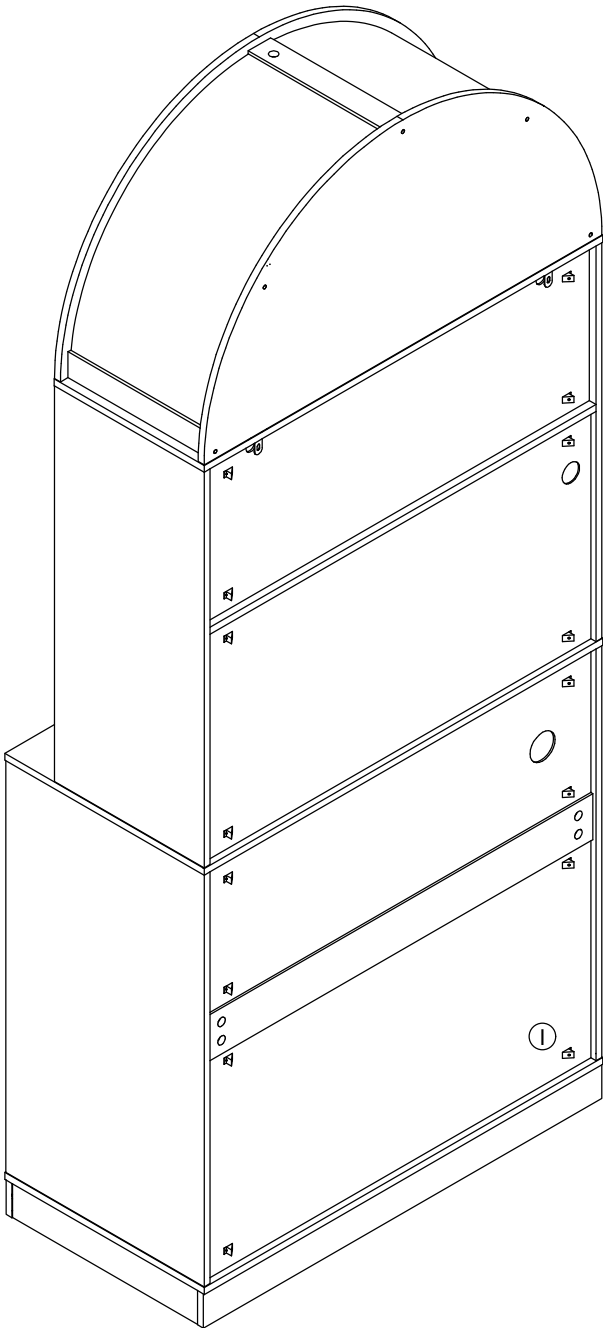




I	X16
	
Ø3*16mm	

Step28

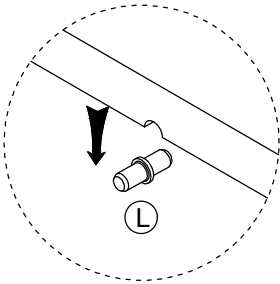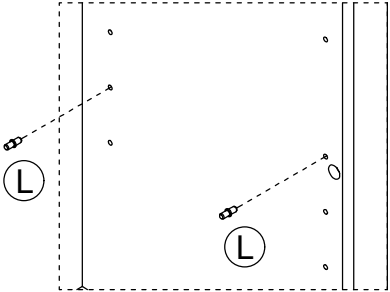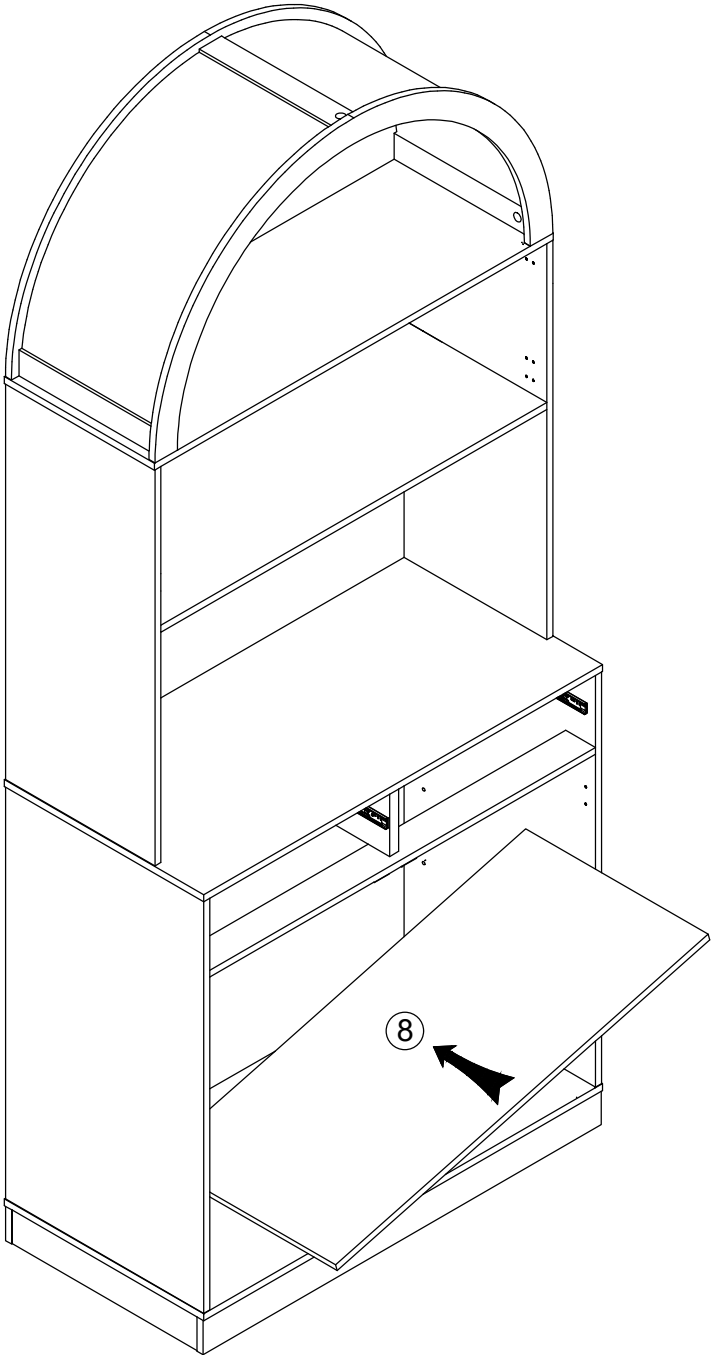


(L)	X4

Step29

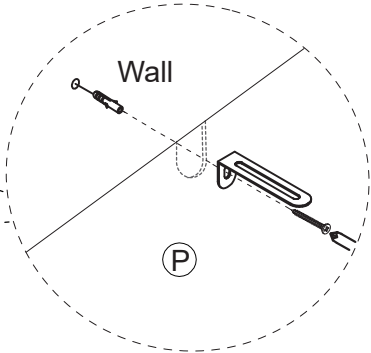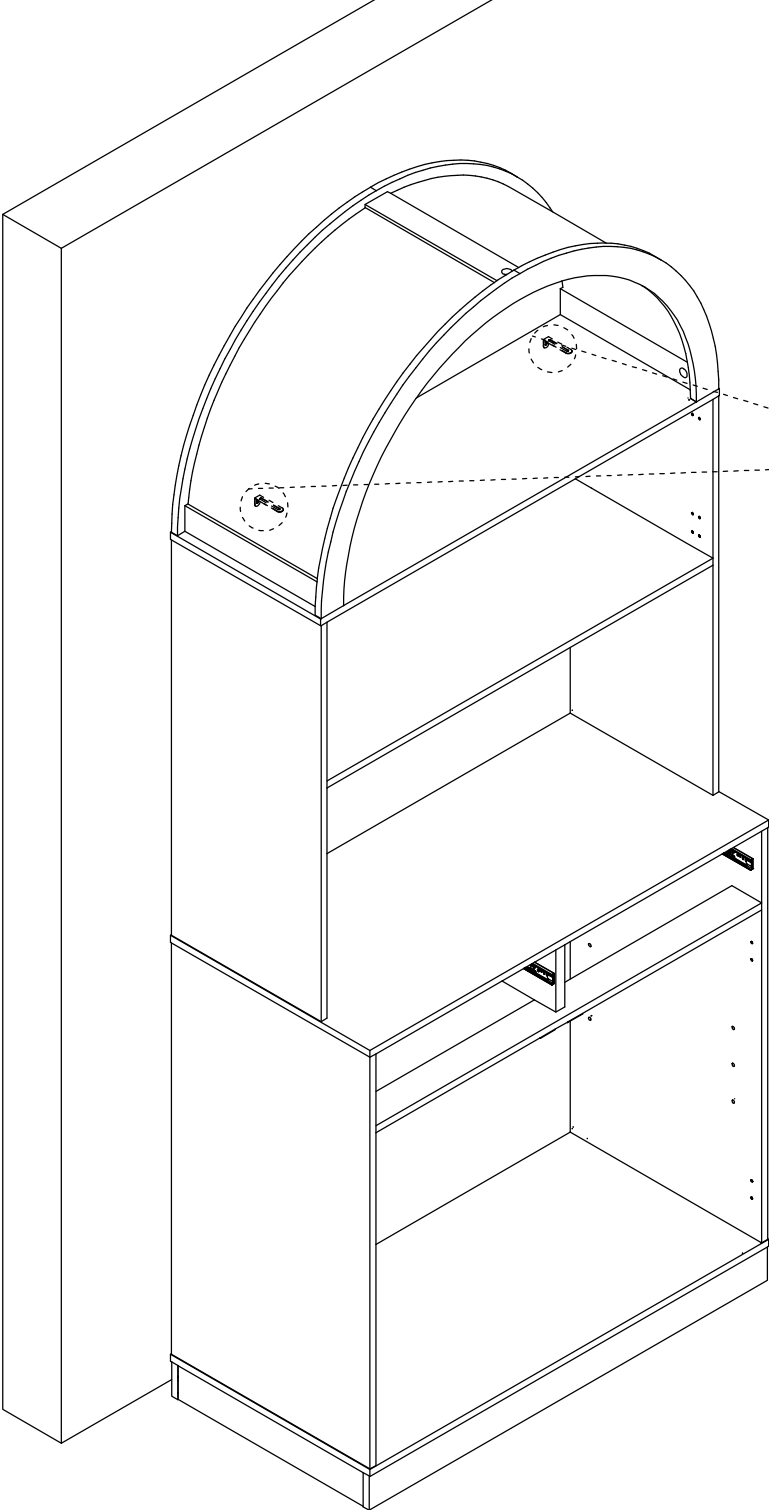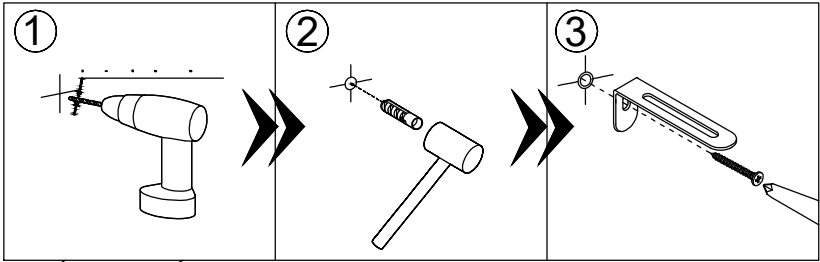


Ⓢ	X2
	
Ø6*30&Ø4*35mm	

Step30

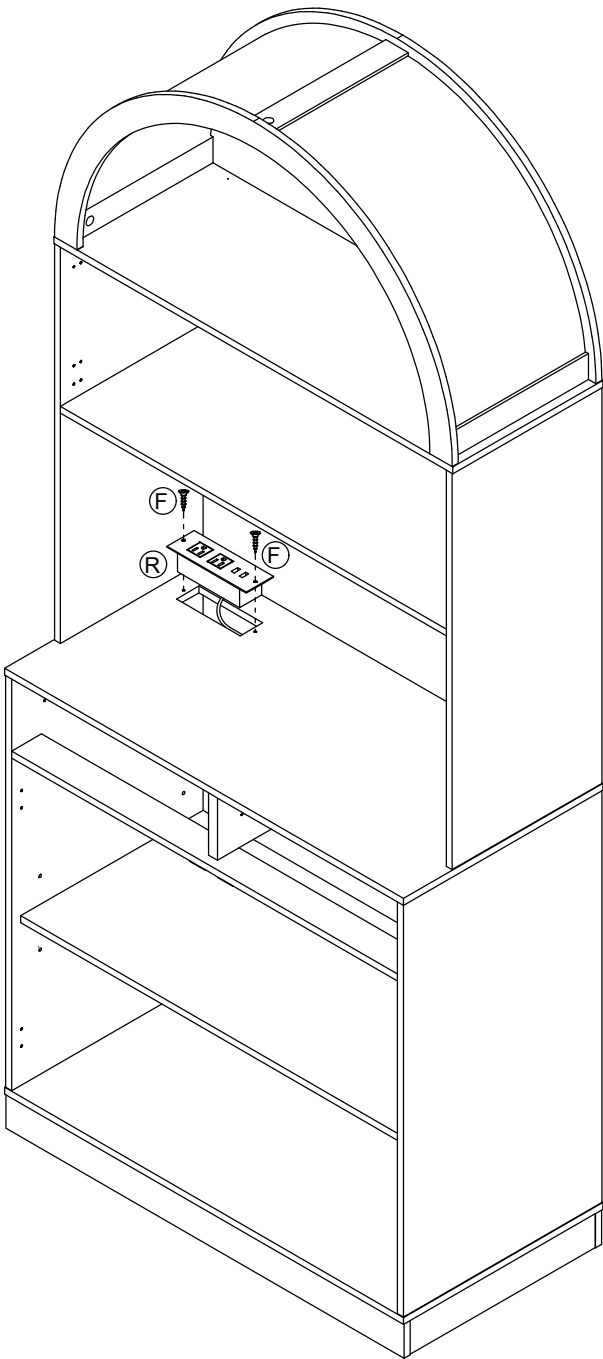


(R)	X1	(F)	X2
			
		Ø3.5*12mm	

Step31

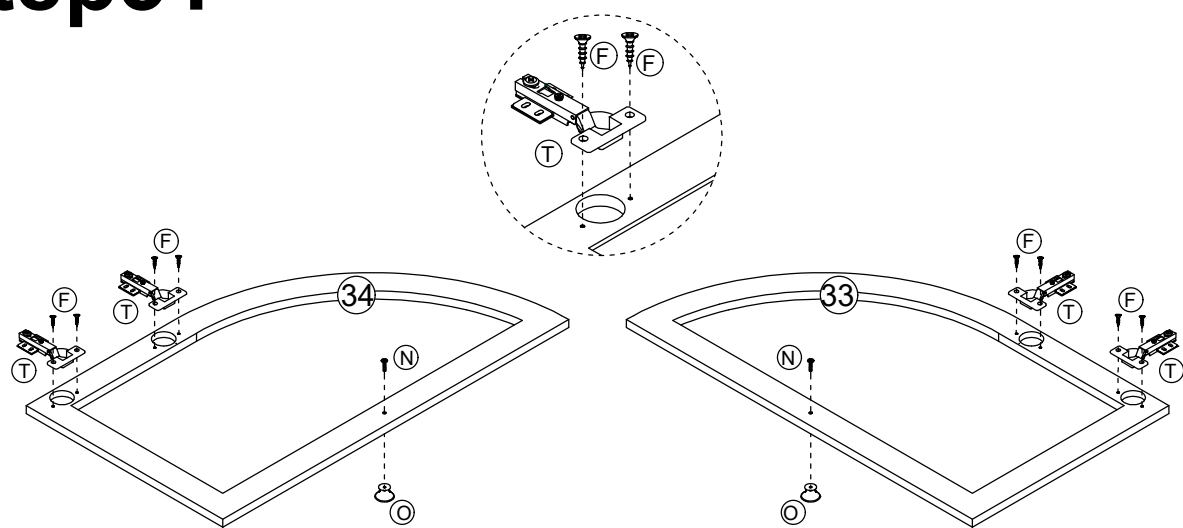


Ⓙ	X4	⓪	X2	Ⓝ	X2	Ⓕ	X8
							
				M4*15mm		Ø3.5*12mm	

Step32

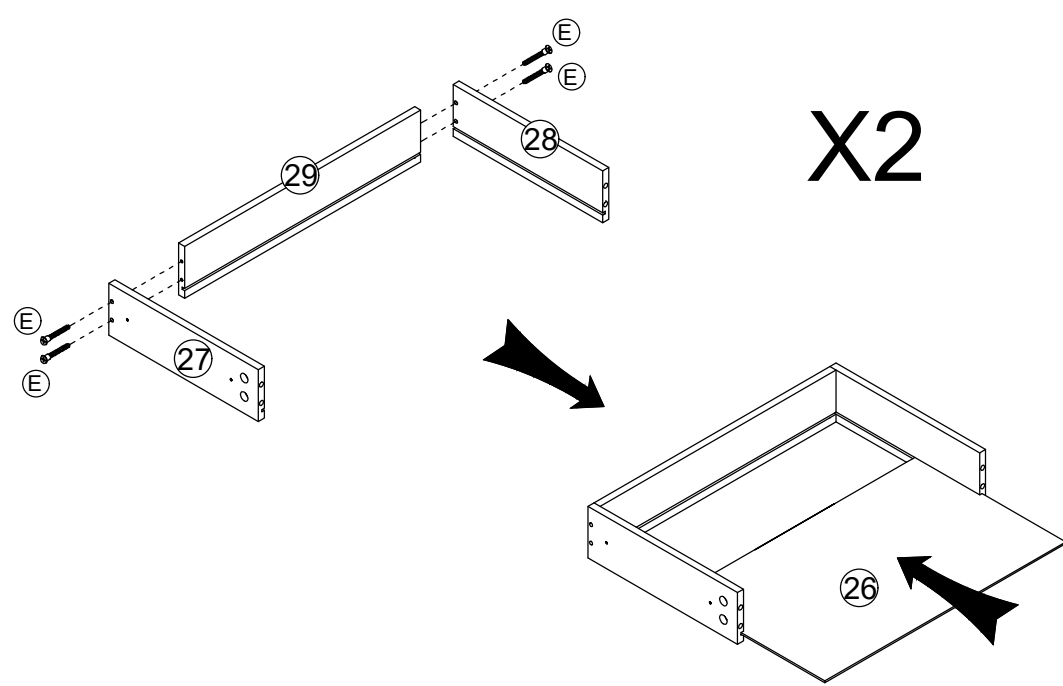


(E)	X8
	
Ø5*40mm	



Step33

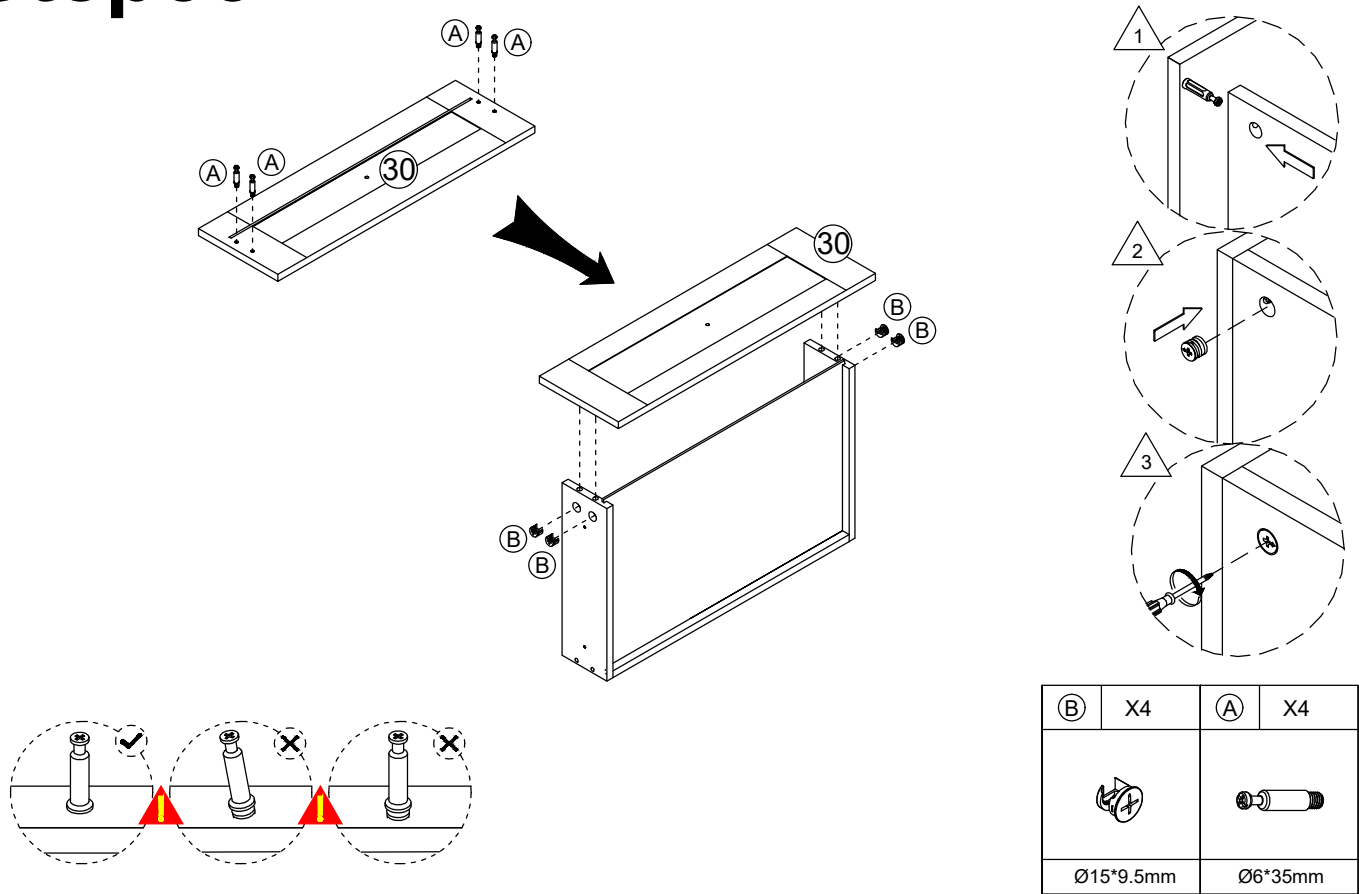

Step34


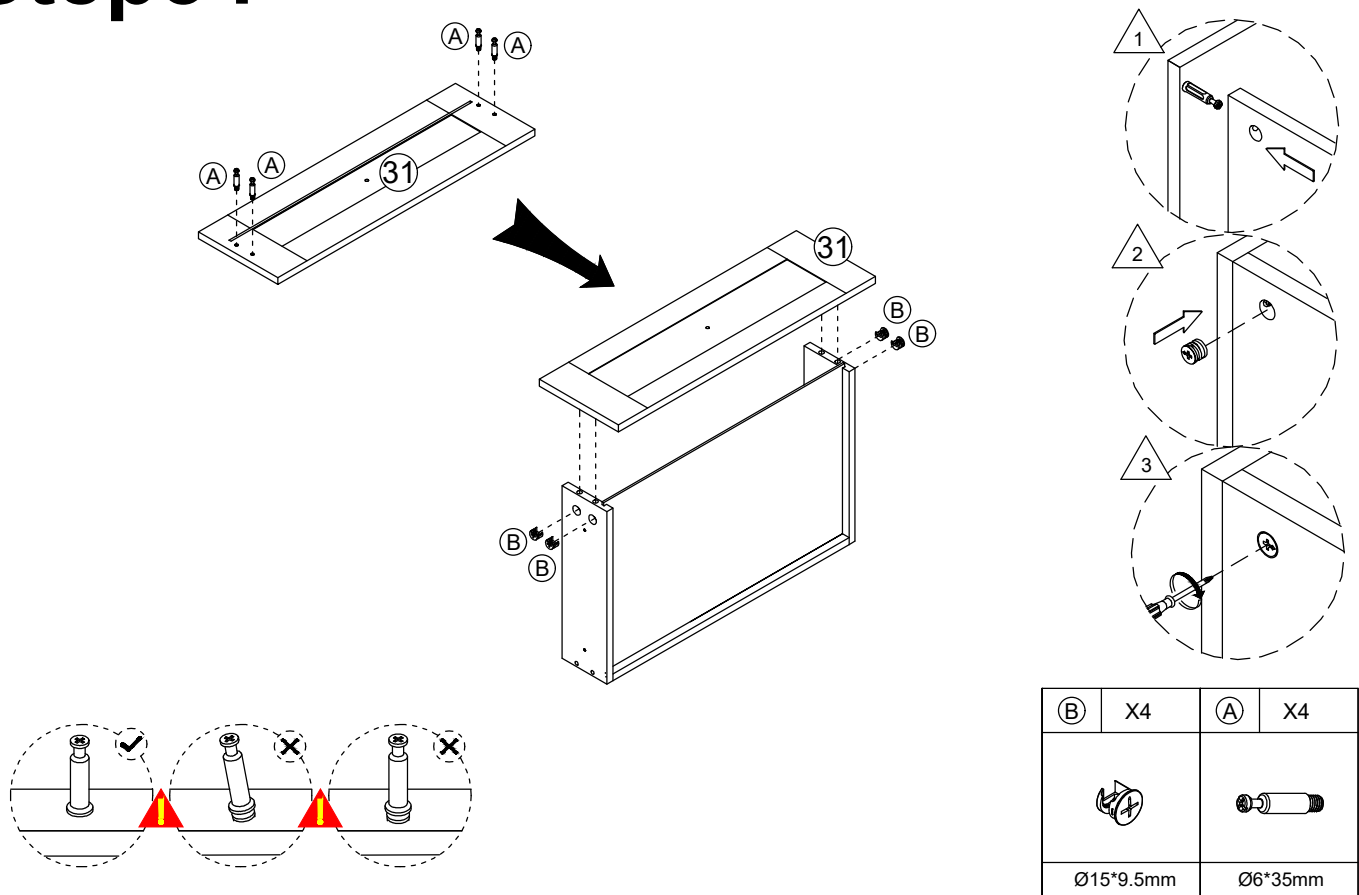


Step35

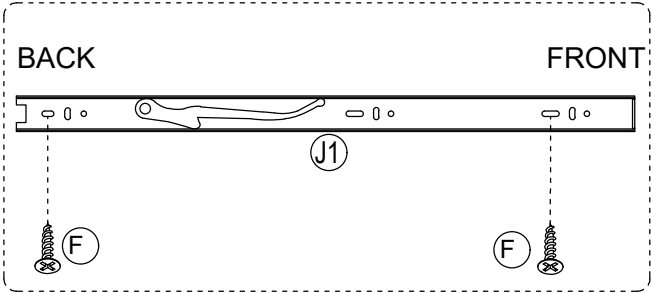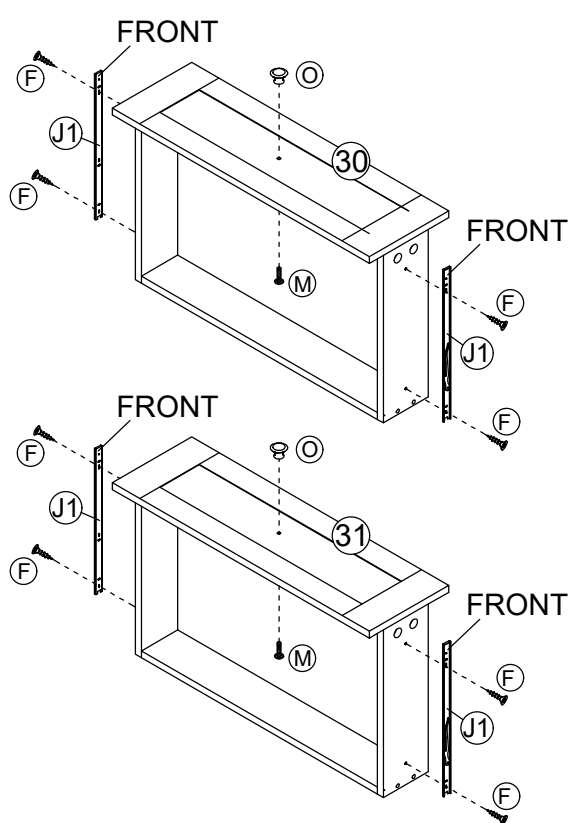

⊙	X2	Ⓜ	X2	ⓙ	X4	Ⓕ	X8
		M4*8mm		300mm		Ø3.5*12mm	

Step36

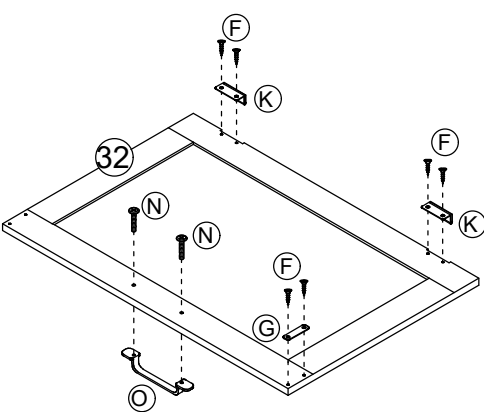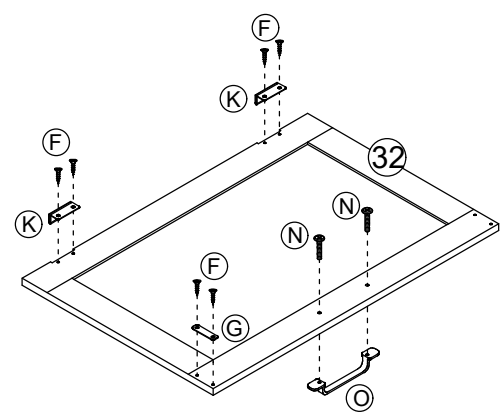


⊙	X2	Ⓝ	X4	Ⓚ	X4	Ⓖ	X2	Ⓕ	X12
		M4*15mm						Ø3.5*12mm	

Assembly Steps

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.


STEP 1

Open the door.

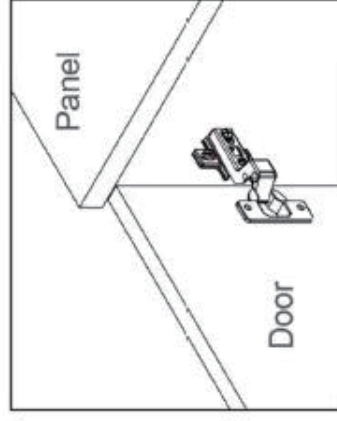

STEP 2

Adjust the door panels up or down

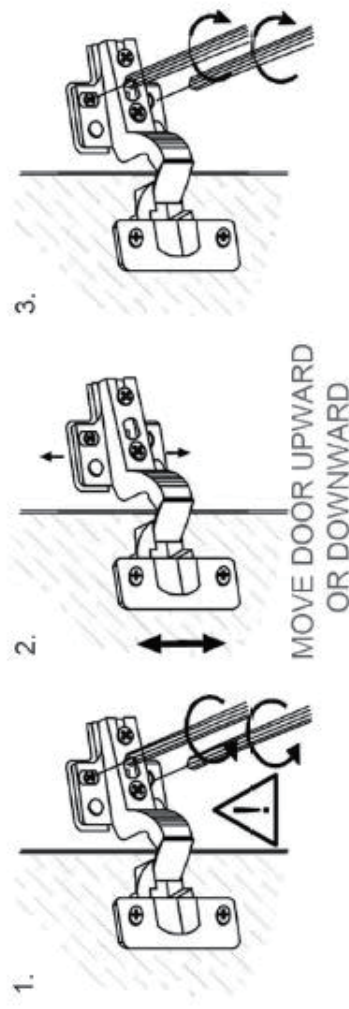


Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.

Tighten 2 screws in oval holes. Screw in 2 screws in round holes

STEP 3

Adjust the flush between door panel and side panel

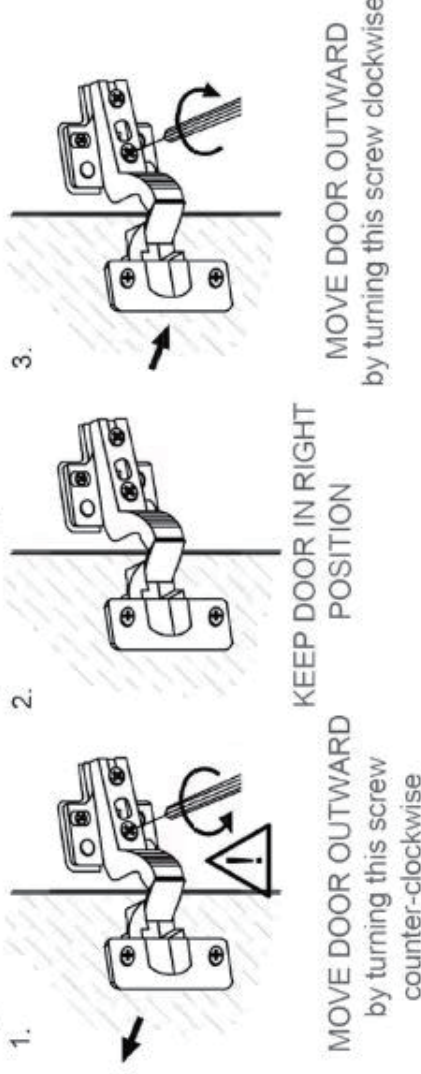


KEEP DOOR IN RIGHT POSITION

MOVE DOOR OUTWARD by turning this screw counter-clockwise

MOVE DOOR OUTWARD by turning this screw clockwise

STEP 4



Adjust the Gap between door panel and side panel

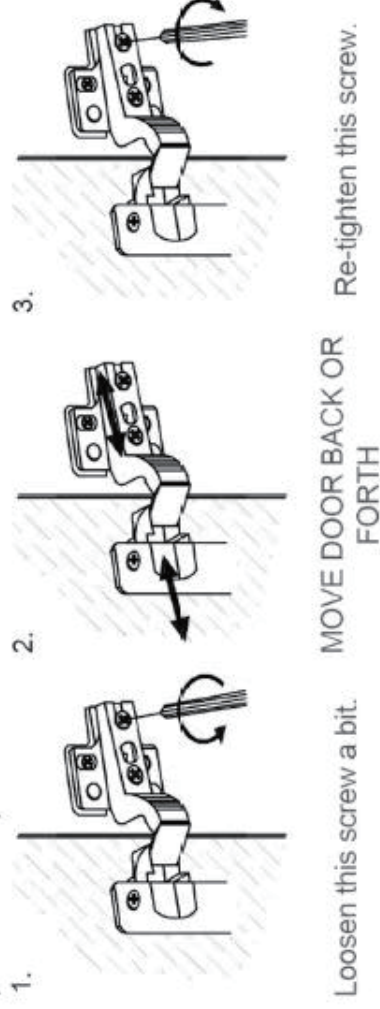

Loosen this screw a bit.

Re-tighten this screw.

Step37

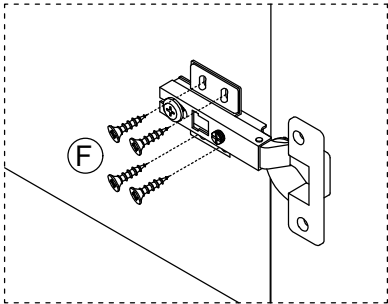
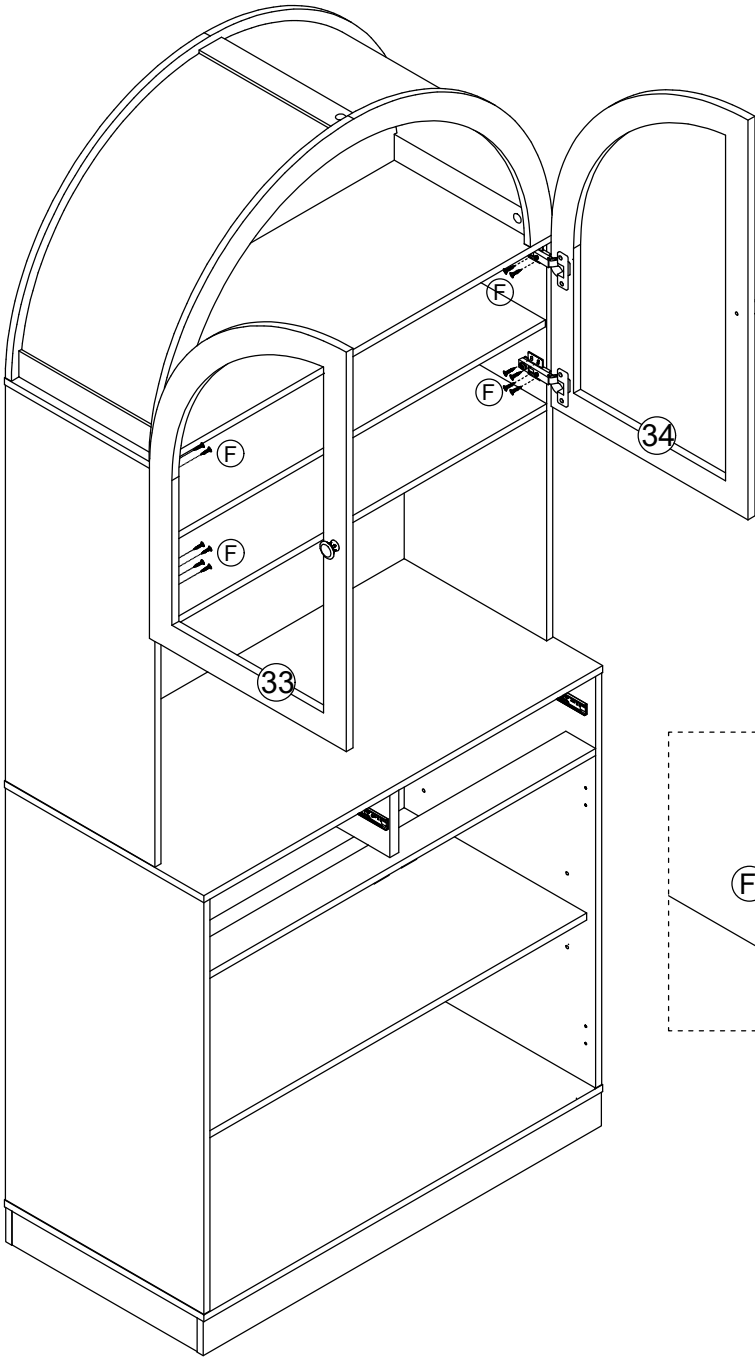


F	X16
	
Ø3.5*12mm	


Step38

Align with the slide rail position and insert the drawer.

Note: For optimal alignment, please adjust the drawer up and down to fit the tracks properly.

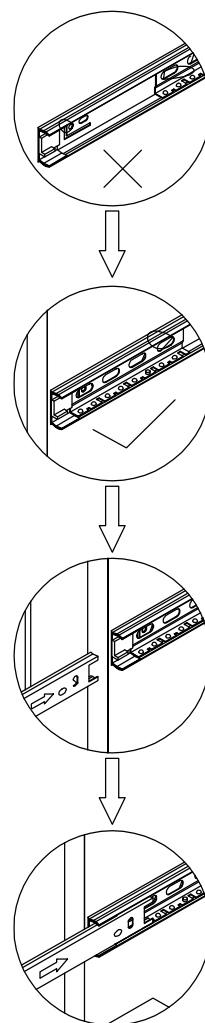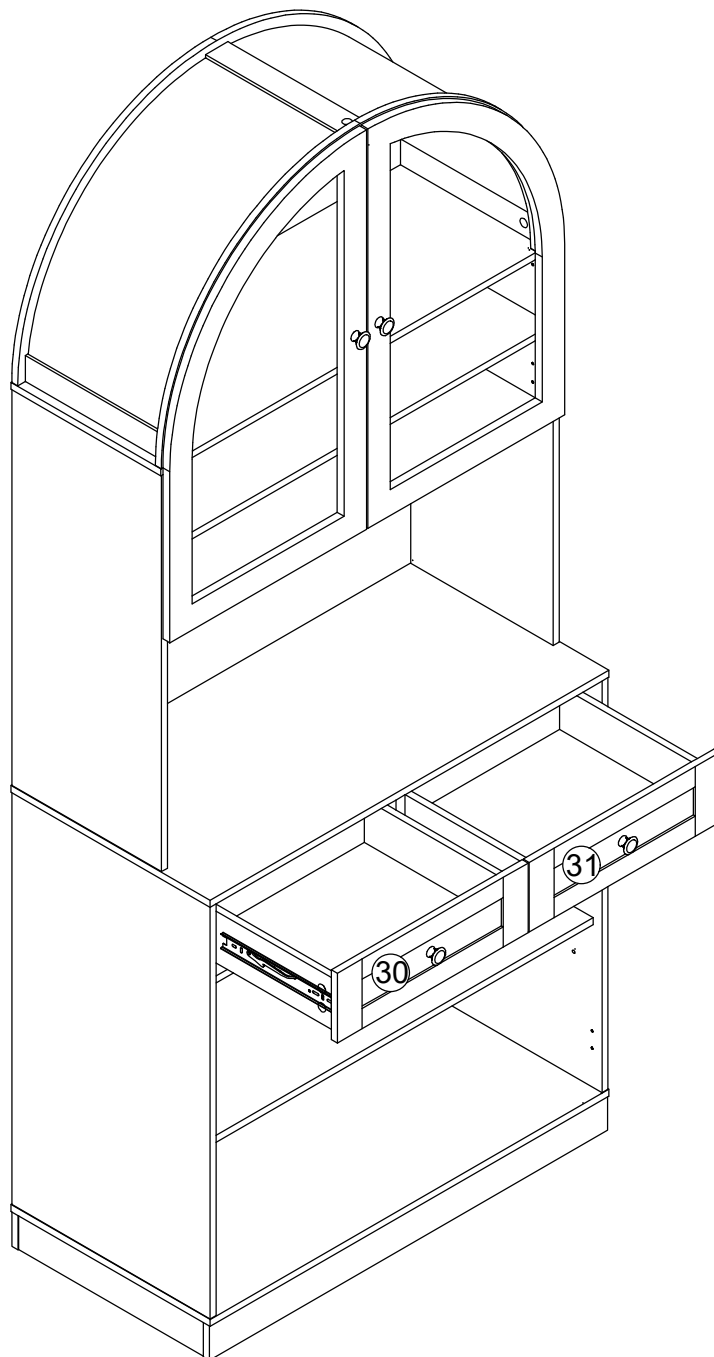

Step39

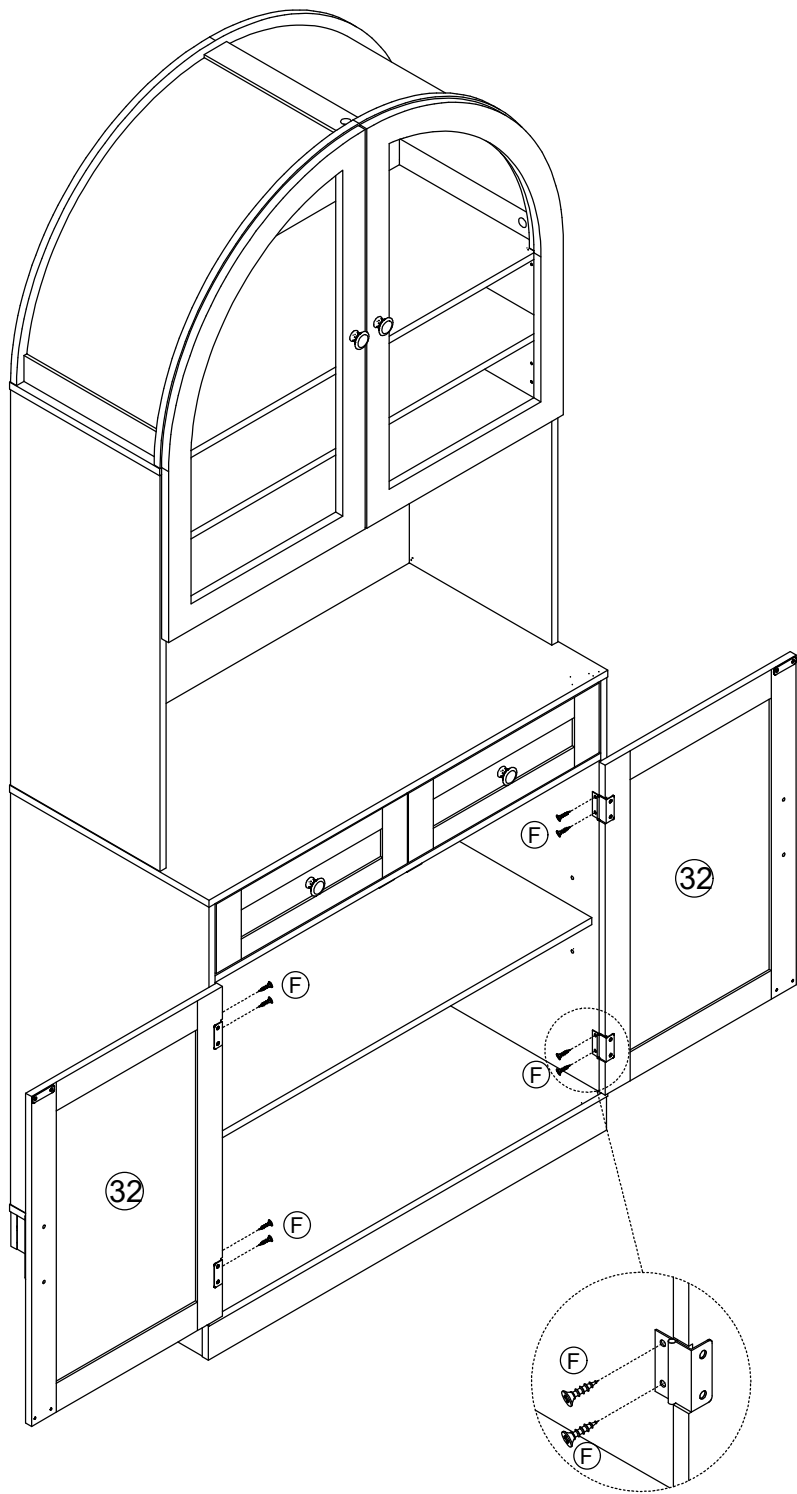

Ⓕ	X8
	
Ø3.5*12mm	

COMPLETE

