

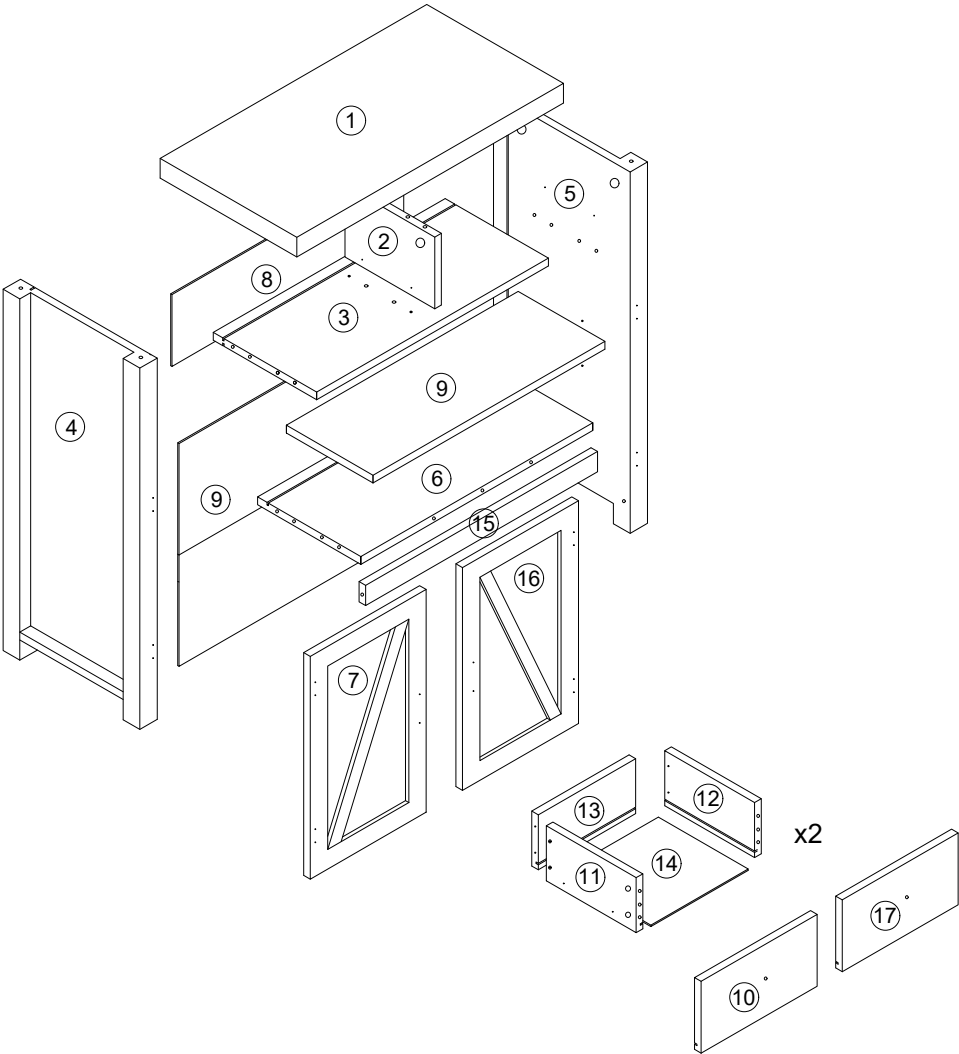
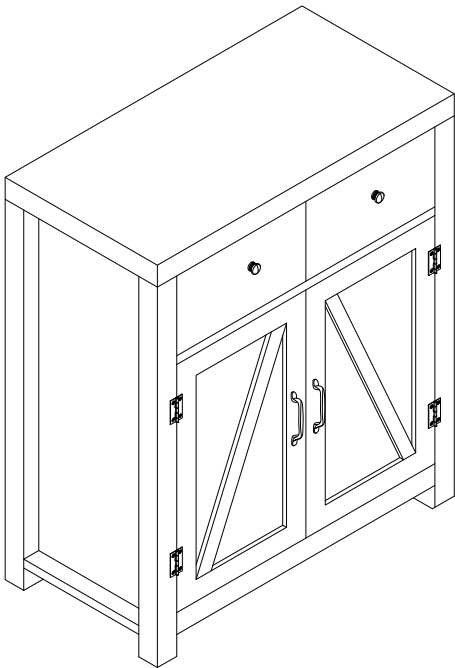




SIDE/ACCENT CABINET




						
6x35mm	Ø15x9mm	4x40mm	6x30mm	3x12mm	4x18mm	
A 23PCS	B 23PCS	C 10PCS	D 20PCS	E 20PCS	F 6PCS	G 2PCS
						
3x14mm						3x12mm
H 12PCS	I 2PCS	J 8PCS	K 2PCS	L 4PCS	M 4PCS	N 16PCS
						
O 2PCS	CL 2PCS	CR 2PCS	DL 2PCS	DR 2PCS		

step 1

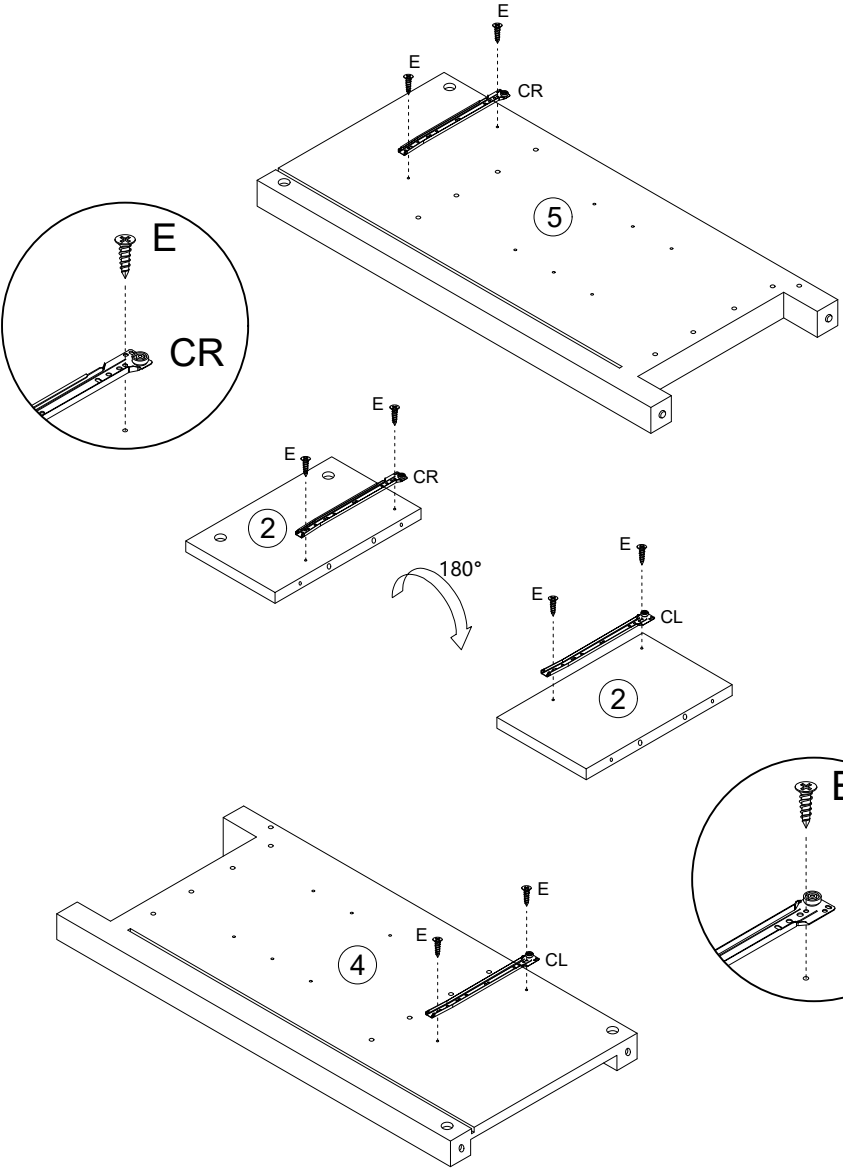


- E x8
3x12mm
- CL x2
350mm
- CR x2
350mm

step 2

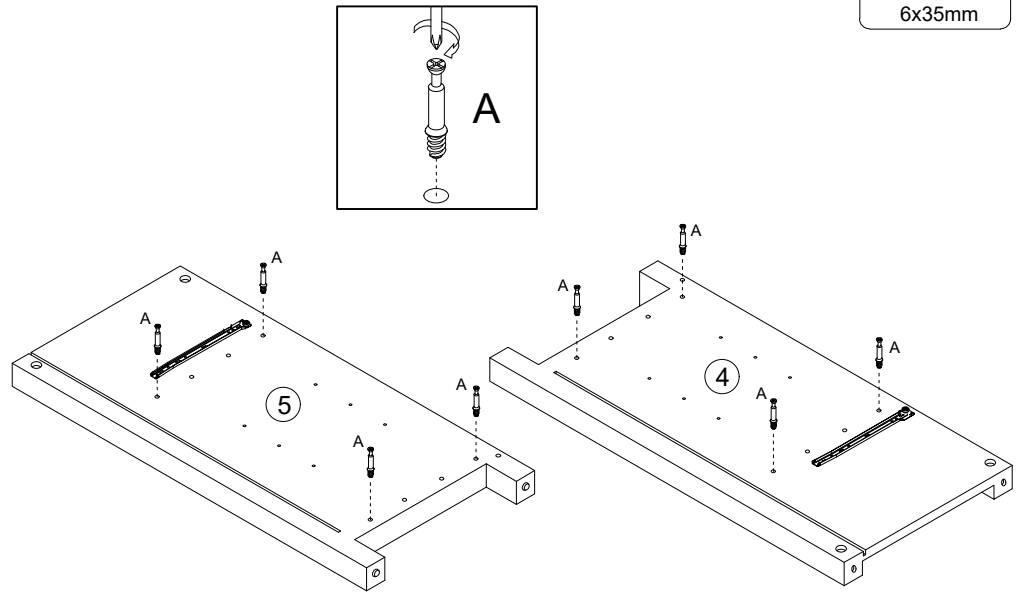


- A x8
6x35mm

step 3

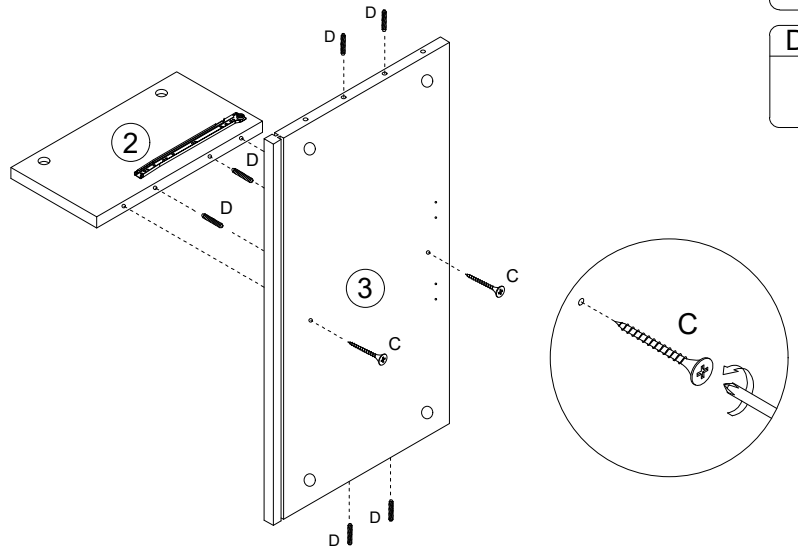


- C x2
4x40mm
- D x6
6x30mm

step 4

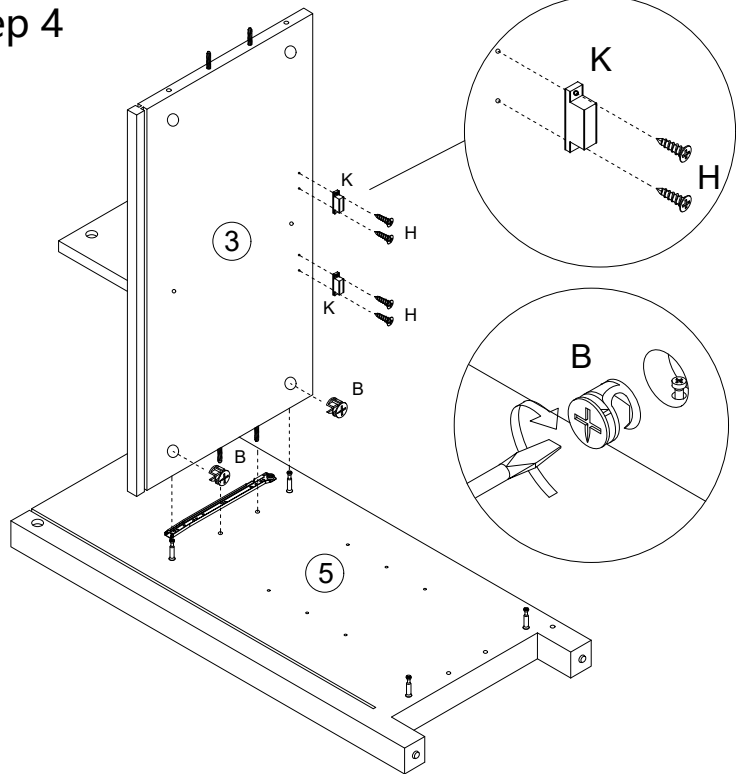


B	x2
	
ø15x9mm	
H	x4
	
3x14mm	
K	x2
	

step 5

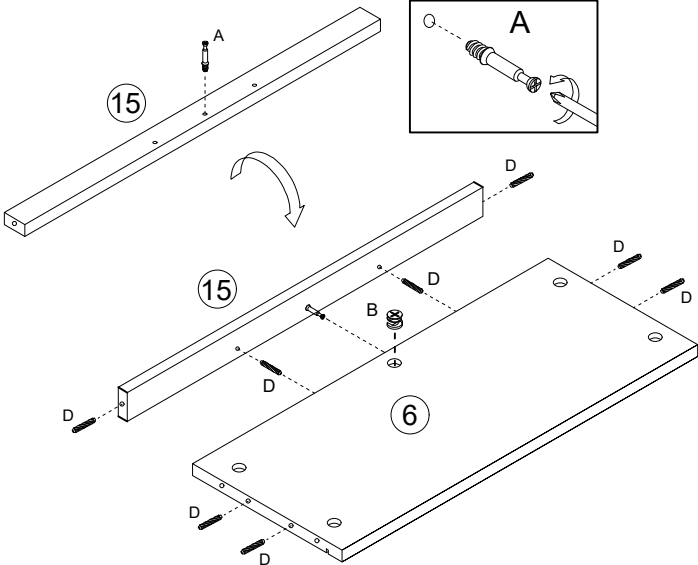


A	x1
	
6x35mm	
B	x1
	
ø15x9mm	
D	x8
	
6x30mm	

step 6

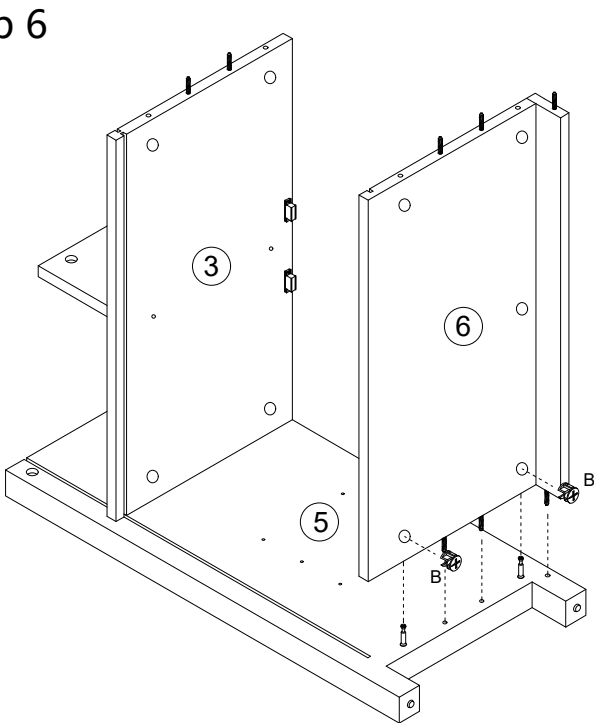


B	x2
	
ø15x9mm	

step 7

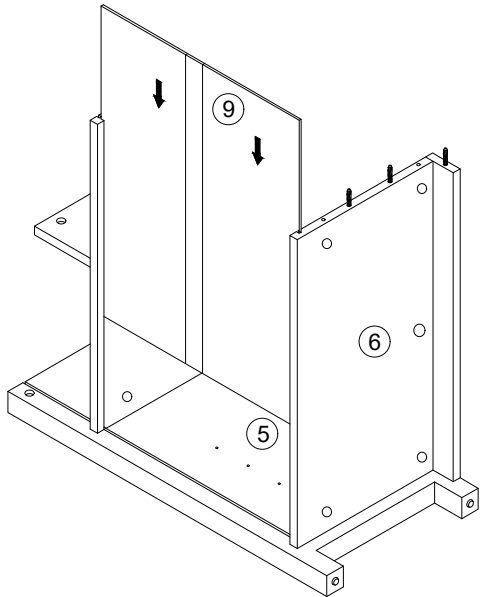


step 8

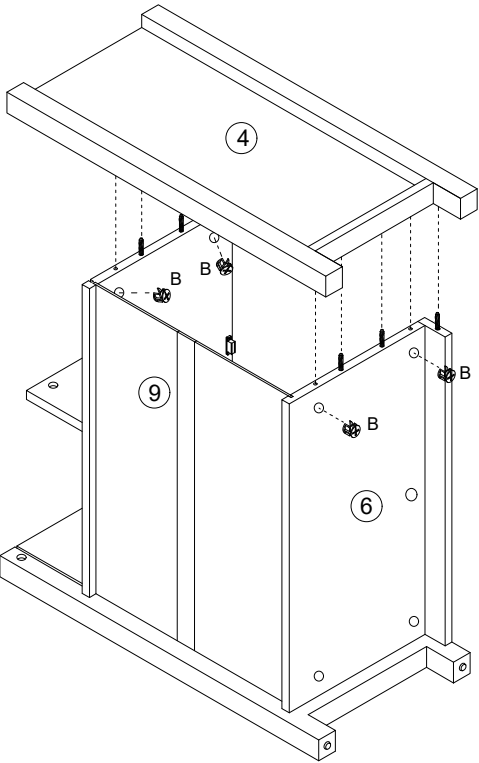


B x4

Ø15x9mm

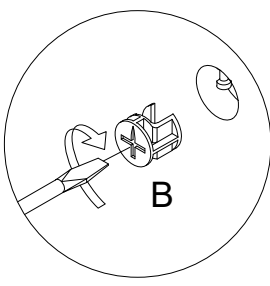


step 9x2

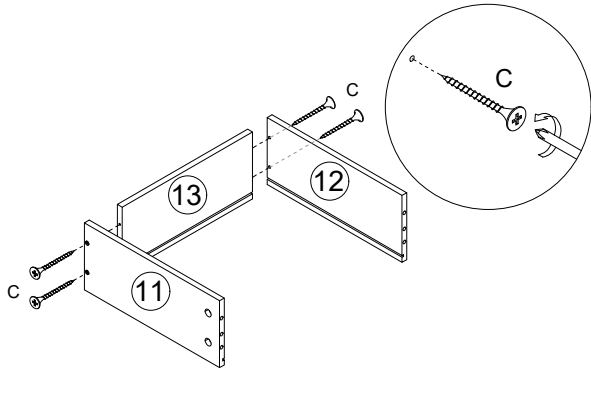


C x8

4x40mm

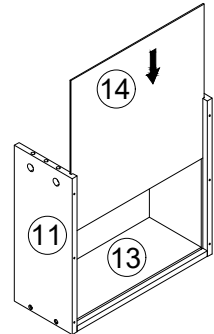

step 10

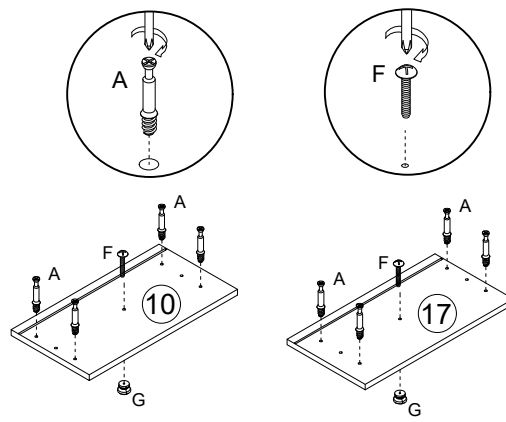

A x8


6x35mm

F x2

4x18mm

G x2

step 11

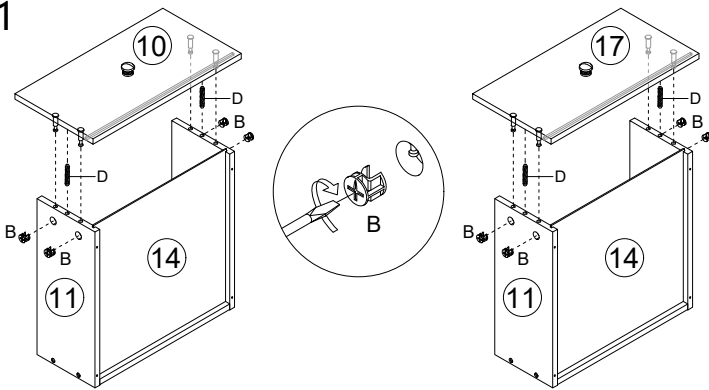


B x8

Ø15x9mm

D x4

6x30mm

step 12

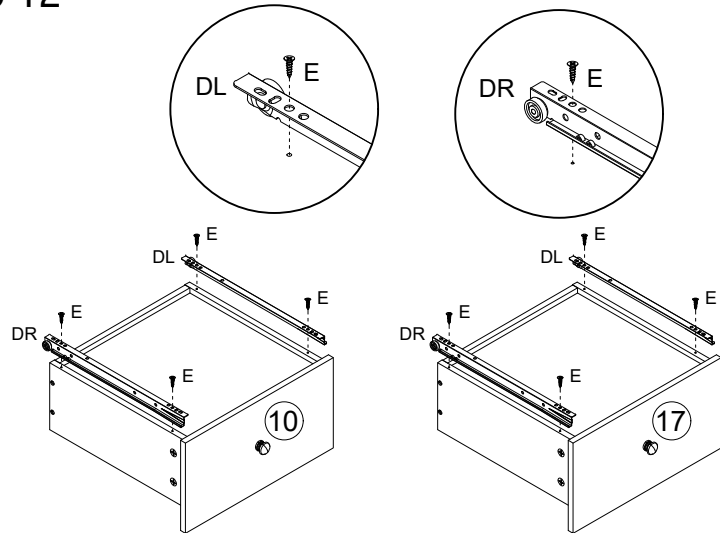

E x8

3x12mm


DL x2

350mm

DR x2



350mm

step 13

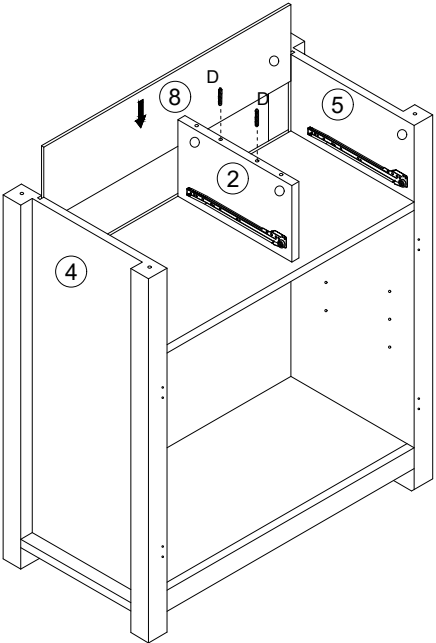




D x2
6x30mm

step 14

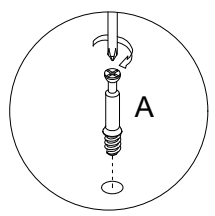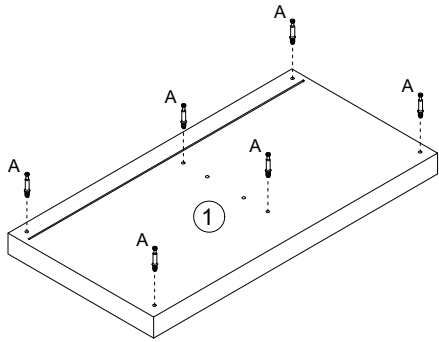


A x6
6x35mm

step 15

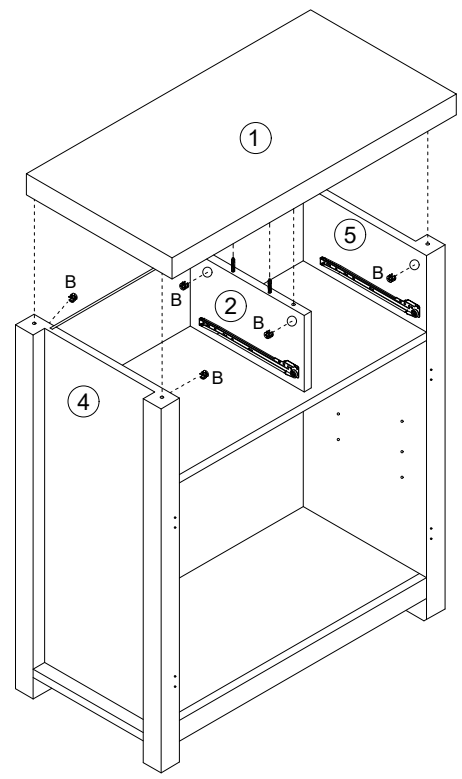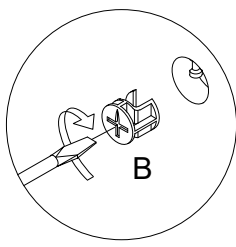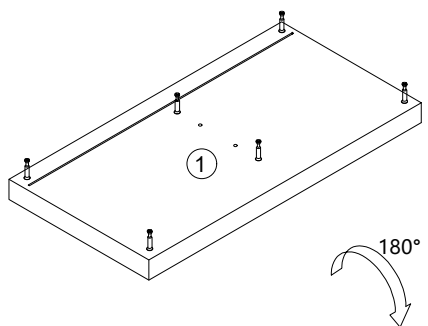


B x6
Ø15x9mm


step 16

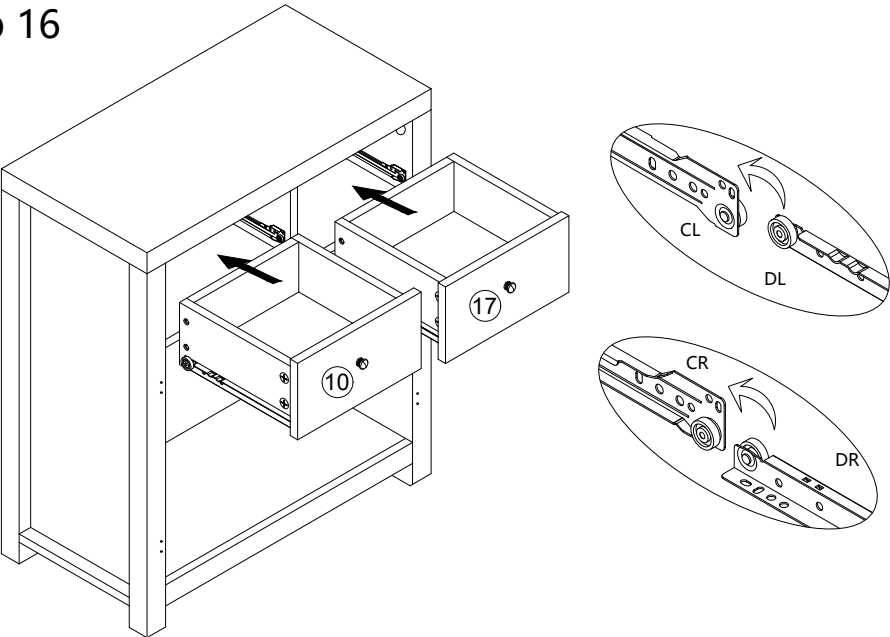

step 17


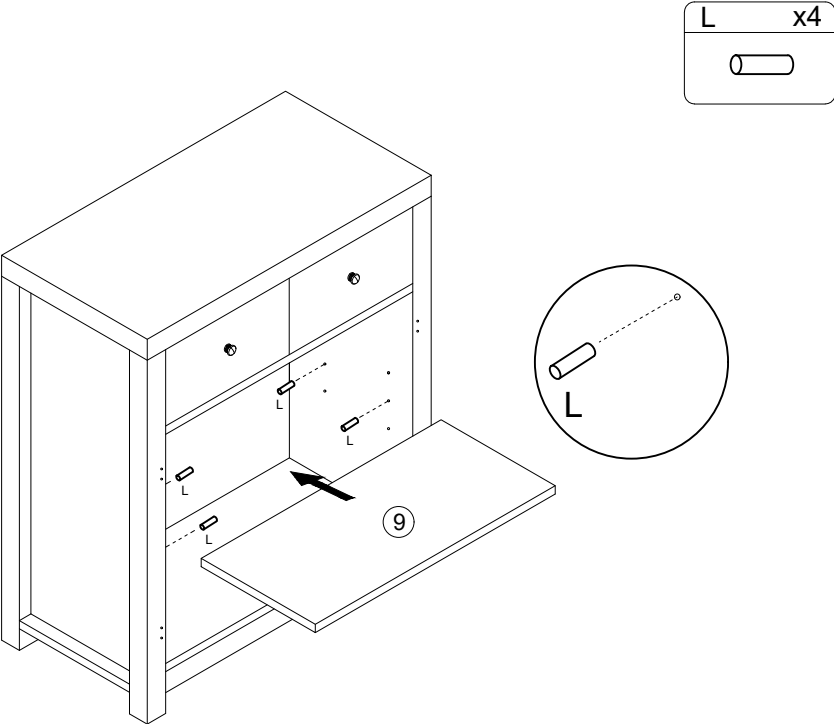


step 18

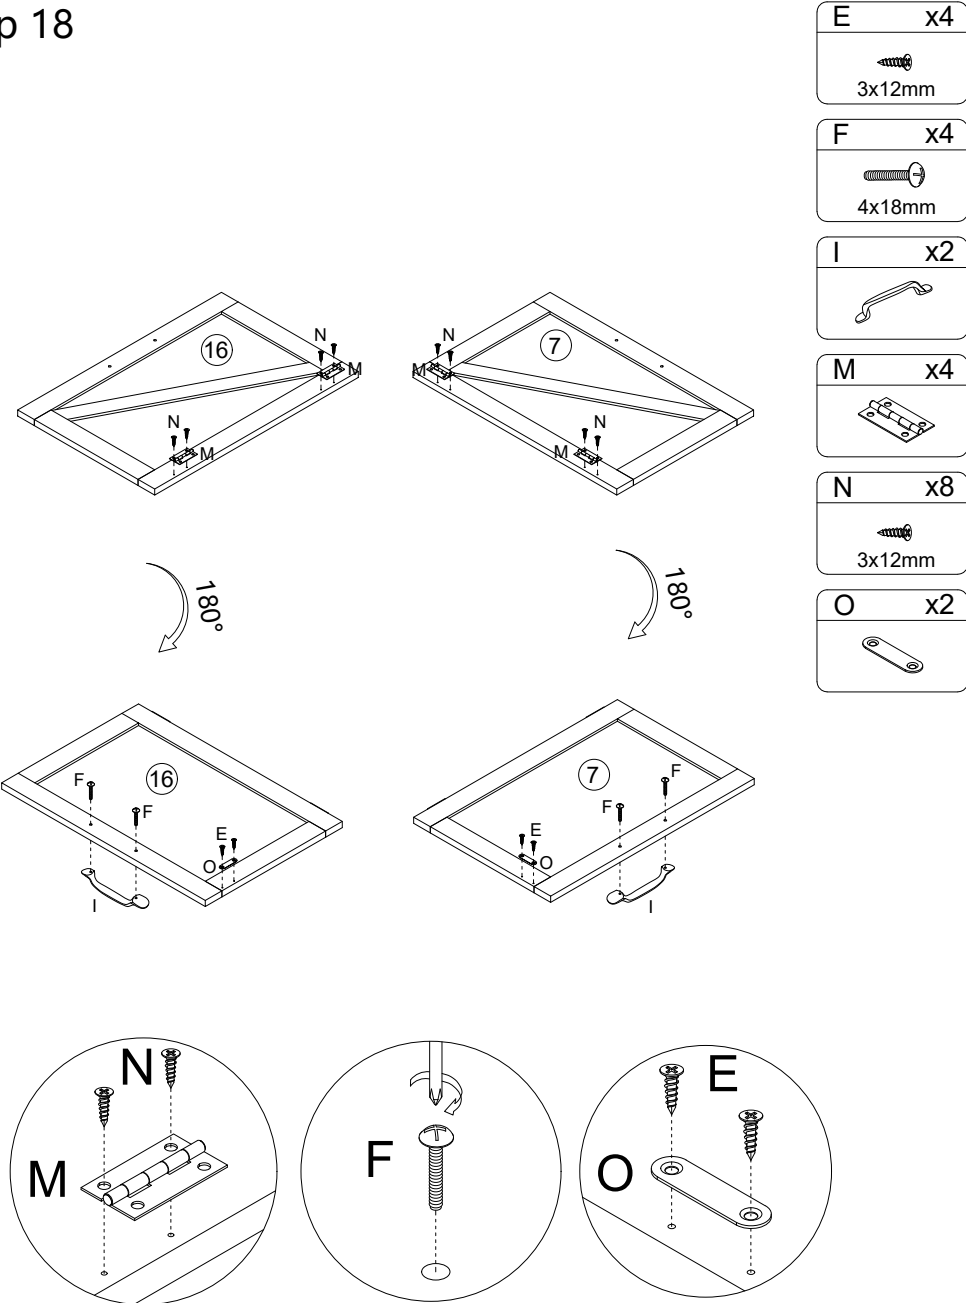

step 19

N x8
3x12mm

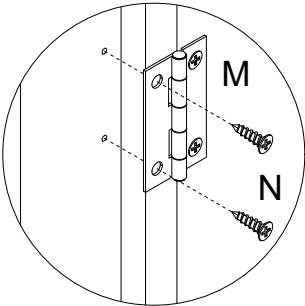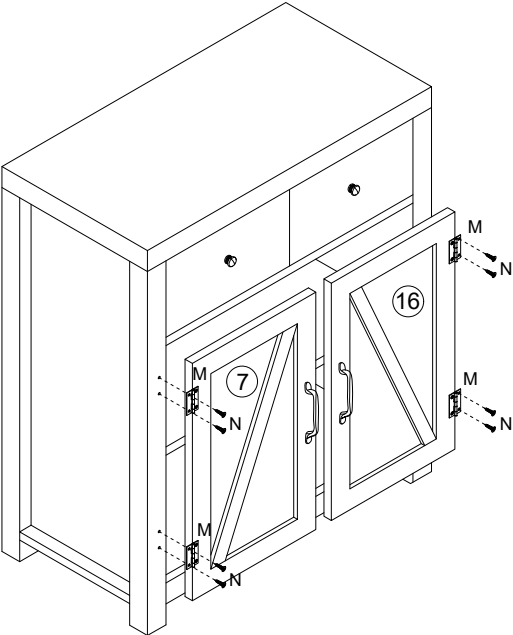

step 20

H x8
3x14mm

J x8

