
CHANDELIER	Model No.: YXP-7009G-4717

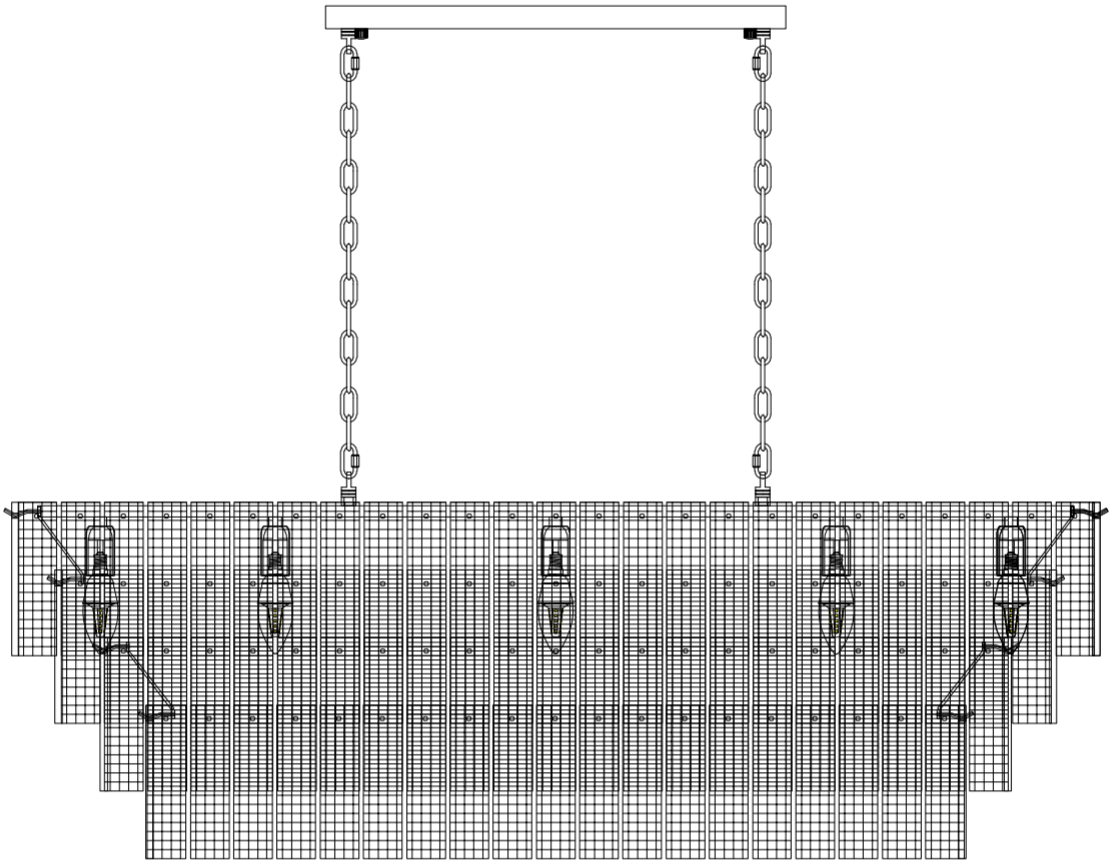


INSTALLATION MANUAL

TOOLS REQUIRED




Ladder



Pliers




Wire Strippers



Screwdrivers

01 PACKING LIST

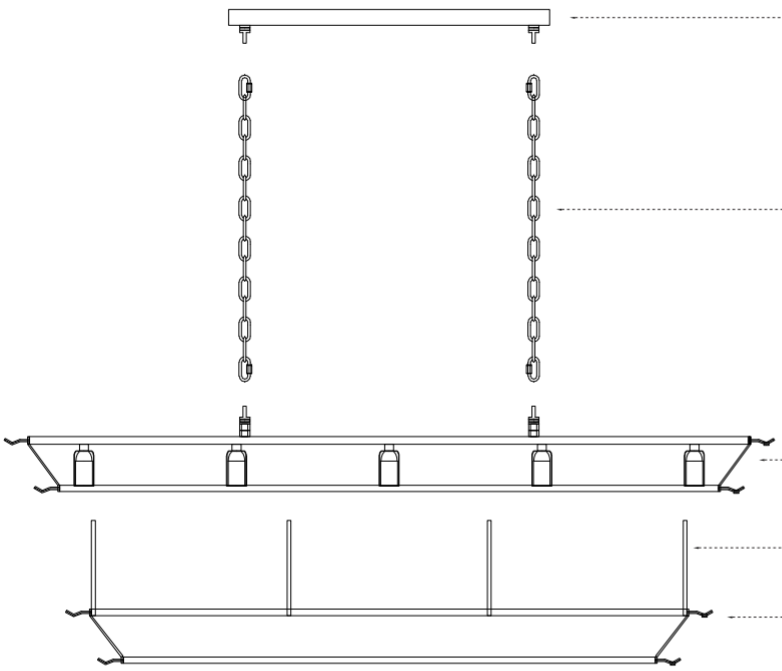

A. Canopy x1

B. Chain x1

C. Lamp Body x1

E. Tube x6

D. Bottom Lamp Frame x1

02 INSTALLATION KIT

AA 1×



Mounting Bracket

BB 1×



Ground Screw

CC 2×



Outlet Box Screw

DD 3×



Wire Nut

EE 2×



Plastic Anchor

FF 2×



Wood Screw

GG 2×



Flat Washer

HH 4×



Knurled Nut

II 6×



M5 Screw

JJ 6×




M3 Screw

KK 4×



Quick Link

LL 212×



Glass

MM 1×



Gloves

Note:

1. AA/BB/HH has already been pre-installed with Canopy (A); KK has already been pre-installed with Chain (B).
2. LL has one spare.
3. Some extra hardware may be included. The quantity listed above is the number required for installation.

03 MOUNTING AND WIRE


1. Install the Mounting Bracket


Step 1. Loosen the Knurled Nut (HH) from the Canopy (A), and take out the Mounting Bracket (AA).

Step 2. Plan the holes for the Mounting Bracket (AA) first, then place the Plastic Anchor (EE) inside the punched holes.

Step 3. Remove the screws from the outlet box and secure the Mounting Bracket (AA) onto the box using the screws removed or the Outlet Box Screw (CC).


Step 4. Pass the Wood Screw (FF) through the Flat Washer (GG) and Mounting Bracket (AA), and lock it into the hole of the Plastic Anchor (EE).

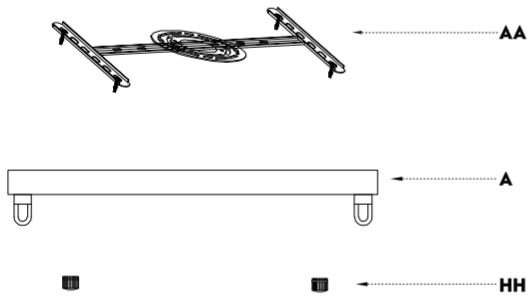

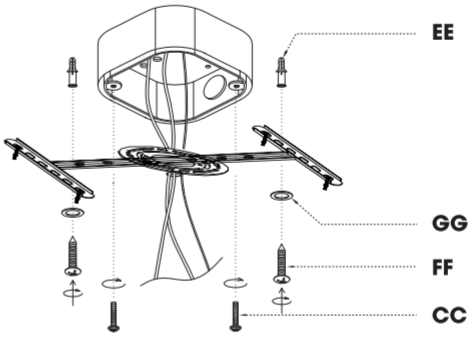

2. Assemble the Lamp Body


Use the Tube (E) to install the Bottom Lamp Frame (D) on the Lamp Body (C), and secure it with an M3 Screw (JJ) / M5 Screw (II) as shown.

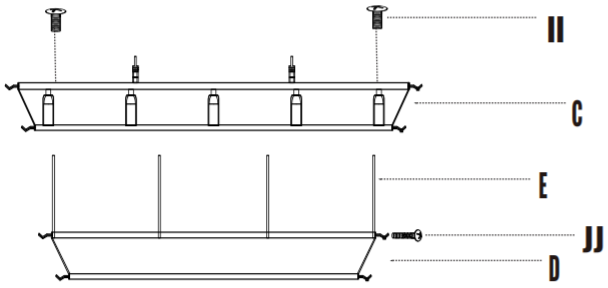

3. Pass the Wire

Step 1: Pass the wire from the Lamp Body (C) through the Chain (B) and the Canopy (A) in turn.

Step 2: Open the knob on Quick Link (KK). Then connect the Quick Link (KK) to both ends of Chain (B), attaching it to Canopy (A) and Lamp Body (C). Finally, secure the Quick Link (KK) tightly.

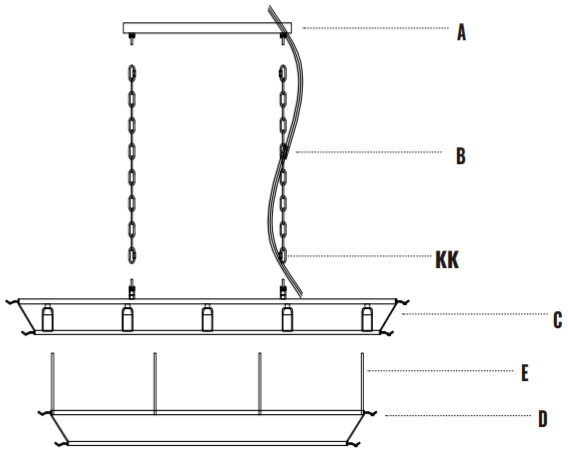


4. Connect the Wires

Step 1. Wrap the ground wire from the outlet box around the Ground Screw (BB) on the Mounting Bracket (AA), and then connect the ground wire from the fixture to the ground wire from the outlet box.


Step 2. Connect the wires from the fixture to the house supply wires, neutral (white) to neutral wire, and hot (black) to hot wire.

Step 3. Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other.

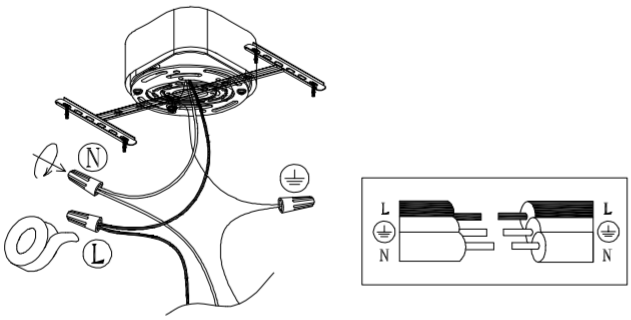

5. Fix the Canopy


Fix the Canopy (A) onto the Mounting Bracket (AA) with the Knurled Nut (HH).

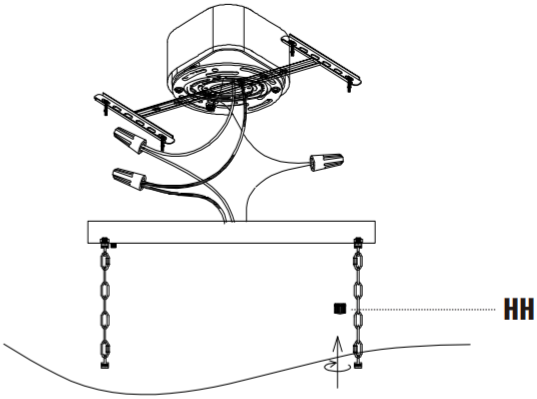

04 INSTALLING THE CRYSTAL

1.Install GLASS

Hang the Glass (LL) on the Lamp Body (C).

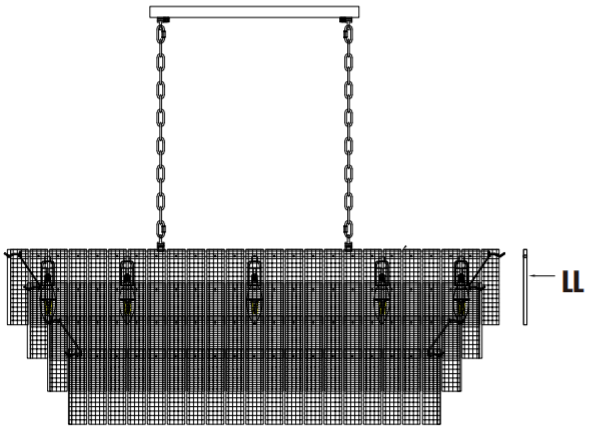

2. Install Bulbs

Install the E12 x17pcs bulbs (not included).

NOTE:

This lamp uses E12 bulbs base and can only be used in conjunction with LED bulbs up to 40W.

Fully dimmable when used with dimmable bulbs and compatible dimming switches (not included).

