


Assembly Instruction

BED209AQ

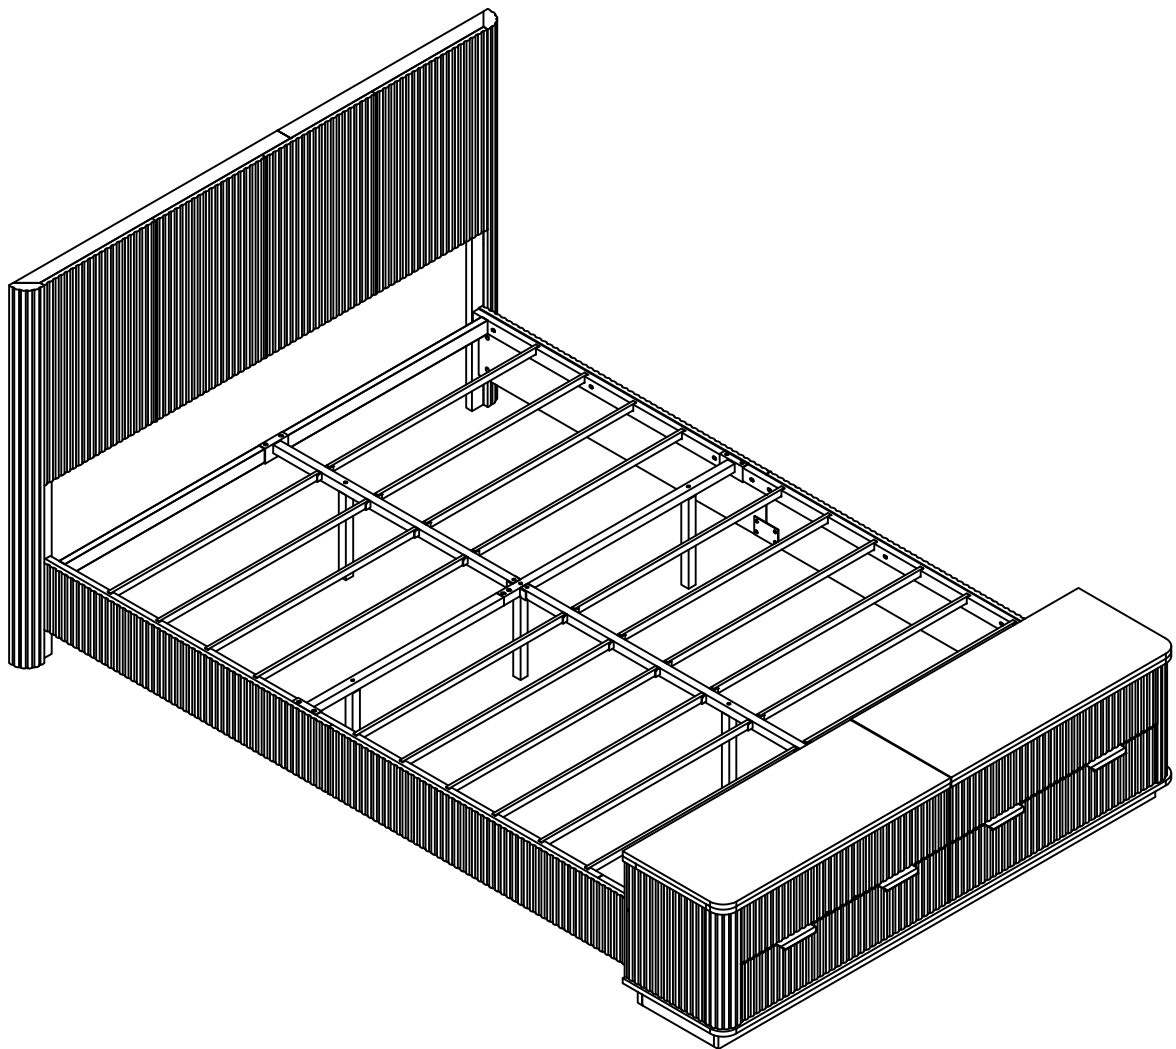

General Guidelines


- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

Notes





- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.















Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.




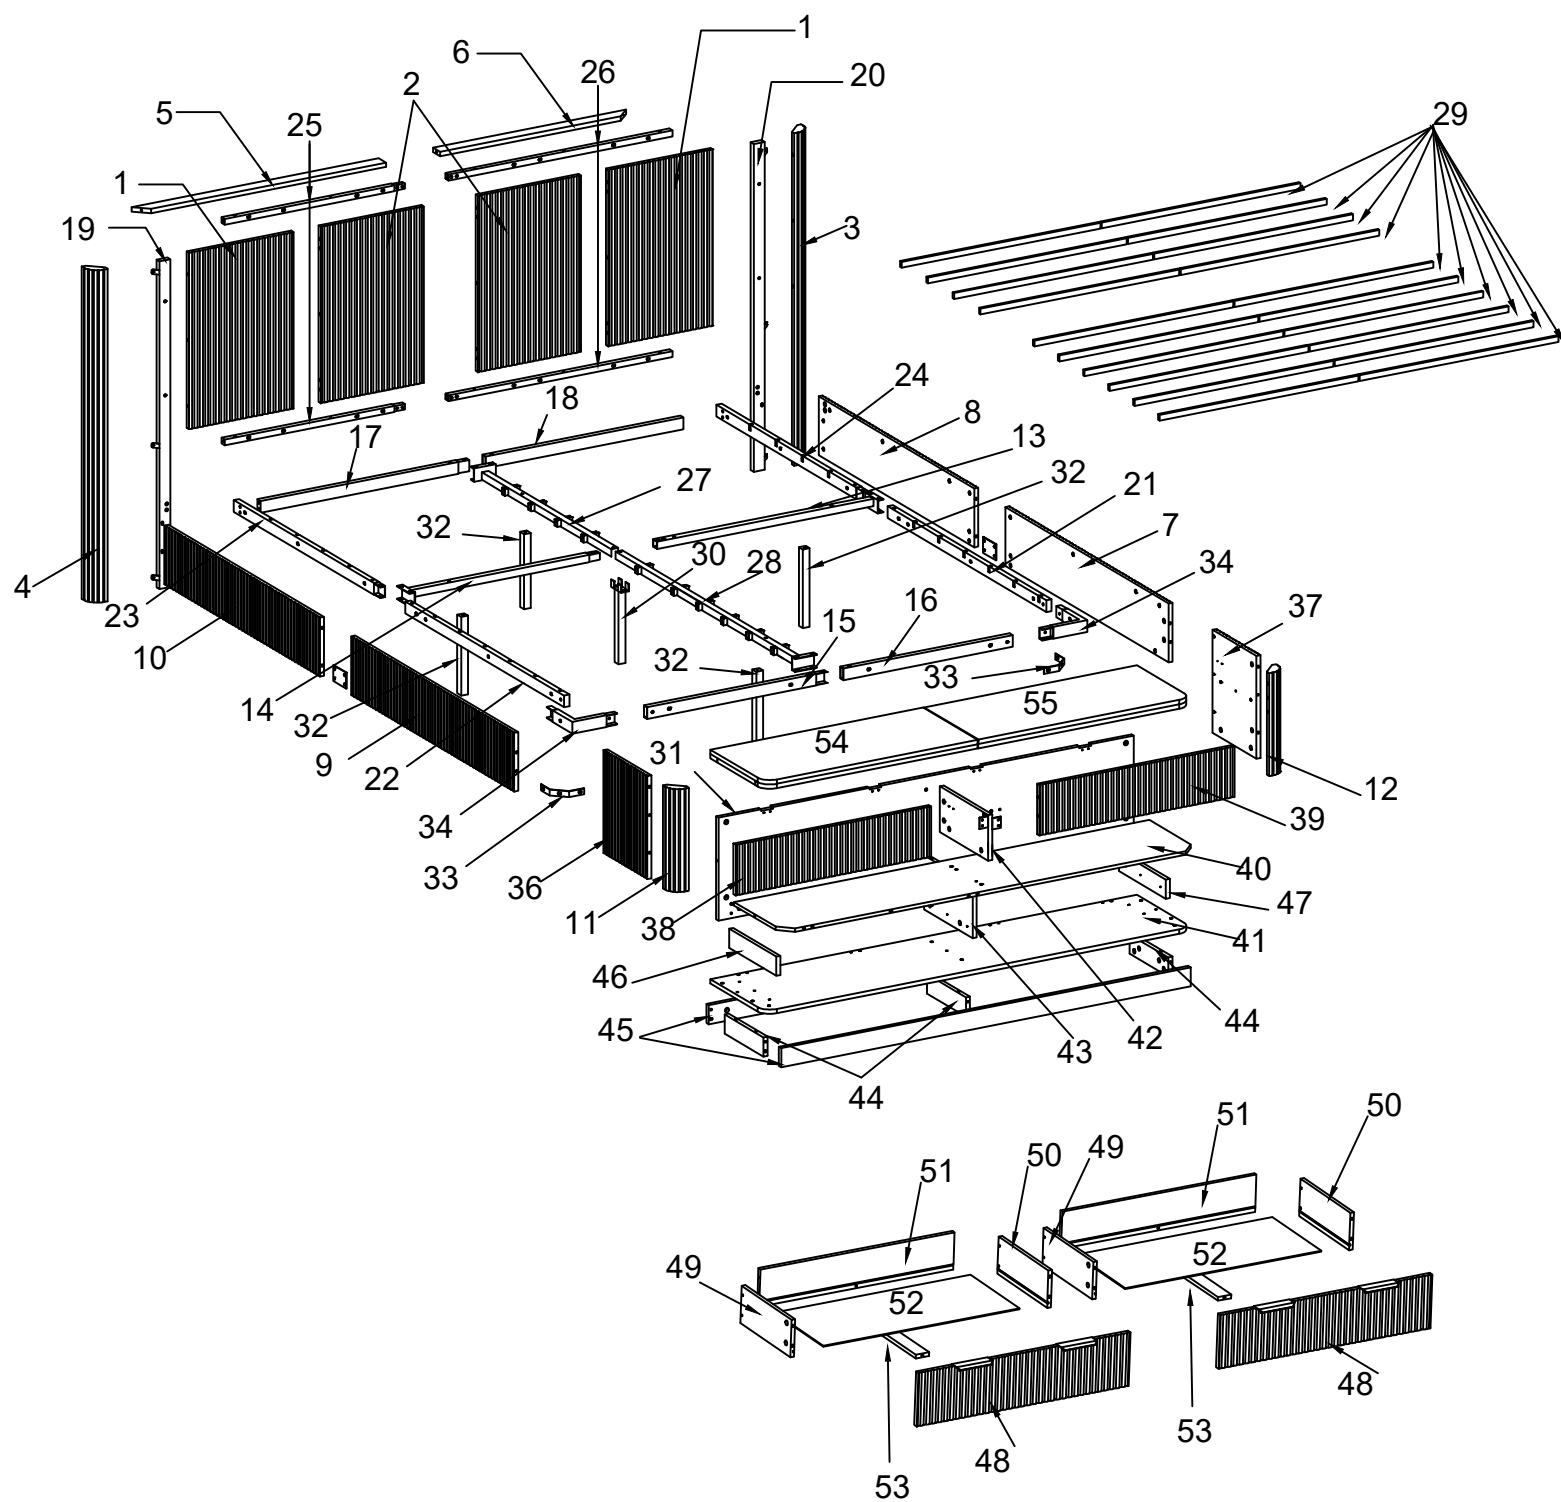


















Parts List (EN)

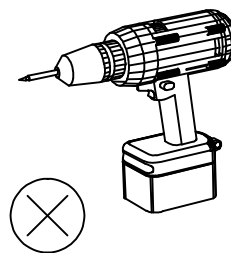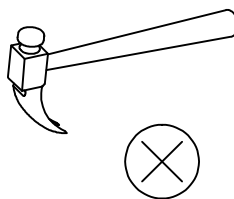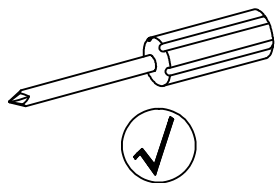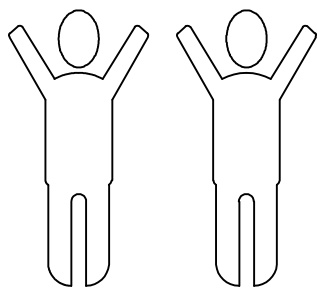

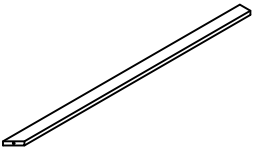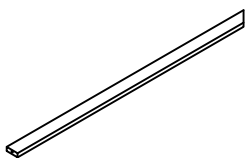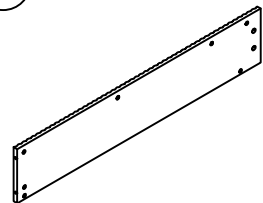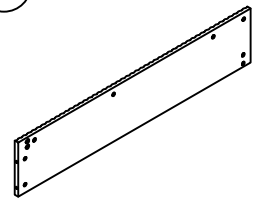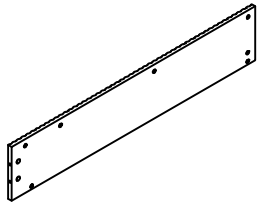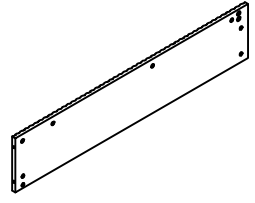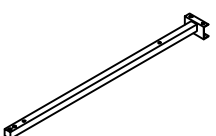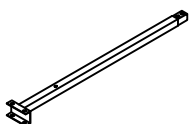

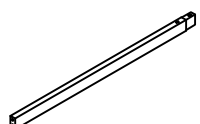

①  2PCS	②  2PCS	③  1PC	④  1PC
⑤  1PC	⑥  1PC	⑦  1PC	⑧  1PC
⑨  1PC	⑩  1PC	⑪  1PC	⑫  1PC
⑬  1PC	⑭  1PC	⑮  1PC	⑯  1PC
⑰  1PC	⑱  1PC	⑲  1PC	⑳  1PC

Parts List (EN)

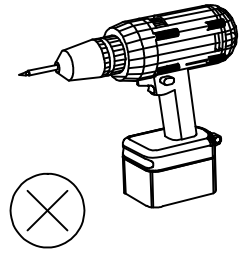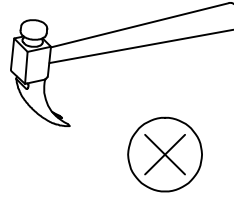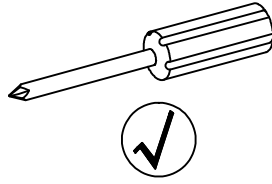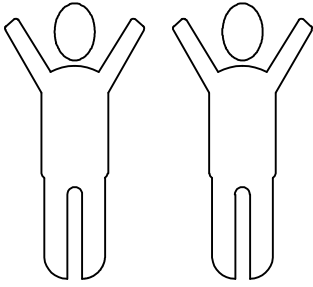

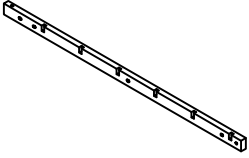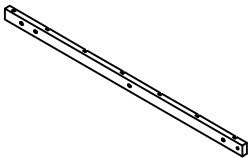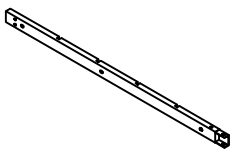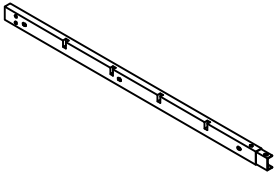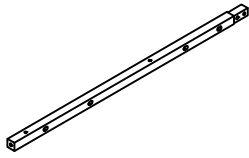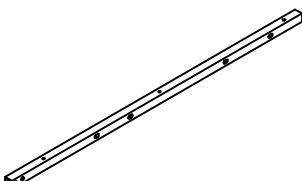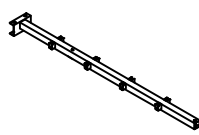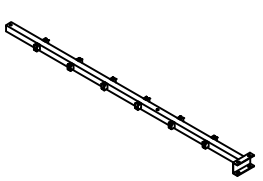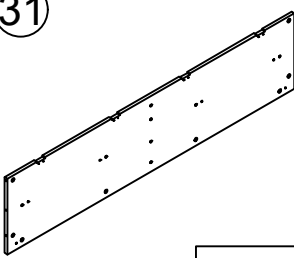
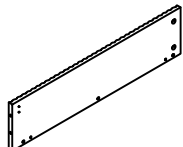
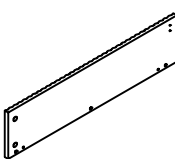
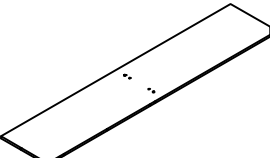
21  1PC	22  1PC	23  1PC	24  1PC
25  2PCS	26  2PCS	27  1PC	28  1PC
29  20PCS	30  1PC	31  1PC	32  4PCS
33  2PCS	34  2PCS	36  1PC	37  1PC
38  1PC	39  1PC	40  1PC	

Parts List (EN)

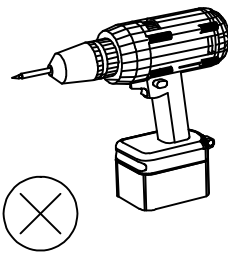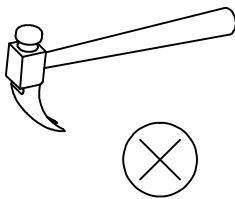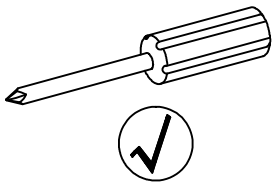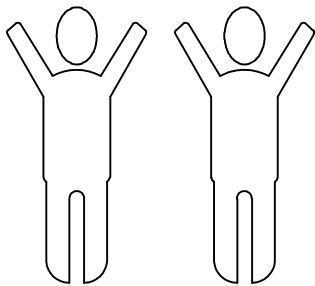





41 1PC	42 1PC	43 1PC	44 3PCS
45 2PCS	46 1PC	47 1PC	48 2PCS
49 2PCS	50 2PCS	51 2PCS	52 2PCS
53 2PCS	54 1PC	55 1PC	









Parts List (EN)

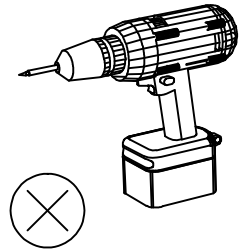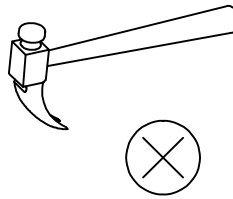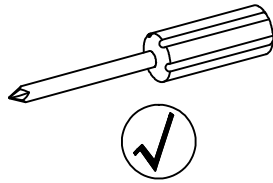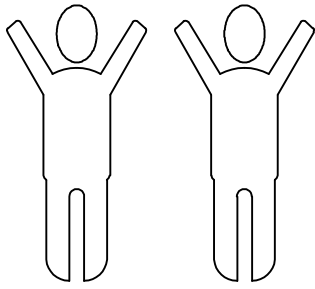


A 84+4PCS	B 9+1PCS	C 102+4PCS	D M8*30 13+1PCS
E M6*55 9+1PCS	F M6*28 40+2PCS	G M6*10 22+2PCS	H M6*35 18+1PCS
I M8*50 4PCS	J M6*12 4PCS	K M6*25 10+1PCS	L $\phi 3.5 \times 30$ 7+1PCS
M 80*50*2 2PCS	N $\phi 3.5 \times 16$ 6+1PCS	O M4 2PCS	P R L 2set
Q 4PCS	R $\phi 3.5 \times 12$ 68+4PCS	S $\phi 3.5 \times 12$ 4set	T ST5*50 16+1PCS

Parts List (EN)

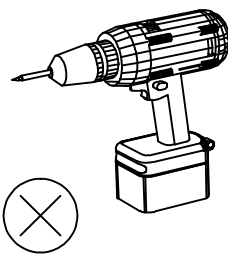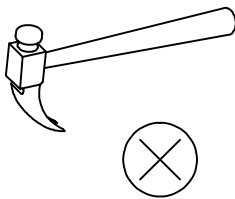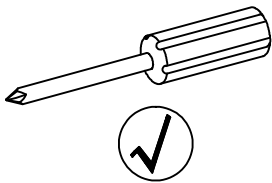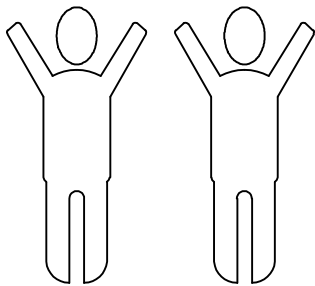


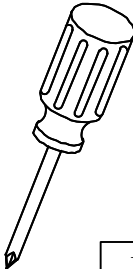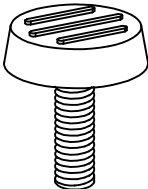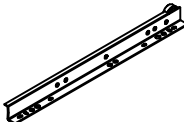U  2PCS	V  M6*30 36+2PCS	W  1PC	X  5PC
CL  L=300mm 2PCS	CR  L=300mm 2PCS	DL  L=300mm 2PCS	DR  L=300mm 2PCS

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

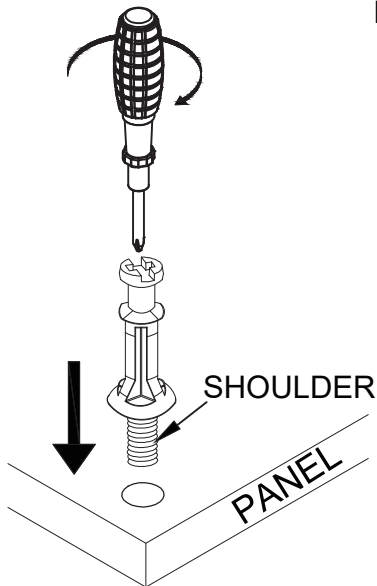

Place Cam-bolt on pre-drilled hole and screw in vertically

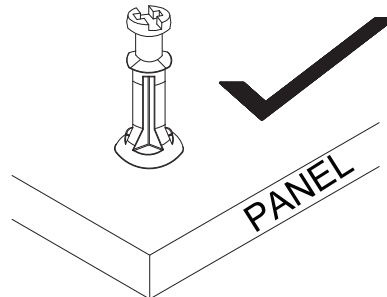


Shoulder is flushed (on the same level) with the panel.

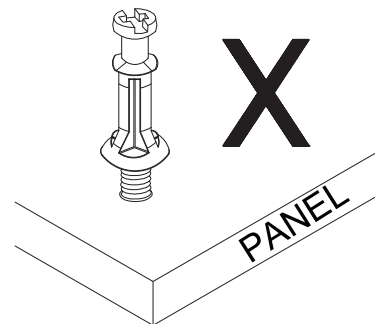

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

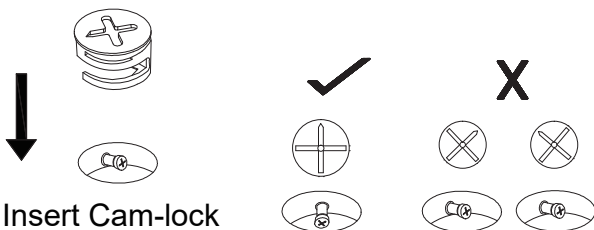

Insert Cam-lock with arrow align to Cam-bolt head **CORRECT** **WRONG**


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

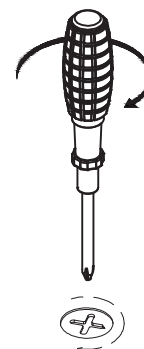


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


STEP1

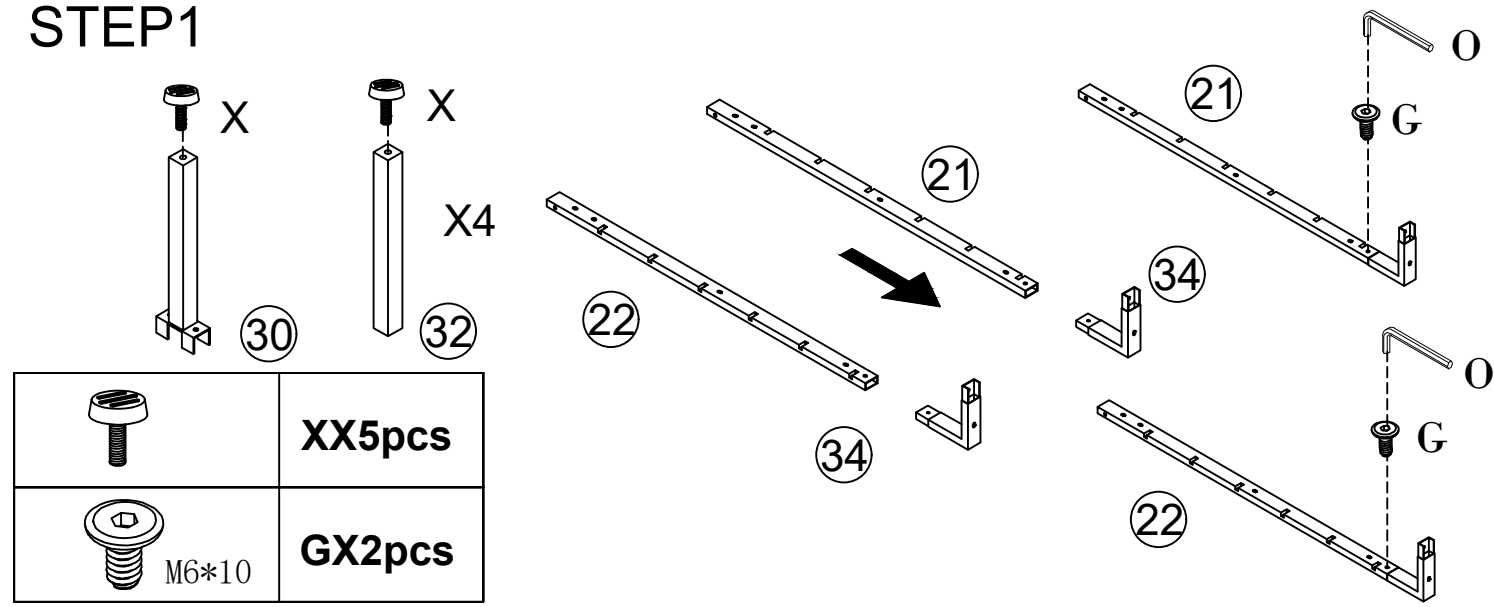


STEP2

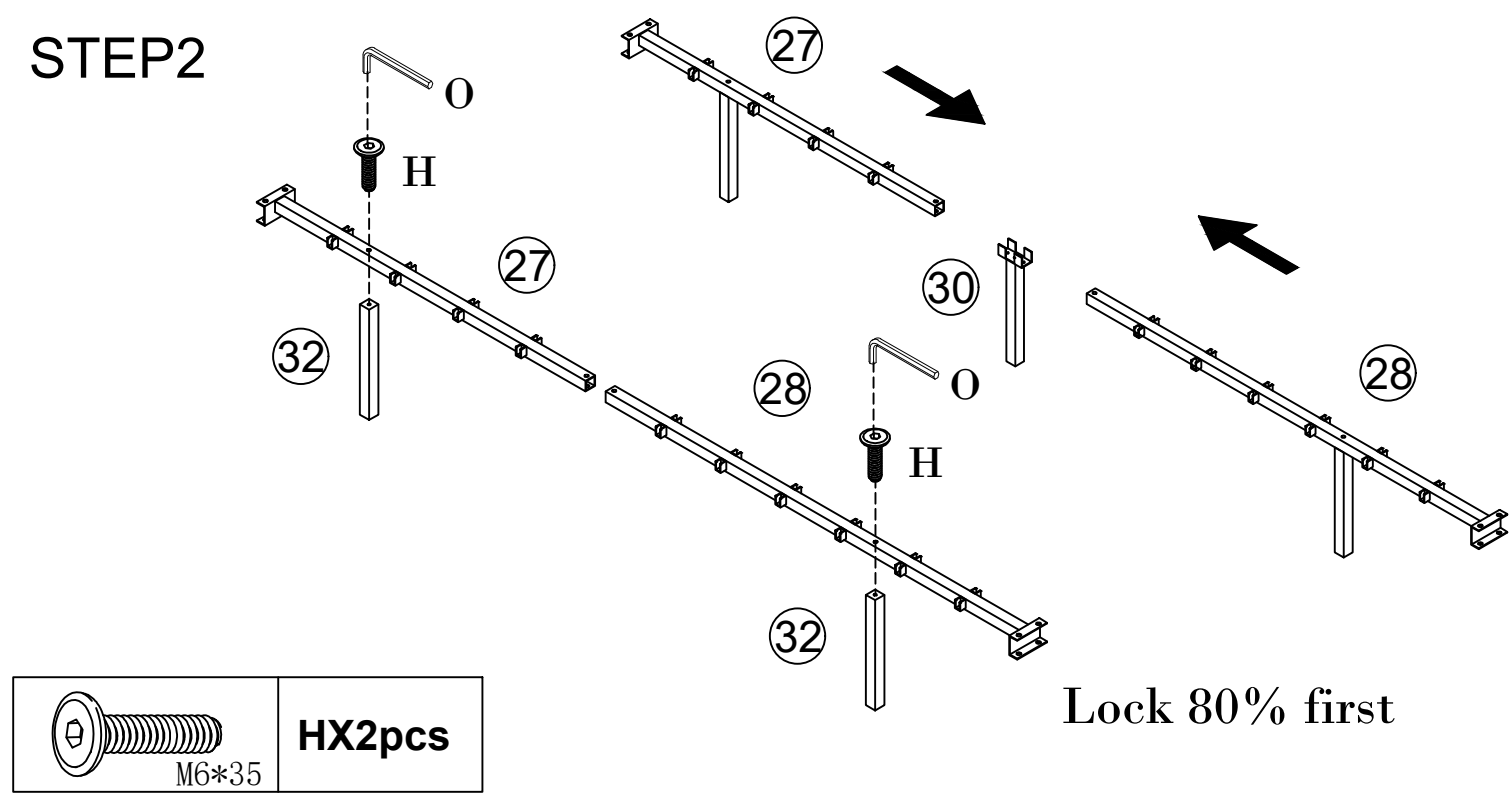


STEP3

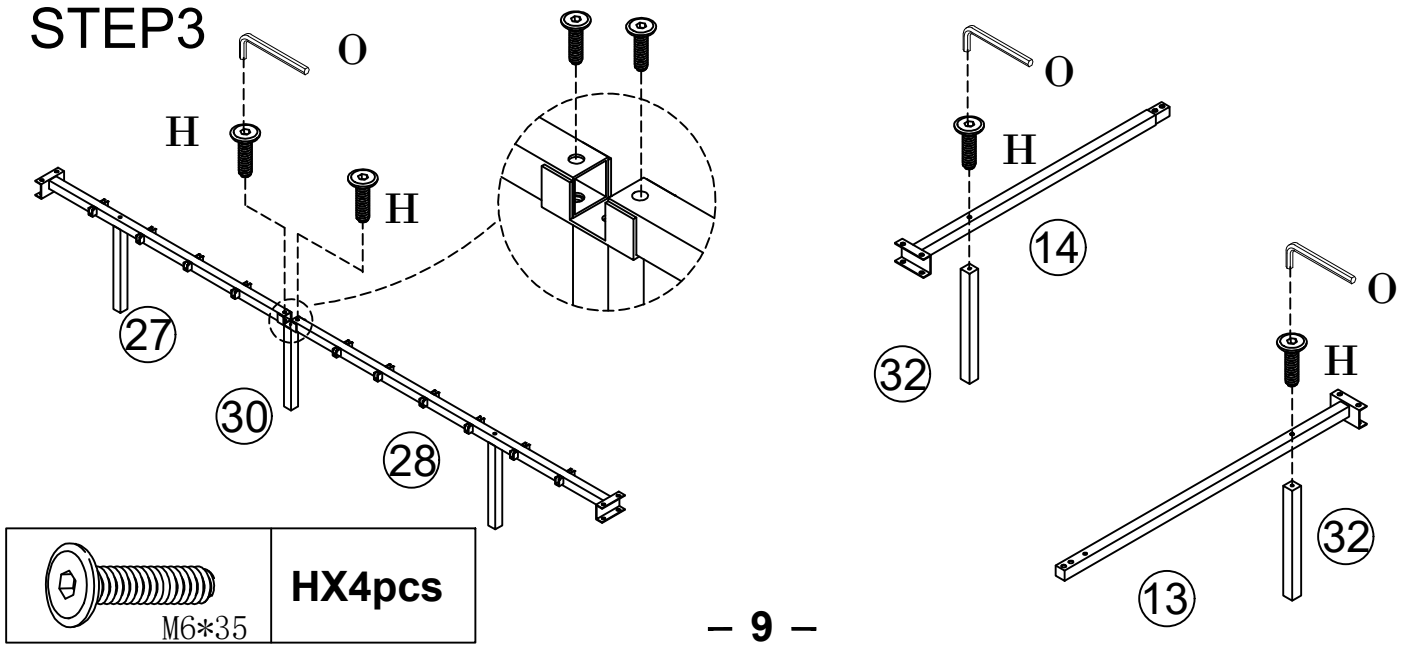



STEP4

 M6*25	KX2pcs
 M6*10	GX2pcs

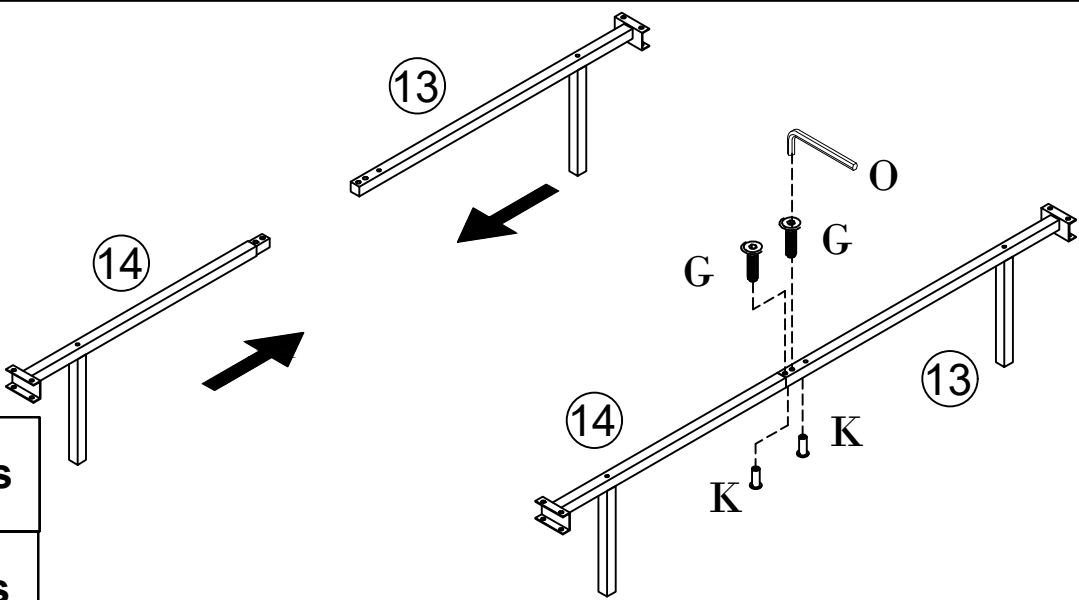


STEP5

 M6*55	EX1pc
---	--------------

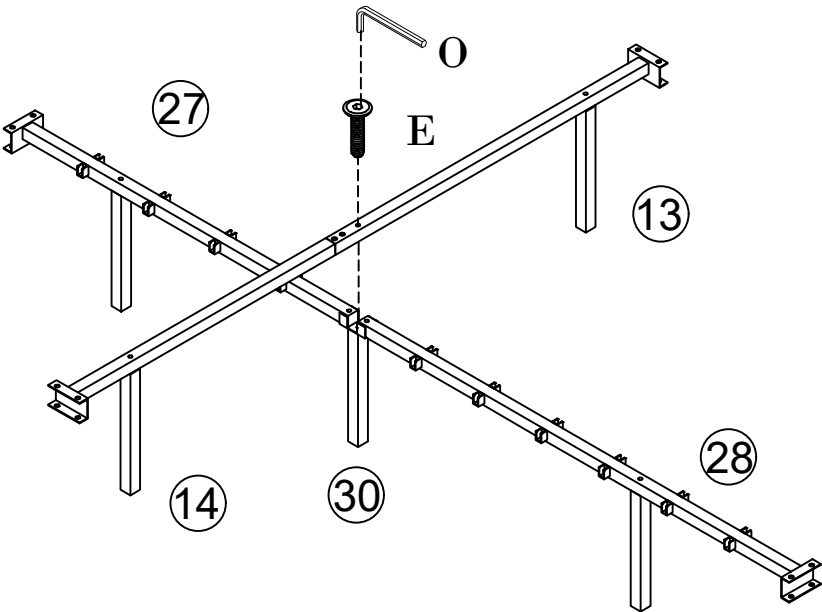


STEP6


 M6*35	HX4pcs
 M6*25	KX4pcs

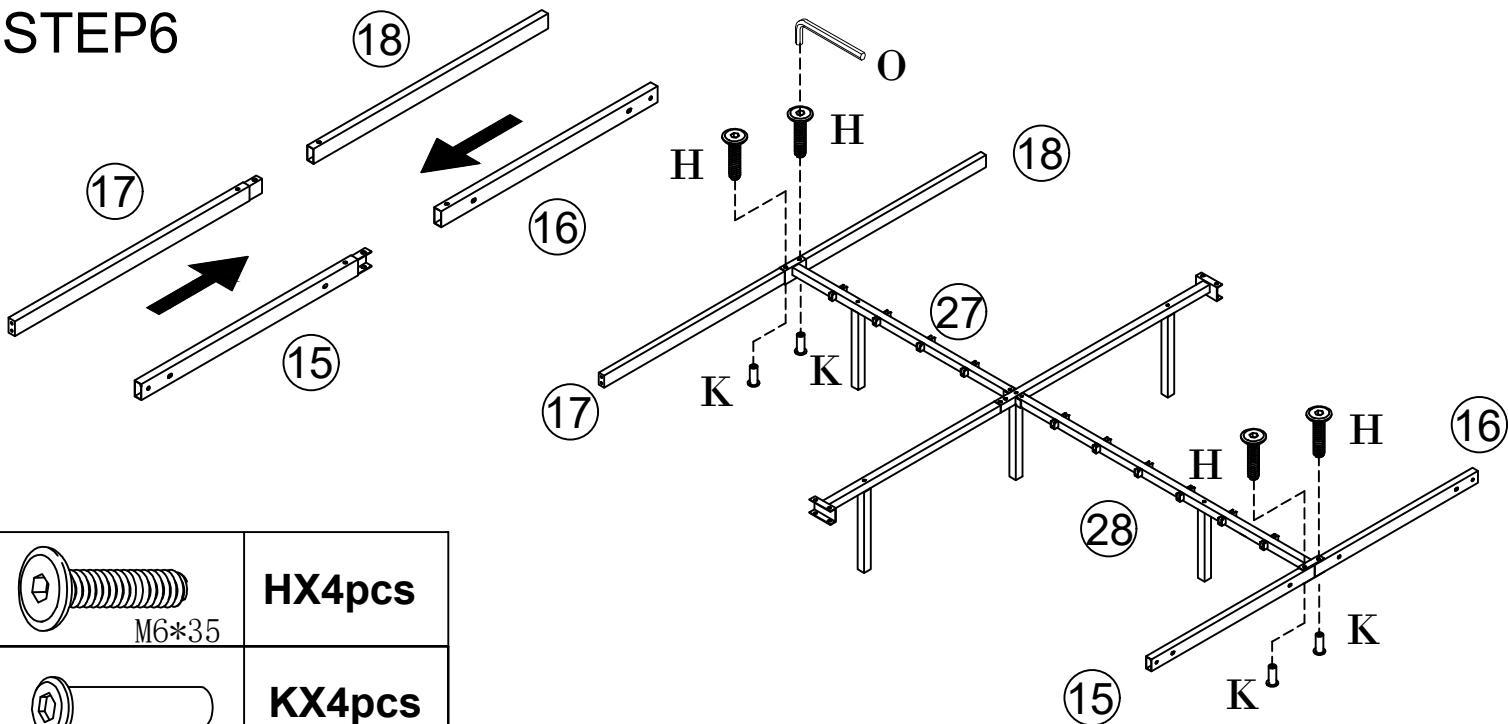


STEP7

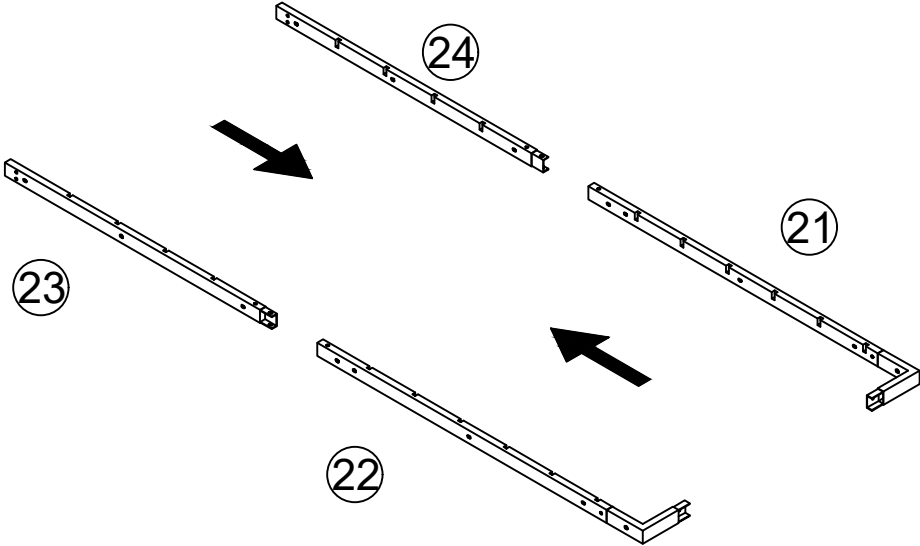


STEP8

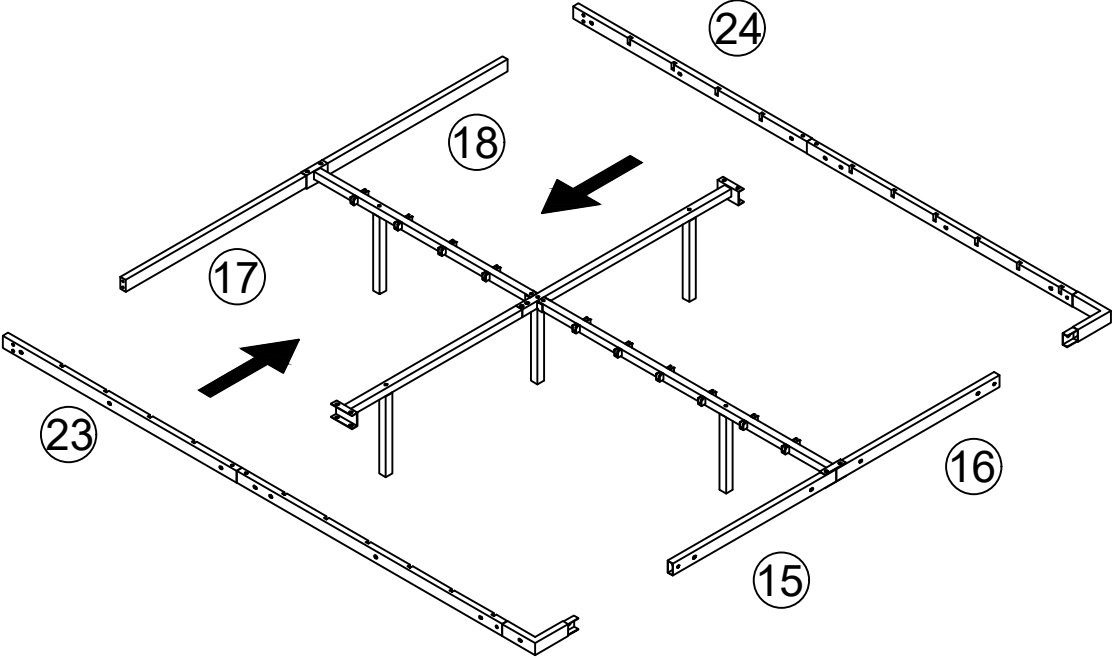


STEP9

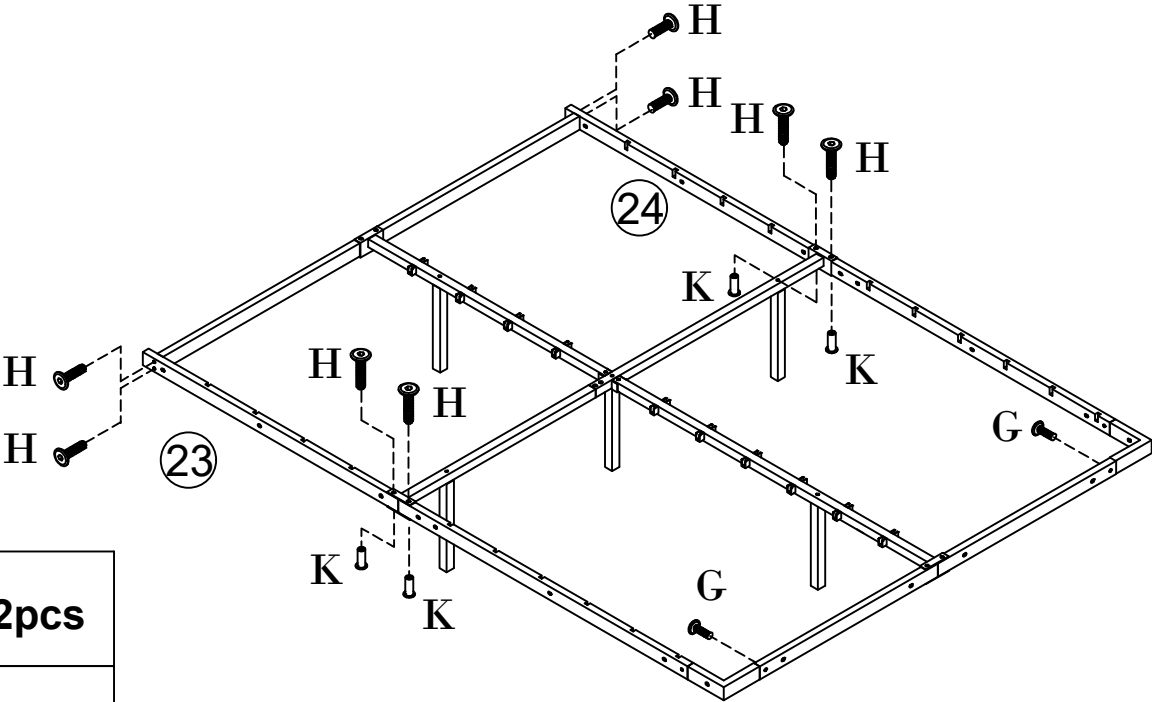


 M6*10	GX2pcs
 M6*35	HX8pcs
 M6*25	KX4pcs

STEP10

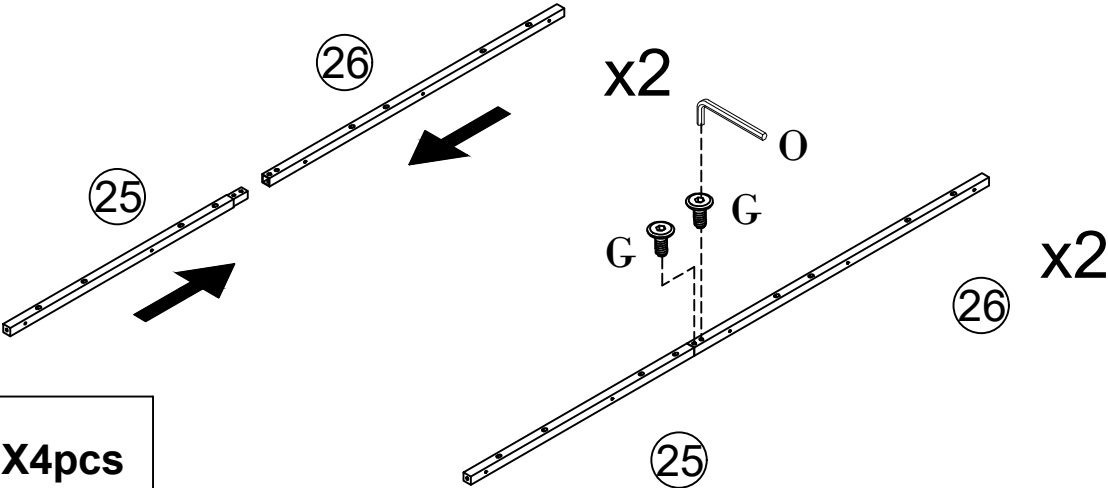



 M6*10	GX4pcs
---	---------------


STEP11

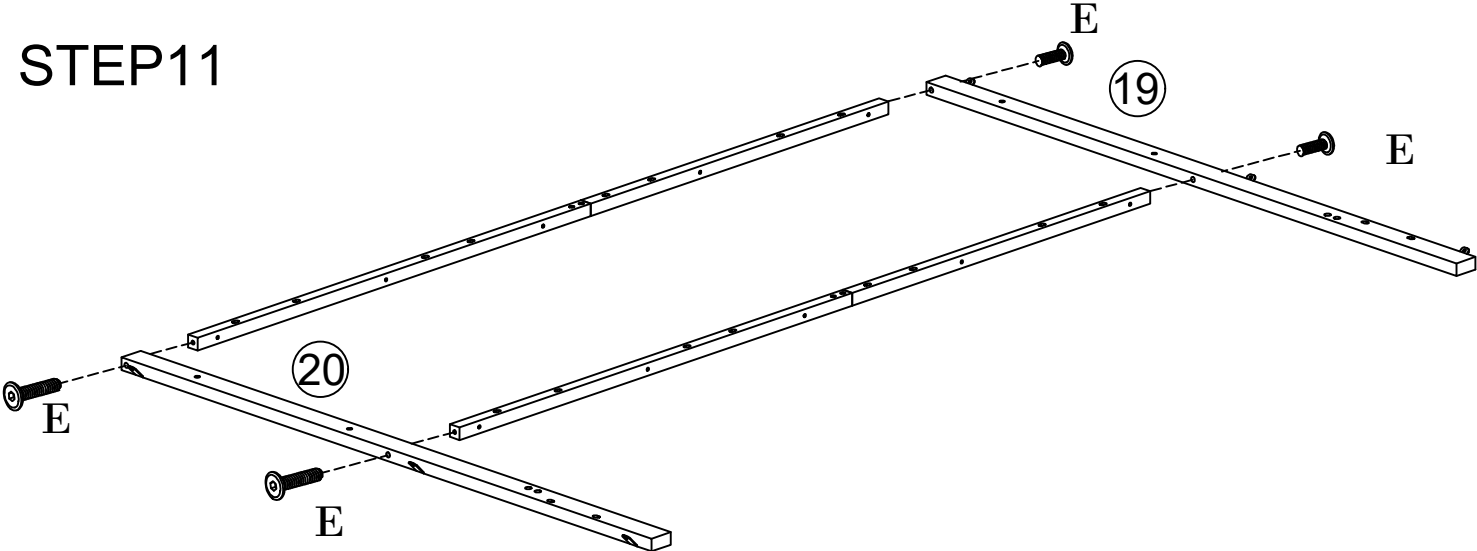


 M6*55	EX4pcs
---	---------------

STEP12

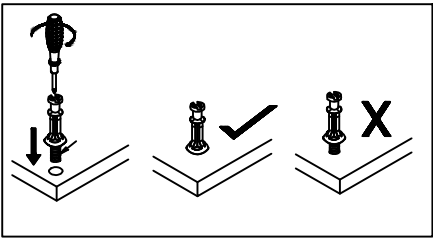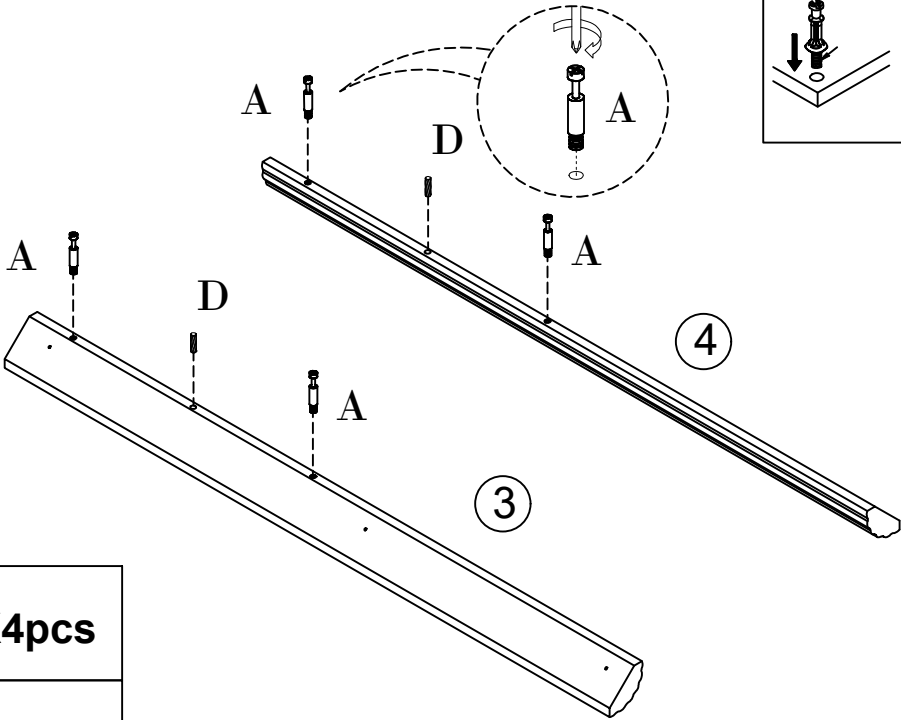


	AX4pcs
 M8*30	DX2pcs


STEP13

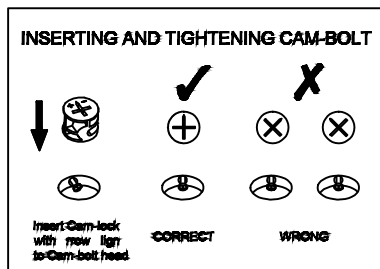

Note: The side with the screws is on the outside

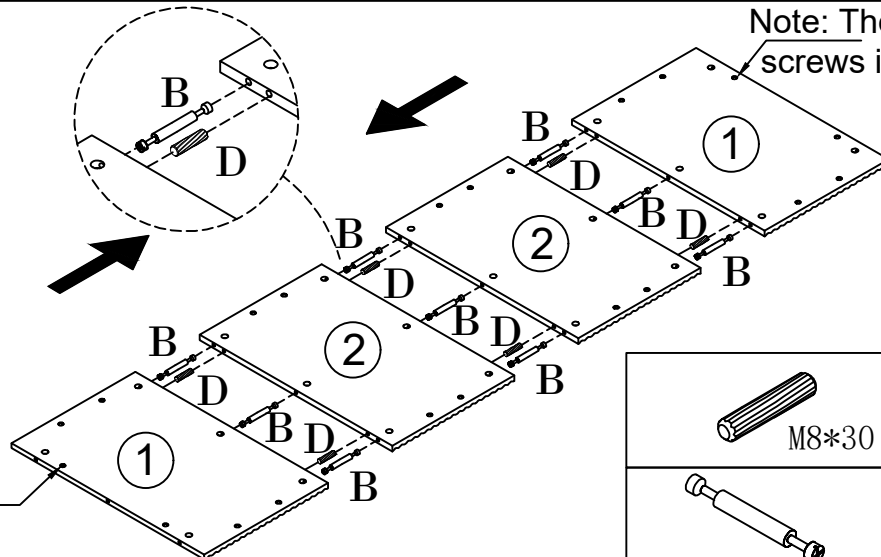


Note: The side with the screws is on the outside

 M8*30	DX6pcs
	BX9pcs

STEP14


WARNING!!!After locking Component C in place, Component B may shift sideways. If such shifting occurs and the component cannot be locked, make adjustments accordingly.

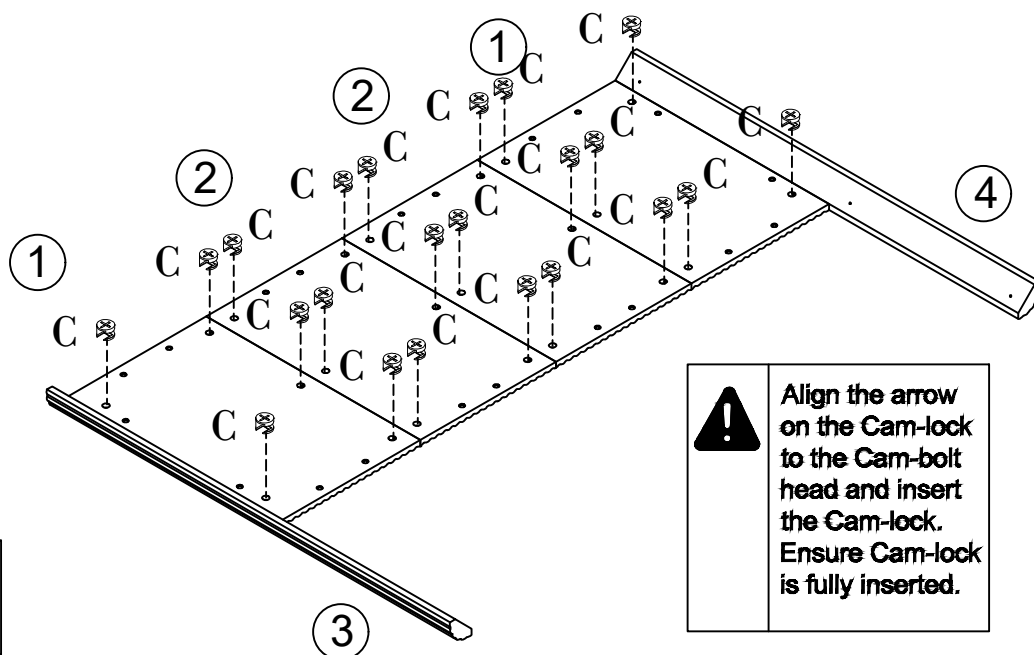


! Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

	CX22pcs
---	----------------


STEP15

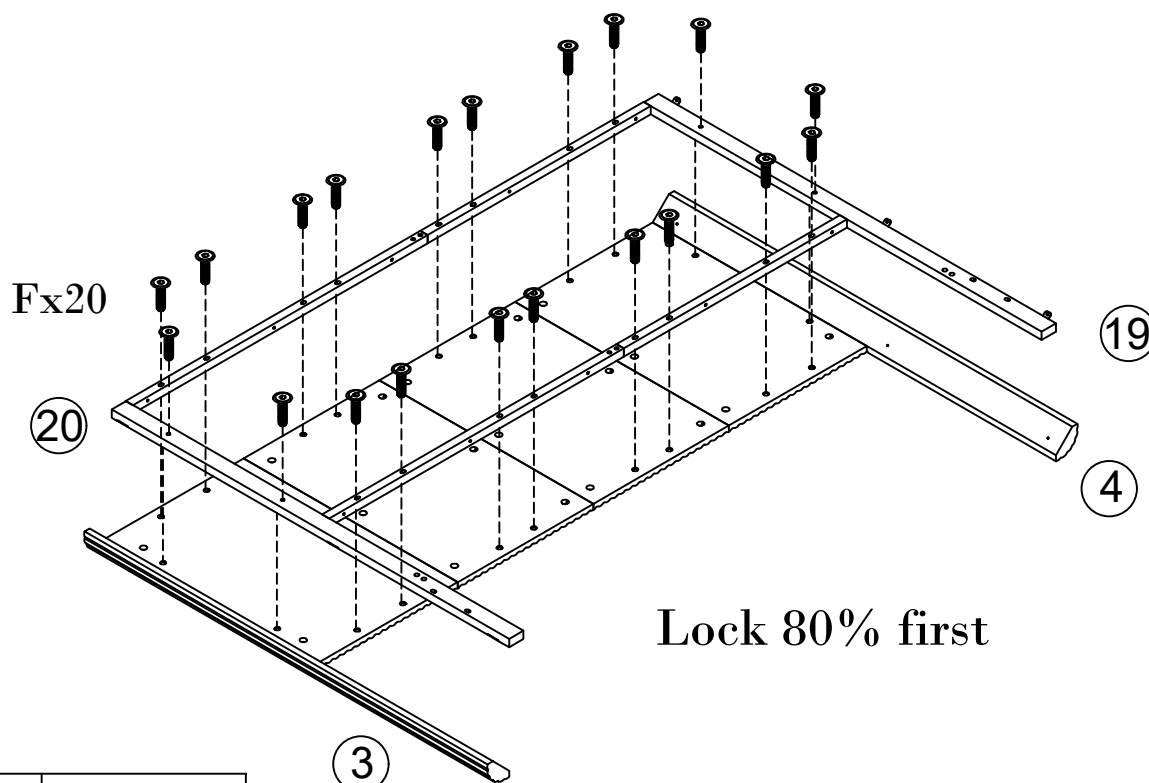

Lock 80% first


 M6*28	FX20pcs
--	----------------


STEP16

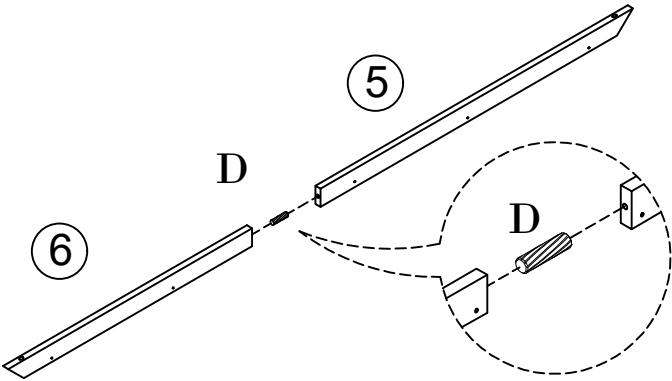

 M8*30	DX1pc
--	--------------


STEP17


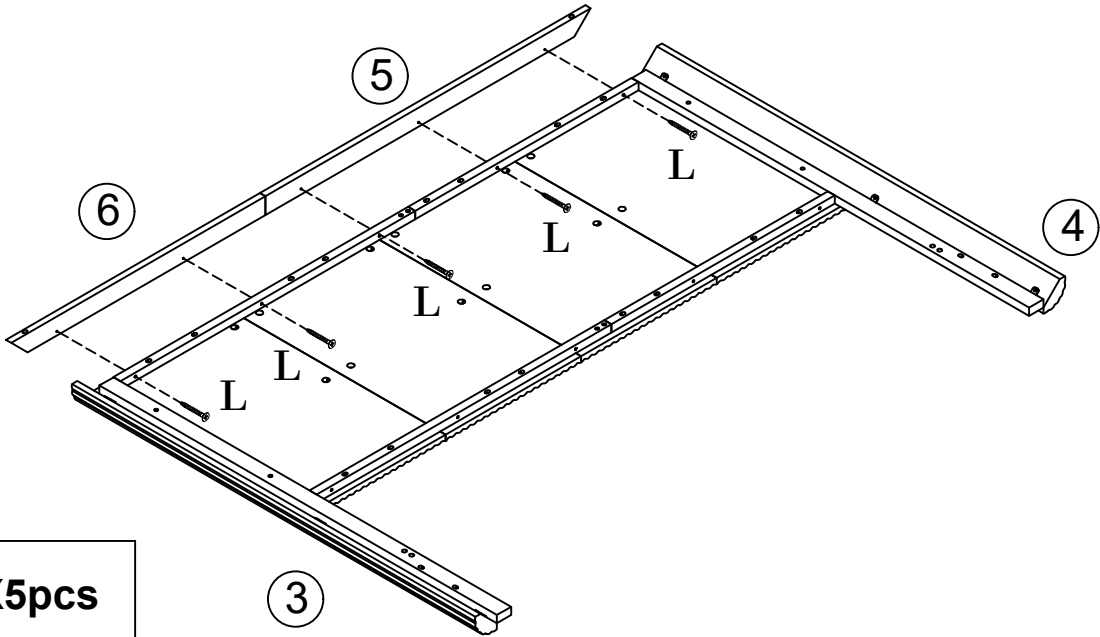


 $\phi 3.5 \times 30$	LX5pcs
--	---------------


STEP18

Align all and lock 100%

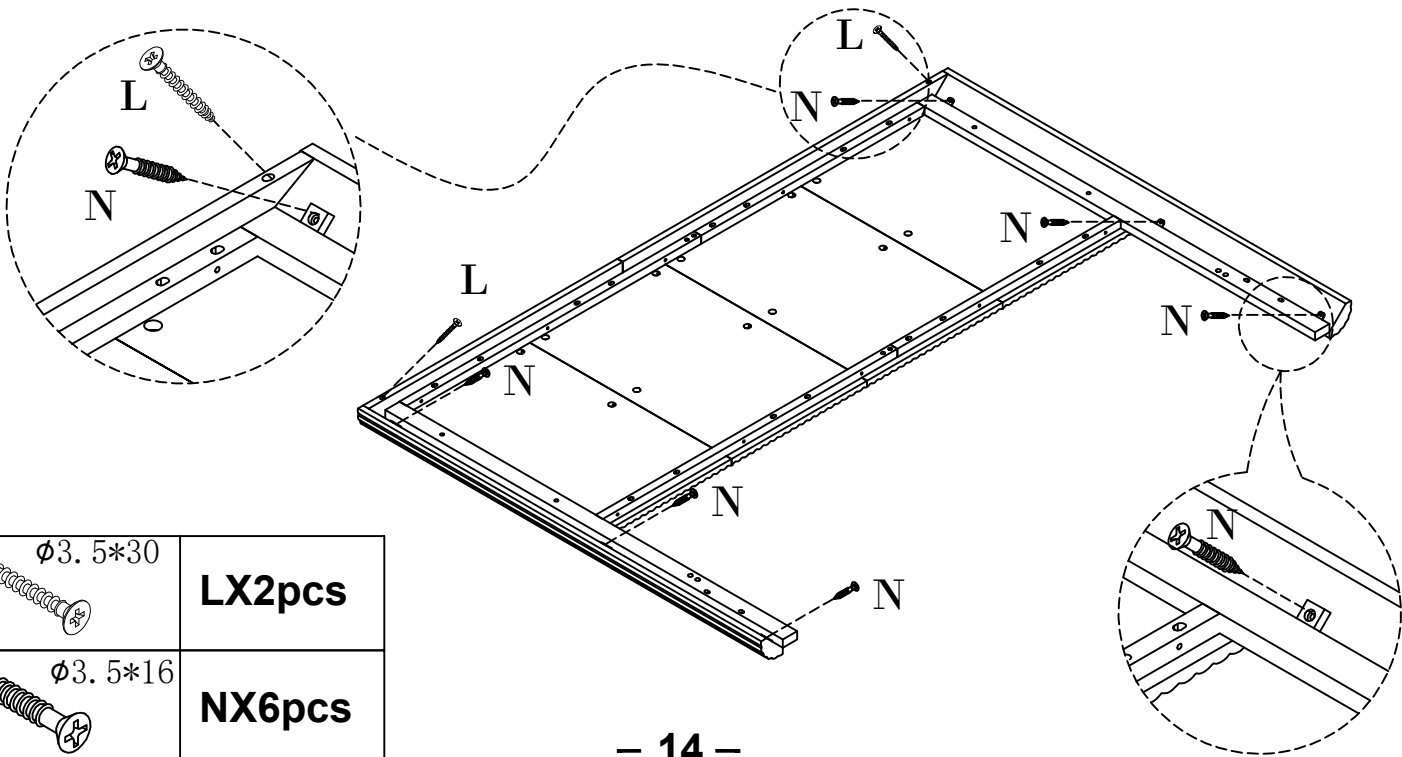

 $\phi 3.5 \times 30$	LX2pcs
 $\phi 3.5 \times 16$	NX6pcs

STEP19

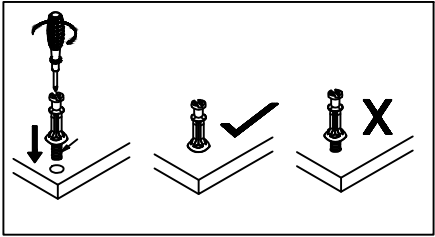

Ax8


Ax6

Vx2

31



39

38

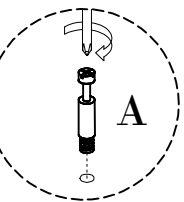

	AX14pcs
 M6*30	VX2pcs


STEP20

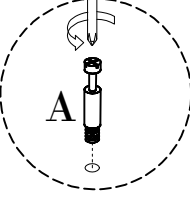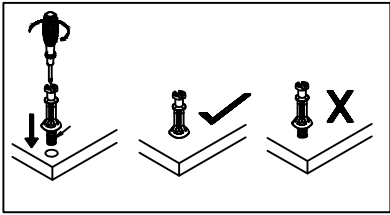


A

A


40

	AX2pcs
---	---------------

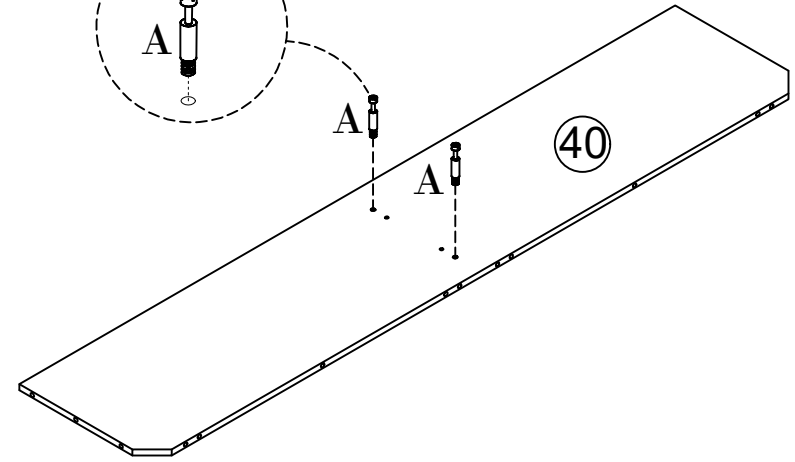

STEP21

INSERTING AND TIGHTENING CAM-BOLT

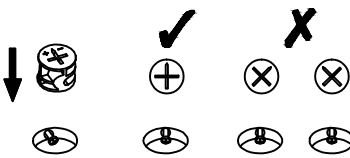


Insert Cam-lock with row light to Cam-bolt head

CORRECT

WRONG



	CX2pcs
 M6*30	VX2pcs

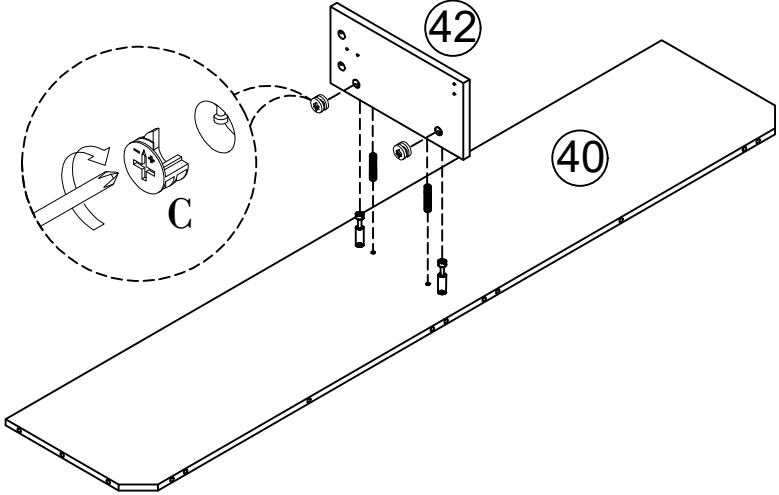

42



40

STEP22

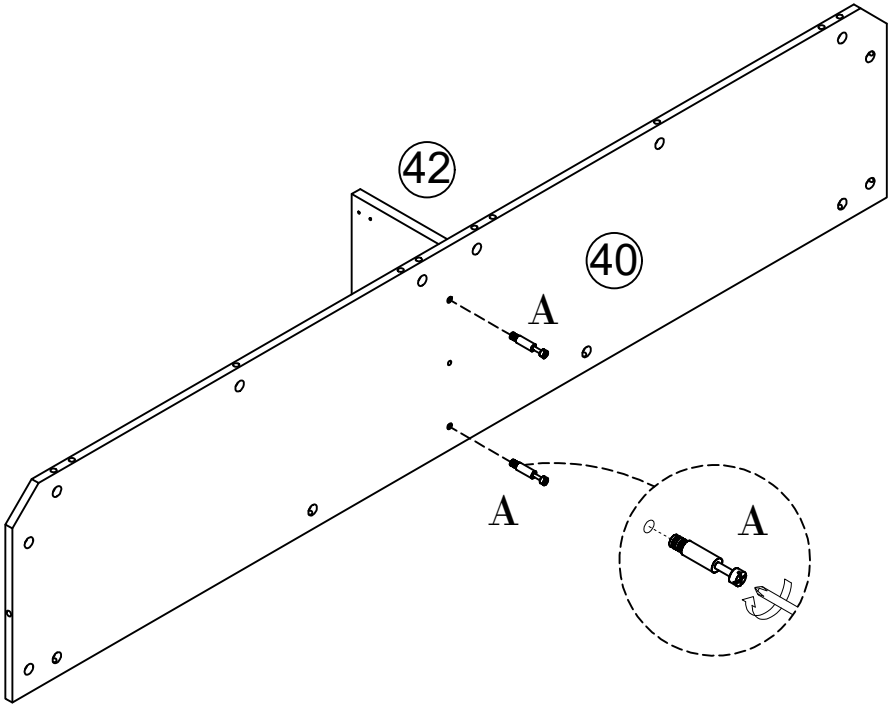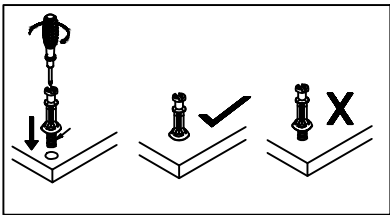

	AX2pcs
--	---------------

STEP23

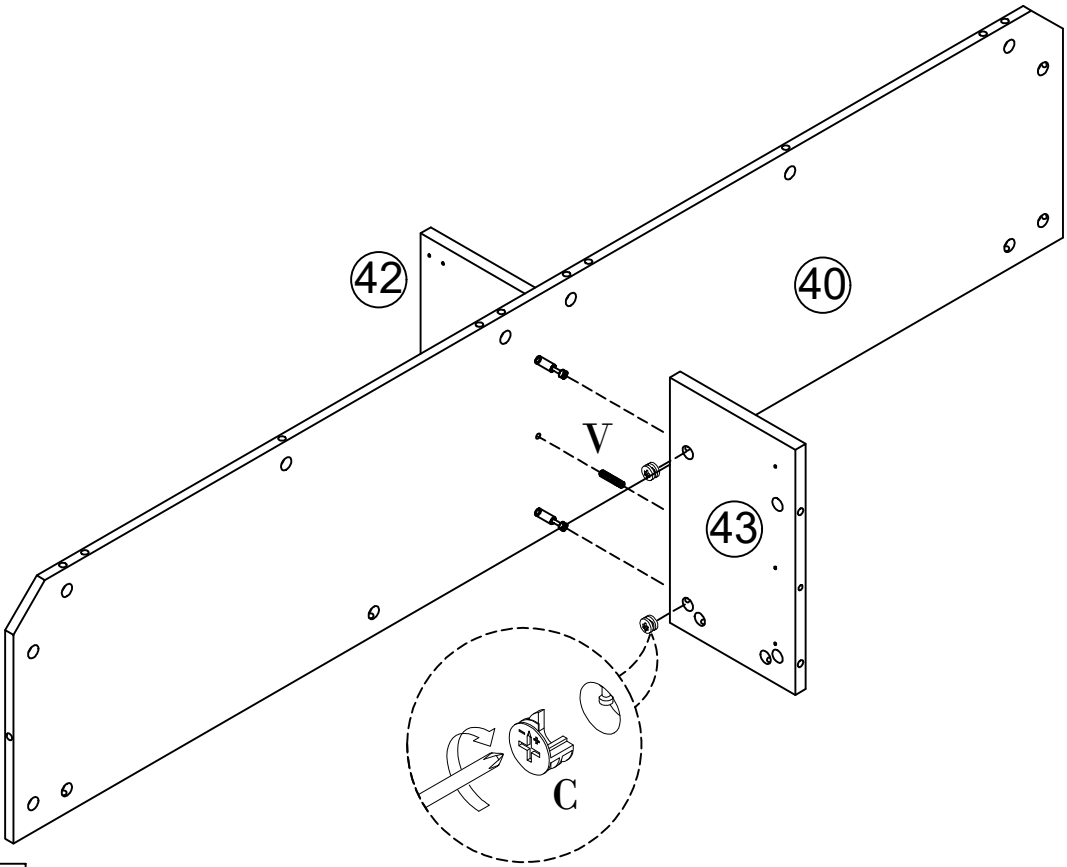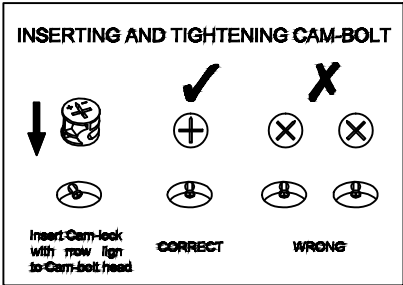

	CX2pcs
	VX1pc


STEP24

INSERTING AND TIGHTENING CAM-BOLT

Insert Cam-lock with row light to Cam-bolt head


CORRECT

WRONG

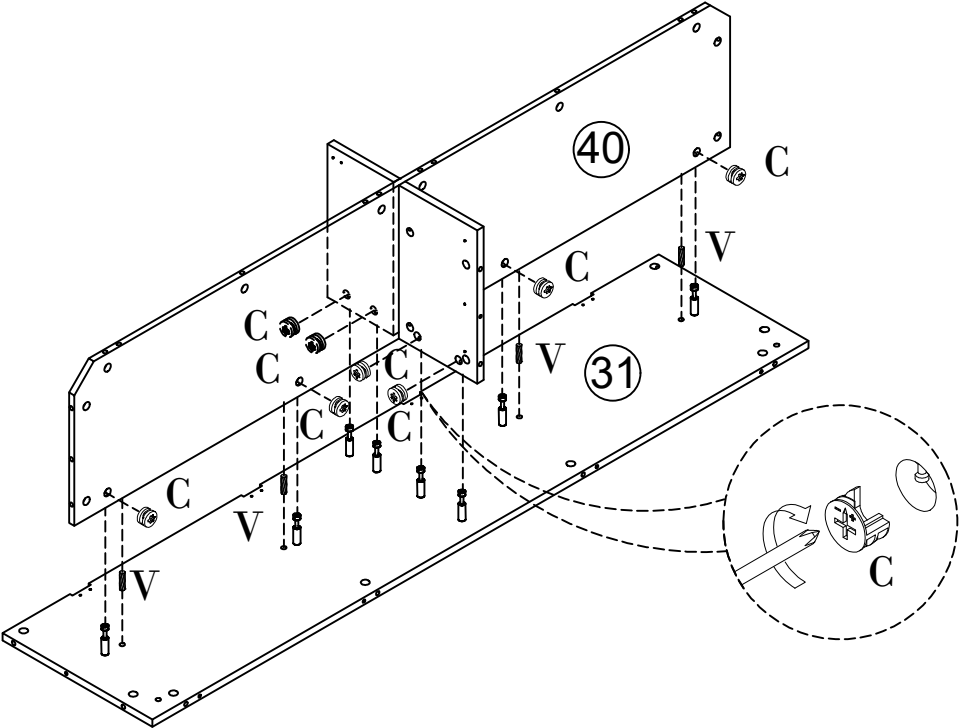

	CX8pcs
	VX4pcs

STEP25

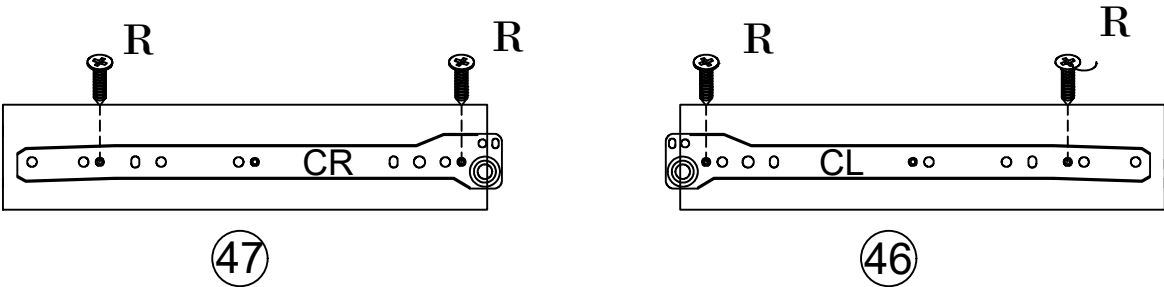

	RX4pcs		
	CLX1pc		CRX1pc


STEP26

INSERTING AND TIGHTENING CAM-BOLT

Insert Cam-lock with row light to Cam-bolt head



CORRECT

WRONG

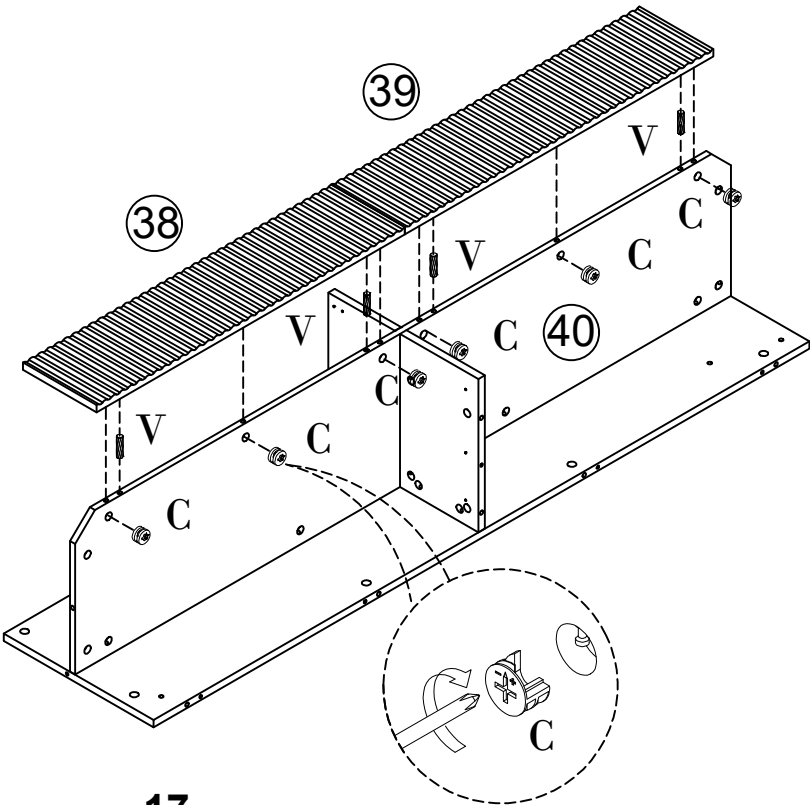


	VX4pcs
	CX6pcs



STEP27

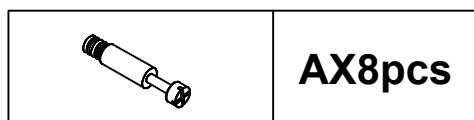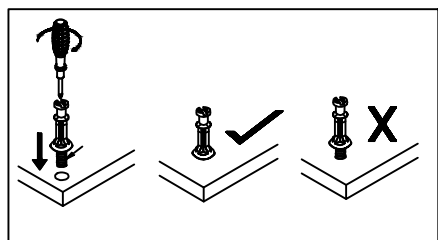


AX8pcs

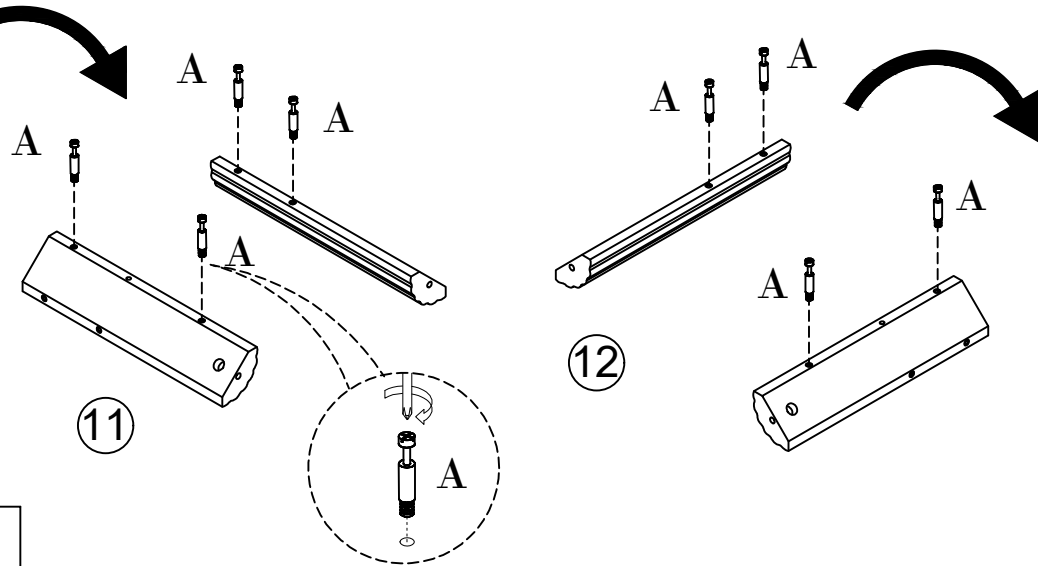




STEP28

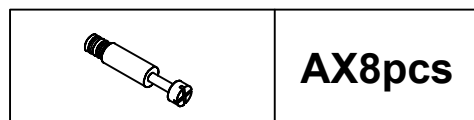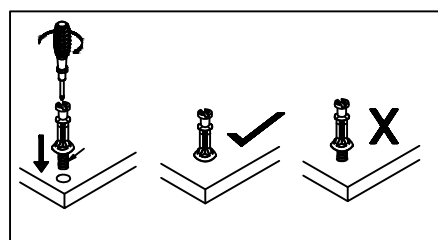

AX8pcs

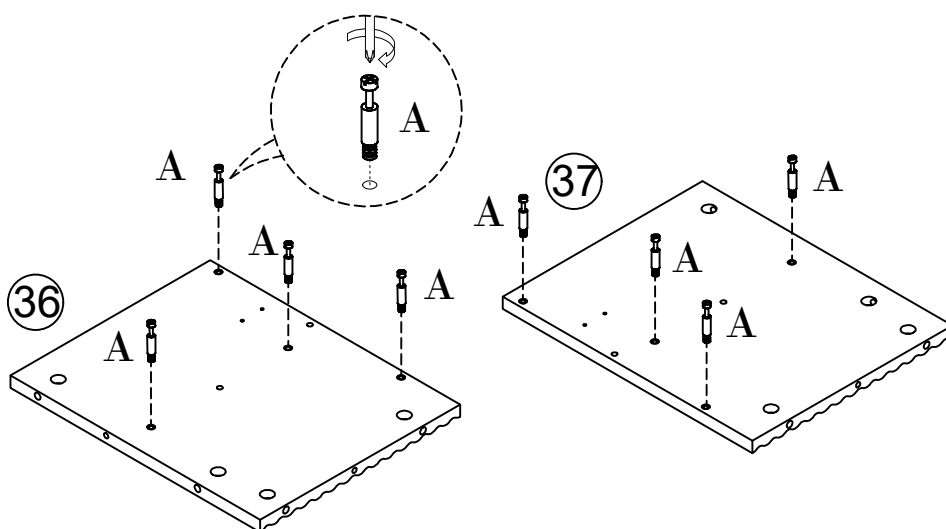

STEP29

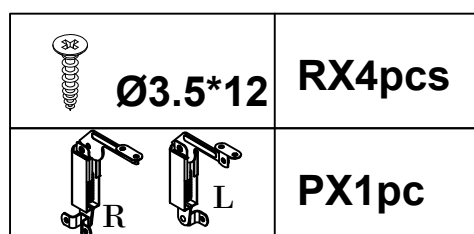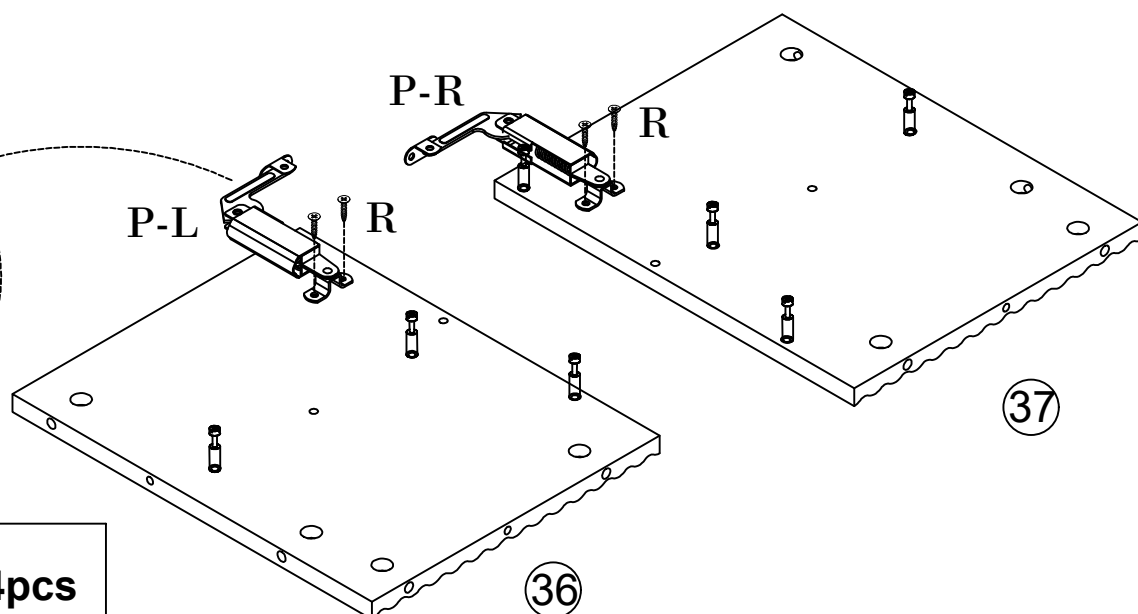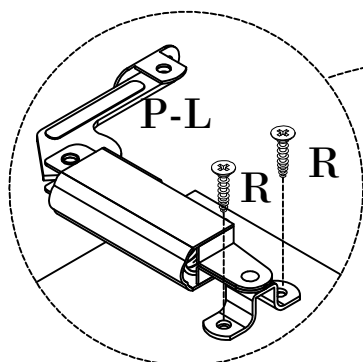

Ø3.5*12

RX4pcs

PX1pc

STEP30


INSERTING AND TIGHTENING CAM-BOLT

Insert Cam-lock with arrow sign to Cam-bolt head.

CORRECT

WRONG

	CX4pcs
	VX2pcs

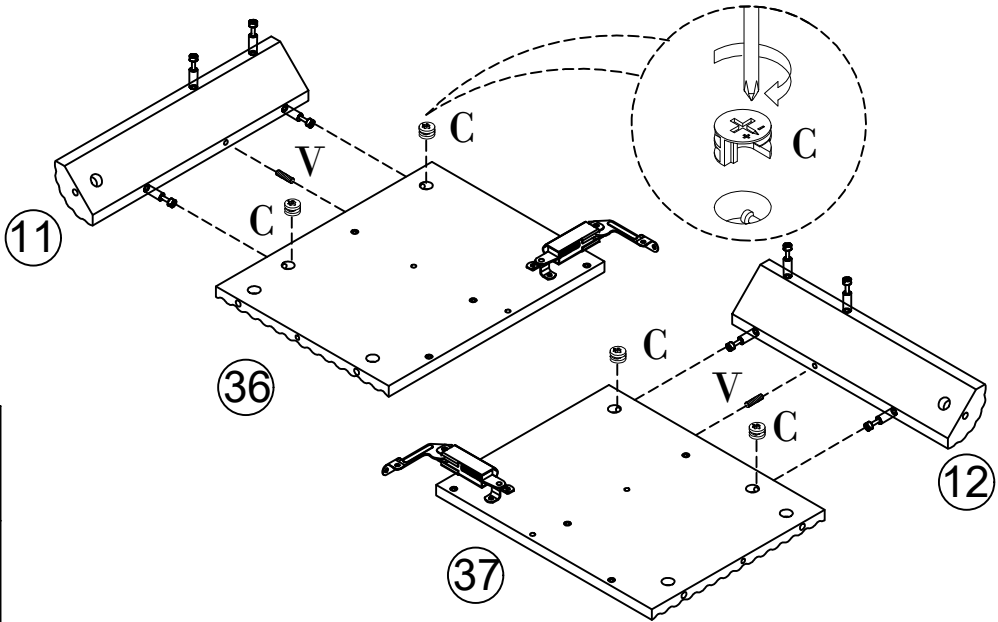

STEP31


INSERTING AND TIGHTENING CAM-BOLT

Insert Cam-lock with arrow sign to Cam-bolt head.


CORRECT

WRONG


	CX12pcs
	VX4pcs

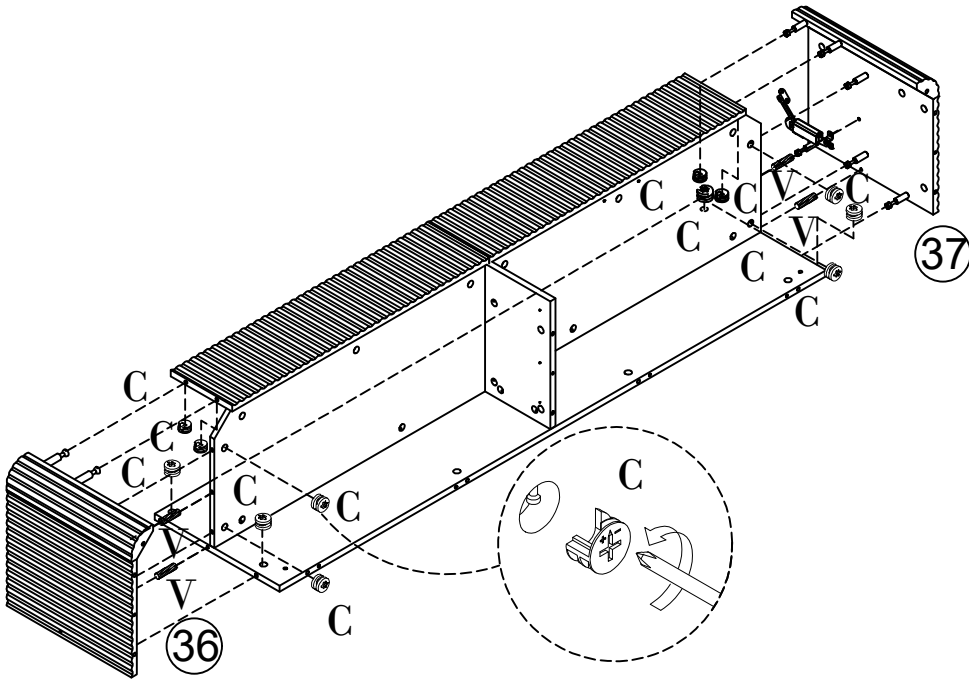

STEP32

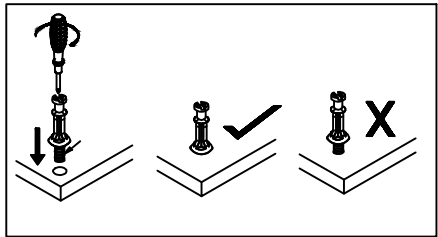


	AX12pcs
--	---------

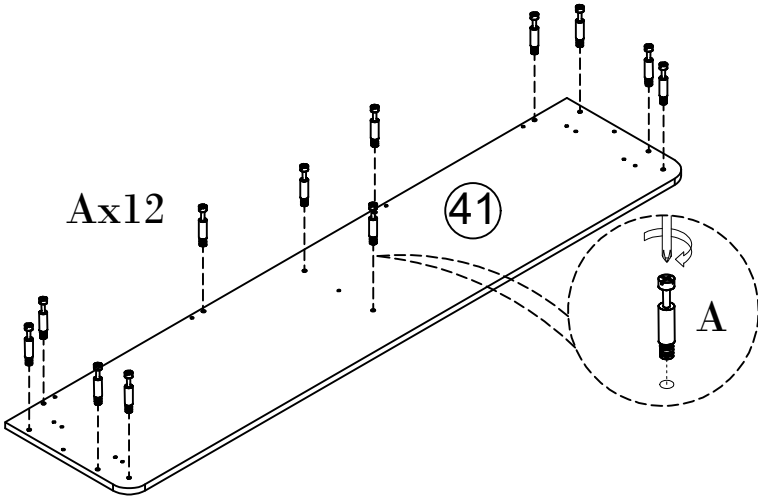

STEP33

INSERTING AND TIGHTENING CAM-BOLT

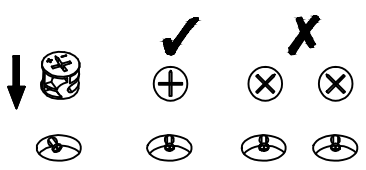


Insert Cam-lock with flange facing to Cam-bolt head


CORRECT

WRONG


 M6*30	VX7pcs
	CX12pcs

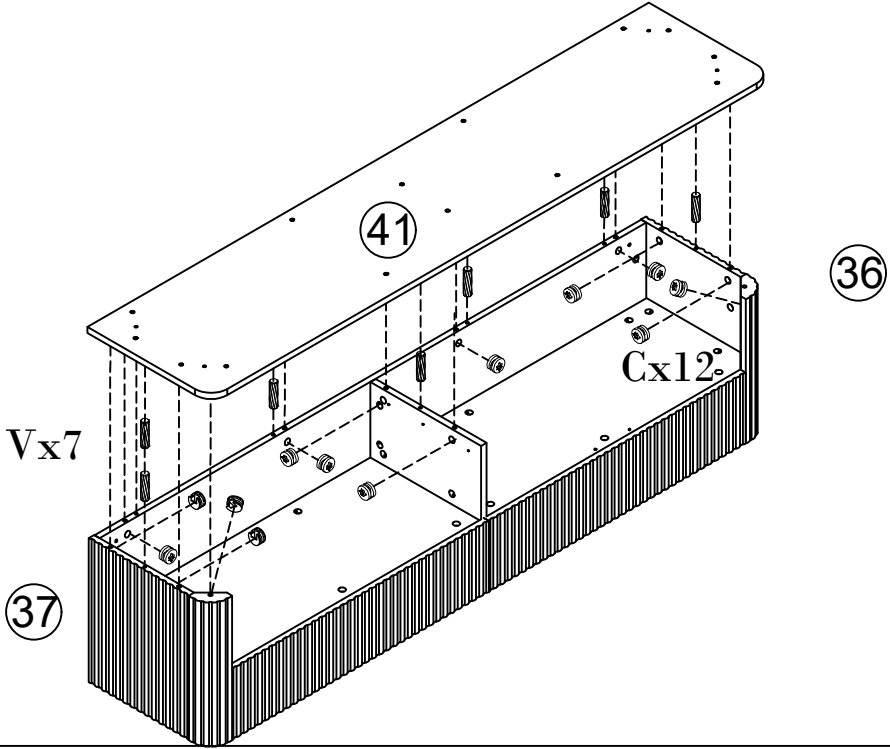


STEP34

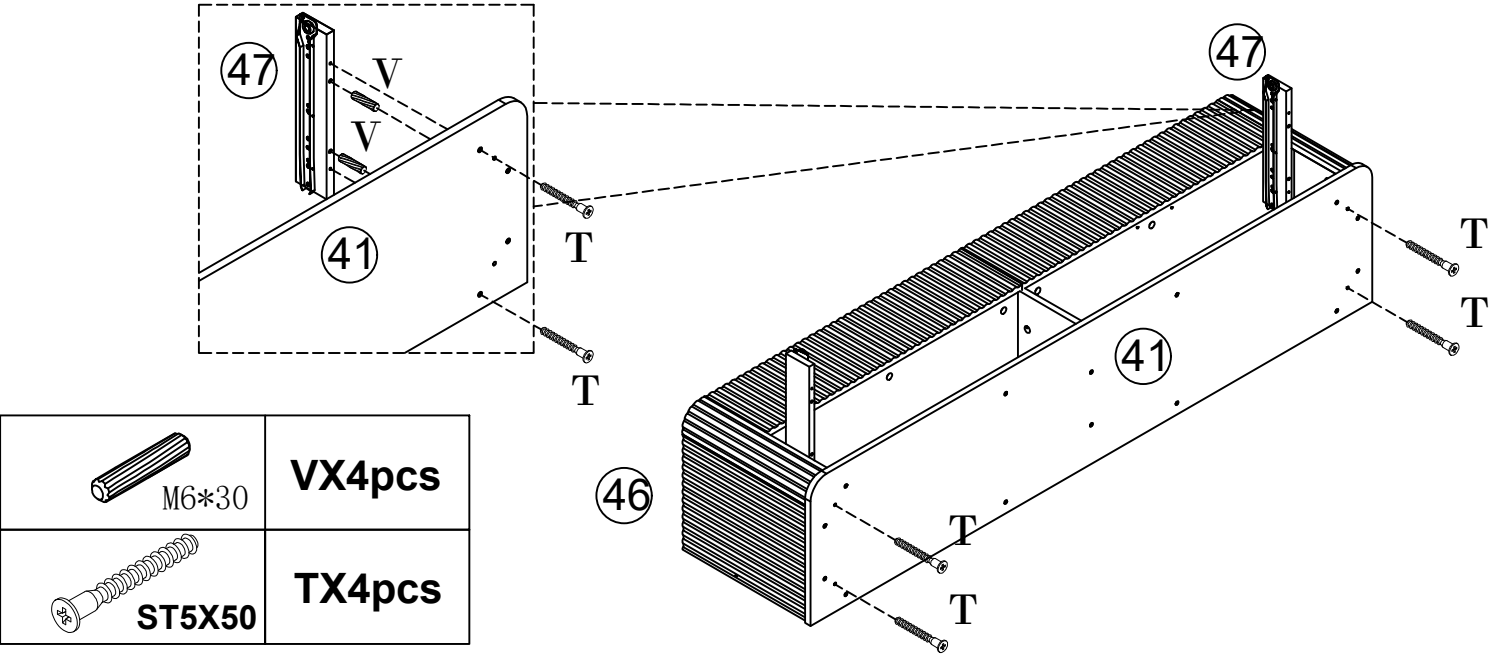

STEP35

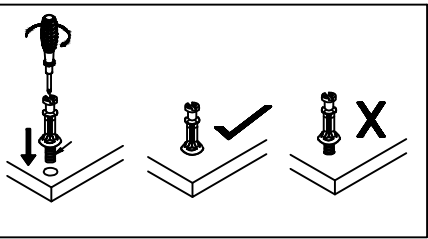


	AX14pcs
---	----------------

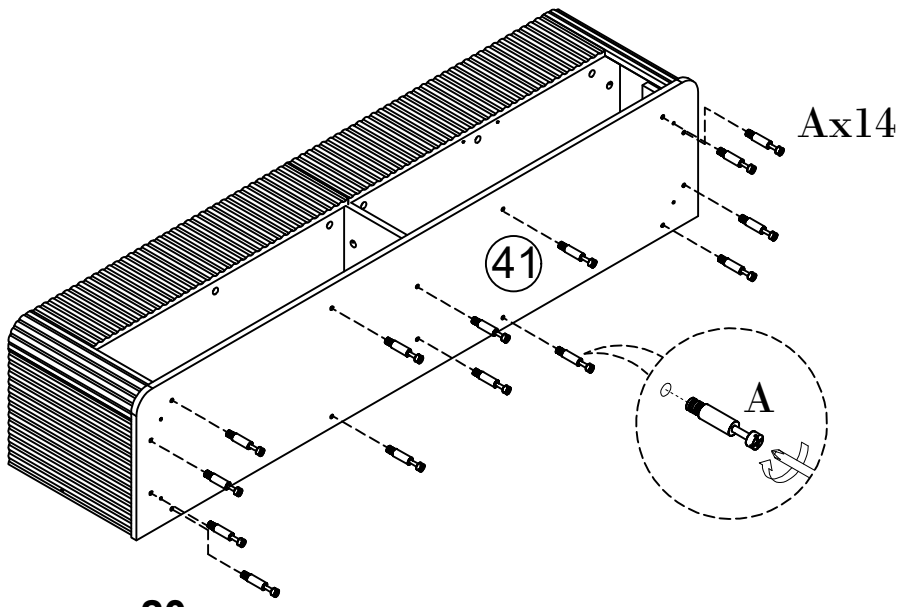

STEP36


	AX6pcs
---	---------------

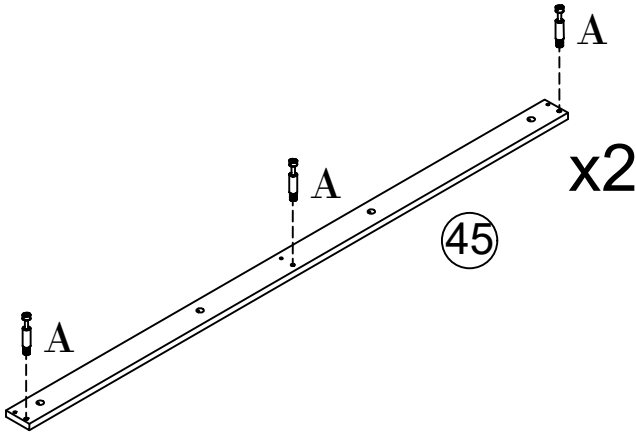

STEP37

INSERTING AND TIGHTENING CAM-BOLT			
			
			
Insert Cam-lock with row line to Cam-bolt head		CORRECT	
		WRONG	


	CX6pcs
 M6*30	VX6pcs

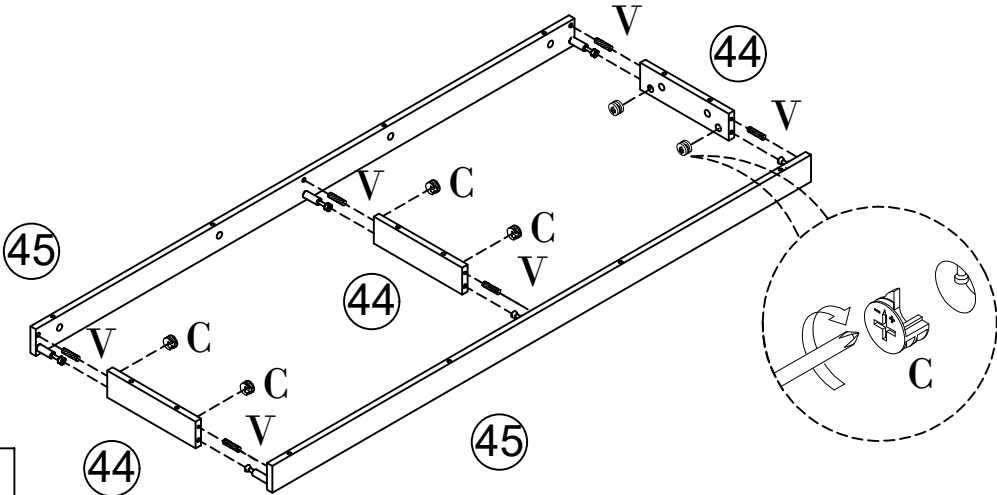



STEP38


INSERTING AND TIGHTENING CAM-BOLT			
			
			
Insert Cam-lock with row line to Cam-bolt head		CORRECT	
		WRONG	

	CX14pcs
---	----------------


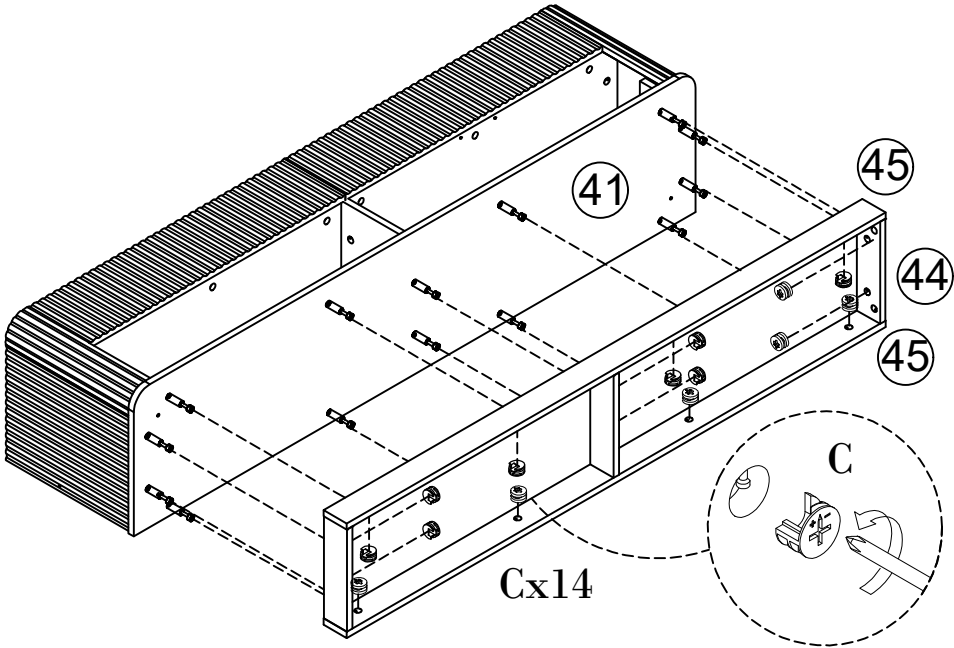



STEP39

	UX2pcs
 $\phi 3.5 \times 12$	RX8pcs
 ST5X50	TX2pcs

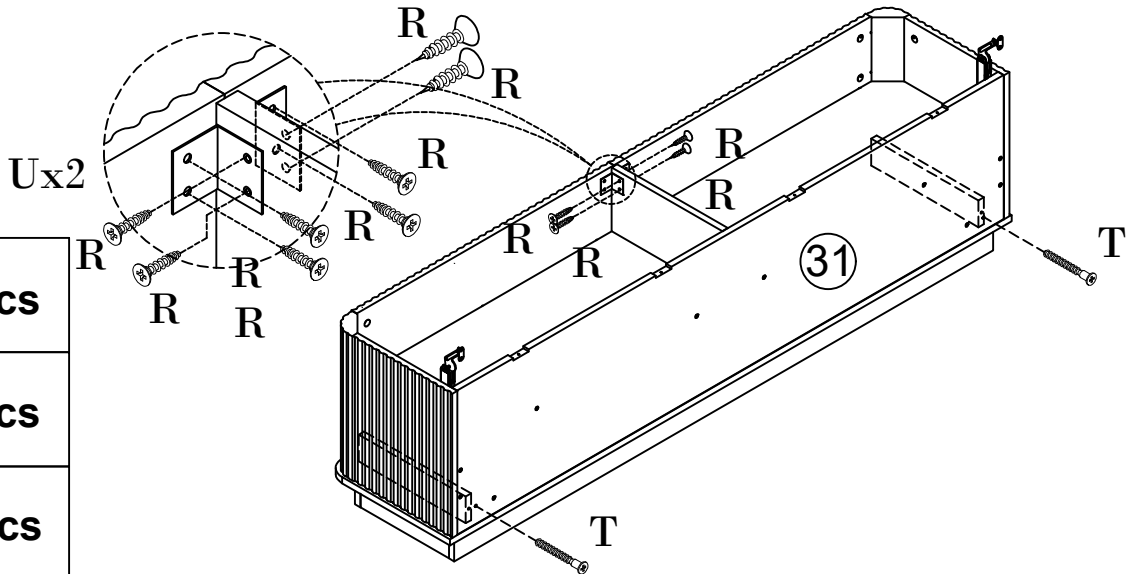



STEP40

	CLX1pc
	CRX1pc
 $\phi 3.5 \times 12$	RX4pcs

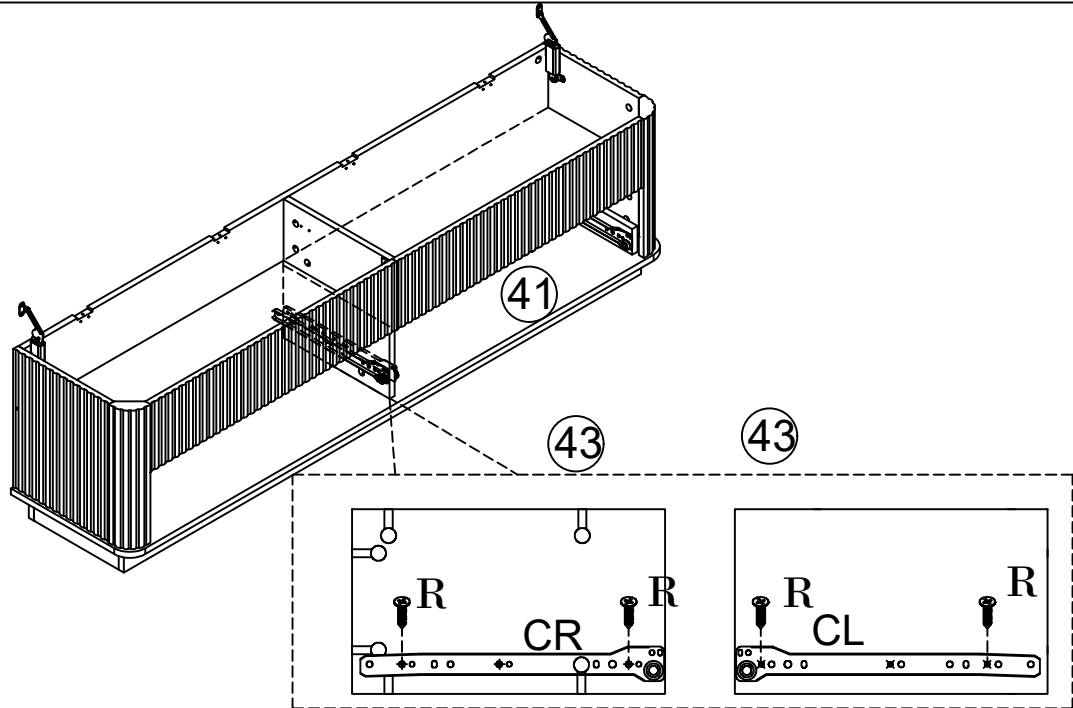


STEP41

 $\phi 3.5 \times 12$	RX8pcs
	QX4pcs

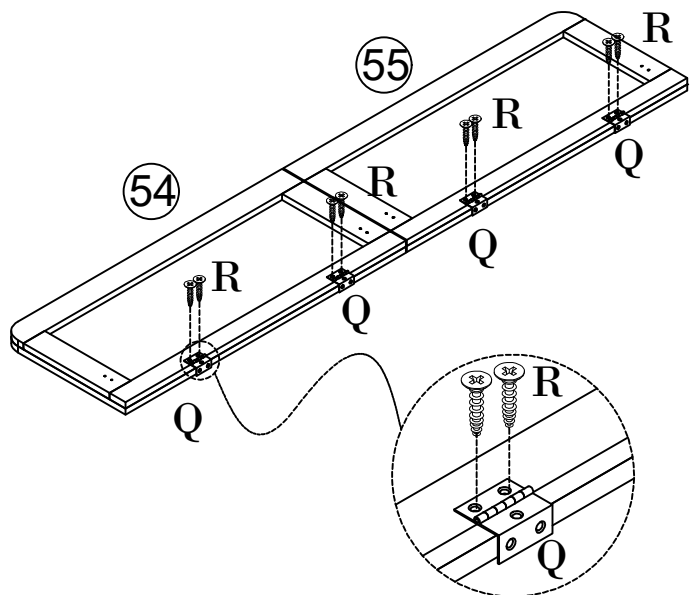



STEP42

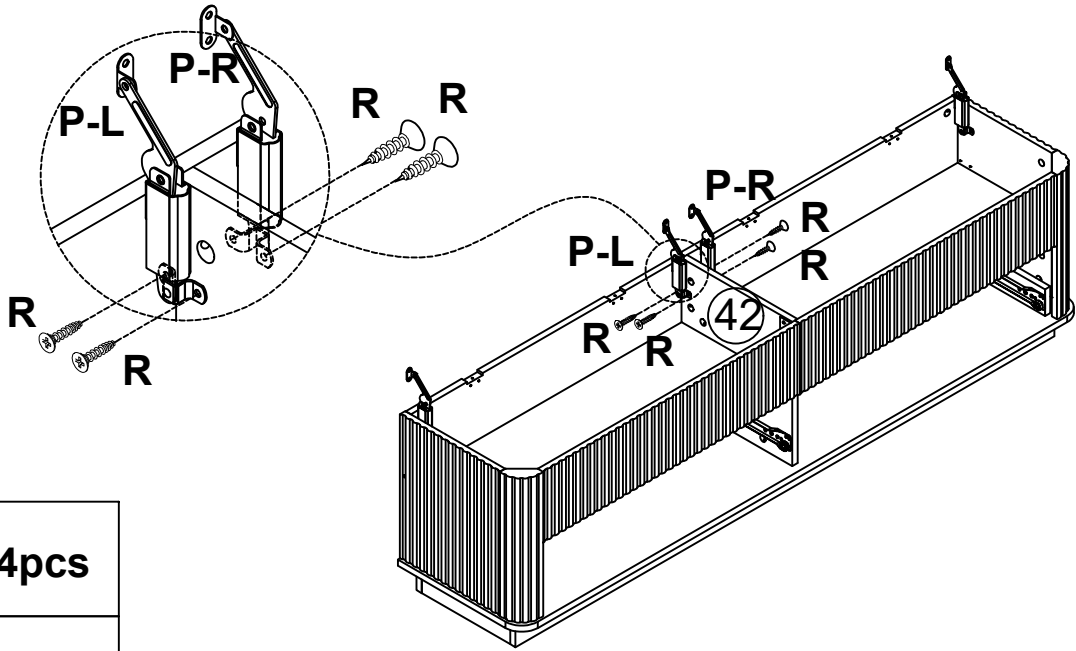


 ø3.5*12	RX4pcs
  R L	PX1pc


STEP43

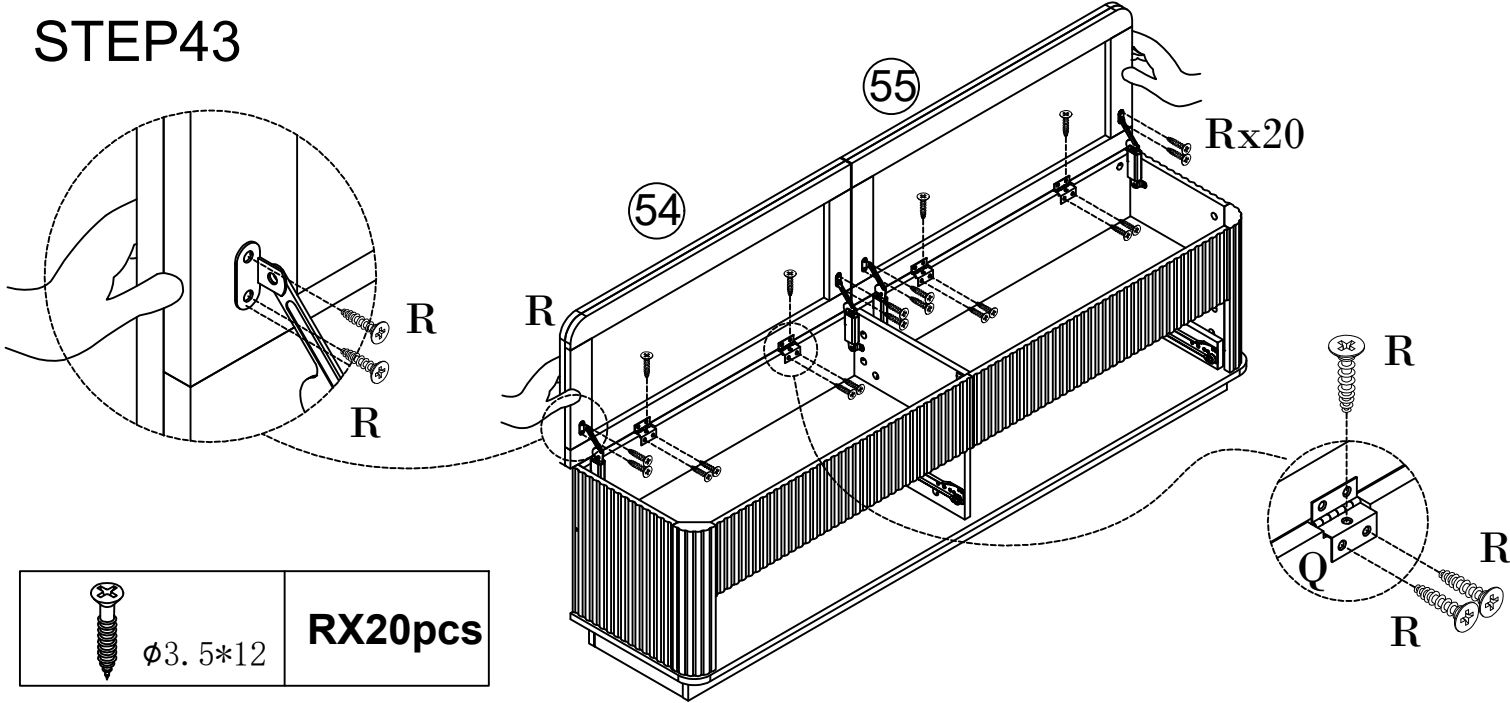


 ø3.5*12	RX20pcs
--	----------------


STEP44

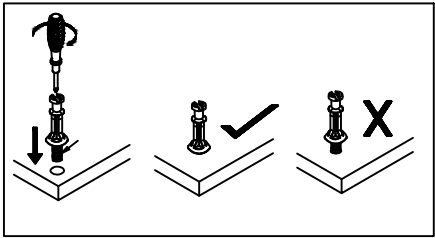

	AX4pcs
---	---------------

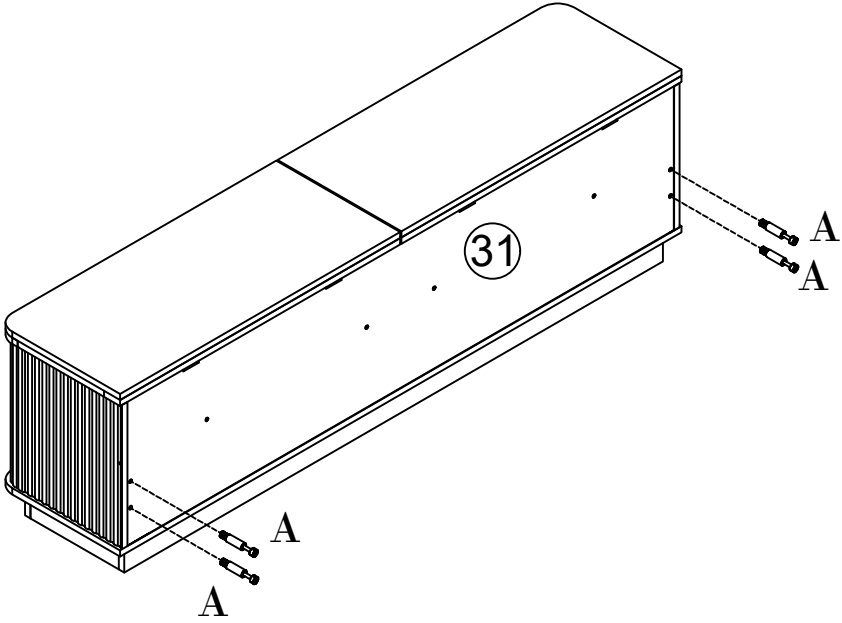


STEP45

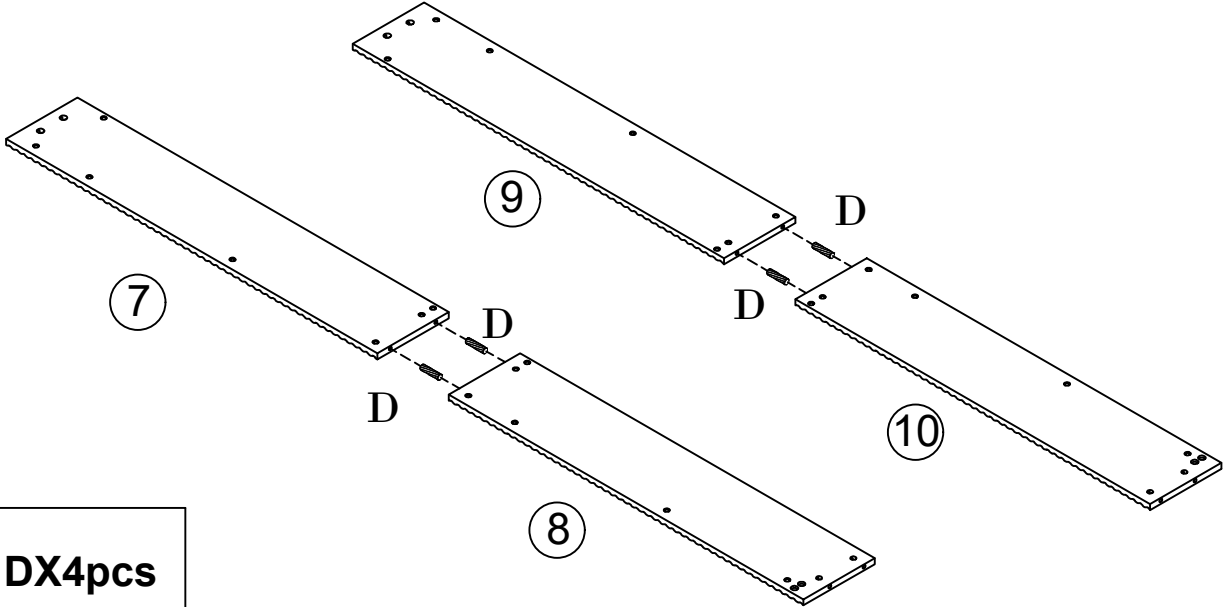


 M8*30	DX4pcs
--	---------------


STEP46

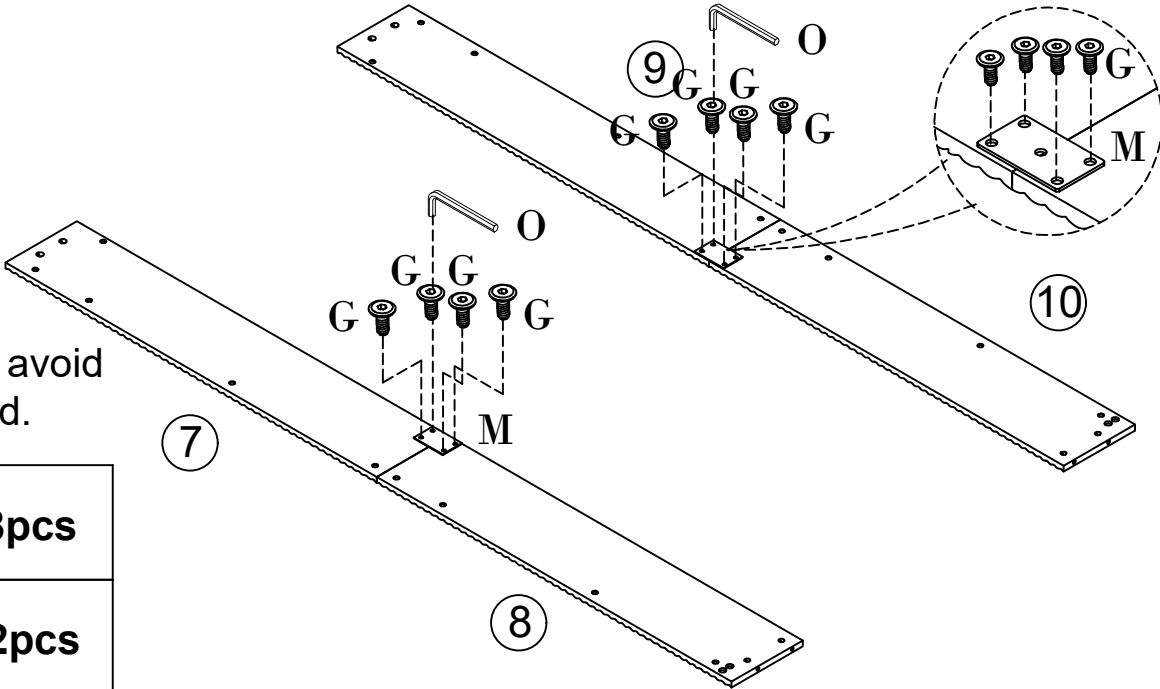


Please do not
drag it arbitrarily to avoid
damaging the board.


 M6*10	GX8pcs
	MX2pcs

STEP47

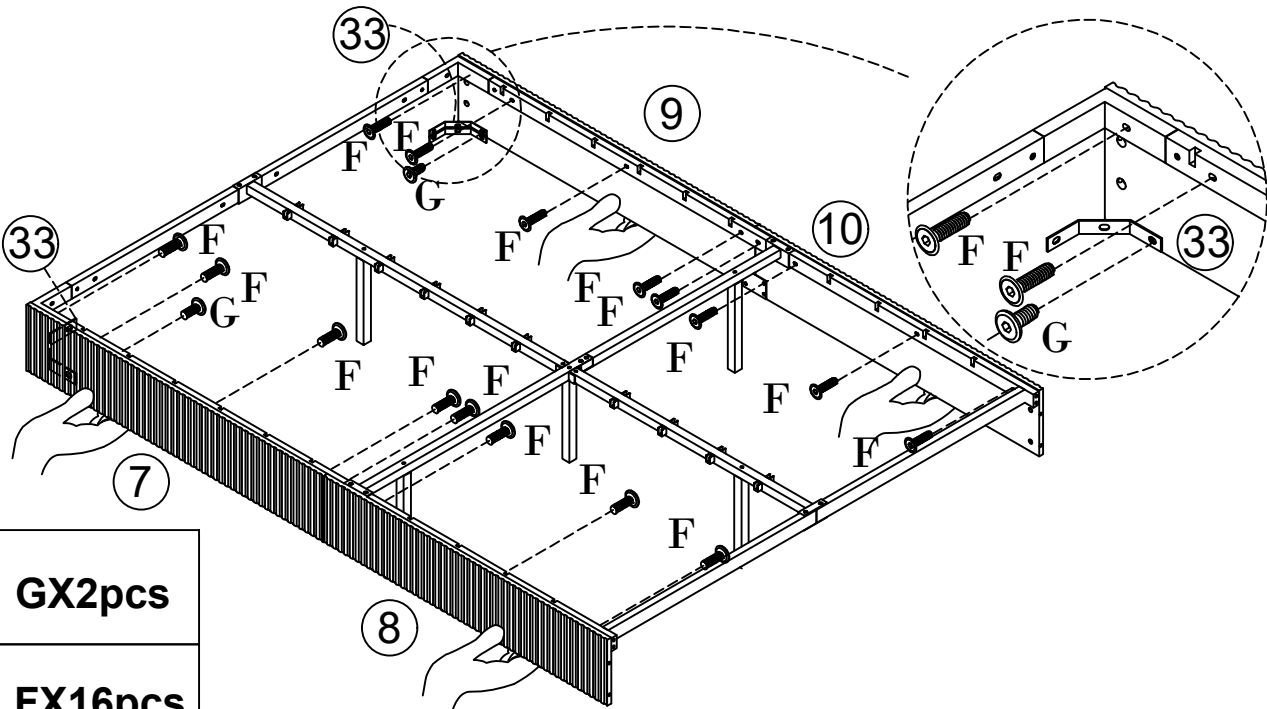

 M6*10	GX2pcs
 M6*28	FX16pcs


STEP48

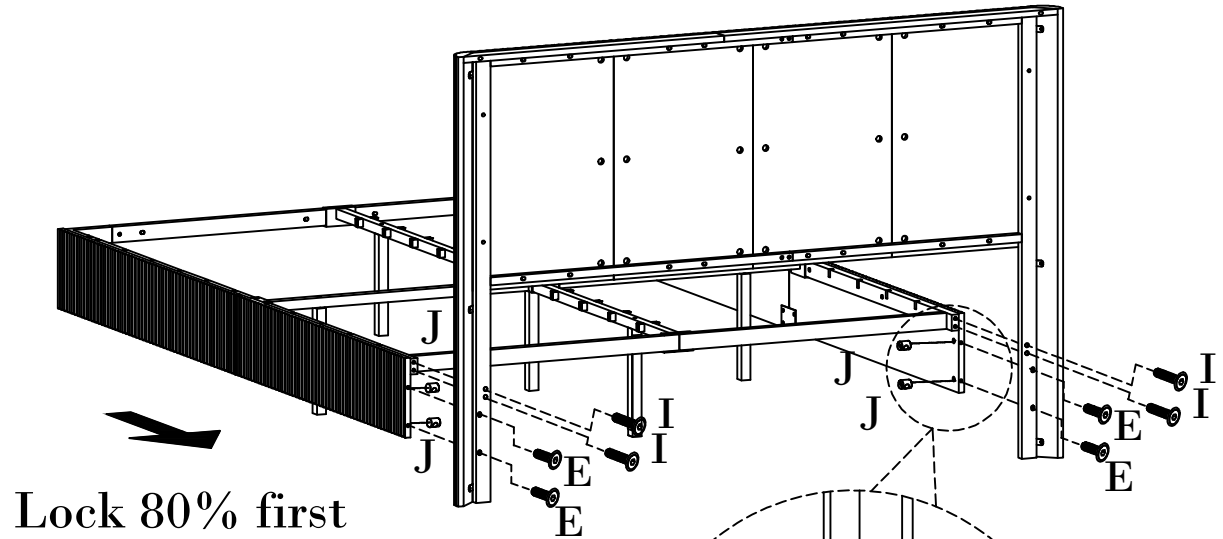

 M6*55	E x 4PCS
 M8*50	I x 4PCS
	J x 4PCS


The direction of the transverse slot of the J nut is aligned with the hole position

STEP49

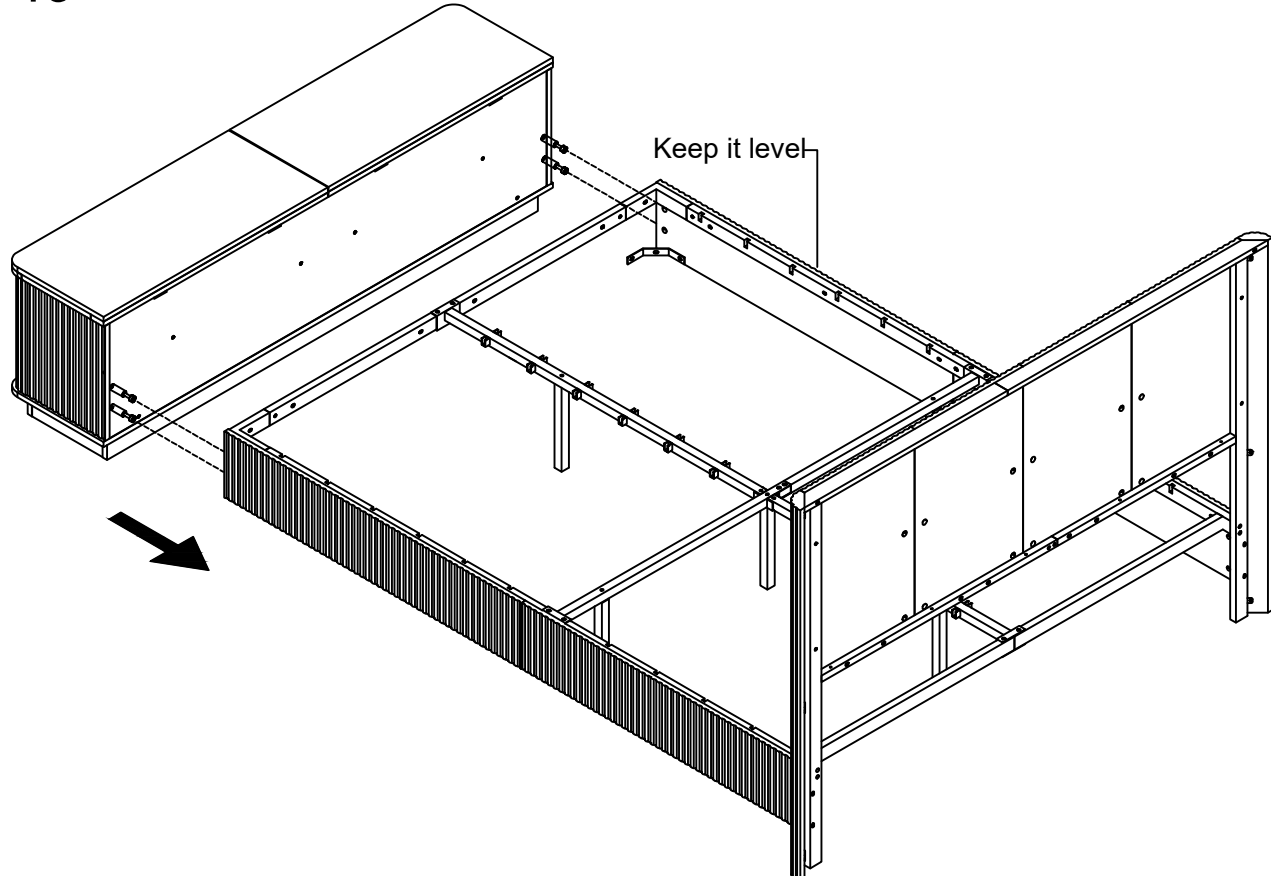

STEP50


INSERTING AND TIGHTENING CAM-BO

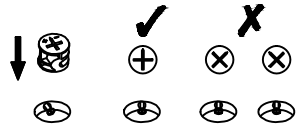


Insert Cam-bolt with your finger to Cam-bolt head


CORRECT

WRONG

	CX4pcs
 M6*28	FX4pcs
 M6*10	GX2pcs


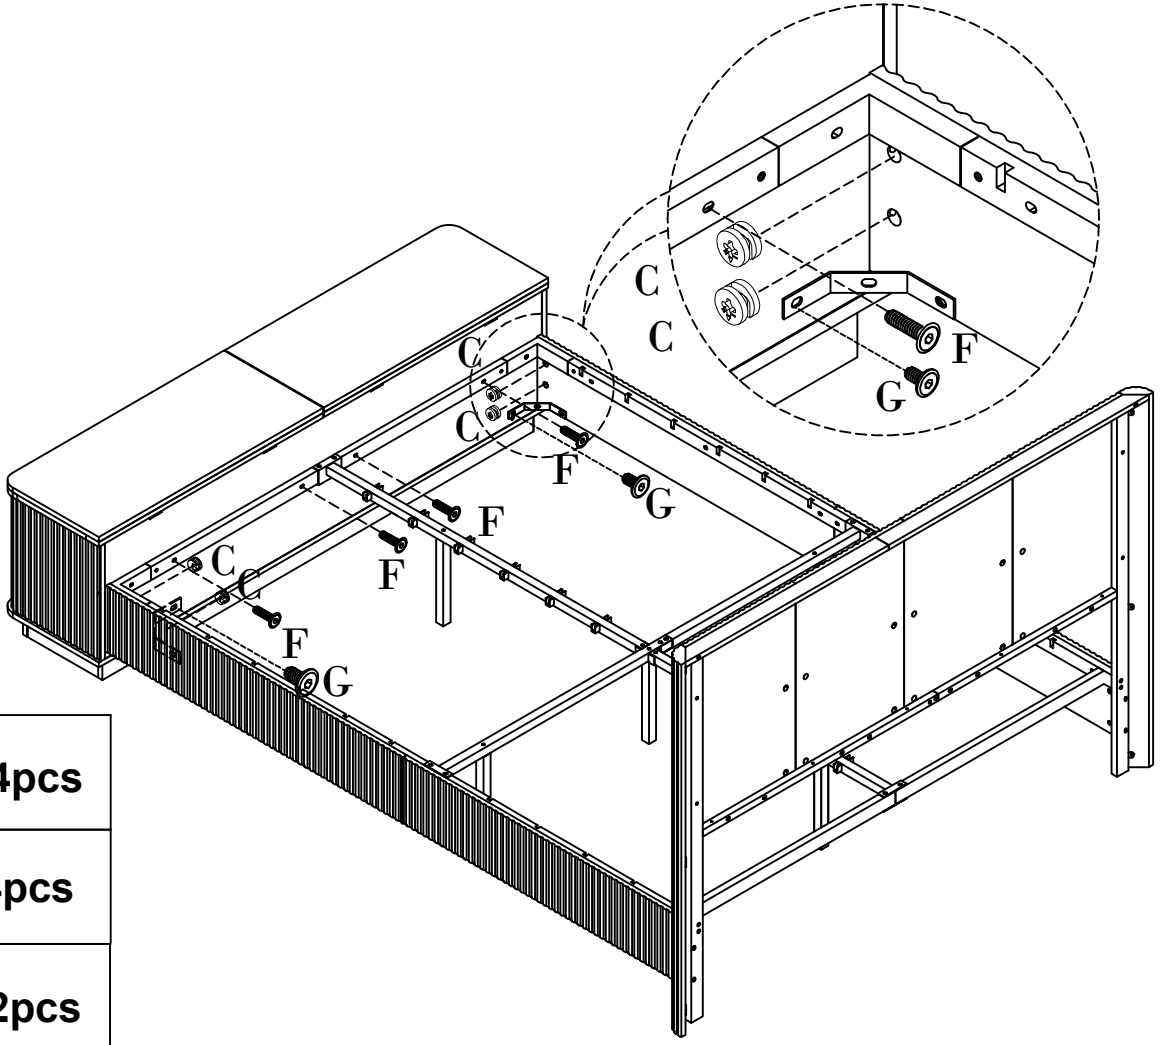


STEP51



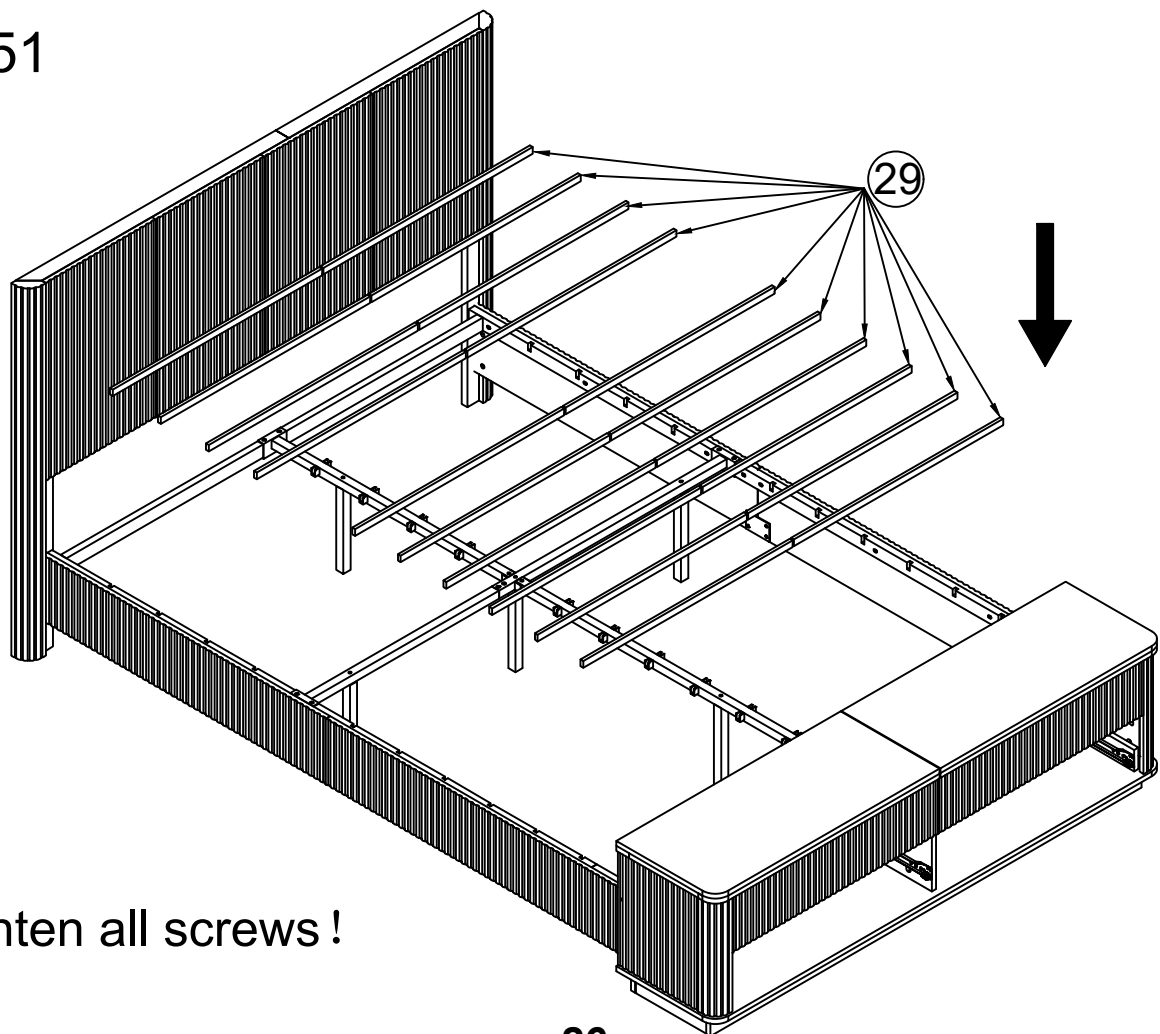


Tighten all screws !


STEP52

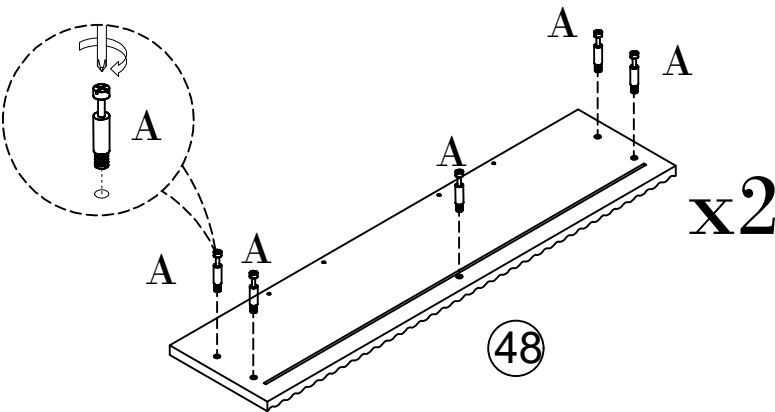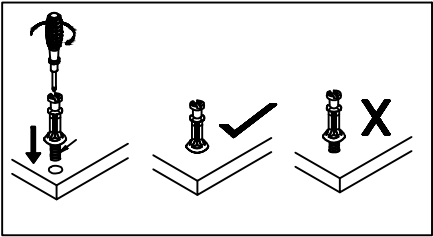

STEP53

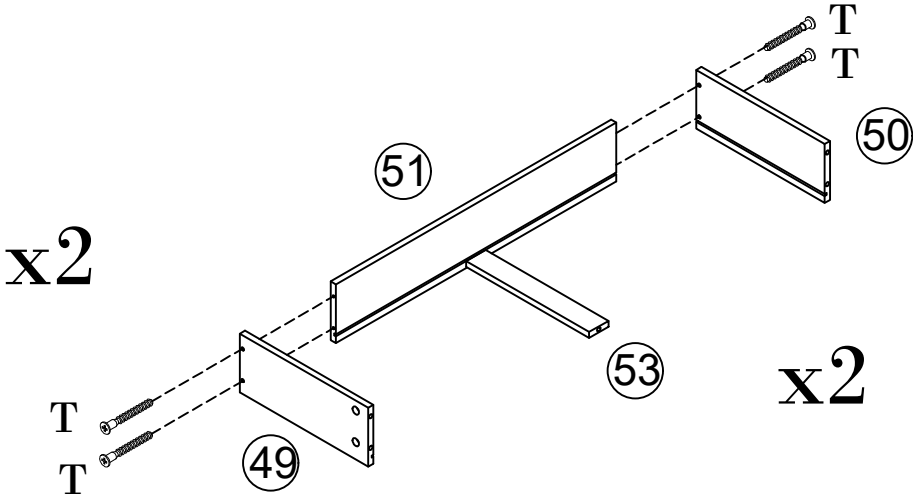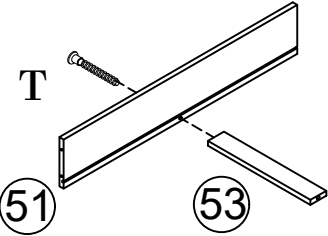


STEP54

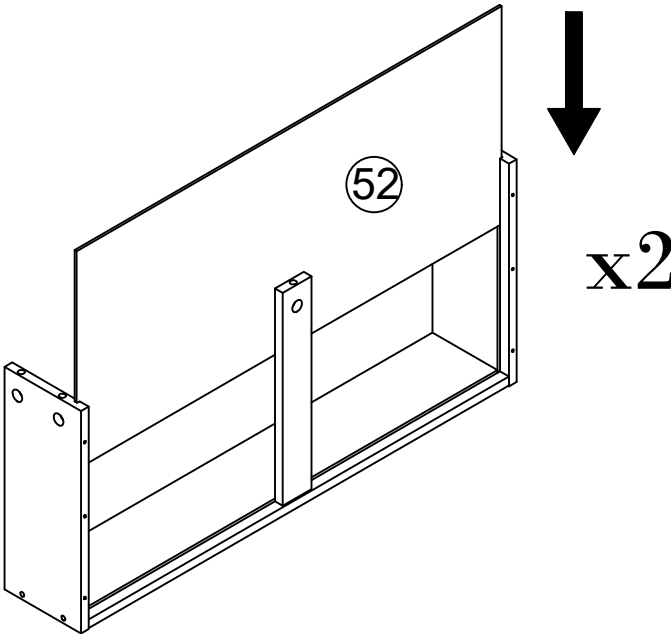

STEP55

INSERTING AND TIGHTENING CAM-BOLT


CX10pcs

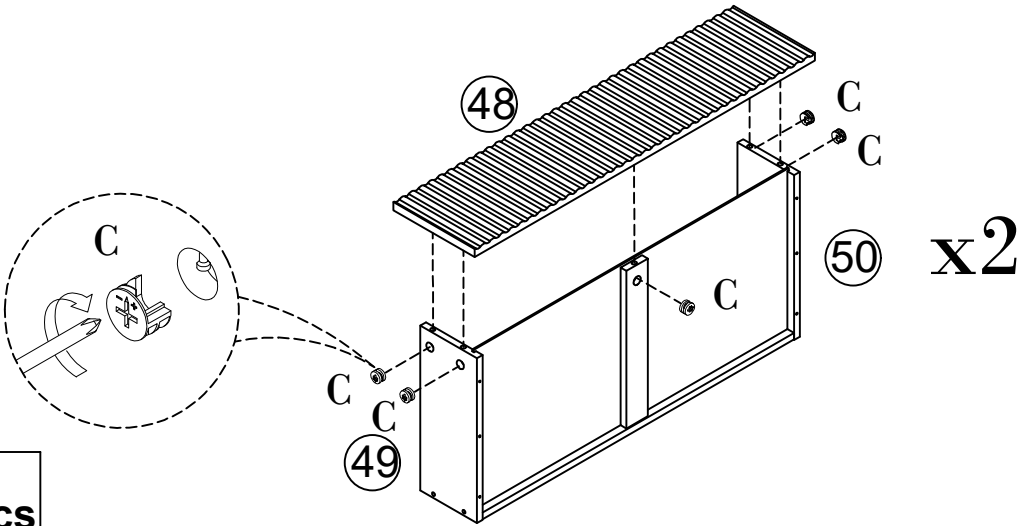

STEP56



ø3.5*12

SX4pcs

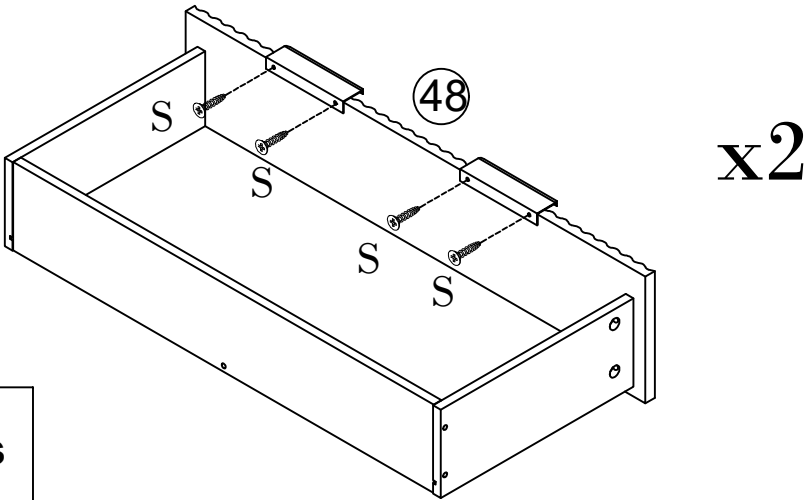

STEP57

 ø3.5*12	RX8pcs
	DLX2pcs
	DRX2pcs

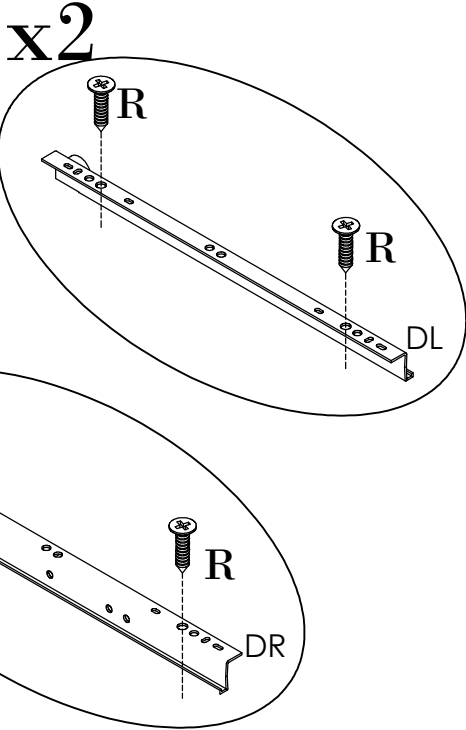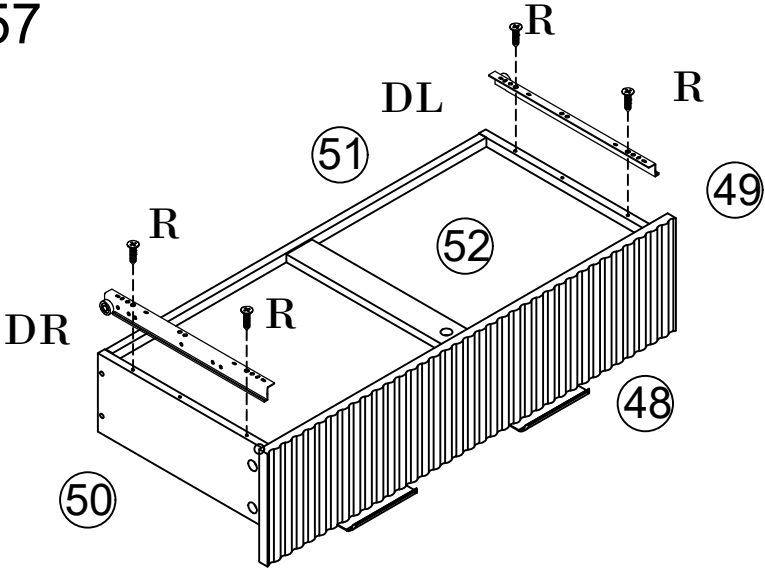

STEP58

