



BED FRAME

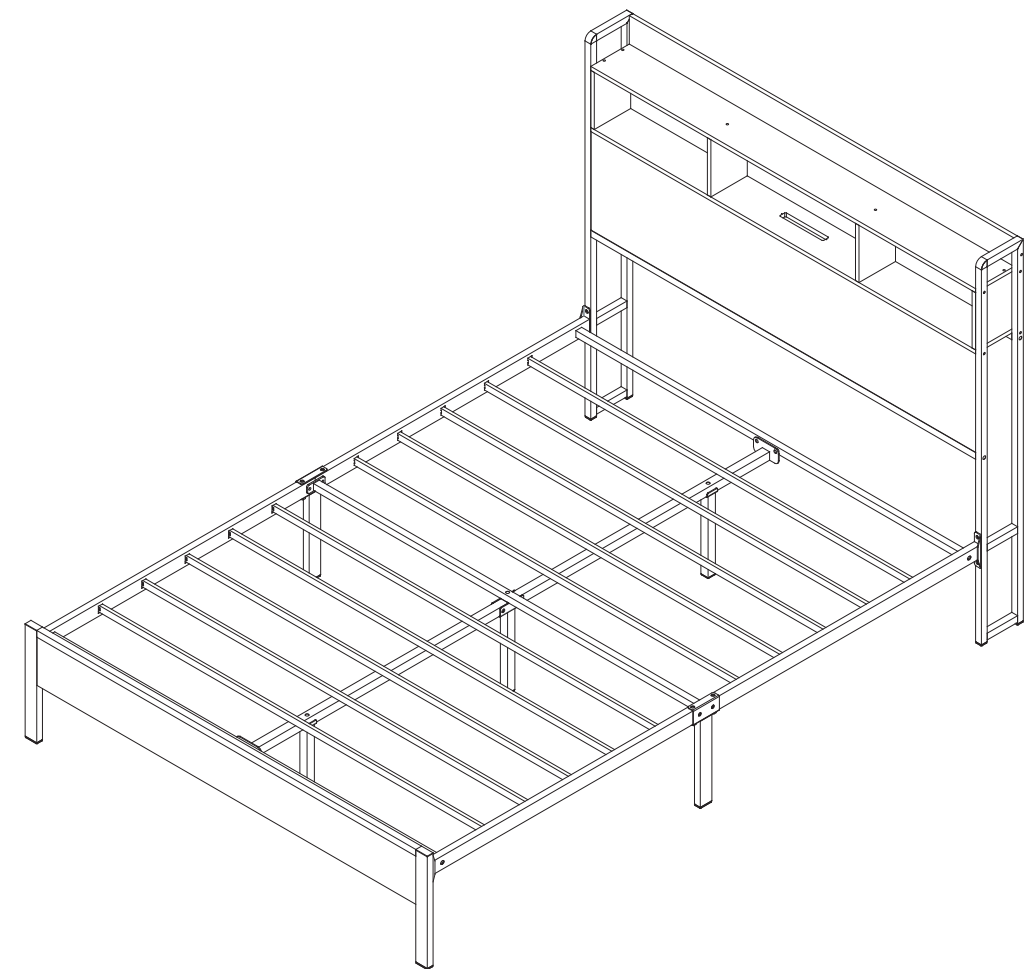

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

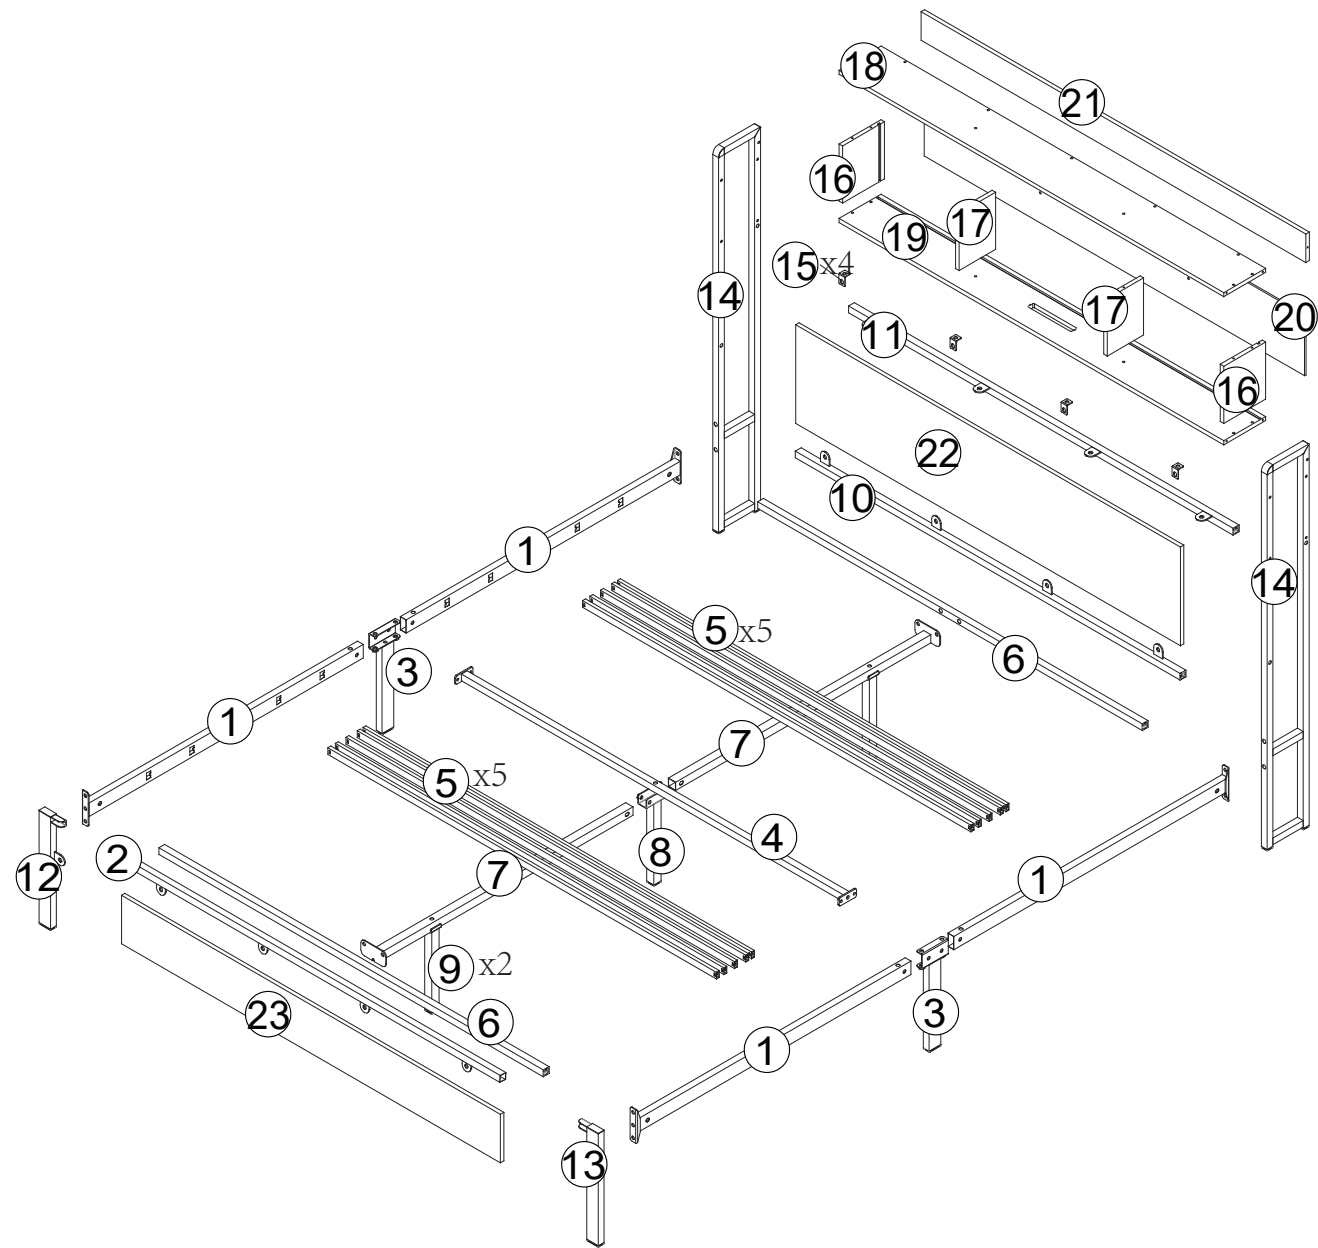





B432 F/Q/K

Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

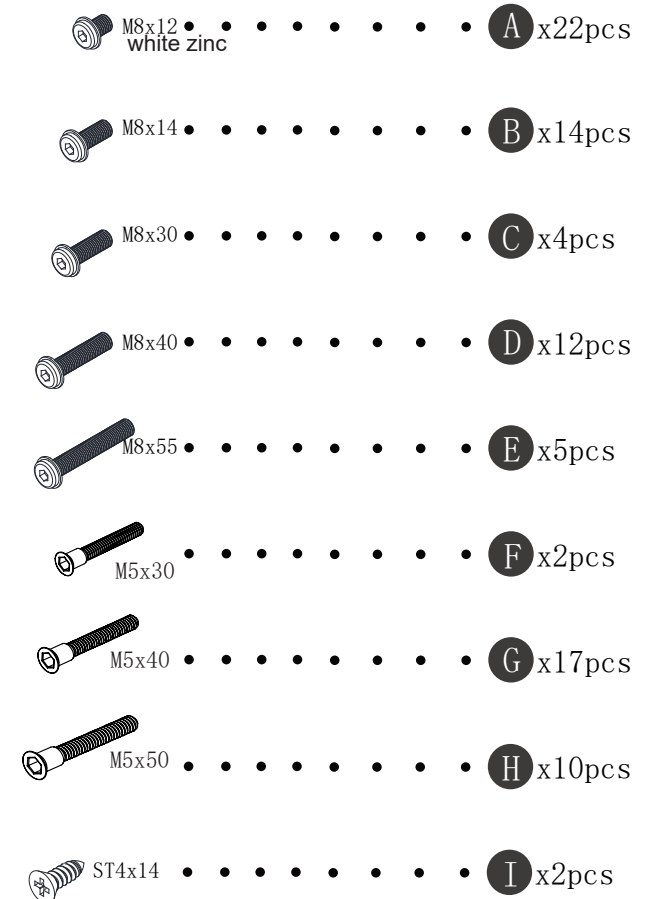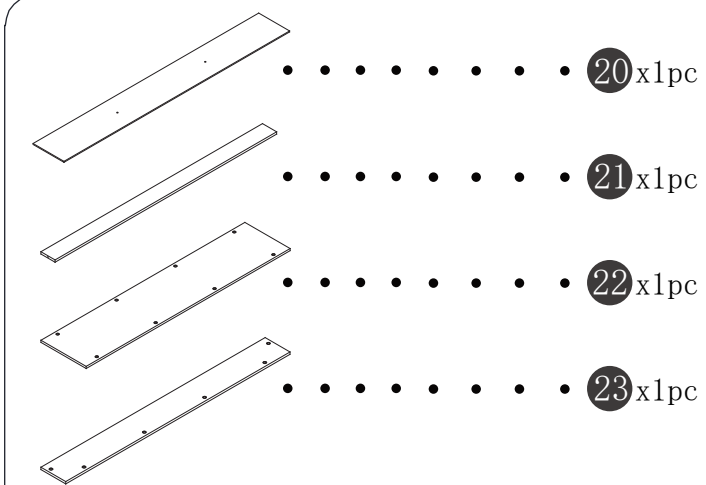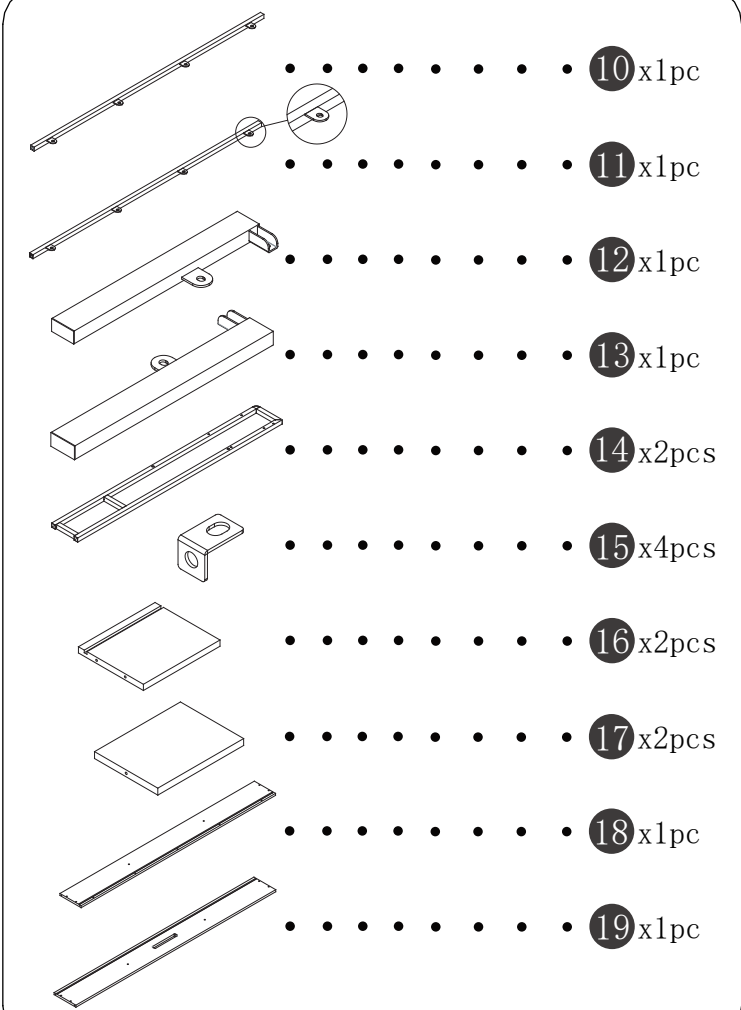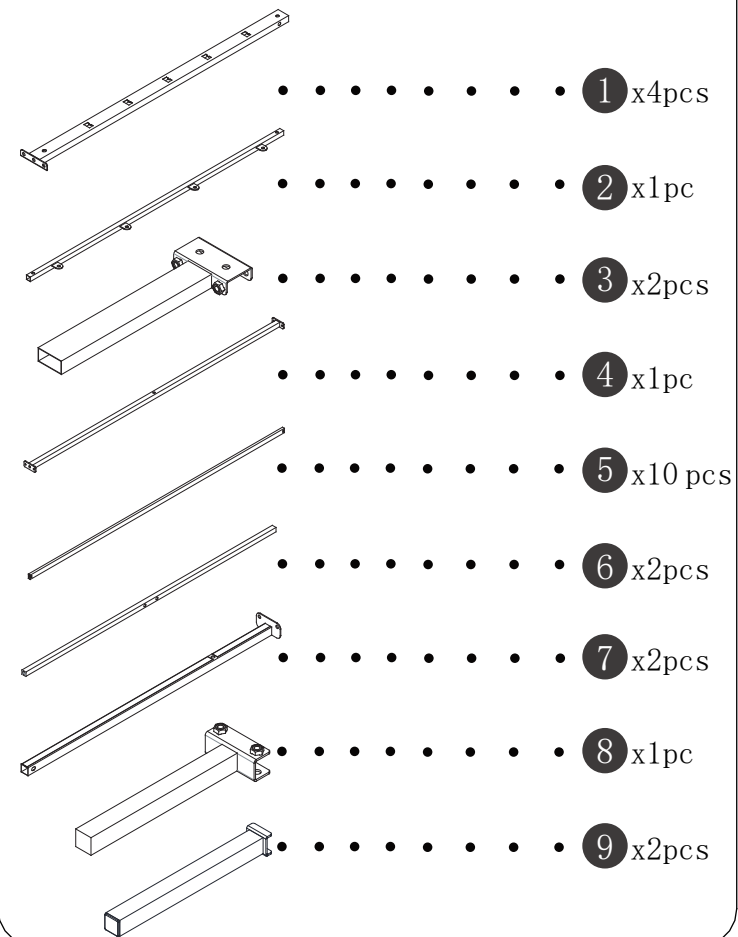


- M5 • • • • • J x1pc
- M8 • • • • • K x1pc
- • • • • L x20pcs
- • • • • U x1pc

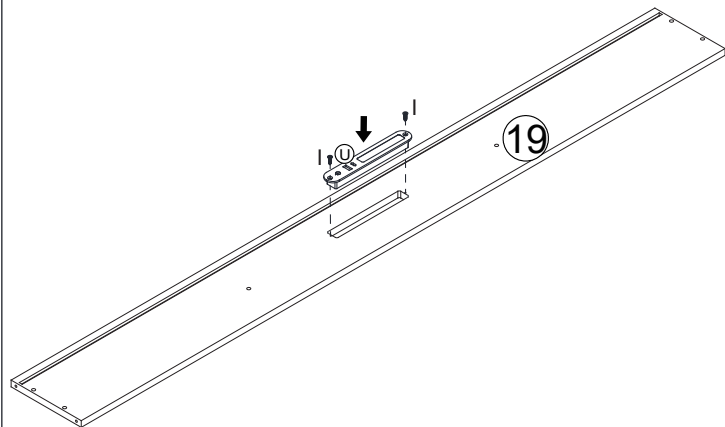

I		2pcs
ST4x14		


1

Finish

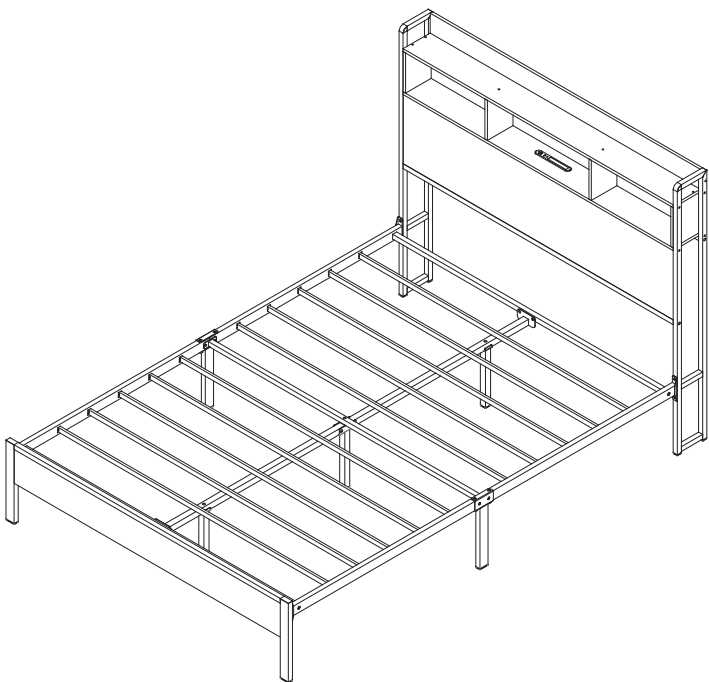


Note:Now you can tighten all the bolts.

20

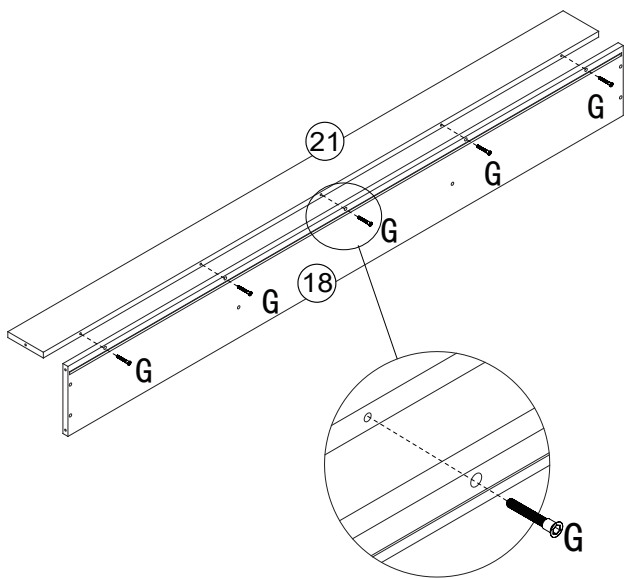









G		5pcs
M5x40		

2

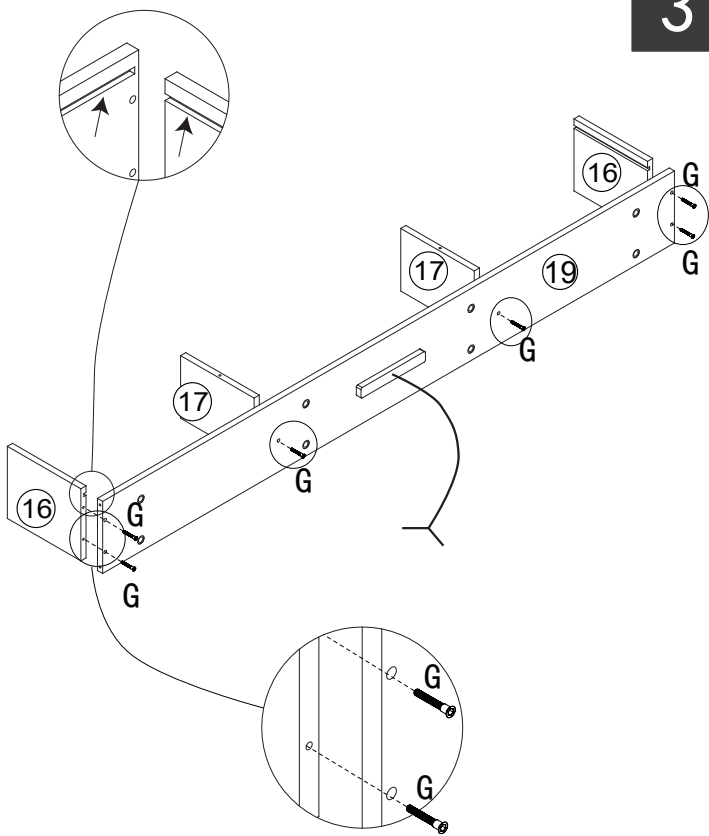


G		6pcs
M5x40		

3

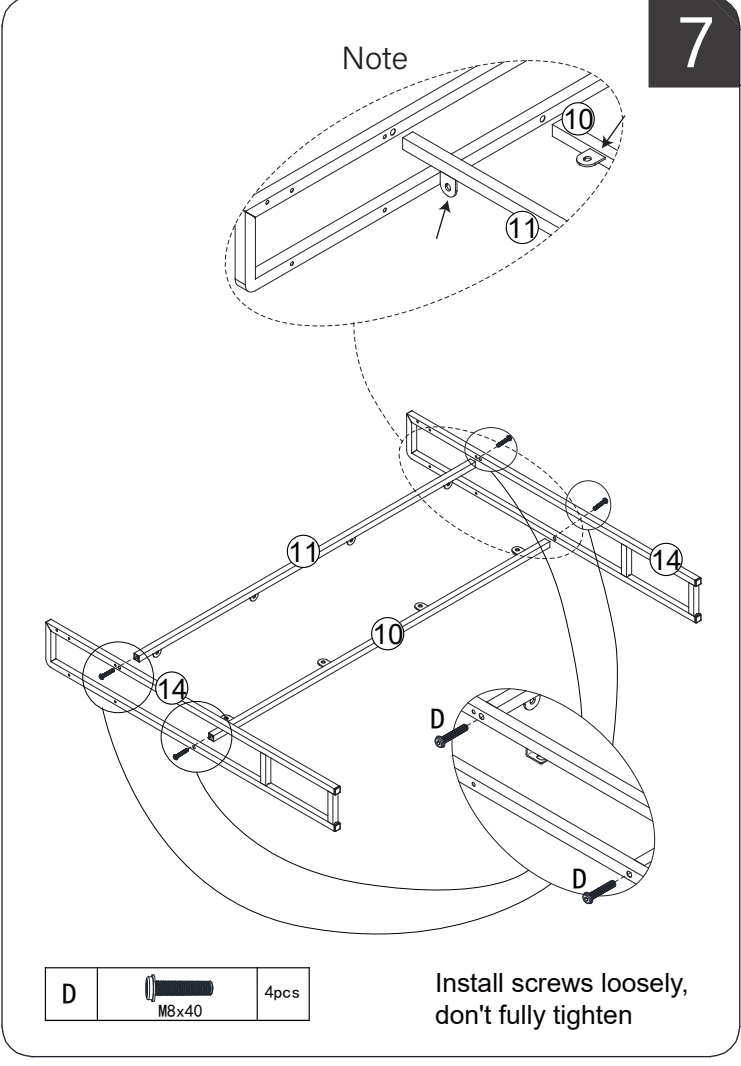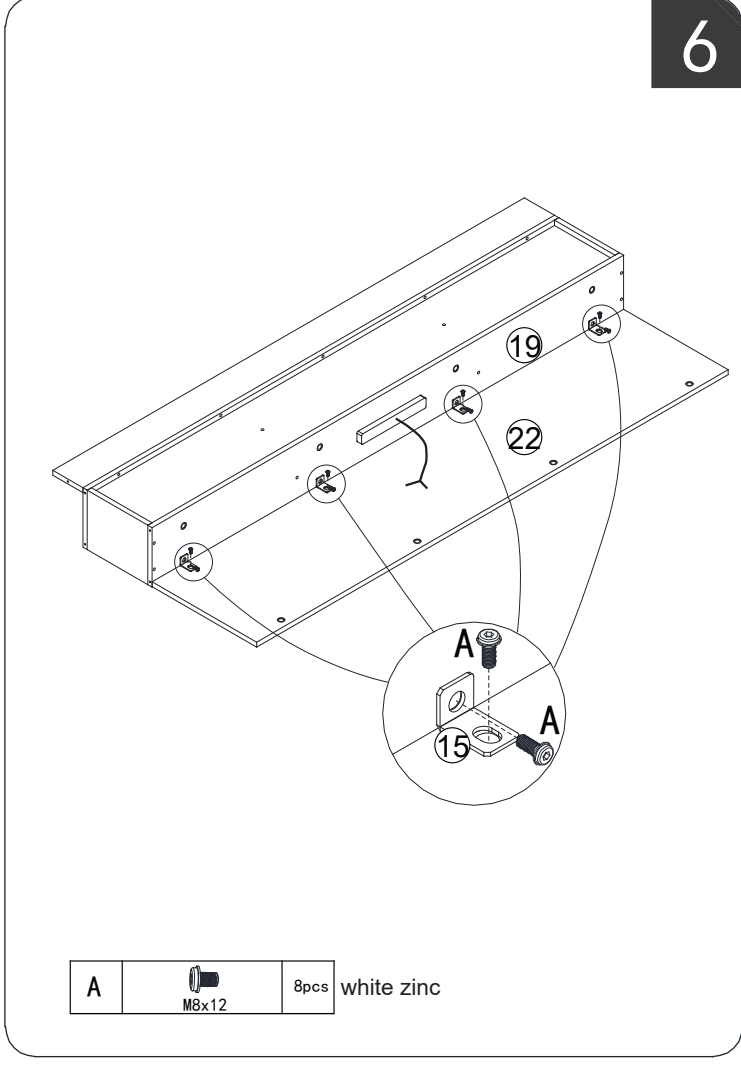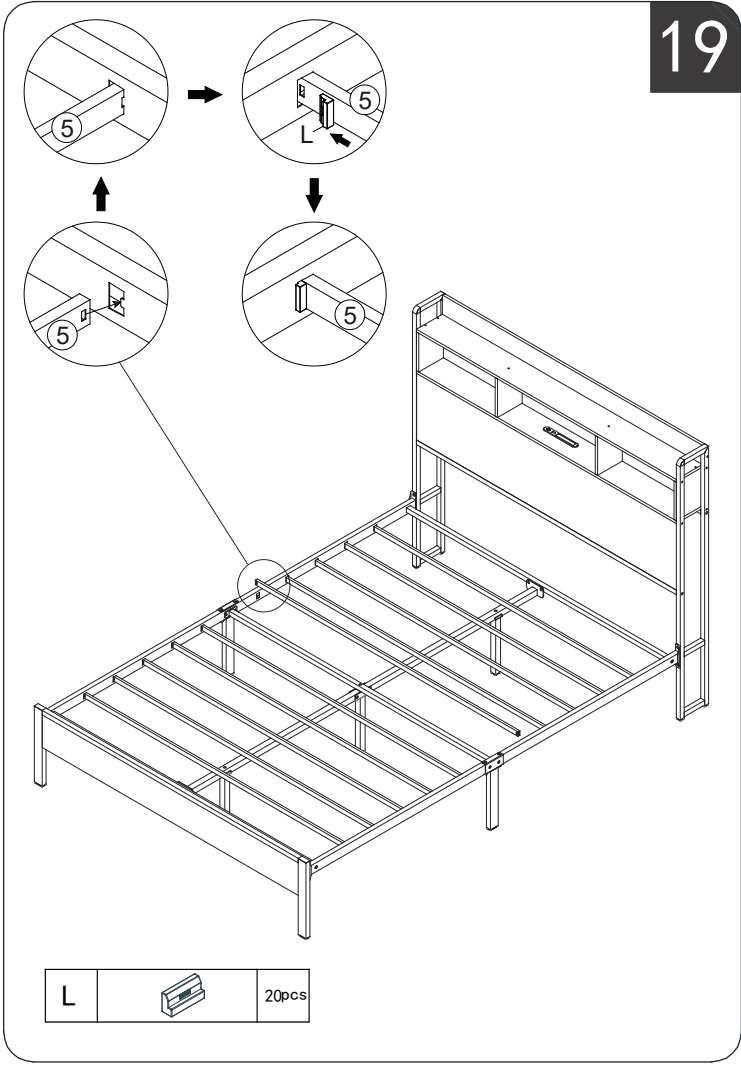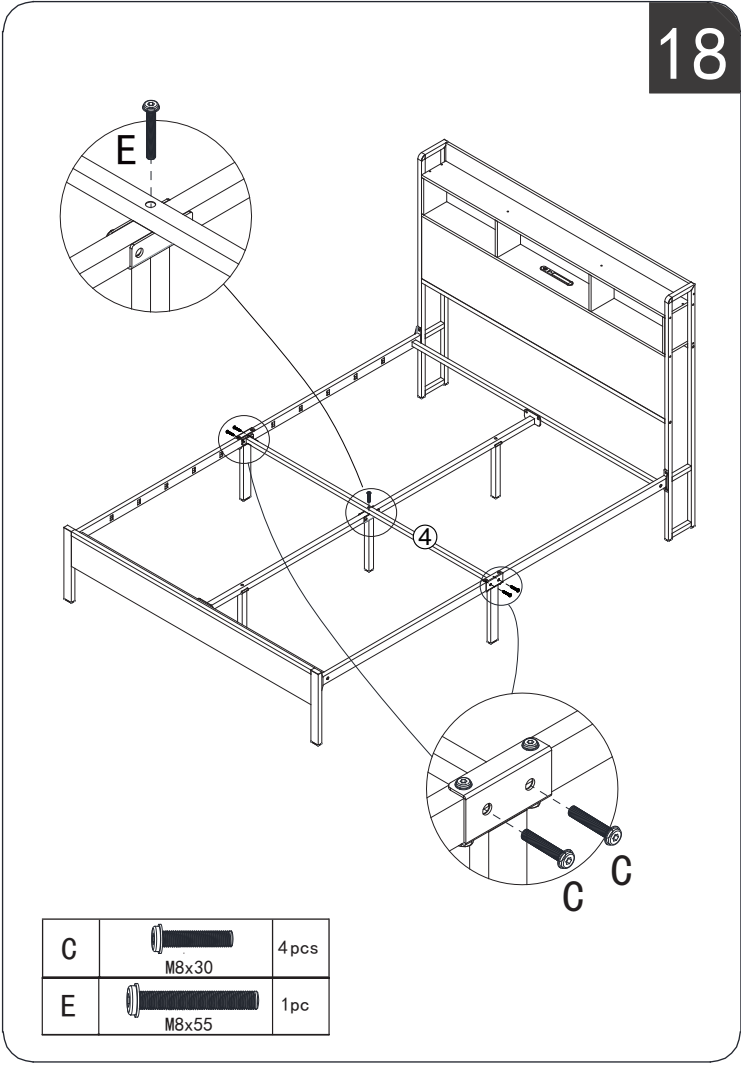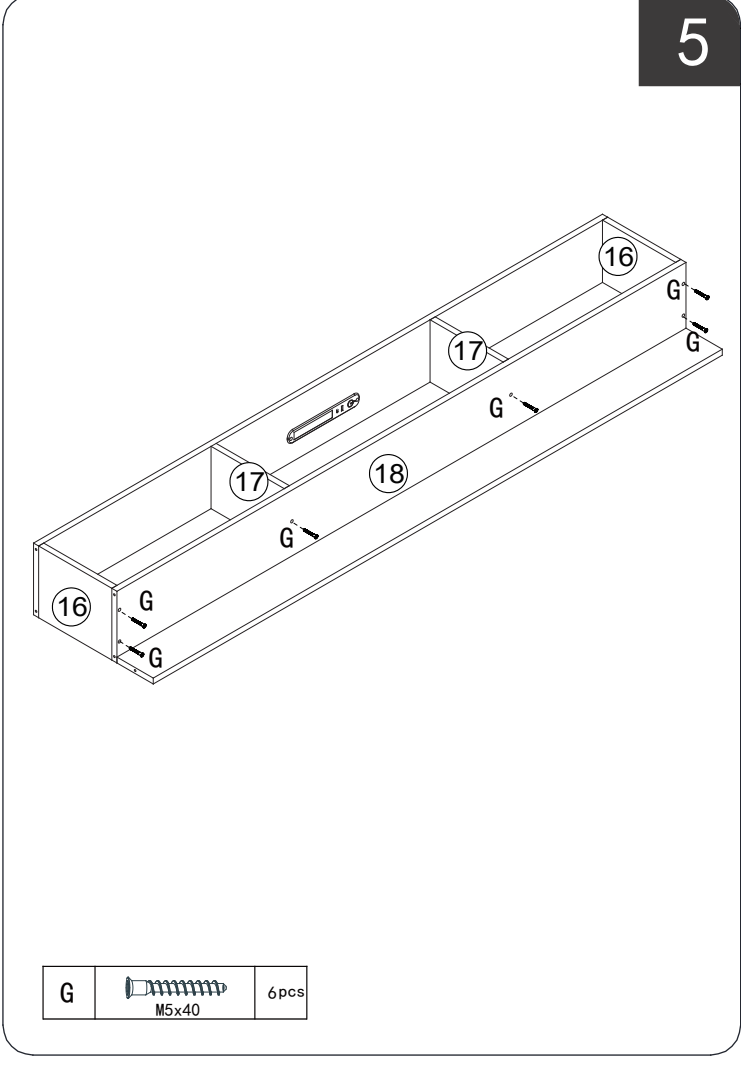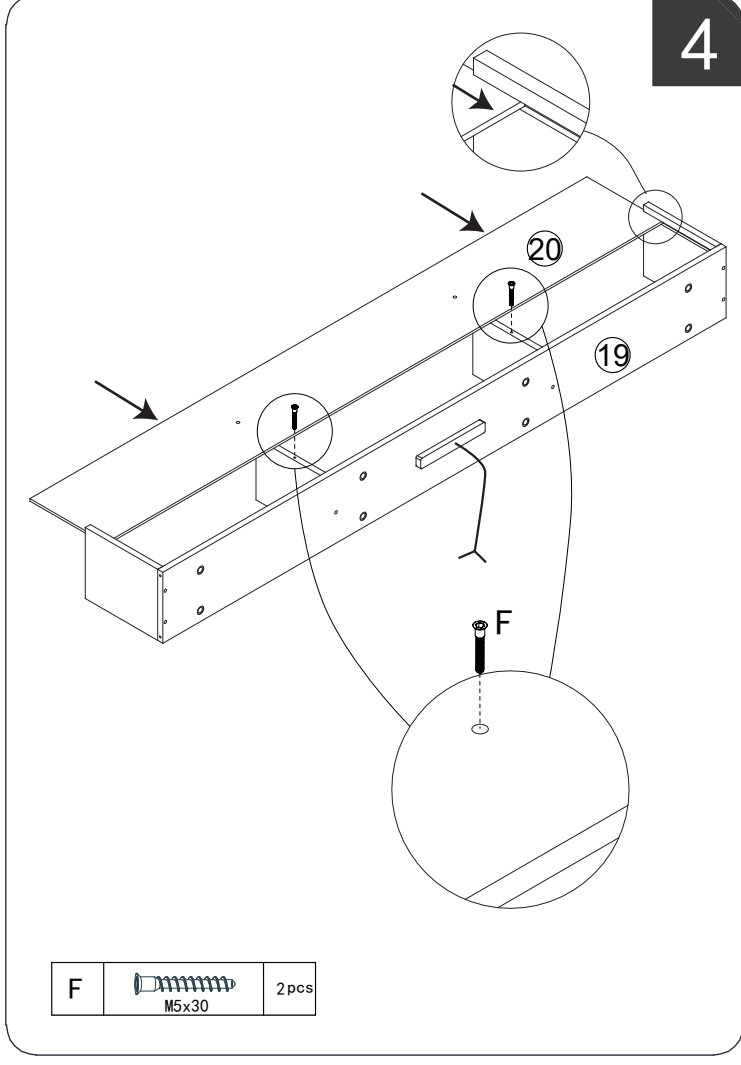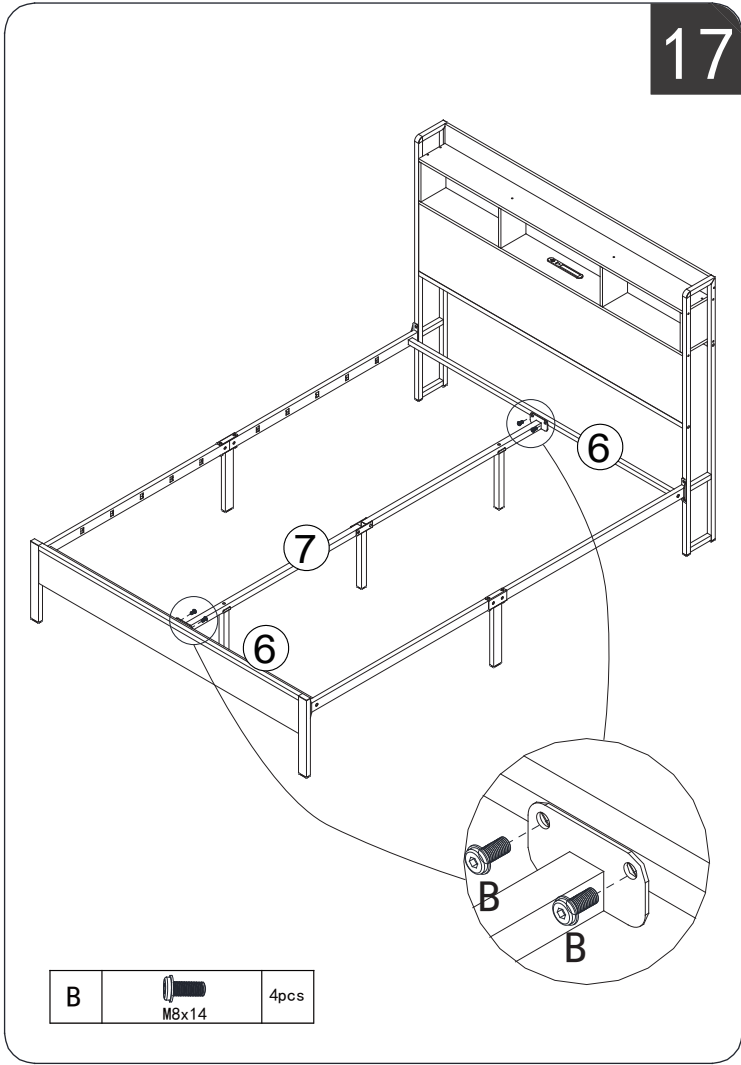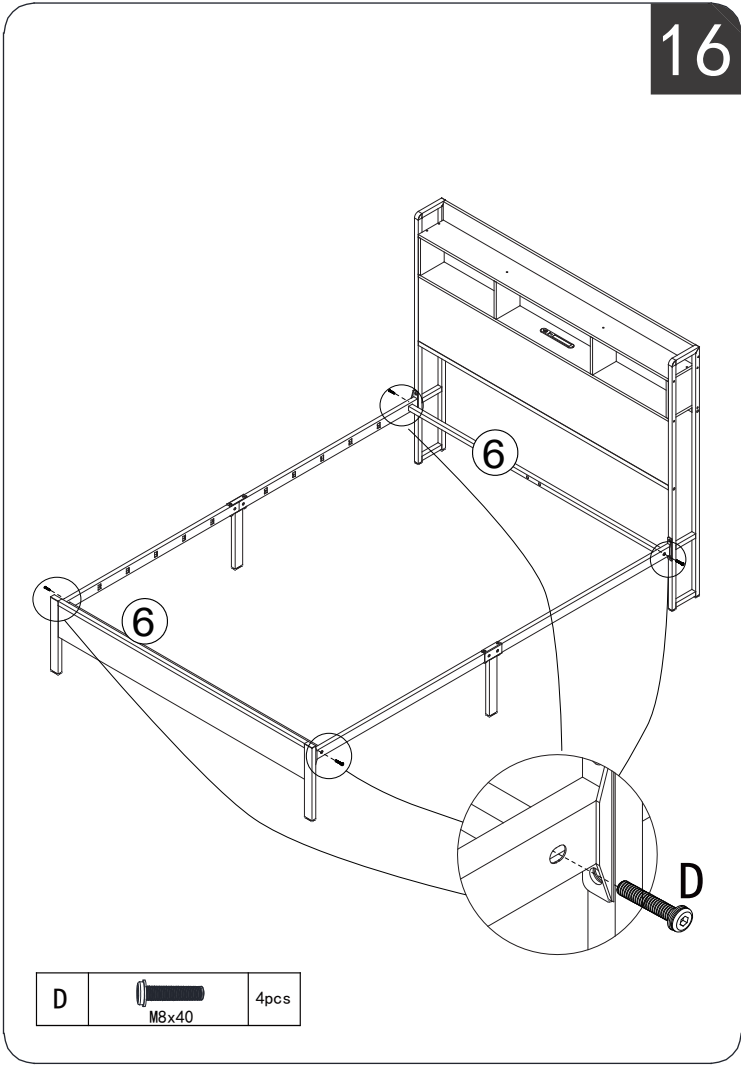


8

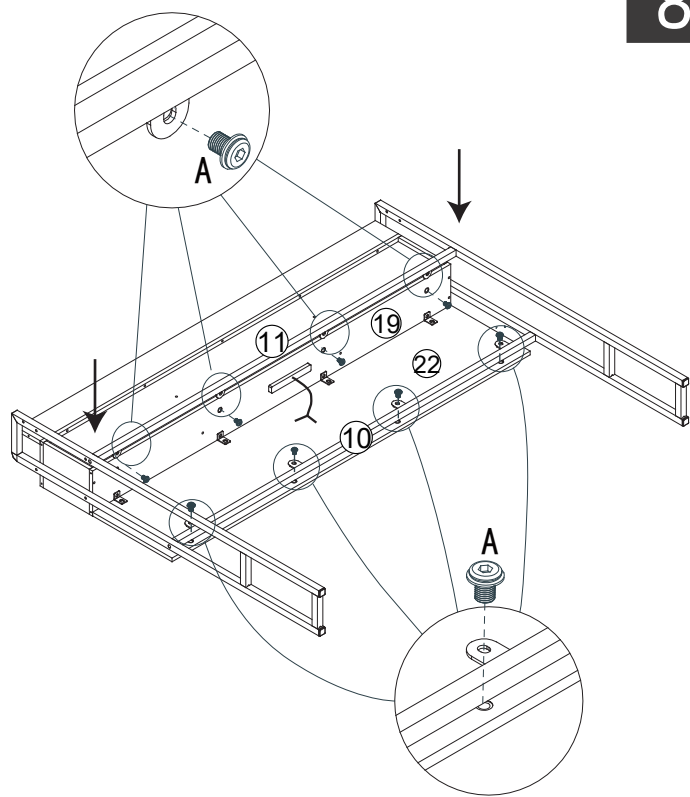

A		8pcs	white zinc
---	---	------	------------




9

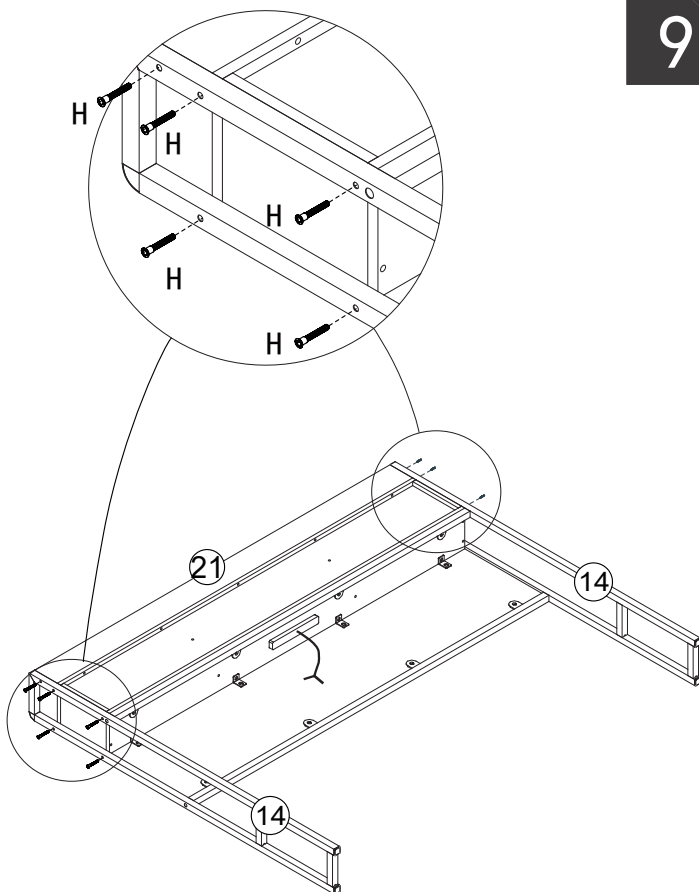

H		10pcs	
---	---	-------	--


12

x2

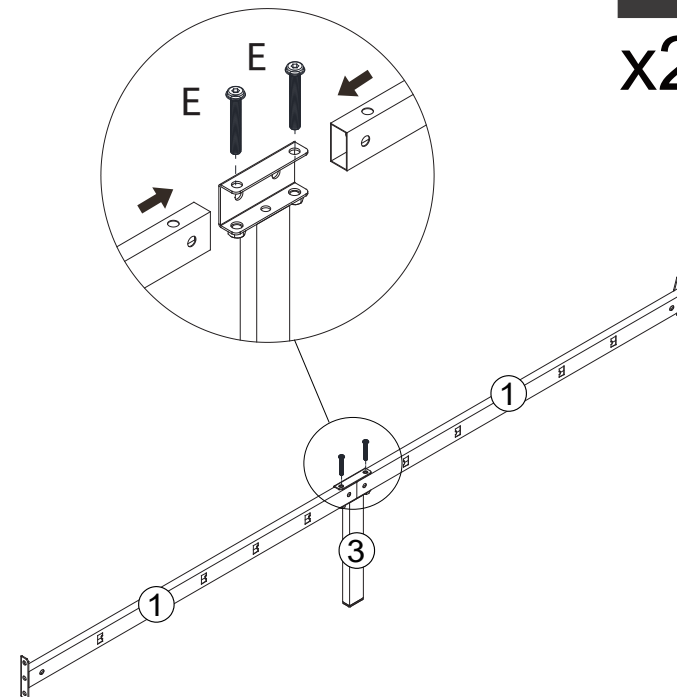


E		4pcs	
---	---	------	--

13

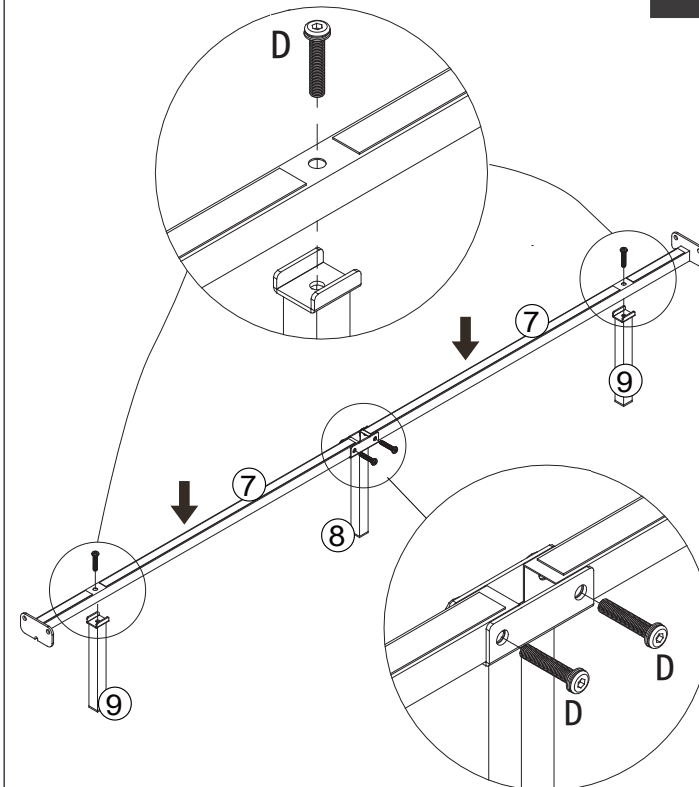


D		4pcs	
---	---	------	--

10

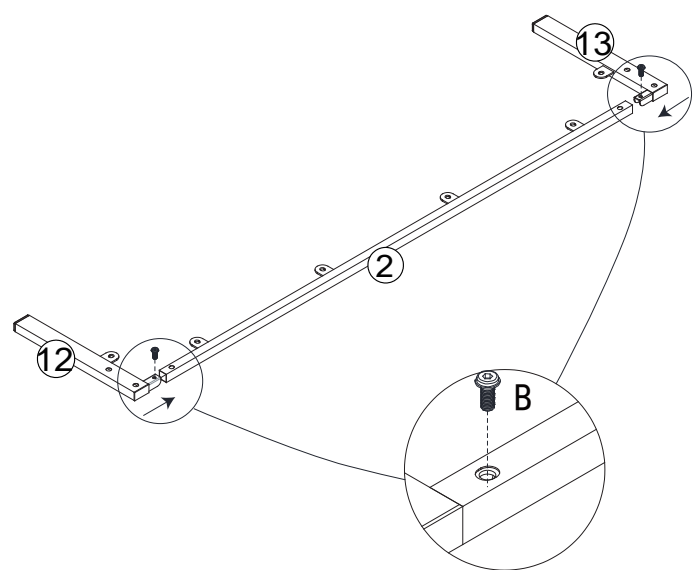


B		2pcs	
---	---	------	--

11

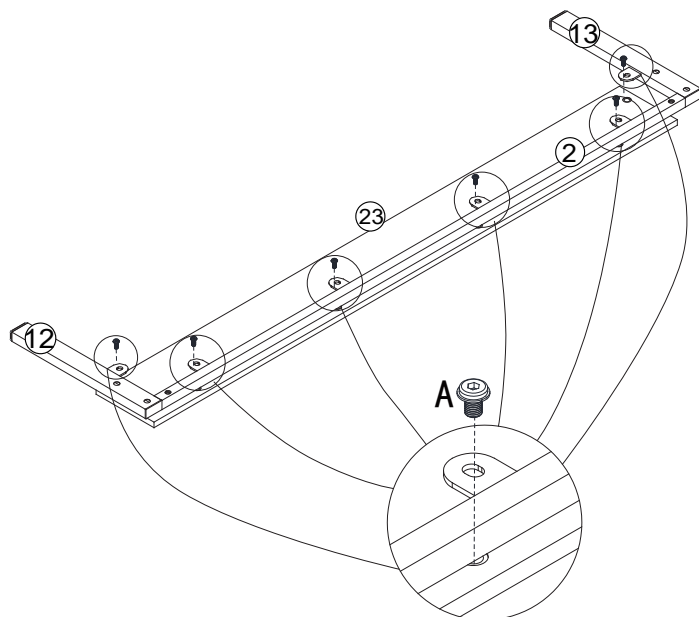


A		6pcs	white zinc
---	---	------	------------

14

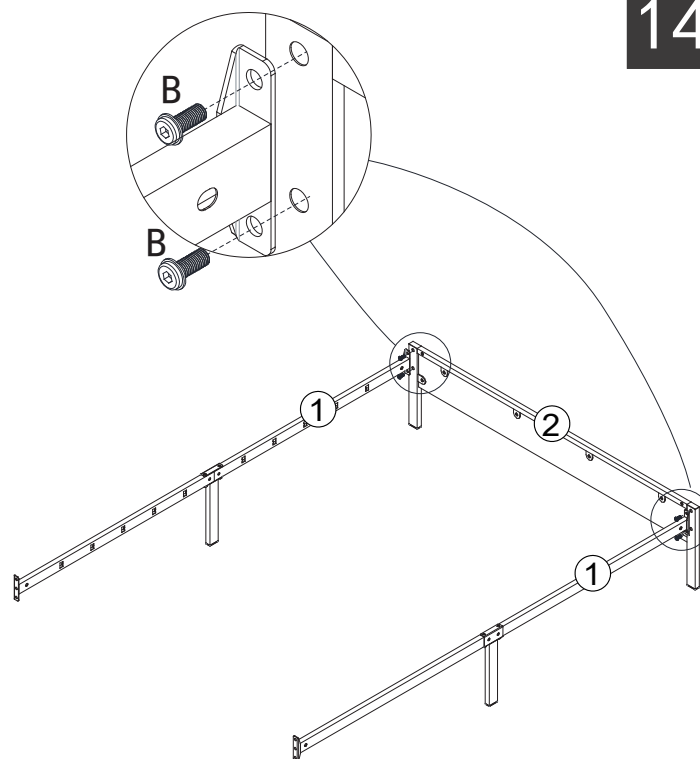

B		4pcs	
---	---	------	--

15

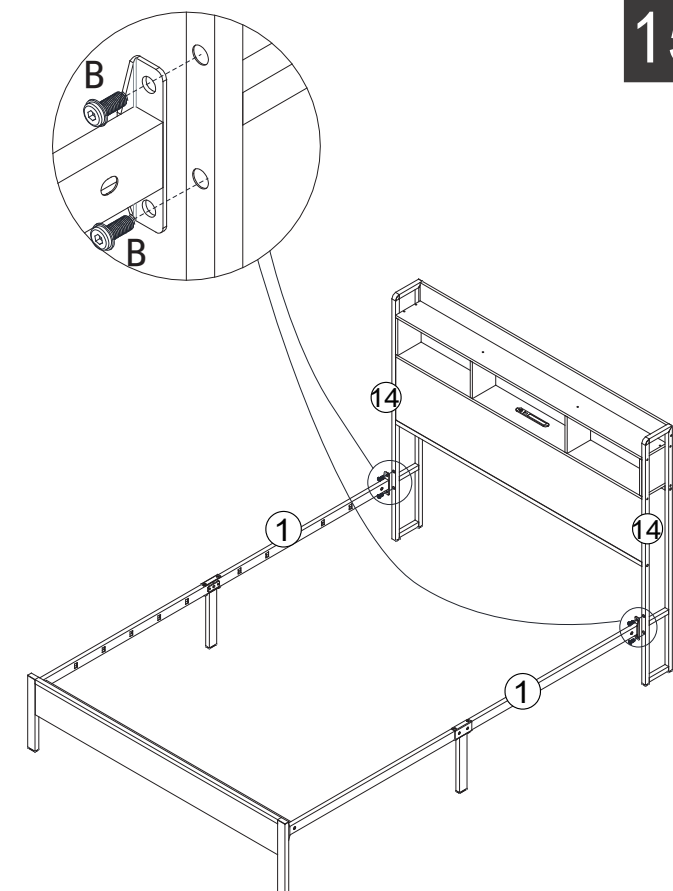

B		4pcs	
---	---	------	--