
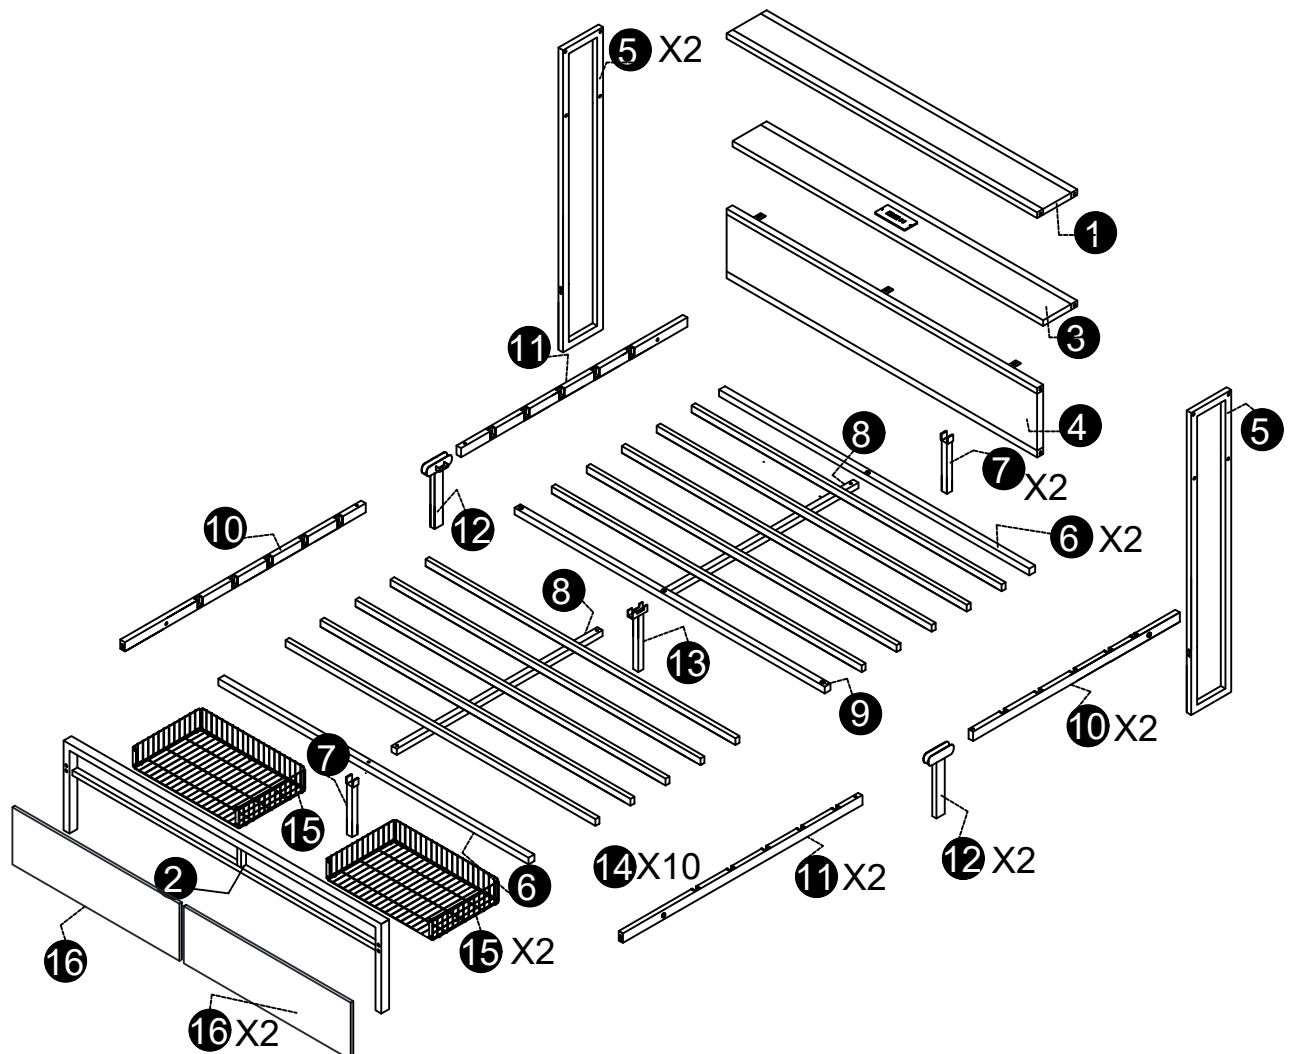
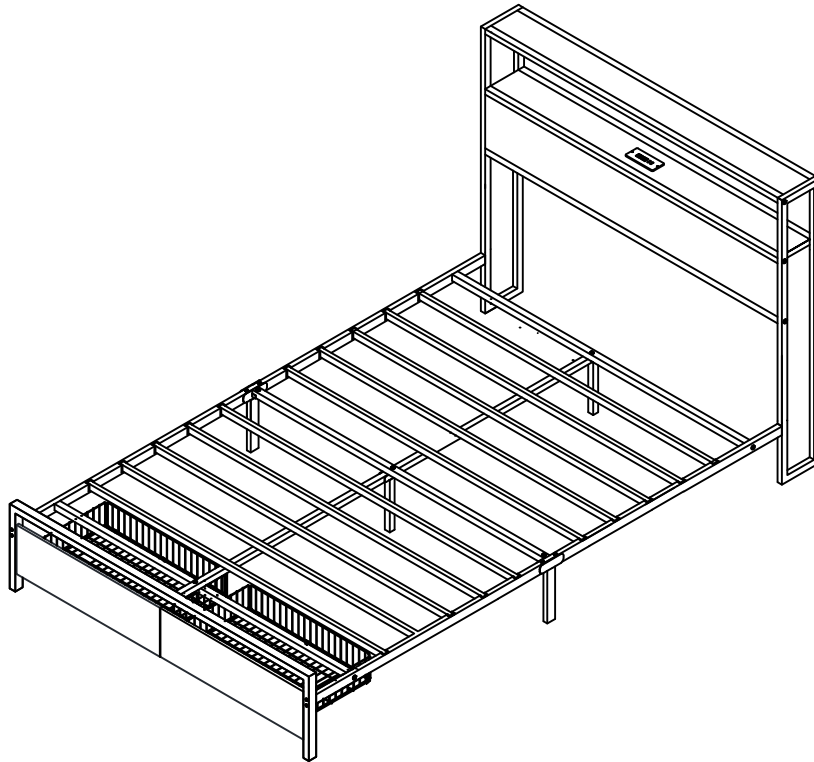

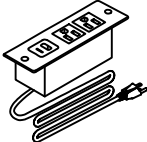





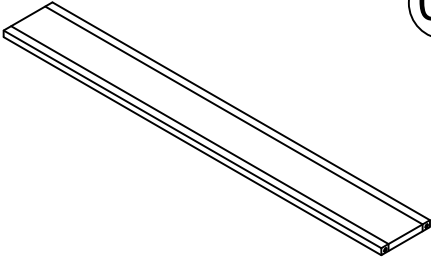
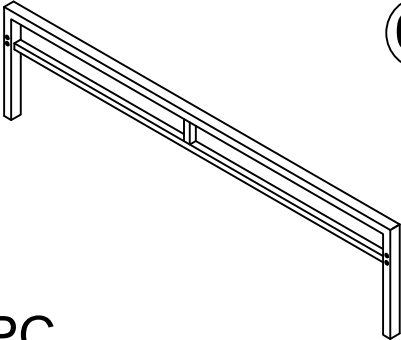
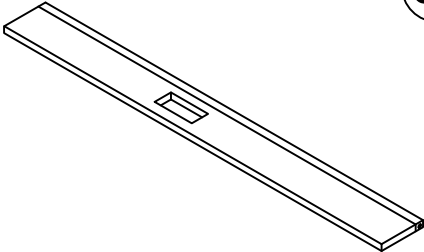
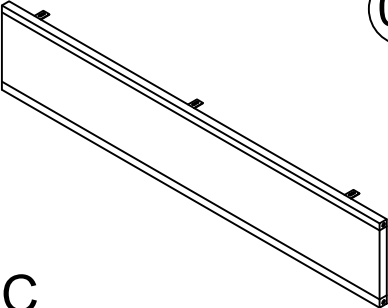
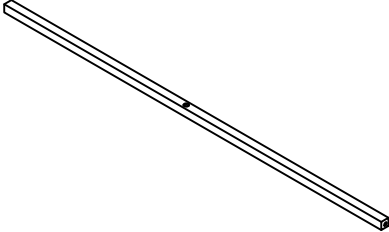
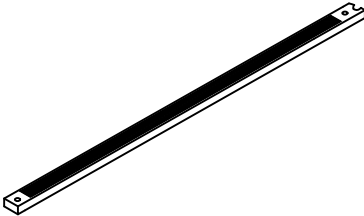



QUEEN&FULL BED ASSEMBLY

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

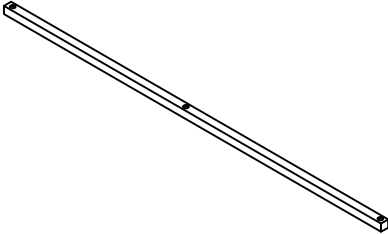


A		M8*40mm	12PCS	H		M4	1PC
B		M8*55mm	7PCS	I			1PC
C		M6*40mm	14PCS	J			2PCS
D		M6*12mm	13PCS	K			4PCS
E		M4*12mm	2PCS	L			8PCS
F		M6*16mm	2PCS	M			4PCS
G		M5	1PC				

	01		02		03
1PC		1PC		1PC	
	04		05		06
1PC		2PCS		2PCS	
	07		08		09
2PCS		2PCS		1PC	

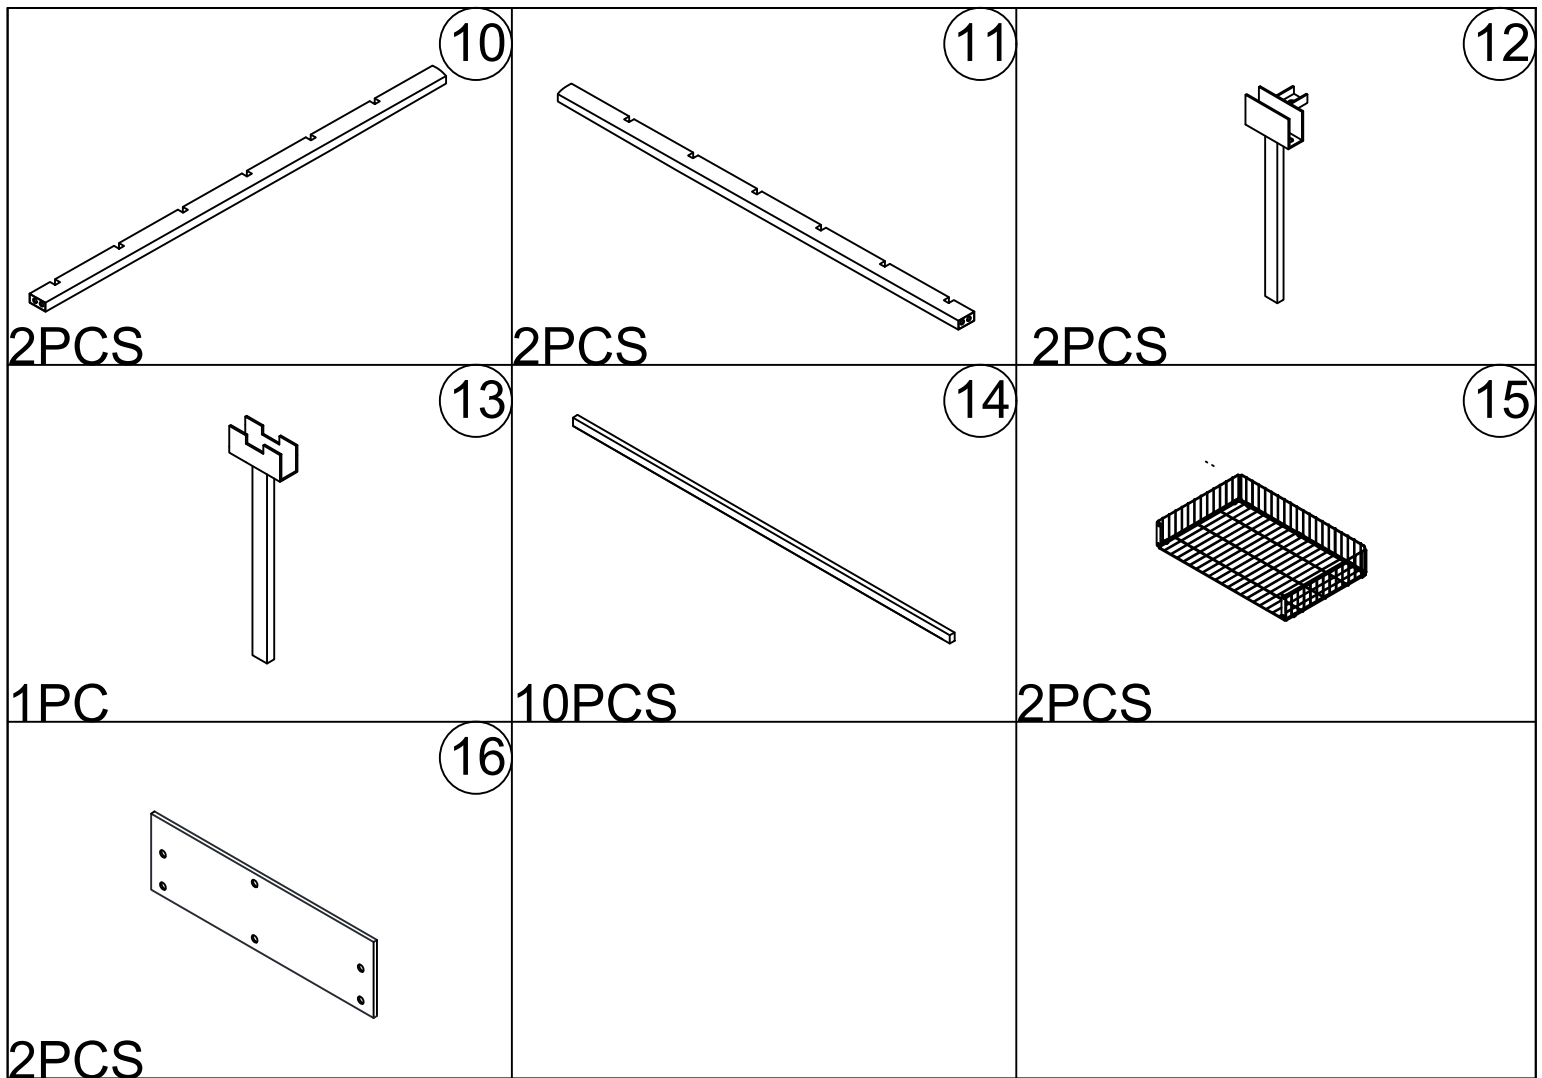

Step1

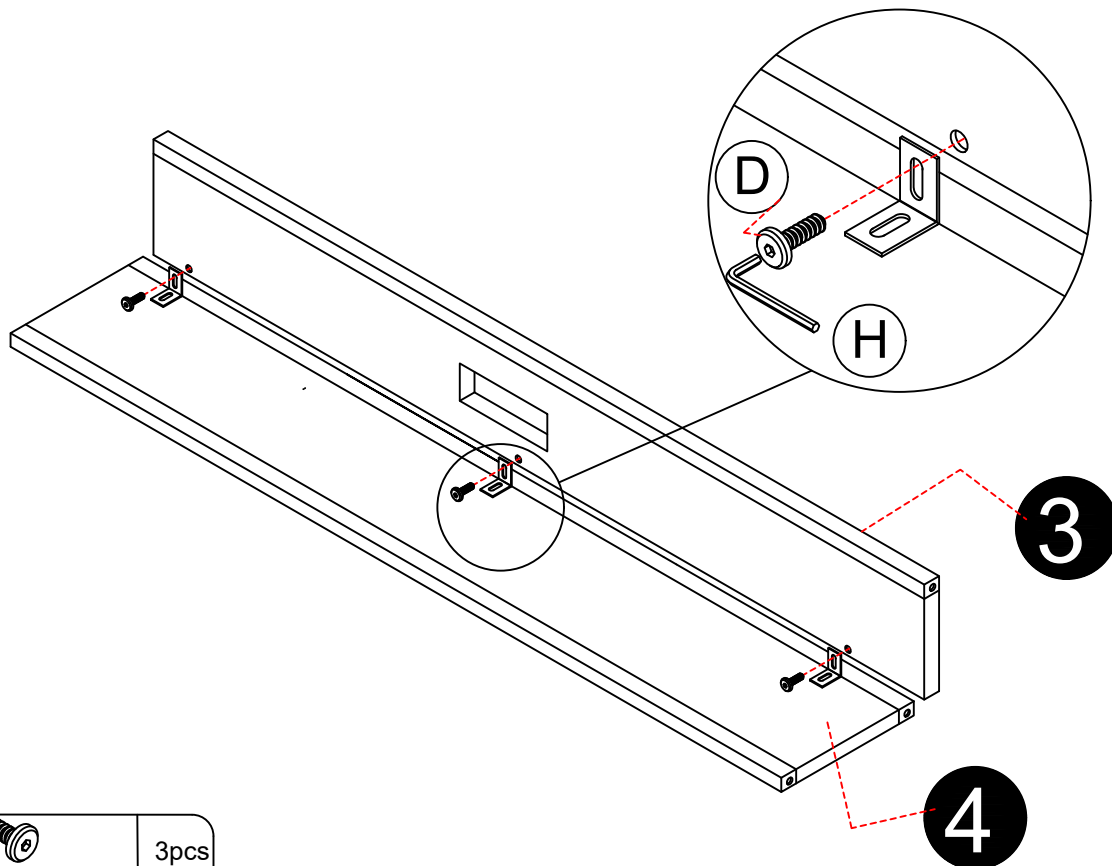


D		3pcs
H		1pc


M6*12MM

M4


Step2

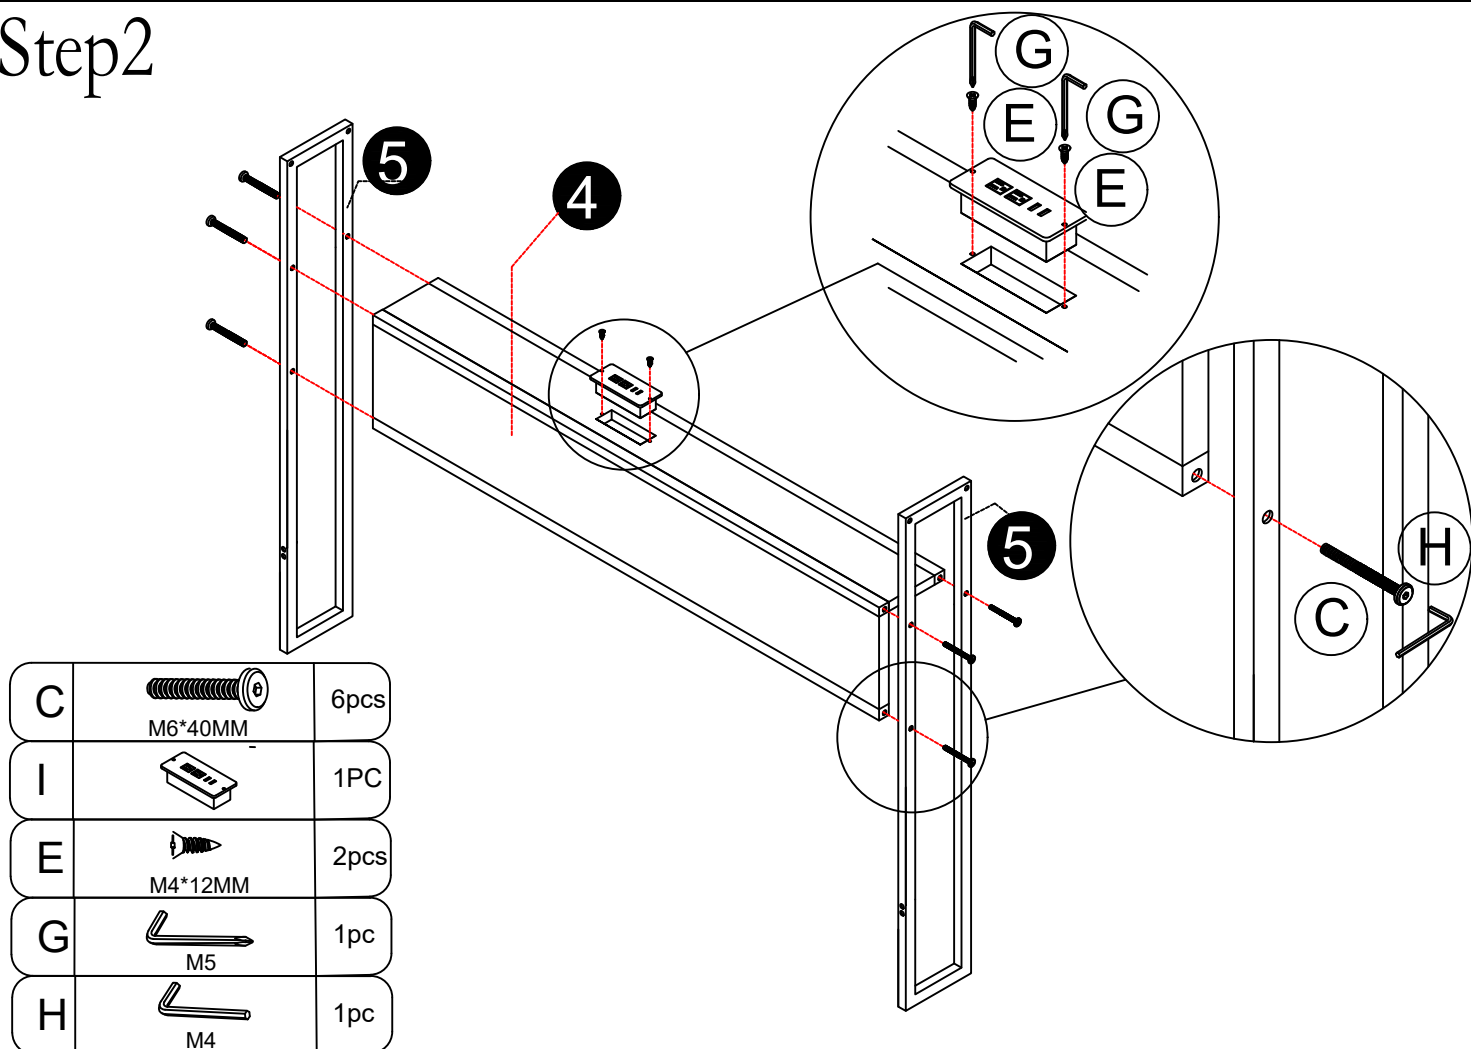

Step3

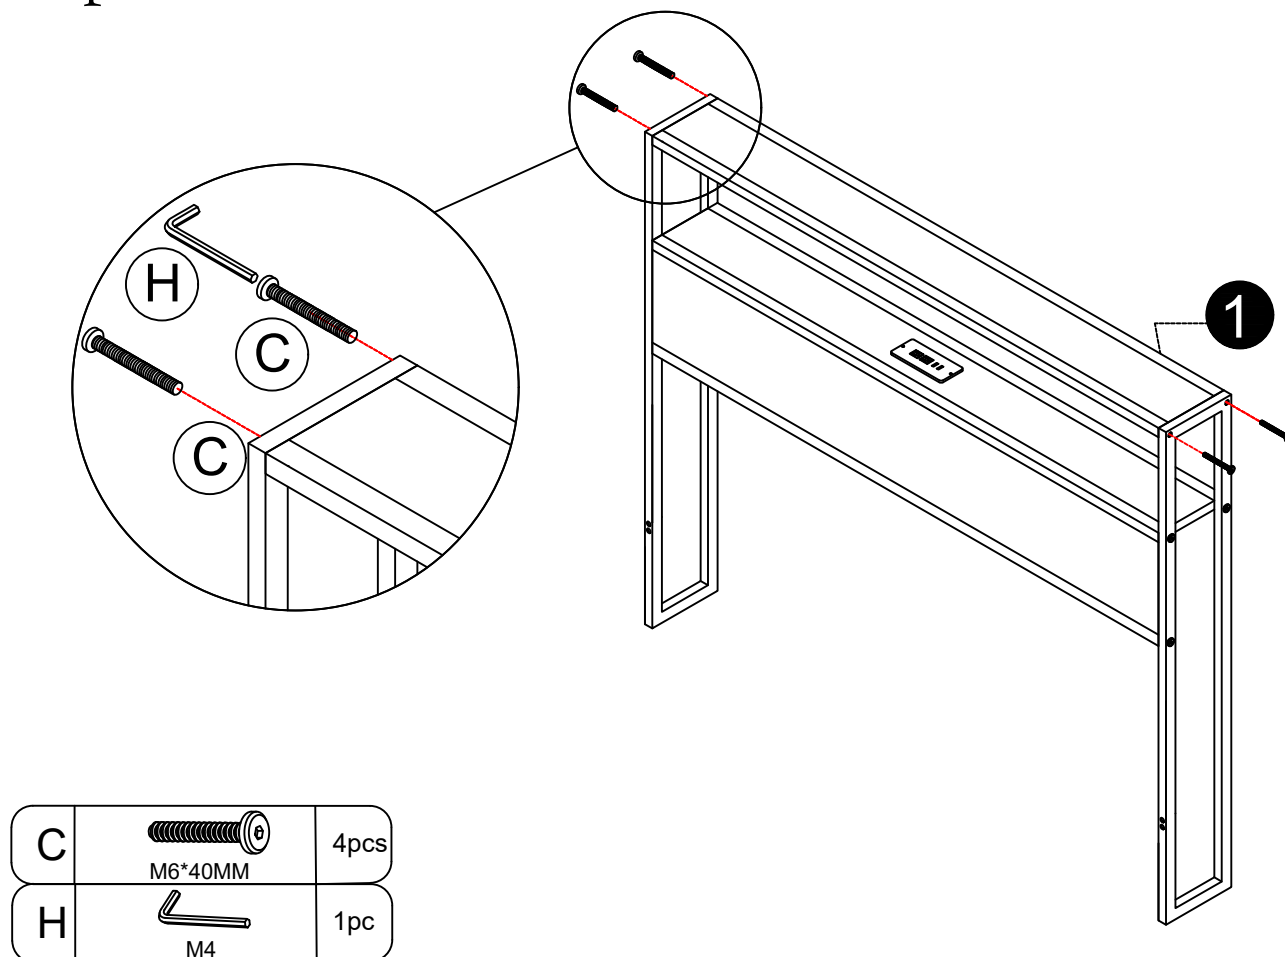


Step4

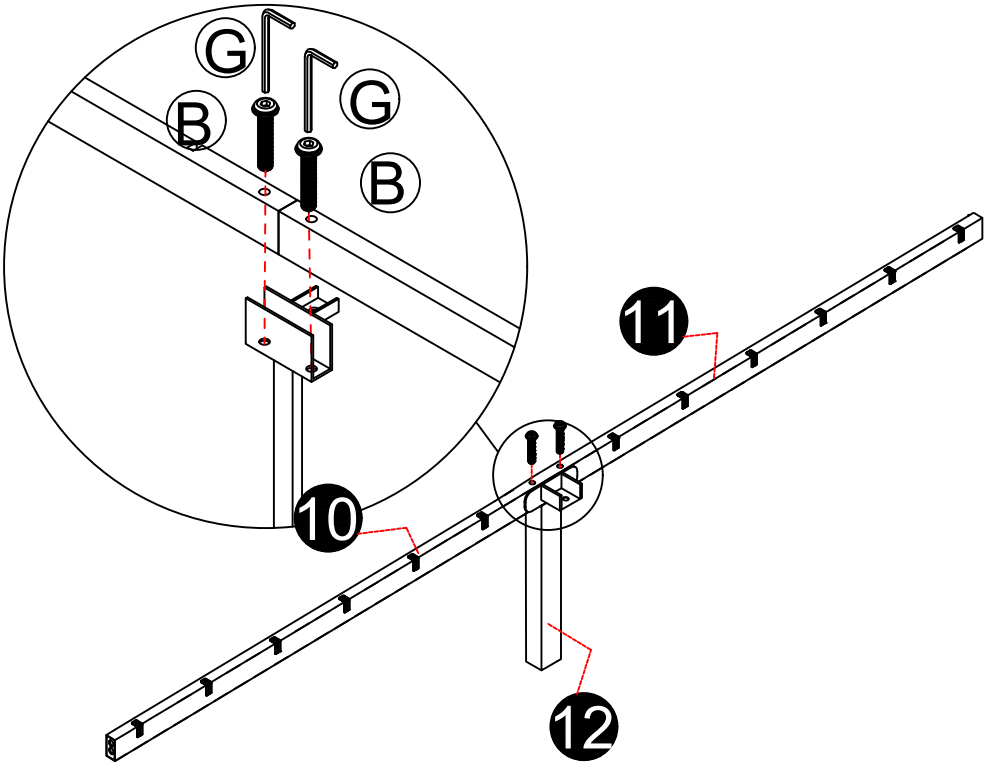


B	 M8*55MM	4pcs
G	 M5	1pc


X 2


Step5

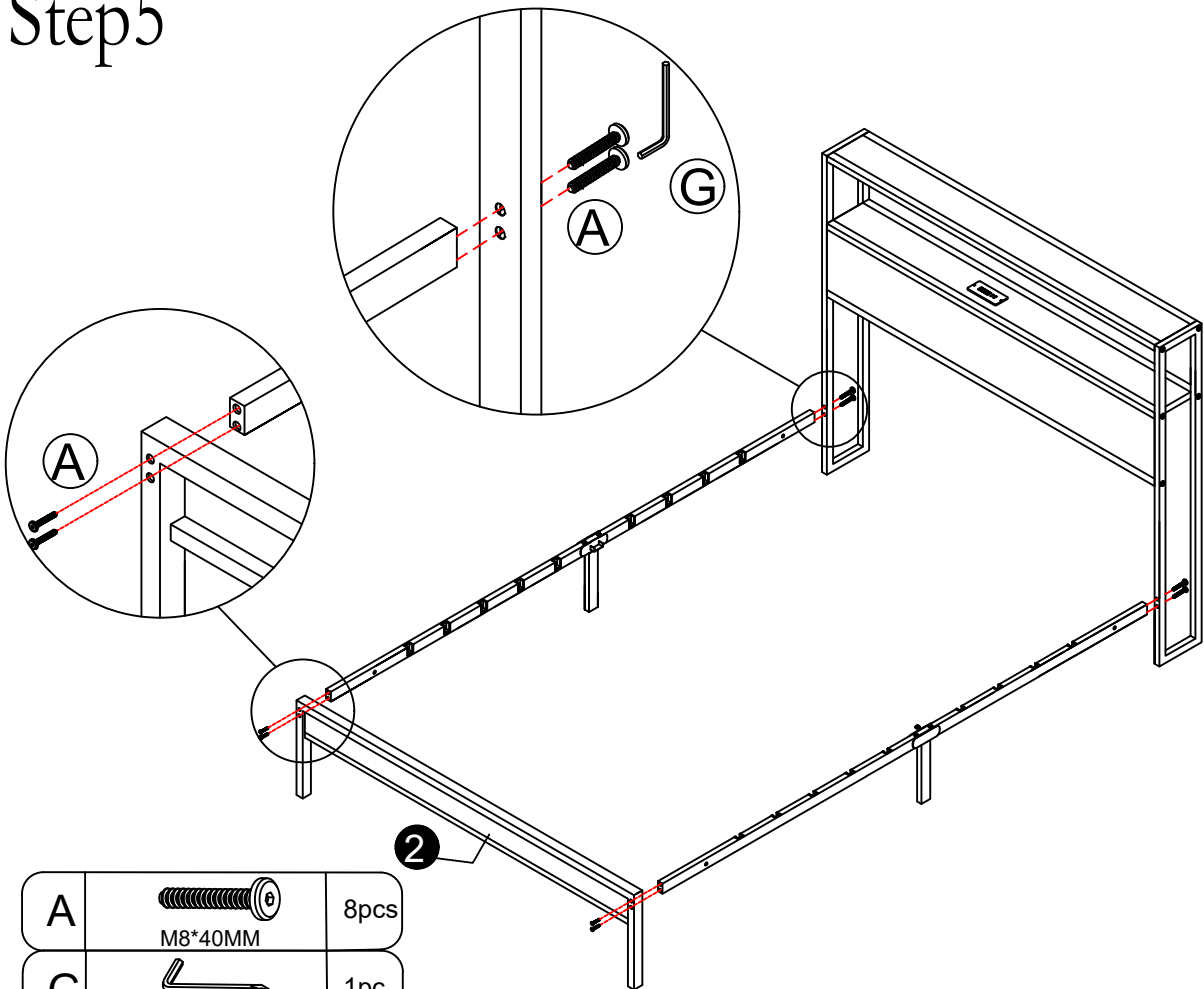


A	 M8*40MM	8pcs
G	 M5	1pc


Step6

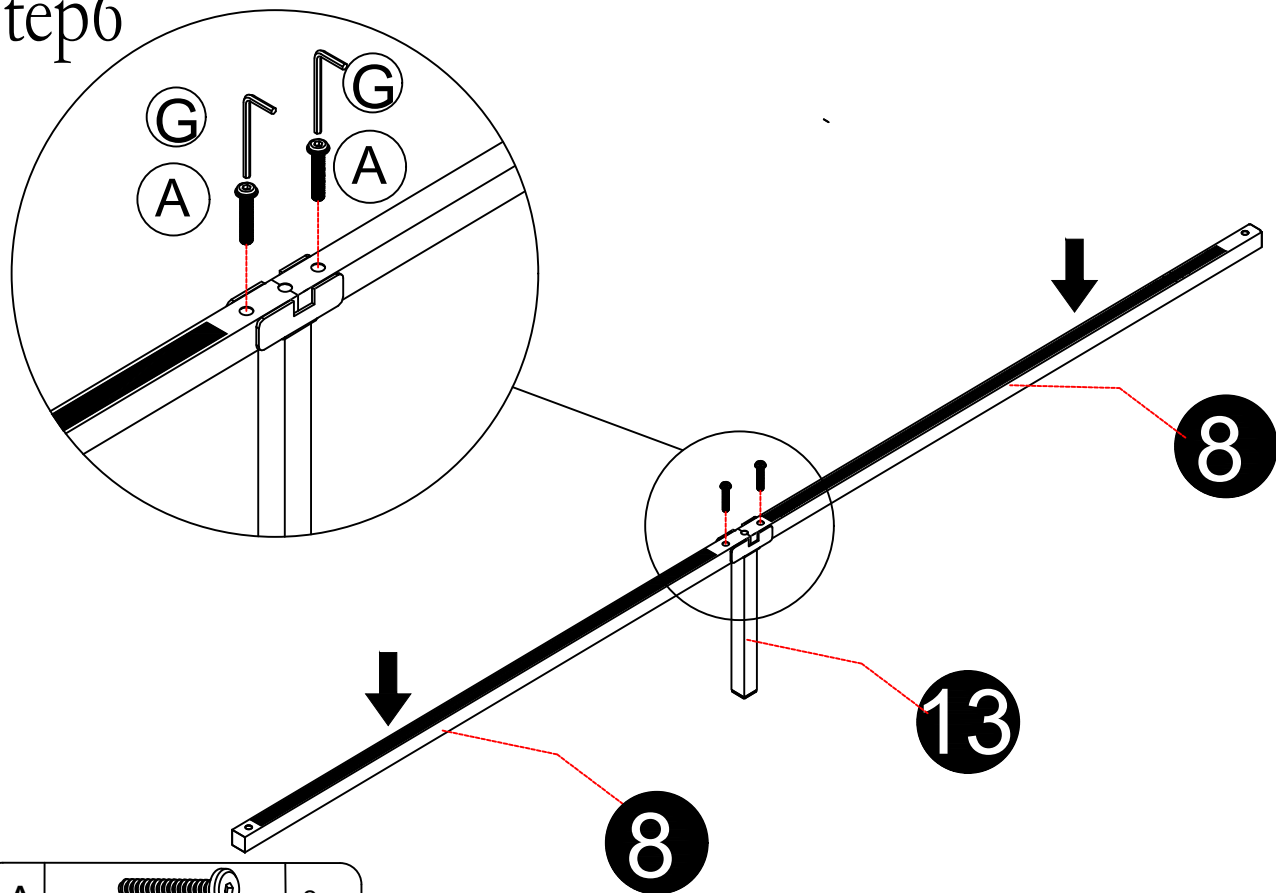


A	 M8*40MM	2pcs
G	 M5	1pc



Step7

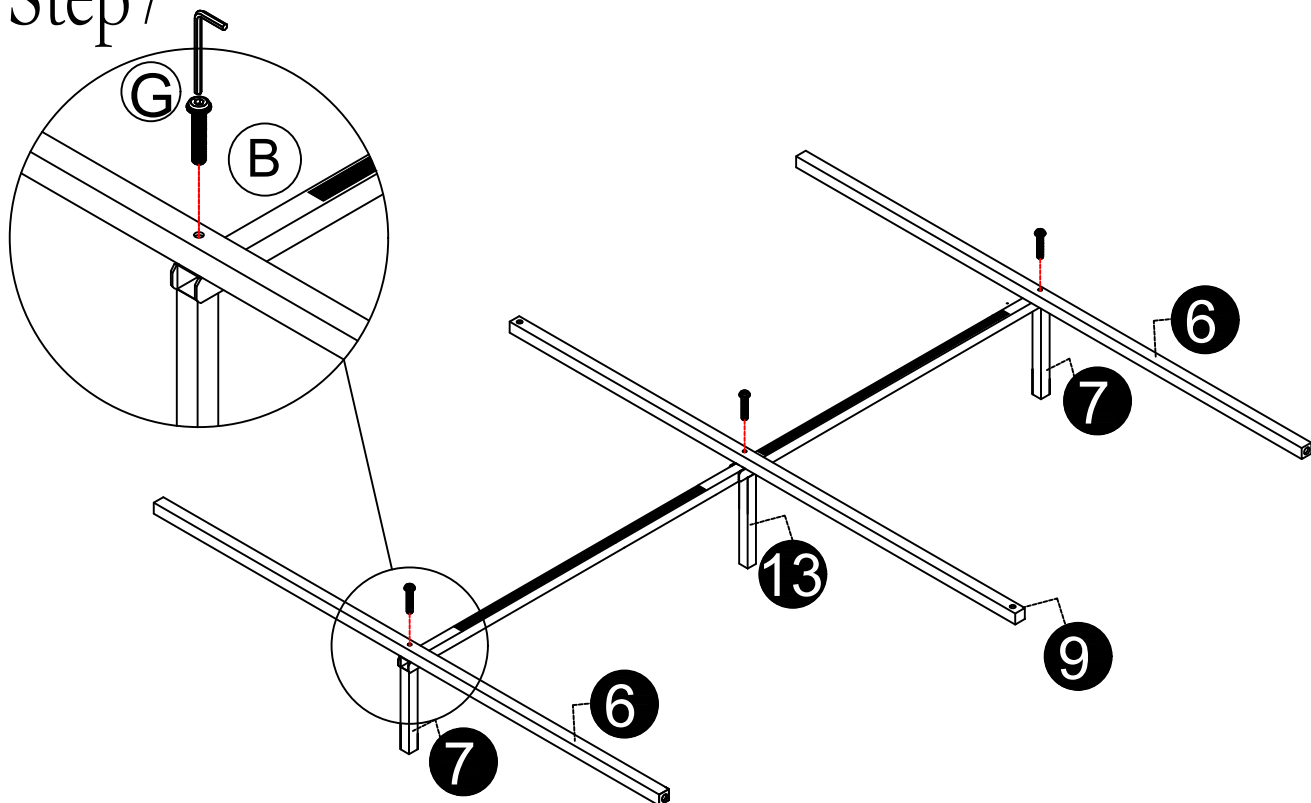

B	 M8*55MM	3pcs
G	 M5	1pc


Step8

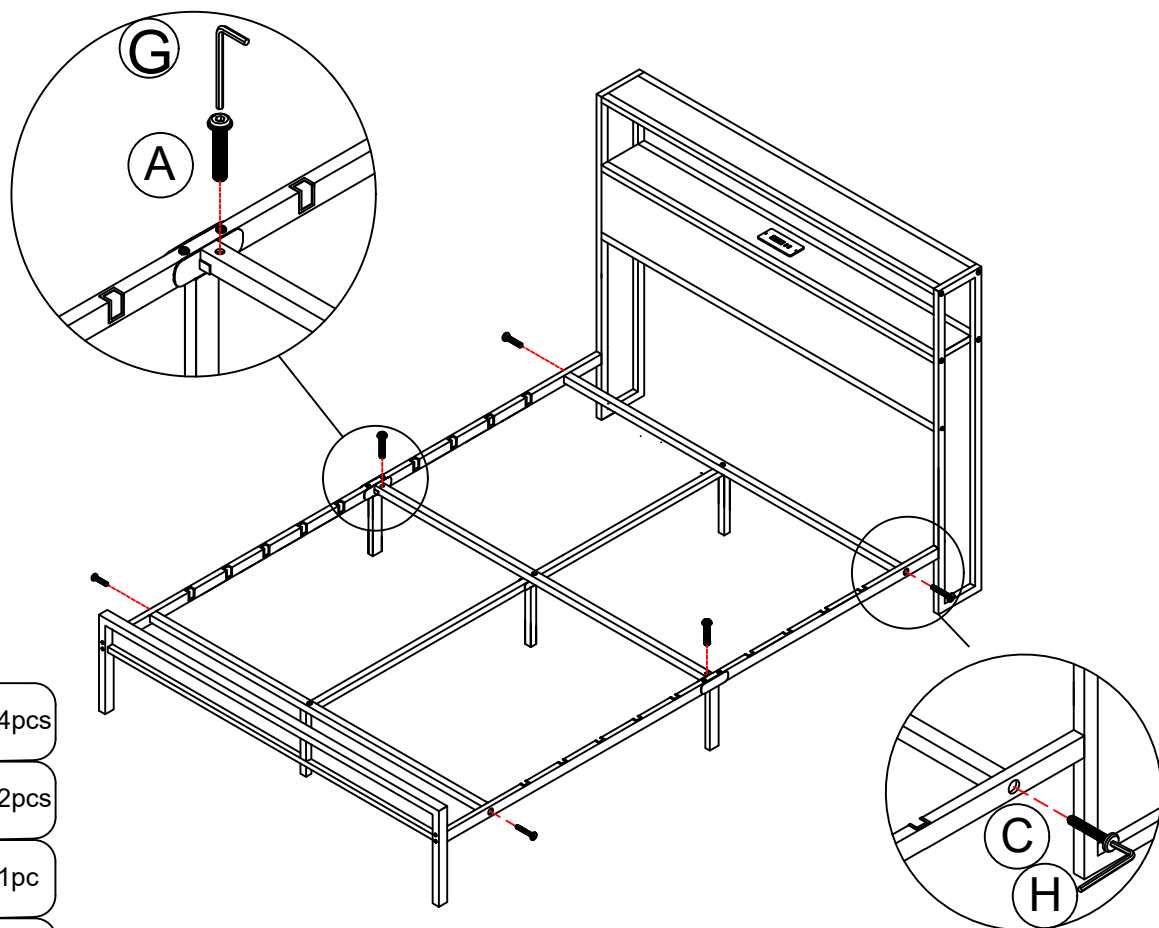


C	 M6*40MM	4pcs
A	 M8*40MM	2pcs
G	 M5	1pc
H	 M4	1pc

Step9

Tear off the protective paper on the back of the four anti-collision corner protectors and stick them on the corners at the head and tail of the bed to prevent collision

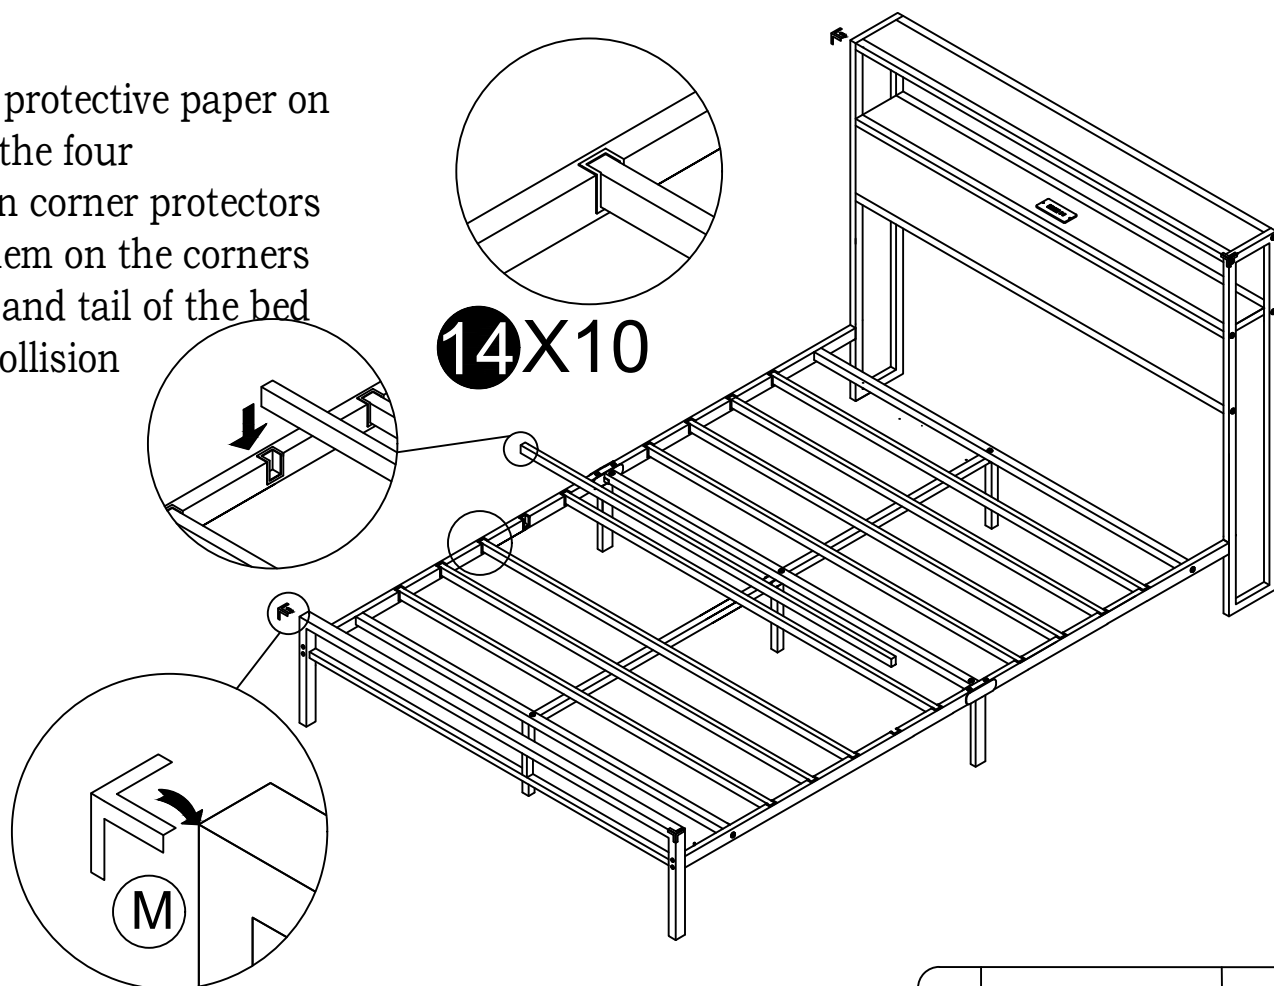


M		4pcs
---	---	------

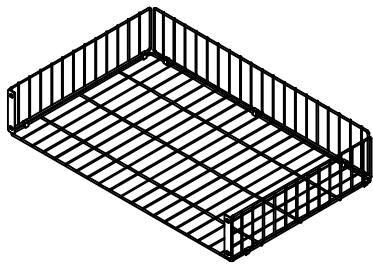

15

2PCS

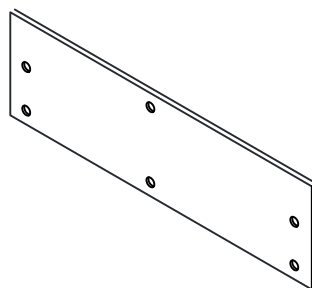

16


2PCS



D

M6*12MM


10PCS



F


M6*16MM

2PCS

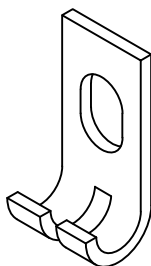


J

2PCS

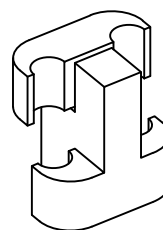


K

4PCS

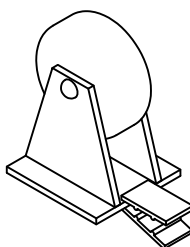

L

8PCS

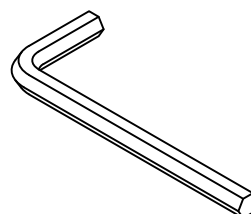


H

M4

1PC

Step10

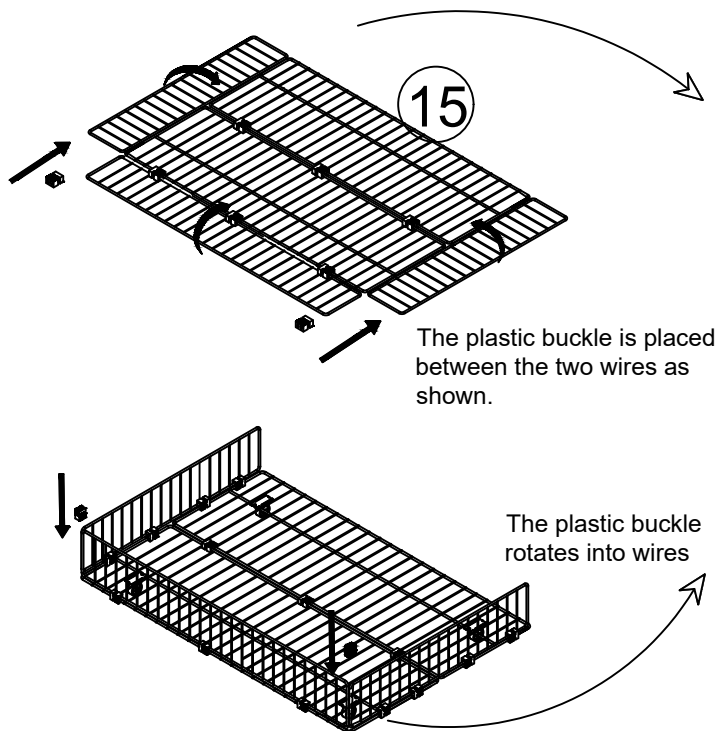


K



4PCS

Step11

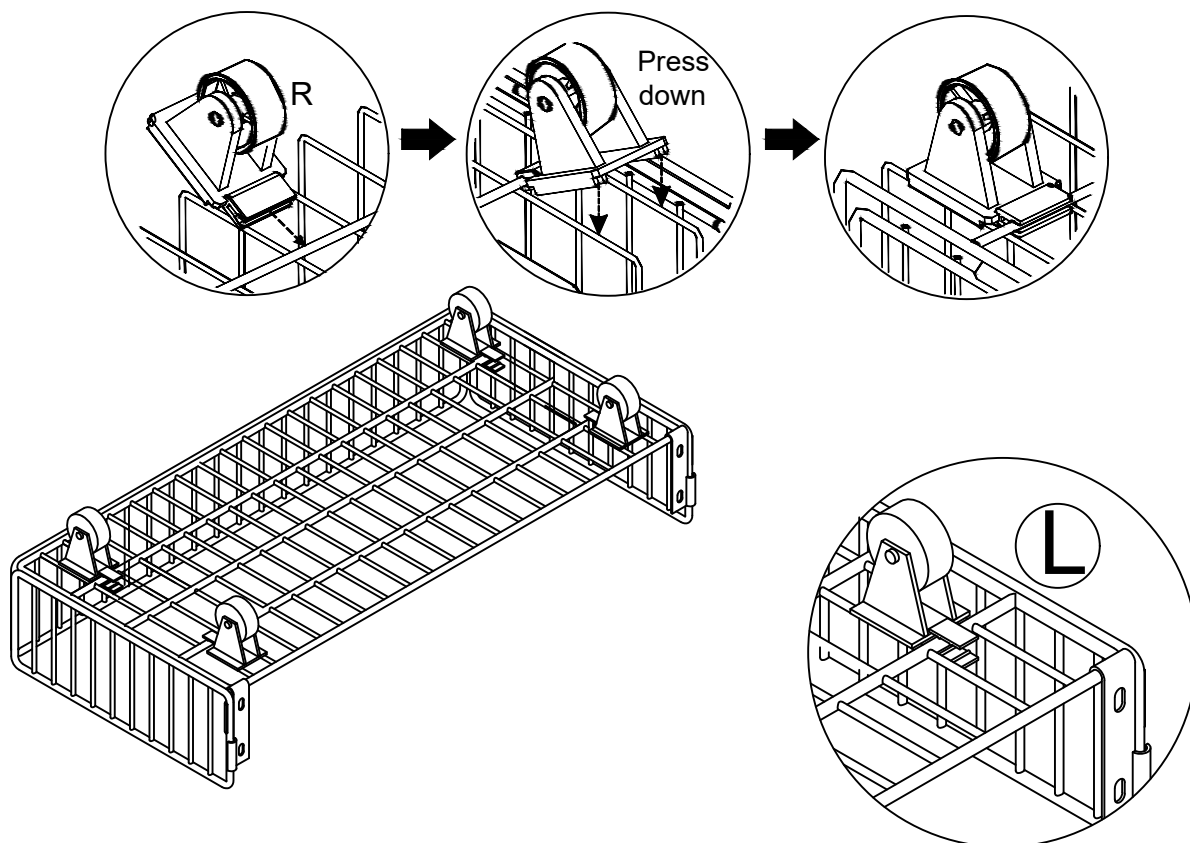


L




8PCS

Step12

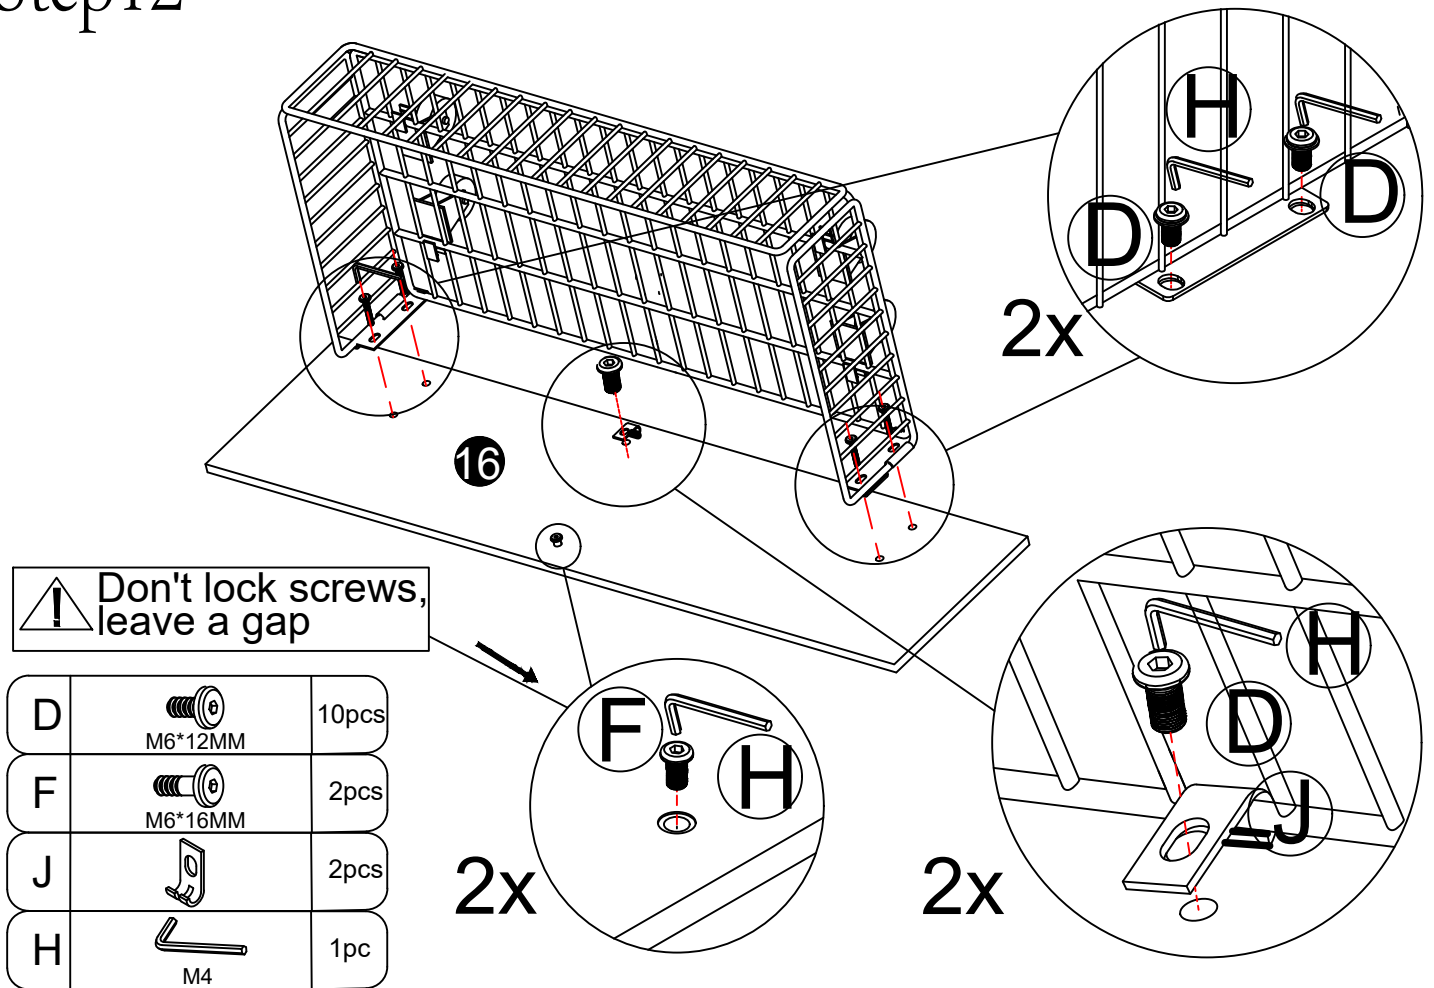

Step13

- 1) Hold the rear screw to the tail hole of the bed.
- 2) Press the drawer to push the screw out of the hole.

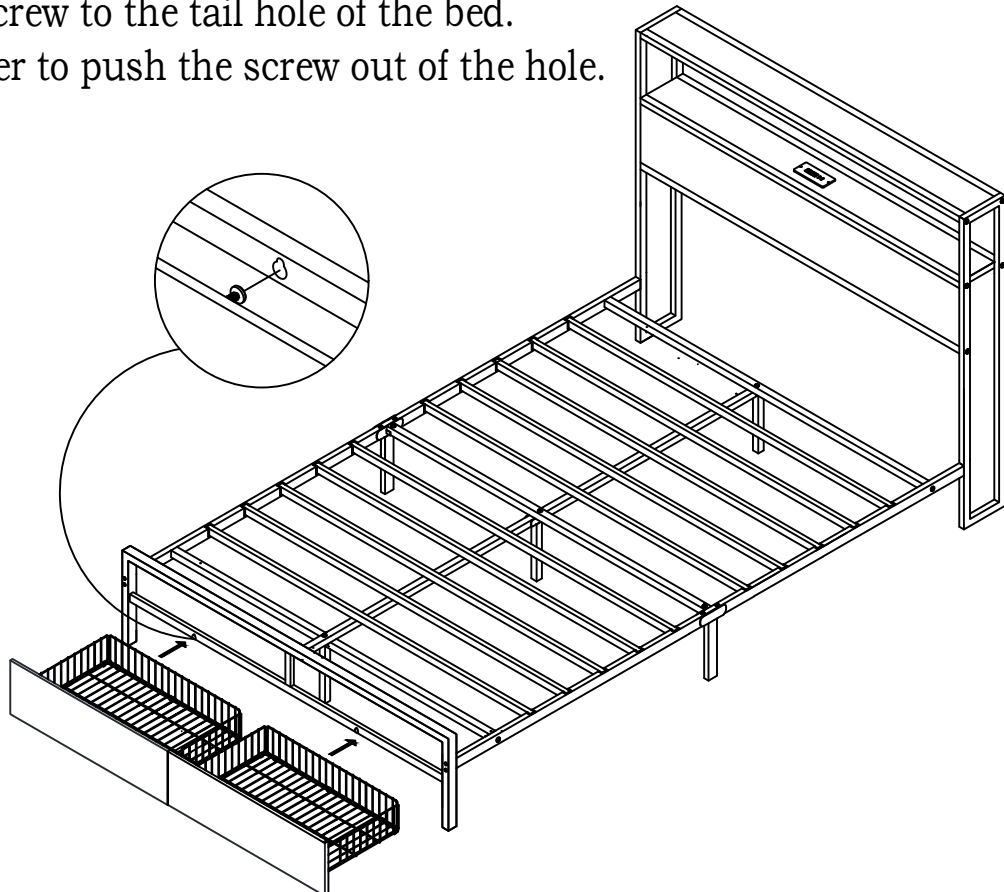

Step14

