

installation instructions

Required accessories

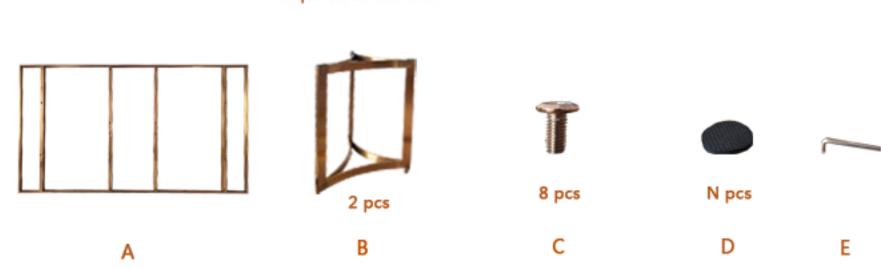

1. Find A and place A flat on the ground with the screw hole facing up. (as shown in the figure below)

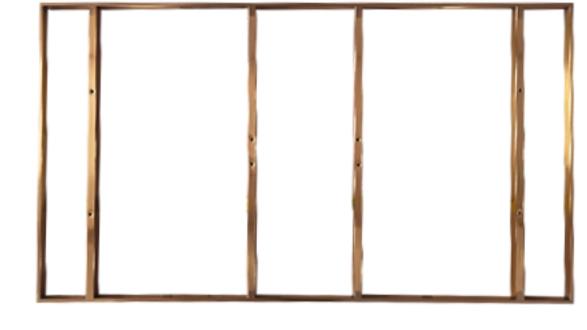

2. Find B and put B on A. the screw holes should be aligned. (as shown in the figure below)



3. Find out C and E and put the screw on the hole. (as shown below)

4. Turn the base 180 degrees, and then find d to stick to the base surface

