
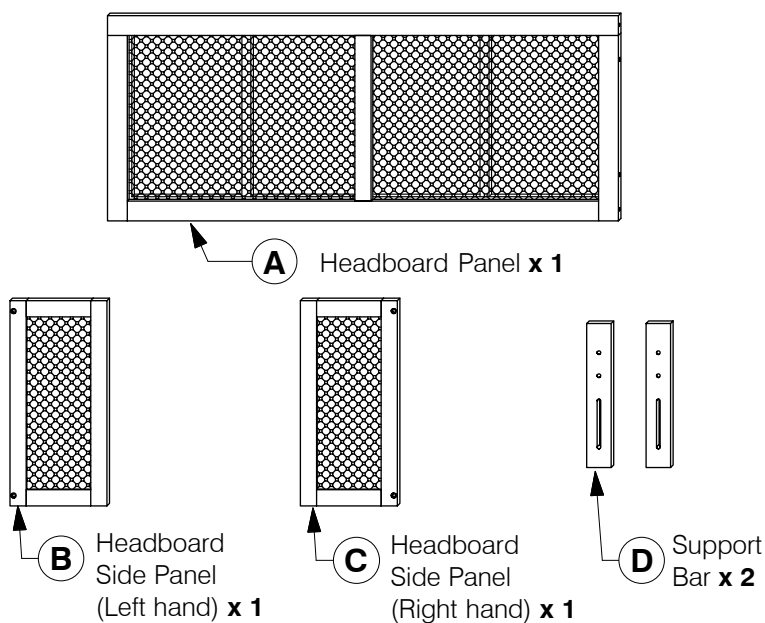


Full Headboard

Assembly Instructions

1 Parts List

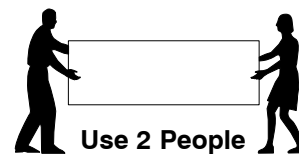

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Hardware List




1 M6 x 60mm JCB x 4



2 M6 x 35mm JCB x 4



3 Barrel Nut x 4



4 Wood Dowel (M10 x 40mm) x 4



5 Spring Washer x 4




6 Flat Washer x 4



7 M4 Allen Key x 1

3 Fit the Headboard Side Panel (B & C) to the Headboard Panel (A).

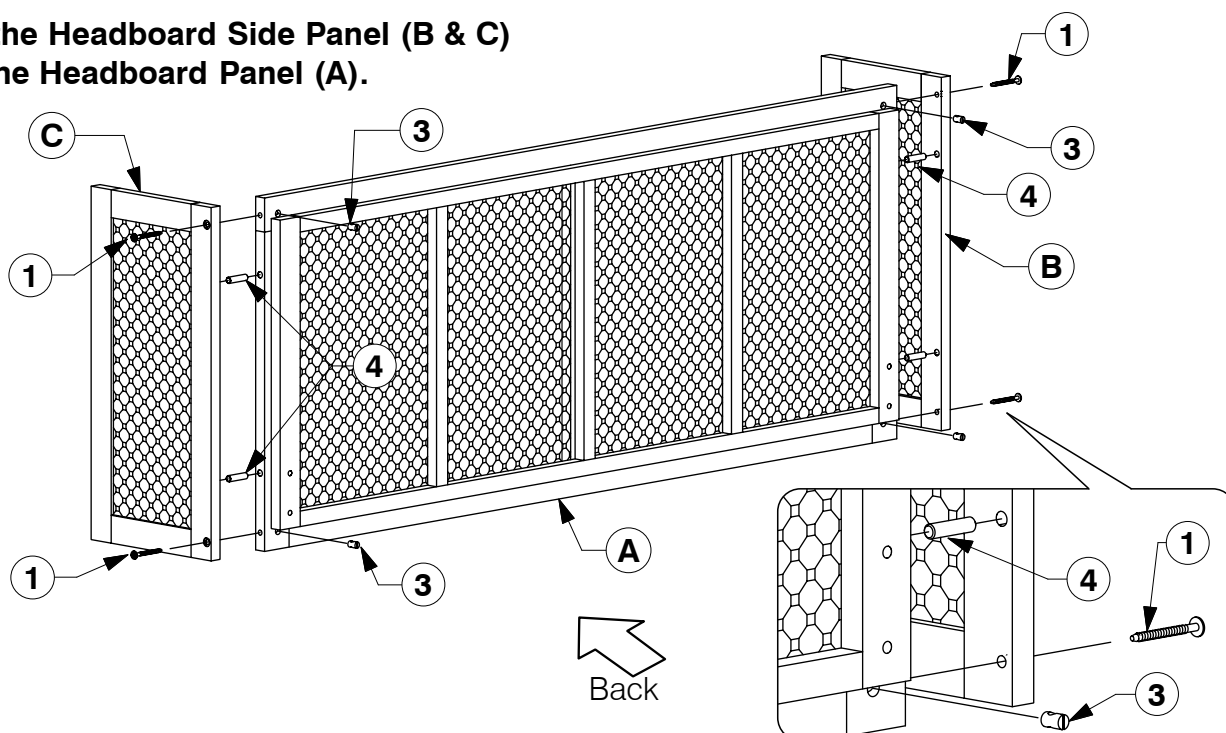


Full / Queen Headboard

Assembly Instructions

4 Assemble the Support Bars (D) to the Headboard Panel.

✓ Footboard, Rails & Slats are packed in separate Boxes with Bolts.

Note: Bolts & Washers from Footboard, Rails & Slats Box.

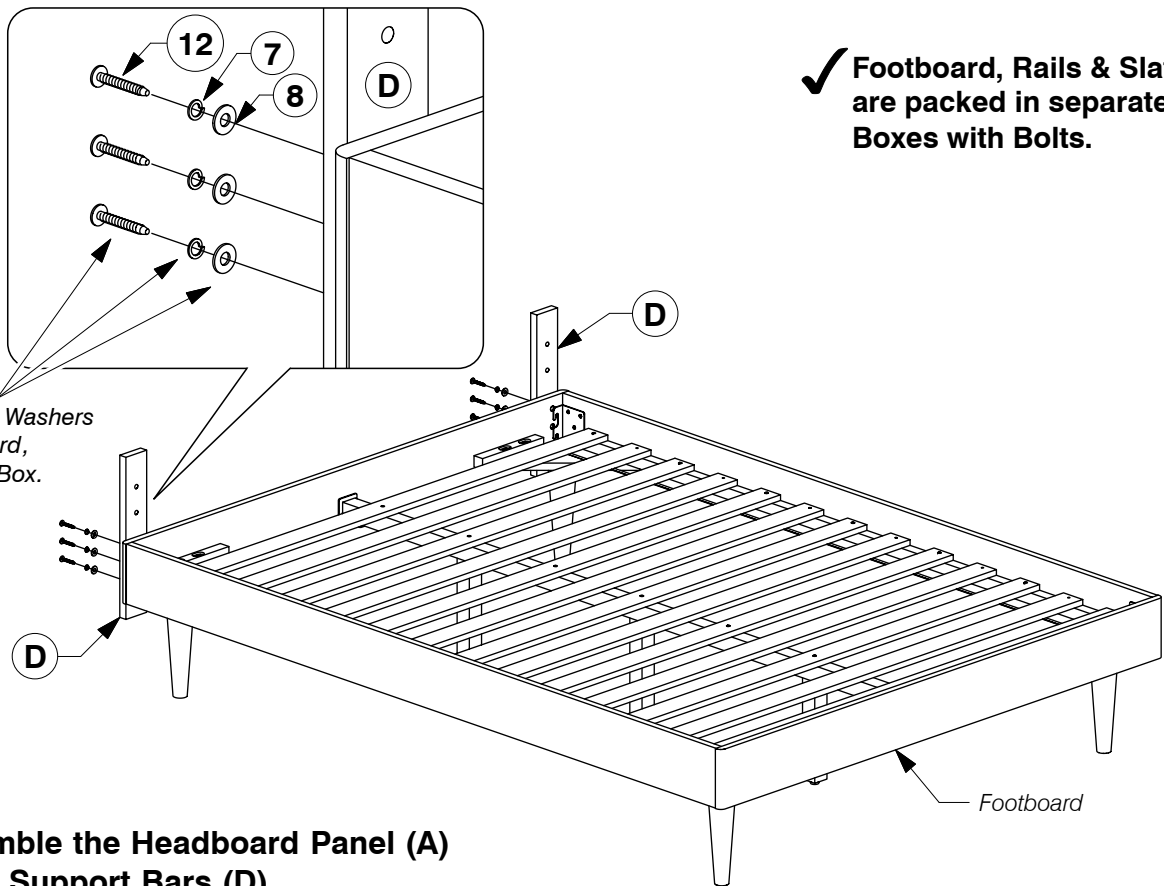

5 Assemble the Headboard Panel (A) to the Support Bars (D).

