
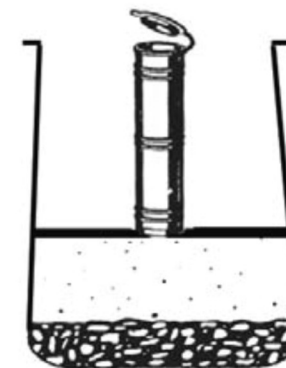


Assemble the Pole

Install in Ground




HH42-0

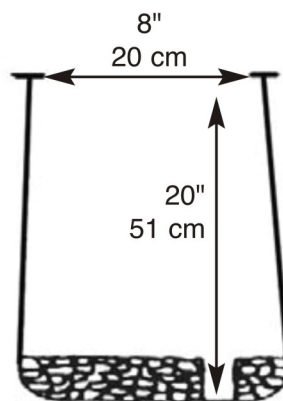

1. Plastic ground sleeve is designed to hold pole vertically yet release easily. Won't rust or seize. Attached cap protects against debris when not in use.

2. Dig hole 8" to 12" in diameter and 20" deep. Taper hole larger at bottom. Fill bottom of hole with small rocks approximately 3" deep.


3. Pour about 6" of concrete into hole (or until it reaches the bottom of the ground sleeve).

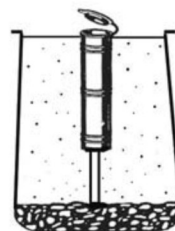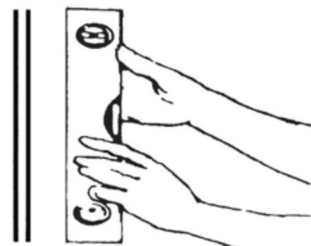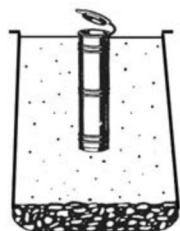

4. Position ground sleeve as shown and pour concrete around the outside until flush with the top of the ground sleeve (or 1-1/2" below top if in a lawn. This will allow filling top layer with soil and planting.

5. Insert pole into ground sleeve and use a level to align the pole vertically. Carefully remove pole, without moving the ground sleeve.

6. Immediately run a small tube or stick down the center of the sleeve and stick down the center of the sleeve through the concrete until it reaches the crushed rock base. Remove tube or stick. This will allow any water to drain.

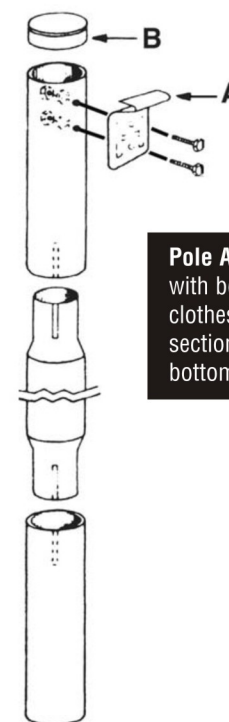

Item (A) is included with your retractable clothesline, it is not included in this package.

Pole Assembly: Attach and secure bracket (A) to pole with bolts as shown. (Bracket included with retractable clothesline dryer.) Snap on Plastic cap (B). Fit pole sections together by aligning interior seams of top and bottom sections in the ends of the center section.

210 mm