

Assembly Instructions for Kids Comfo Dining Chair

(KCDC1525)



PACKAGE CONTENTS


1 back Assembly
1 seat Assembly
2 arm Assemblies
1 Hardware Package

HARDWARE PACKAGE

4 • 1/4 " x 2" Socket Wafer Bolts
4 • 1/4" Flange Nuts
2 • 1 1/2" Buglehead Screws
2 • 2 1/2" Socket Wafer Lags
1 • Allen Wrench
1 • 3x5 Bag
1 • Instructions

TOOLS NEEDED

7/16" Wrench
Hammer
Allen Wrench (included)



Use to measure bolts

Step #1

Attach the seat to the back using x screws.



Step #1

Step #2


Attach the arm assembly to the Seat and Back using 2- ¼" x 3½" and 1- ¼" x 2½" Allen Head Bolts and Flange Nuts.



Step #2

Step #3

Repeat Step #2.

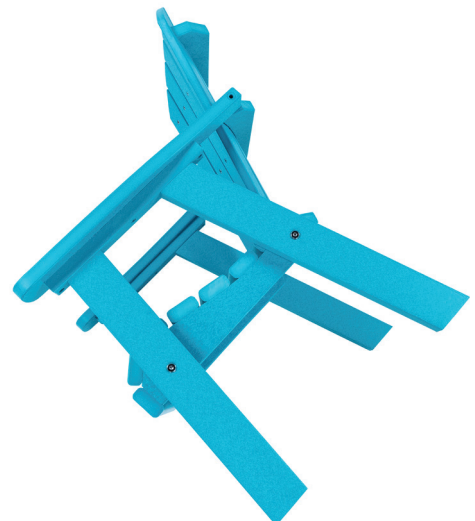

Step #3