



Headboard & Footboard


Full
Queen

Page 1 of 2

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.

CODE	QTY	HARDWARE
1	4	Long Allen Bolts 
2	4	Short Allen Bolts 
3	8	Spring Washers 
4	8	Flat Washers 
5	4	Hex Nuts 
6	1	Allen Wrench 

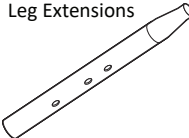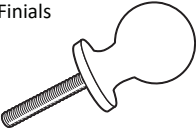CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Headboard Panel 	B	1	Footboard Panel 
C	2	Leg Extensions 	D	4	Finials 

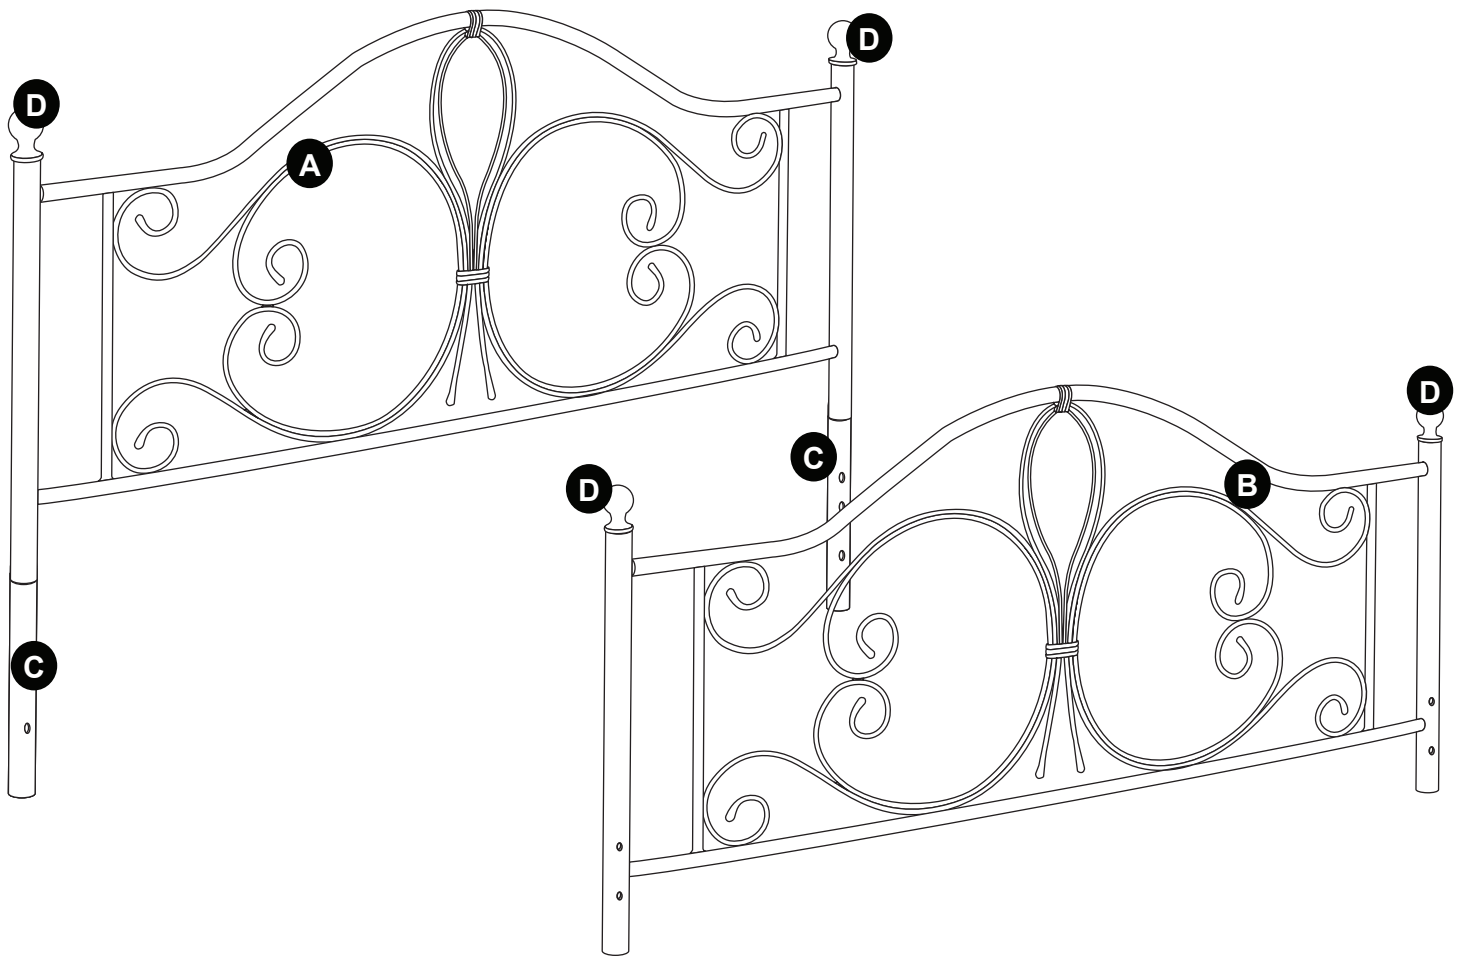

WARNING


- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.

Headboard & Footboard

Full
Queen

Page 2 of 2

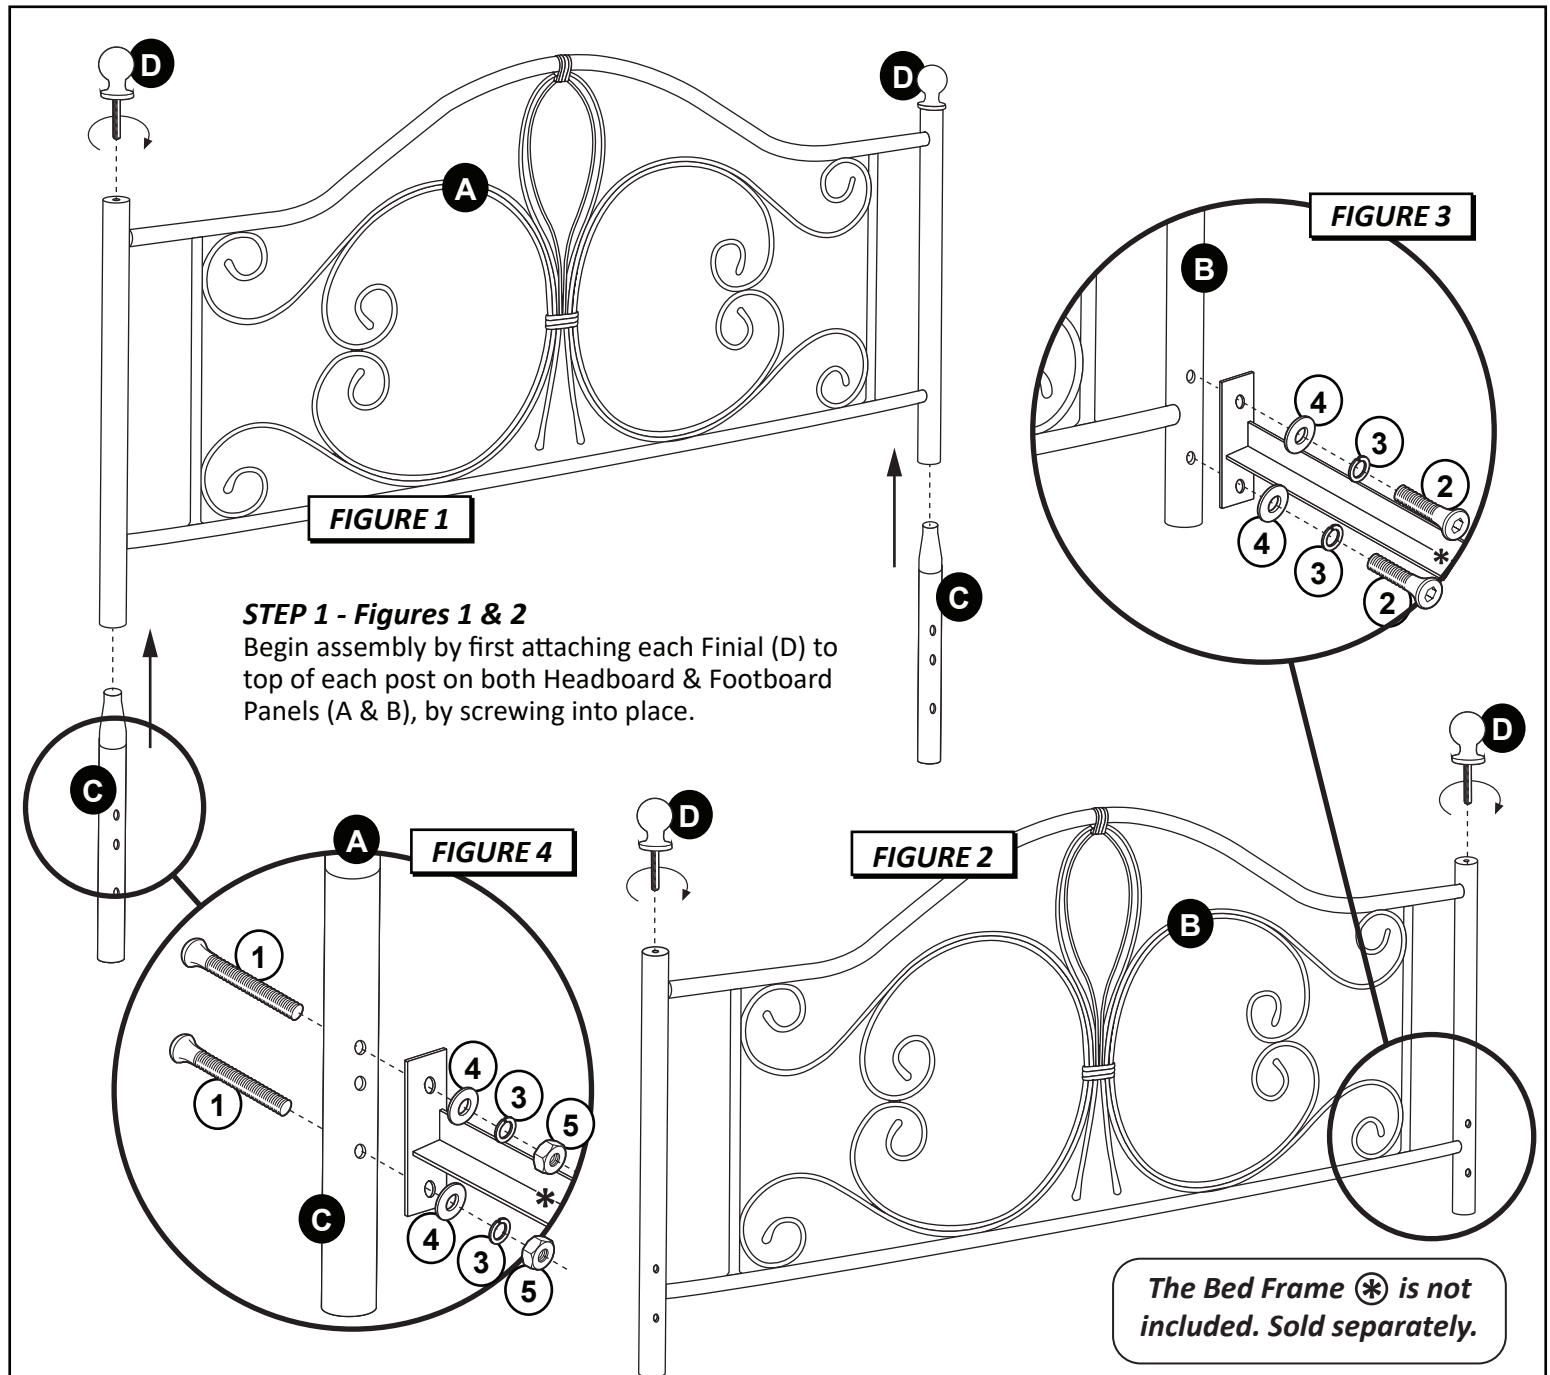

STEP 1 - Figures 1 & 2

Begin assembly by first attaching each Finial (D) to top of each post on both Headboard & Footboard Panels (A & B), by screwing into place.

STEP 2 - Figure 1

Insert both Leg Extensions (C) into bottom of Headboard Panel (A).

STEP 3 - Figure 3

Attach Bed Frame (*Not Included) to Footboard Panel (B) using 2 Short Allen Bolts (2), 2 Spring Washers (3) & 2 Flat Washers (4) per post. Tighten all bolts using Allen Wrench (6) provided.

STEP 4 - Figure 4

Attach Bed Frame (*Not Included) to each Leg Extension (C) on Headboard Panel (A) using 2 Long Allen Bolts (1) from the back side, 2 Flat Washers (4), 2 Spring Washers (3) & 2 Hex Nuts (5) per post & extension. Tighten all bolts using Allen Wrench (6) provided. The assembly is now complete.