


HOW TO MEASURE -1" MINI BLINDS

INSIDE MOUNT

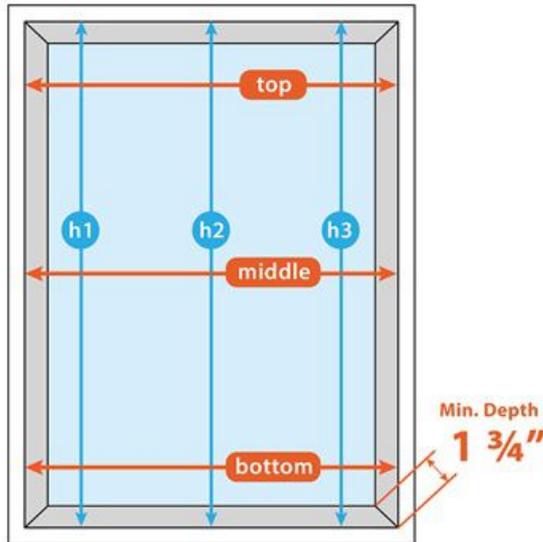

- Width:
Step 1: Measure the width at the top, middle, and bottom inside of your window opening. Use the **smallest** measurement.
Step 2: **Subtract** $\frac{1}{4}$ inch from that number.
Step 3: Round **down to the nearest size** when ordering.


If your window measures

- Width $24\frac{1}{2}$ ", subtract $\frac{1}{4}$ " → $24\frac{1}{4}$ " Choose size **24"**
- Width 24", subtract $\frac{1}{4}$ " → $23\frac{3}{4}$ " Choose size **23"**

Reminder: After subtracting $\frac{1}{4}$ ", just pick the closest size that's not larger than your adjusted width.

- Height: **Largest** of inside framed height (h1, h2, h3). Choose the height that matches or exceeds the window length.
- Depth: $1\frac{3}{4}$ " required. Ensure no obstacles.

OUTSIDE MOUNT

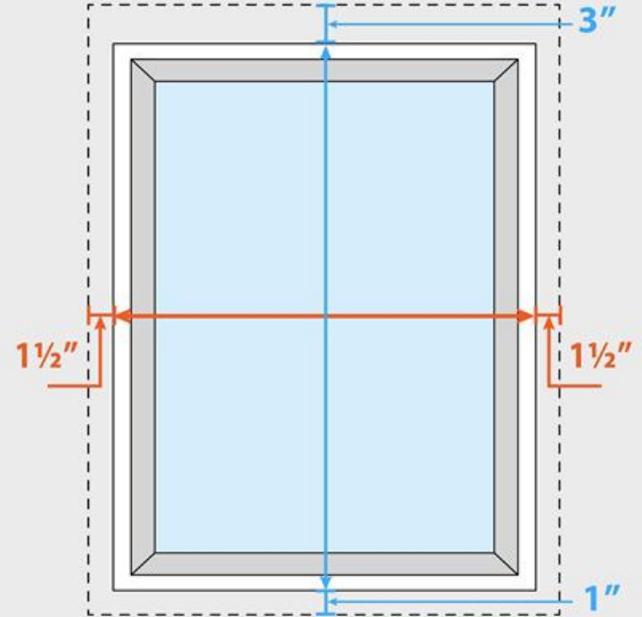

- Width: Include window trim and **add** $1\frac{1}{2}$ " on each side. Round up the nearest width when ordering.
- Height: Include window trim and **add** 3 " on top, 1 " on the bottom. Choose the height that matches or exceeds the window length.
- Minimum 3 " flat surface above the window required.

IMPORTANT

We ship exact width measurement.

If you order 20" wide, you'll receive an exact 20" wide.