
Outdoor Bench

Installation Manual

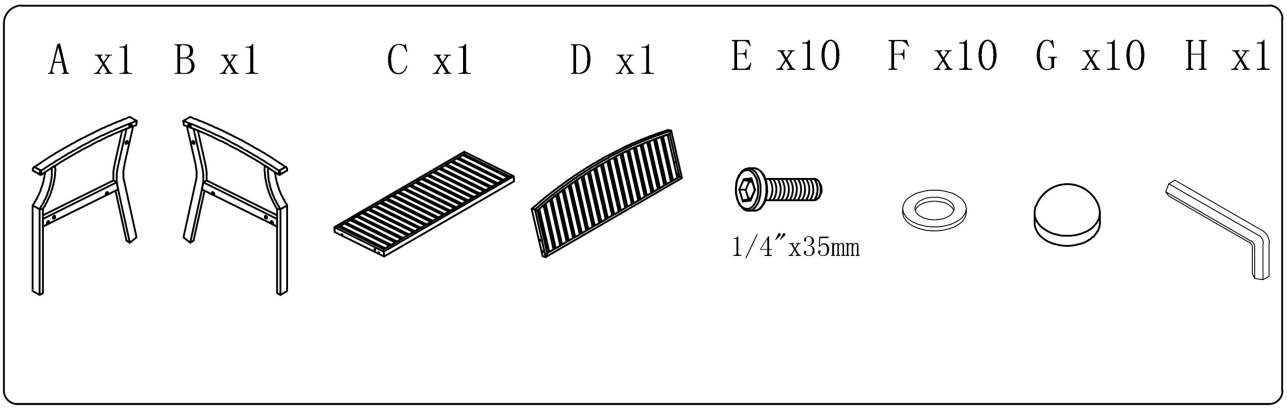

Part List:

Right Armrest A x 1 (the armrest on the right when you sit on this bench)

Left Armrest B x 1 (the armrest on the left when you sit on this bench)

Tips on how to distinguish the left and right armrests:

When you put the legs of the armrest part towards the ground and the armrest face up, facing the side with holes, you can see that there is a hole on the vertical leg for connecting with the seat back. When the hole is on the right vertical leg, this is your right armrest. When the hole is on the left vertical leg, this is your left armrest.

Seat Panel C x 1 (rectangular)


Backrest D x 1 (with rounded design)

Screw E x 10 (1/4”x35mm)

Washer F x 10

Cap G x 10

Assembly Wrench H x 1

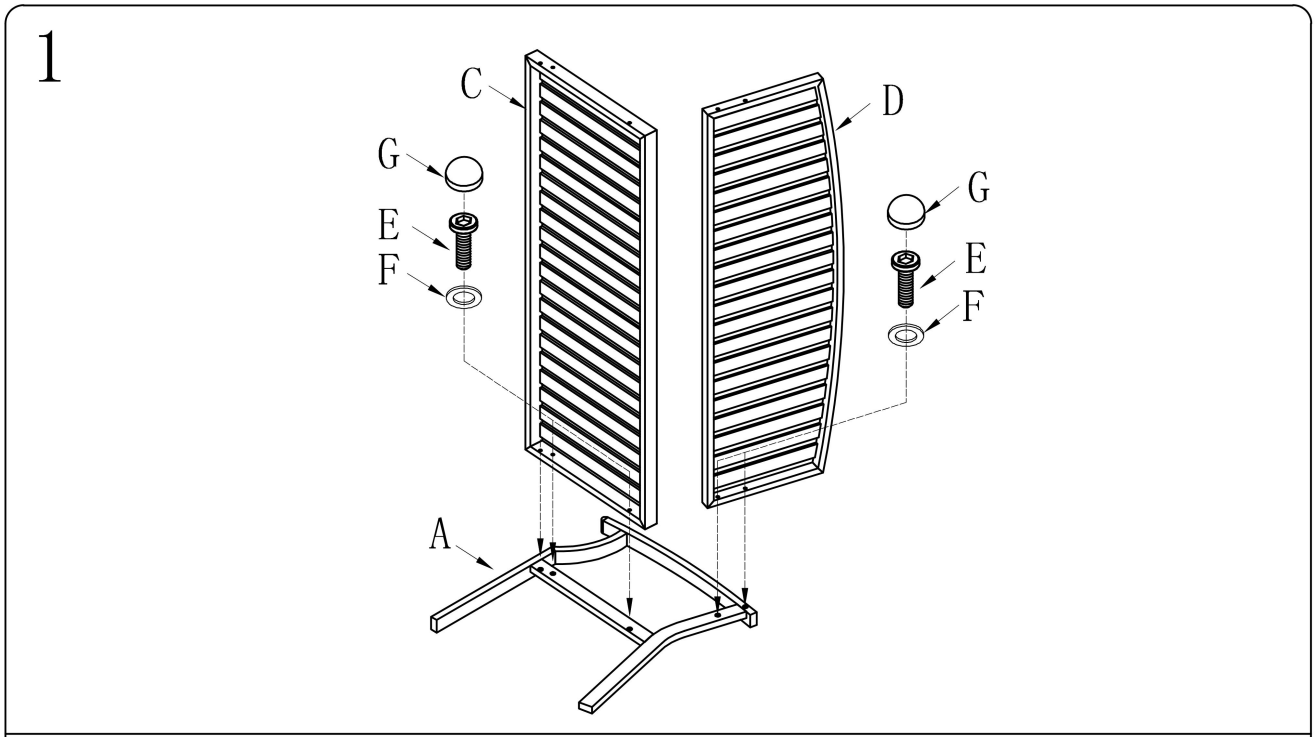

Let's start the installation together now!

①Lay your Right Armrest A flat on the ground with the holes facing up.

②Take your Seat Panel C, the flat side is for sitting on and the bumpy side faces the ground.You can see that there are 3 holes on the side of the Seat Panel C, two of them are close together, and one is alone on the side.

③Align the holes in the Seat Panel C and Right Armrest A. If it is not aligned, you can try to rotate the Seat Panel C and use the other short side to align the holes with the Right Armrest A.

④When the holes are aligned, you can start connecting them.Insert 35mm Screw E through Washer F and tighten it into the three screw holes. After tightening these three screws, attach Cap G to the three screws.


At this point the Seat Panel C has been connected to the Right Armrest A, we are going to start connecting the Backrest D and the Right Armrest A.

⑤Take your Backrest D, the rounded long side is up, the straight long side is down. The flat side is for leaning on when you sit on the bench, the bumpy side is against the wall when you plan to place the bench against the wall.

⑥Align the two holes in the Backrest D and Right Armrest A.

⑦When the holes are aligned, you can start connecting them.Insert 35mm Screw E through Washer F and tighten it into the two screw holes. After tightening these two screws, attach Cap G to the three screws.

Great, at this point you have connected the Right Armrest A with the Seat Panel C and the Backrest D, and then you just need to repeat the above operation to connect the Left Armrest B.

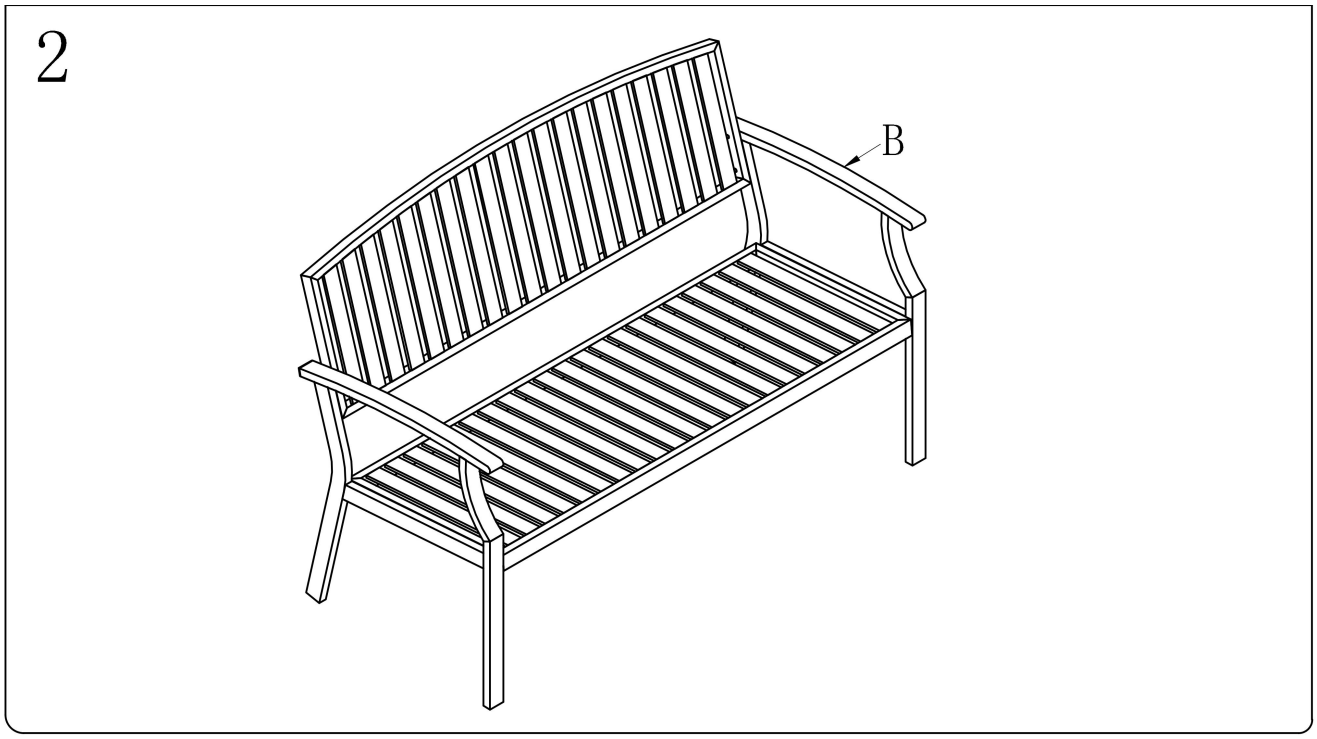

When you've finished attaching the Left Armrest B, congratulations, you've got a new bench. You are amazing!And I sincerely hope this bench can bring more hapiness and beauty to your life, best wishes.