

Bookshelf

Assembly Instructions - Please keep for future reference

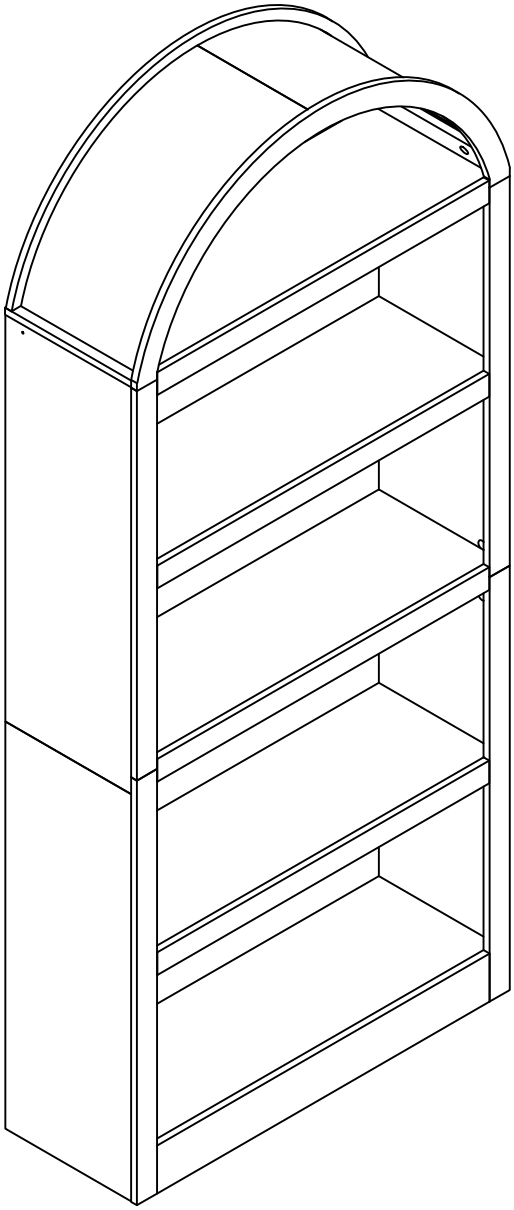

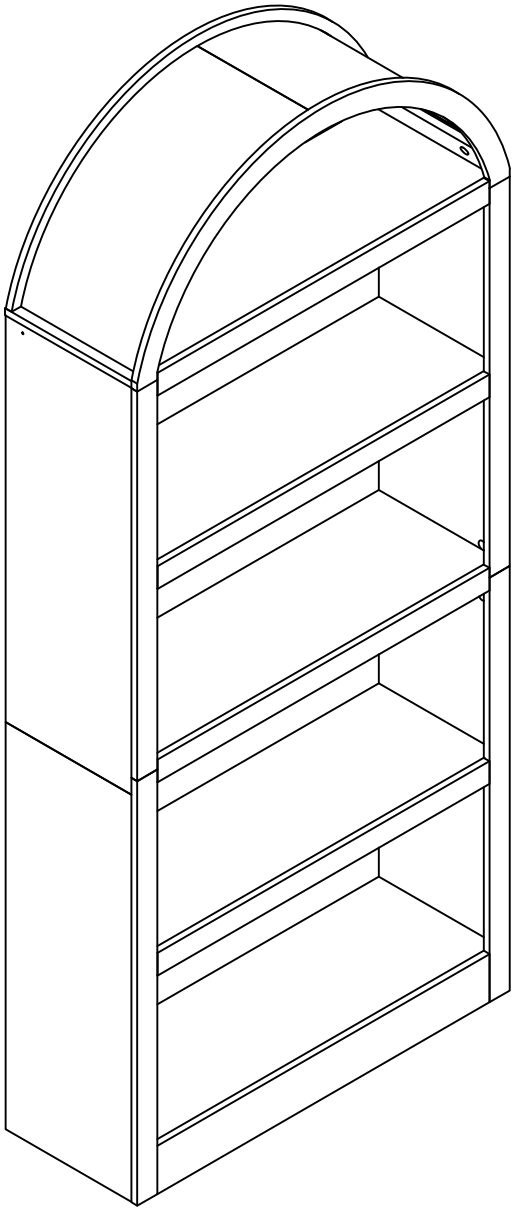

Single Dimensions

Width-29.921inch

Depth-10.63inch

Height-68.898inch

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions









To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components-Fittings

Please check you have all the panels llsted below

Note:The quantlle below are the correcet amount to complete the assembly. in some cases more fittings may be supplied than are required

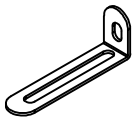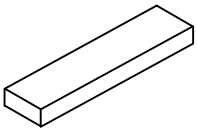Ⓐ  6*35mm Cam Bolt x 146	Ⓑ  15*10mm Cam Lock x 146	Ⓒ  6*30mm Dowel x 164	Ⓓ  4*35mm Screw x 4
Ⓔ  3*16mm Screw x 44	Ⓕ  4.0*14mm Screw x 4	Ⓖ  Anti-tilt Angle iron x 4	Ⓗ  Phillips screwdriver x1
Ⓘ  Back panel buckle x 44	Ⓙ  Plastic expansion bolt x 4	Ⓚ  Reinforcing iron sheet x 8	Ⓛ  Hole position sticker x 20
Ⓜ  3.5*12mm Screw x 20	Ⓝ  EVA pad x 8		

Tools required




Phillips screwdriver

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

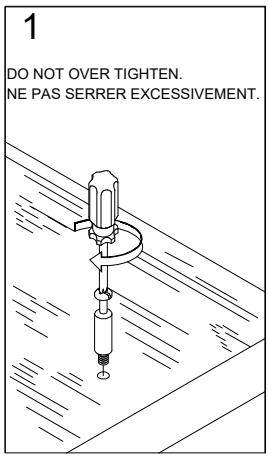

Step 2


Push the male camlock into the entry hole.

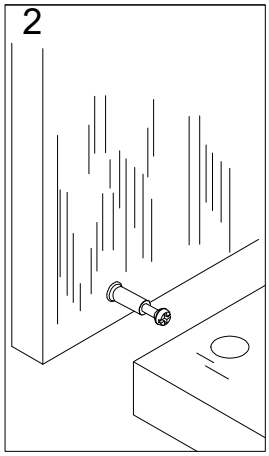

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

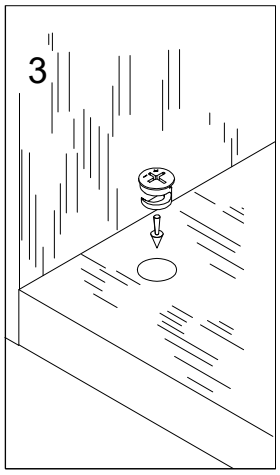


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.














The joint is now secure.

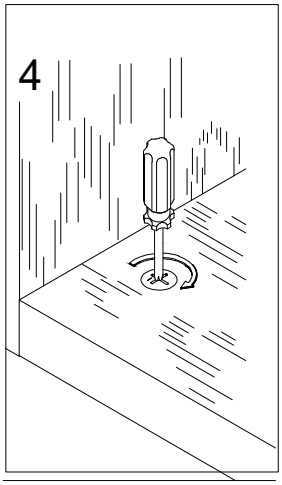

Assembly Instructions

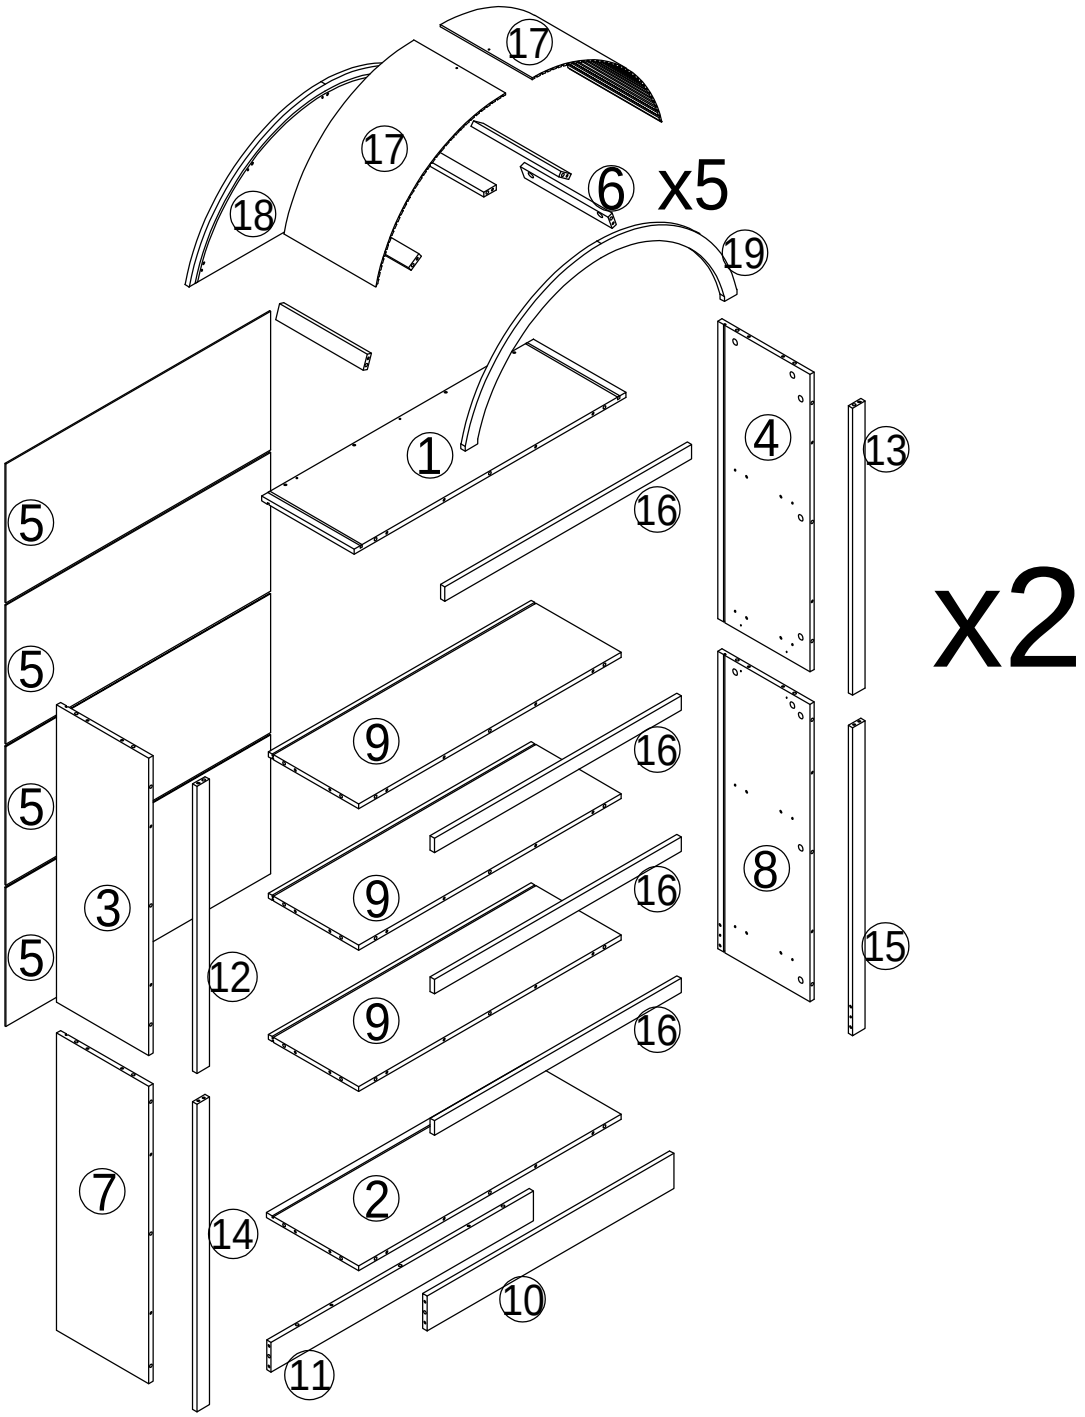


Assembly Instructions

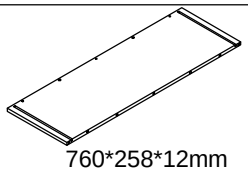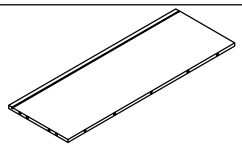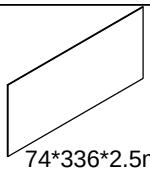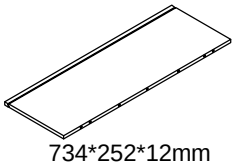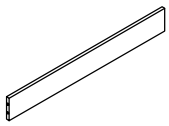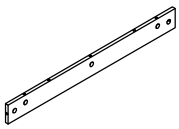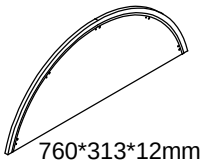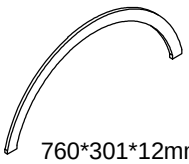
 760*258*12mm	 734*258*12mm	 720*258*12mm	 720*258*12mm
①X2	②X2	③X2	④X2
 74*336*2.5mm	 245*35*12mm	 720*258*12mm	 720*258*12mm
⑤X8	⑥X10	⑦X2	⑧X2
 734*252*12mm	 690*85*12mm	 734*72*12mm	695*35*12mm
⑨X6	⑩ X2	⑪ X2	⑫ X2
 695*35*12mm	 745*35*12mm	 745*35*12mm	 690*35*12mm
⑬ X2	⑭ X2	⑮ X2	⑯ X8
 500*257*5mm	 760*313*12mm	 760*301*12mm	
⑰ X4	⑱ X2	⑲ X2	

Assembly Instructions


Step 1

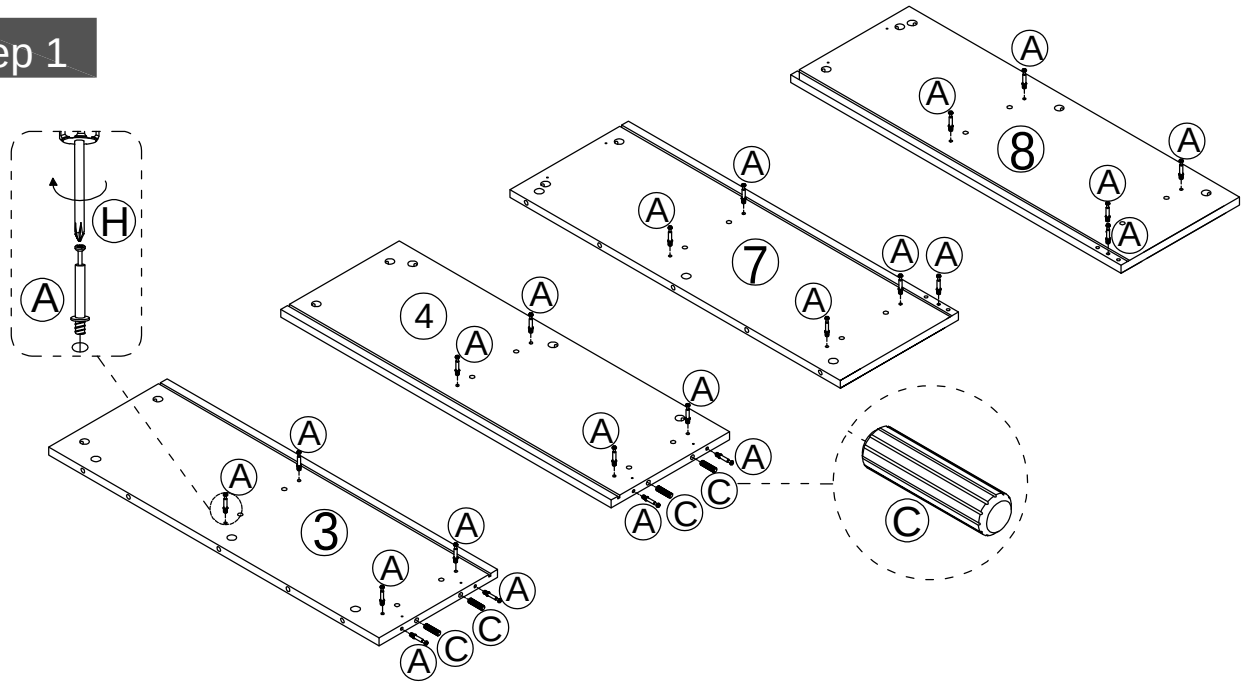


x2


A	C
	
6*35mm Cam Bolt x 44	6*30mm Dowel x 8

Step 2

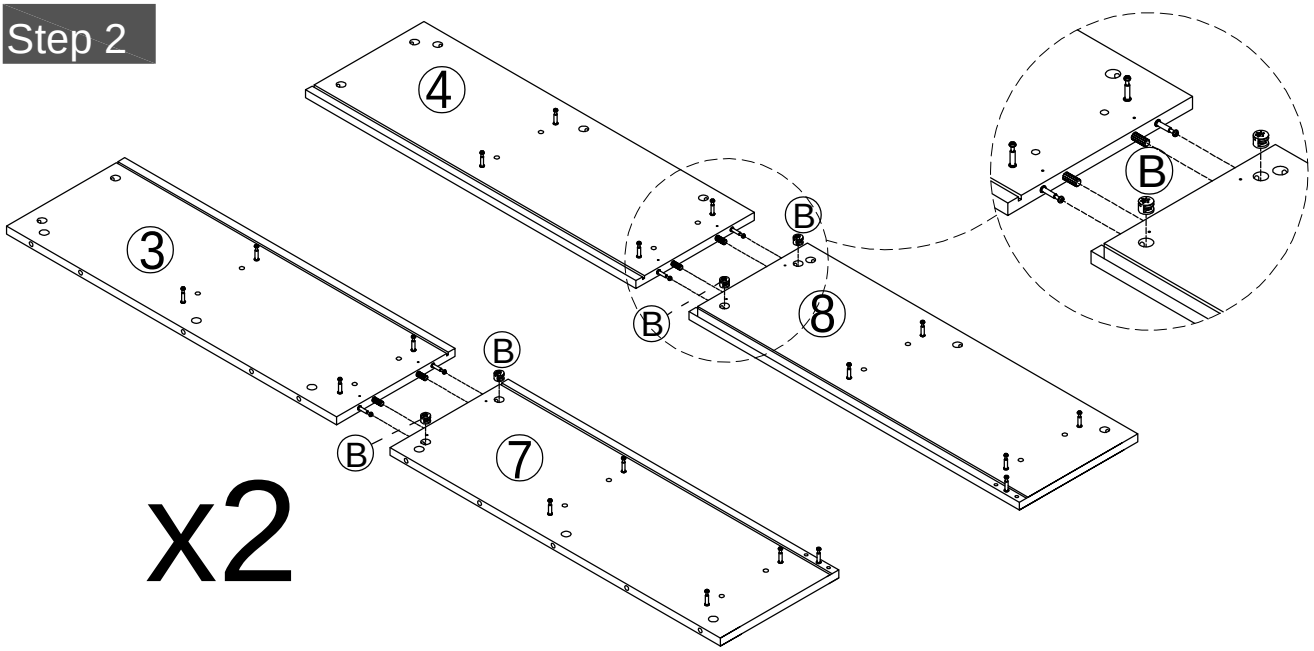


x2

B

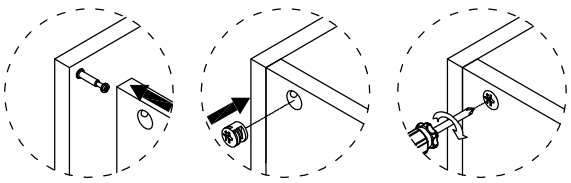15*10mm Cam Lock x 8




Assembly Instructions

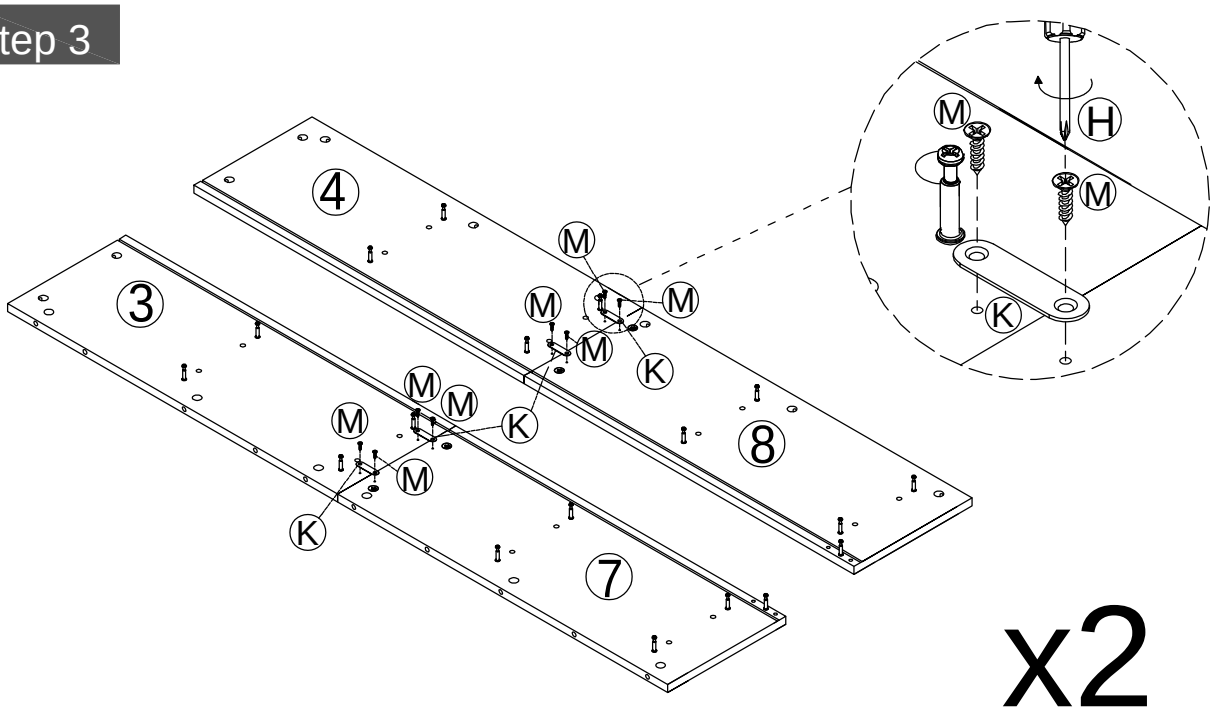
Step 3




x2

K	M
	
Reinforcing iron sheet x 8	3.5*12mm Screw x 16

Step 4

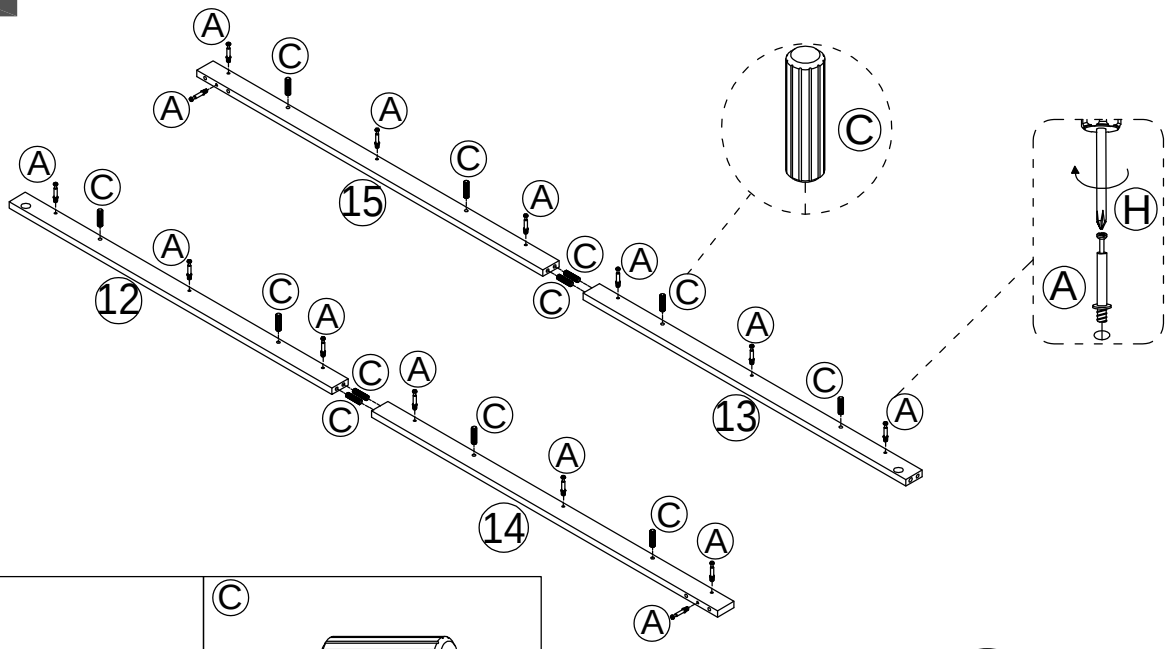



A	C
	
6*35mm Cam Bolt x 28	6*30mm Dowel x 24

x2


Assembly Instructions

Step 5

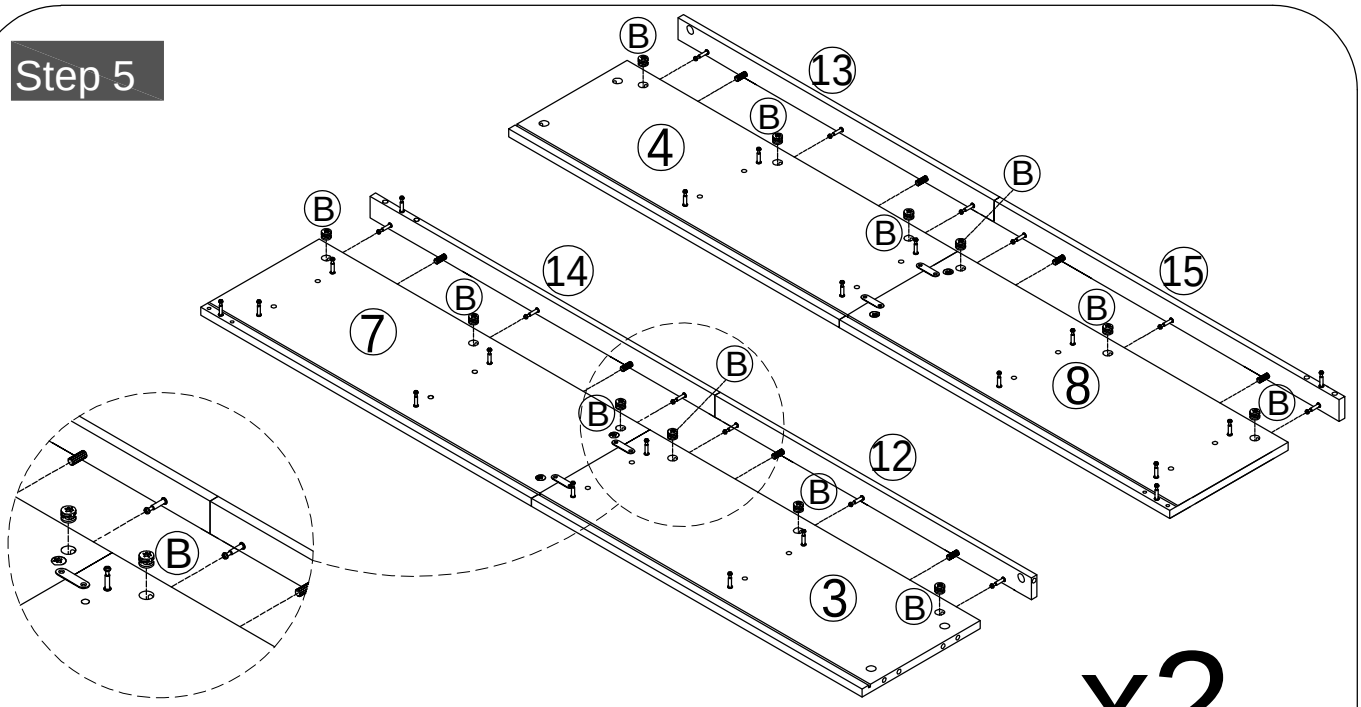

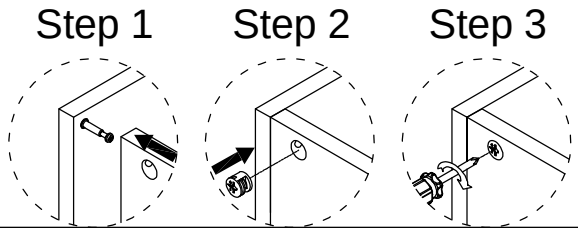



B




15*10mm Cam Lock x 24

Step 6

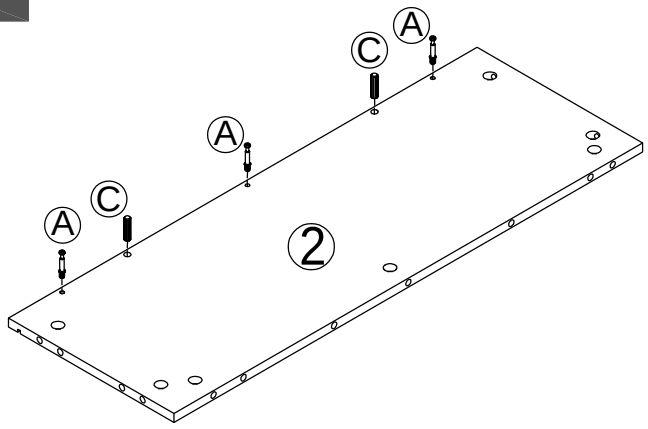

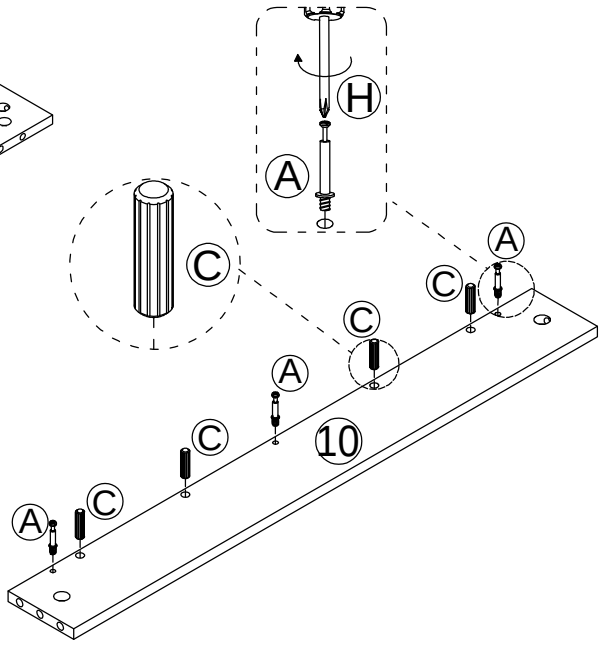


A



6*35mm Cam Bolt x 12

C



6*30mm Dowel x 12


Assembly Instructions

Step 7


Step 1

Step 2

Step 3

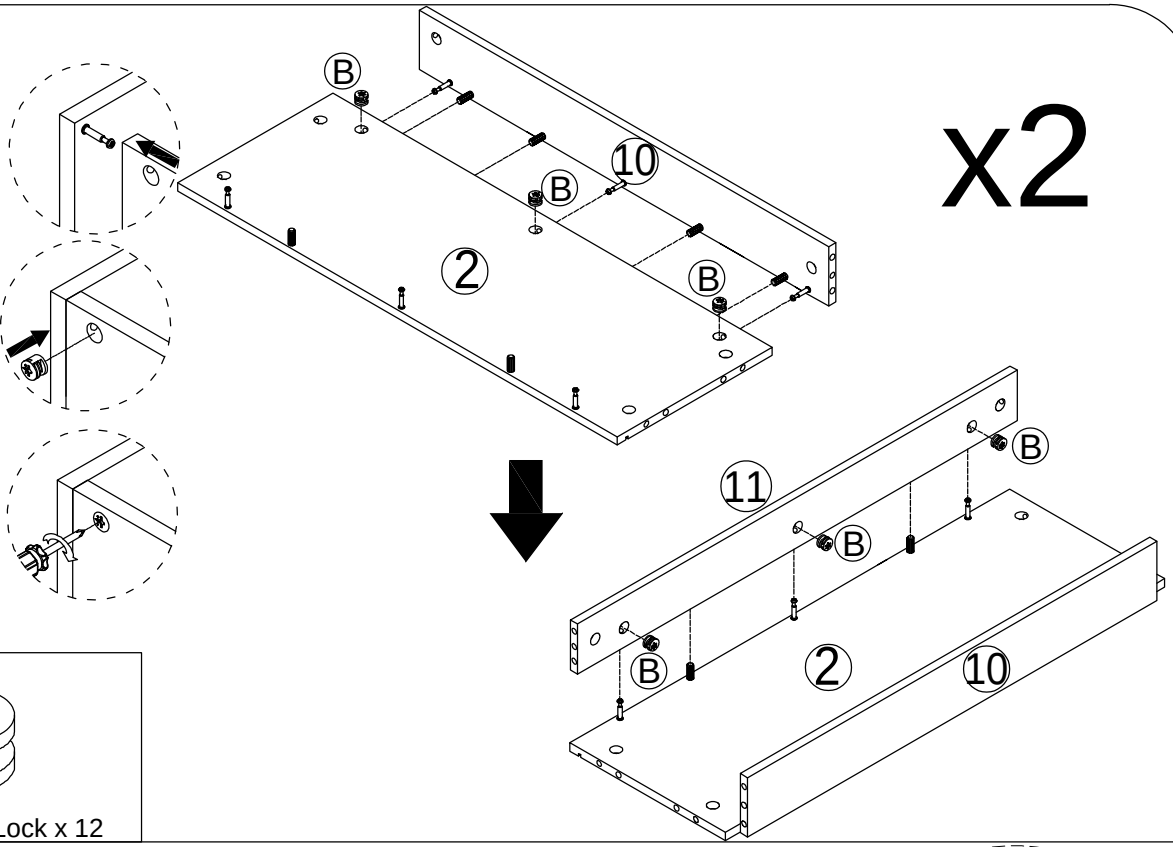

B




15*10mm Cam Lock x 12

Step 8

Step 1

Step 2

Step 3

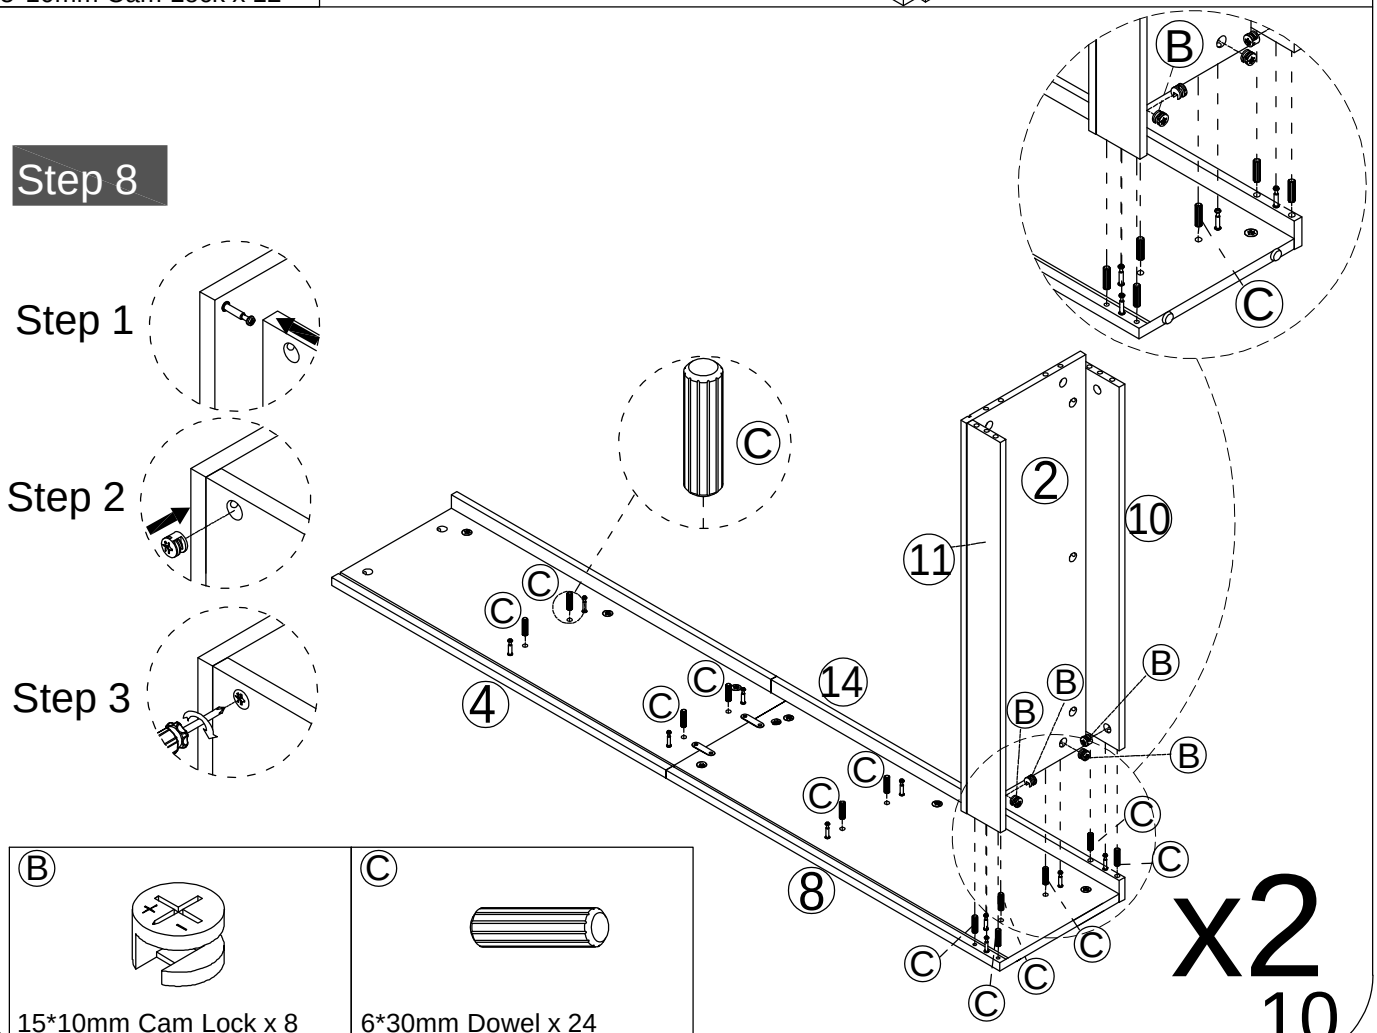

B	C
15*10mm Cam Lock x 8	6*30mm Dowel x 24


Assembly Instructions

Step 9



Step 1

Step 2

Step 3

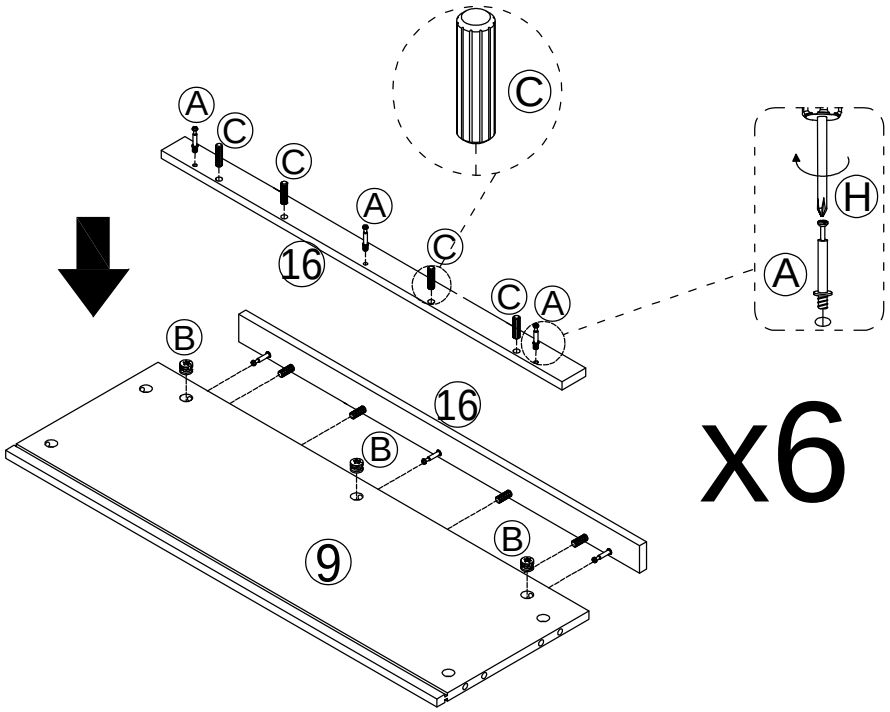

x6


A	B	C
		
6*35mm Cam Bolt x 18	15*10mm Cam Lock x 18	6*30mm Dowel x 24

Step 10


Step 1

Step 2

Step 3

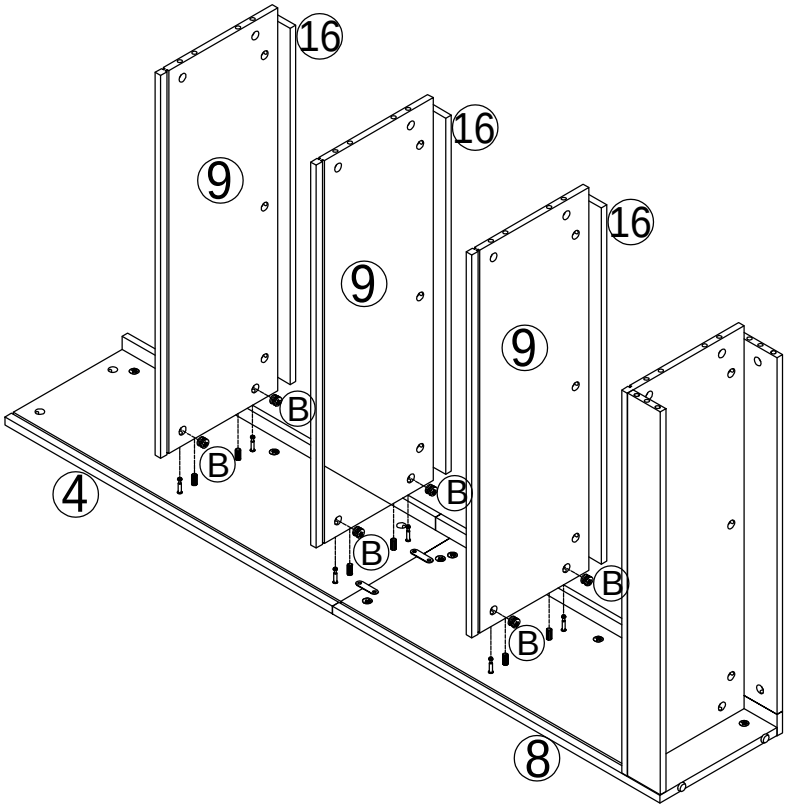


x2

B

15*10mm Cam Lock x 12

Assembly Instructions

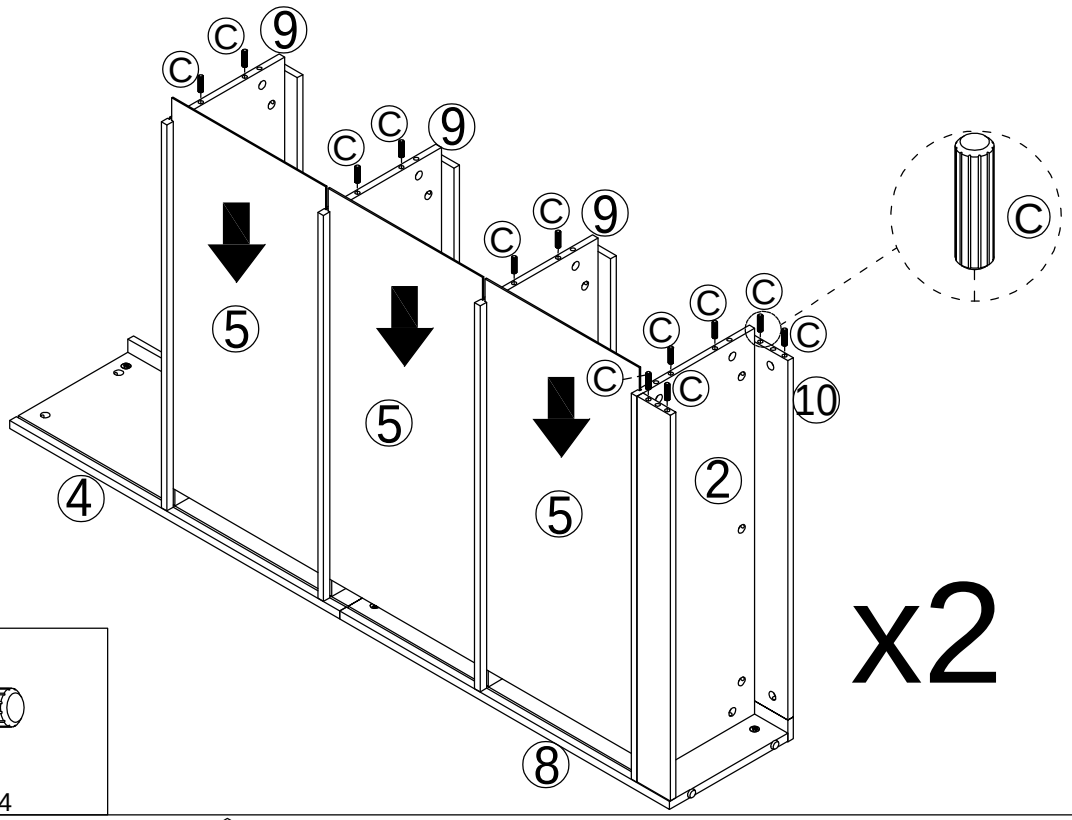Step 11



x2

C




6*30mm Dowel x 24

Step 12

Step 1


Step 2

Step 3

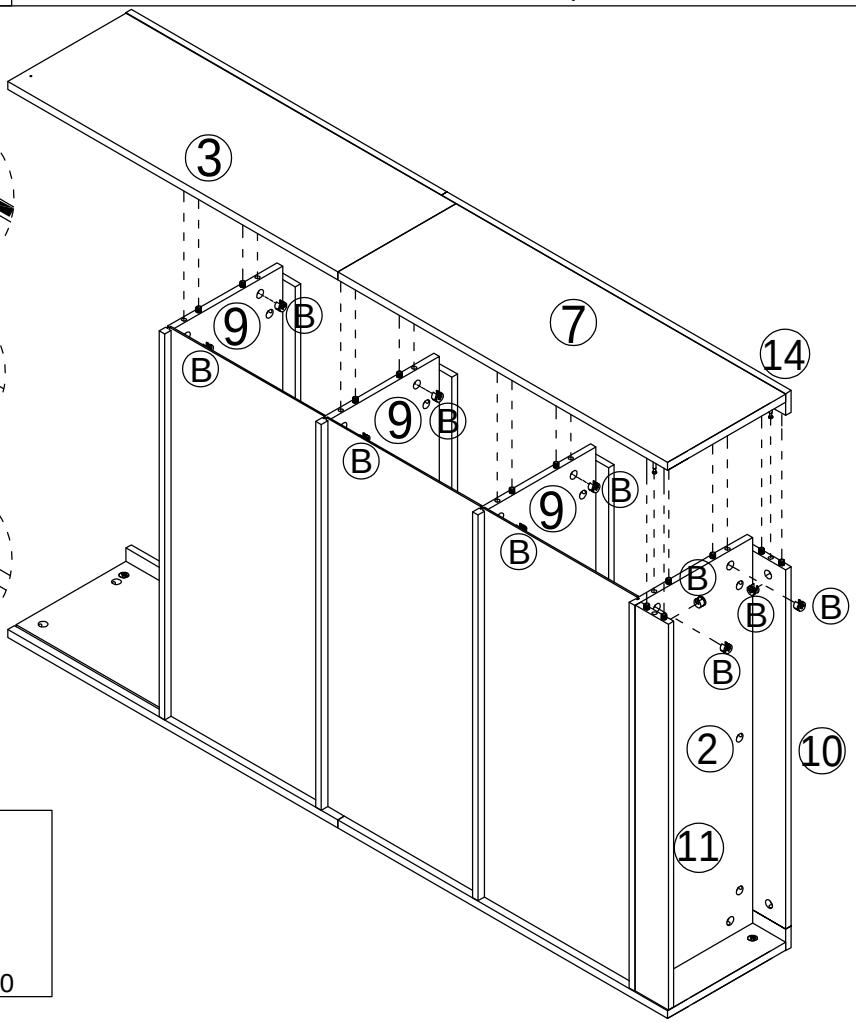

x2


B




15*10mm Cam Lock x 20

Assembly Instructions

Step 13

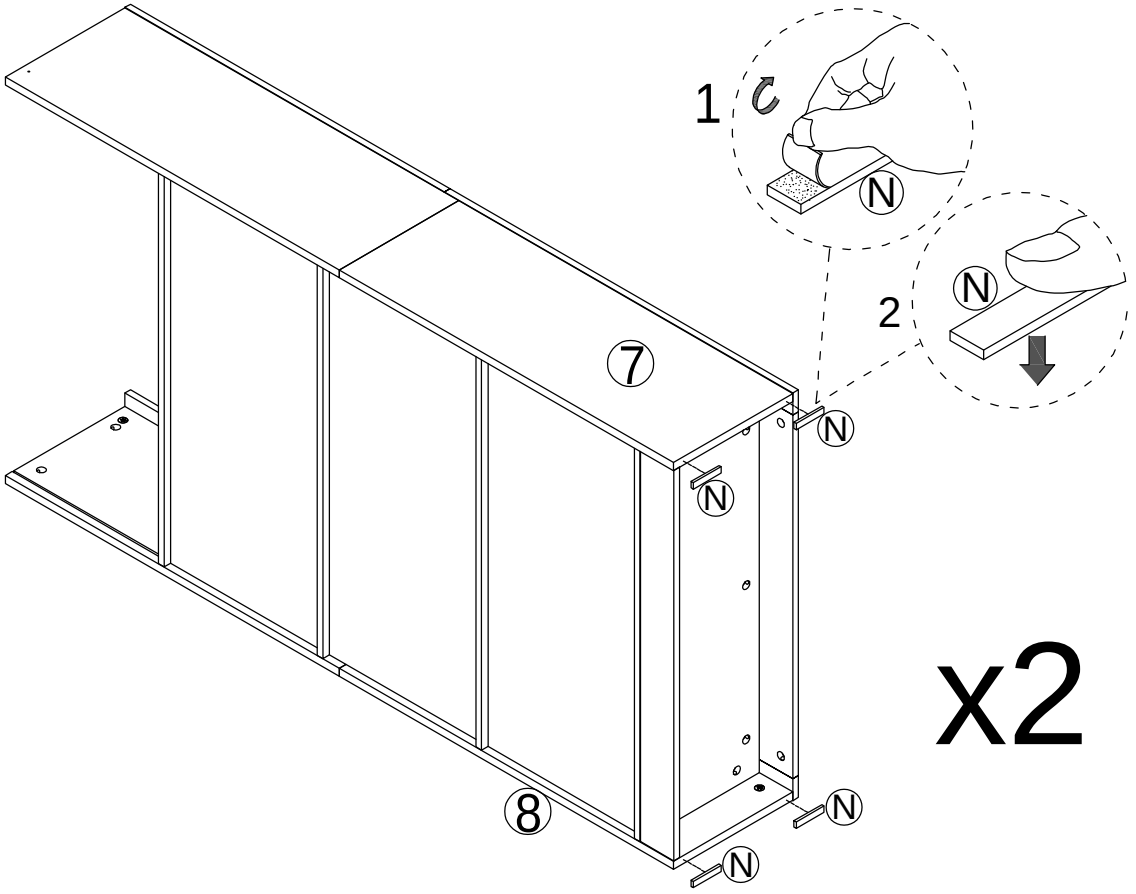


x2

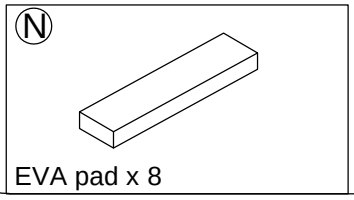


EVA pad x 8

Assembly Instructions

Step 14

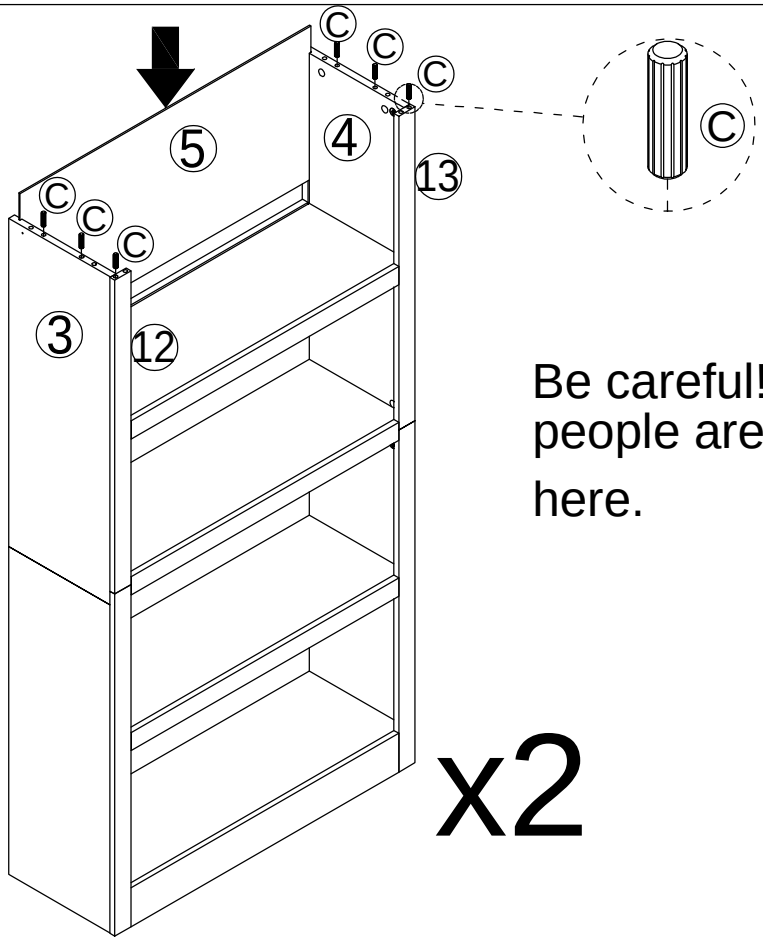

Be careful! At least two people are required here.

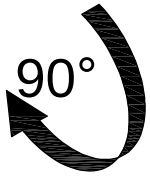


x2


C

6*30mm Dowel x 12

Step 15

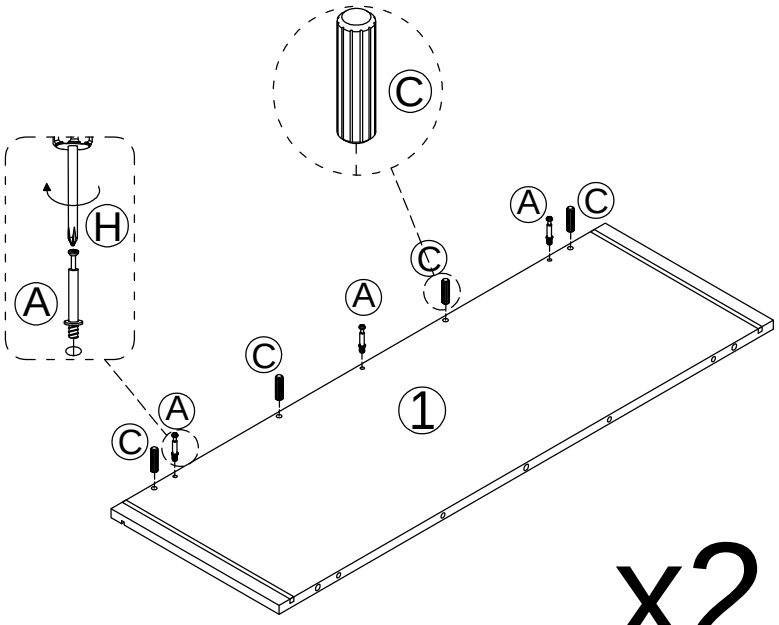



x2

A	C
	
6*35mm Cam Bolt x 6	6*30mm Dowel x 8


Assembly Instructions

Step 16

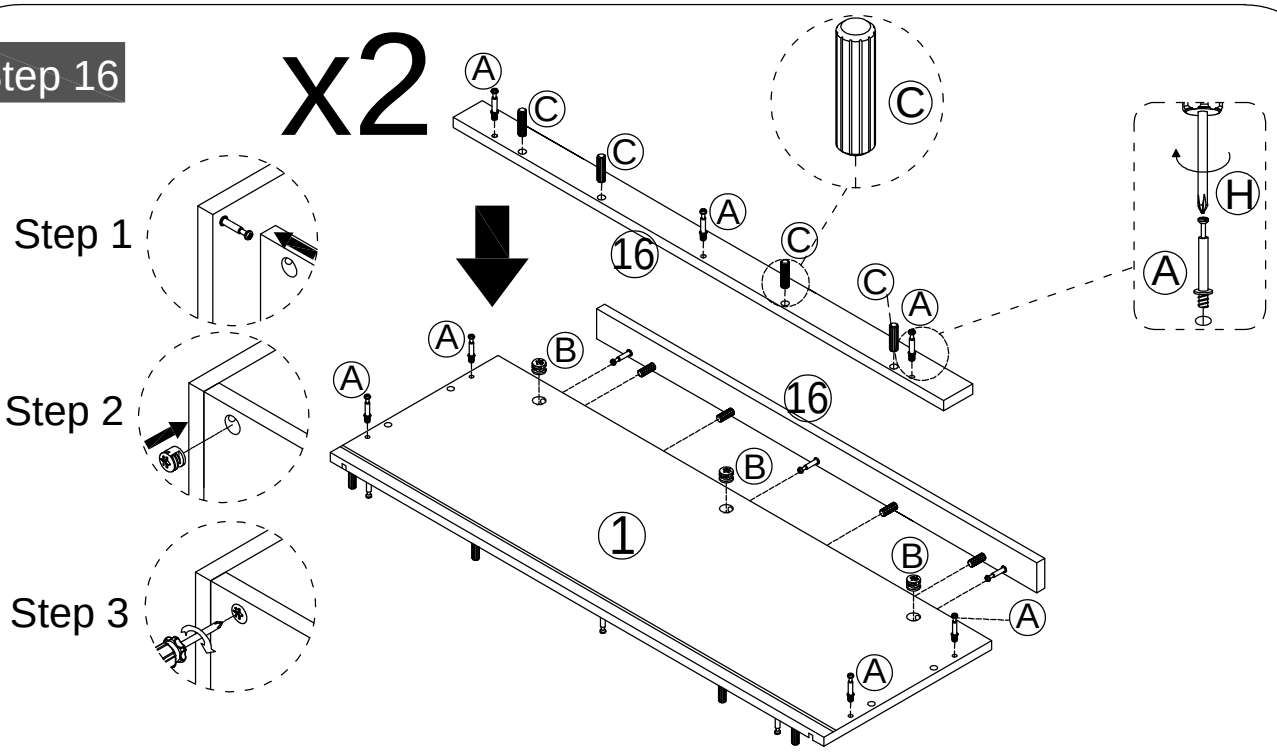

A	B	C
		
6*35mm Cam Bolt x 14	15*10mm Cam Lock x 6	6*30mm Dowel x 8


Step 17

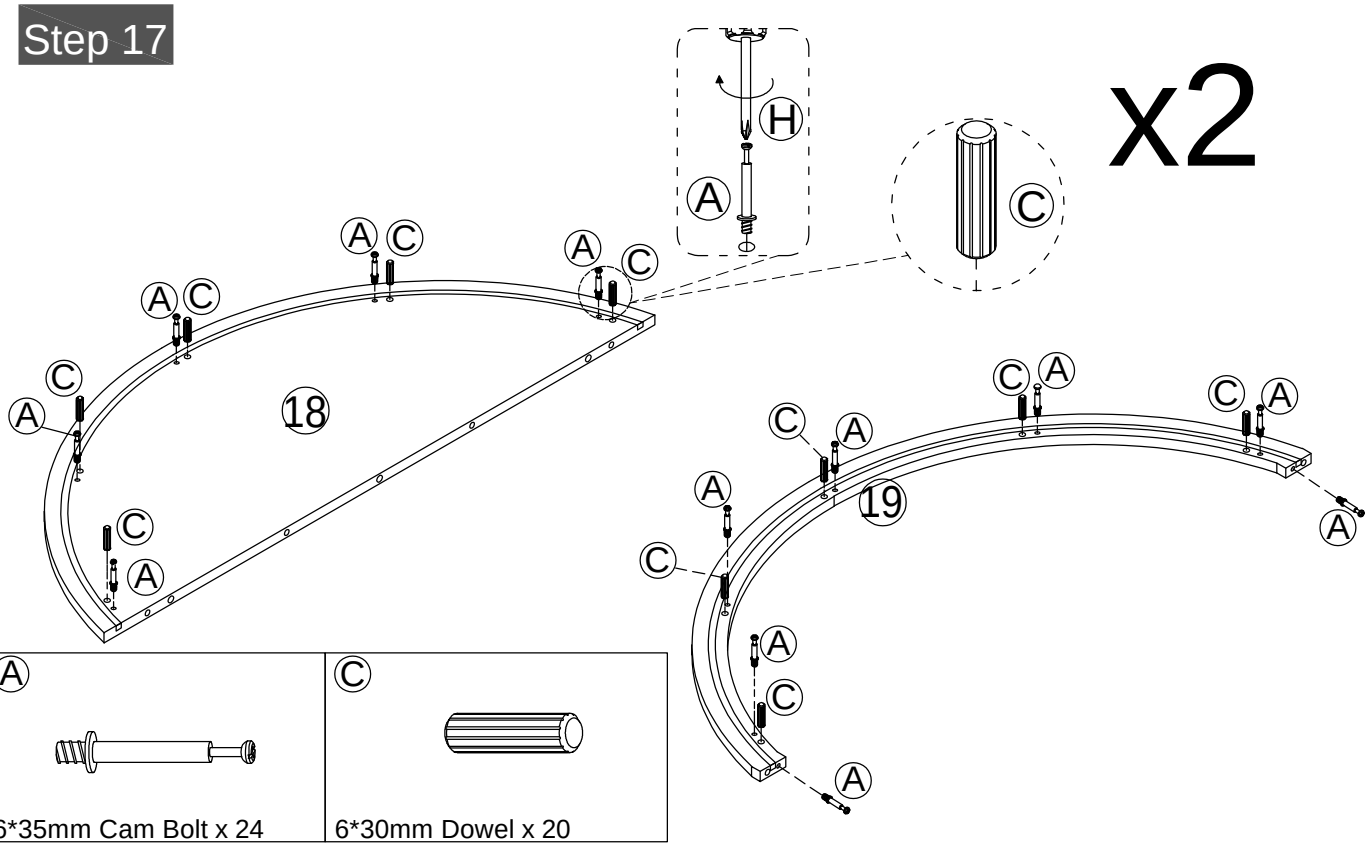




A	C
6*35mm Cam Bolt x 24	6*30mm Dowel x 20

Assembly Instructions


Step 18

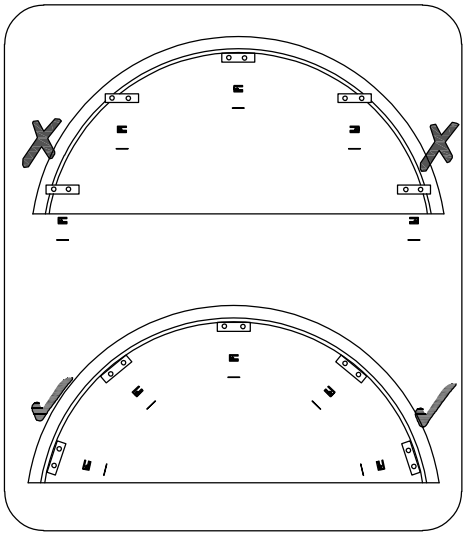


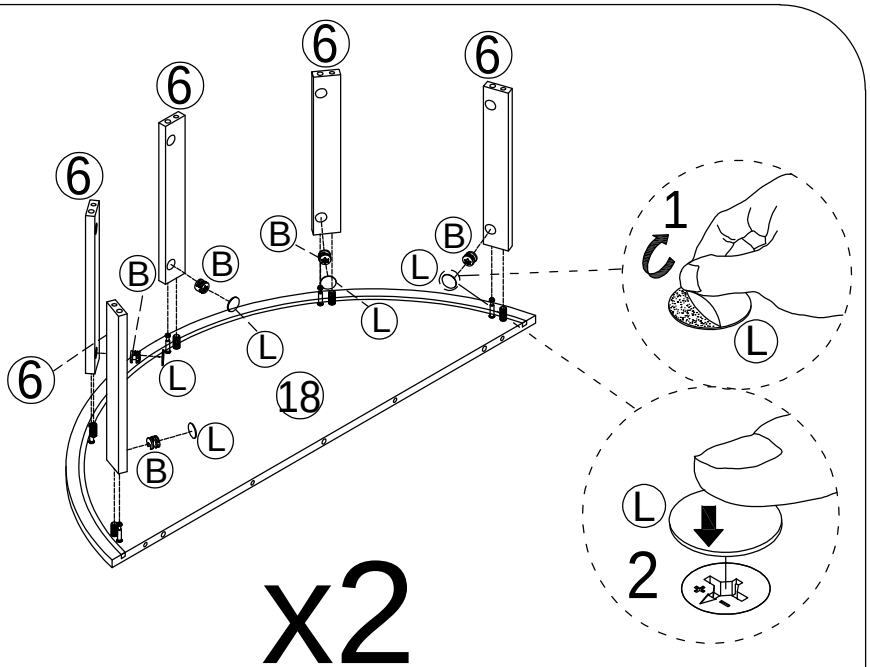


B	L
	
15*10mm Cam Lock x 10	Hole position sticker x 10

Step 19

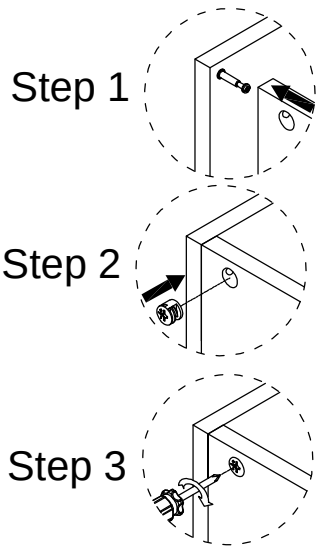


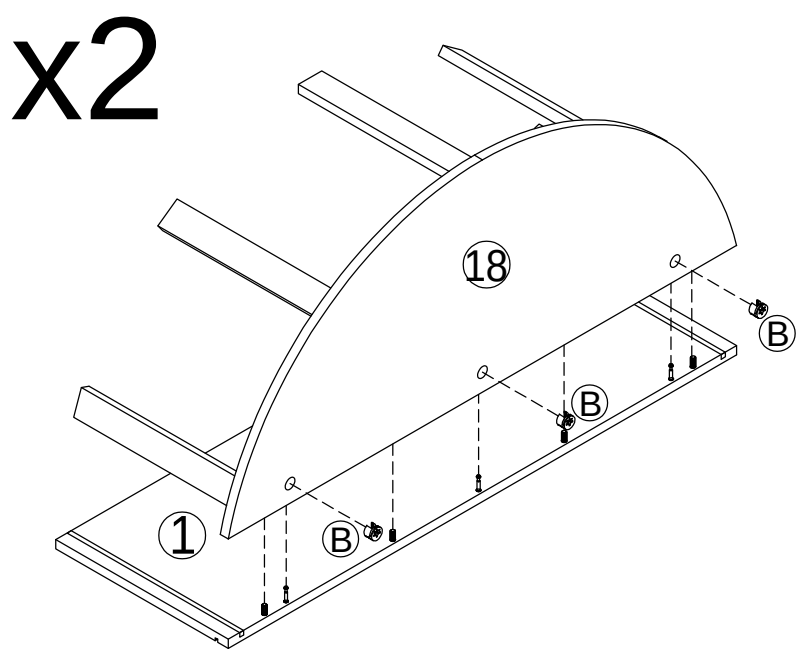


B

15*10mm Cam Lock x 6

Assembly Instructions

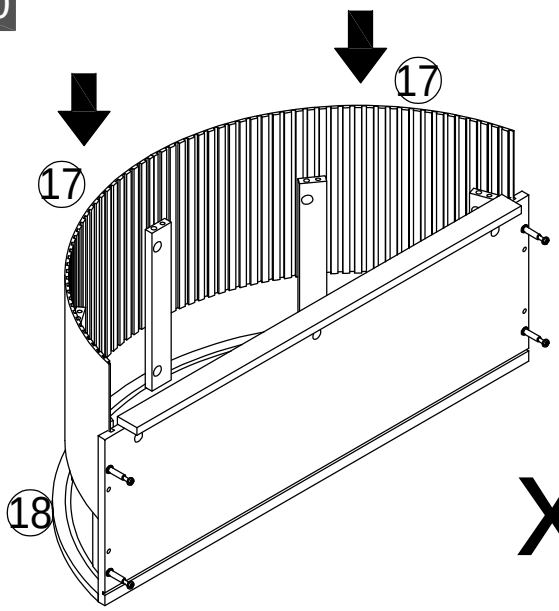Step 20

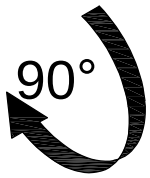



Be careful! At least two people are required here.



x2


Step 21

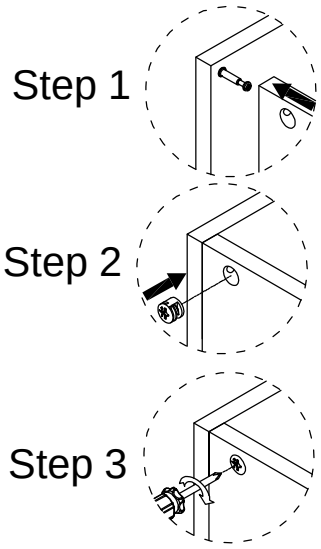

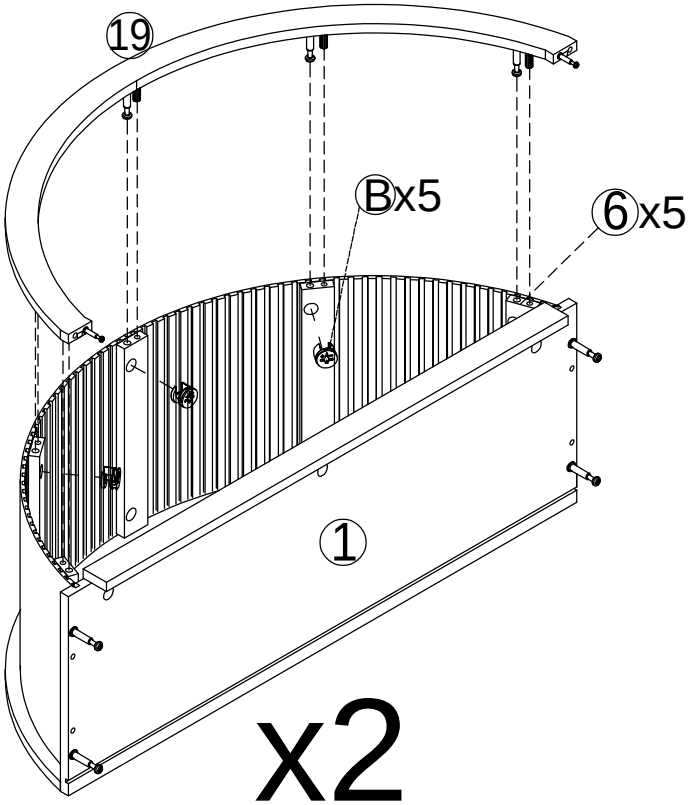

x2


Ⓑ




15*10mm Cam Lock x 10

Assembly Instructions

Step 22

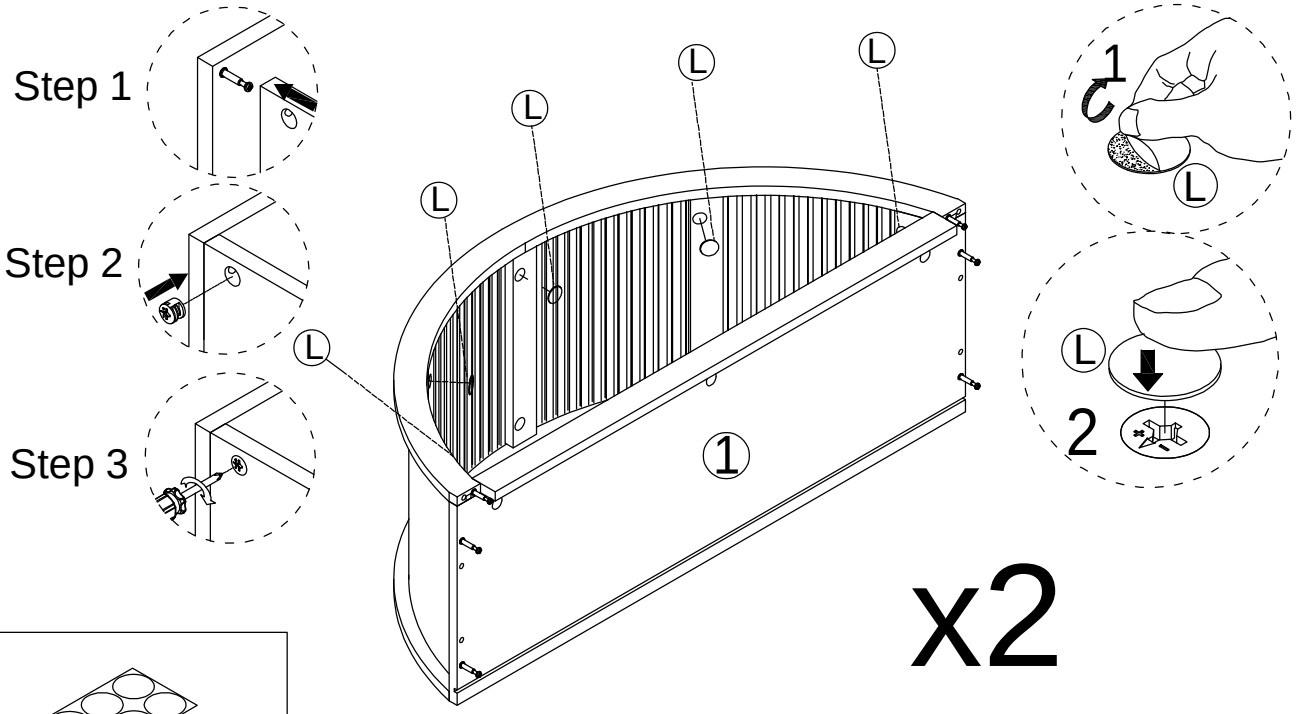


L




Hole position sticker x 10

Step 23

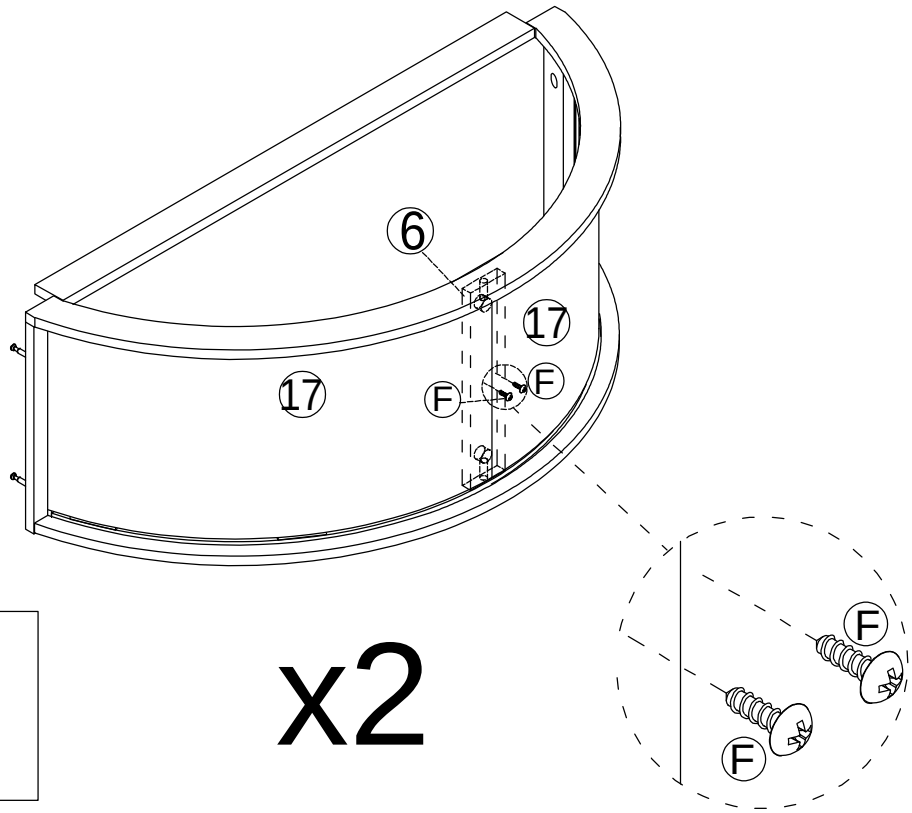


F



4.0*14mm Screw x 4

Assembly Instructions

Step 24

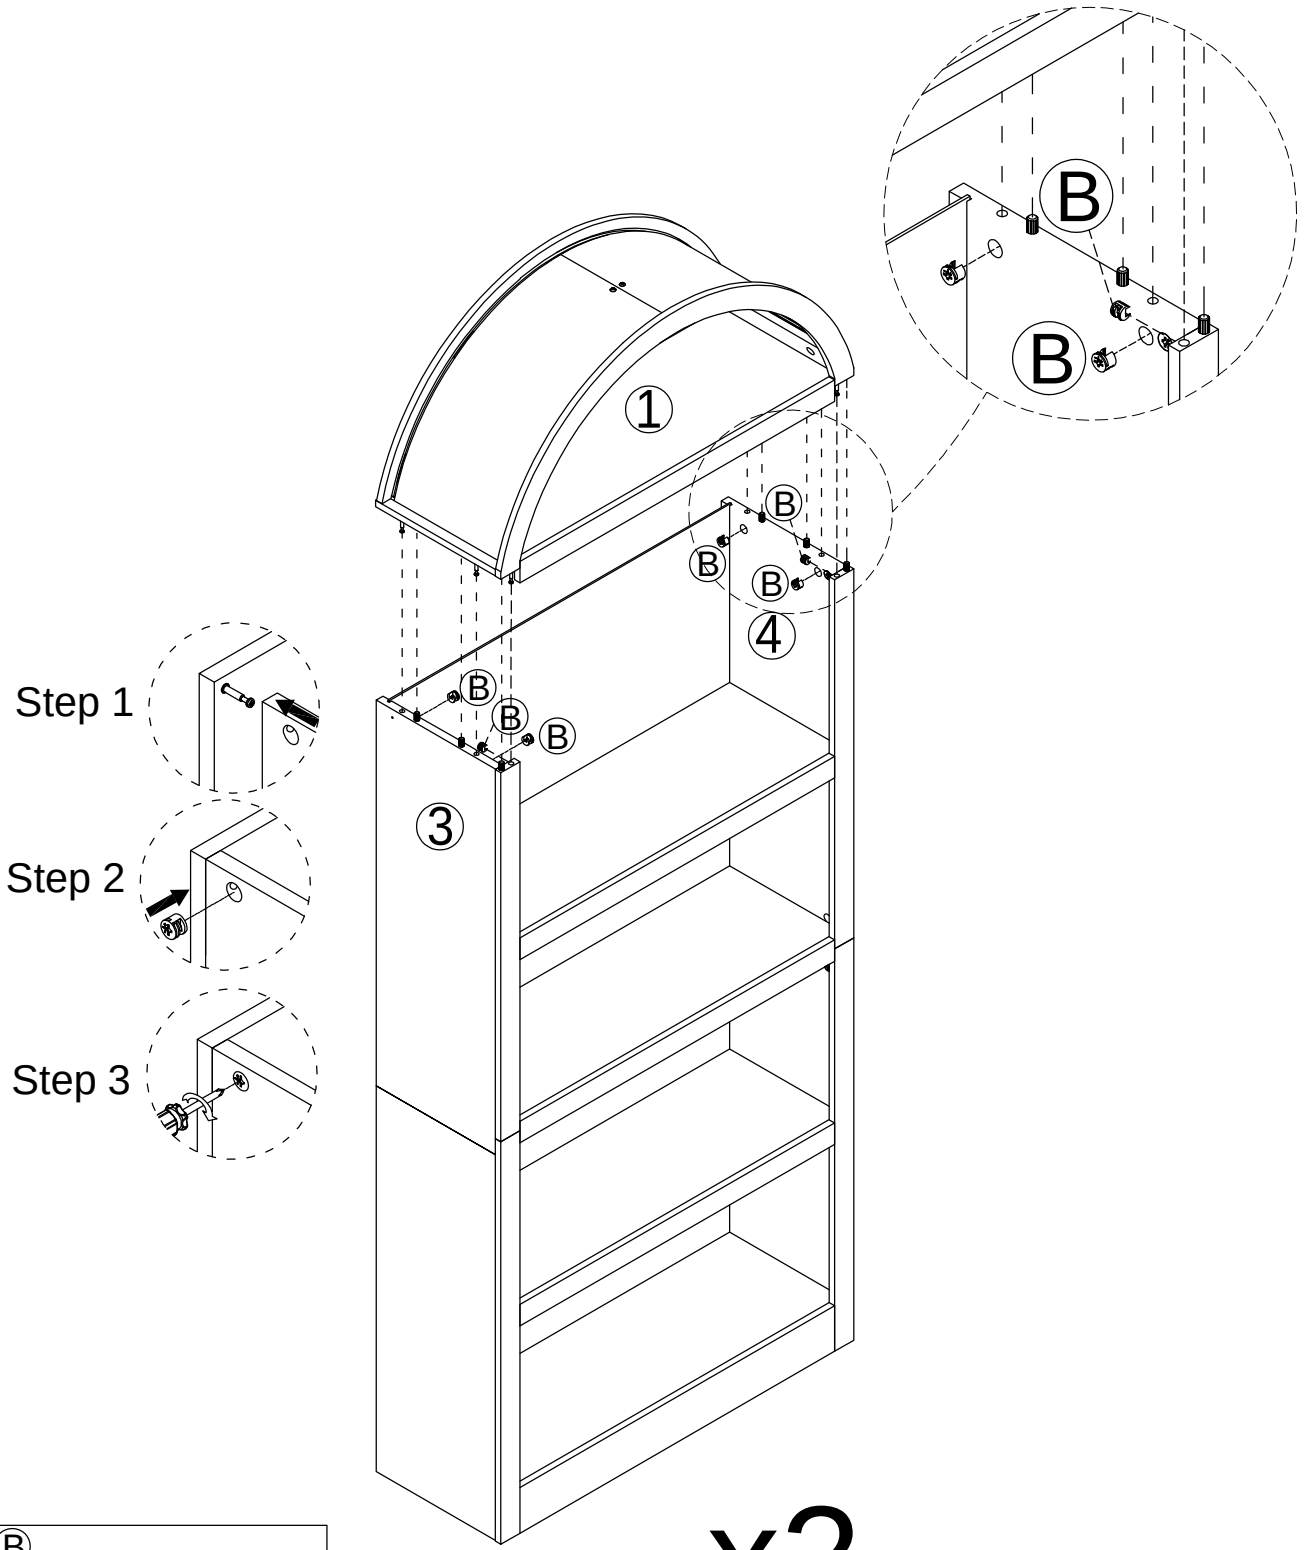


Ⓑ


15*10mm Cam Lock x 12

Assembly Instructions

Step 25

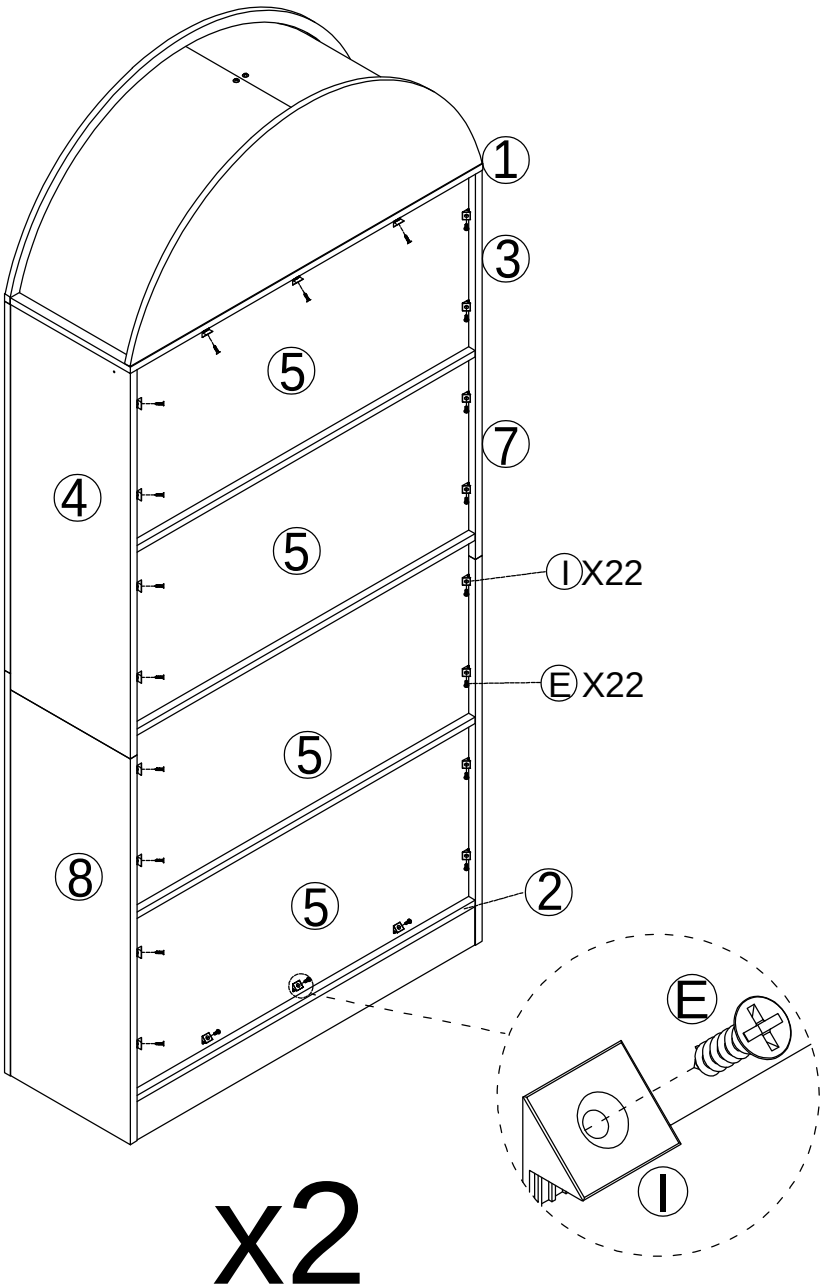


x2


E	I
	
3*16mm Screw x 44	Back panel buckle x 44

Assembly Instructions

Step 26

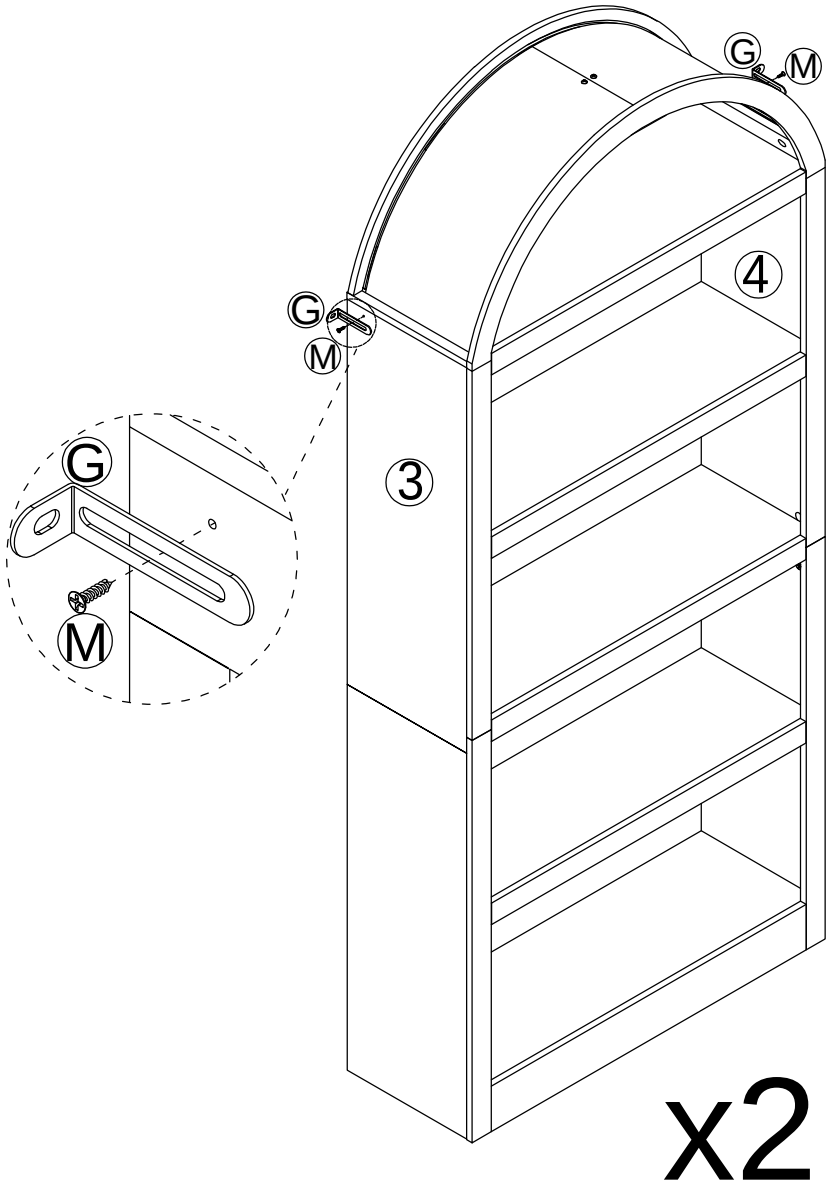



x2

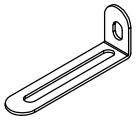M	G
	
3.5*12mm Screw x 4	Anti-tilt Angle iron x 4

Assembly Instructions

Step 27

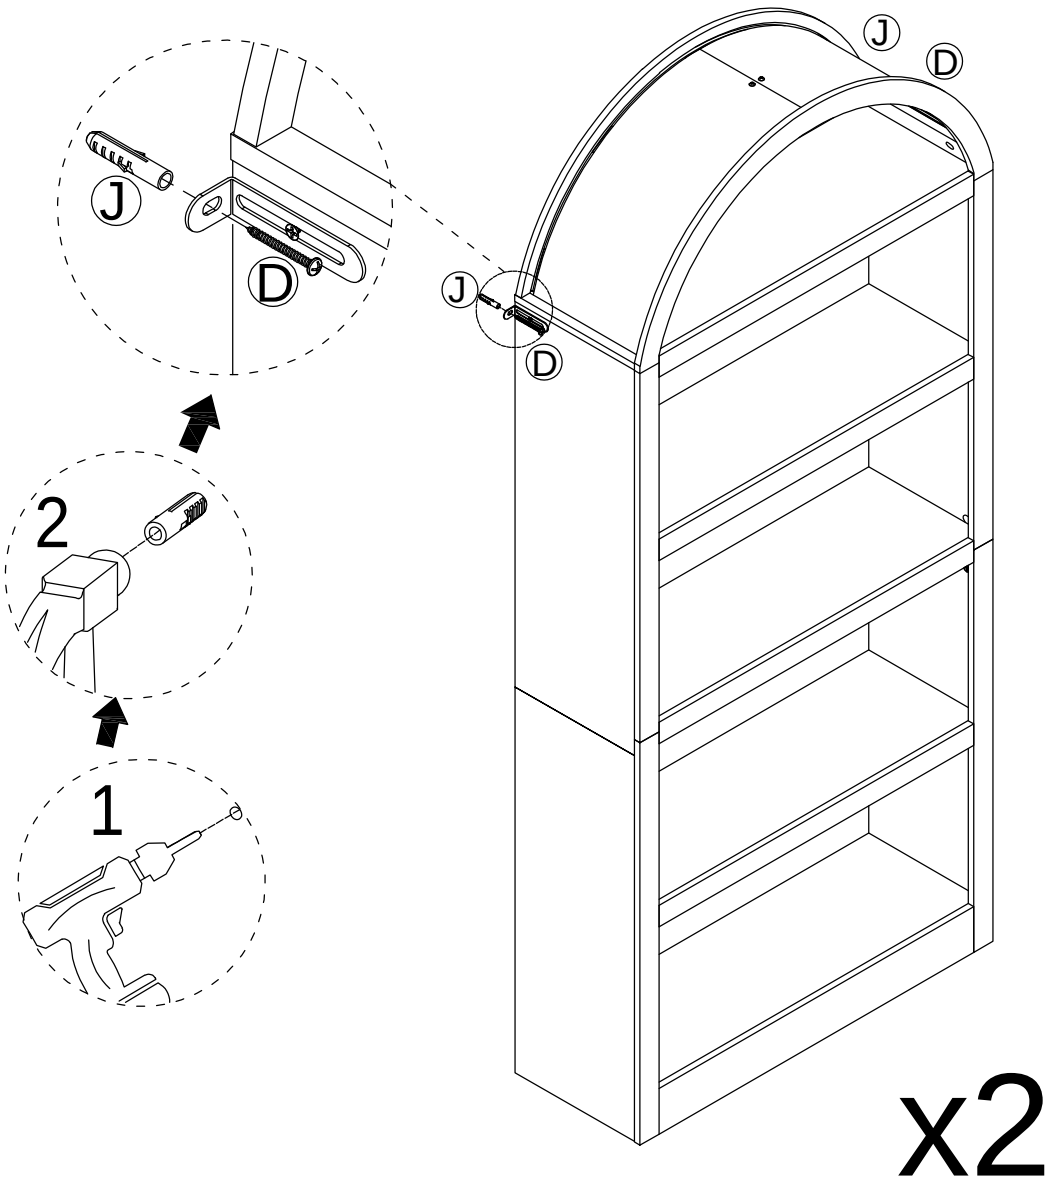

D	J
	
4*35mm Screw x 4	Plastic expansion bolt x 4

Assembly Instructions

Step 28

