

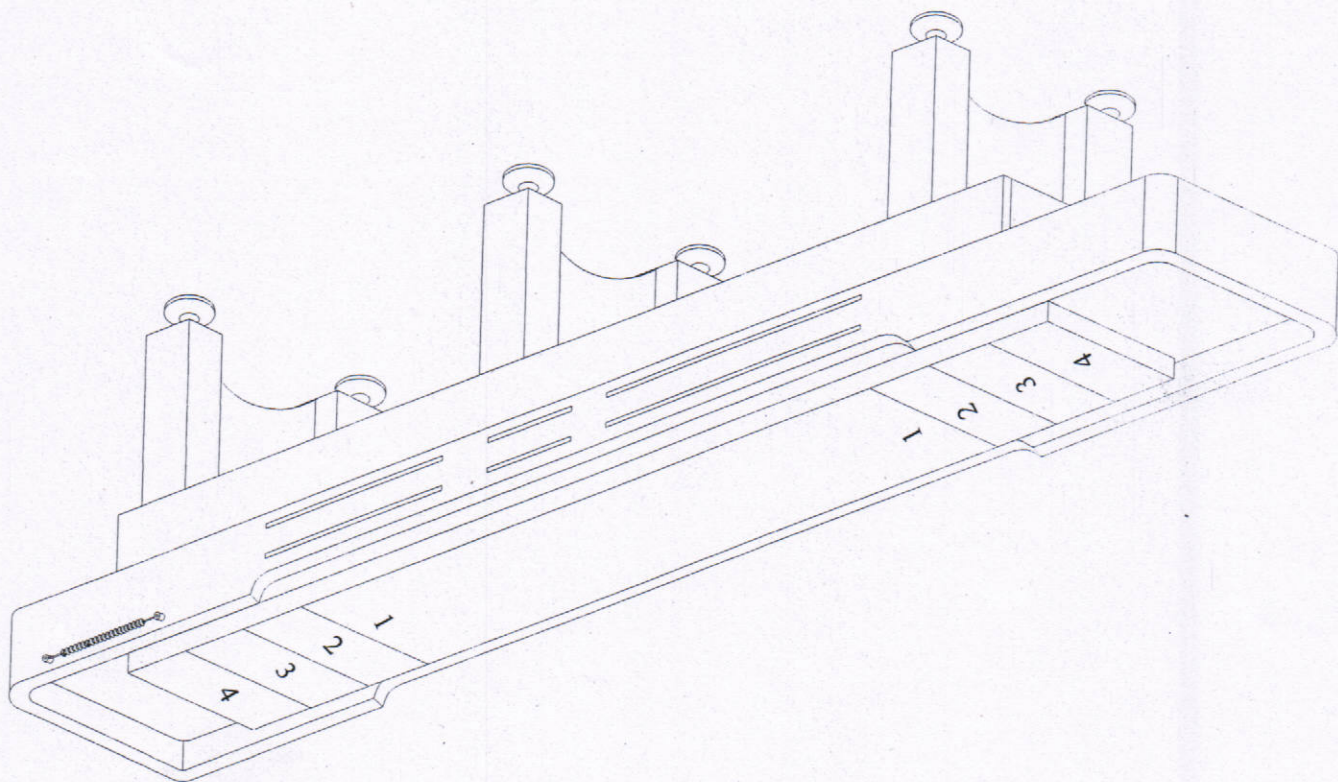
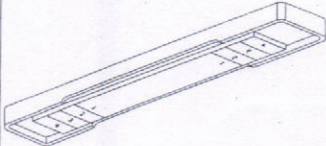

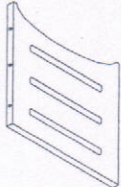



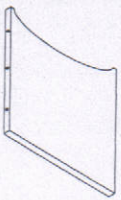




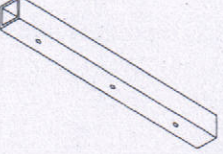


INSTRUCTION MANUAL FOR SHUFFLEBOARD




#1 Cradle 1 pc 	#2 Leg post 6 pcs 	#3 Side leg panel 2 pcs 	#4 End frame panel 2 pcs 	#5 Cross frame panel 2 pcs 	#6 Side frame panel 2 pcs 	#7 Wrench 1 pc 	#8 Center leg panel 1 pc 	#9 Red and blue puck each 4 pcs 	#10 Slide scoring unit 2 set 	#11 Screw F4*1-1/2" 4 pcs 	#12 Wood cap 4 pcs 	#13 Wrench 1 pc 	#14 Bracket 25*12*2mm 44 pcs 	#15 Screw F4*18mm 88 pcs 	#16 Bolt 18 pcs 	#17 Nut 18 pcs 	#18 Leg Leveler 6 pcs 	#19 5/16"*2-3/4" Bolt 18 pcs 	#20 5/16"*23mm Washer 18 pcs 	#21 1/4"*32mm Washer 24 pcs 	#22 1/4" Nut 24 pcs 	#23 Bolt 4 pcs 	#24 Bolt 1/4"*4" 12 pcs 	#25 Shuffleboard wax 1 pc 	#26 Wrench 1 pc 
---	--	--	---	--	--	--	---	--	--	--	---	--	--	---	--	---	--	---	---	--	--	---	---	--	--


Step 1: Place cradle upside down, then take wrench(#26) to fix bolt(#24) on playfield bottom through cradle bed.
 Note: When use the wrench, put the flat end of the bolt into the wrench, then screw in the other

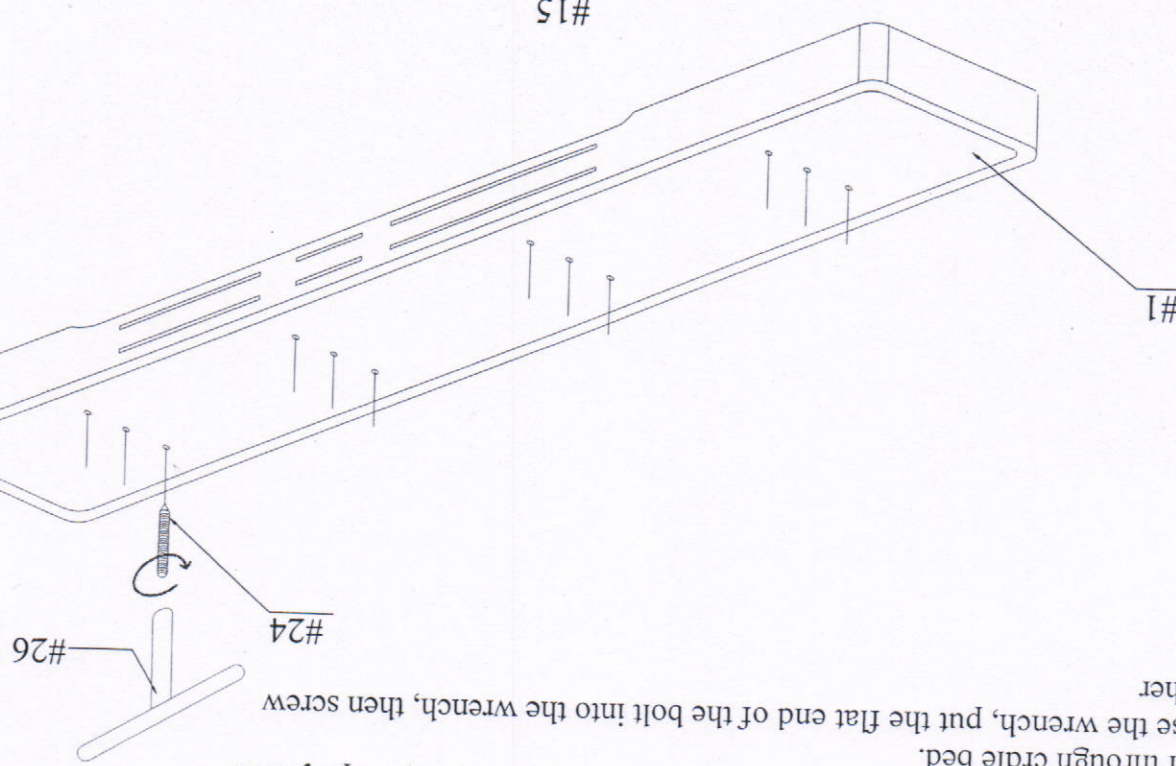


Step 2: Use screw(#15) and bracket(#14) to fix frame side panel(#6), frame end panel(#4) and cross frame panel(#5) together to form a table frame.

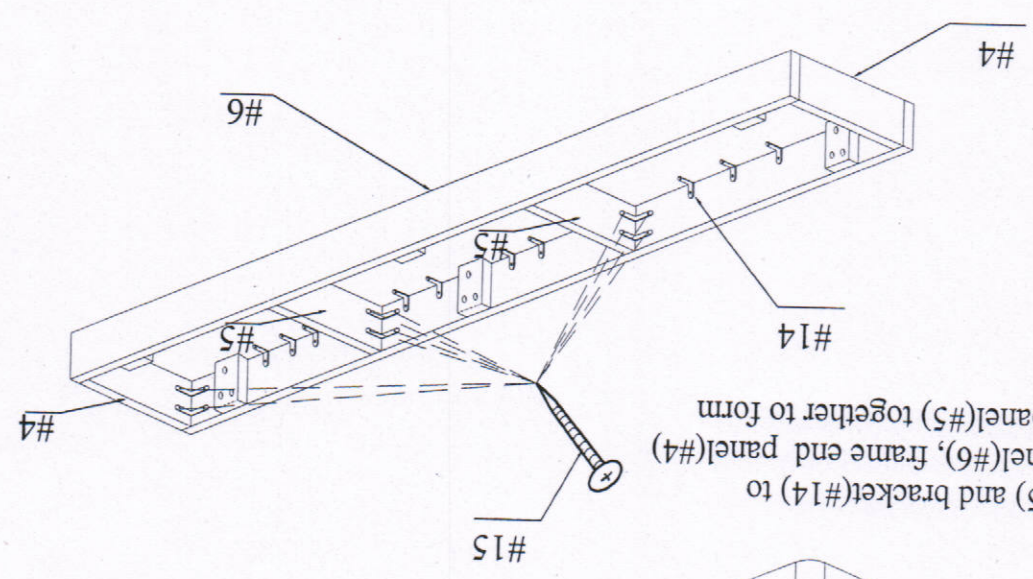


Step 3: Use screw(#15) and bracket(#14) to fix table frame on cradle bottom.

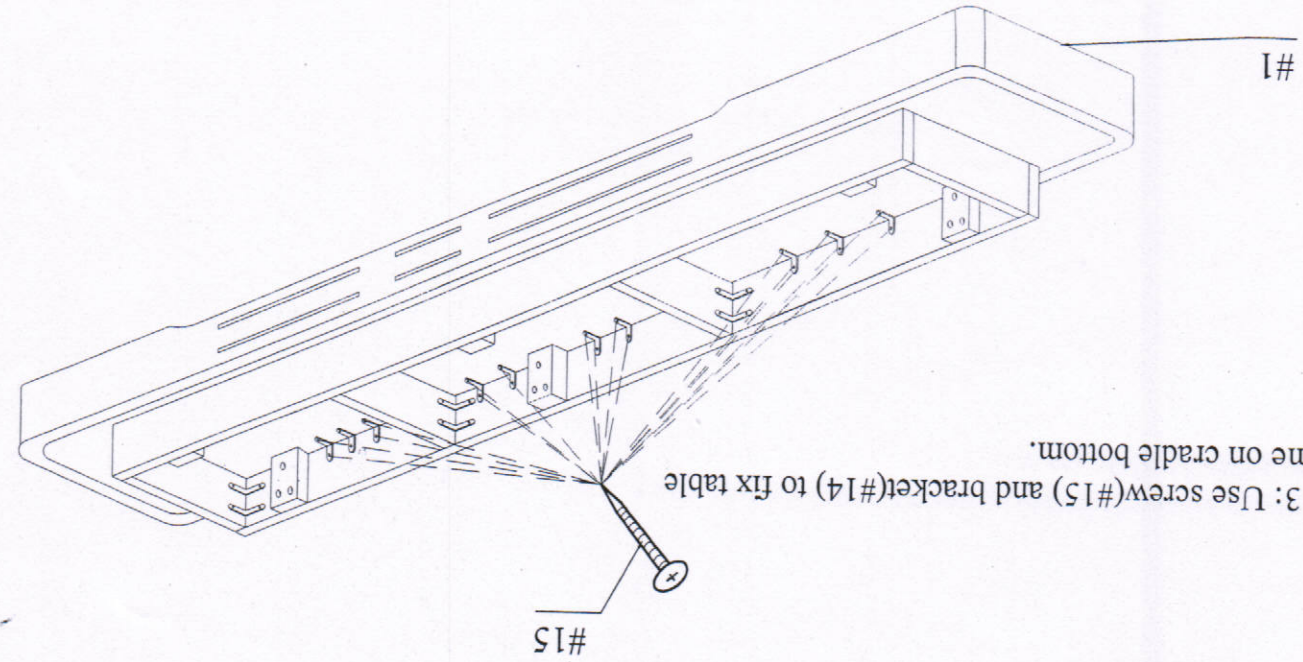


Step 4: Fix nut(#22), washer(#21) and tube(#23) on bolt(#24) in the sequence shown in the drawing.

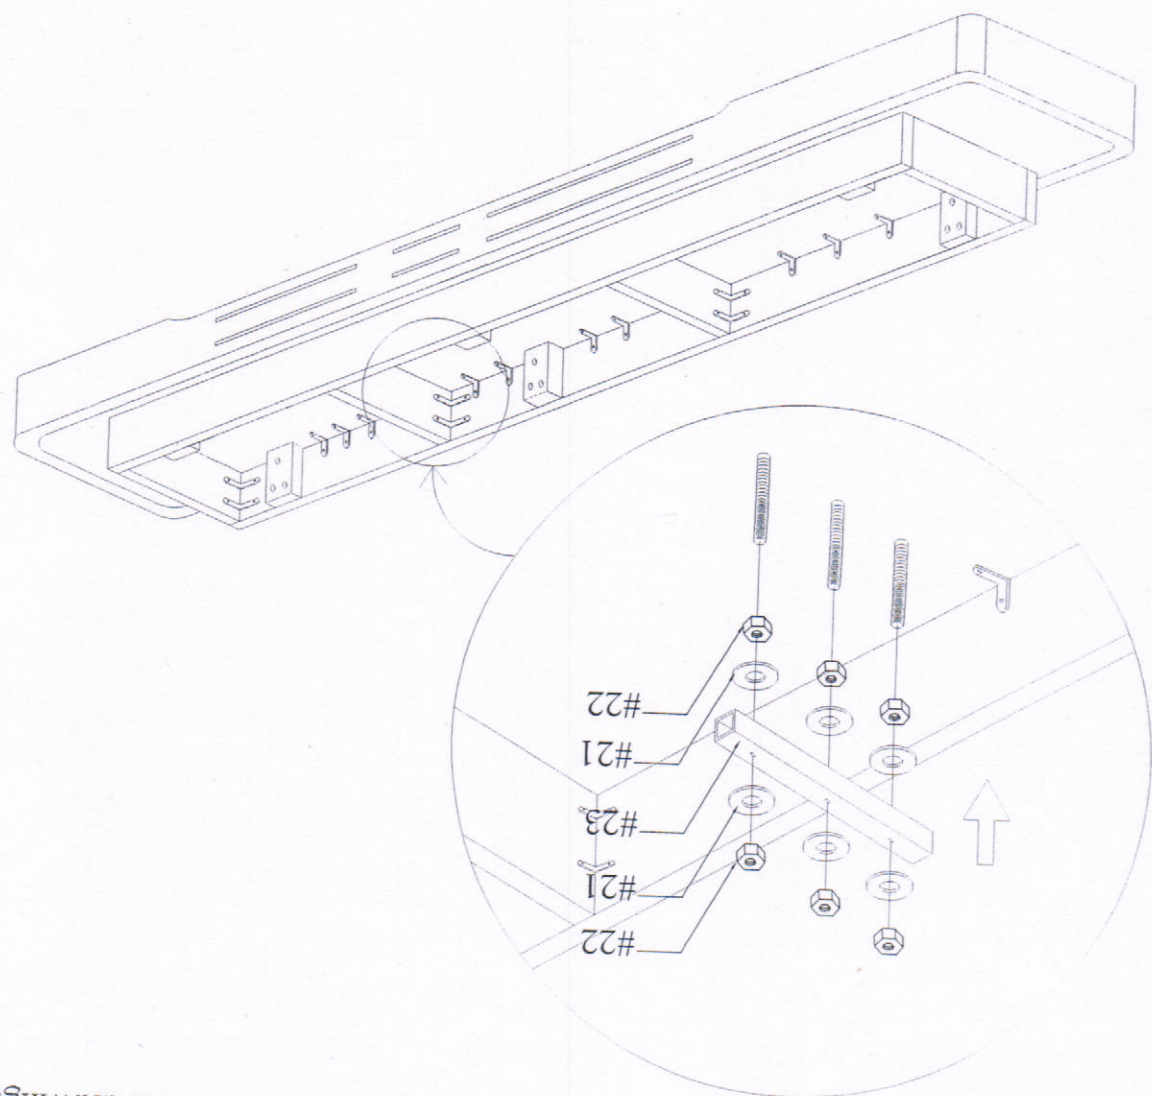

Step 5: Use bolt(#16) and nut(#17) to fix leg post(#2) and center leg panel(#3) together to form side leg. Use bolt(#16) and nut(#17) to fix leg post(#2) and center leg panel(#8) together to form center leg.

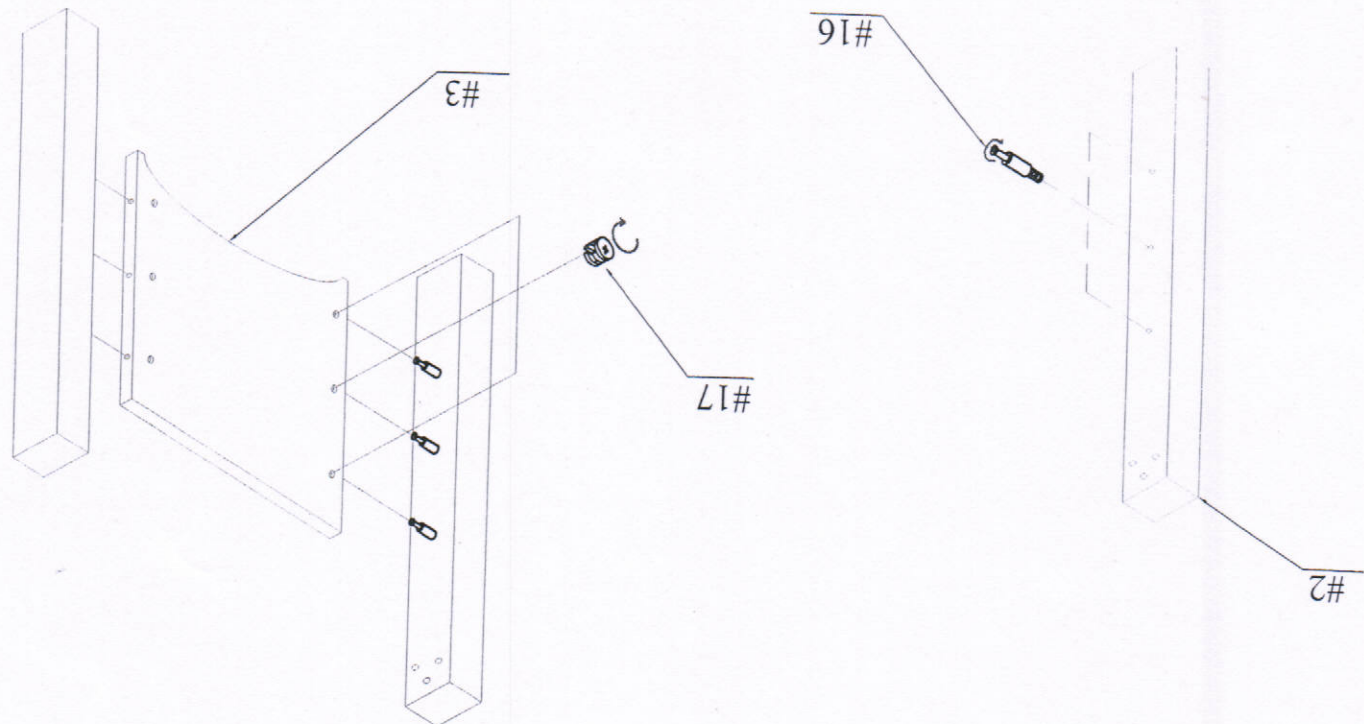

Step 6: Use blot(#19) and washer(#20) to fix legs to cradle(#1), then install leg levelers(#18) on leg post.

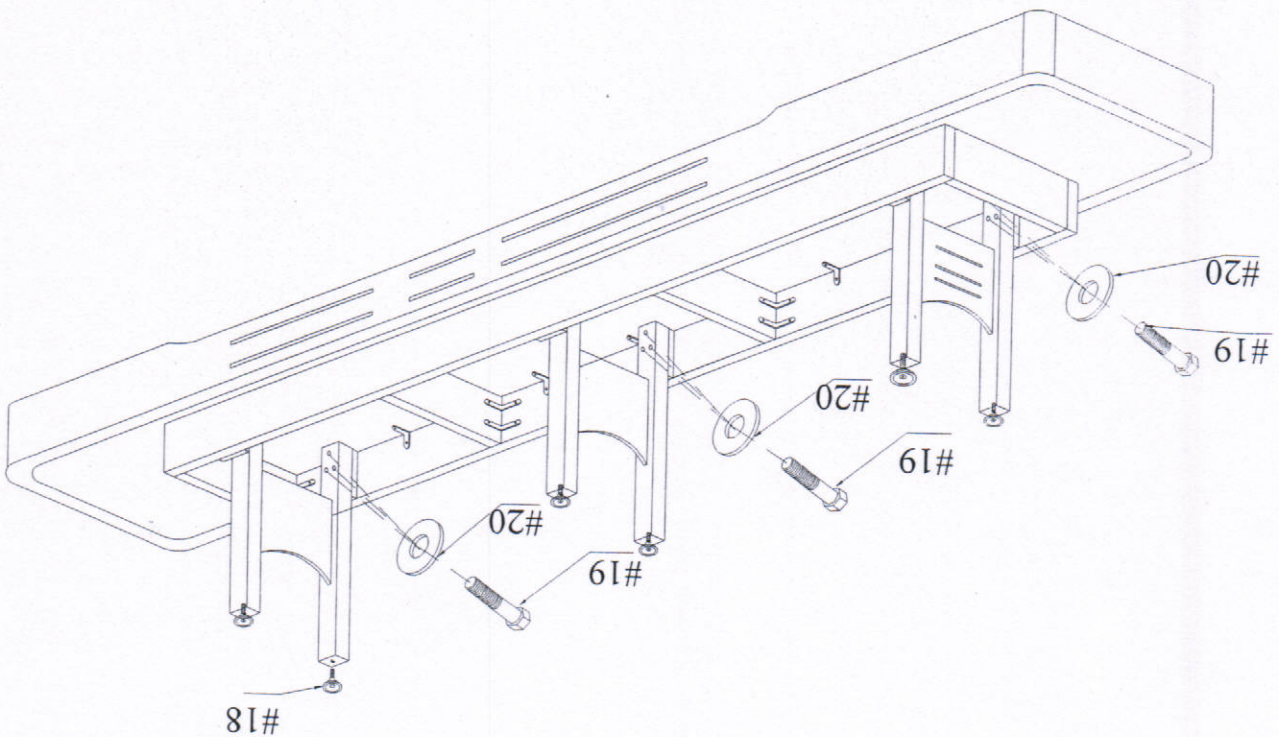

Step 7: Turn the table right side up, use screw(#11) to fix slide scoring unit to cradle(#1), then put on wood cap(#12) to hide the screws.

