


WARNING

·Please don't fasten all screws until you assemble full bed.


A		M6X16	x45
B		M6X35	x21
C		M6X40	x16
D		M6X55	x24
E		M6x18	x61
F			x47
G			x40
H			x8
I			x4
J		M4	x2
K			x2

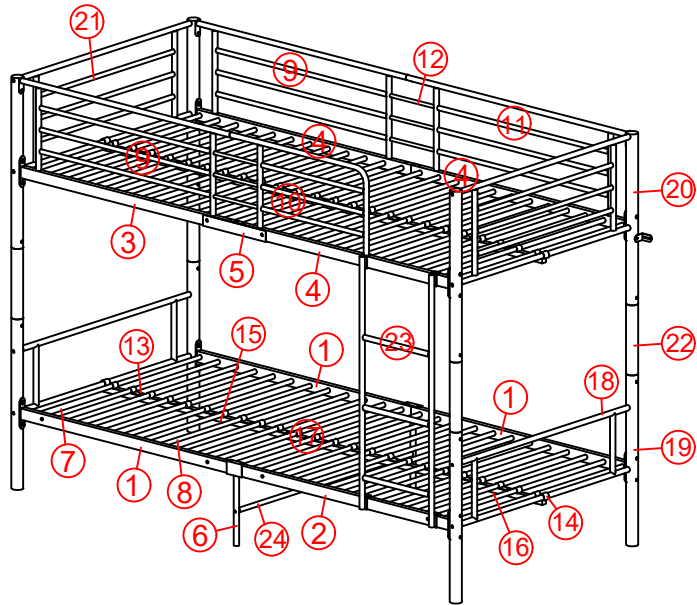



A		M6X16	x1
B		M6X35	x1
C		M6X40	x1
D		M6X55	x1
E		M6x18	x1
F			x1
G			x1


1 20x40x1000 3x	B	2 20x40x1000 1x	B	3 20x40x1000 3x	B	4 20x40x1000 1x	B
5 2x	B	6 2x	B	7 16x938 8x	A	8 16x936 40x	A
9 2x	B	10 1x	B	11 1x	B	12 12x228 6x	B
13 22x	B	14 4x	B	15 20x20x1107 2x	B	16 20x20x936 2x	B
17 18x18x250 2x	B	18 2x	A	19 42x620 4x	B	20 42x620 4x	A
21 2x	A	22 42x355 4x	B	23 1x	A	24 16x906 1x	A

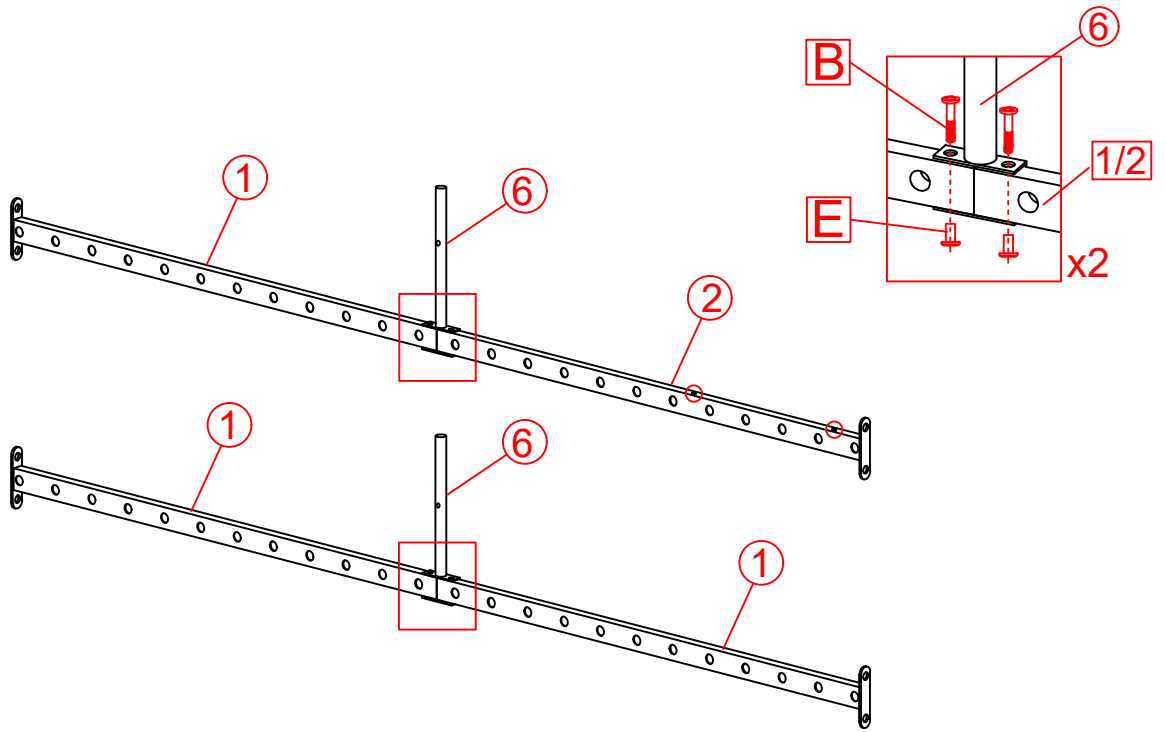

1



B		4
E		4

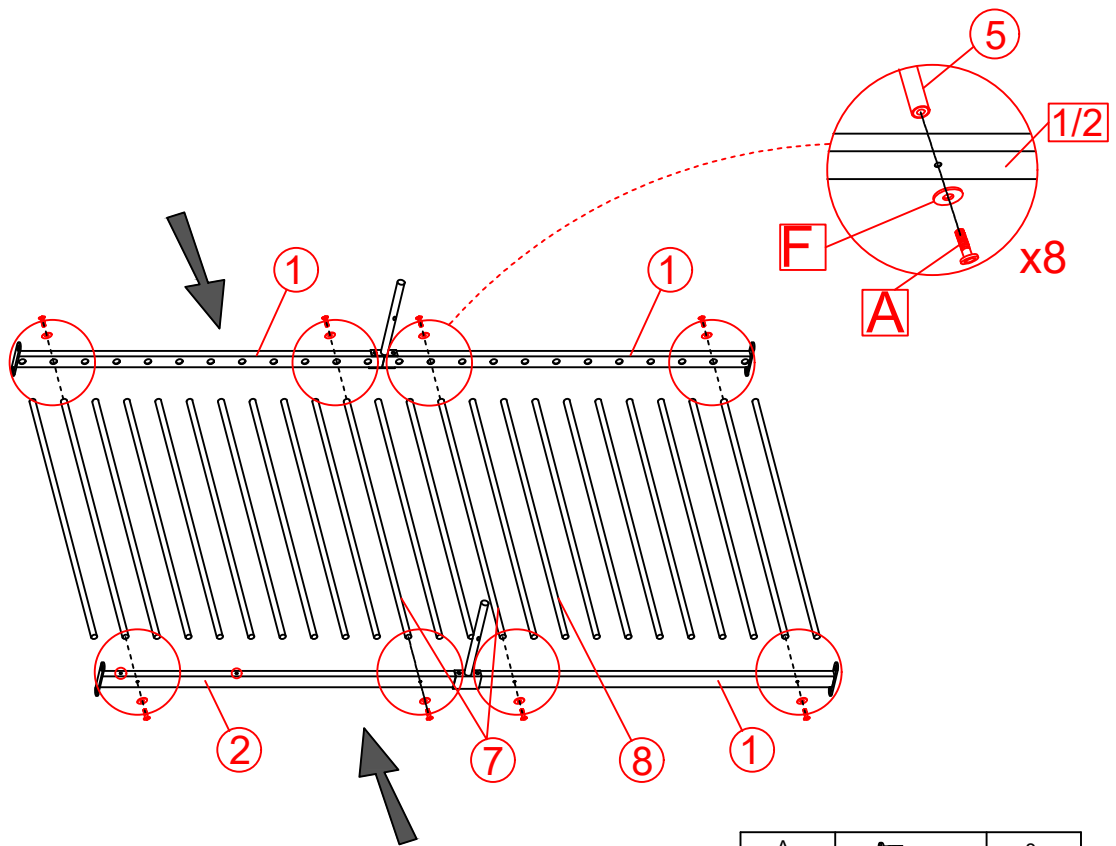
2



A		8
F		8


3

2X

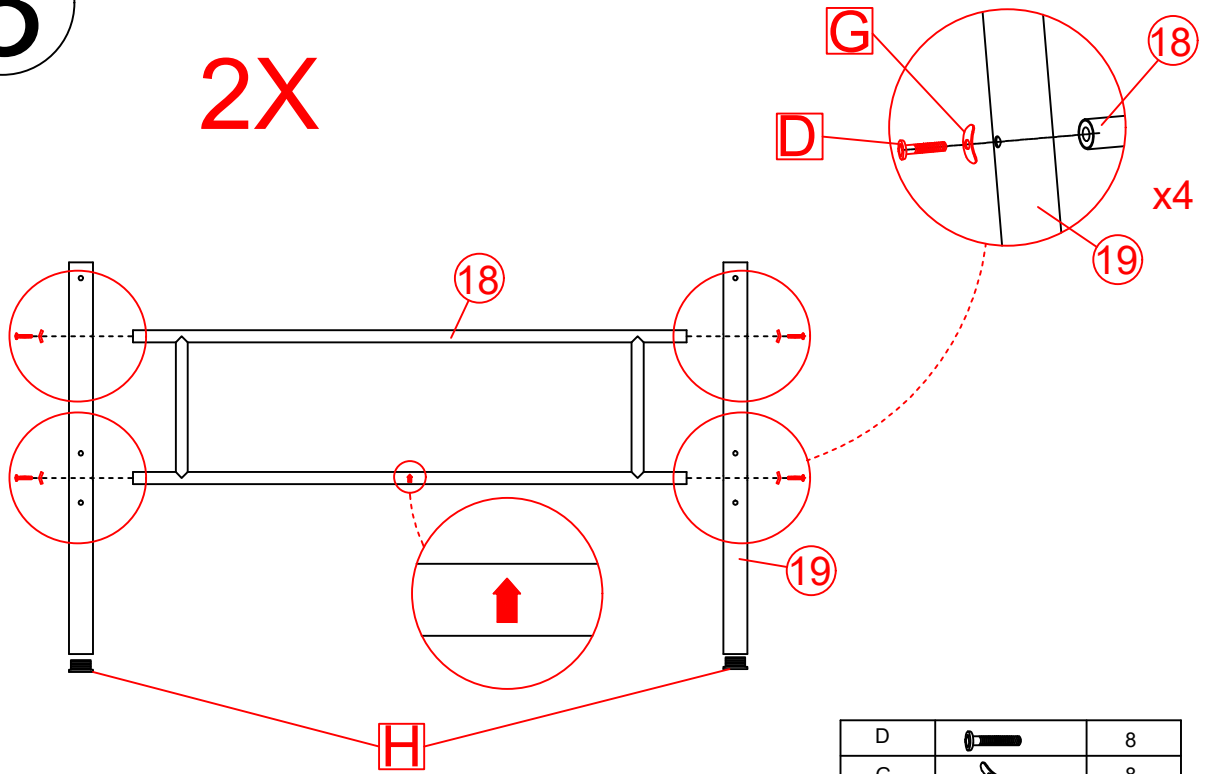




D		8
G		8
H		4

4

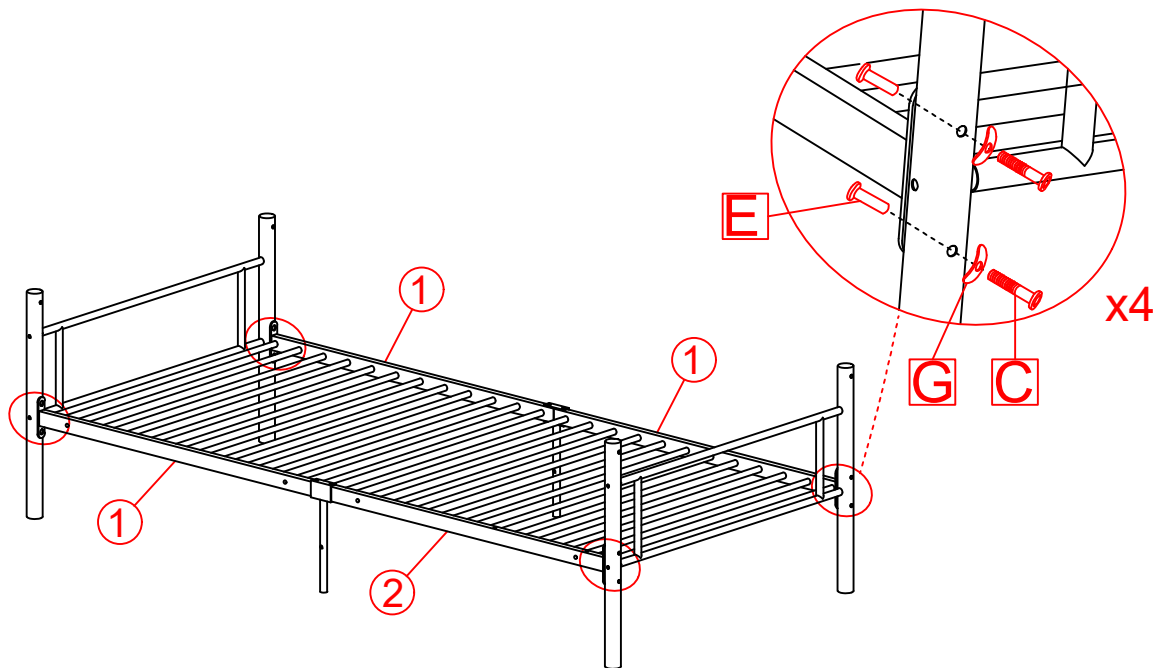




C		8
E		8
G		8

5

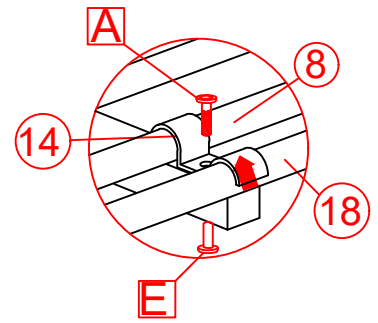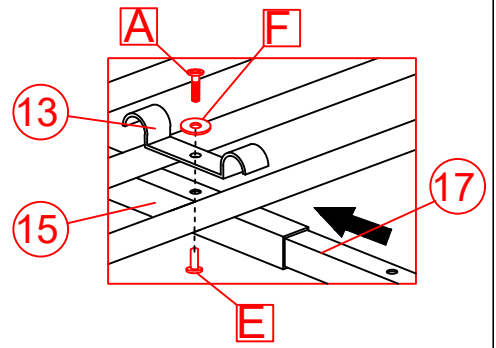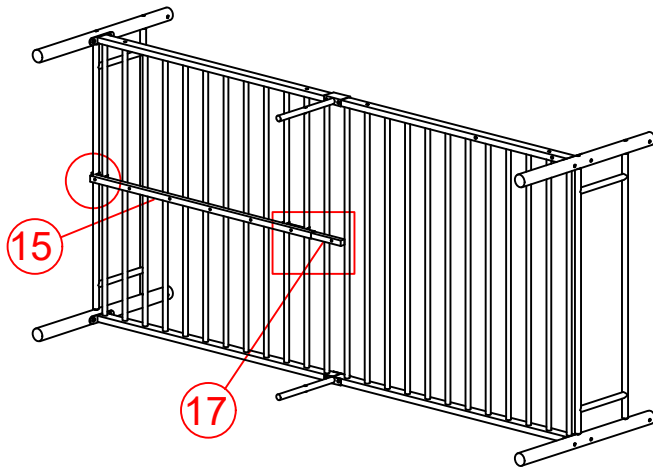


A		2
E		2
F		1

6

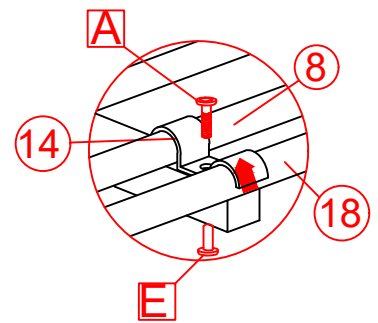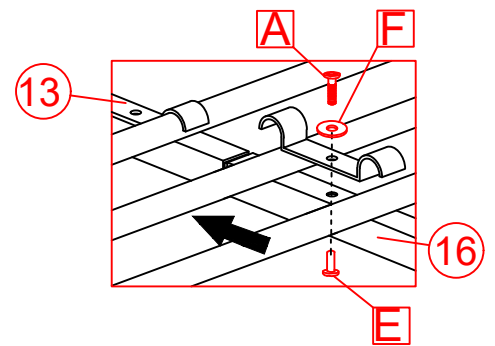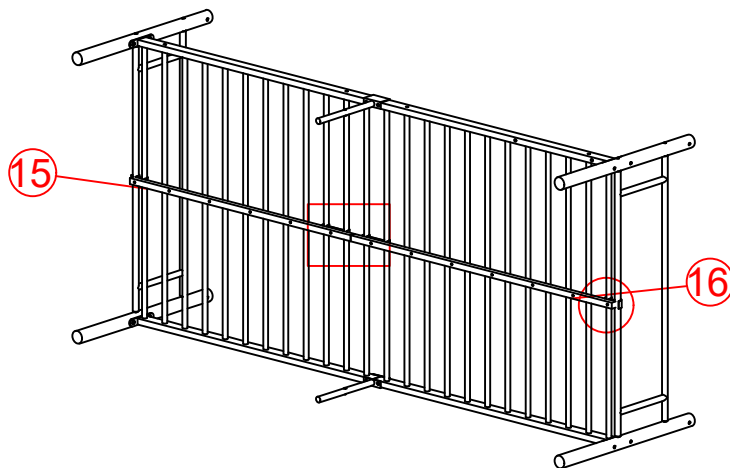


A		2
E		2
F		1

7

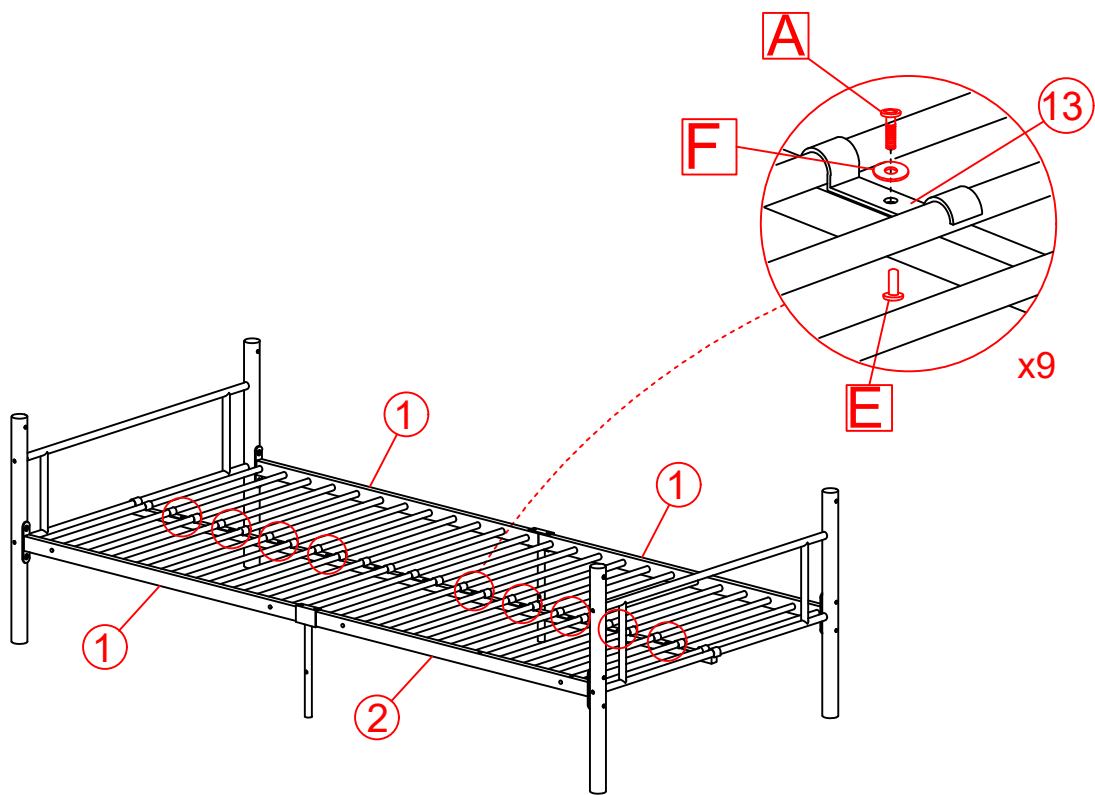


A		9
E		9
F		9

8

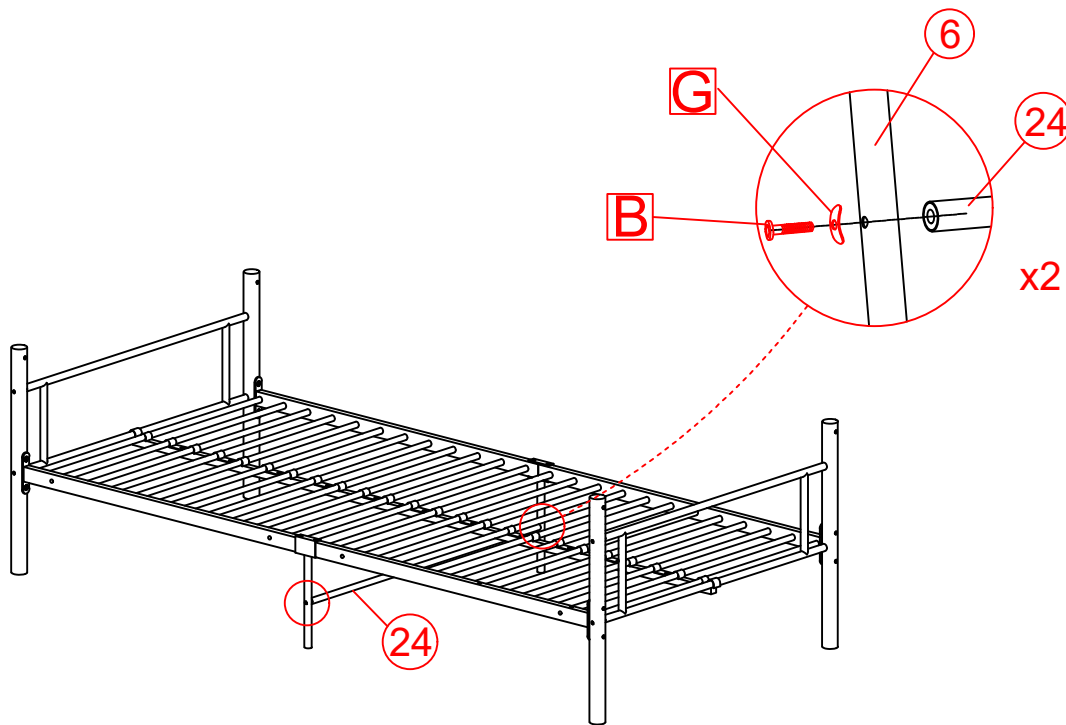


B		2
G		2

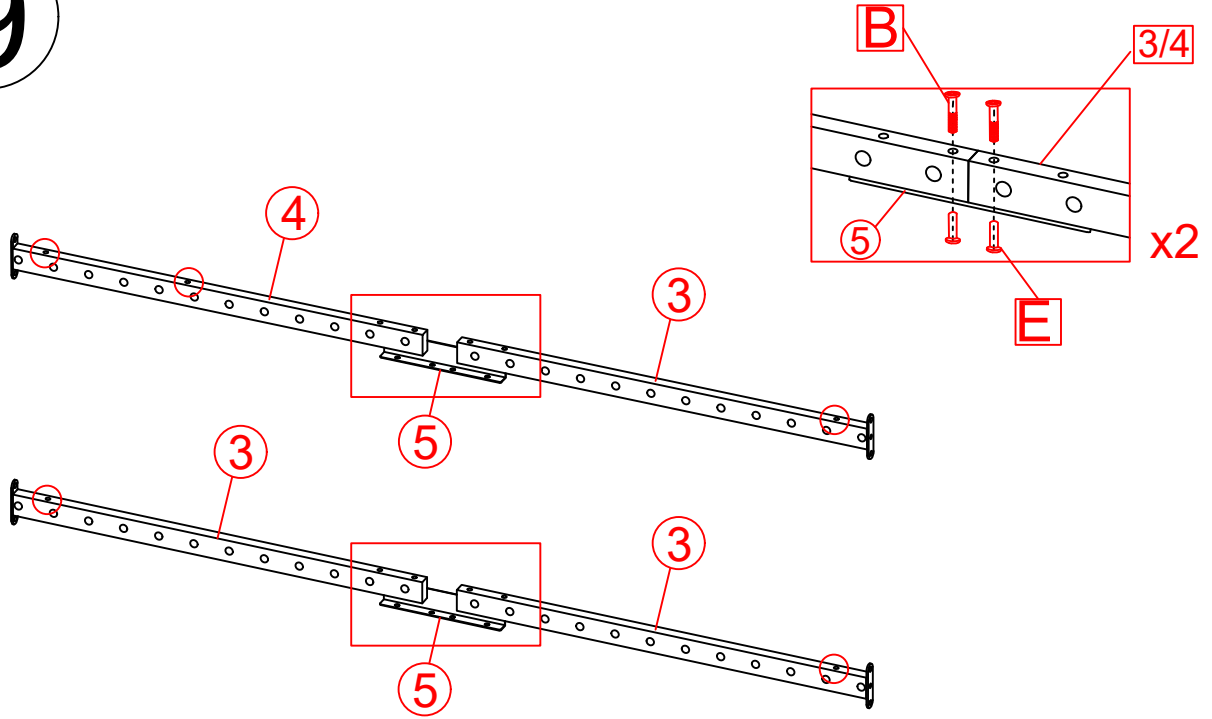

9



B		4
E		4

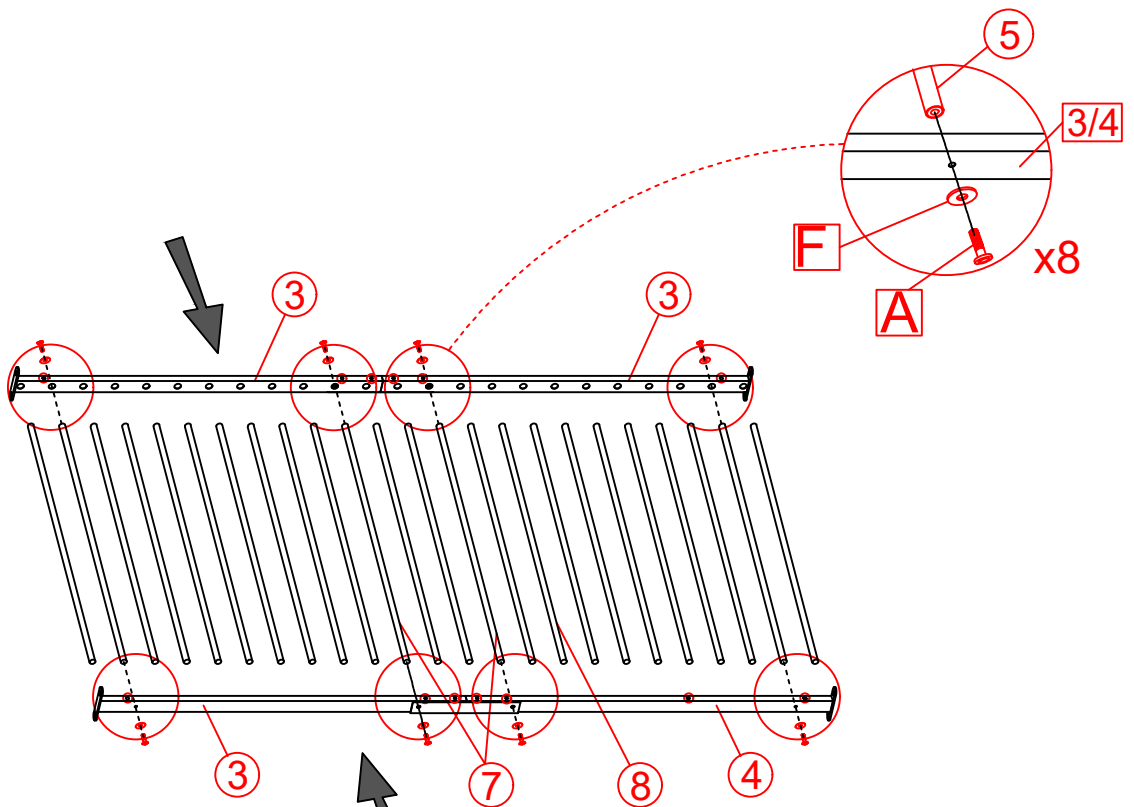
10



A		8
F		8


11

2X

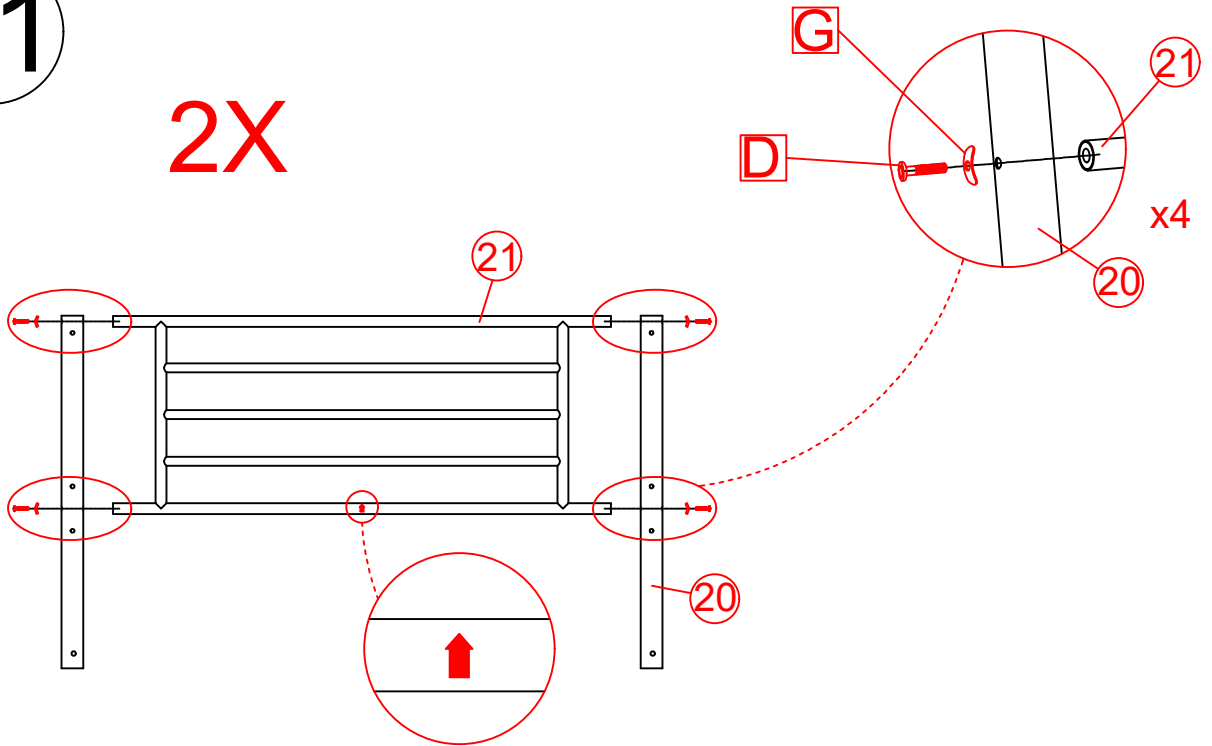




D		8
G		8

12

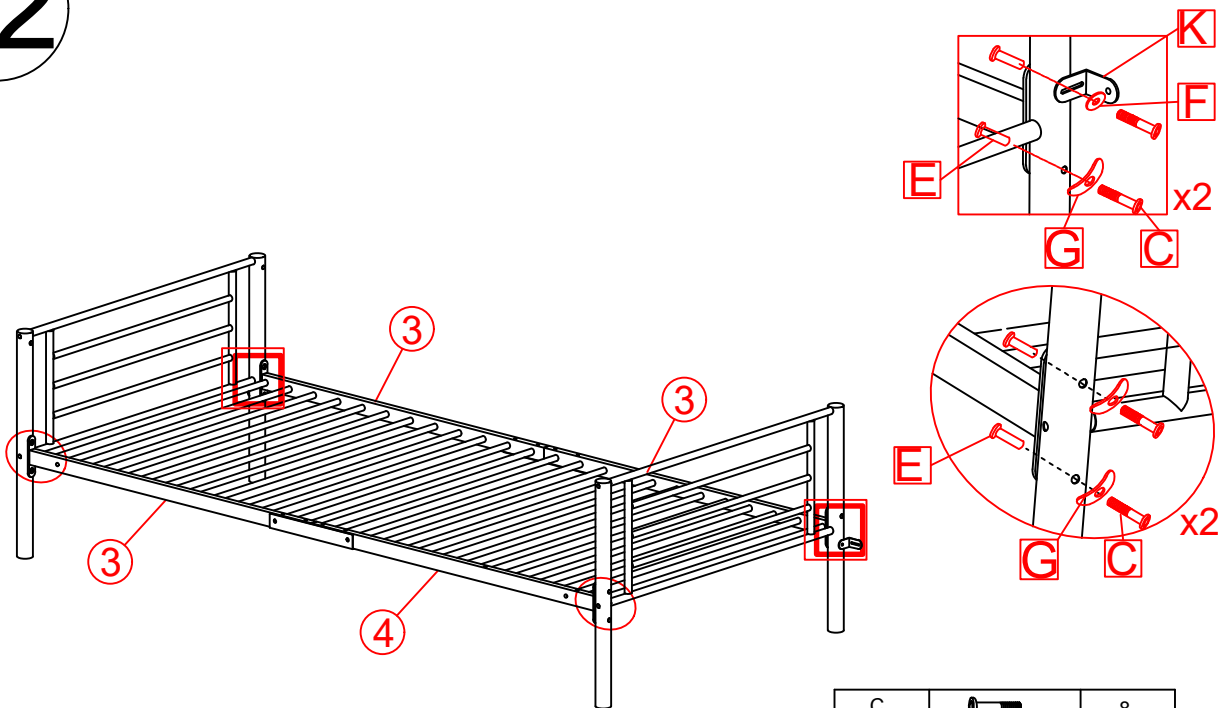




C		8
E		8
F		2
G		6
K		2

13

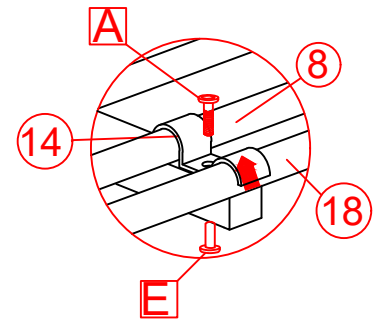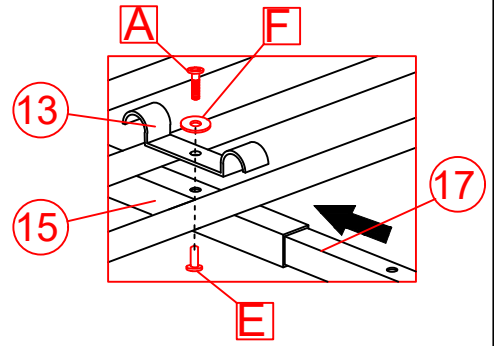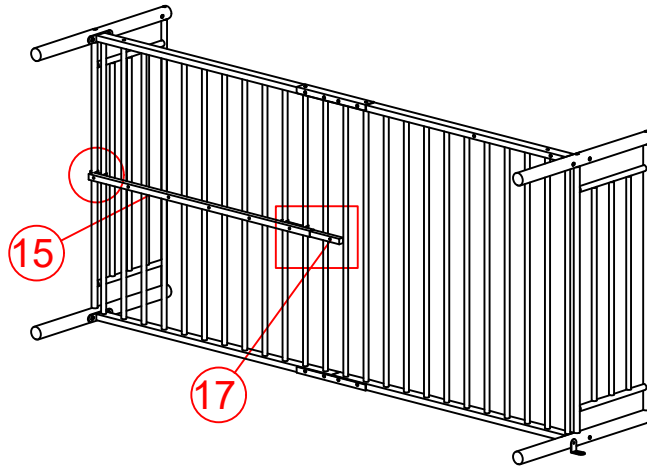


A		2
E		2
F		1

14

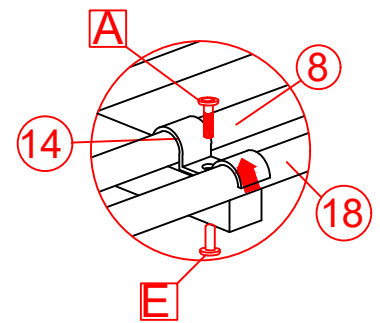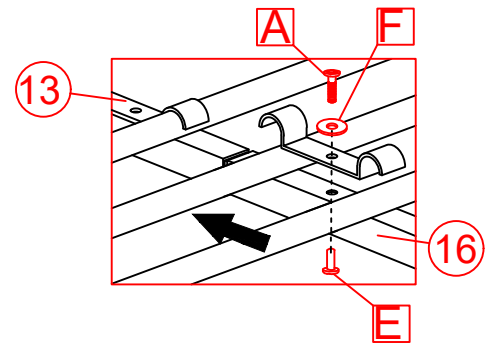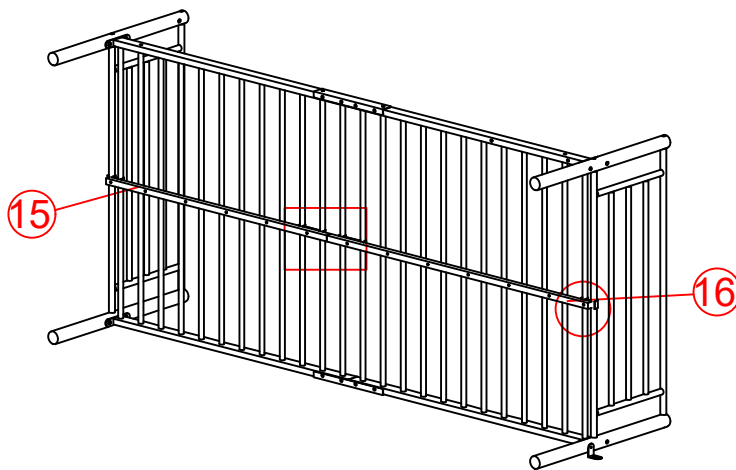


A		2
E		2
F		1

15

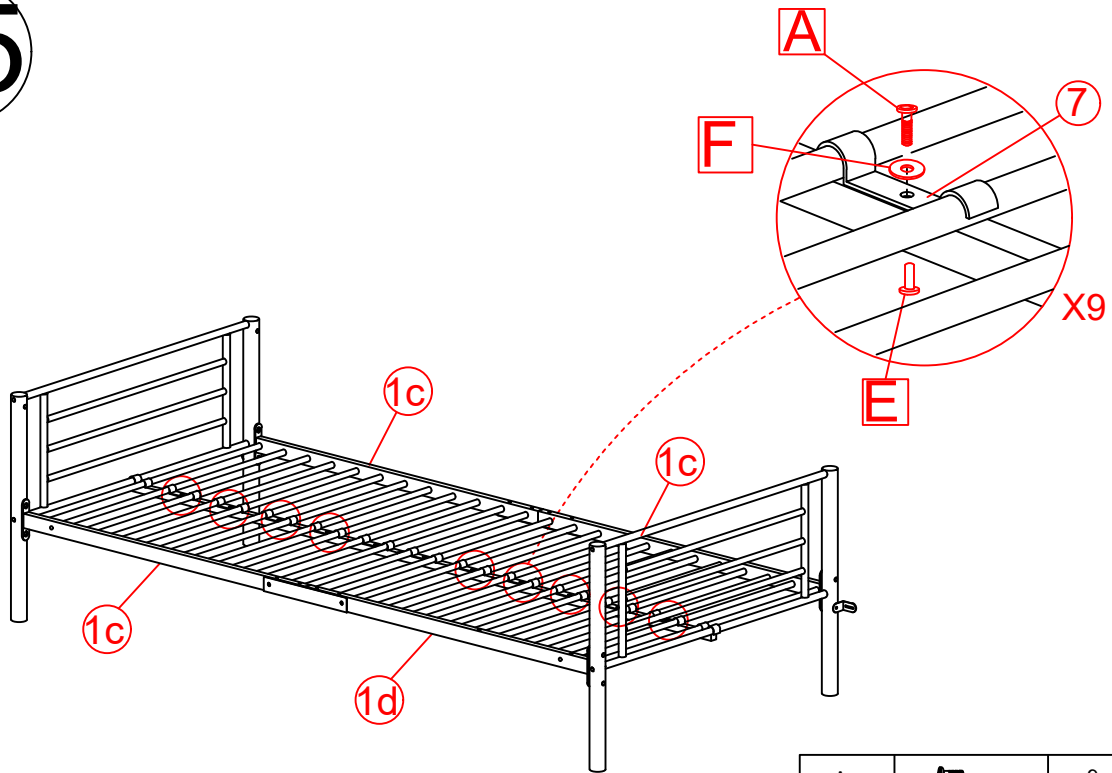


A		9
E		9
F		9

16

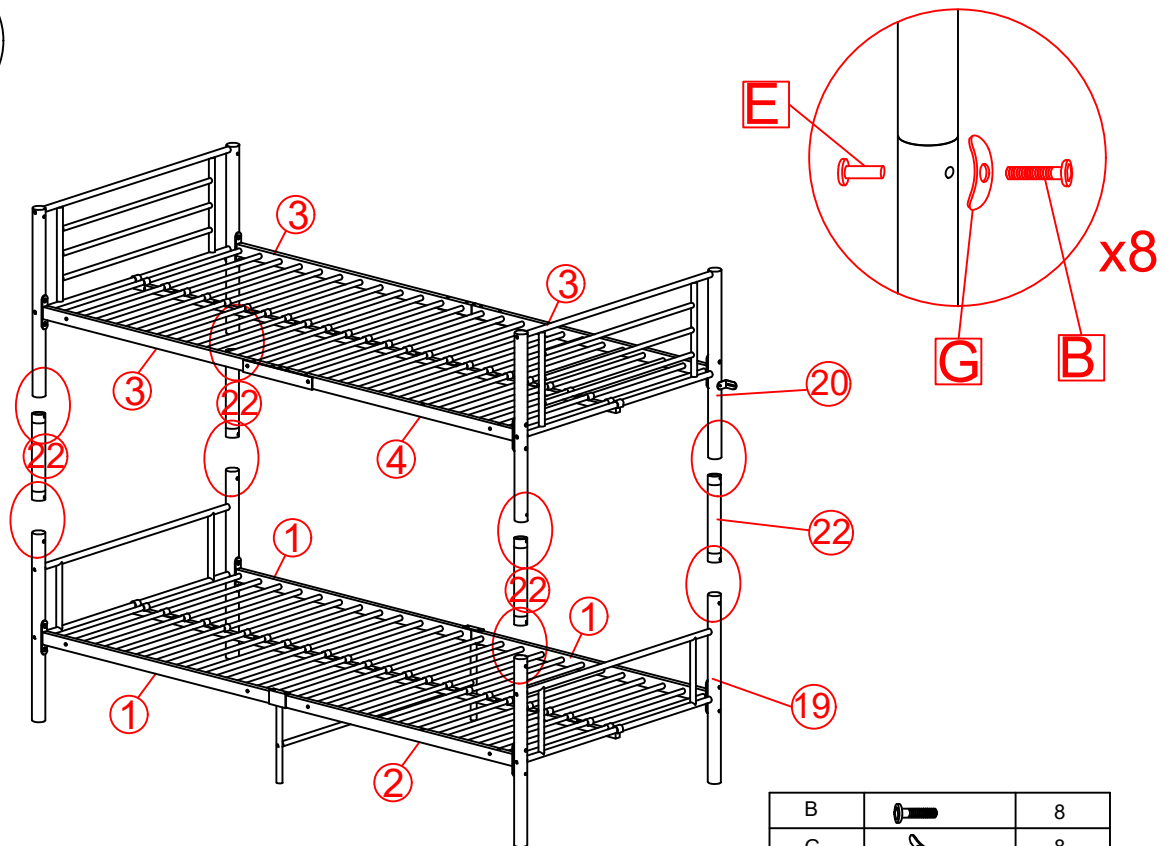





B		8
G		8
E		8

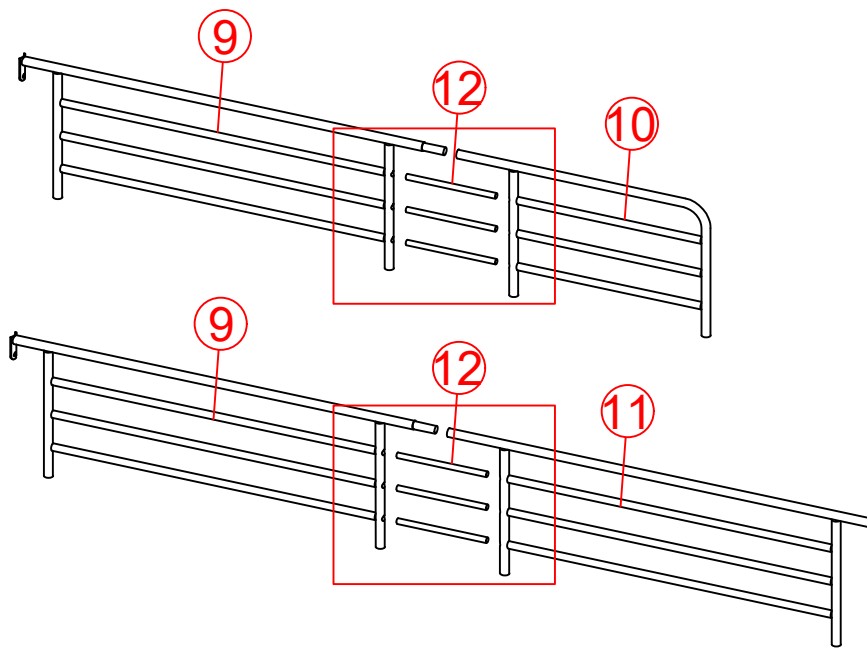17




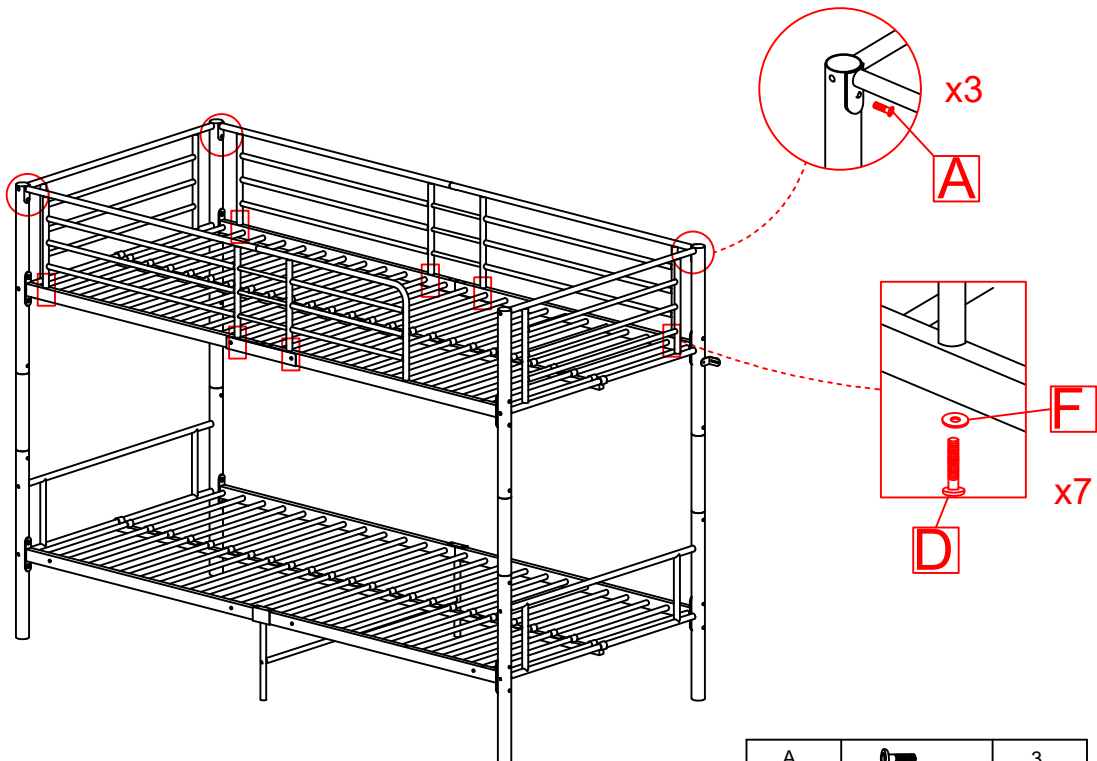


18




A		3
D		7
F		7


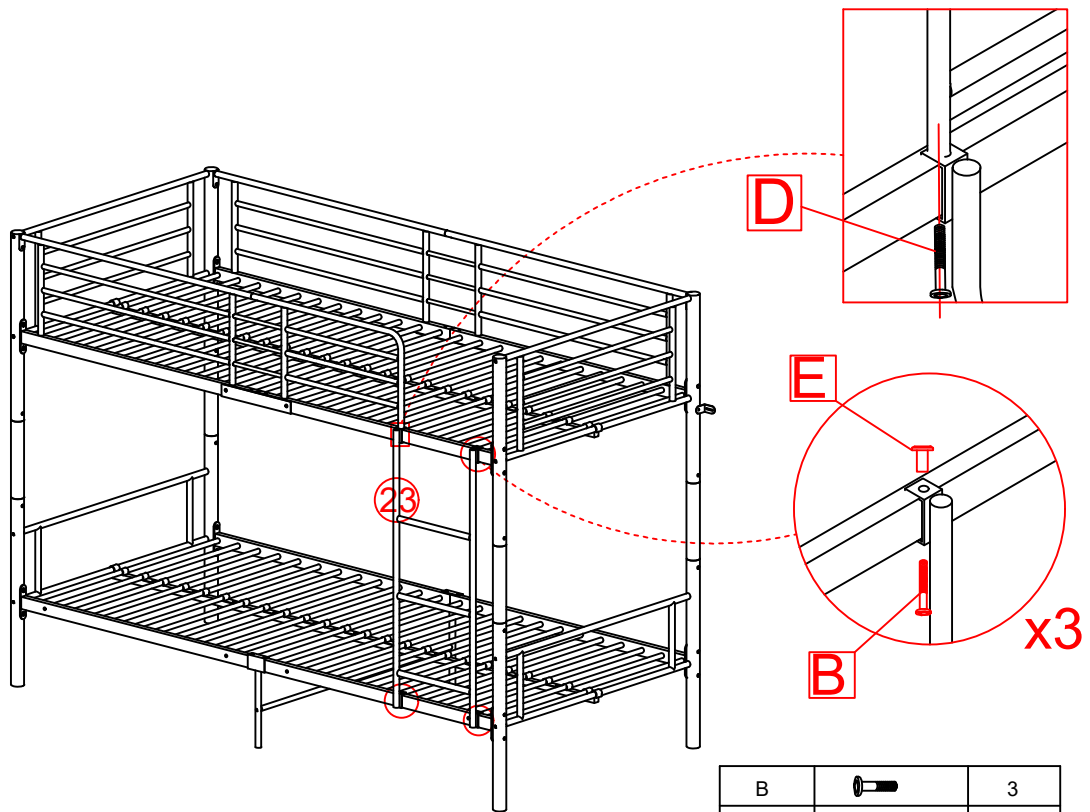
19



B		3
D		1
E		3

20

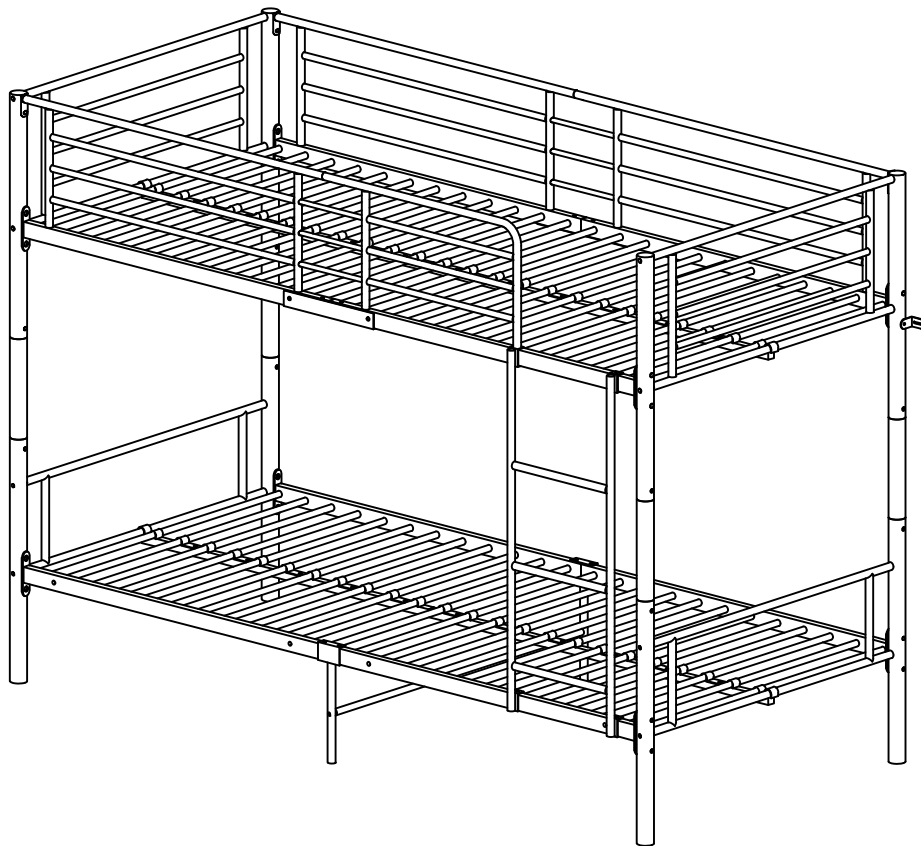

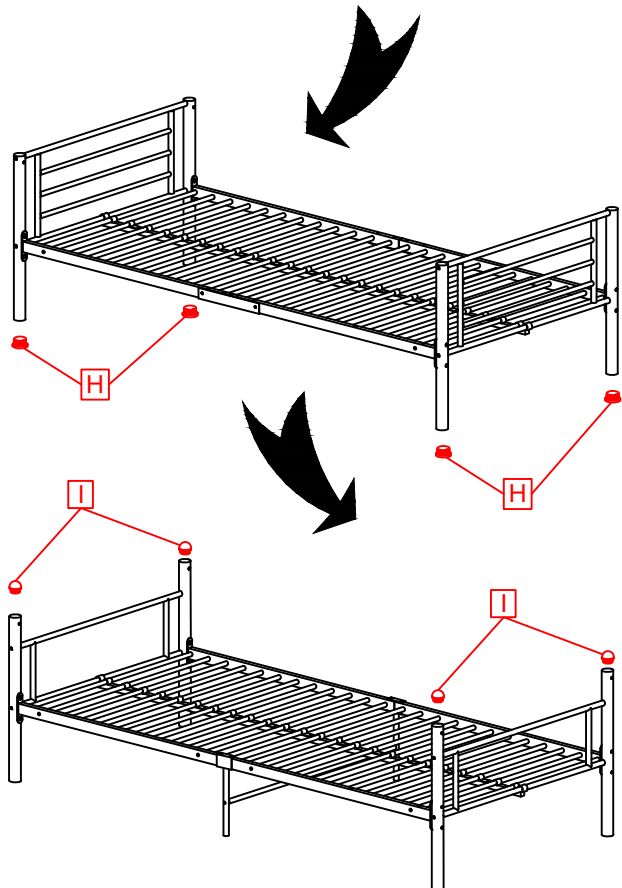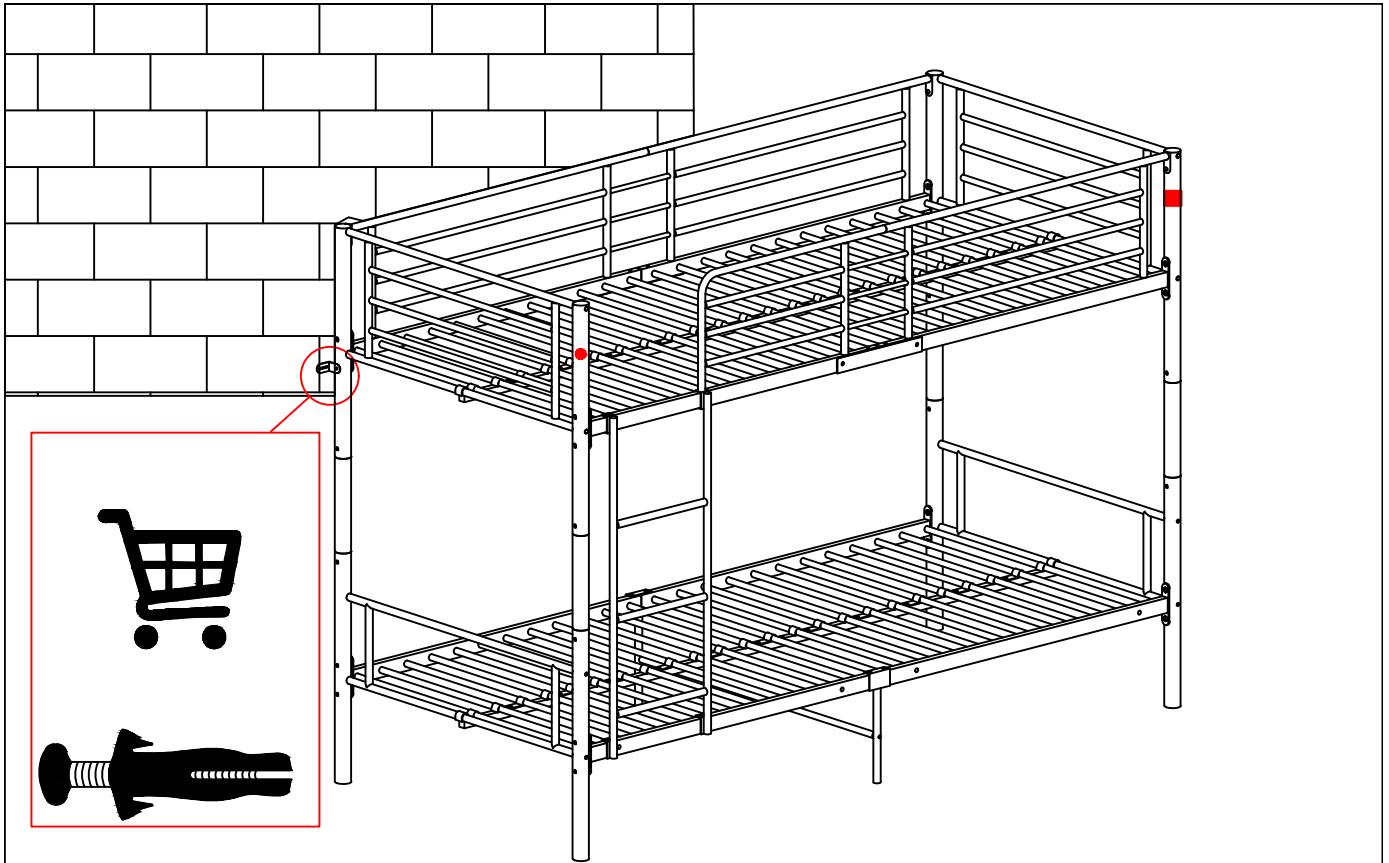

H		4
I		4

