


# Kitchen Cart

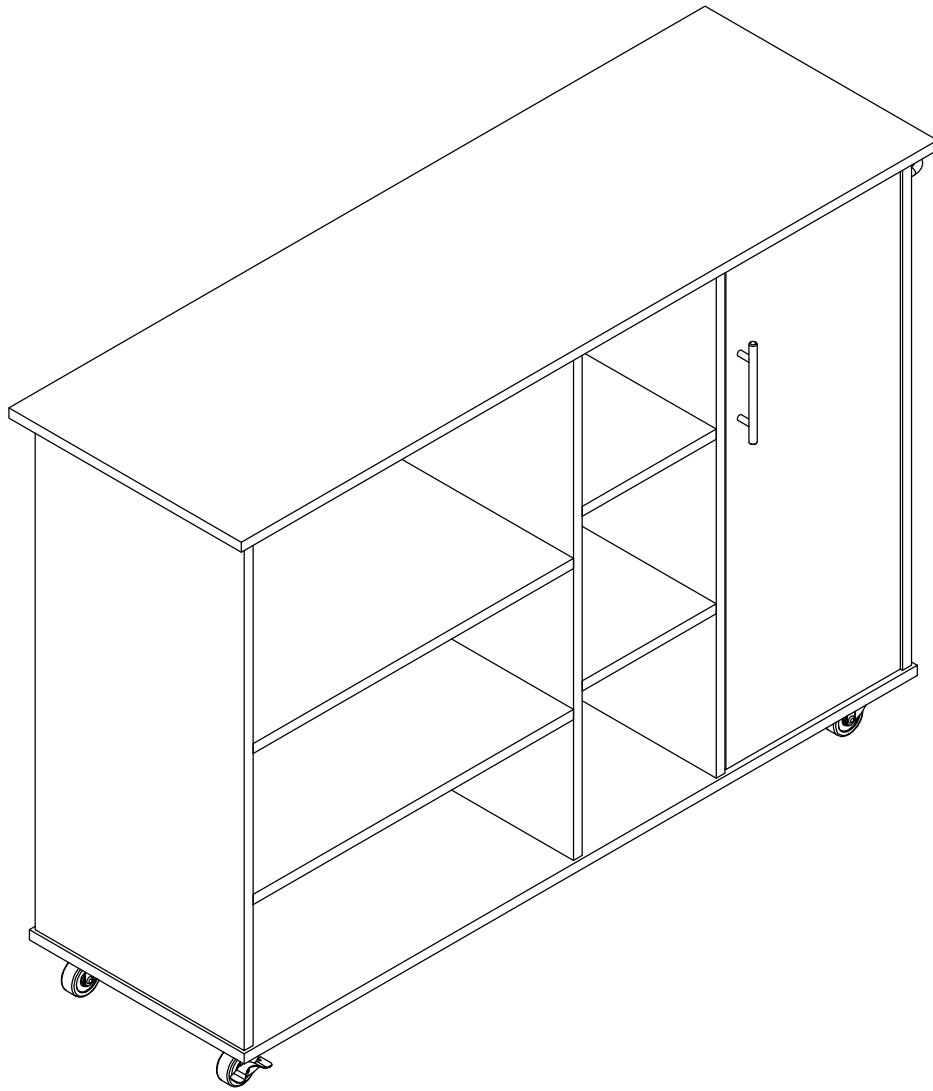

## Instruction Manual






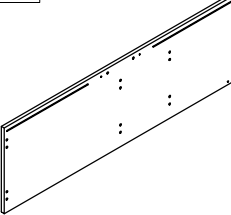







Thank you for shopping with us!

We appreciate your purchase and are ready to be at your service!

If you find parts missing, broken, or hard to put together or when you are not satisfied or have any valuable suggestions, please do not hesitate to contact us first!

We will definitely give you a satisfactory solution or answer then!

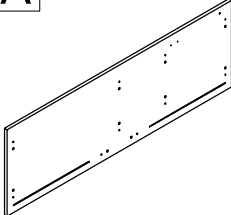
# PART LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Bottom Panel 1 PC	Left Fixed Shelf Panel 2 PCS	Right Fixed Shelf Panel 2 PCS	Back Post 1 PC	Left Back Panel 1 PC
<b>K</b> 	<b>L</b> 	<b>M</b> 		
Right Back Panel 1 PC	Adjustable Shelf 1 PC	Door 1 PC		

# HARDWARE LIST

<b>#1</b>  Ø7*38mm Screw	<b>#2</b>  Ø8*30mm Wood Dowel	<b>#3</b>  Ø3.5*25mm Screw	<b>#4</b>  Ø6*35mm Cam-bolt	<b>#5</b>  Ø15*9mm Cam-lock
8 PCS (Extra 2)	36PCS (Extra 6)	2PCS (Extra 1)	28PCS (Extra 4)	28PCS(Extra 4)
<b>#6</b>  3" Caster With Lock	<b>#7</b>  3" Caster	<b>#8</b>  Ø4.5*13mm Screw	<b>#9</b>  Back Bracket	<b>#10</b>  Ø3.5*14mm Screw
2 PCS	3 PCS	20 PCS (Extra 2)	8 PCS	10 PCS (Extra 2)
<b>#11</b>  150*32*Ø12mm Handle	<b>#12</b>  310*60*Ø10mm Towel Bar	<b>#13</b>  M4*22mm Round Head Bolt	<b>#14</b>  M5*25mm Bolt	<b>#15</b>  Ø3*12mm Screw
1 PC	1 PC	2 PCS (Extra 1)	2 PCS	1 PC
<b>#16</b>  Ø6.5mm Shelf Holder	<b>#17</b>  45*17*12mm Door Magnet	<b>#18</b>  30*22*1mm Door Small Plate		
4 PCS (Extra 1)	1 PC	1 PC		

# Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


## Tools Required

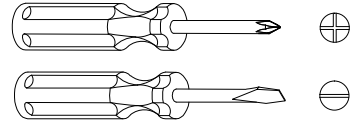


## INSERTING AND TIGHTENING CAM-BOLT

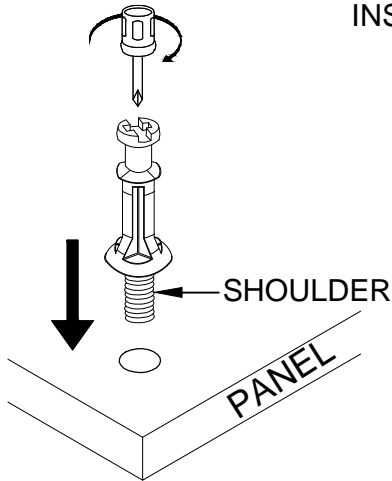

Place Cam-bolt on pre-drilled hole and screw in vertically

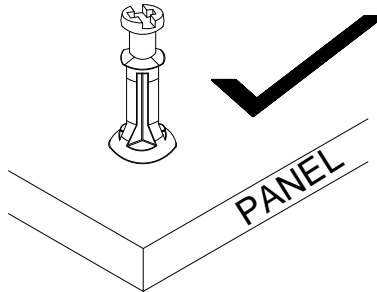


Shoulder is flushed (on the same level) with the panel.

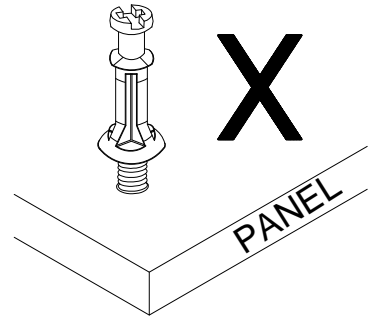


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


## INSERTING CAM-LOCK

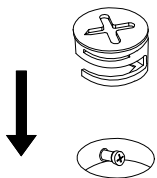

Insert Cam-lock with arrow align to Cam-bolt head

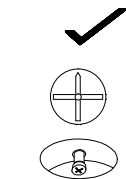


CORRECT

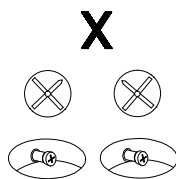

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

## TIGHTENING CAM-LOCK




Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.



Step 1.

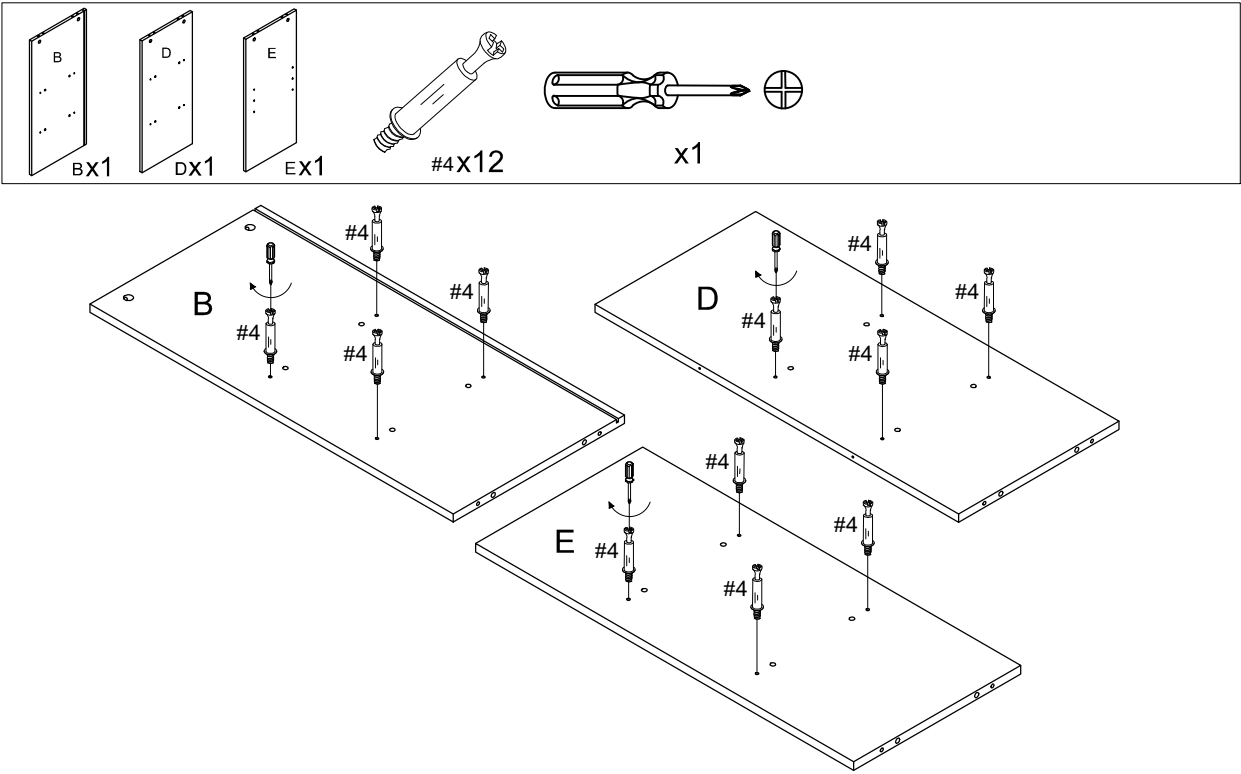



Step 2.

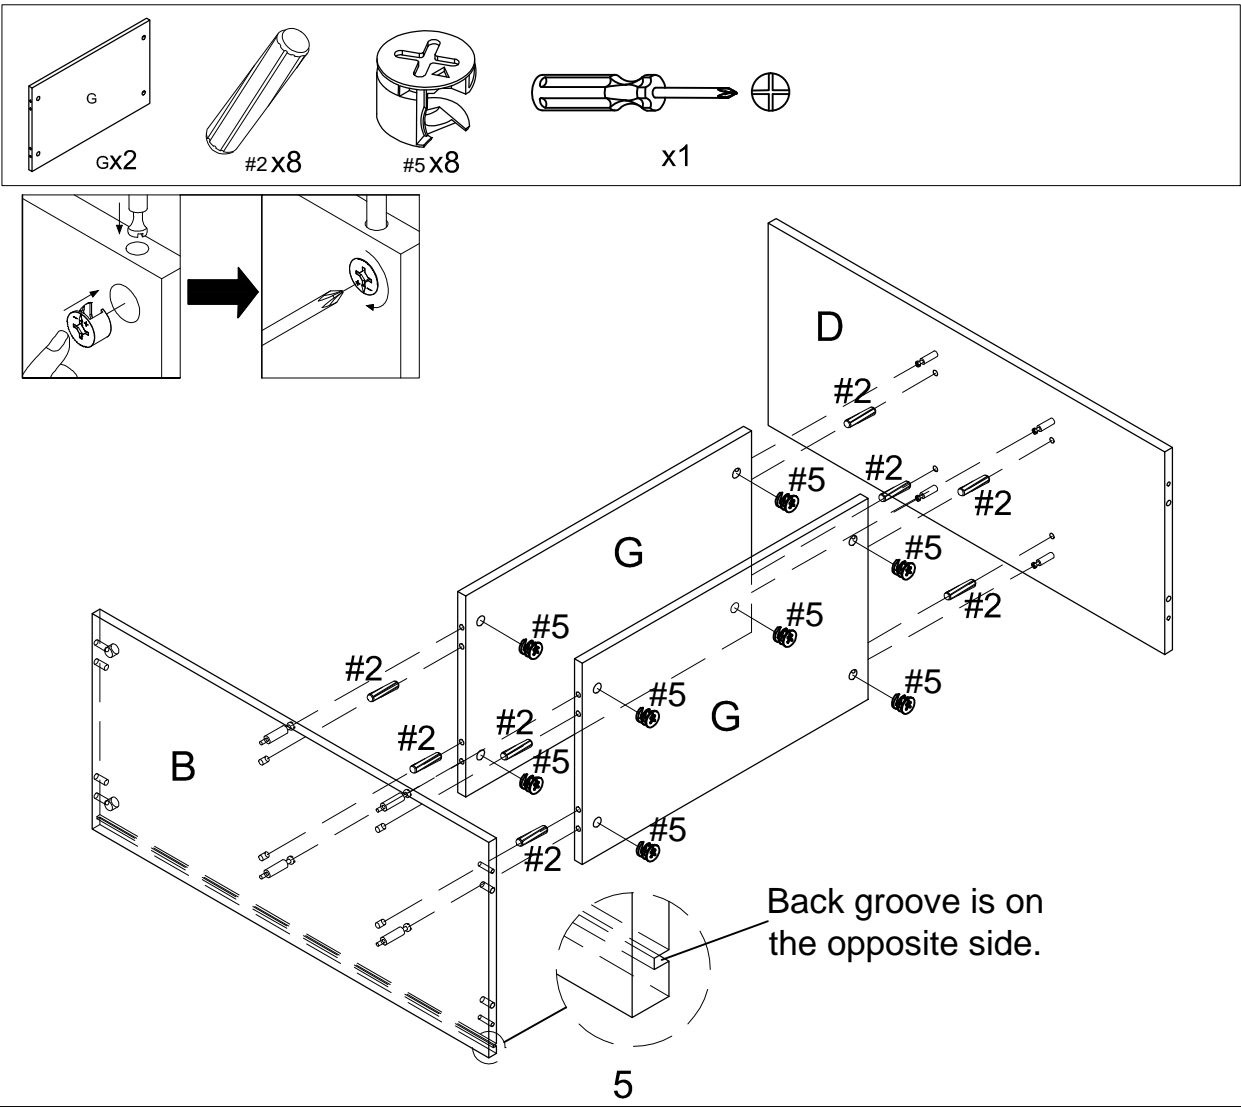



### Step 3.

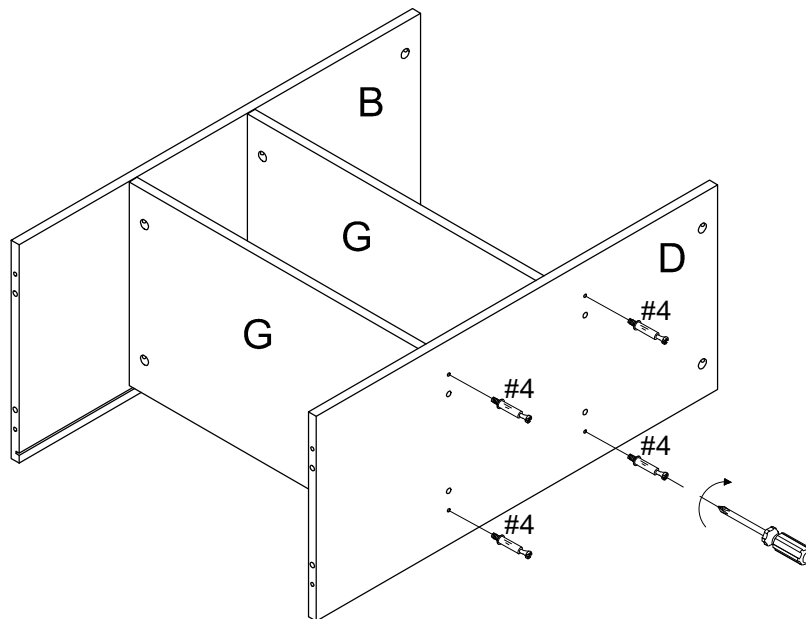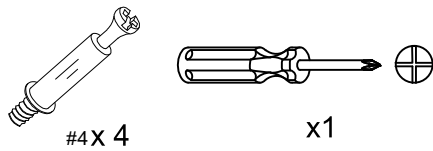



### Step 4.

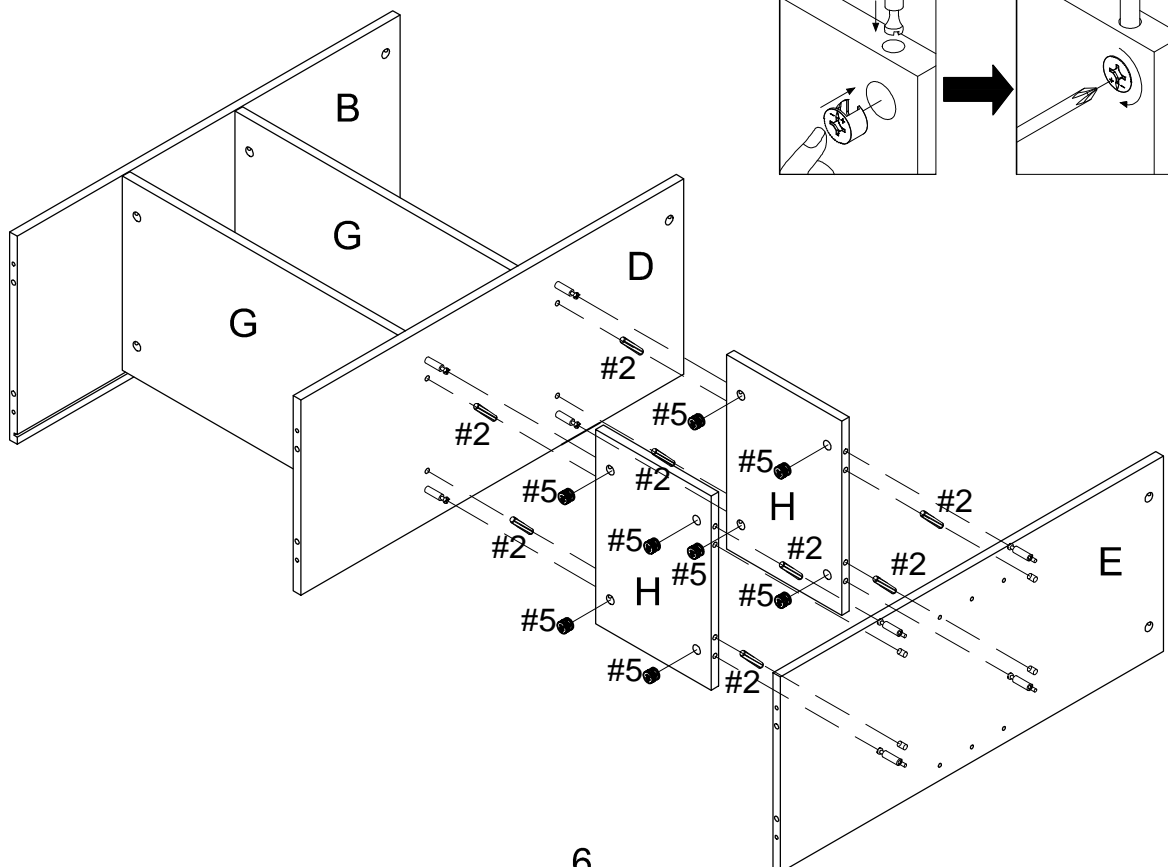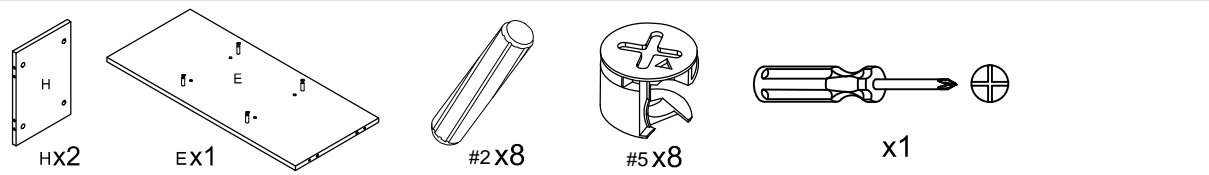


Step 5.

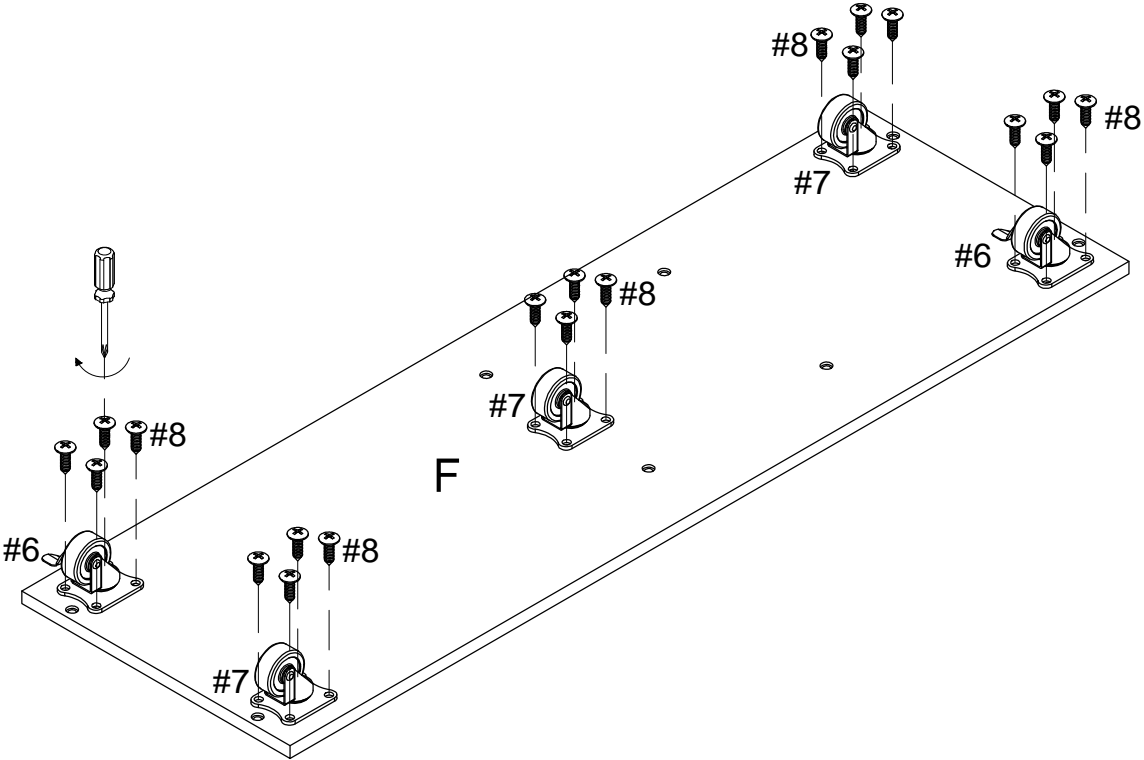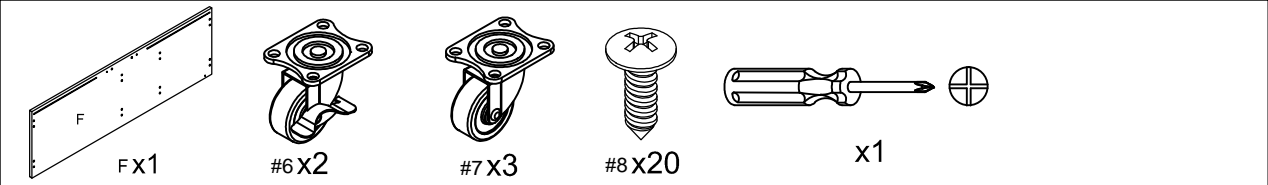




Step 6.

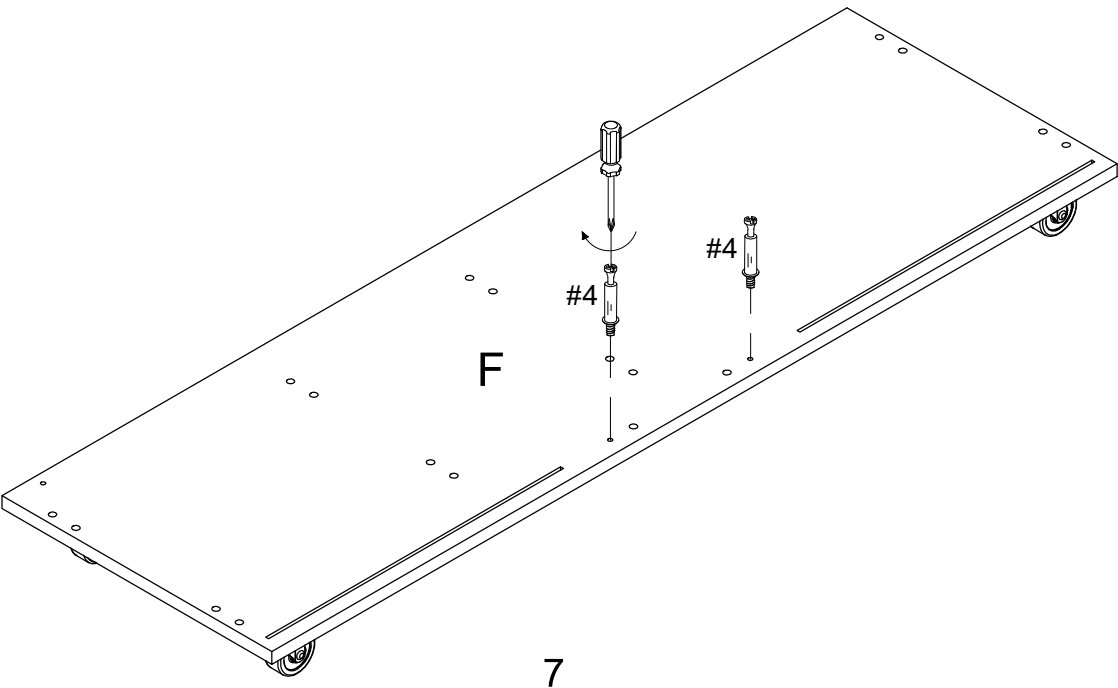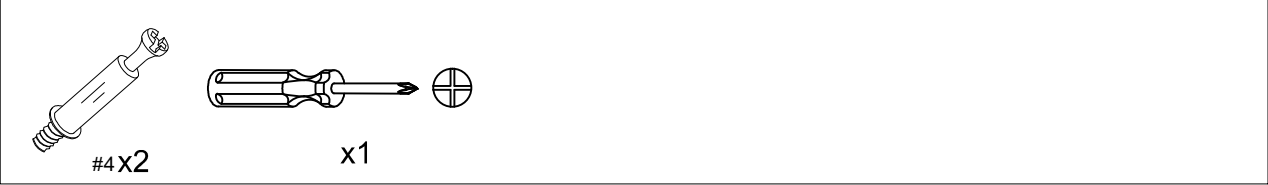

# Step 7.


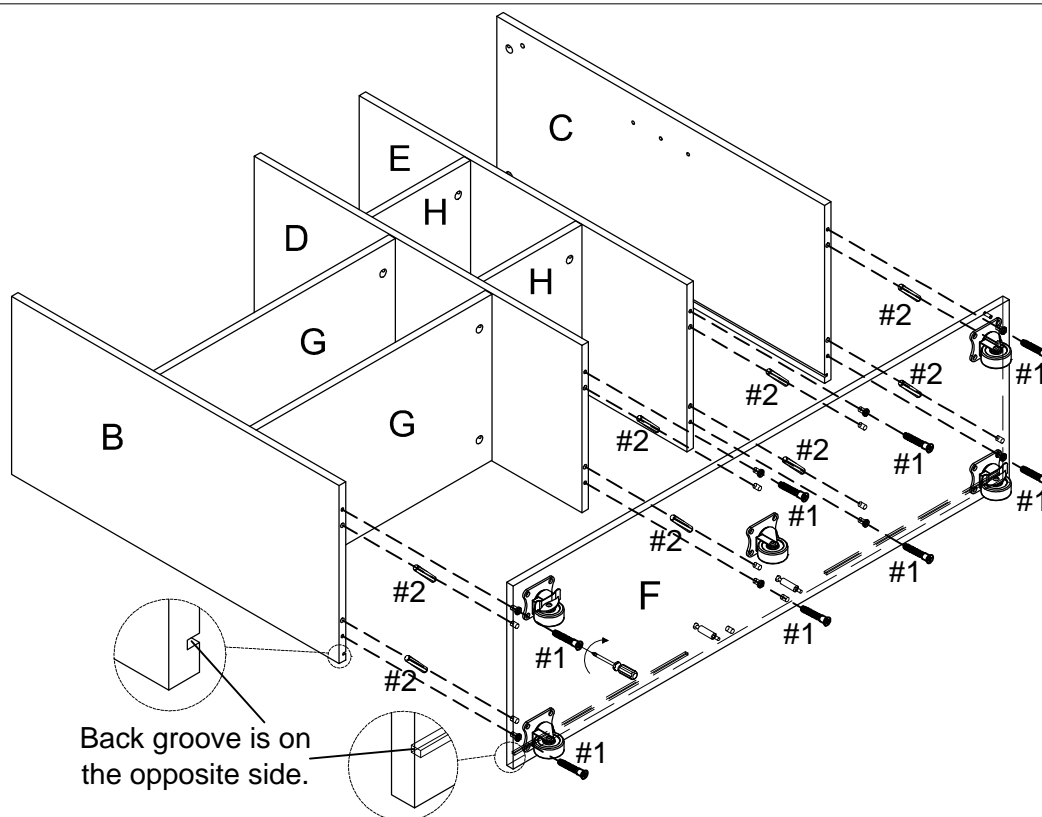


# Step 8.

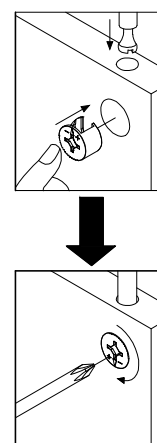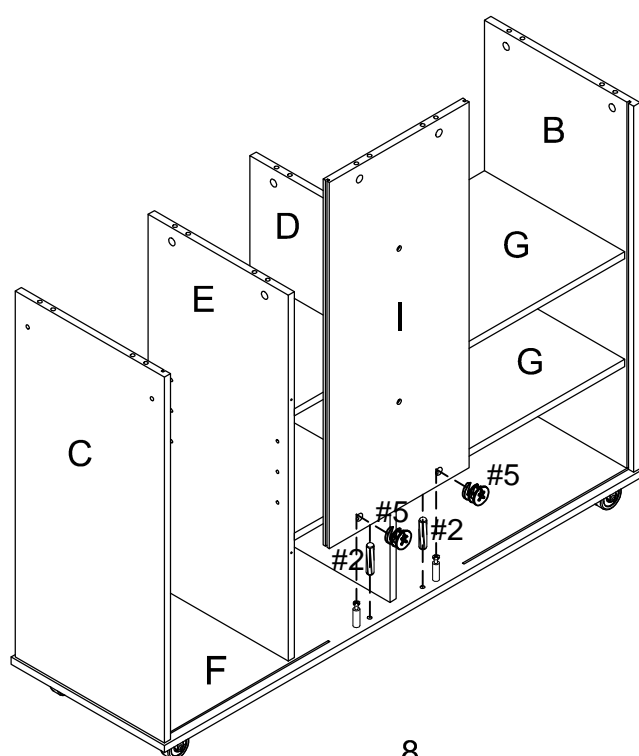
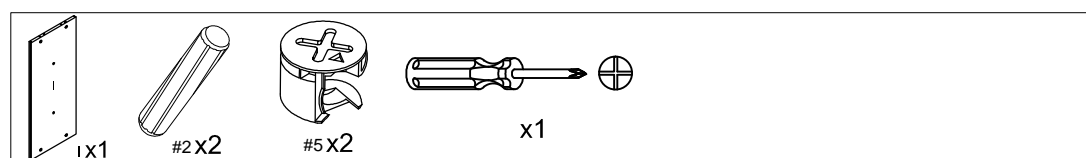





### Step 9.

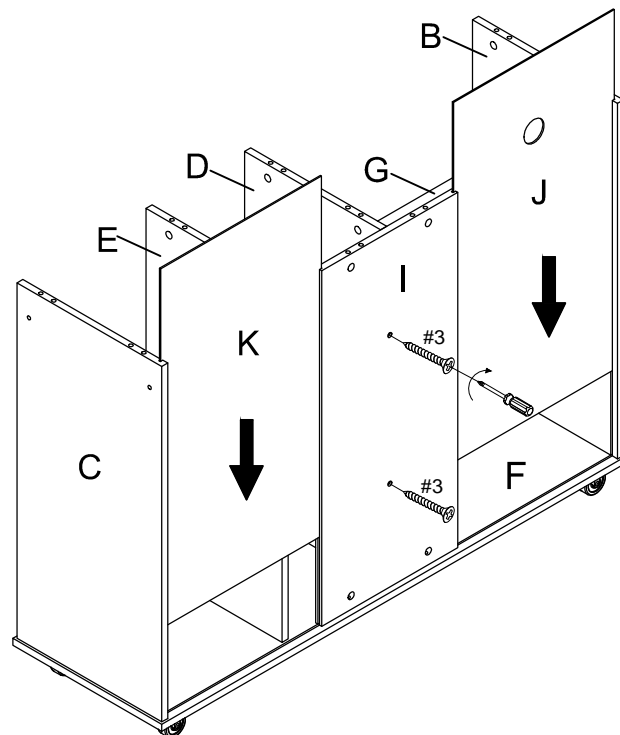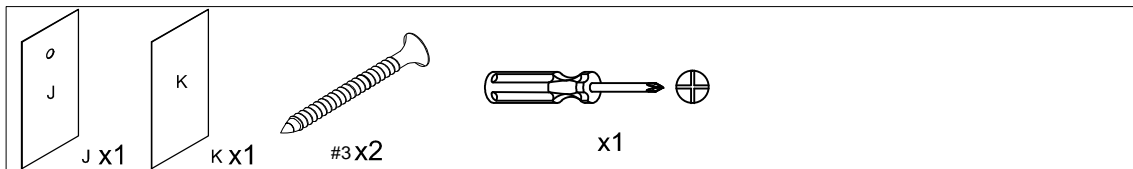


### Step 10.

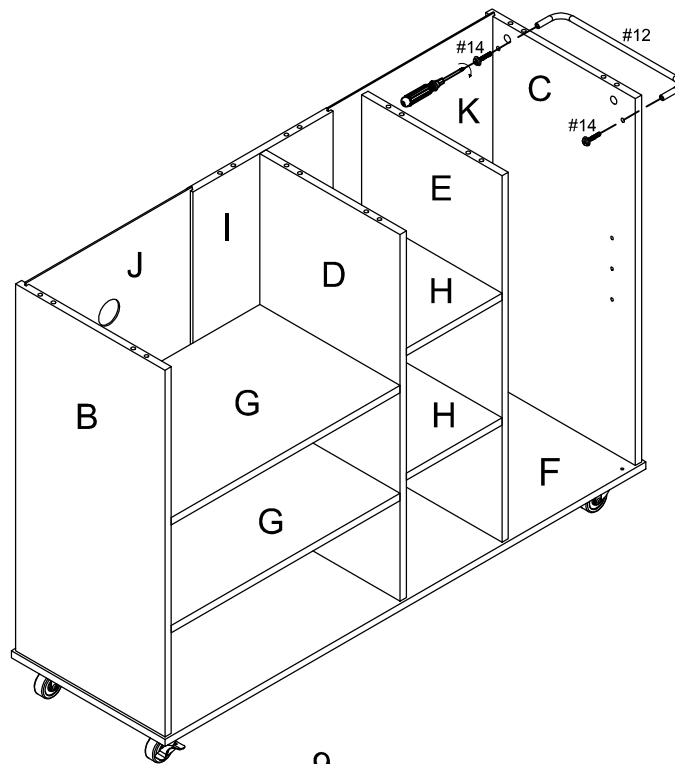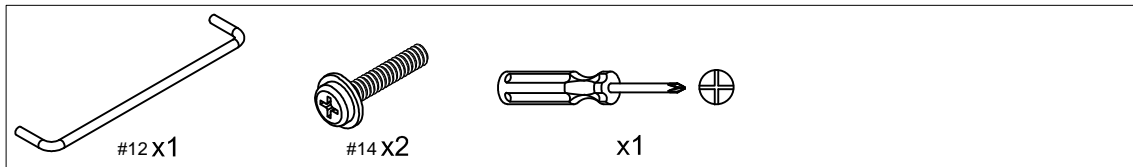




Step 11.

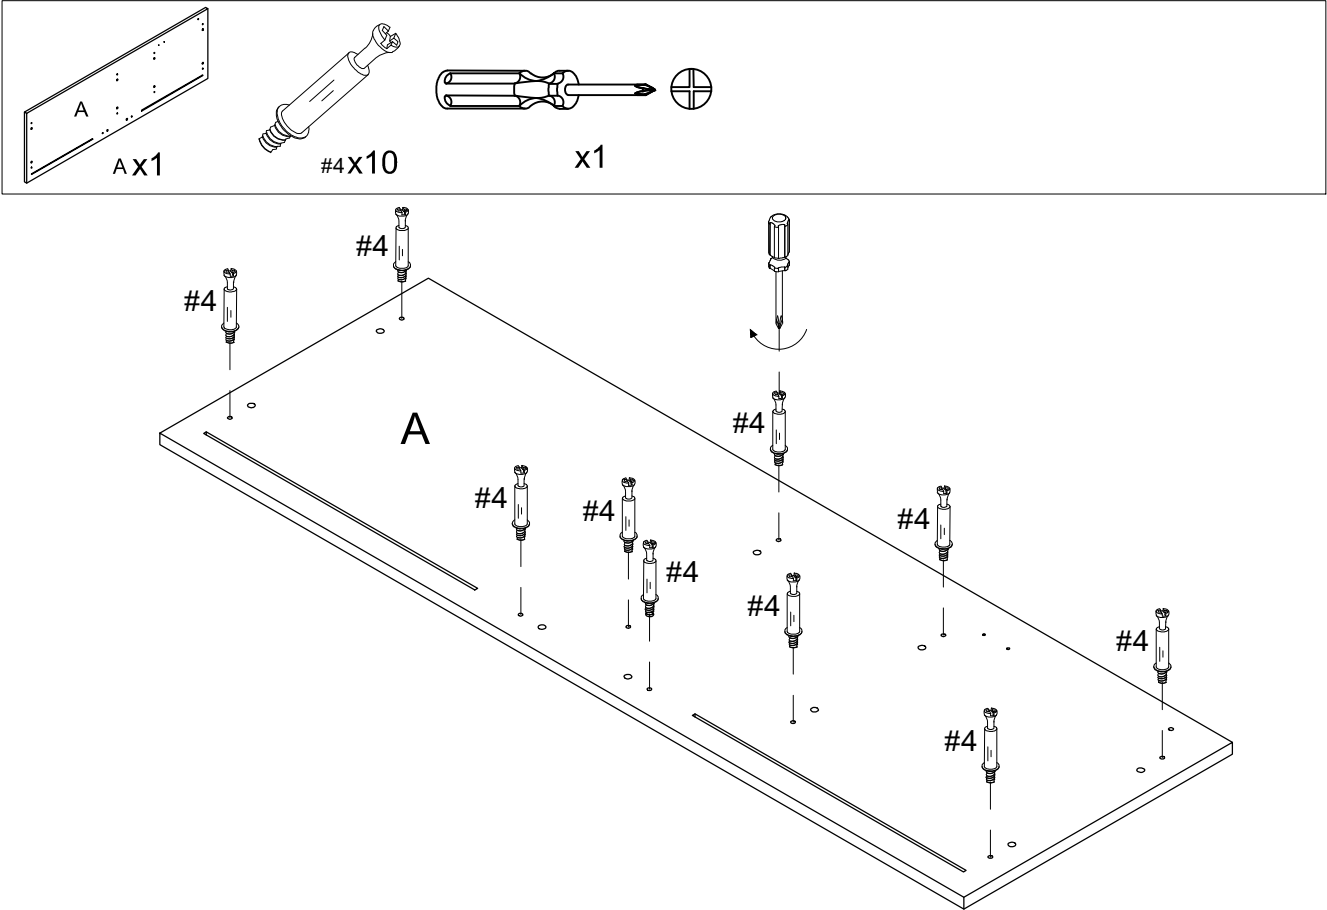



Step 12.

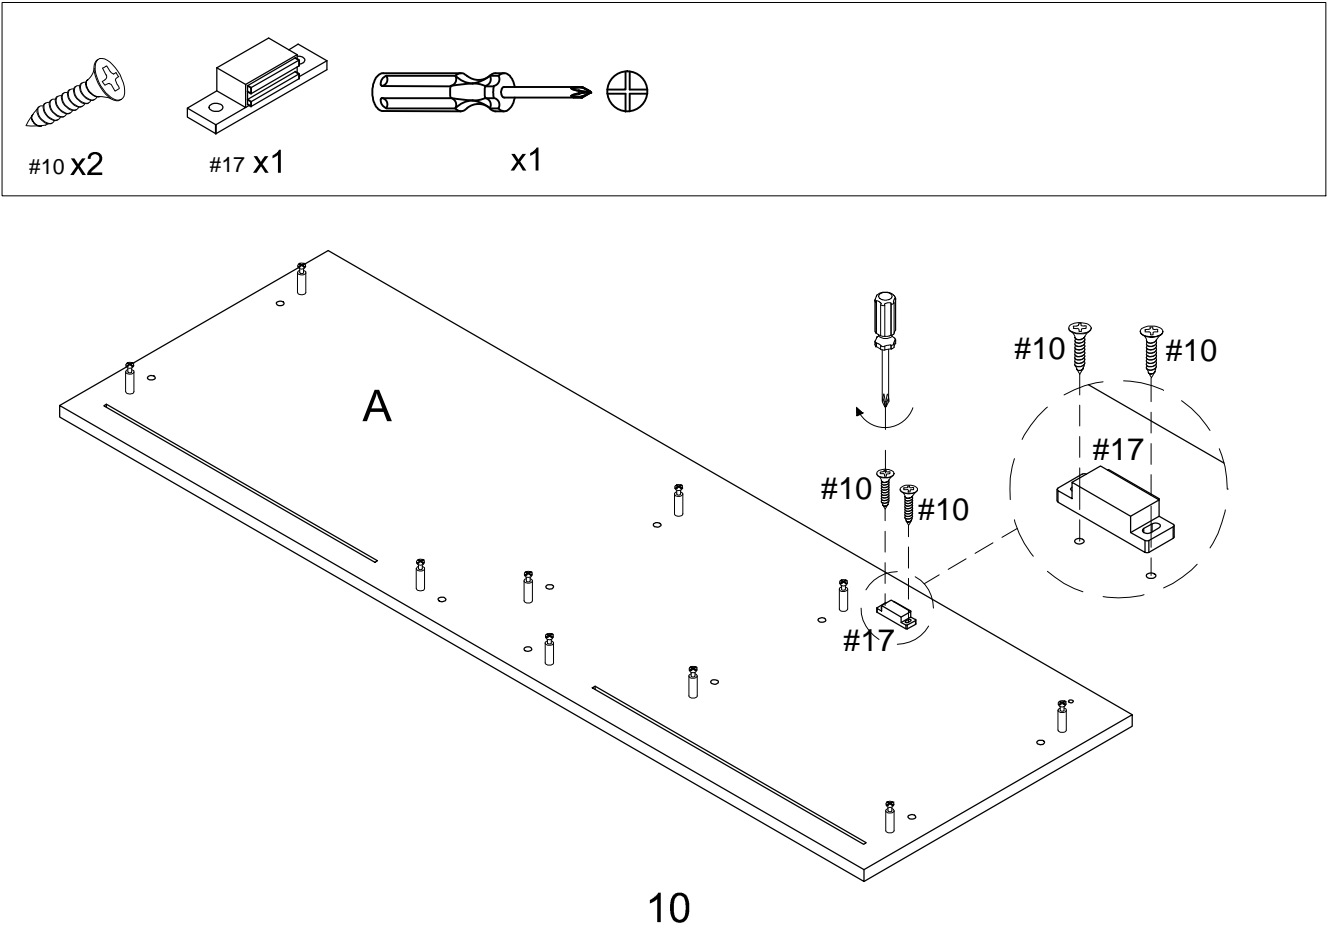



### Step 13.

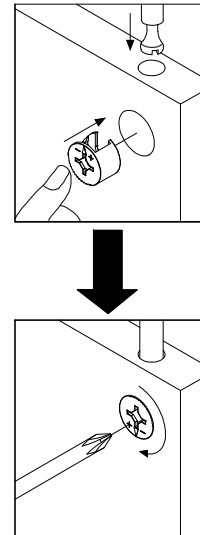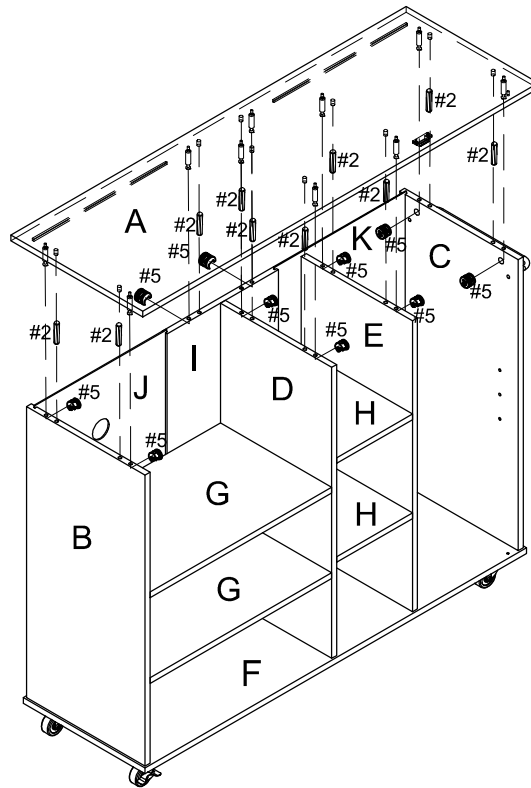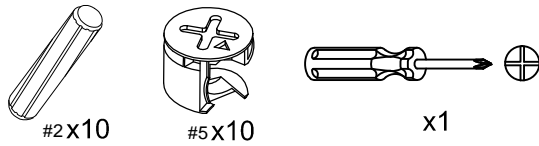



### Step 14.

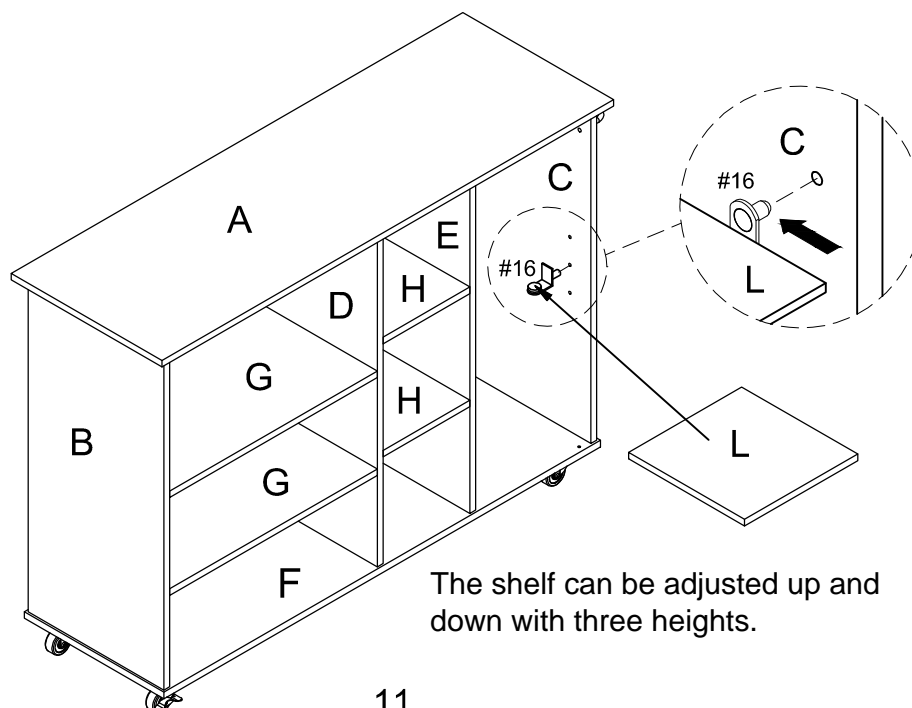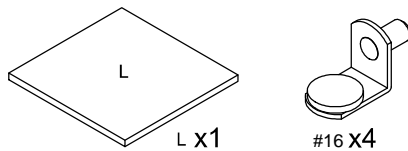


### Step 15.

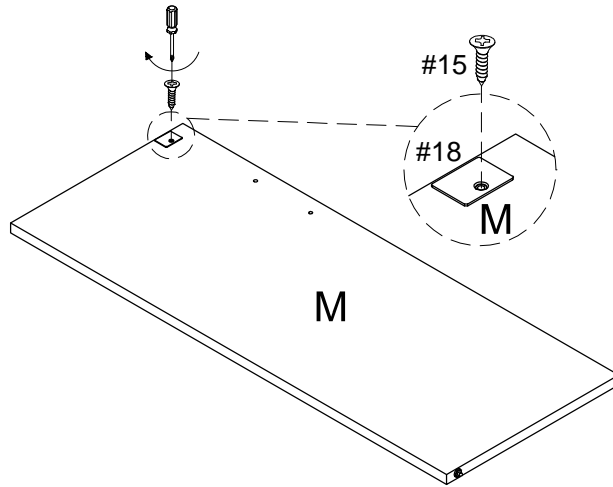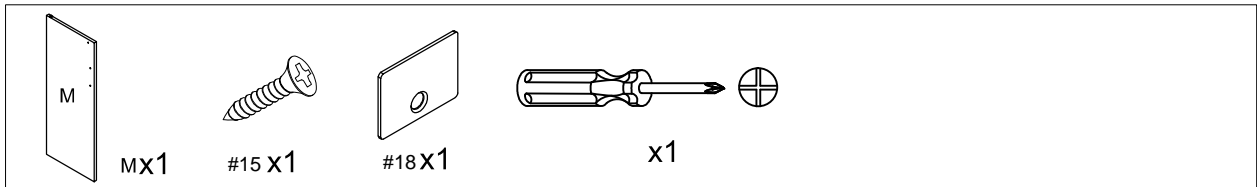

### Step 16.

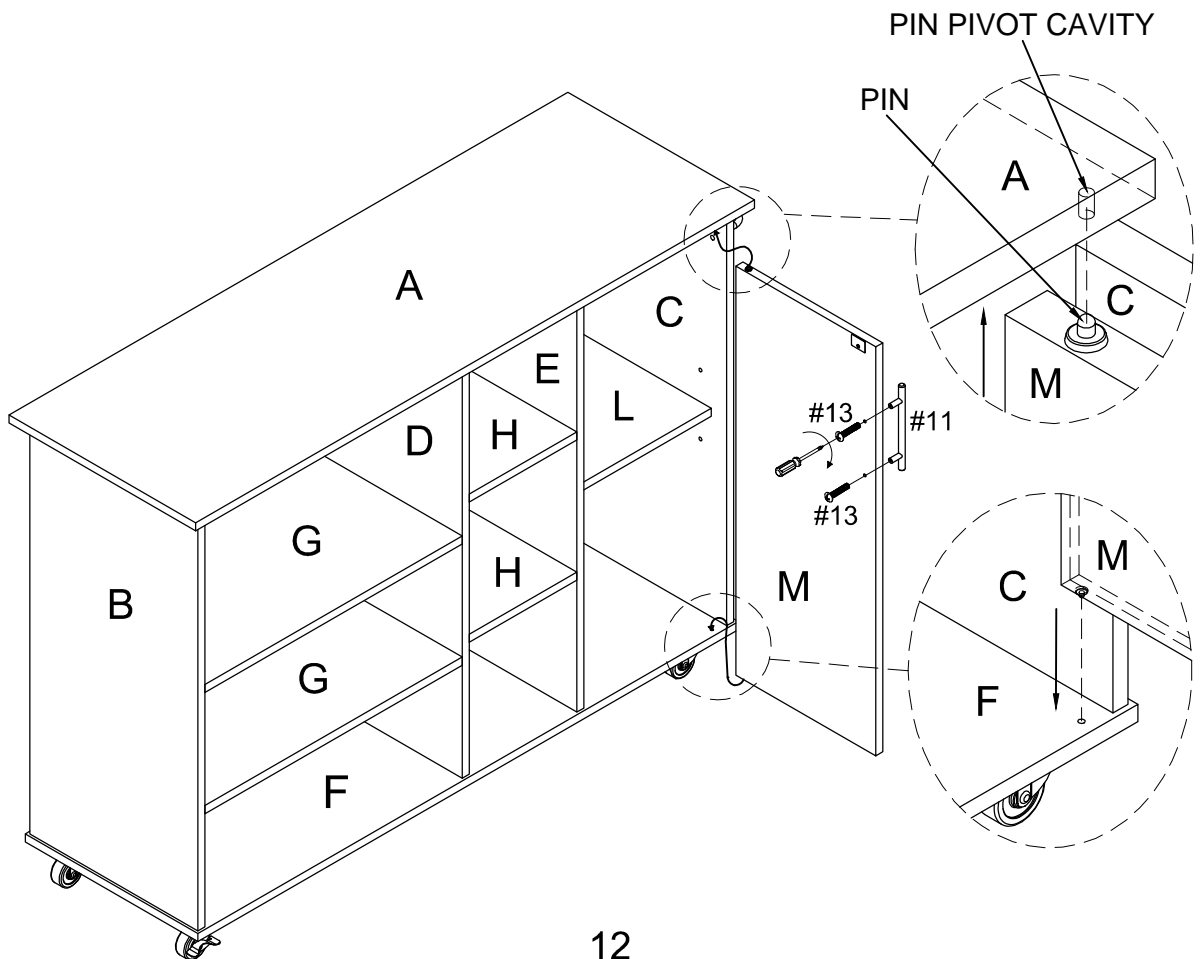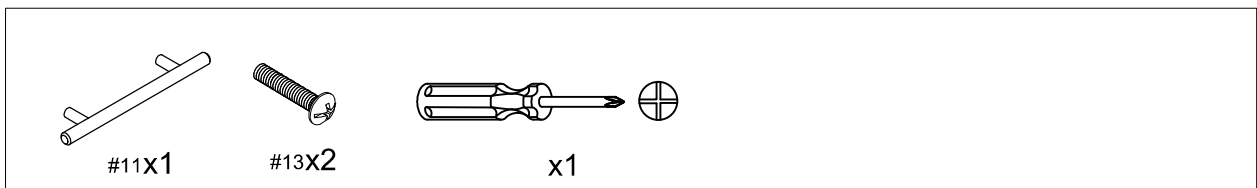

Step 17.

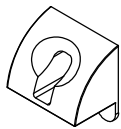

#9 x8



#10 x8



x1

