

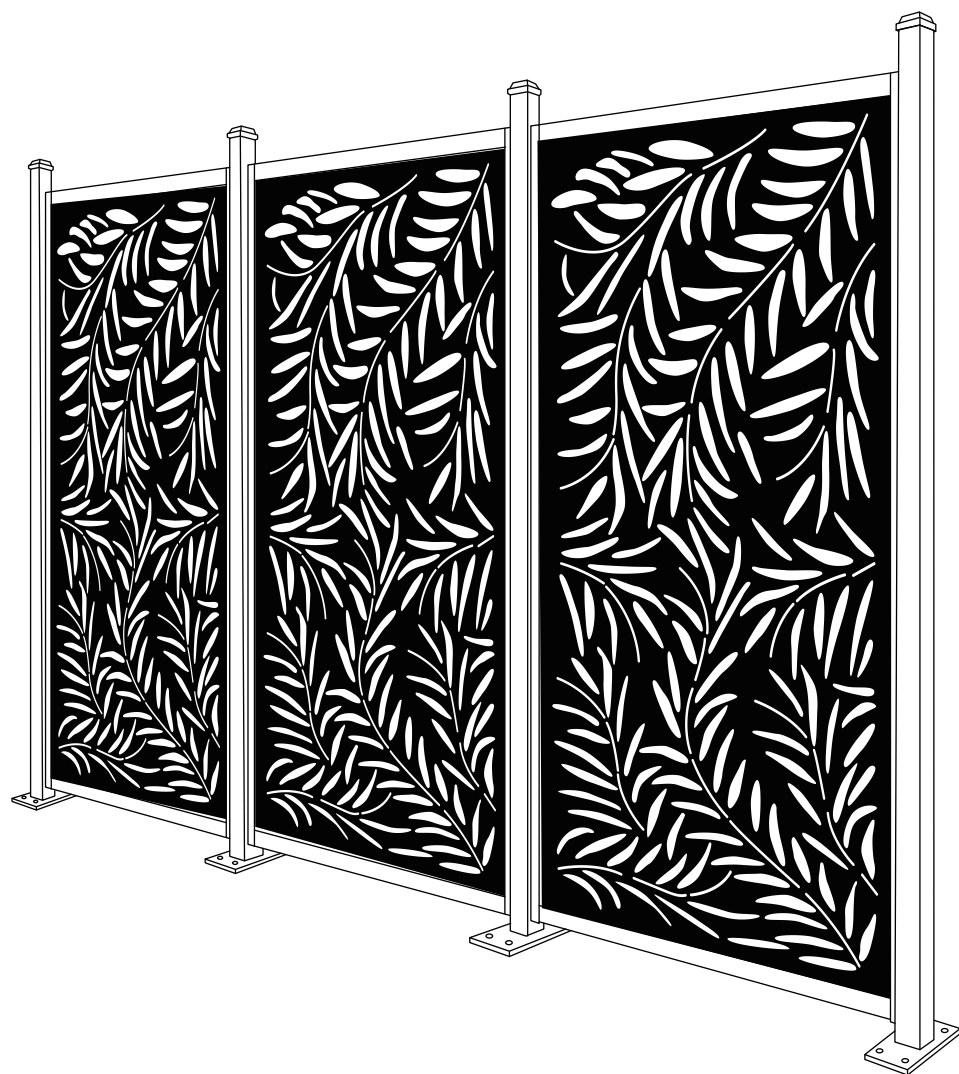


Installation Guide application

1: Install With The Metal Post (avaialble for sepearte purchase)

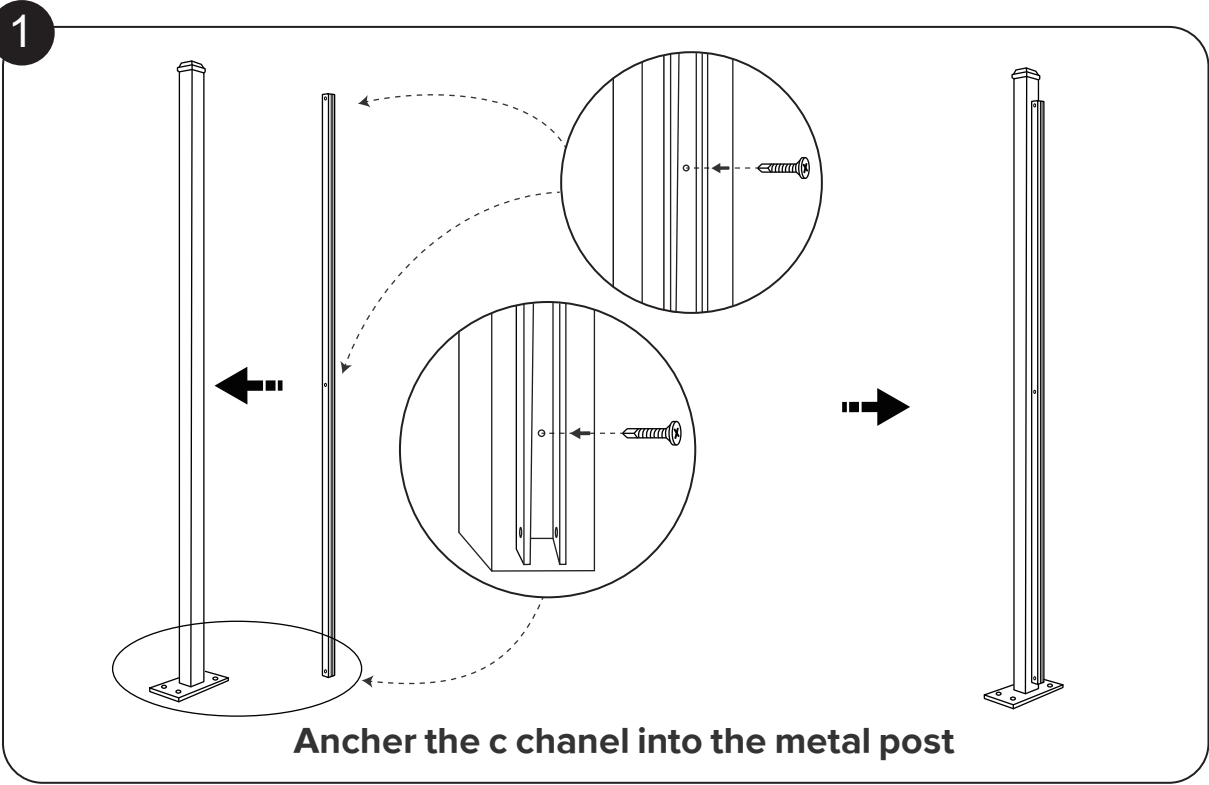


Installation Guide application

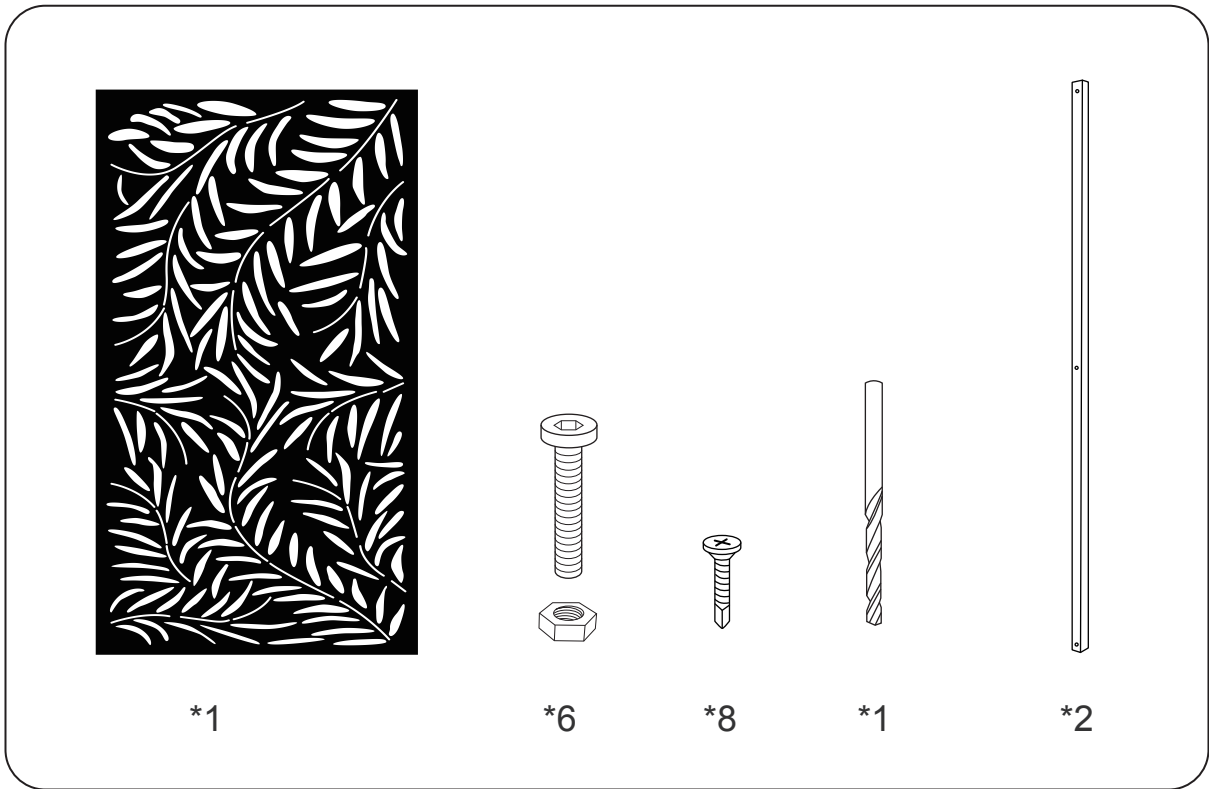


Installation Guide application

2

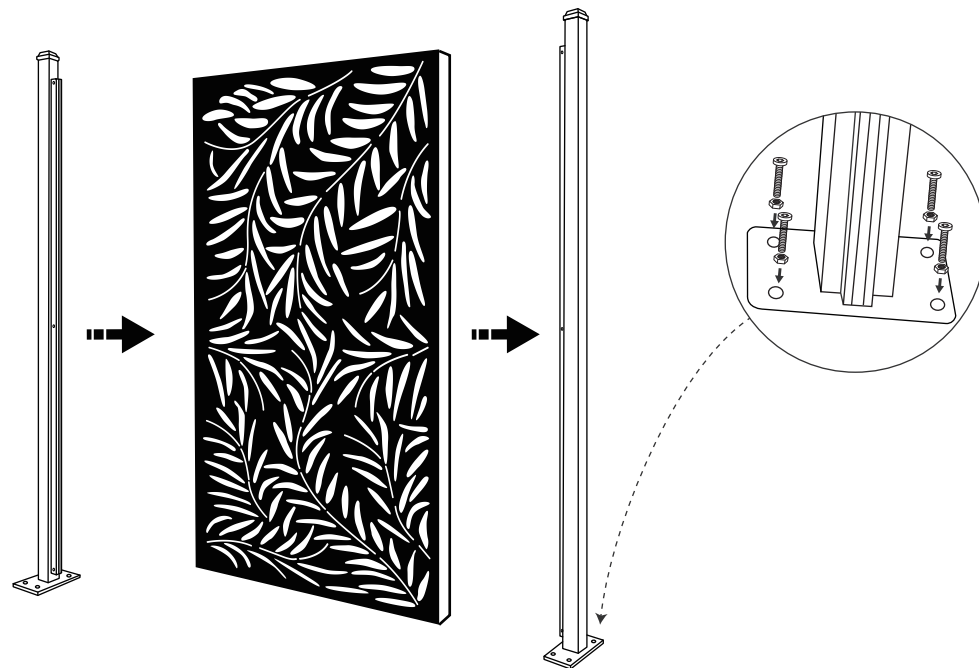

Surface mount the post on the ground


3

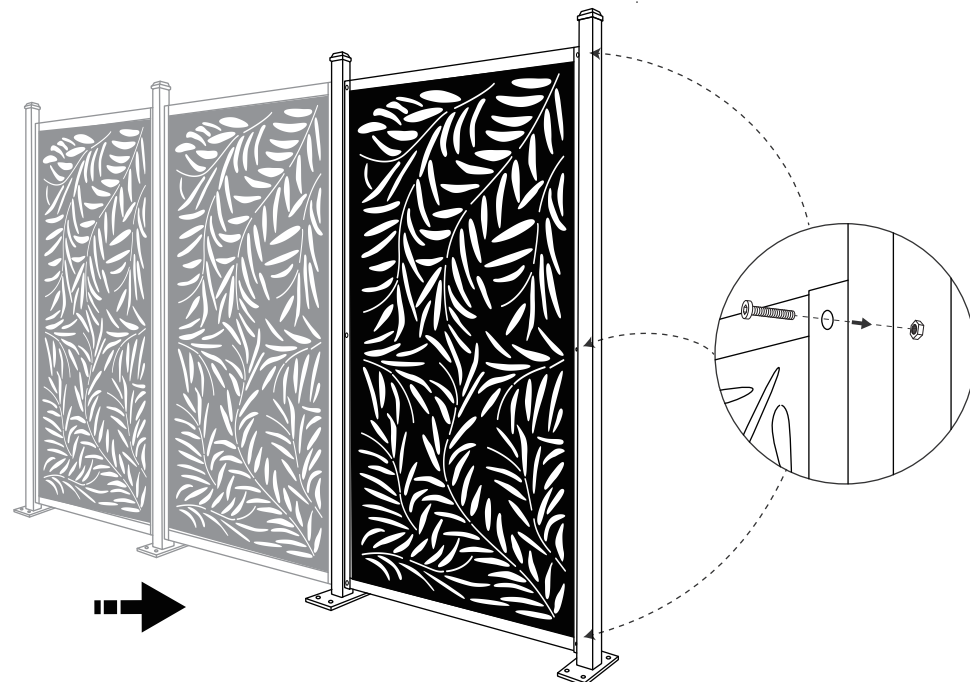


Put the panel in between c channel and secure it

Installation Guide application

4

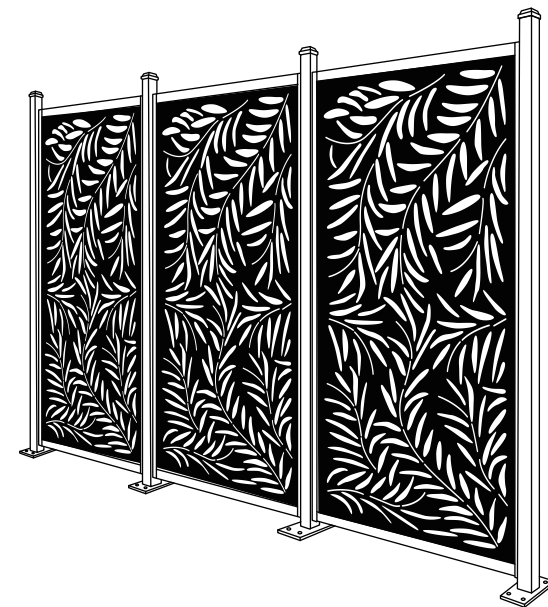

Method 1

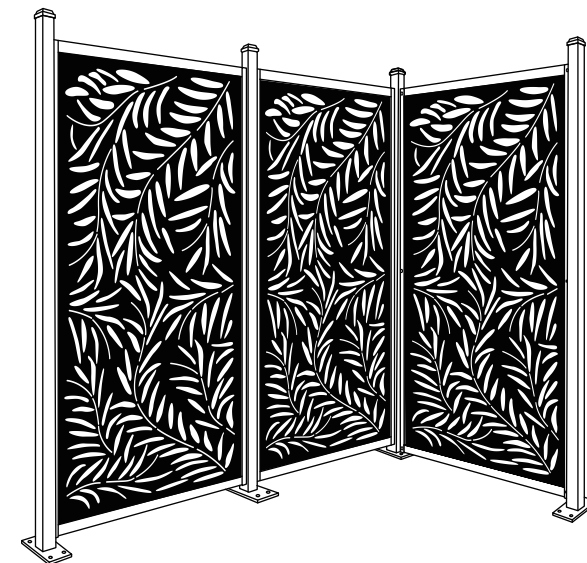


Method 2

Panel can be installed with straight or corner turn

Installation Guide application

2: Install on the wood fence pole(not included)

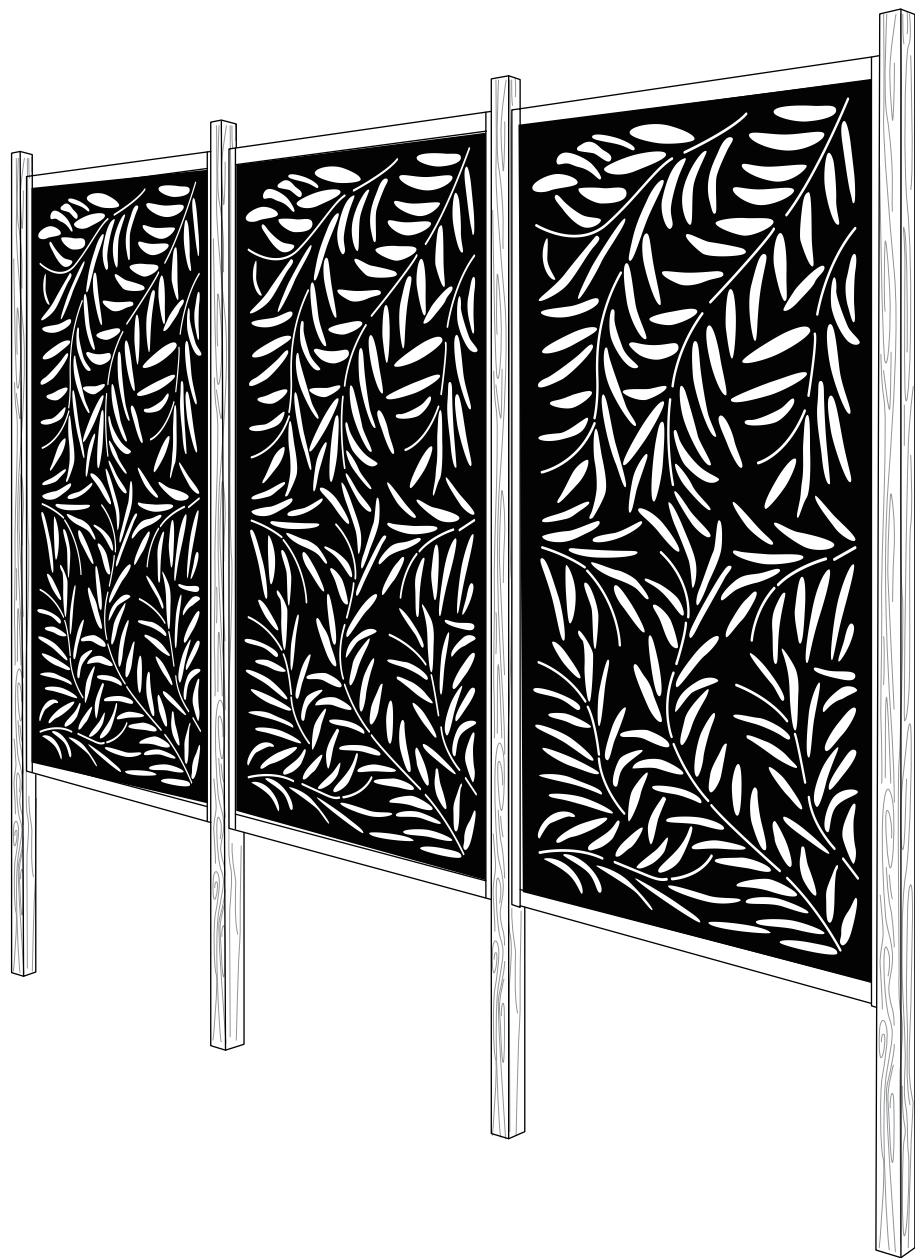


Purchase treated wood fence post with proper length to make sure at least 24-36 inch burried underground

Installation Guide application



*1

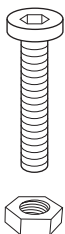

*6



*8




*1





*2

1

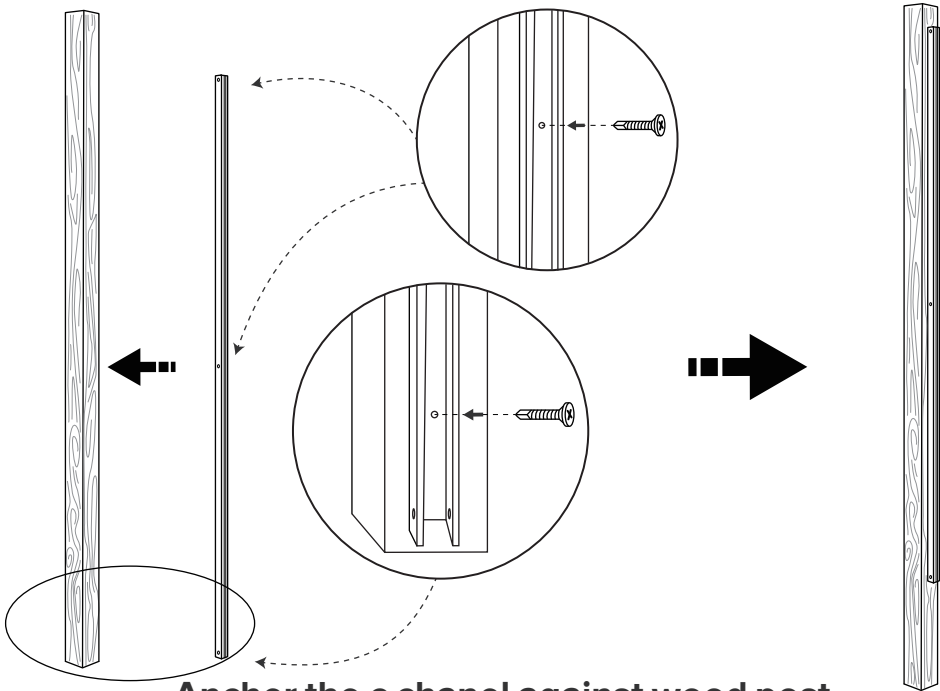


Ancher the c chanel against wood post

Installation Guide application

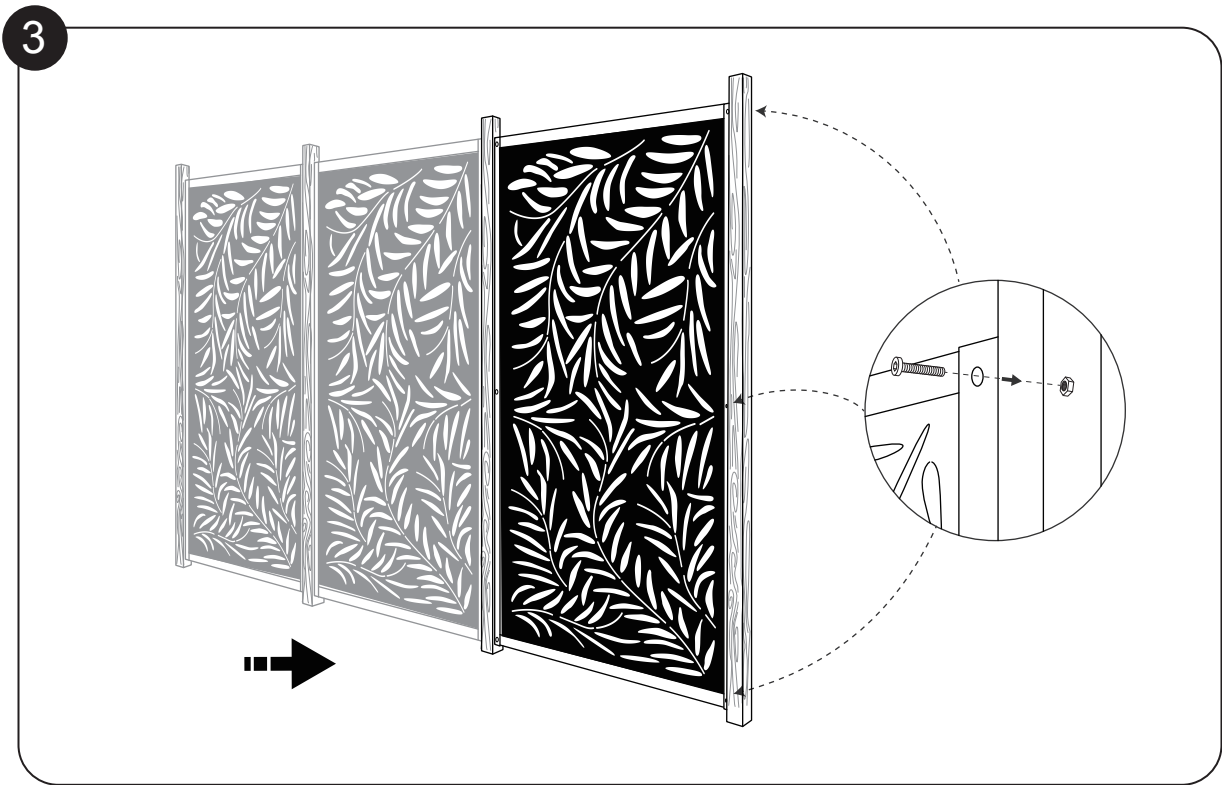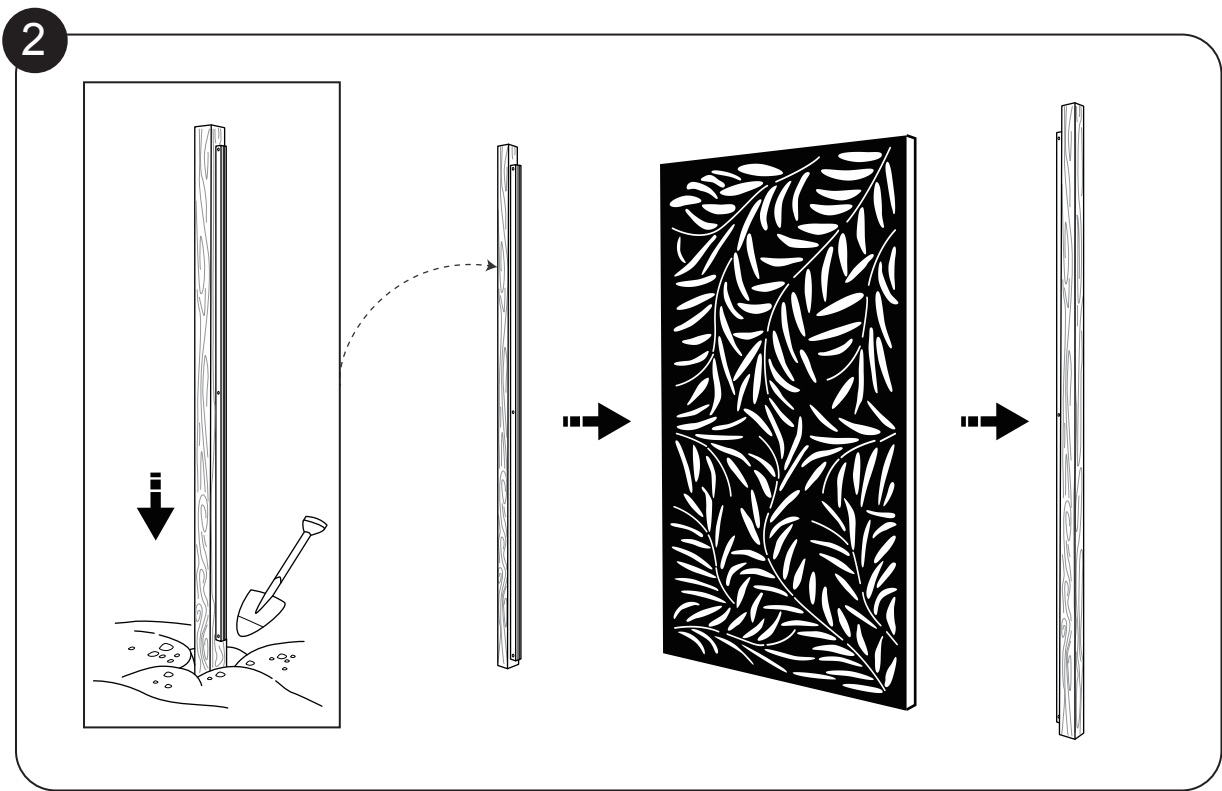


Installation Guide application

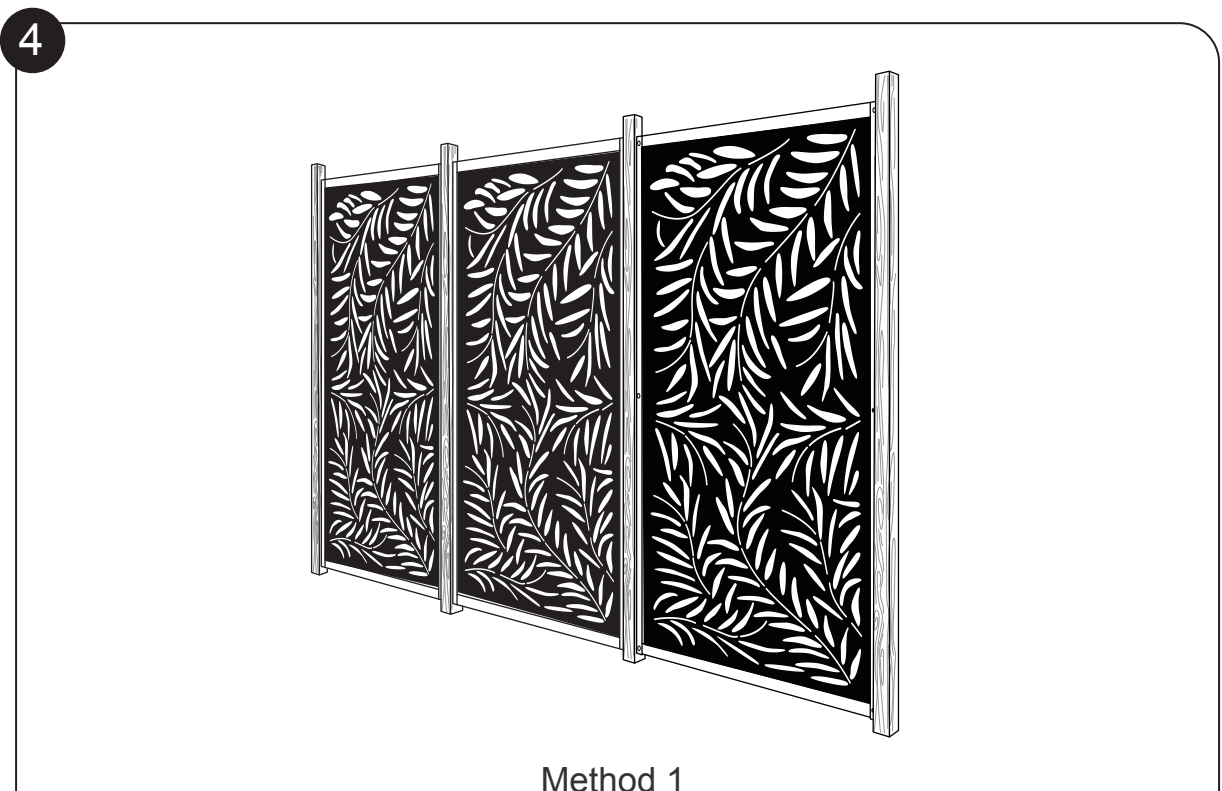


Installation Guide application


3: Put the panel again 2 existing wall openings.

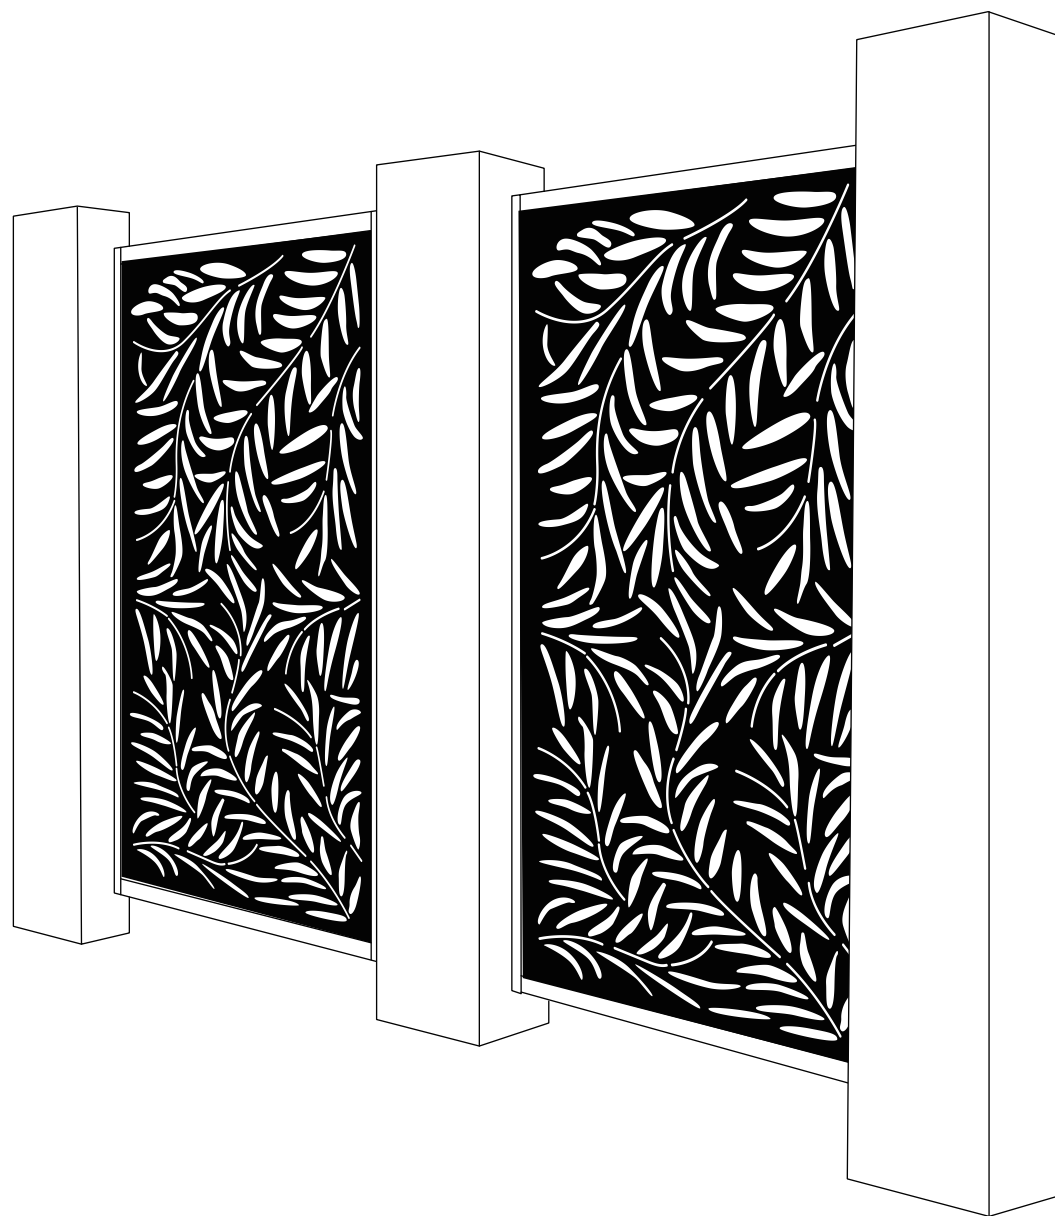



Installation Guide application

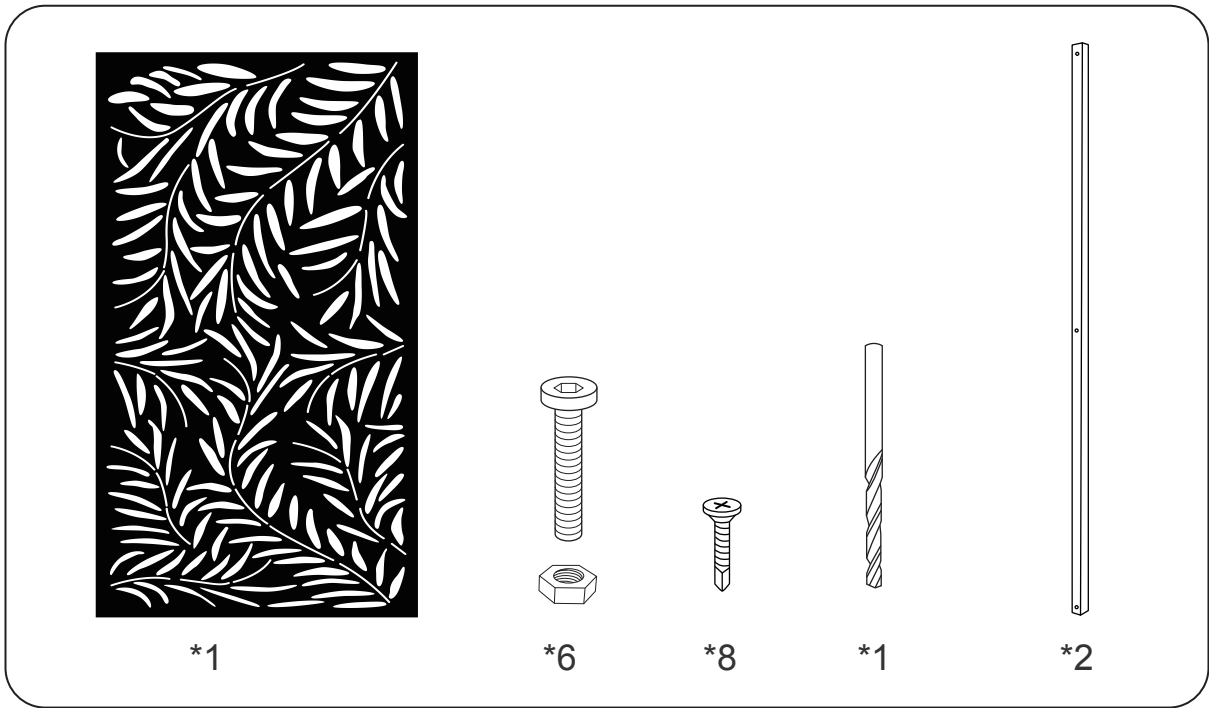

Secure c channel against the wall or put wood lumber against wood first to make sure proper opening. Cement screwer might need to purchase seperately for this application.

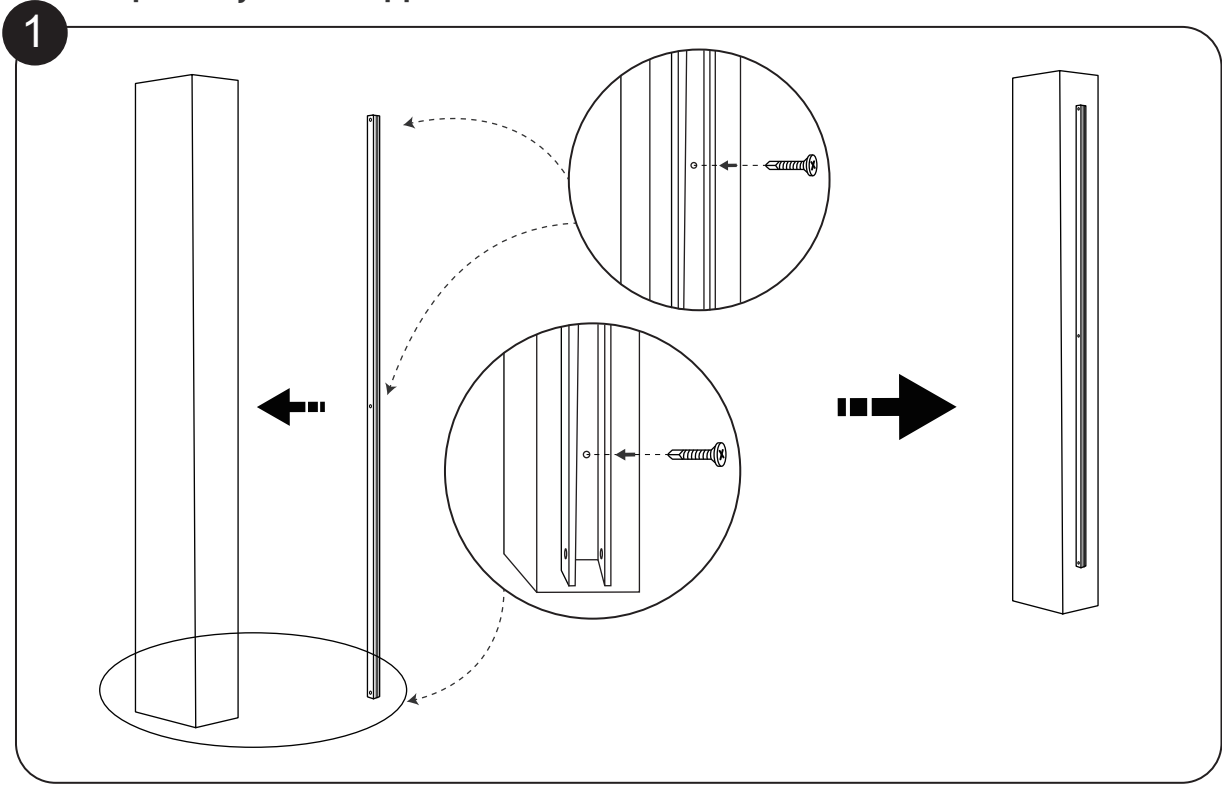

Installation Guide application

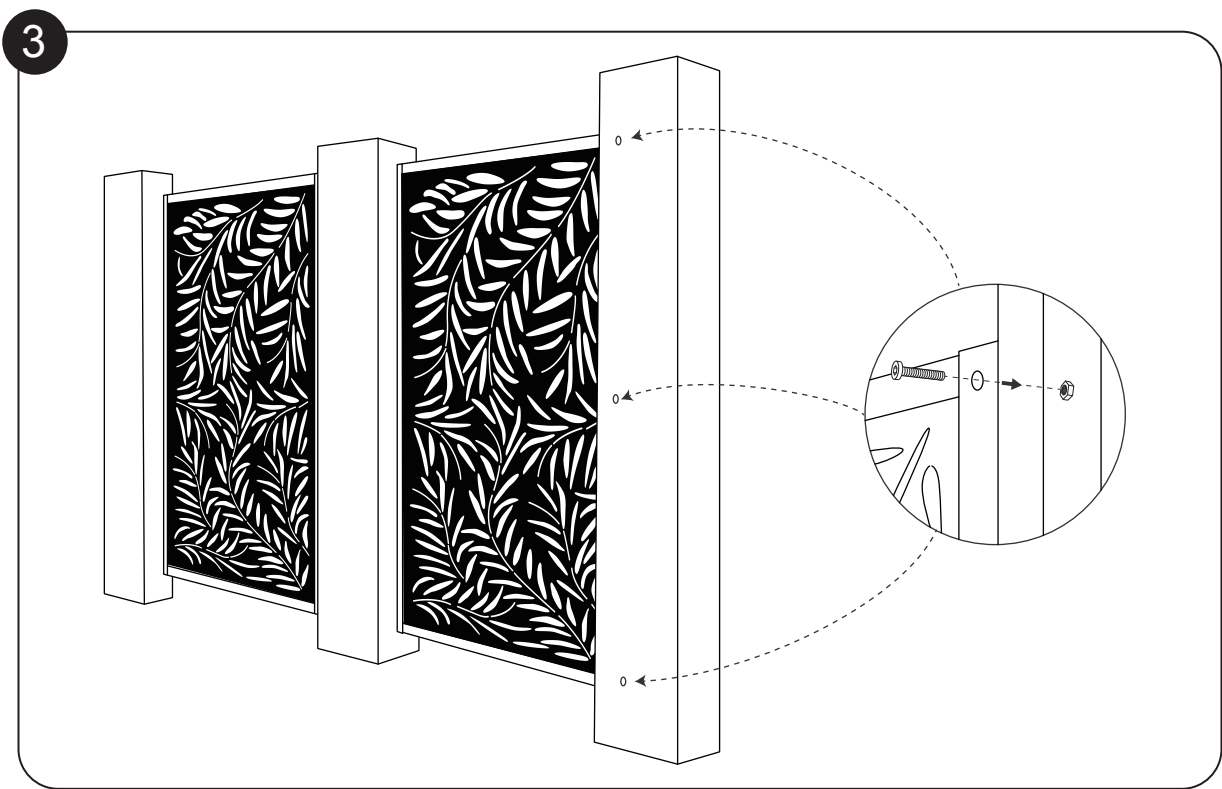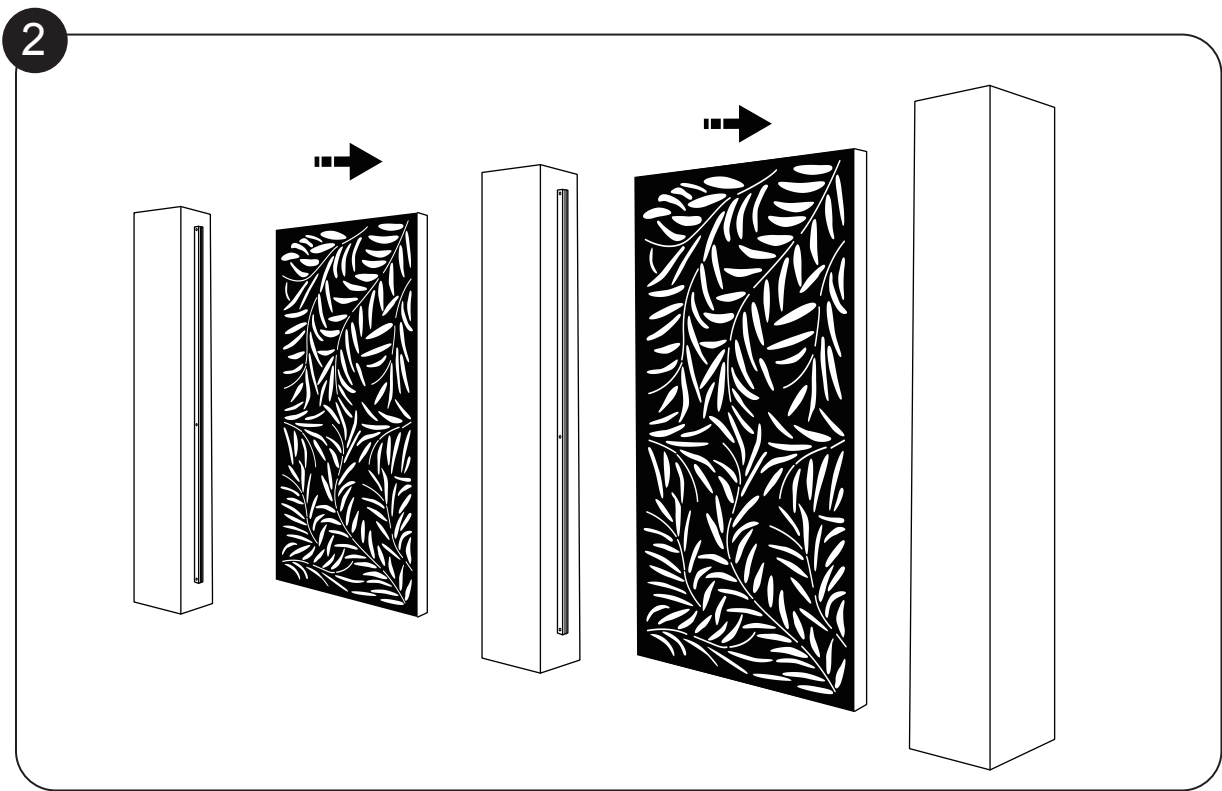

Installation Guide application

