
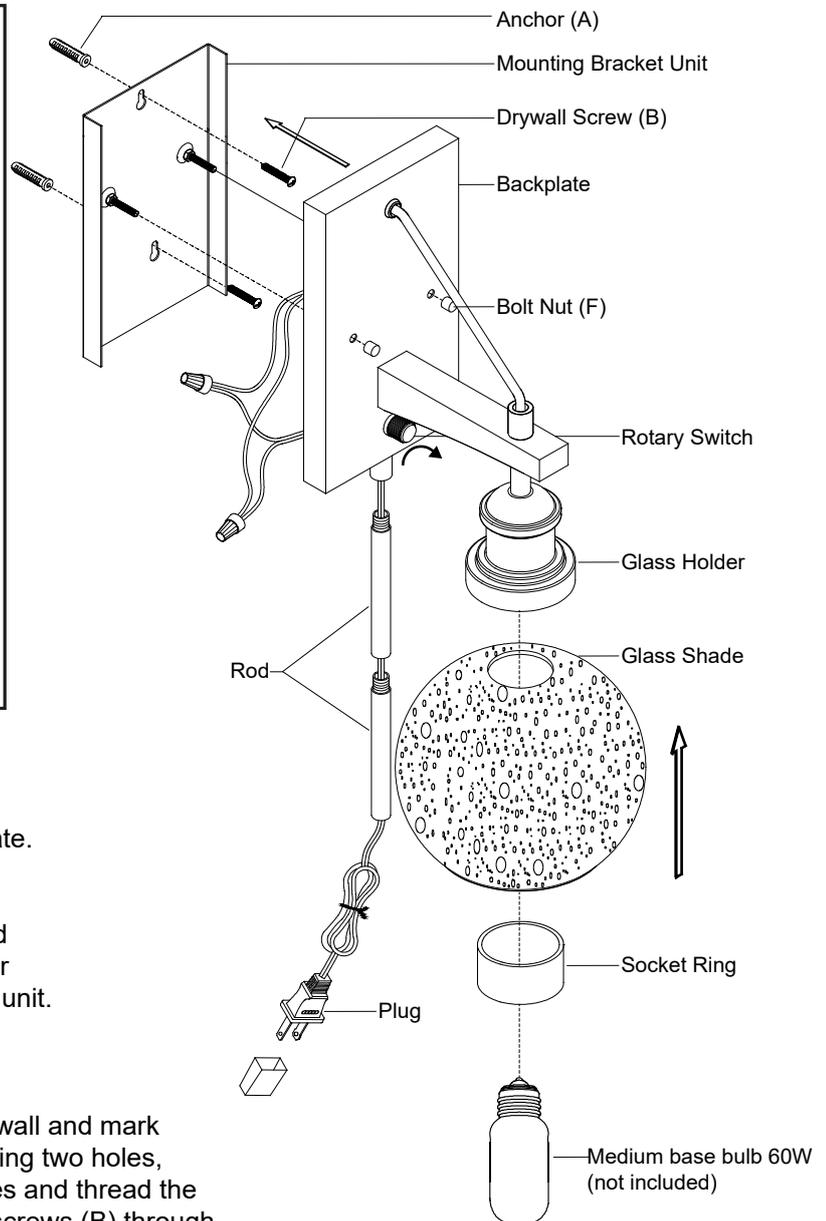


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE:** 1. Before installing, consult local electrical codes for wiring and grounding requirements.  
2. READ AND SAVE THIS INSTRUCTION.

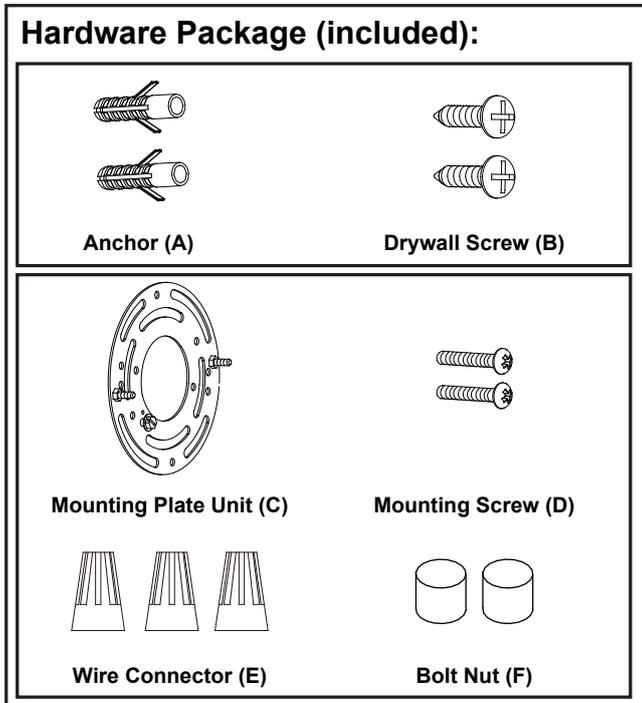

## Installation Steps for Plug-in



1. Unscrew the two bolt nuts (F).  
Remove the mounting bracket unit from the backplate.
2. 2a. For Mounting to wood:  
Place the mounting bracket unit to the wood and mark the target on the wall from the set holes for drilling two holes, remove the mounting bracket unit. Secure the drywall screws (B).
- 2b. For Mounting to cement wall:  
Place the mounting bracket unit to the cement wall and mark the target on the wall from the set holes for drilling two holes, remove the mounting bracket unit. Drill the holes and thread the anchors (A) into the holes. Secure the drywall screws (B) through the set holes into the anchors (A).
3. Attach the backplate to the mounting bracket unit by aligning and inserting the two fixture mounting screws from the mounting bracket unit into the open holes on the backplate, then exposed fixture mounting screws before screwing the two bolt nuts (F).
4. Secure the two rods onto the backplate using the threaded pipe.
5. Secure the glass shade onto the glass holder and tighten the glass shade with the socket ring.  
Install 1 X 60W medium base bulb (not included). See relamping label at socket area or packaging for maximum wattage allowed.
6. Insert the plug into the electrical outlet.  
Turn on the rotary switch.

## Installation Steps for Hardwiring

Turn off the power at fuse or circuit box

1. Unscrew the two bolt nuts (F).  
Remove the mounting bracket unit from the backplate.
2. Cut the plug and trim the cord. Allow 9" of extra cord for wiring.
3. Tear apart the cord (a) from its top about 3" long (b), and then peel off the 2 wires from the top about 3/8" long (c) to expose the copper for wiring.

**Note: Cutting too deep may cut off two wires and destroy the insulation surface of the two wires.**

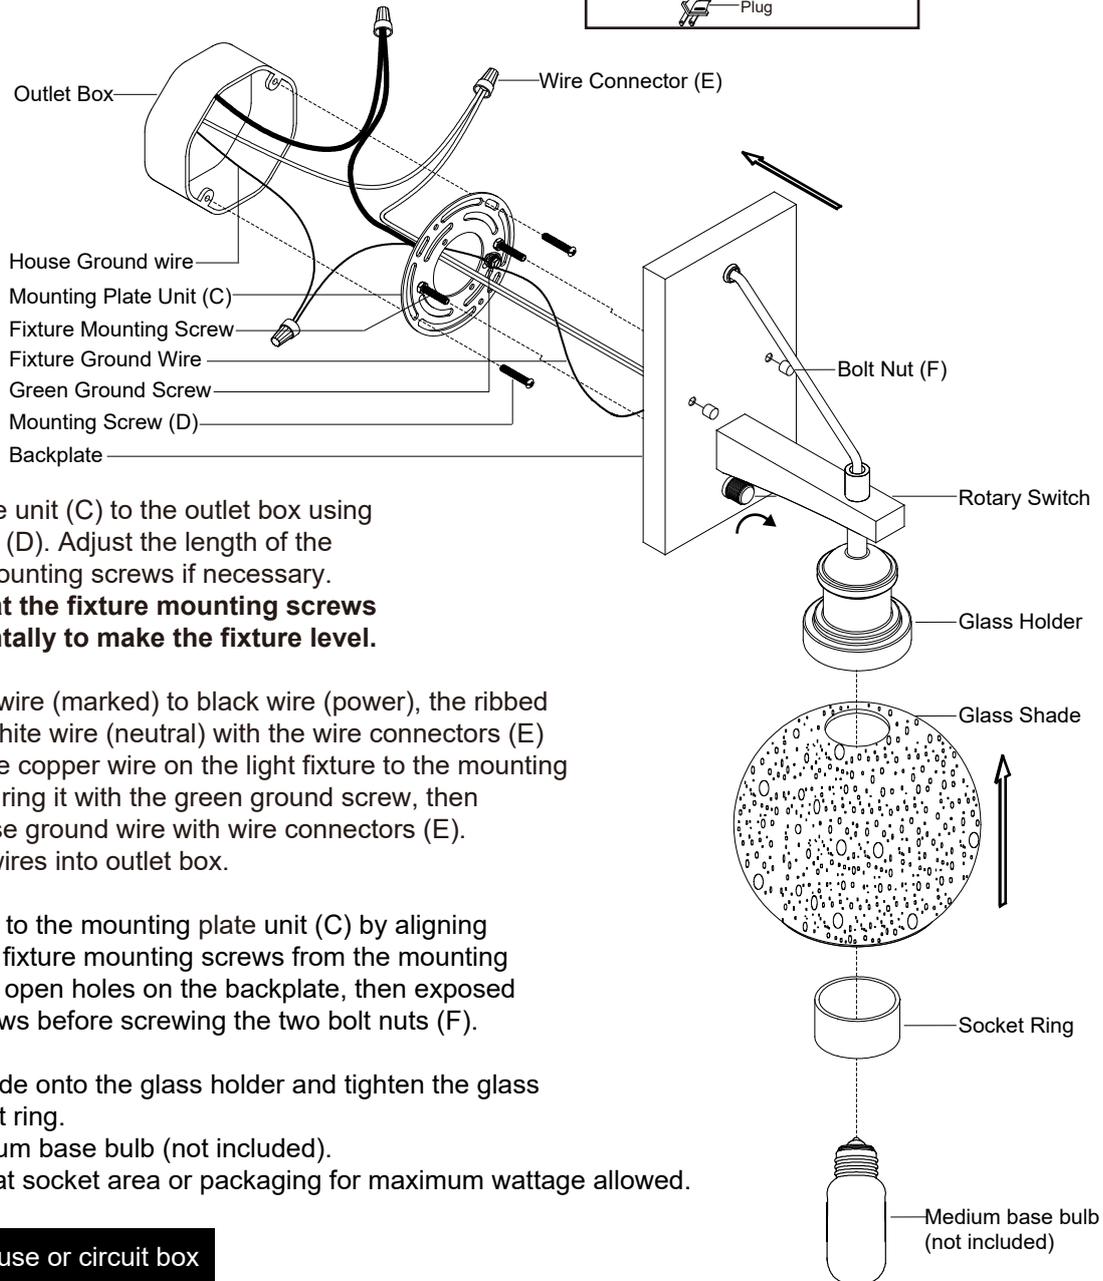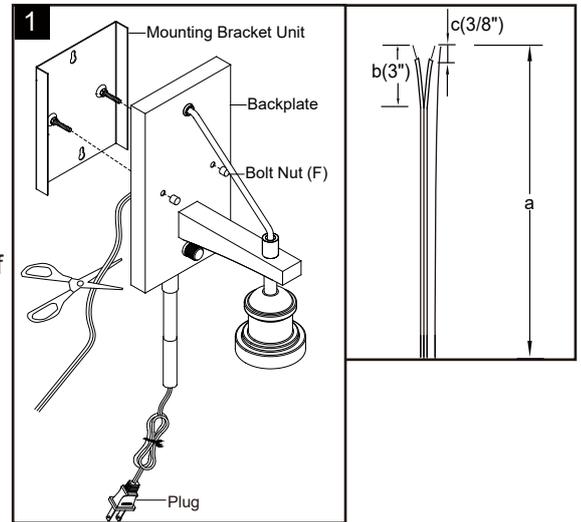


4. Attach mounting plate unit (C) to the outlet box using two mounting screws (D). Adjust the length of the preinstalled fixture mounting screws if necessary.  
**Note: Make sure that the fixture mounting screws are lined up horizontally to make the fixture level.**
5. Connect the smooth wire (marked) to black wire (power), the ribbed wire (unmarked) to white wire (neutral) with the wire connectors (E) provided. Connect the copper wire on the light fixture to the mounting plate unit (C) by securing it with the green ground screw, then connect it to the house ground wire with wire connectors (E). Carefully put all the wires into outlet box.
6. Attach the backplate to the mounting plate unit (C) by aligning and inserting the two fixture mounting screws from the mounting plate unit (C) into the open holes on the backplate, then exposed fixture mounting screws before screwing the two bolt nuts (F).
7. Secure the glass shade onto the glass holder and tighten the glass shade with the socket ring.  
Install 1 X 60W medium base bulb (not included).  
See relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box


Turn on the rotary switch.

The following parts are available for re-order if damaged or missing.


Spare Parts List:



Anchor (A)



Drywall Screw (B)

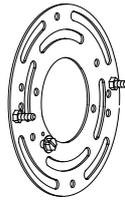


Mounting Plate Unit (C)

Assembly Kit  
6291MM(1 SET)




Mounting Screw (D)





Wire Connector (E)



Bolt Nut (F)

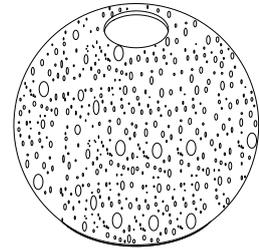

Glass Shade  
10198CS  
X1

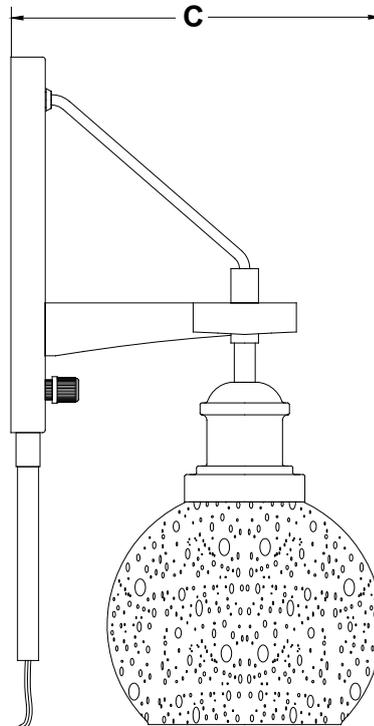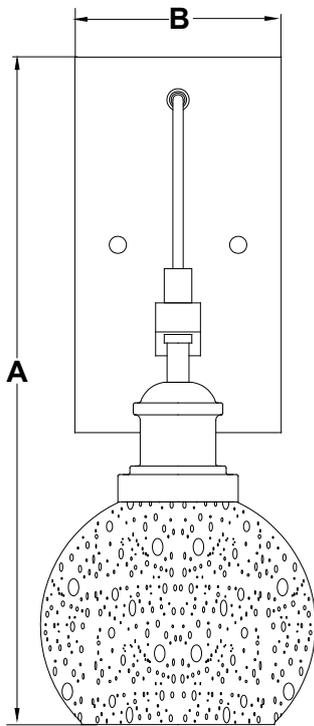

A: 15-1/2"  
B: 6"  
C: 8-1/2"

