




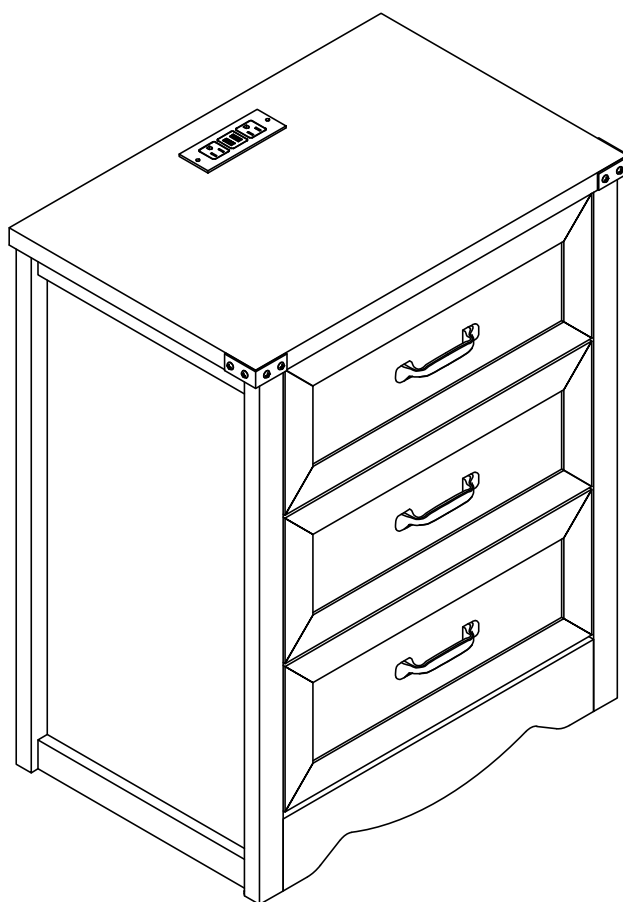


Please note: Items cannot be returned once assembled.


Installation & Assembly



IT IS RECOMMENDED
TO USE POWER TOOLS

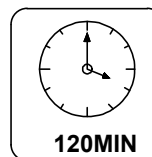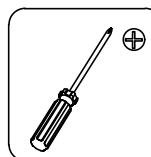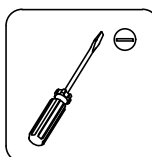

120MIN

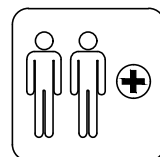

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!




---NEED HELP WITH YOUR FURNITURE?---

If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US?

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

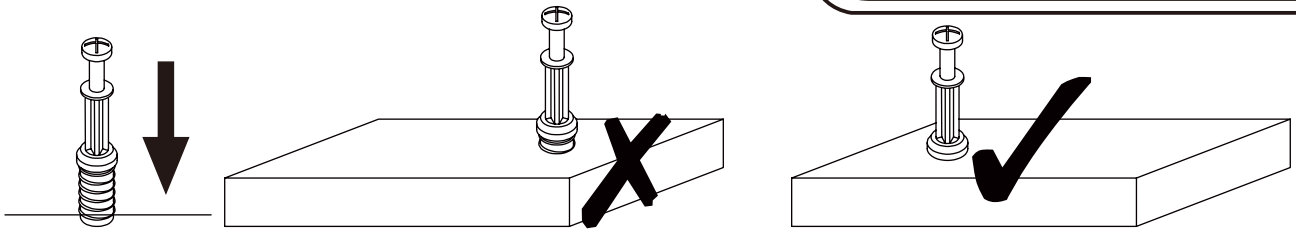


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

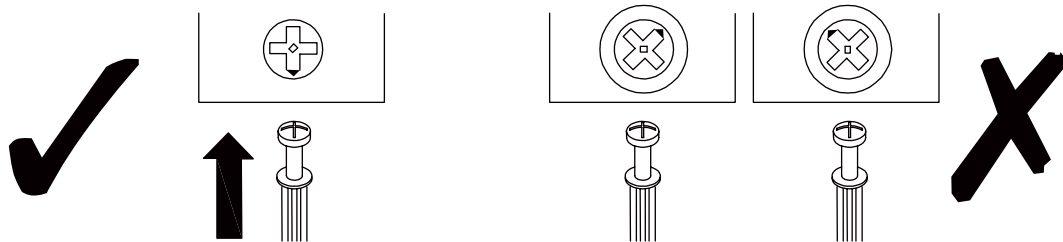











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




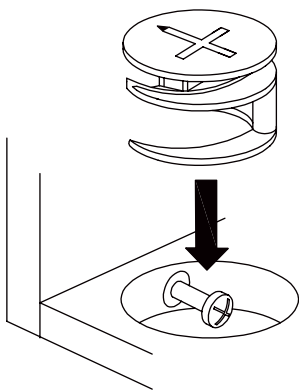




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

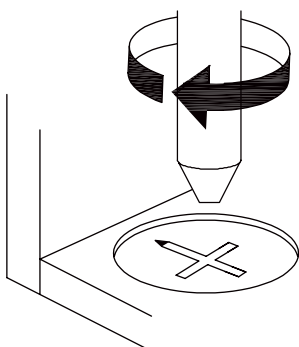


EN_Turn cam lock clockwise to tighten.

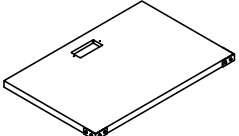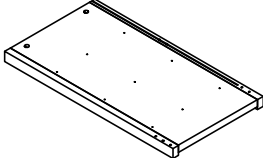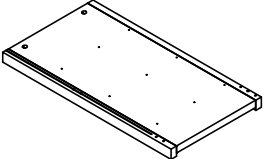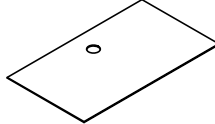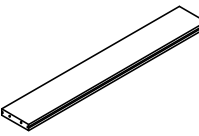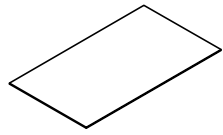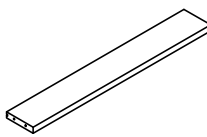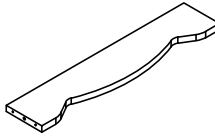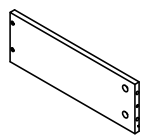
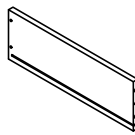
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x1	
9		x3	
10		x3	

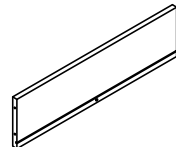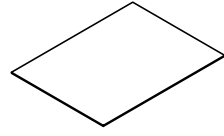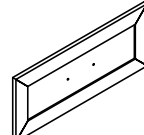NO.	PARTS	QTY	SPARE
11		x3	
12		x3	
13		x3	
14		x3	
	 Hardware Kit	x1	

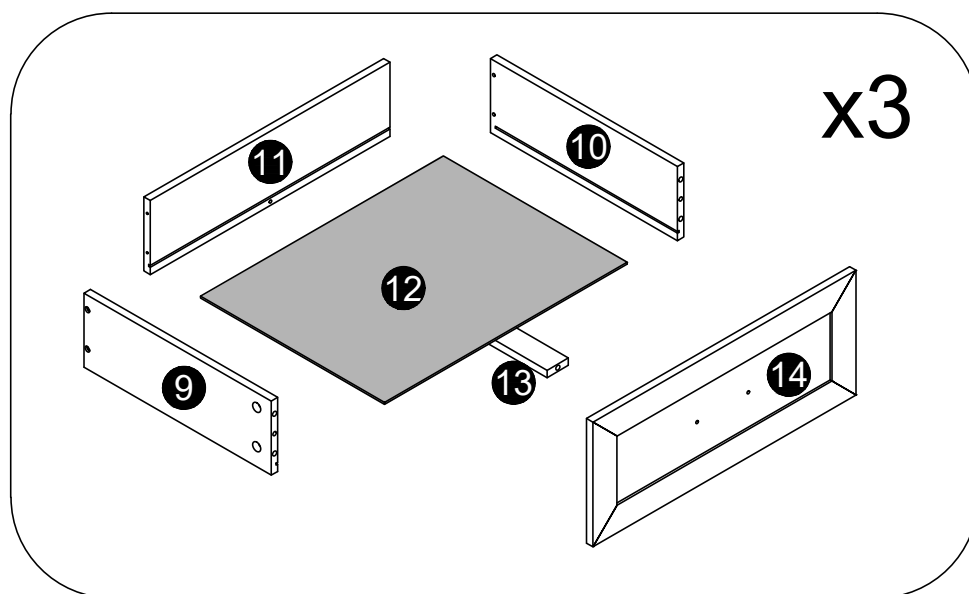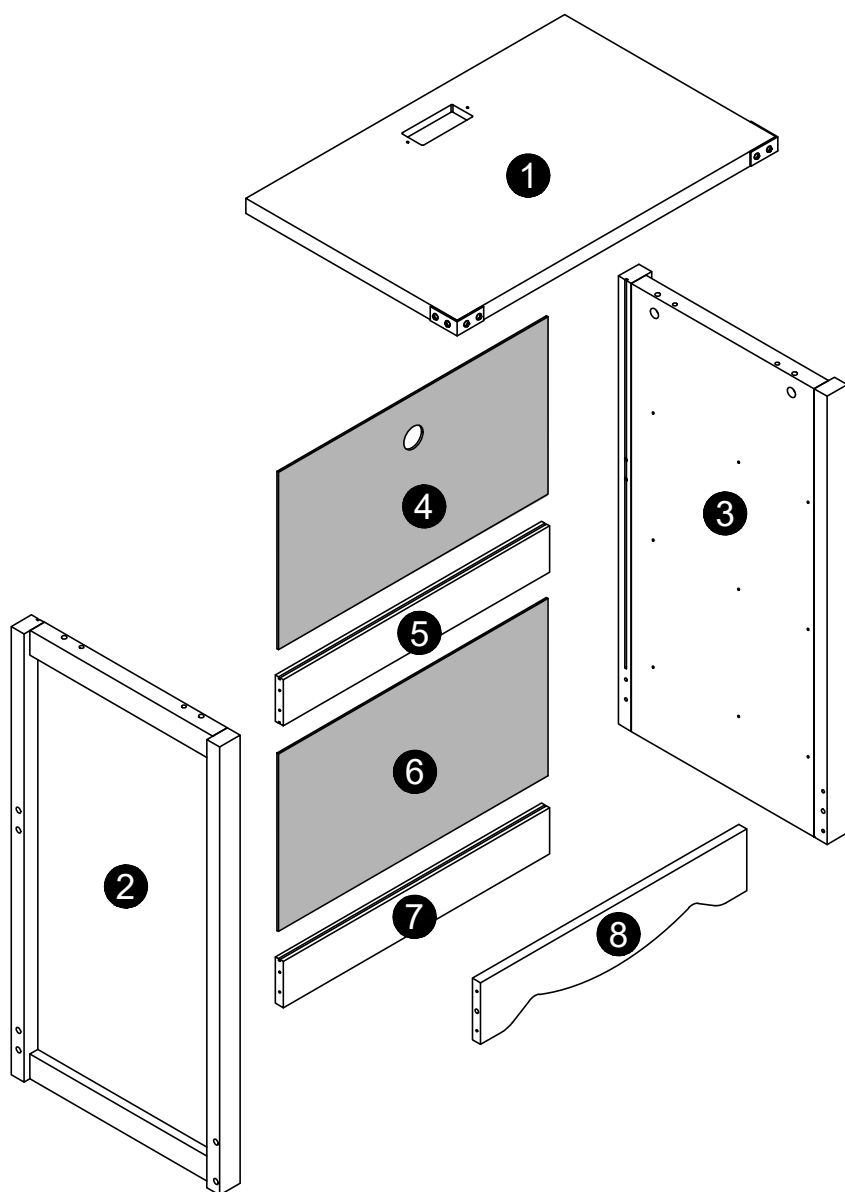



A x19 Ø6x35mm +1(spare)	B x19 Ø15x10mm +1(spare)	C x12 Ø6x30mm +1(spare)	D x17 Ø4x35mm +1(spare)	E x36 Ø3.5x12mm +3(spare)	F x3 F-1 F-2
G x12 Ø5x50mm +1(spare)	J x1	K x2 Ø3.5x12mm	L x12	M x8 Ø3x16mm +1(spare)	N x2 N-1 N-2
O x2 Ø6x30mm					
CL x3 L350mm	CR x3 L350mm	DL x3 L350mm	DR x3 L350mm		

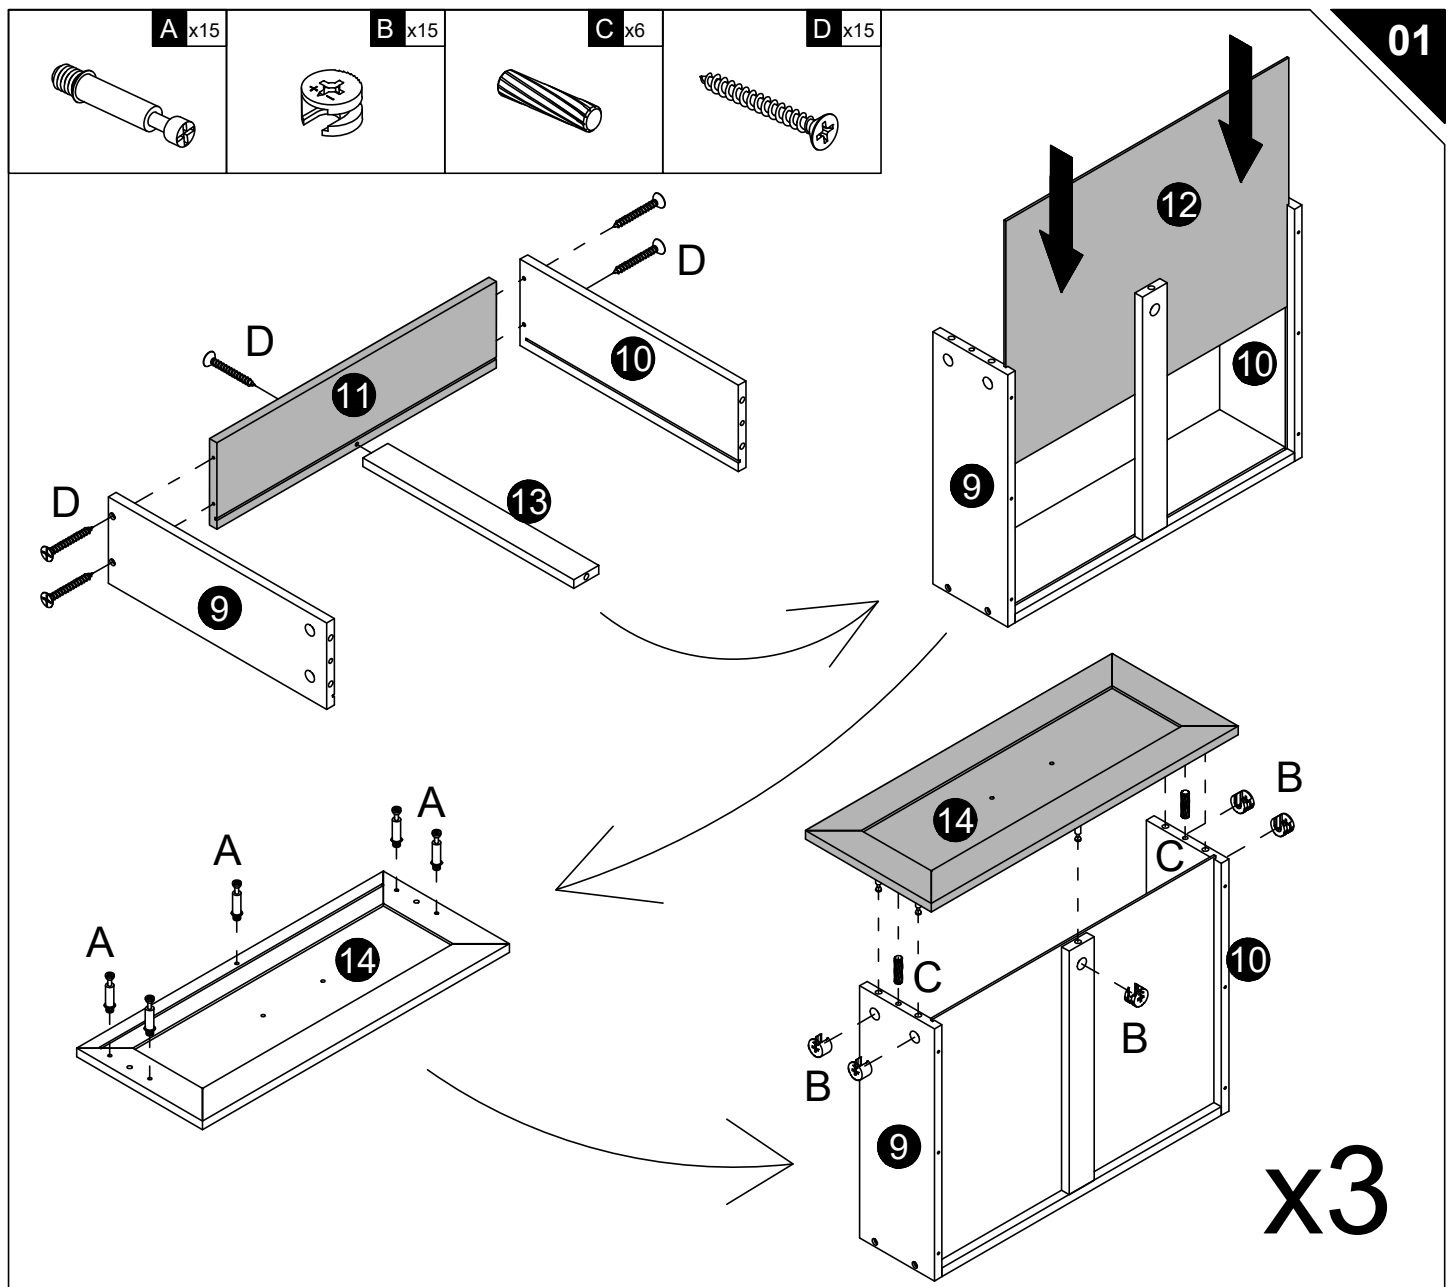

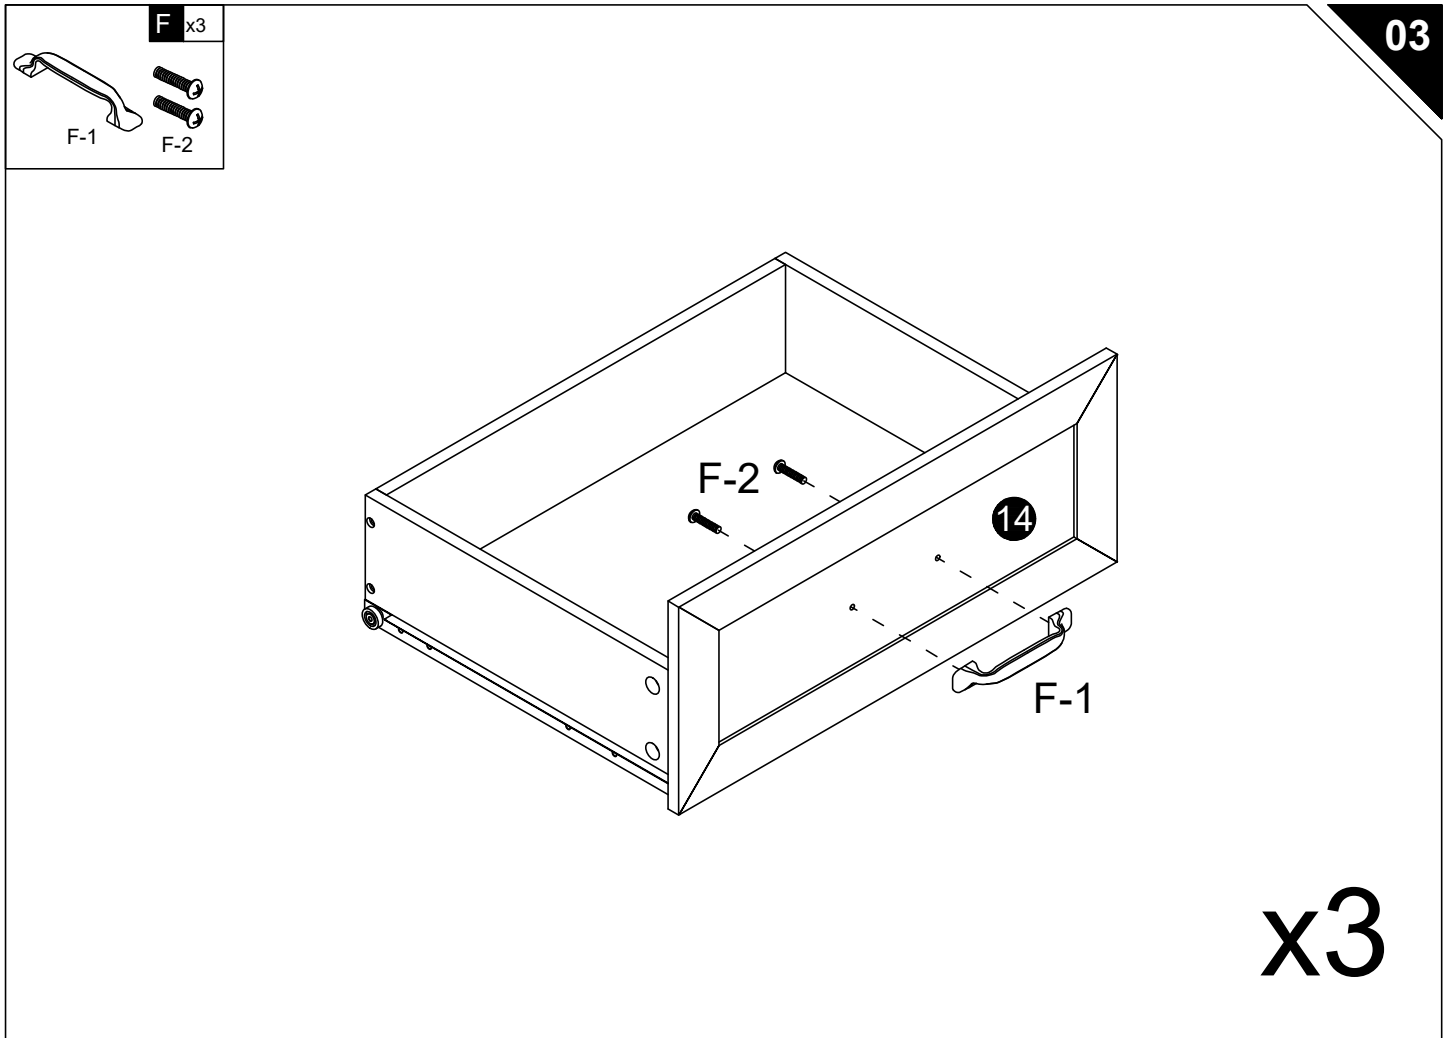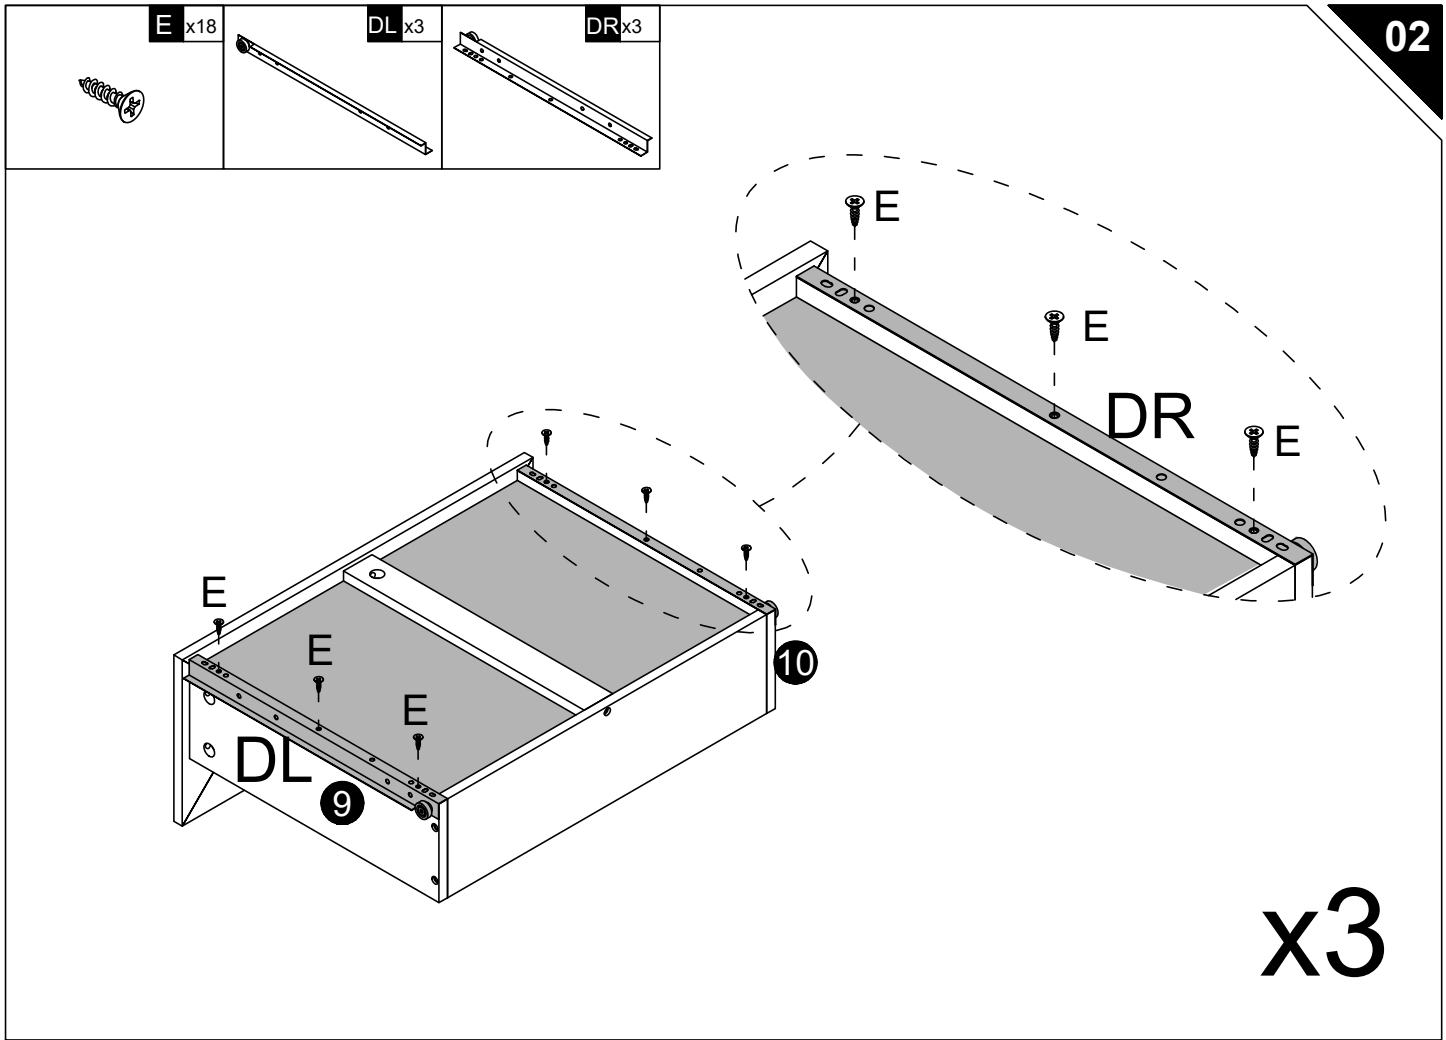


E x9

CL x3

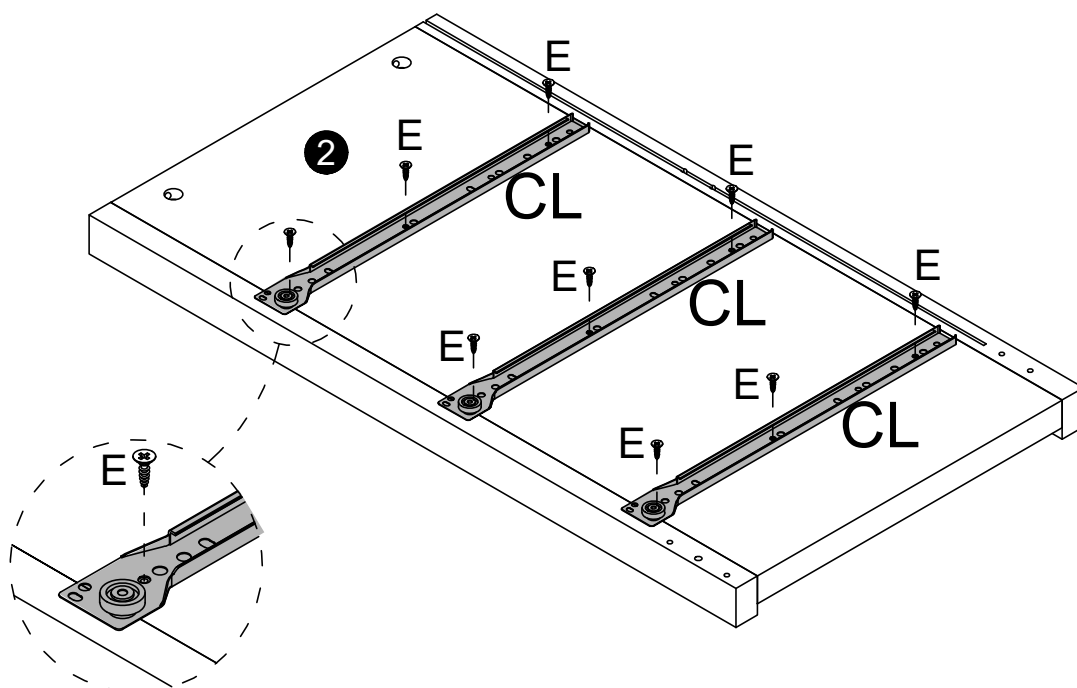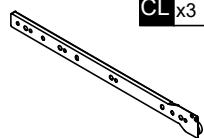



E x9

CR x3

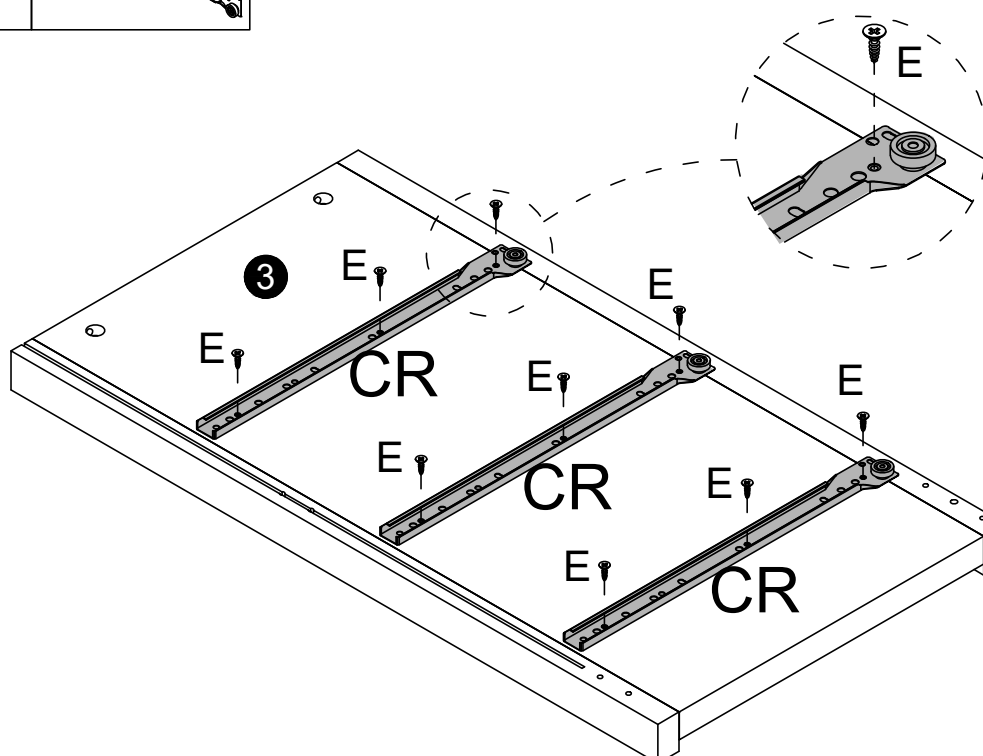


C x1


G x6

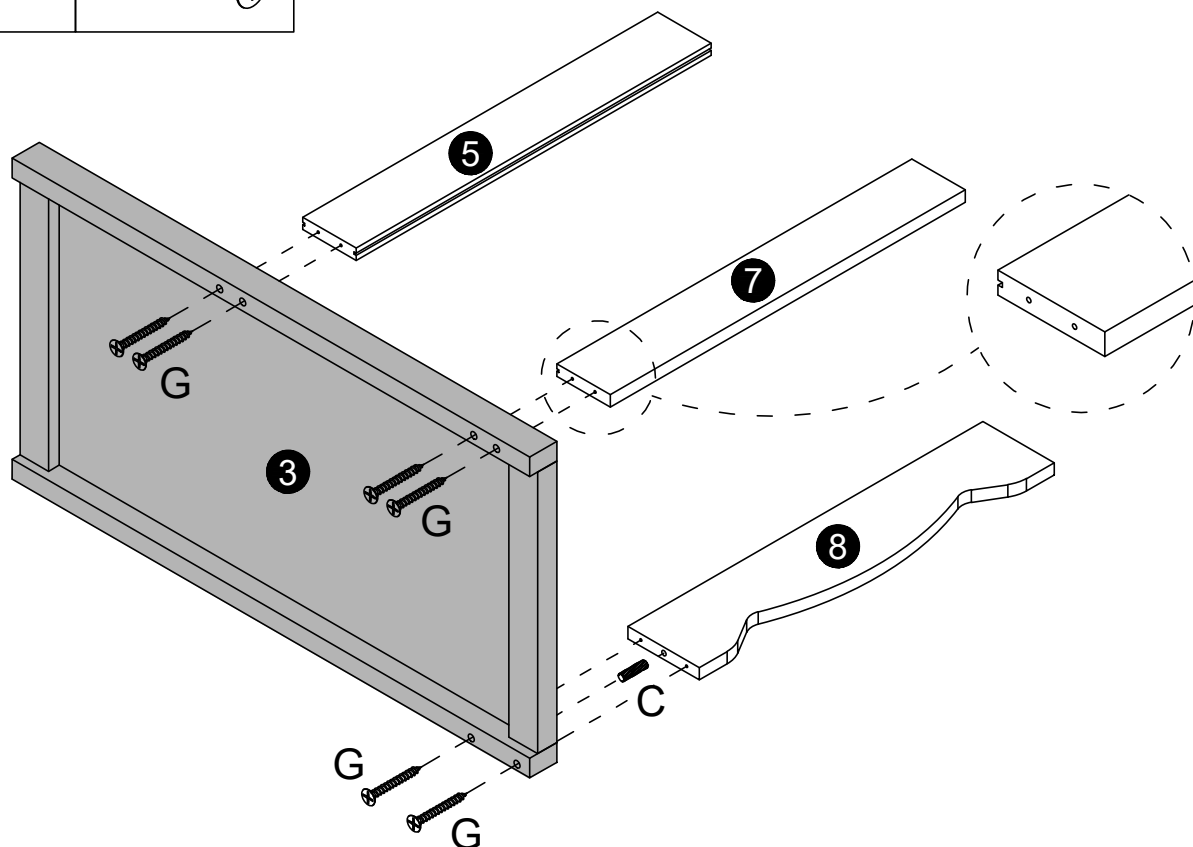


C x1

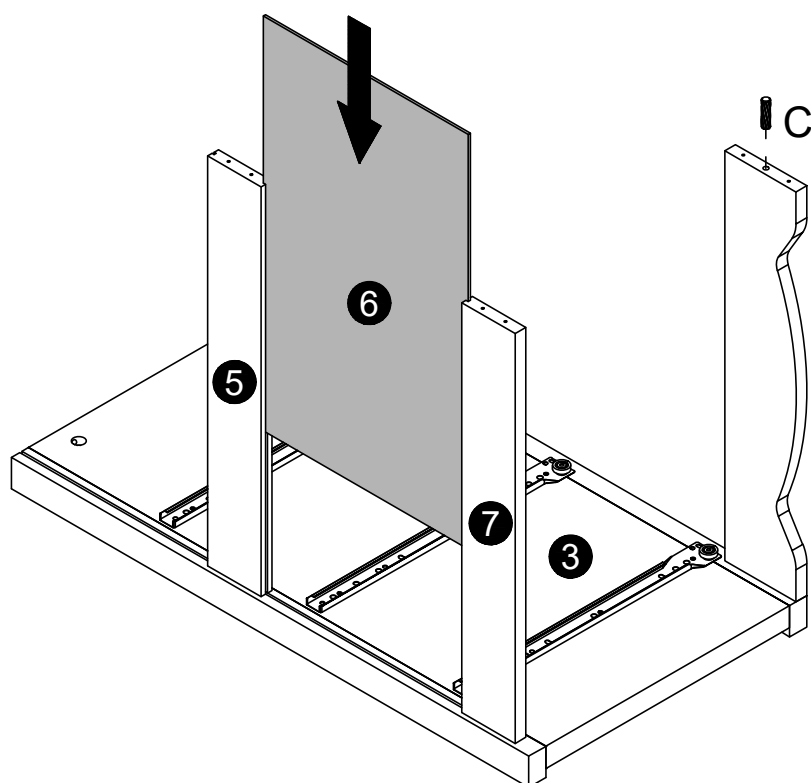

G x6




08

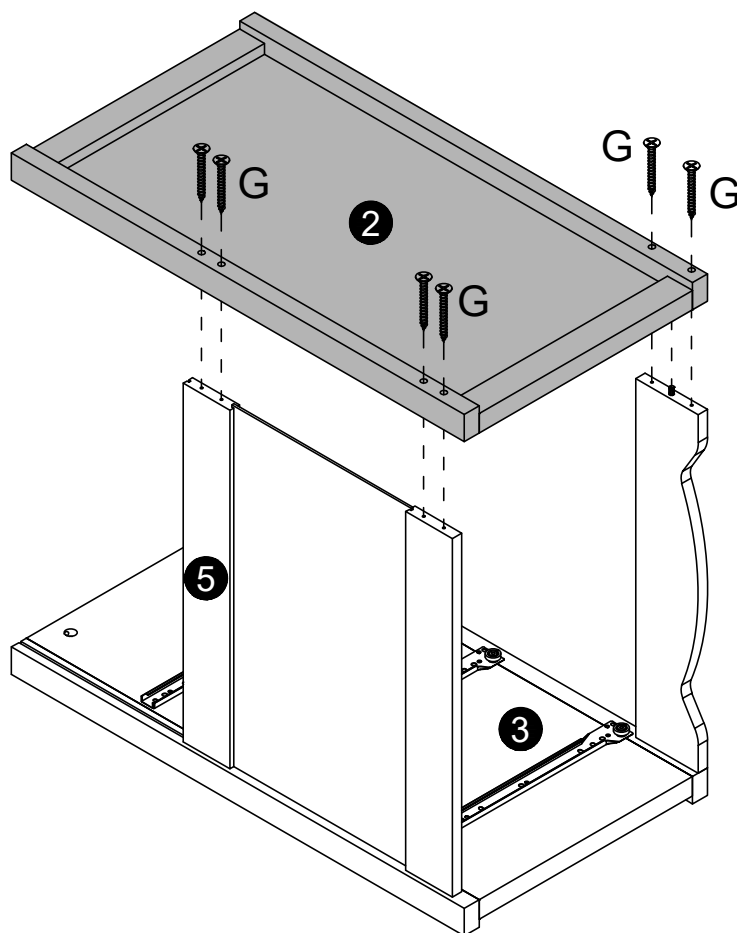


C x4




09

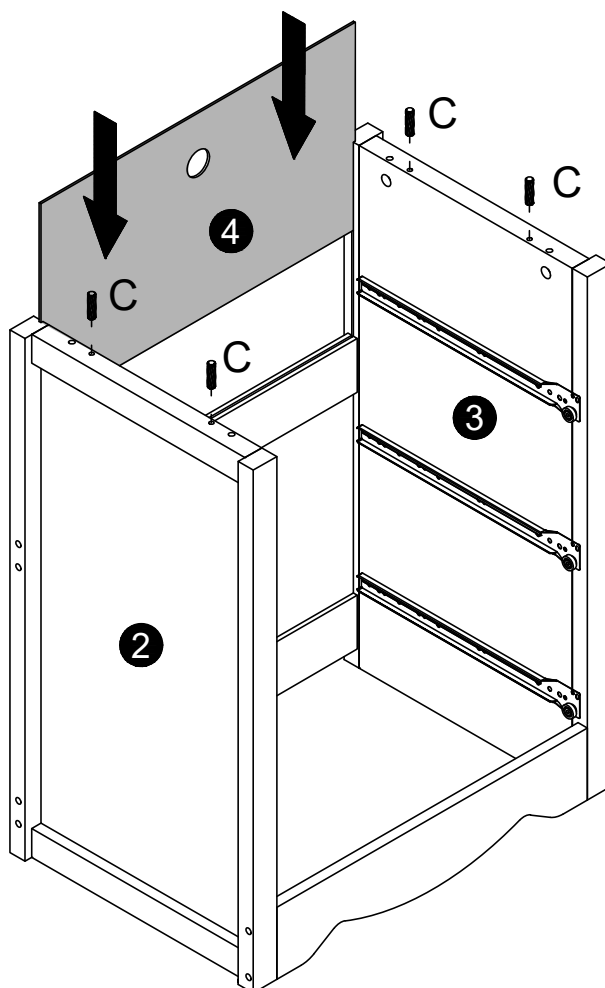

A x4




10

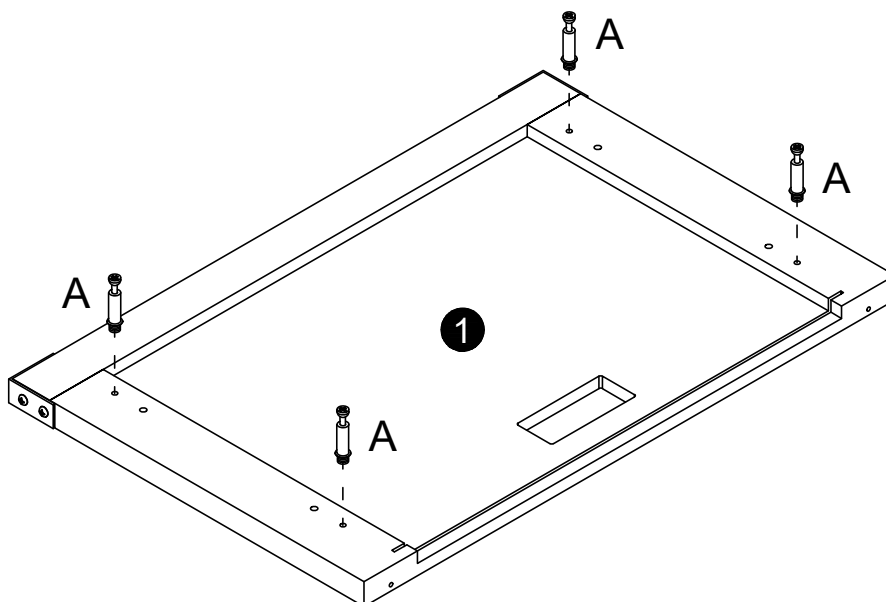

B x4



11

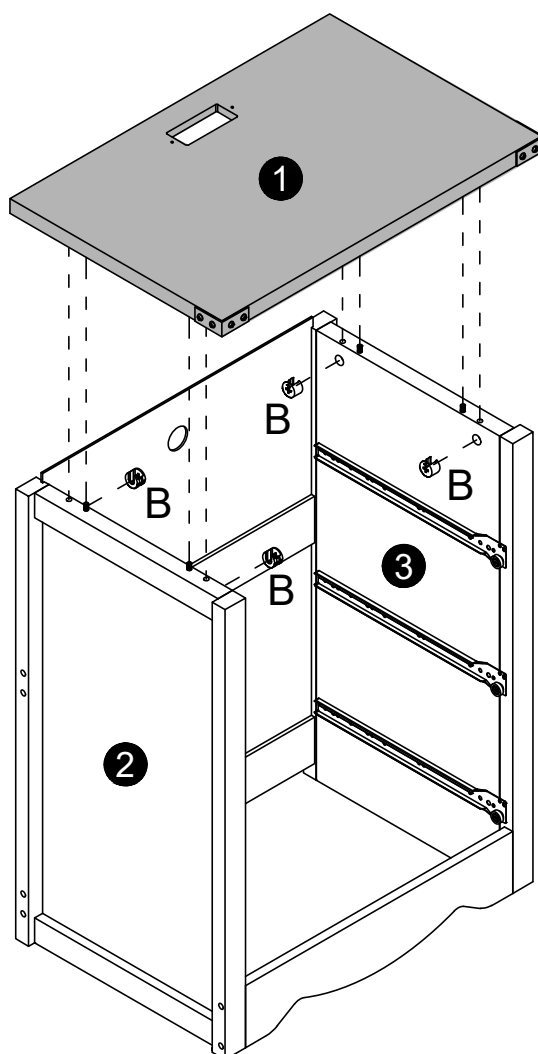

J x1



K x2




M x8



M-1




M-2



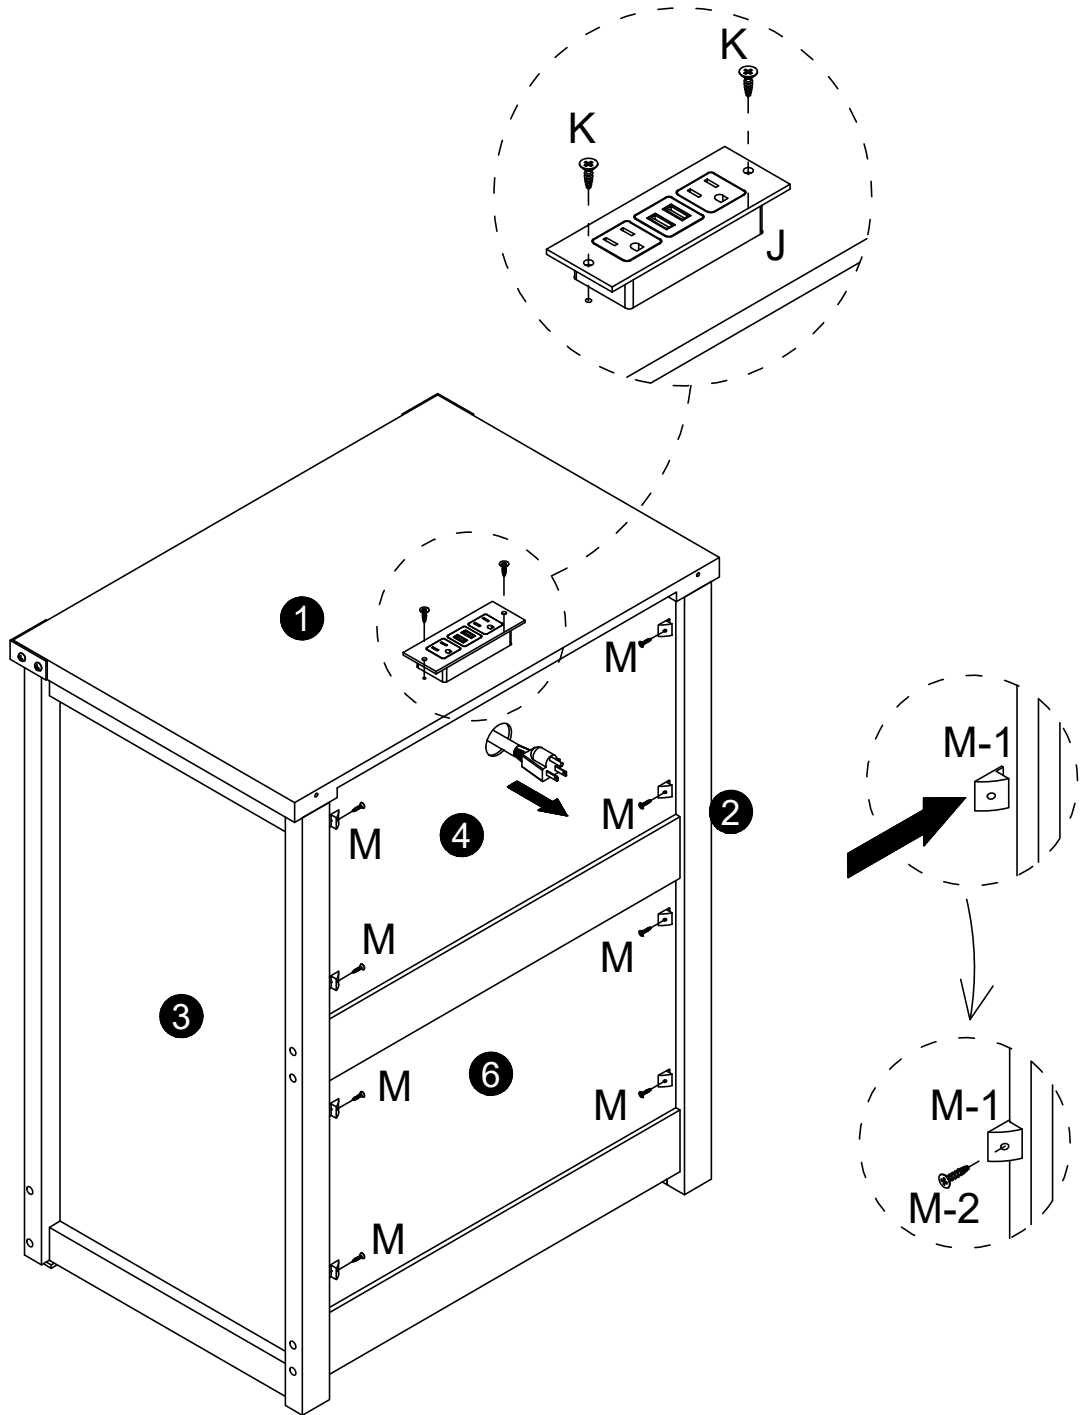





(1)

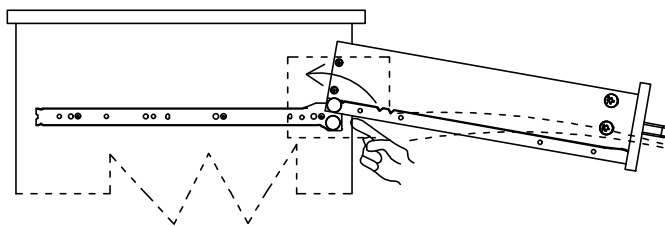


(2)

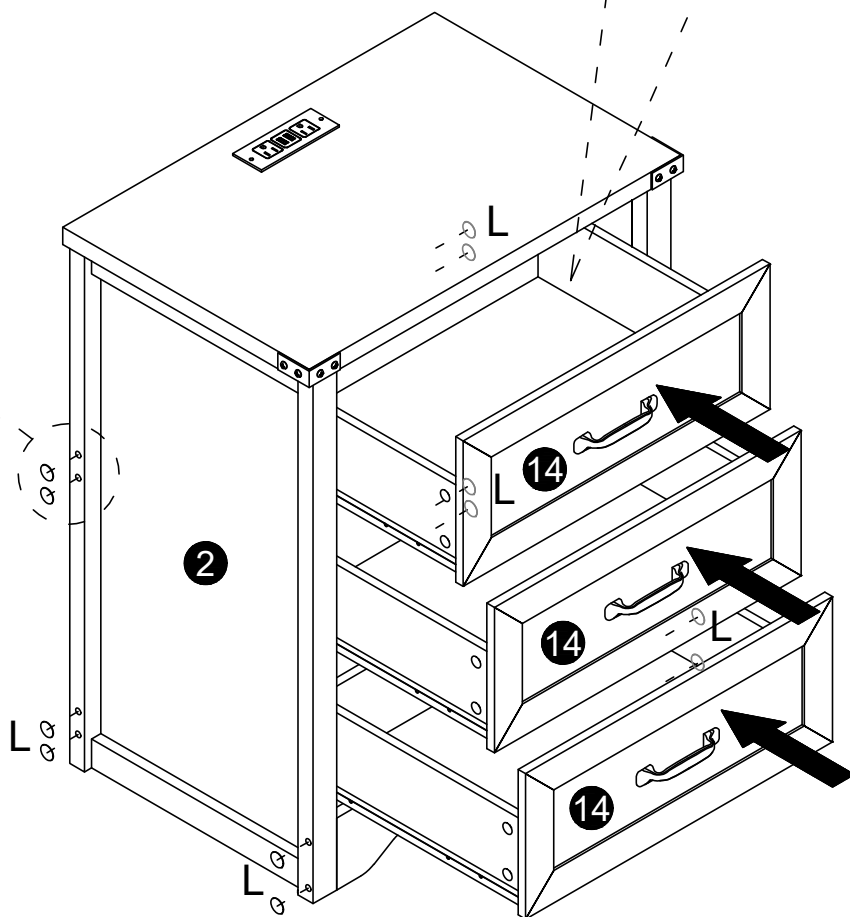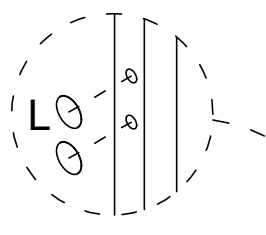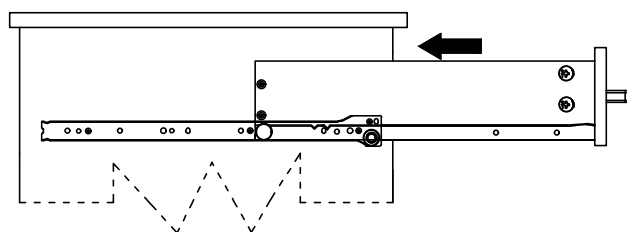


D x2



N x2



O x2




N-1

N-2
(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL

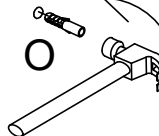

Then, put the expansion bolt into the hole

(4)x2

WALL

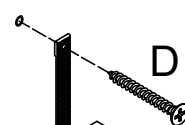

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

