

ASSEMBLY INSTRUCTIONS

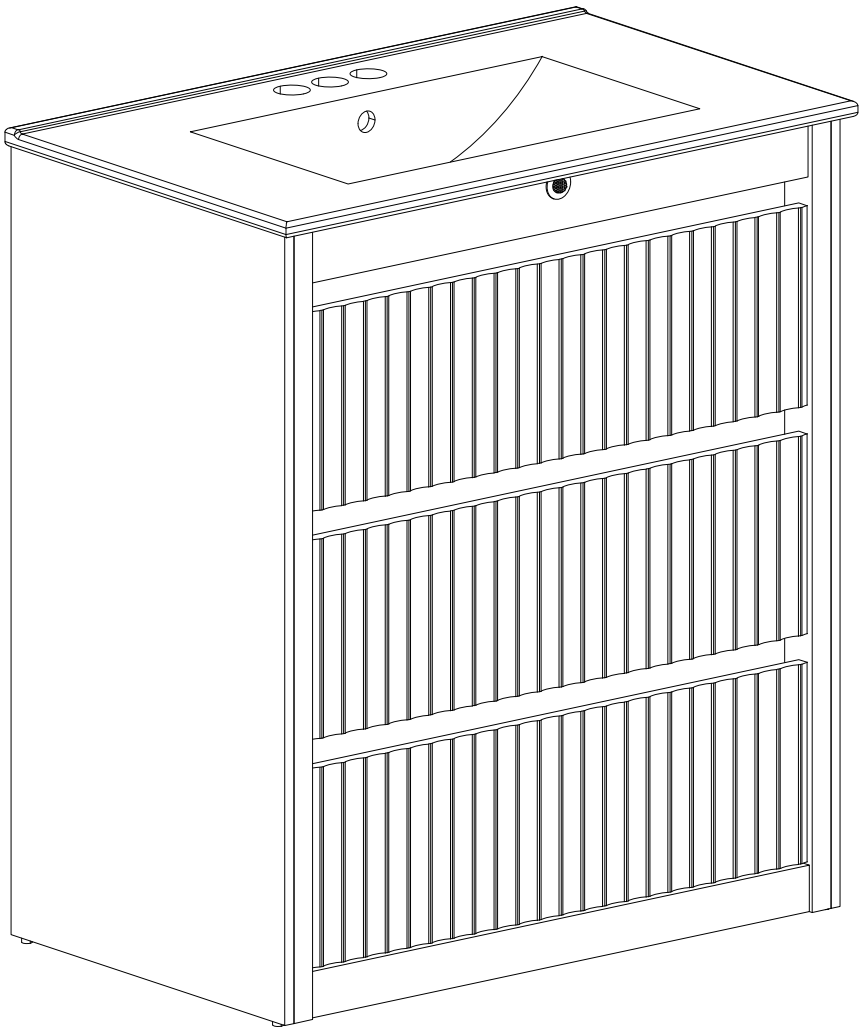


WARNING !

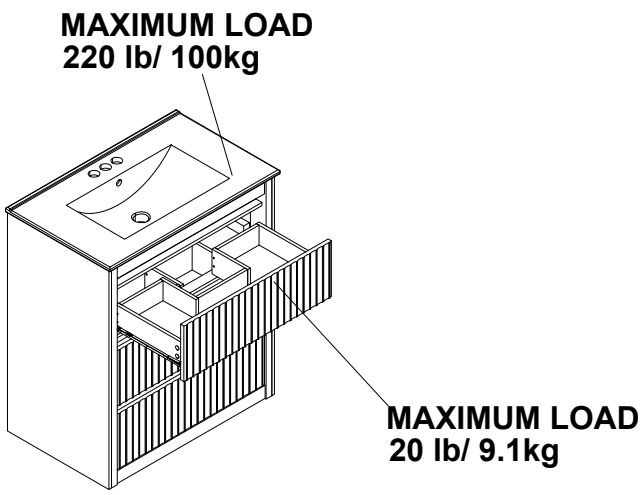


Estimated Time for Assembly

90 mins

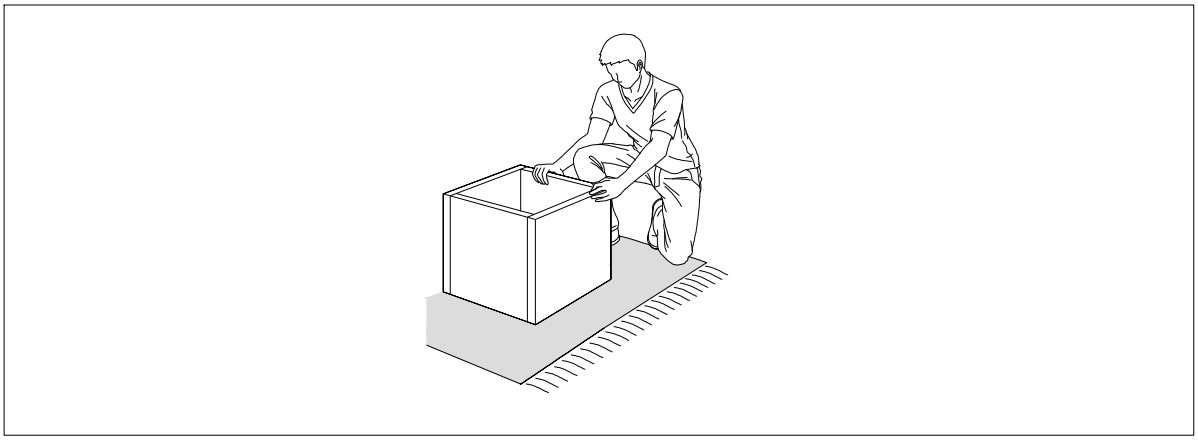

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

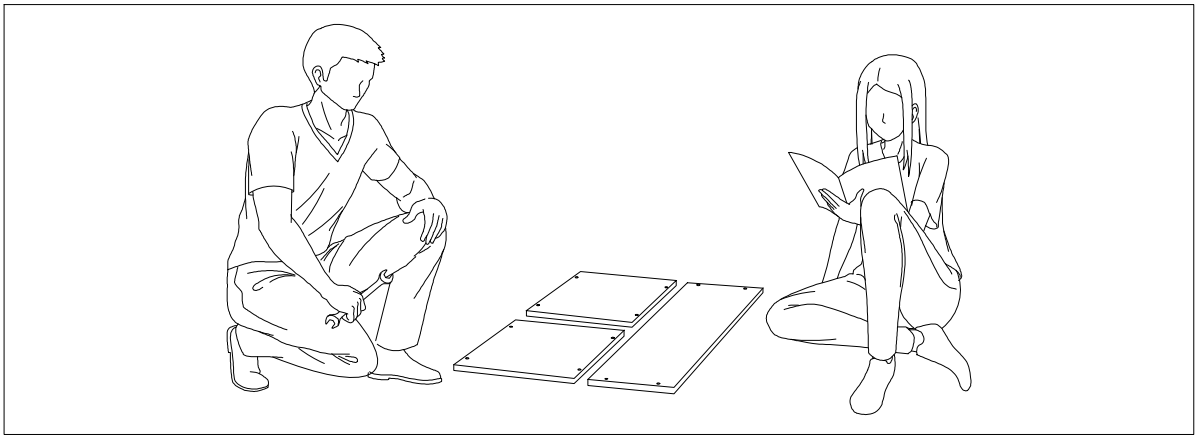


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

























Board Identification

Not actual size

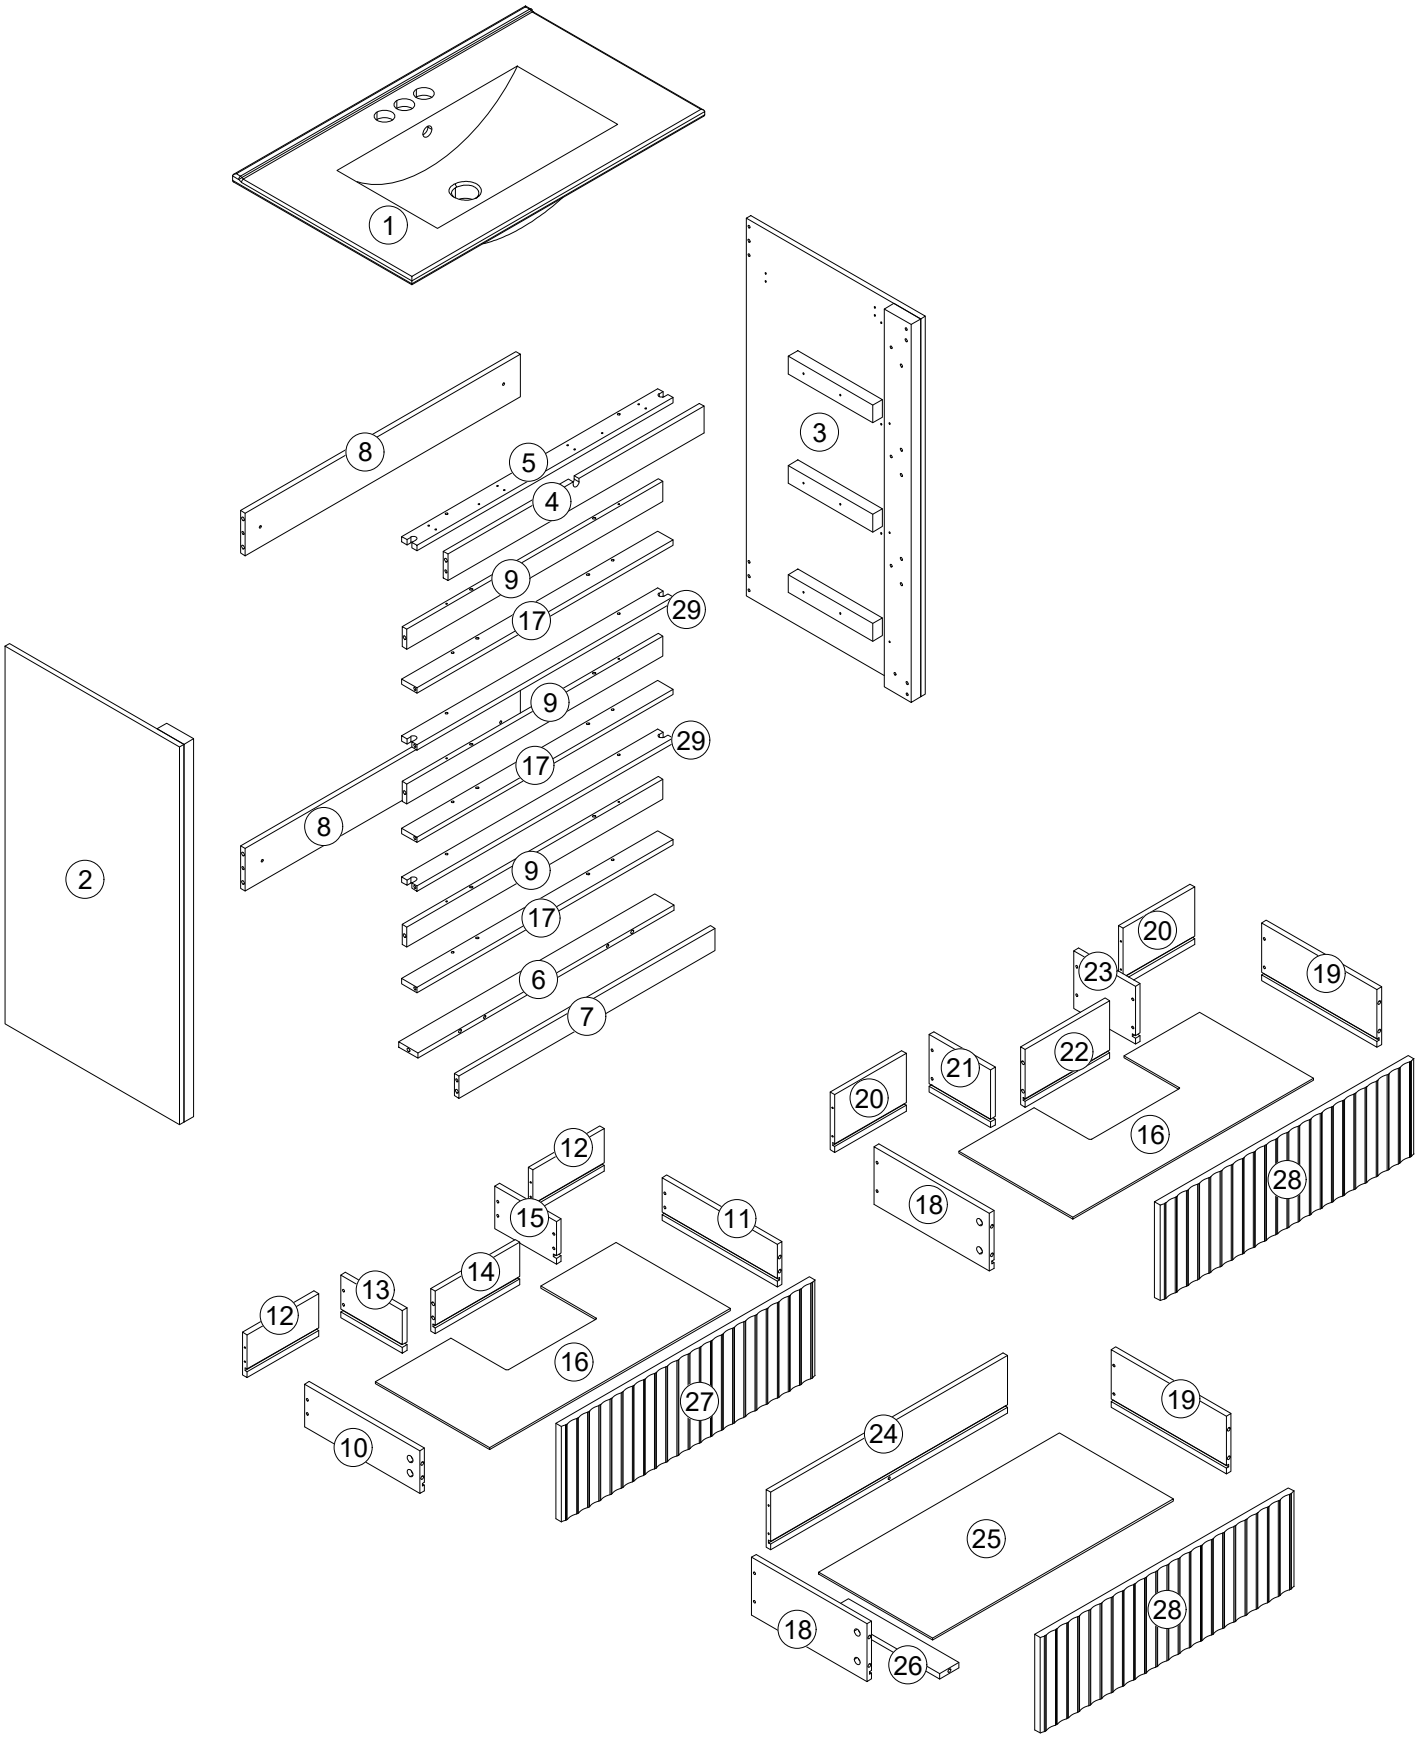





BOARD IDENTIFICATION


Not actual size

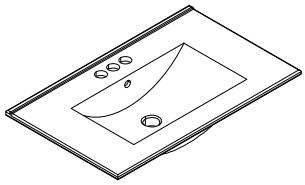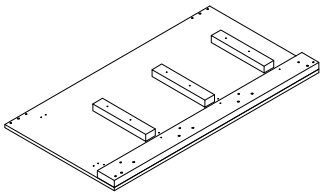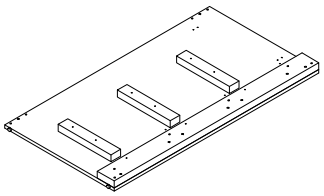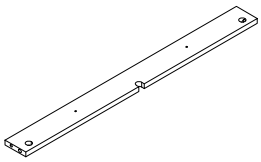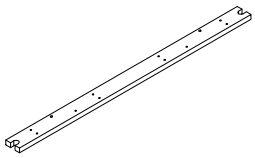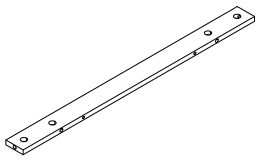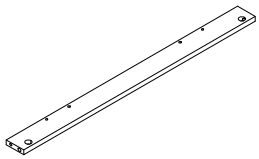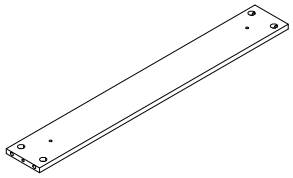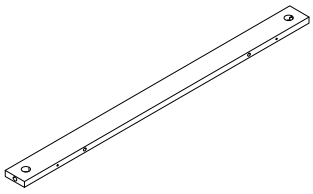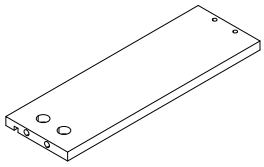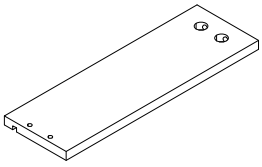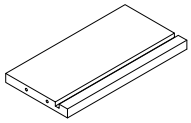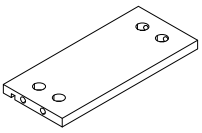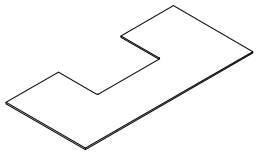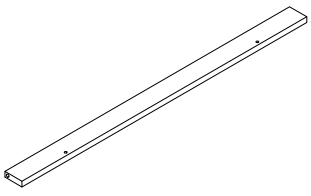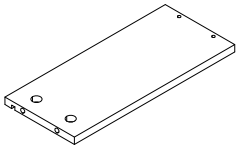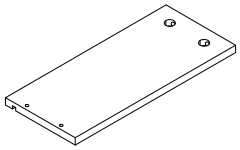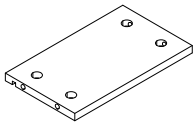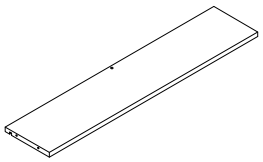
			
1 x 1	2 x 1	3 x 1	4 x 1
			
5 x 1	6 x 1	7 x 1	8 x 2
			
9 x 3	10 x 1	11 x 1	12 x 2
			
13 x 1	14 x 1	15 x 1	16 x 2
			
17 x 3	18 x 2	19 x 2	20 x 2
			
21 x 1	22 x 1	23 x 1	24 x 1

BOARD IDENTIFICATION

Not actual size

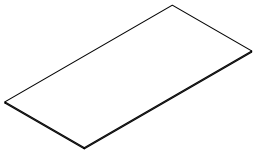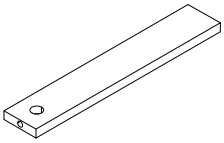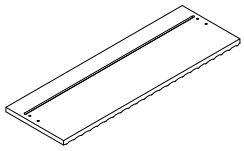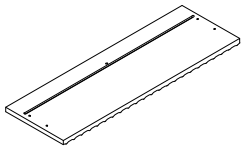			
(25) x 1	(26) x 1	(27) x 1	(28) x 2

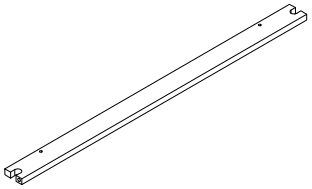
(29) x 2




Ø6x33.5mm

A	x43+4



Ø15x9.5mm

B	x43+4



Ø6x30mm

C	x32+3



Ø4x45mm

D	x 2




Ø3.5x12mm

E	x40+4




F1=750mm F2=1150mm F3=1400mm F4x1 F5x1

F	x 1SET



Ø6x30mm

G	x 2




Ø3x15mm

H	x 8+1




Ø4x38mm


I	x33+3



J	x 1




K	x 9+1

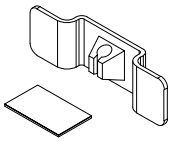


L	x 1SET




M	x 2

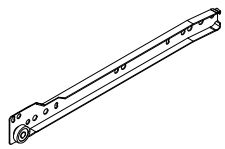


CL	x 3

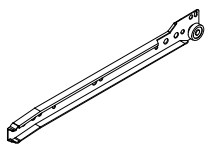

CR	x 3

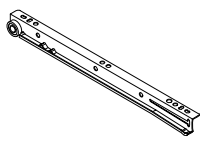

DL	x 3

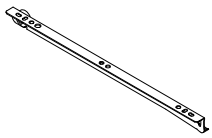


DR	x 3


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

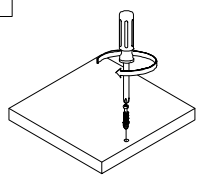

2

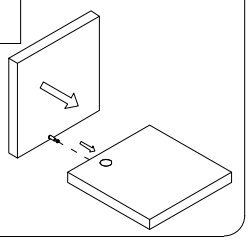


3

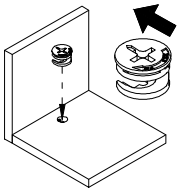


The opening must point toward the edge of the board

4

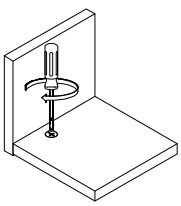

STEP 1

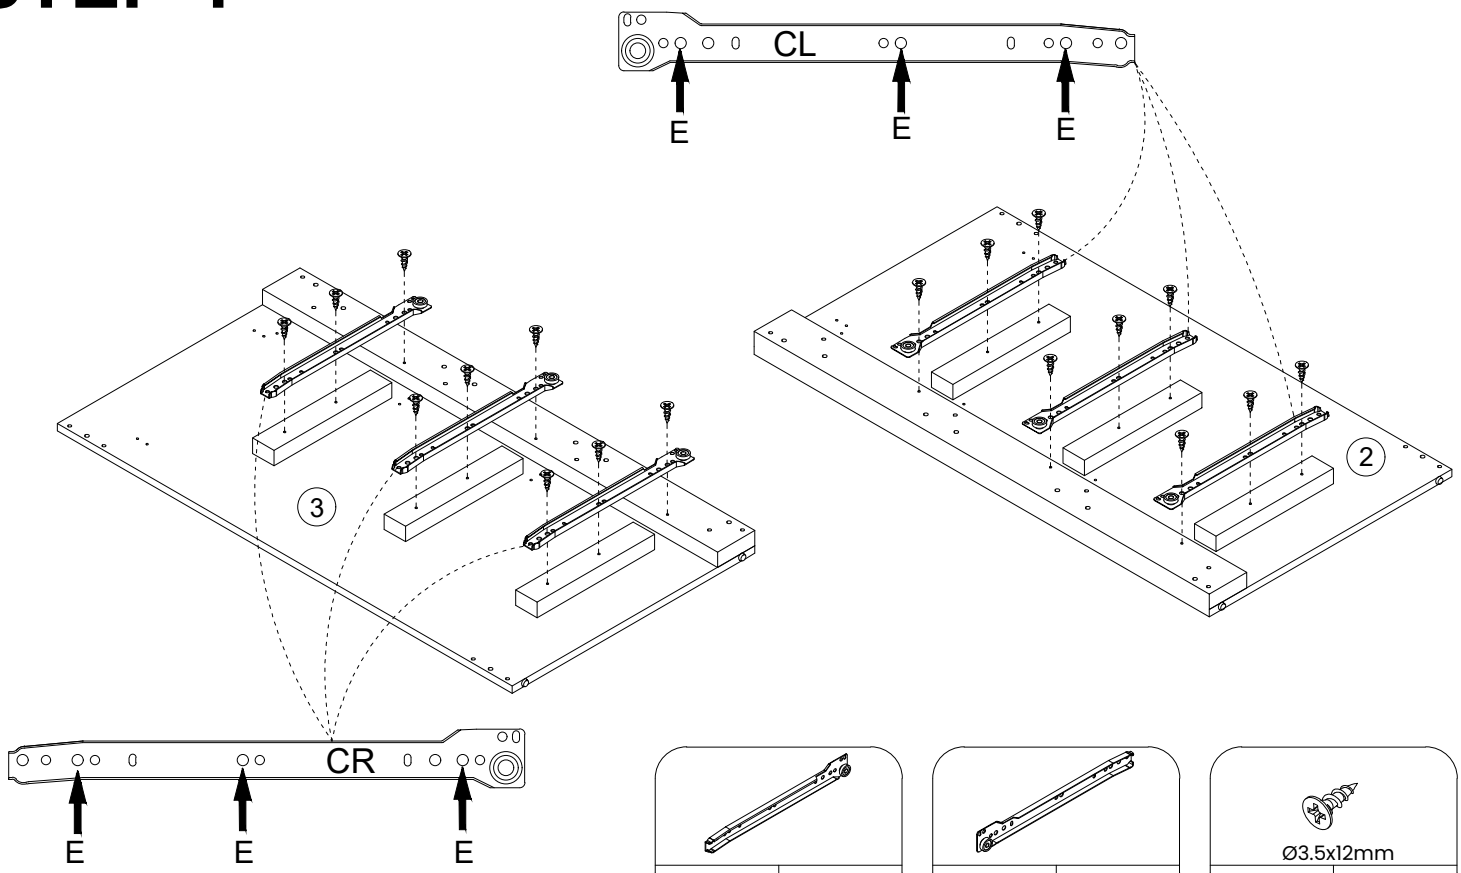


CR	x 3

CL	x 3

Ø3.5x12mm

E	x 18


STEP 2

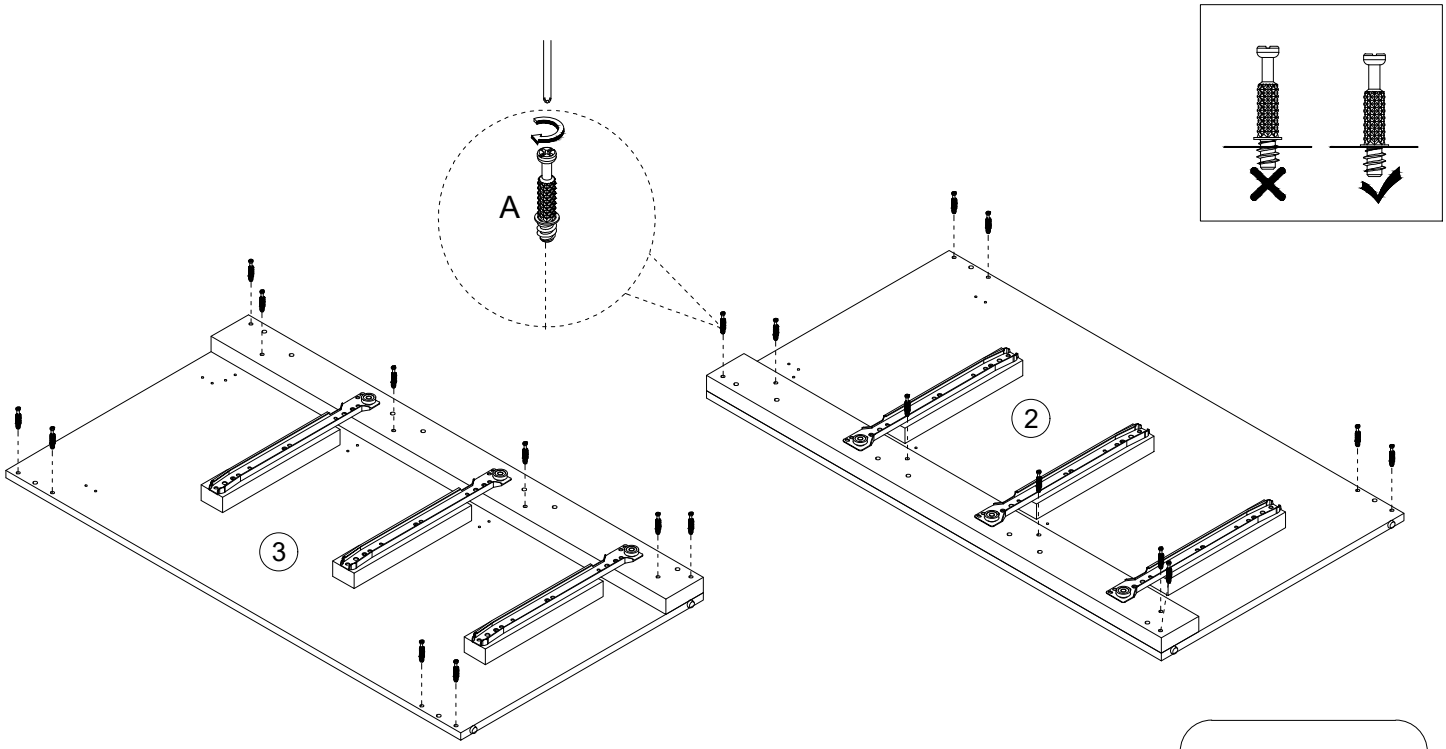



Ø6x33.5mm

A	x 20

STEP 3

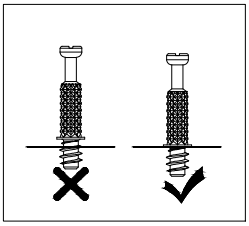

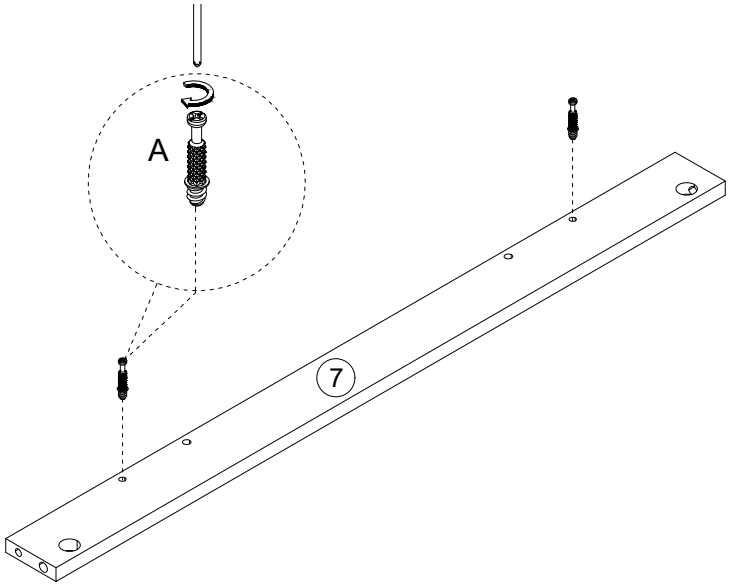






Ø6x33.5mm

A	x 2

STEP 4

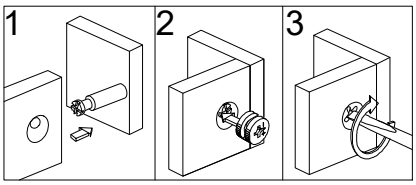

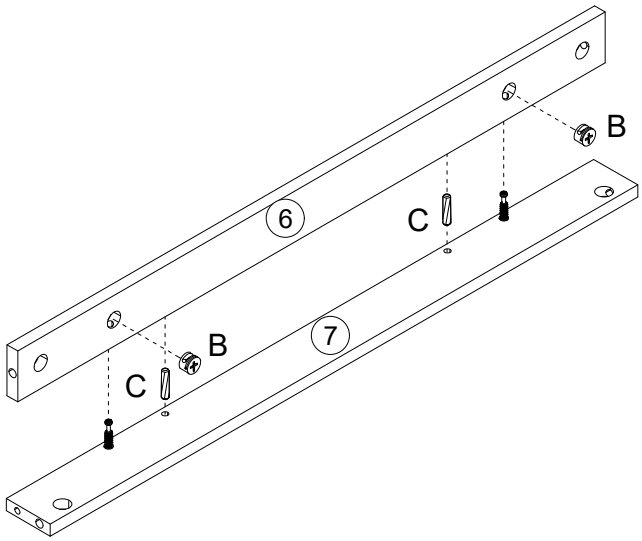



Ø6x30mm


C	x 2



Ø15x9.5mm


B	x 2

STEP 5

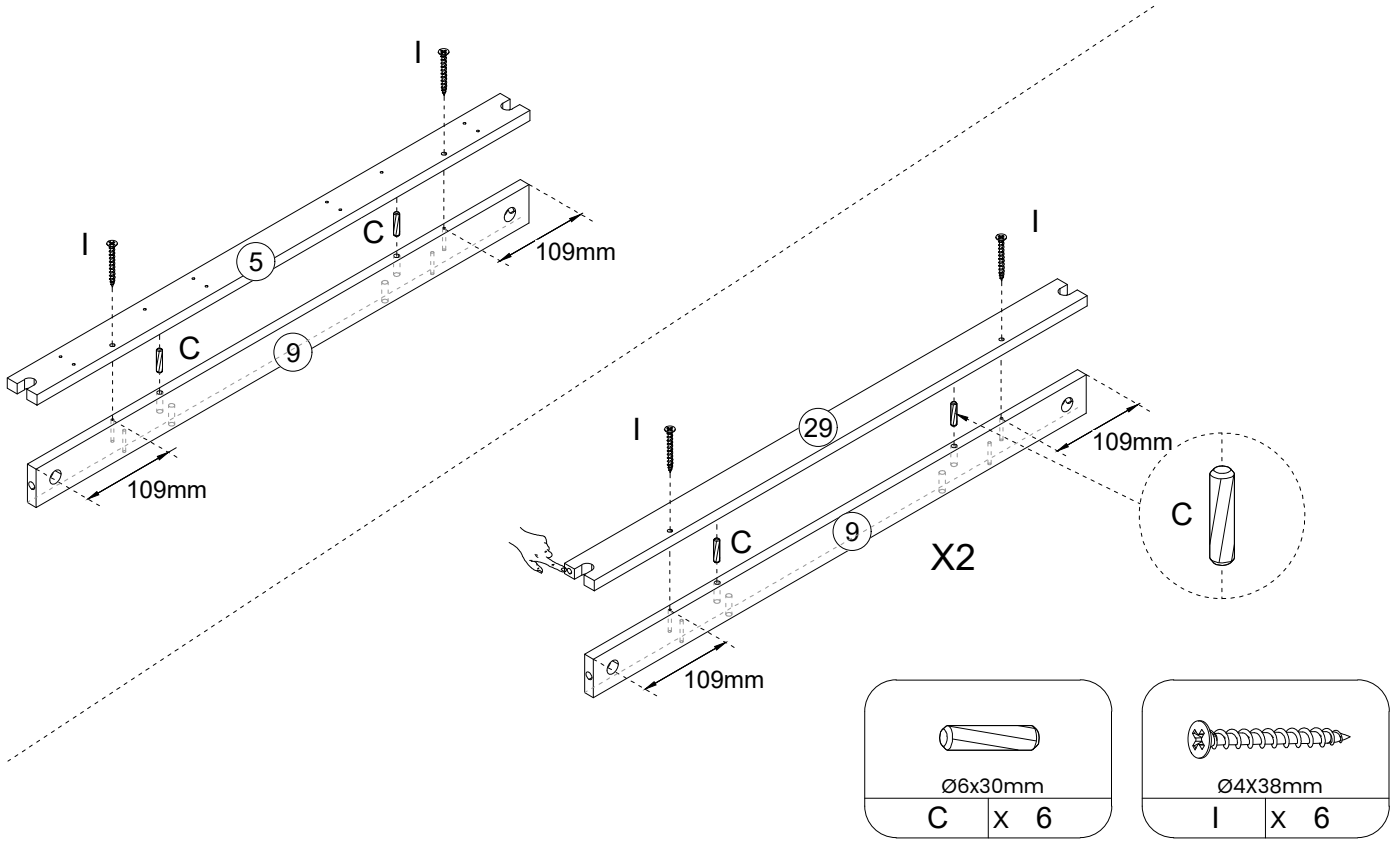
I
I
C
5
109mm
C
9
109mm
I
I
29
109mm
C
C
9
X2
109mm


Ø6x30mm
C x 6
Ø4X38mm
I x 6

STEP 6

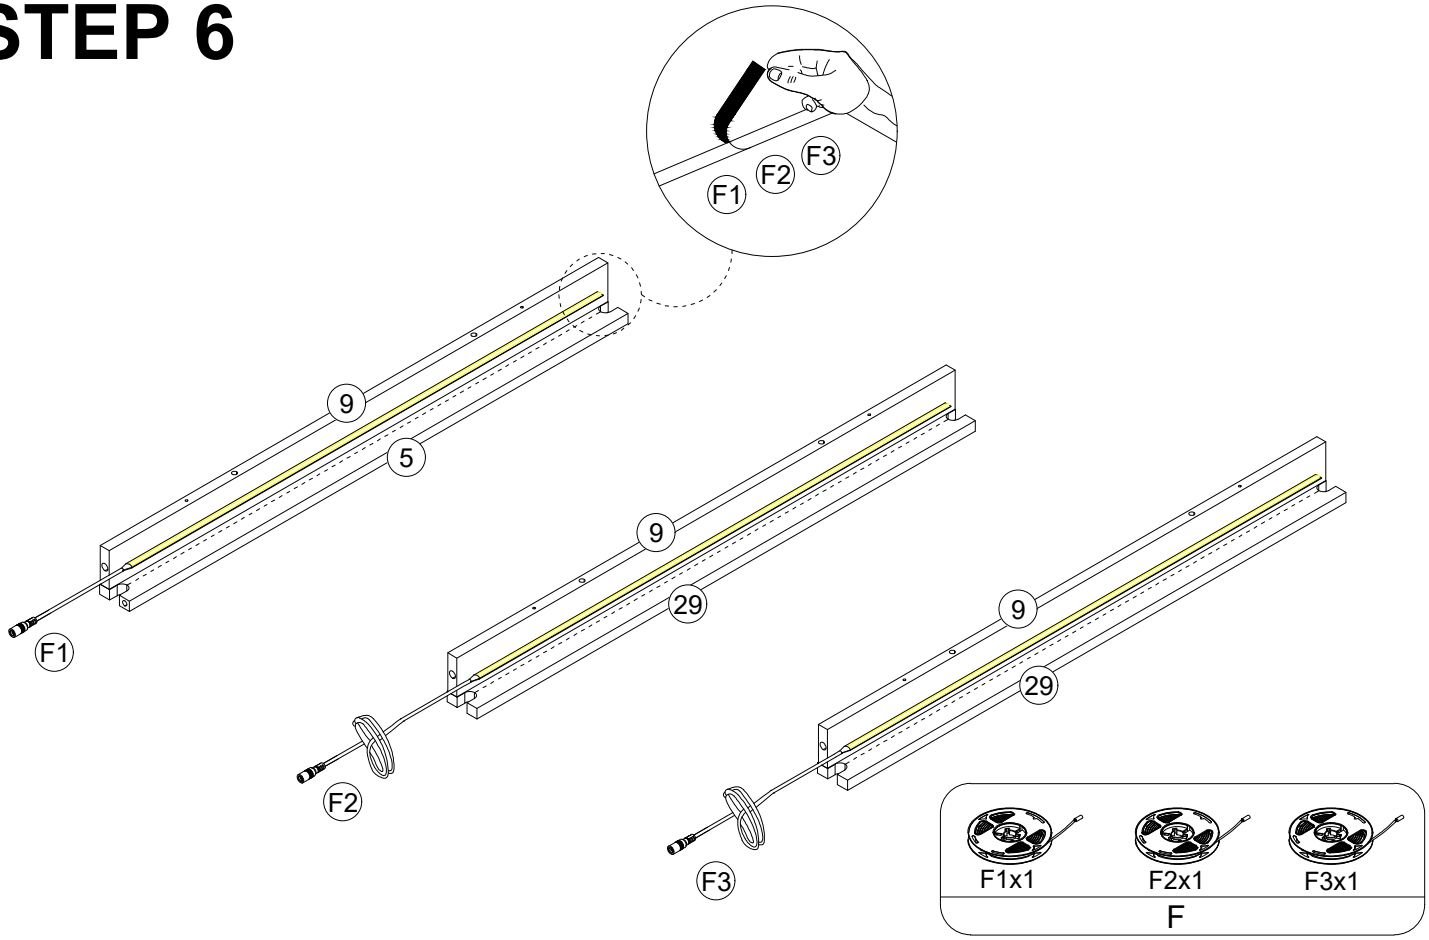
F3
F2
F1
9
5
F1
9
29
F2
9
29
F3

F1x1
F2x1
F3x1
F


STEP 7

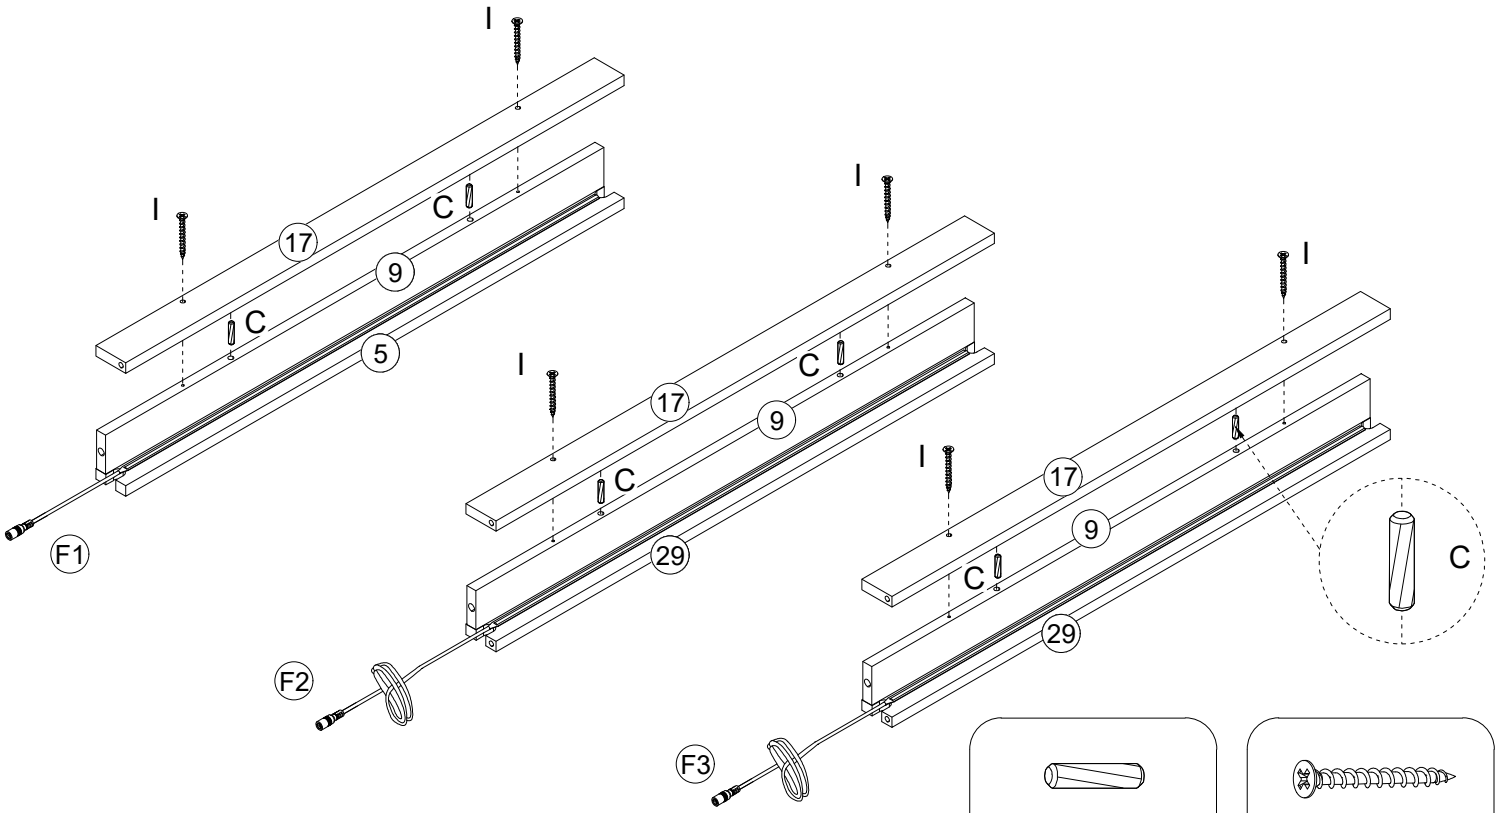

I
C
17
9
5
F1
I
C
17
9
29
F2
I
C
17
9
29
F3


Ø6x30mm
C x 6


Ø5X38mm
I x 6

STEP 8

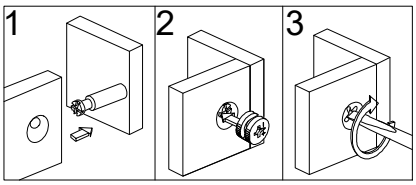

1
2
3

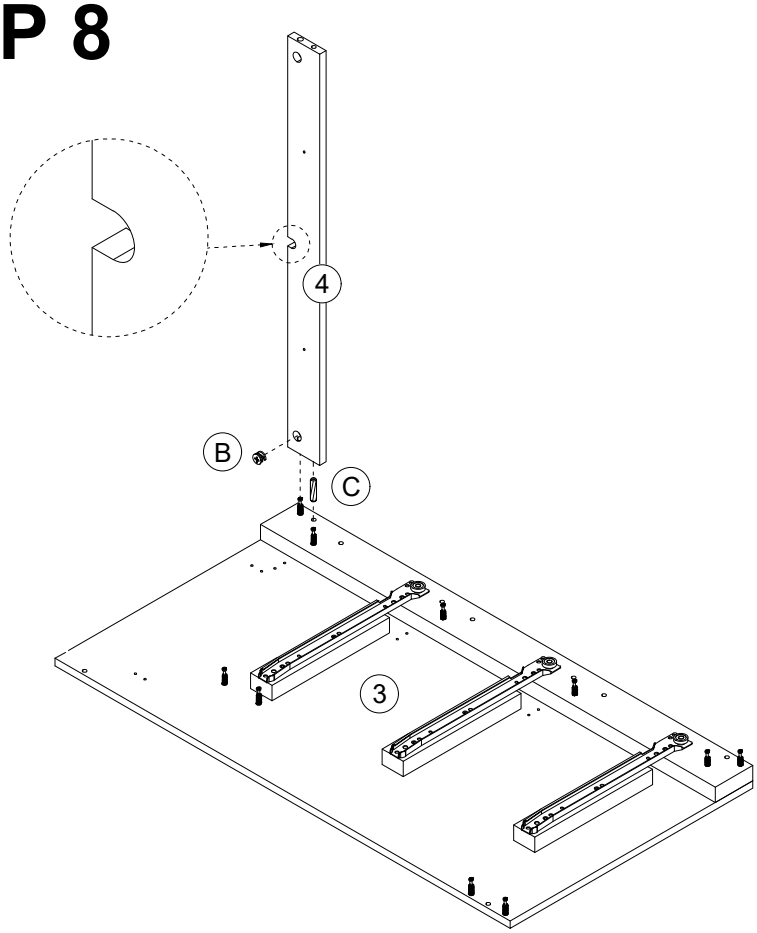

4
B
C
3



Ø6x30mm
C x 1


Ø15x9.5mm
B x 1


STEP 9

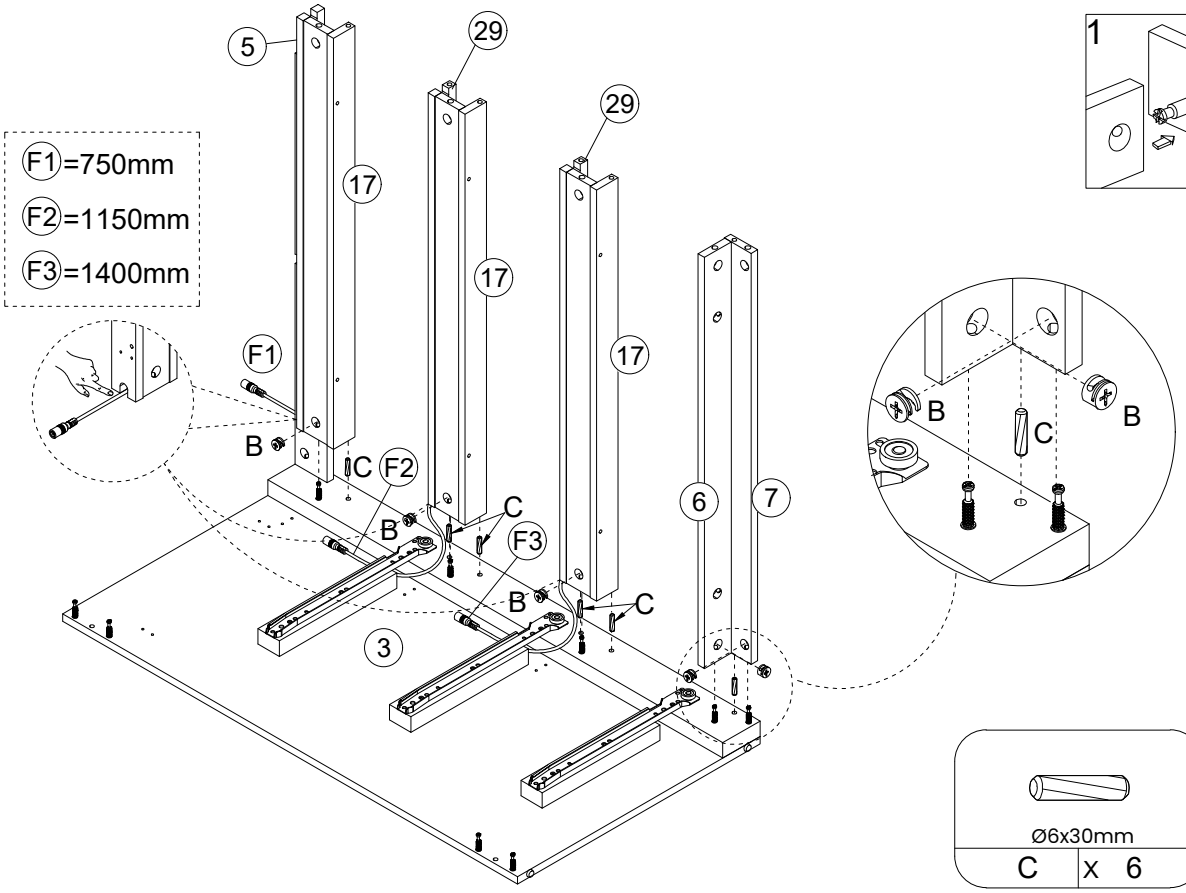


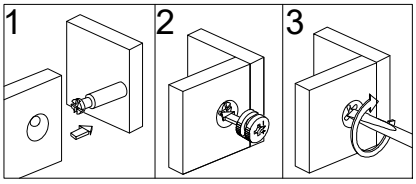

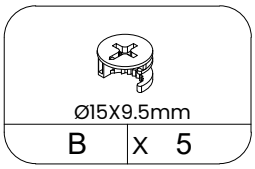



STEP 10

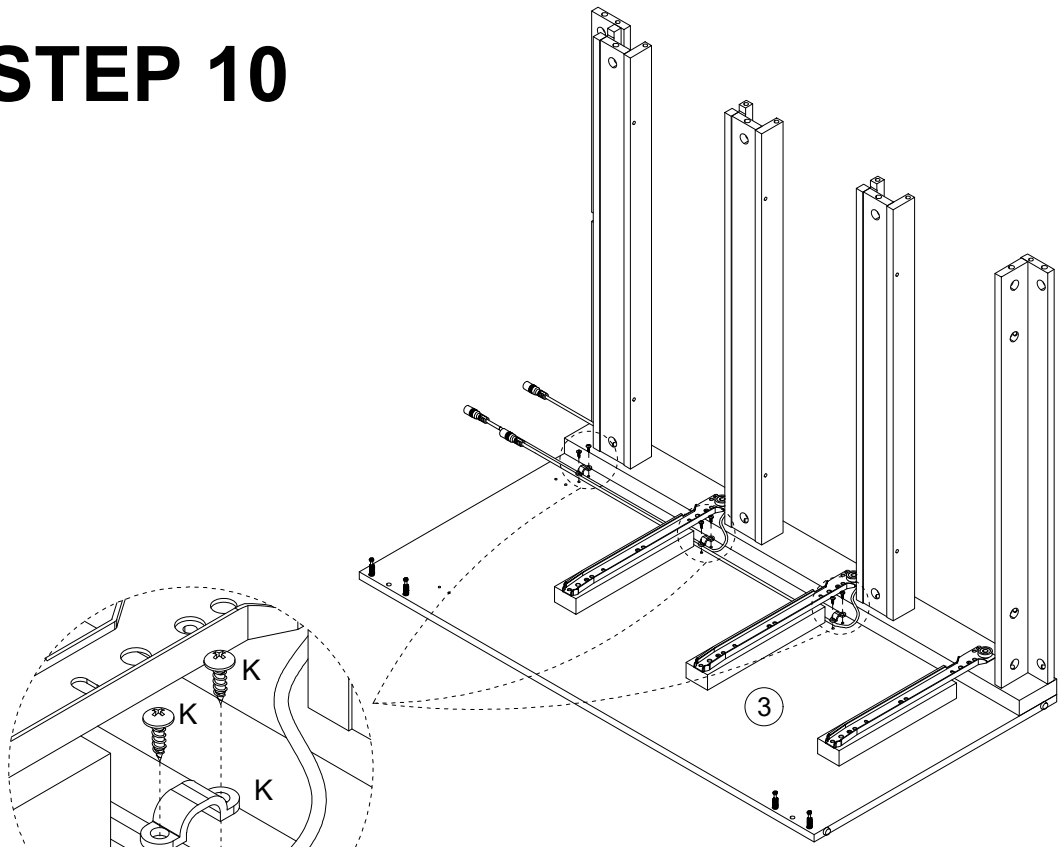

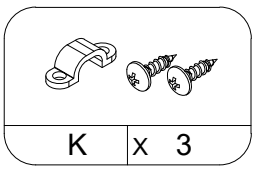

STEP 11

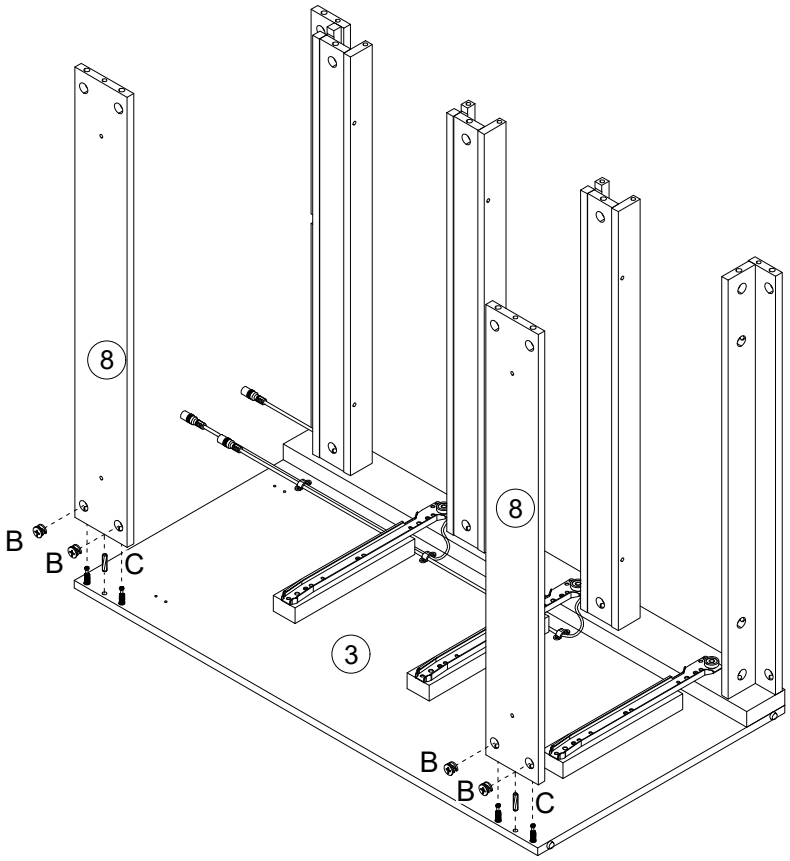


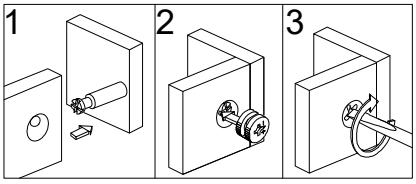






STEP 12

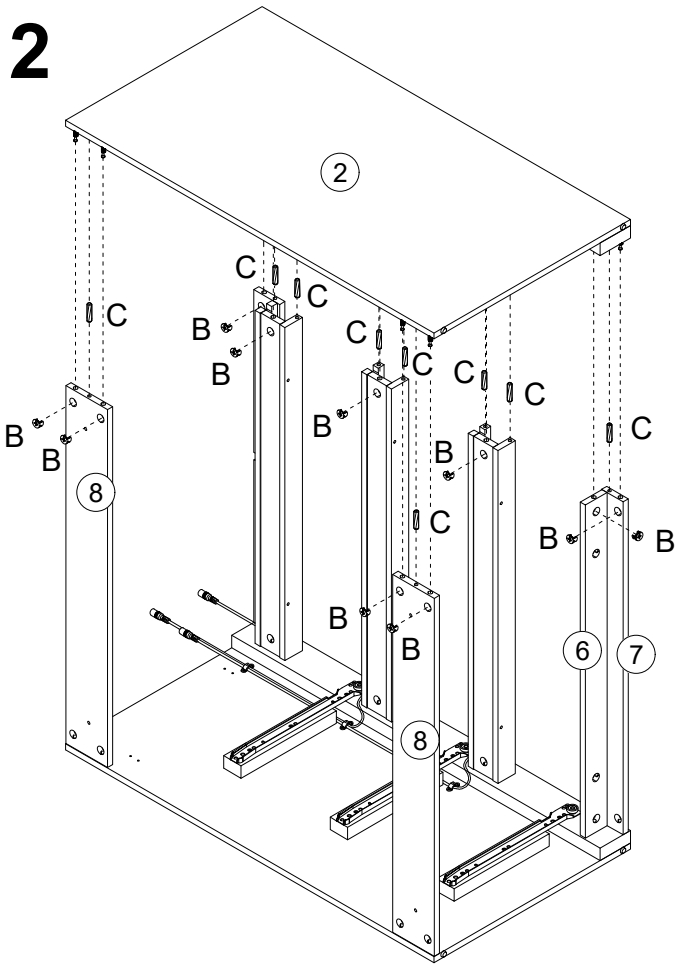


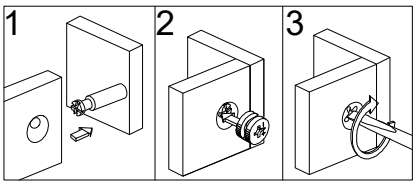






STEP 13

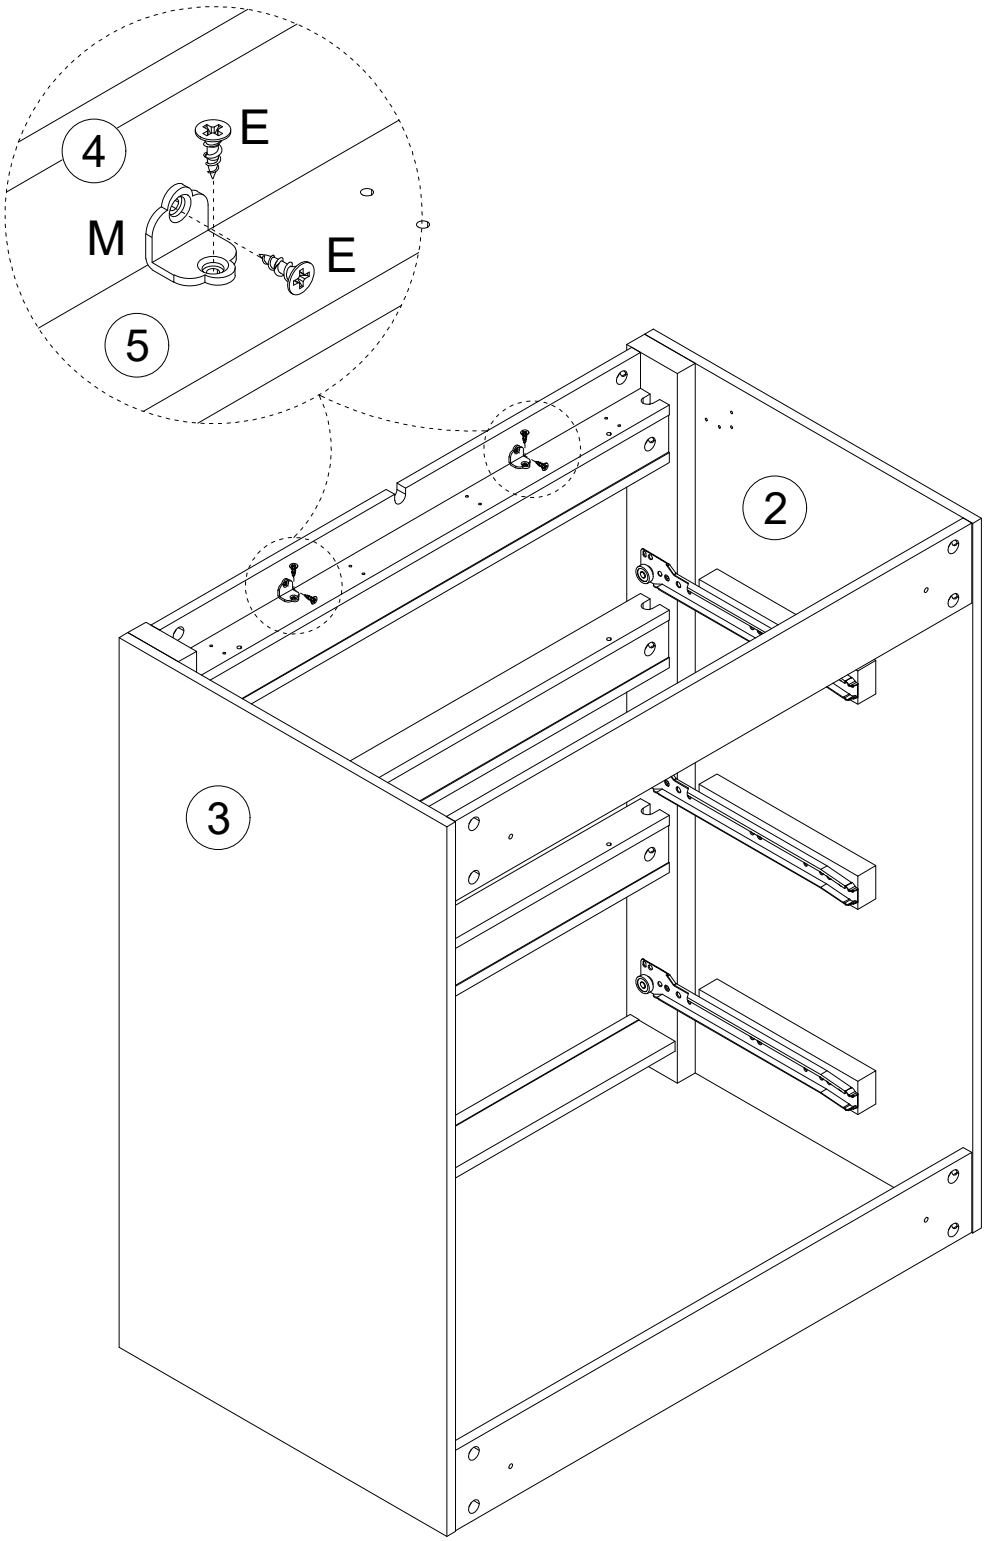


	
M	x 2


	
Ø3.5x12mm	
E	x 4

STEP 14

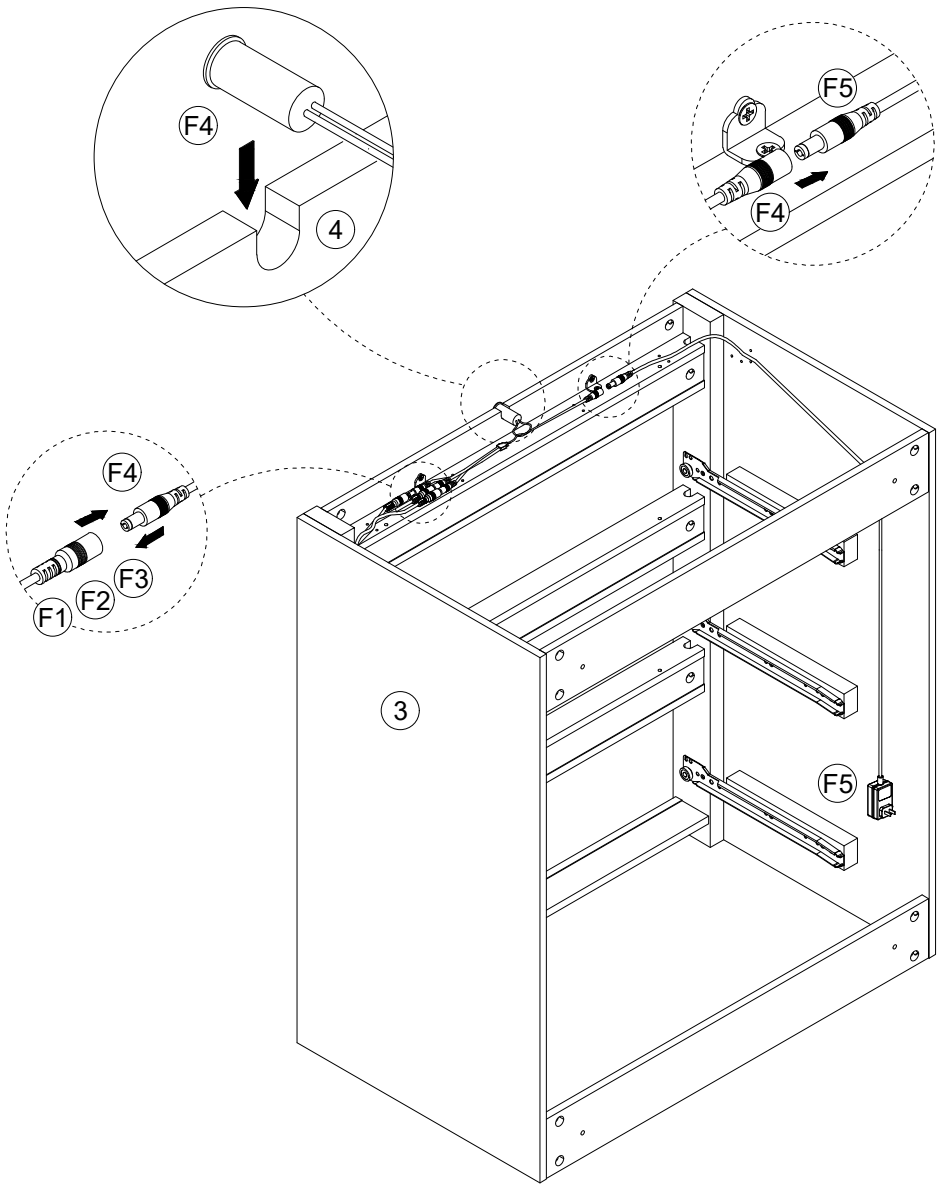

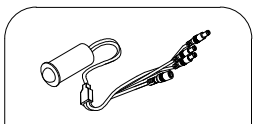



F4	x 1

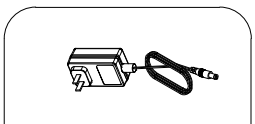


F5	x 1


STEP 15

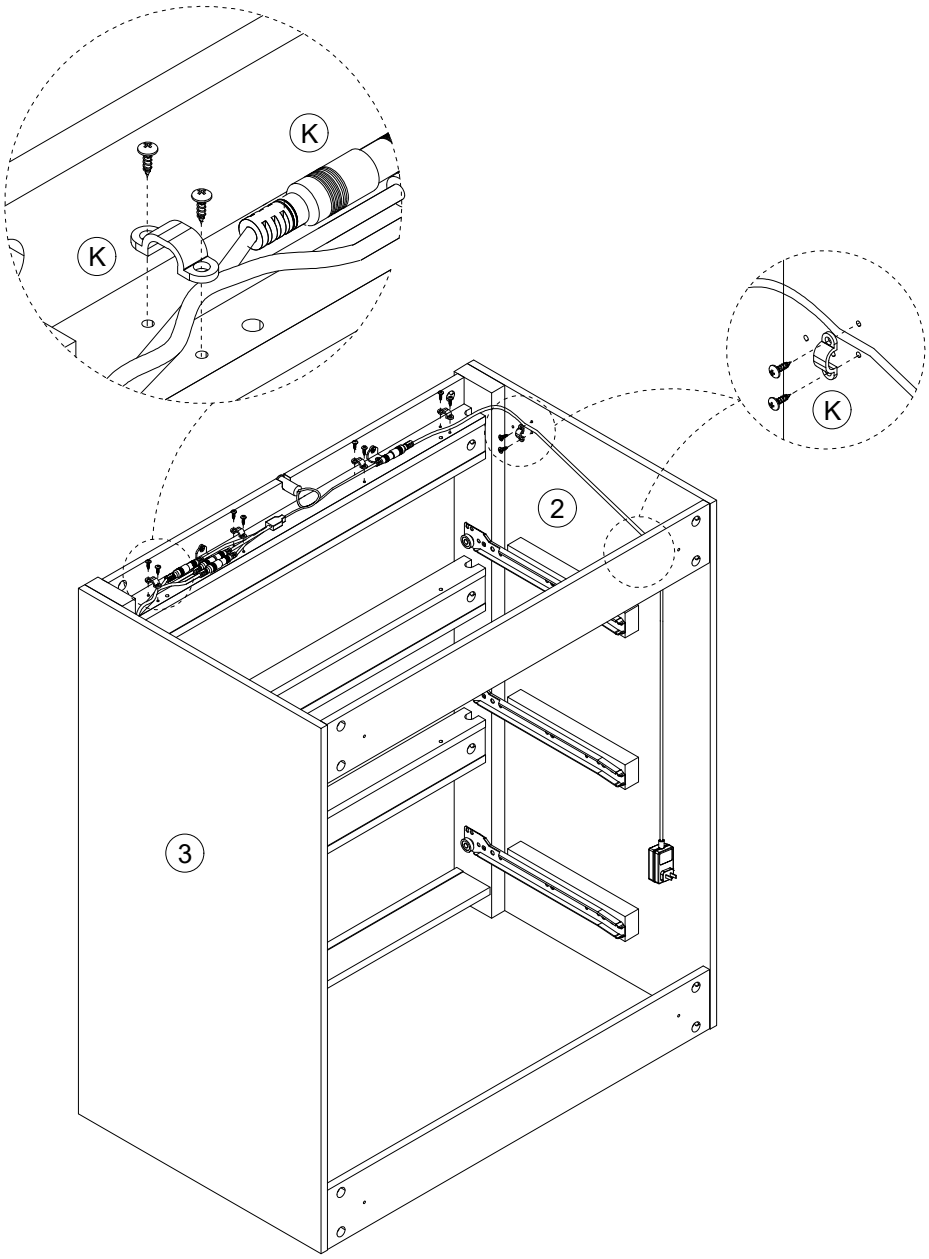

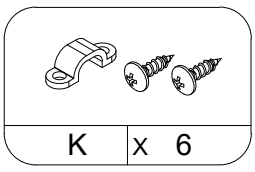



STEP 16

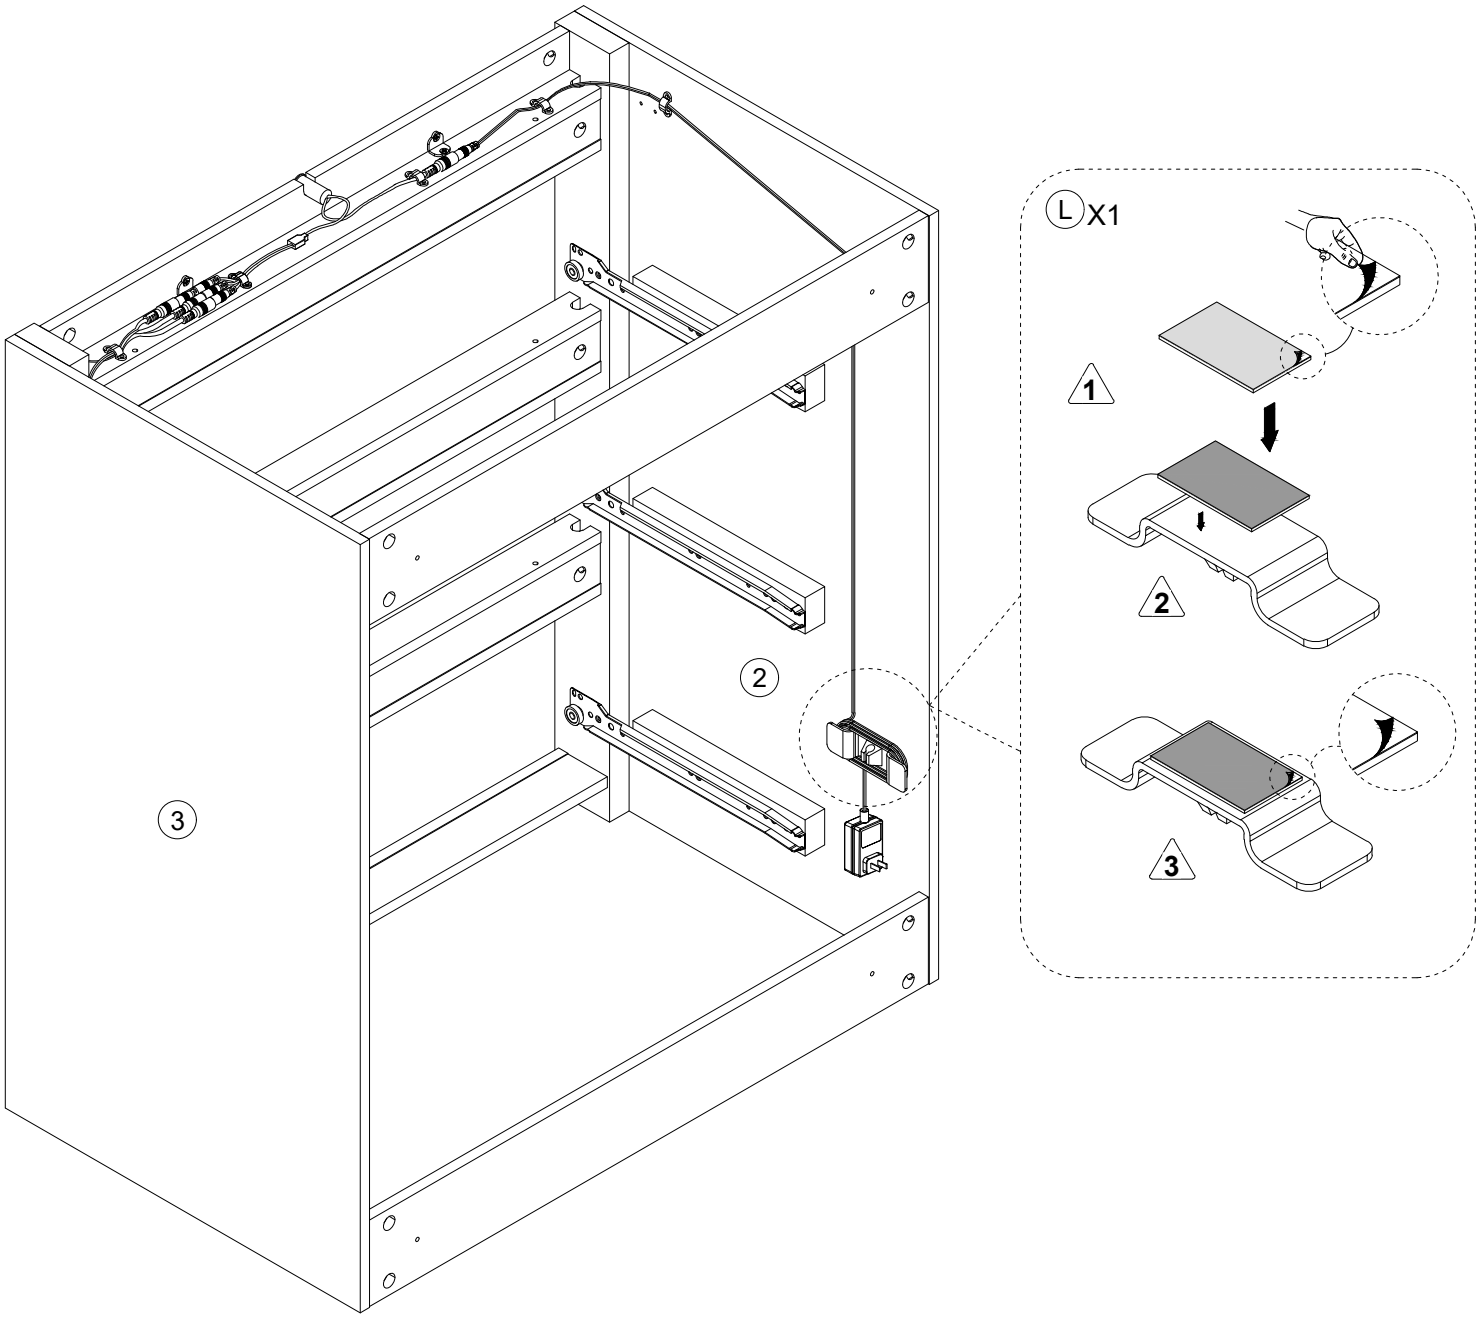


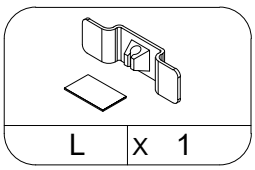


STEP 17

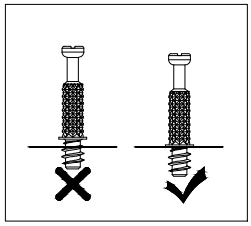


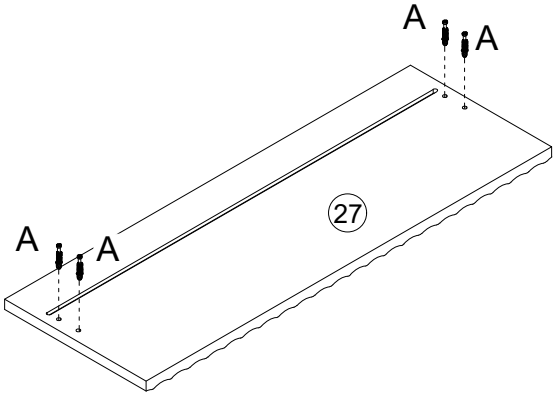


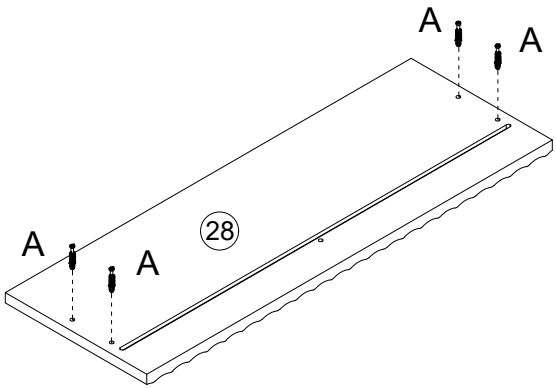


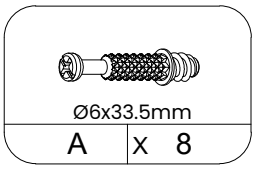



STEP 18

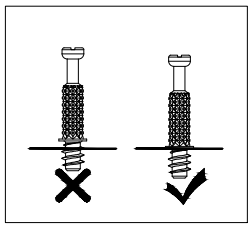


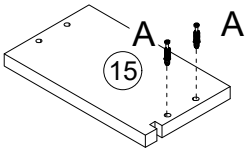

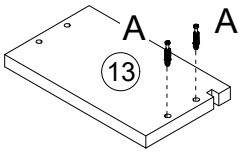


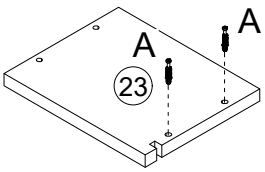


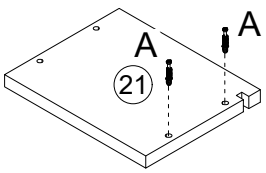

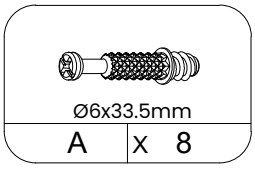



STEP 19

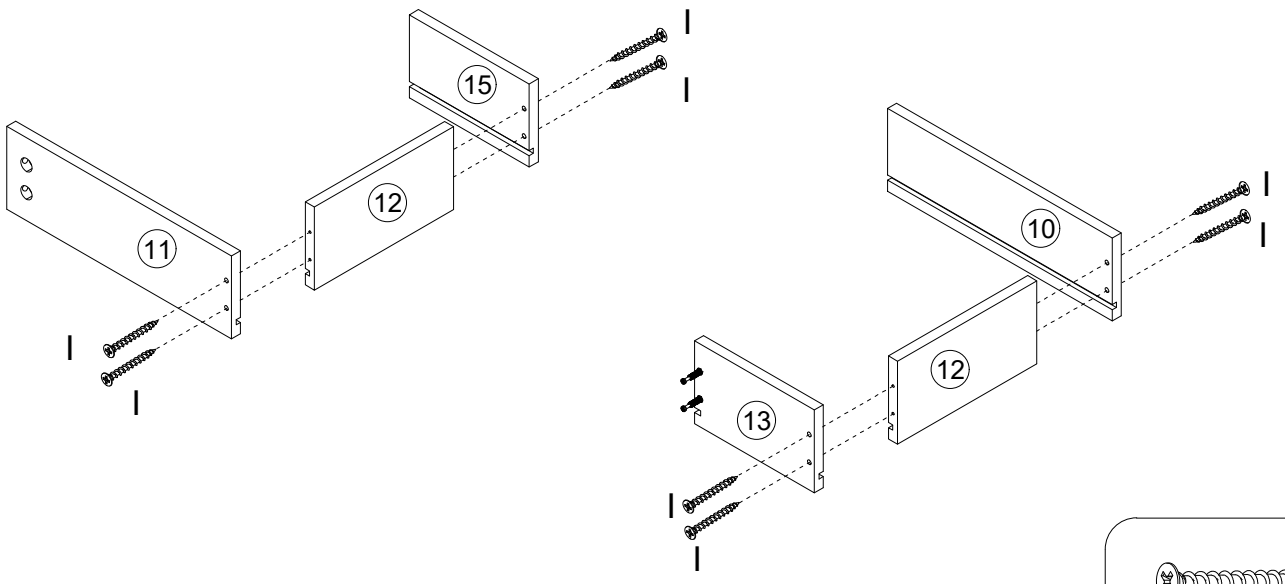


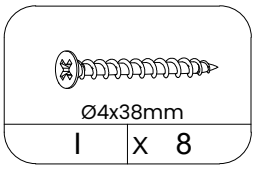


STEP 20

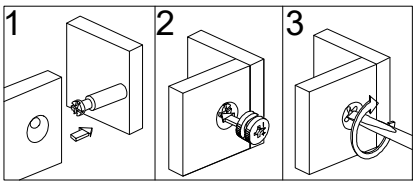

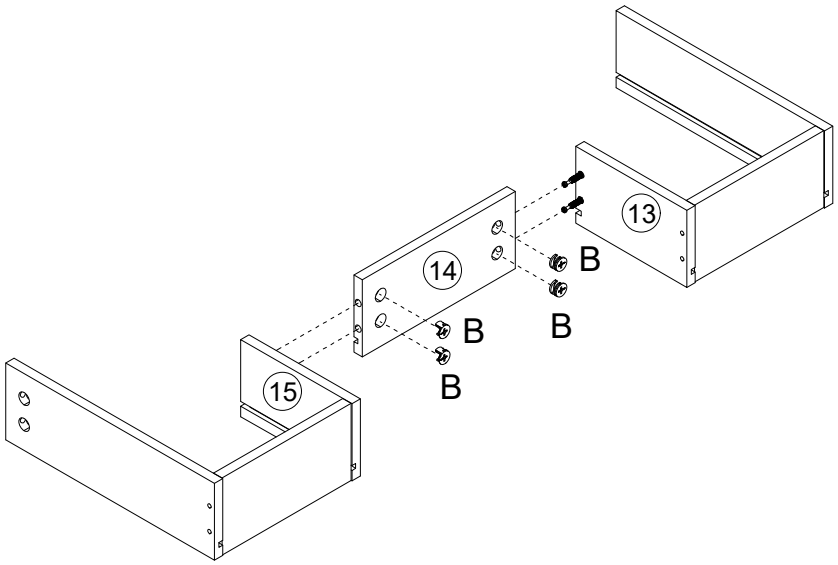


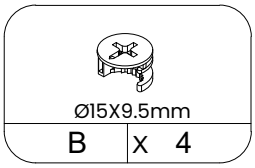



STEP 21

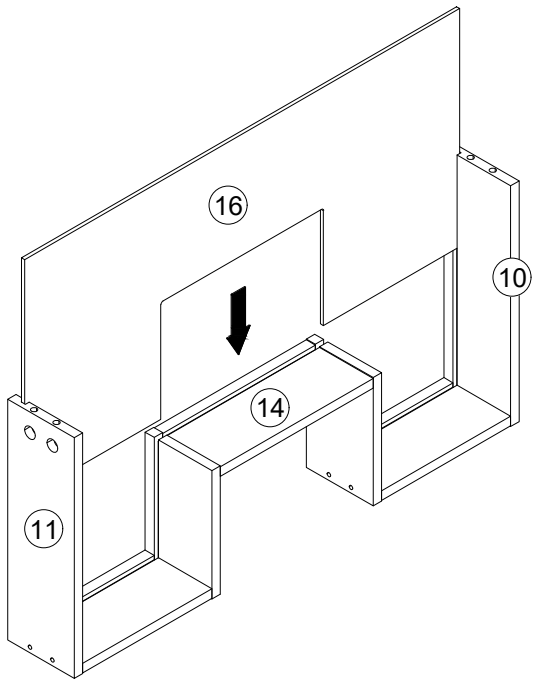


STEP 22

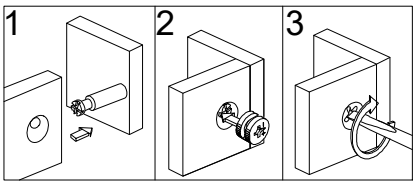

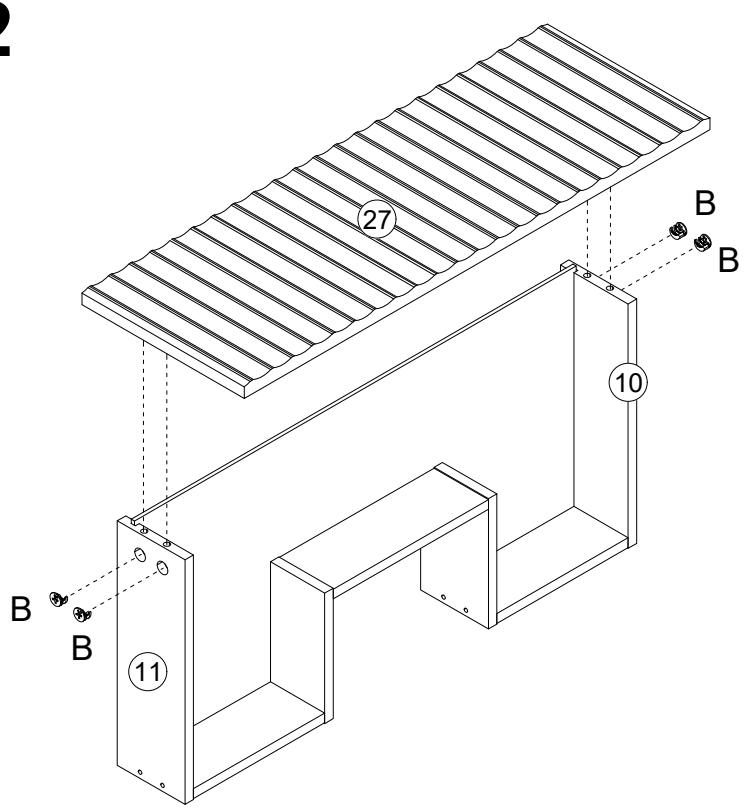

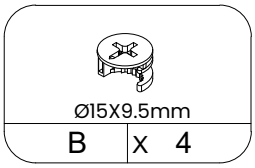

STEP 23

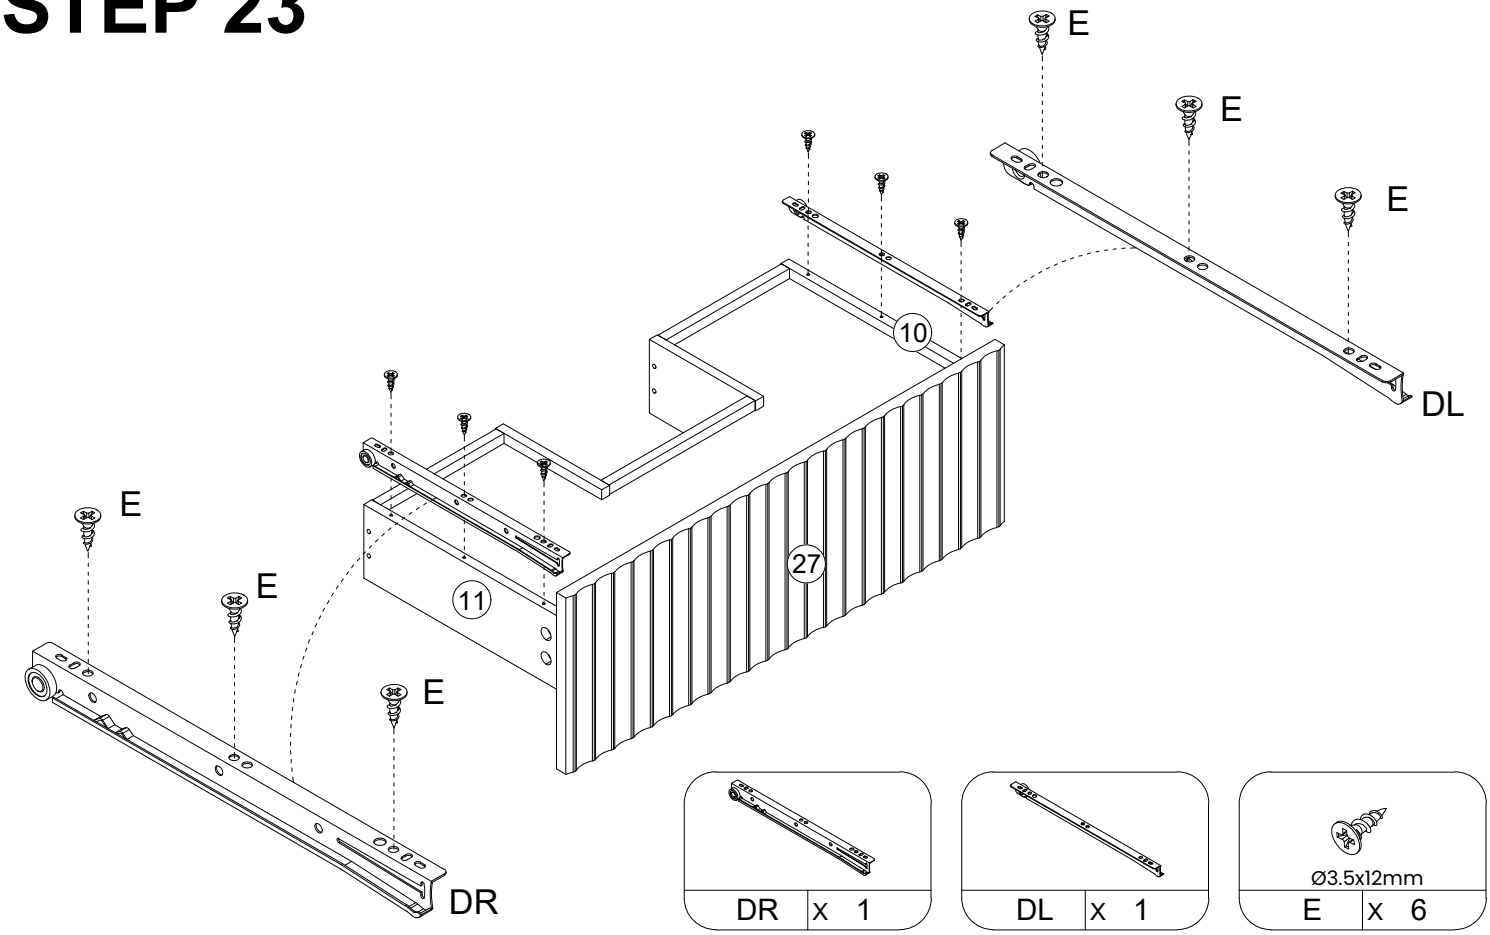


DR	x 1

DL	x 1


Ø3.5x12mm	
E	x 6


STEP 24

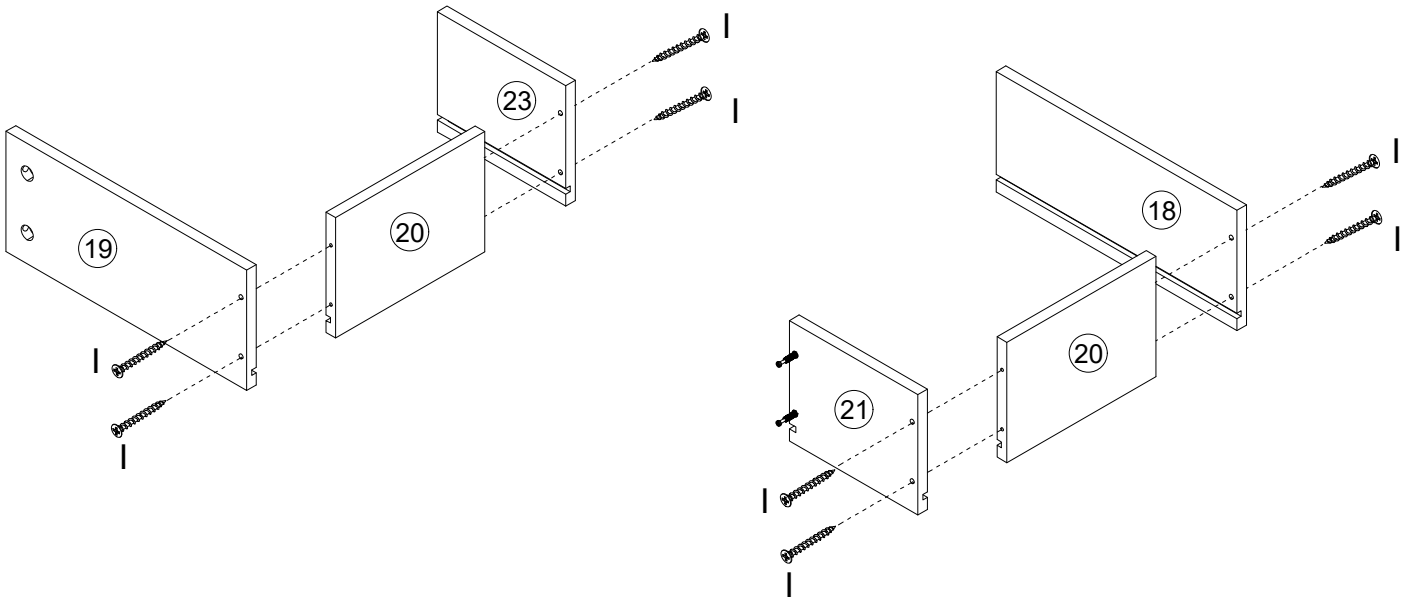


Ø4x38mm	
I	x 8


STEP 25

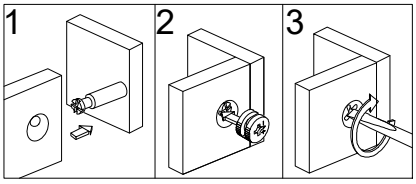

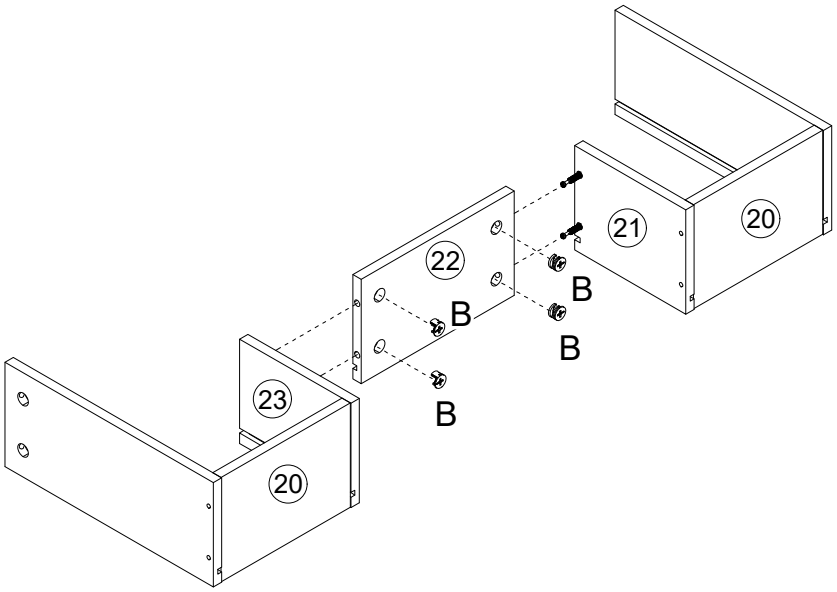


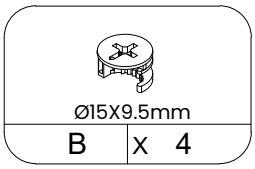



STEP 26

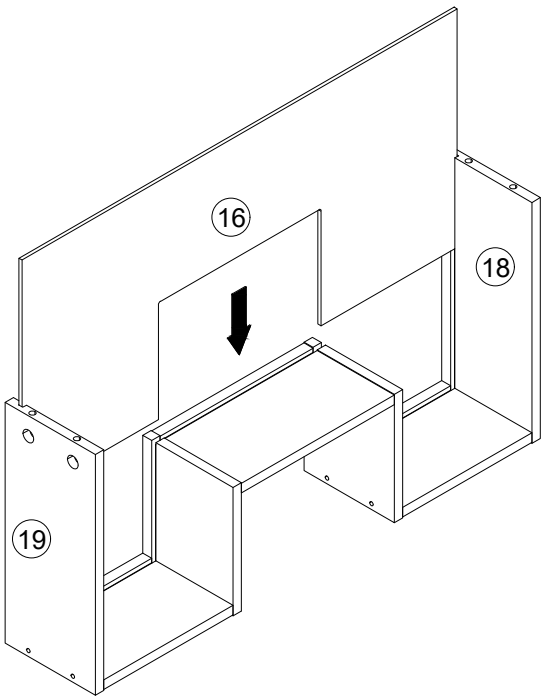


STEP 27

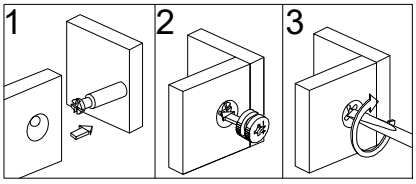

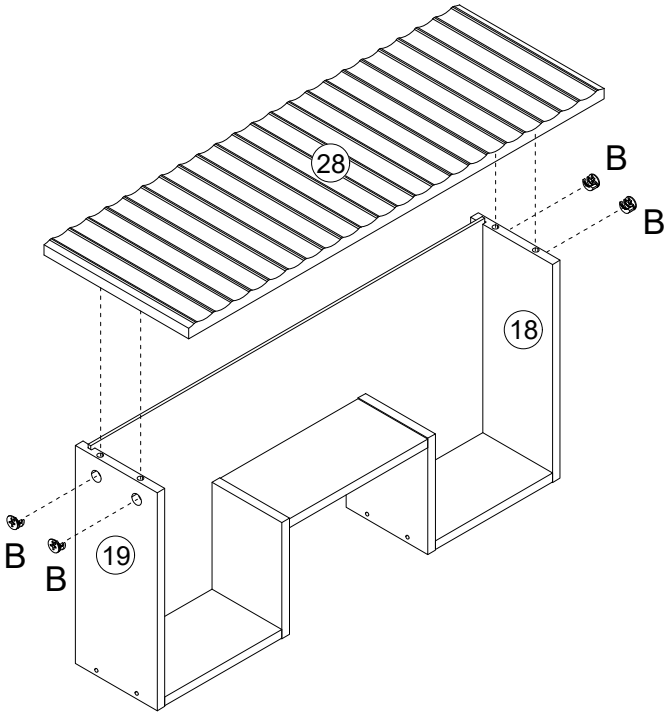


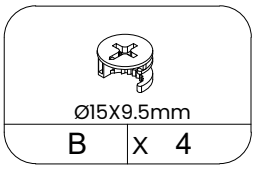


STEP 28

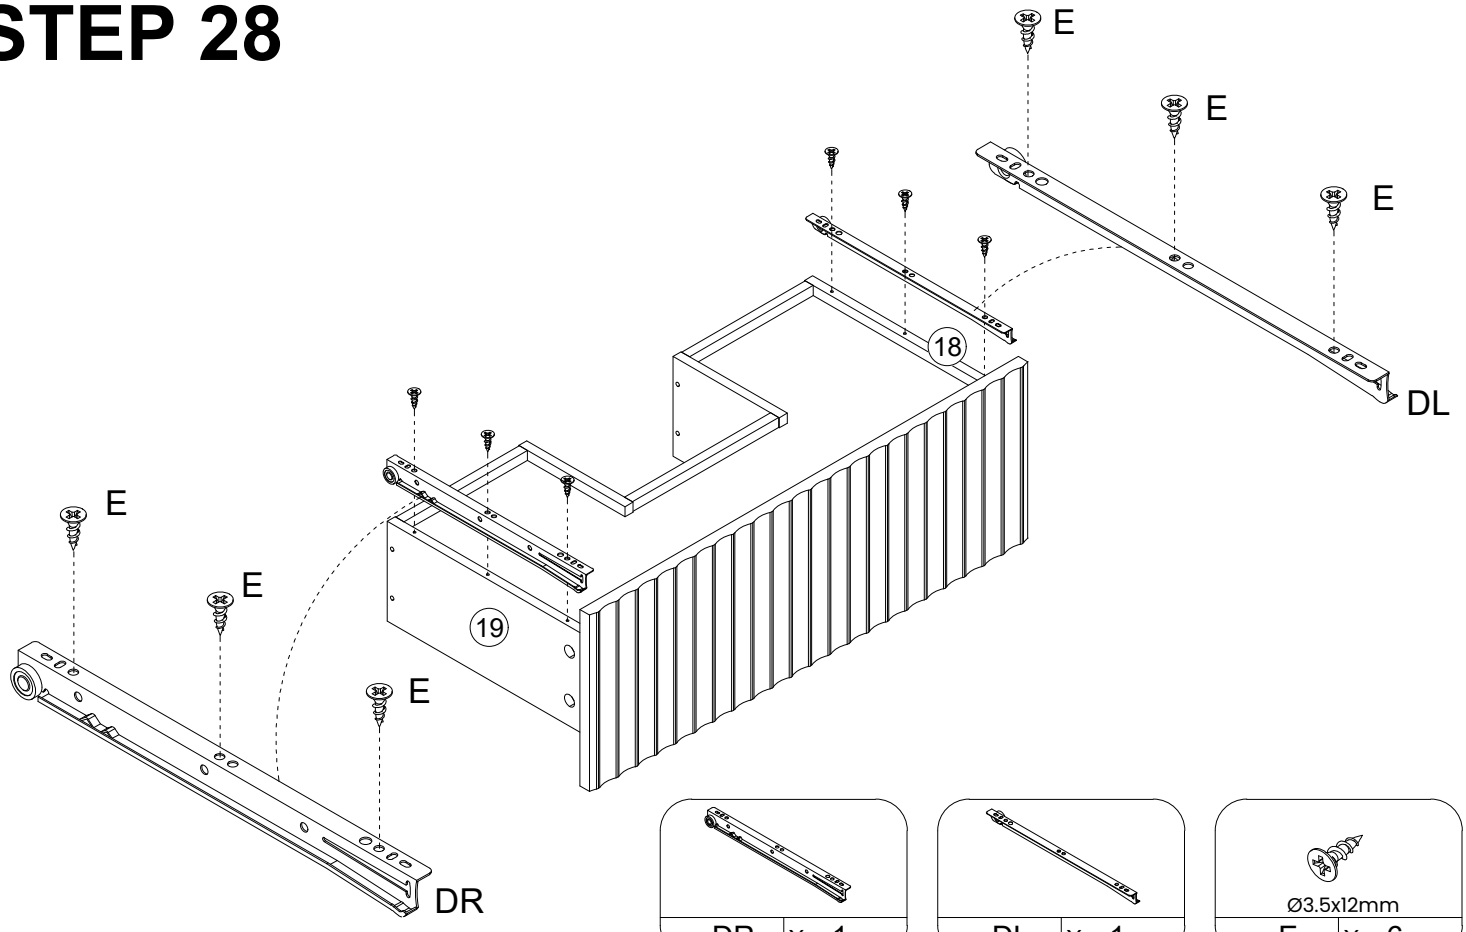



STEP 29

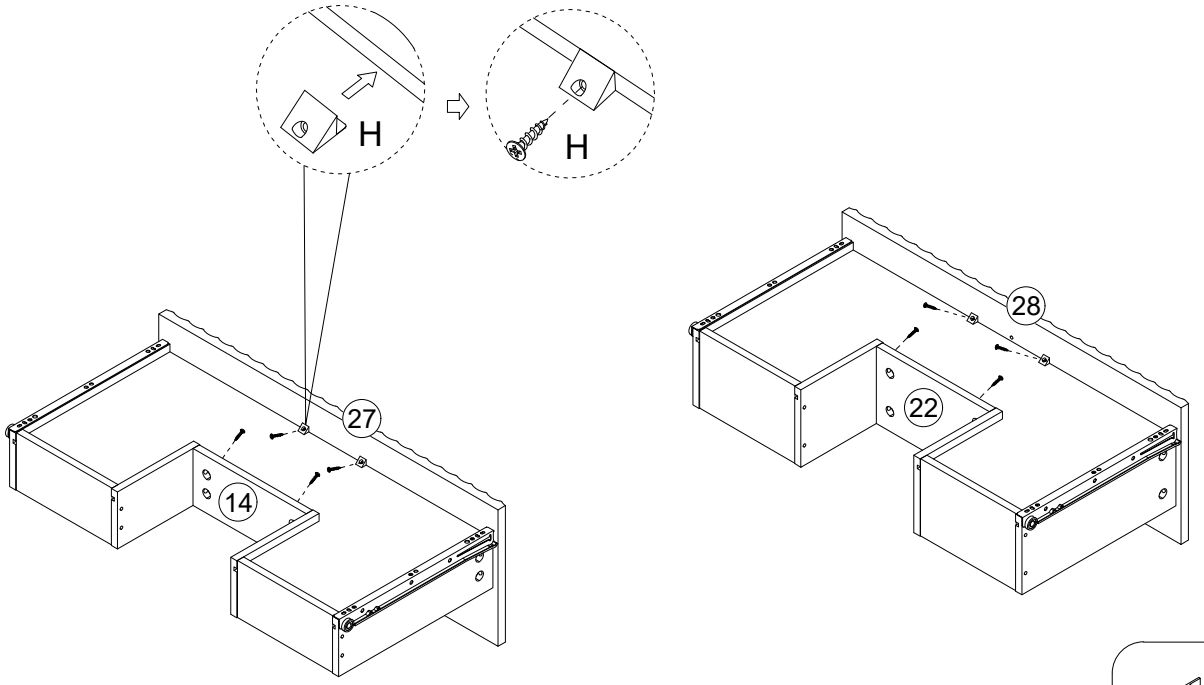


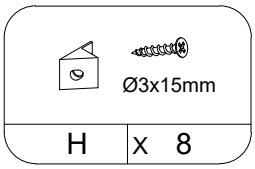


STEP 30

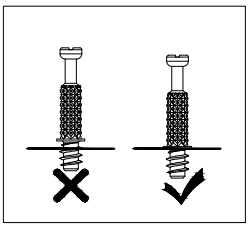


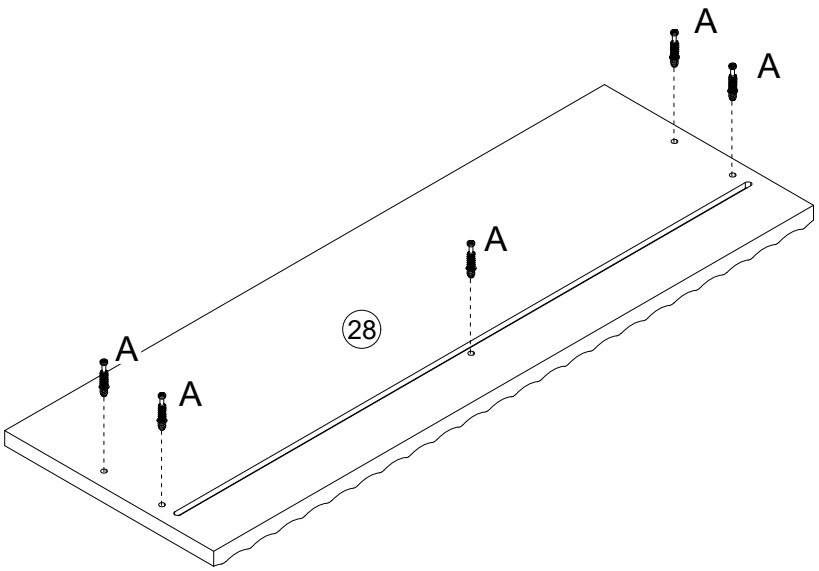

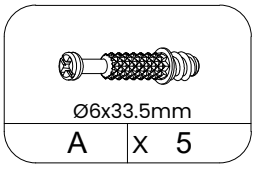


STEP 31

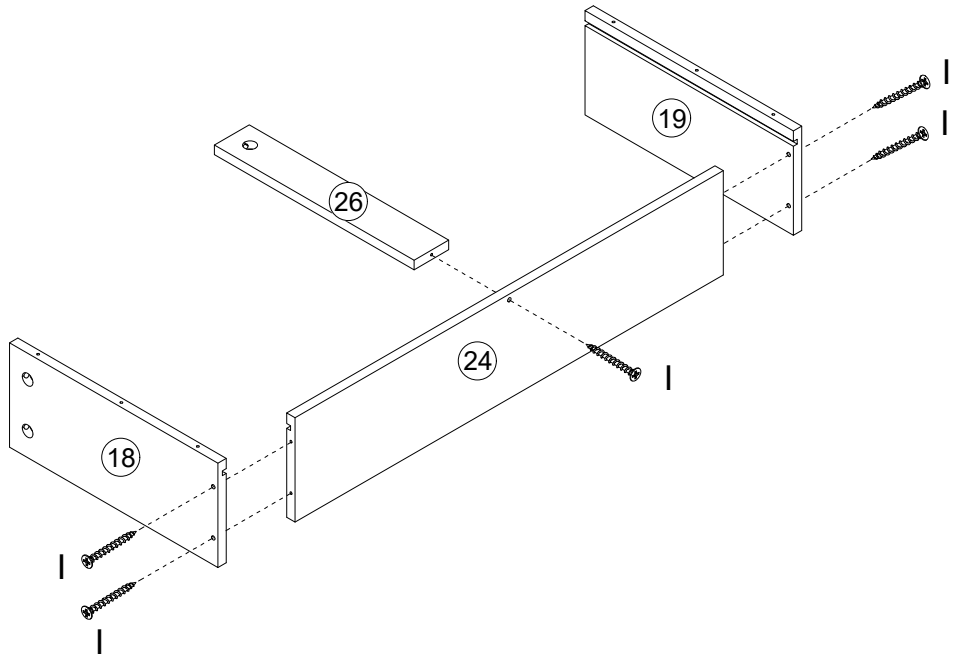


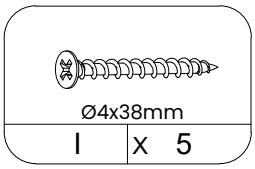



STEP 32

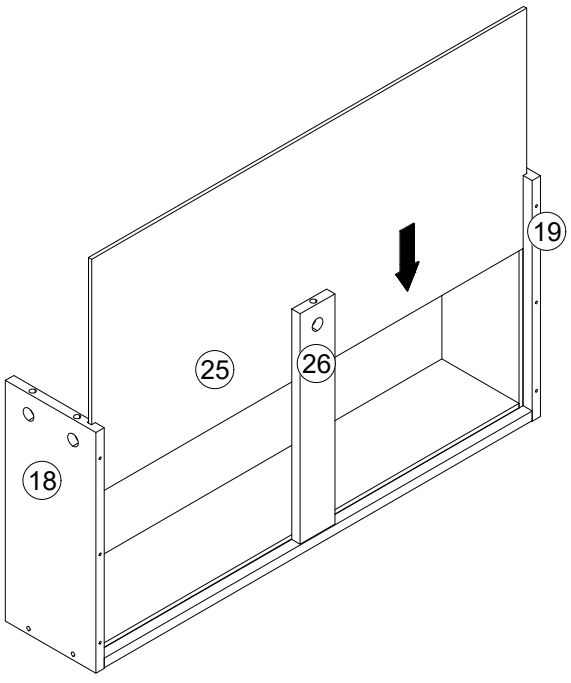


STEP 33

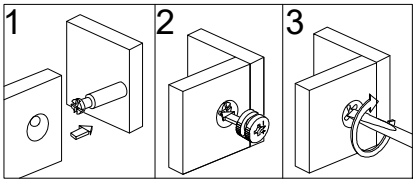

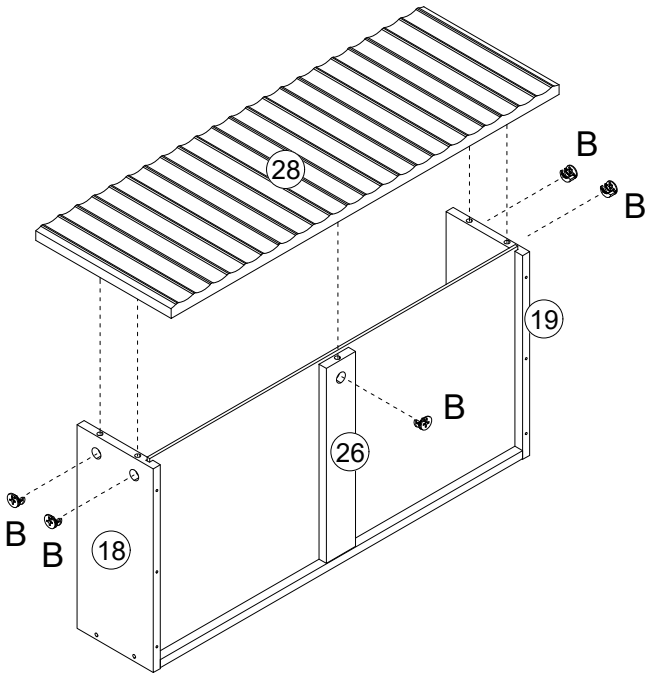


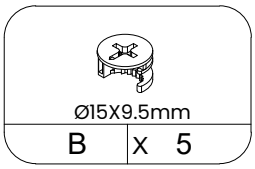


STEP 34

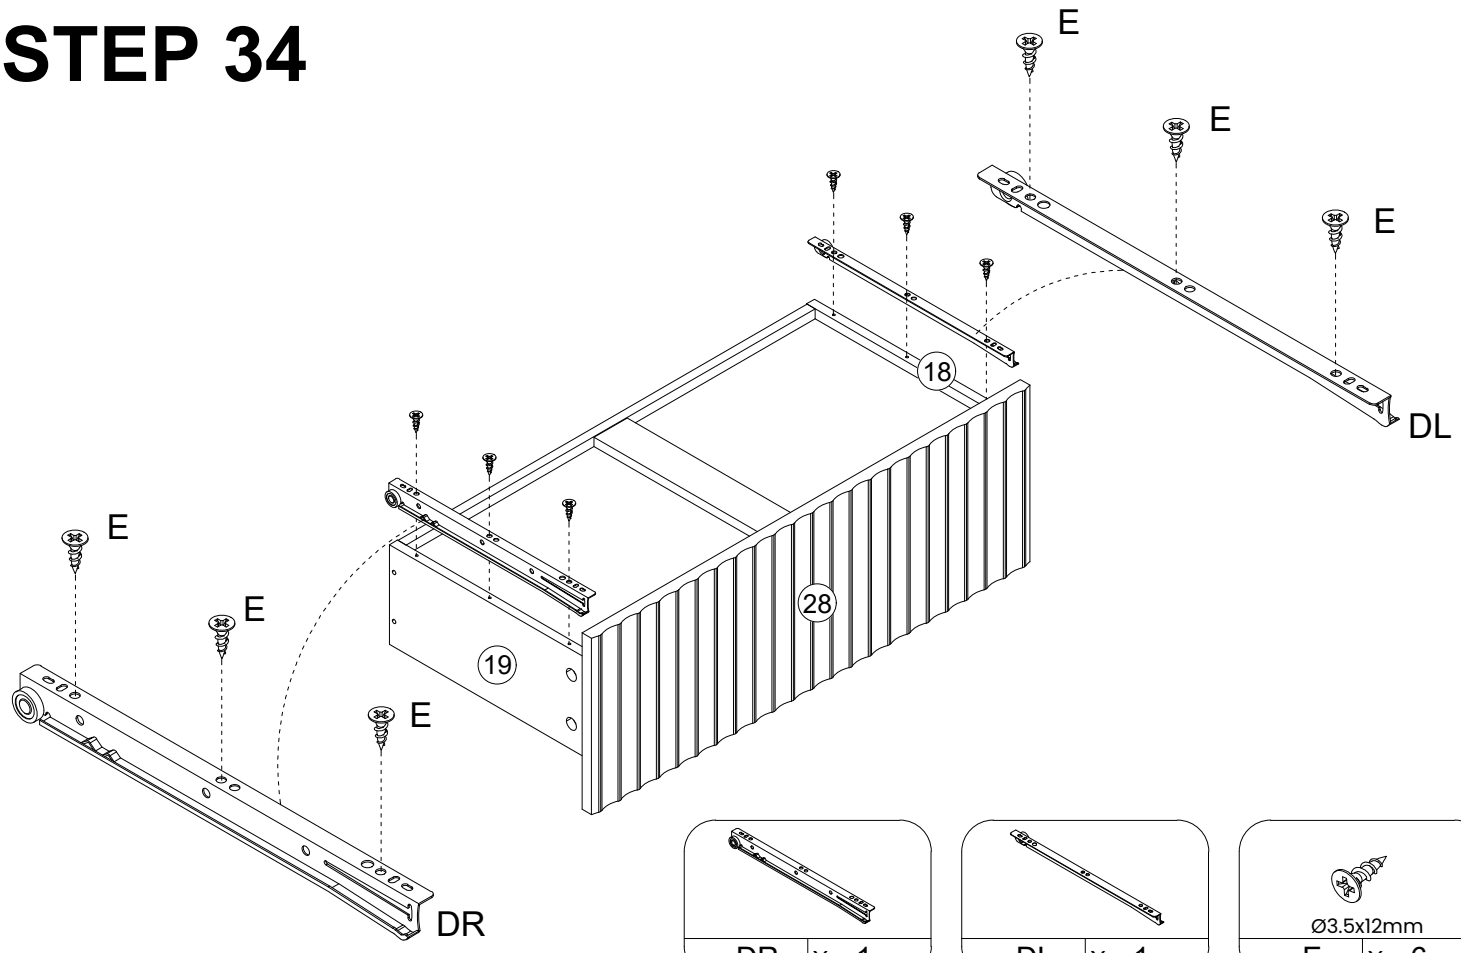


STEP 35

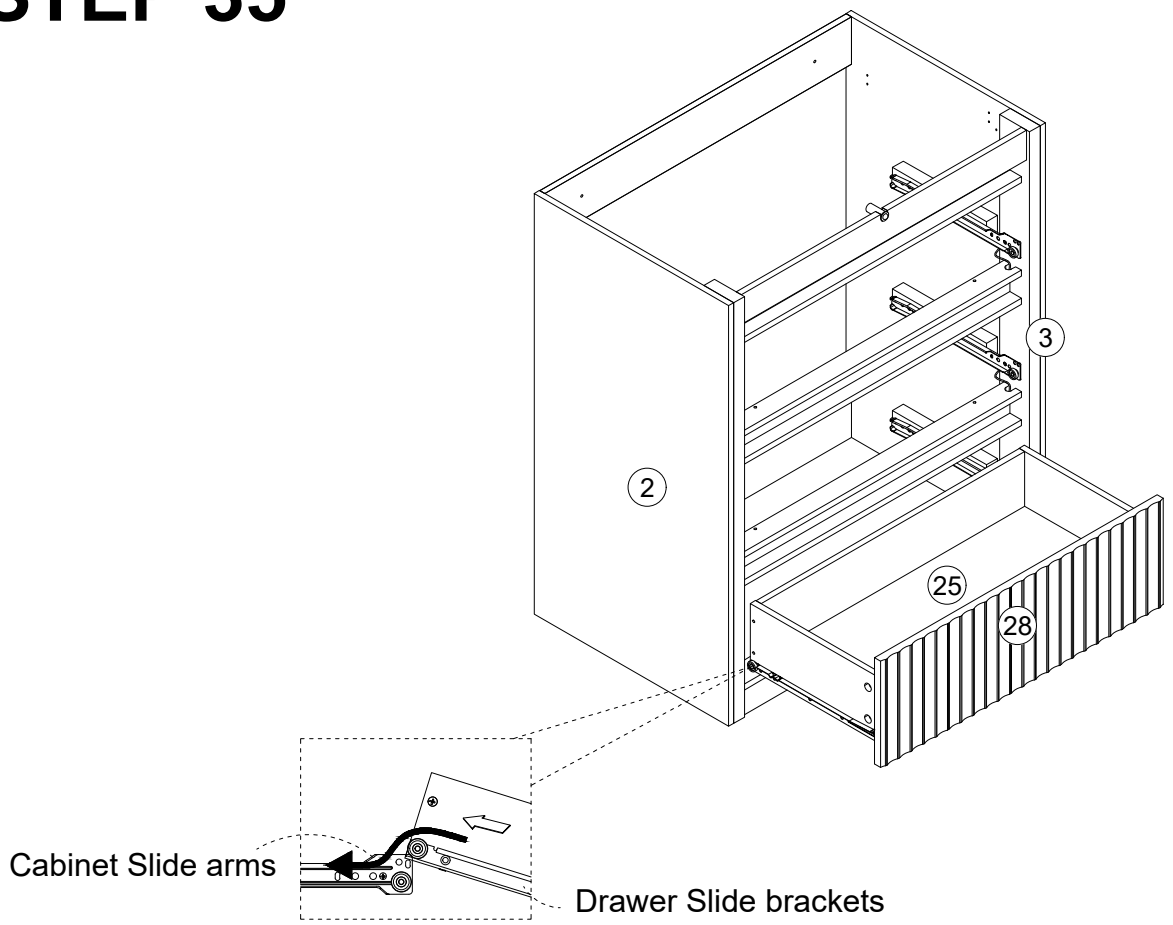



STEP 36

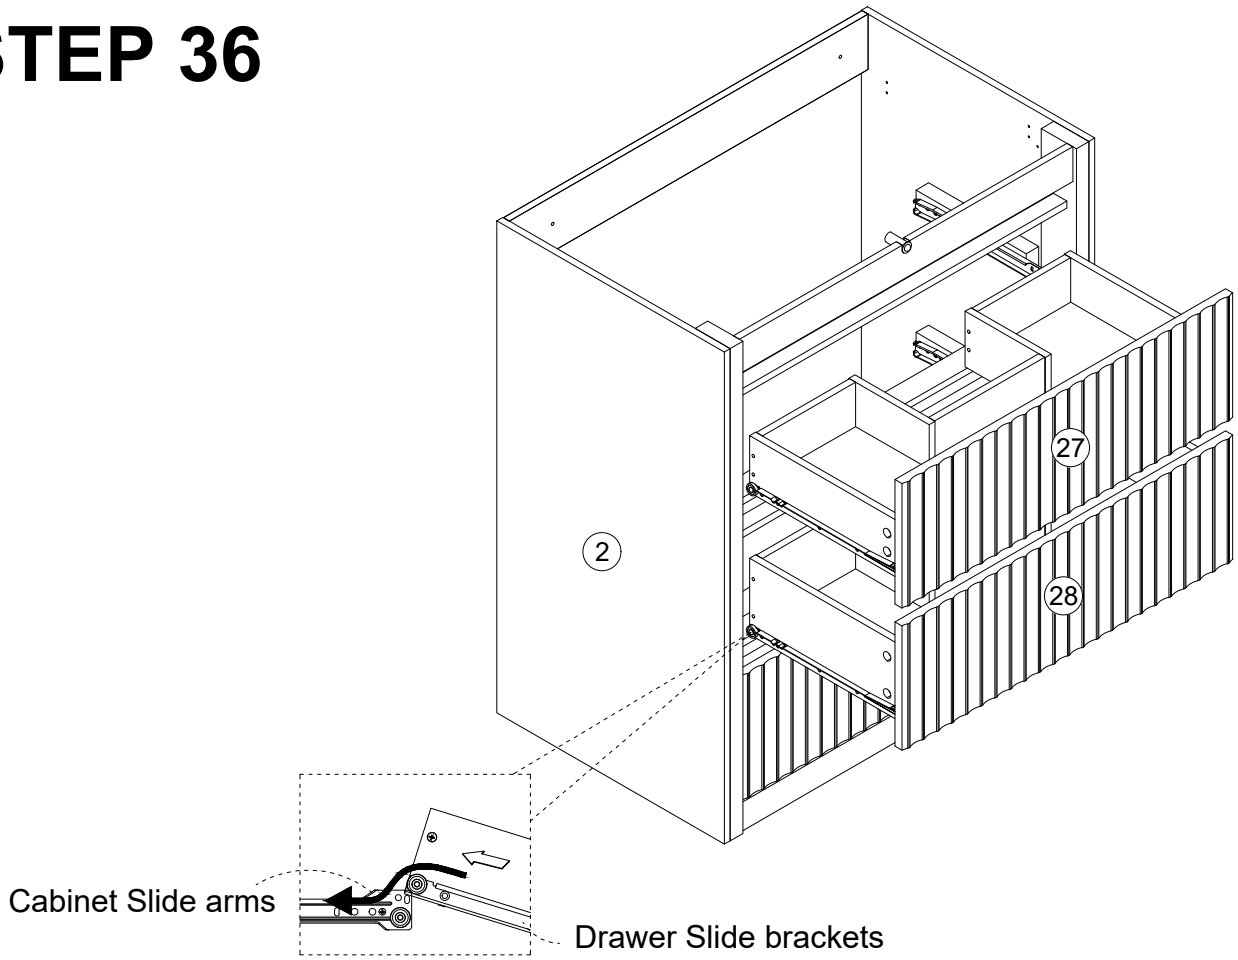


STEP 37

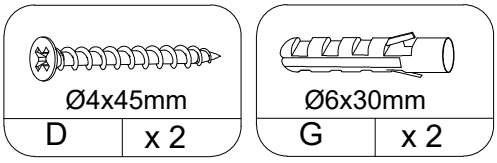

Ø4x45mm
D
x 2
Ø6x30mm
G
x 2

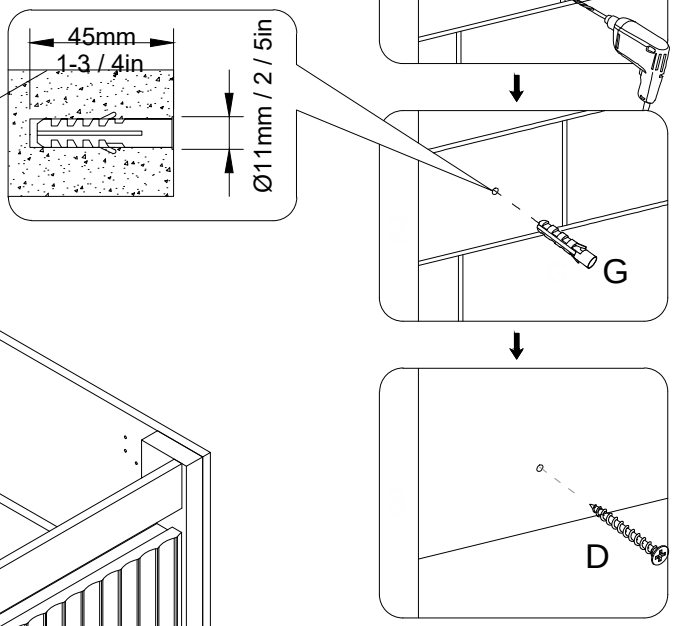

45mm
1-3 / 4in
Ø11mm / 2 / 5in
G
D

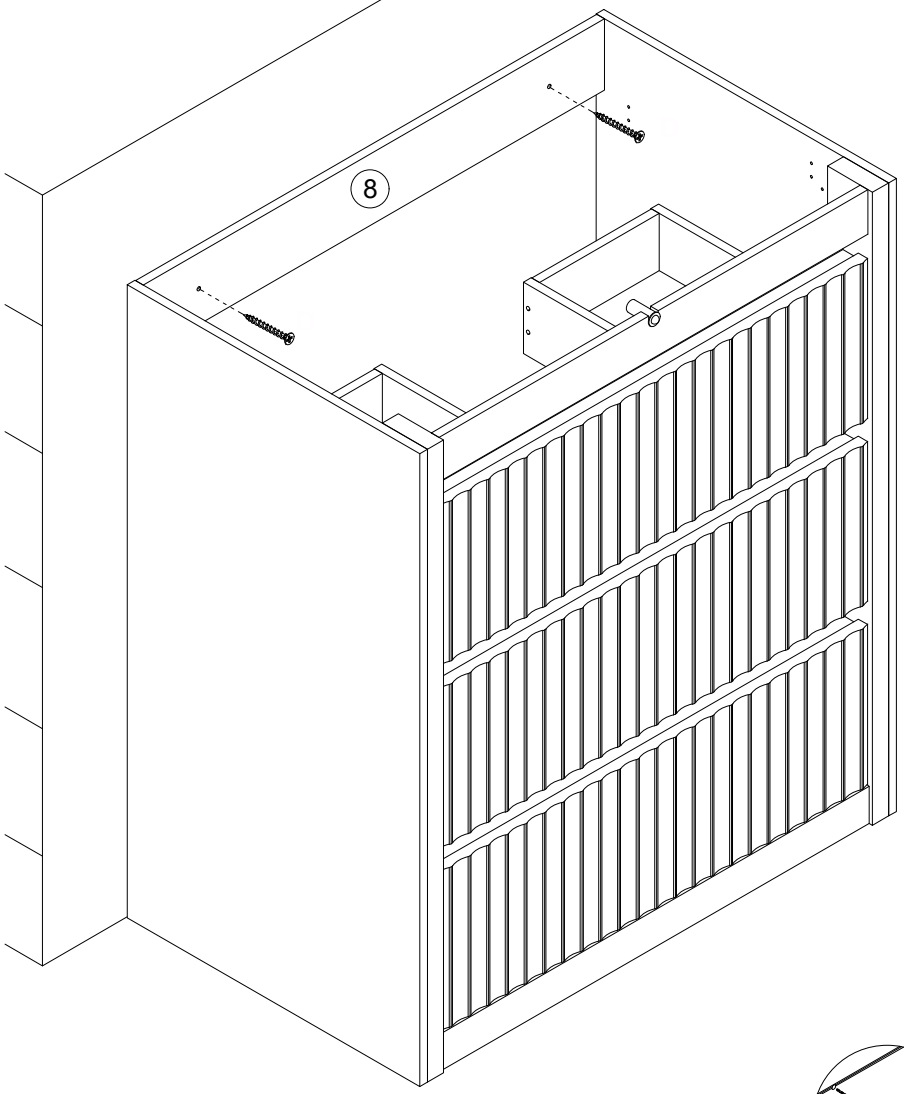

8

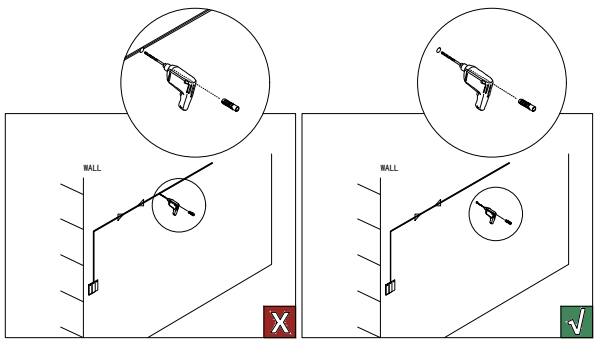
WALL
X
WALL
√

STEP 38

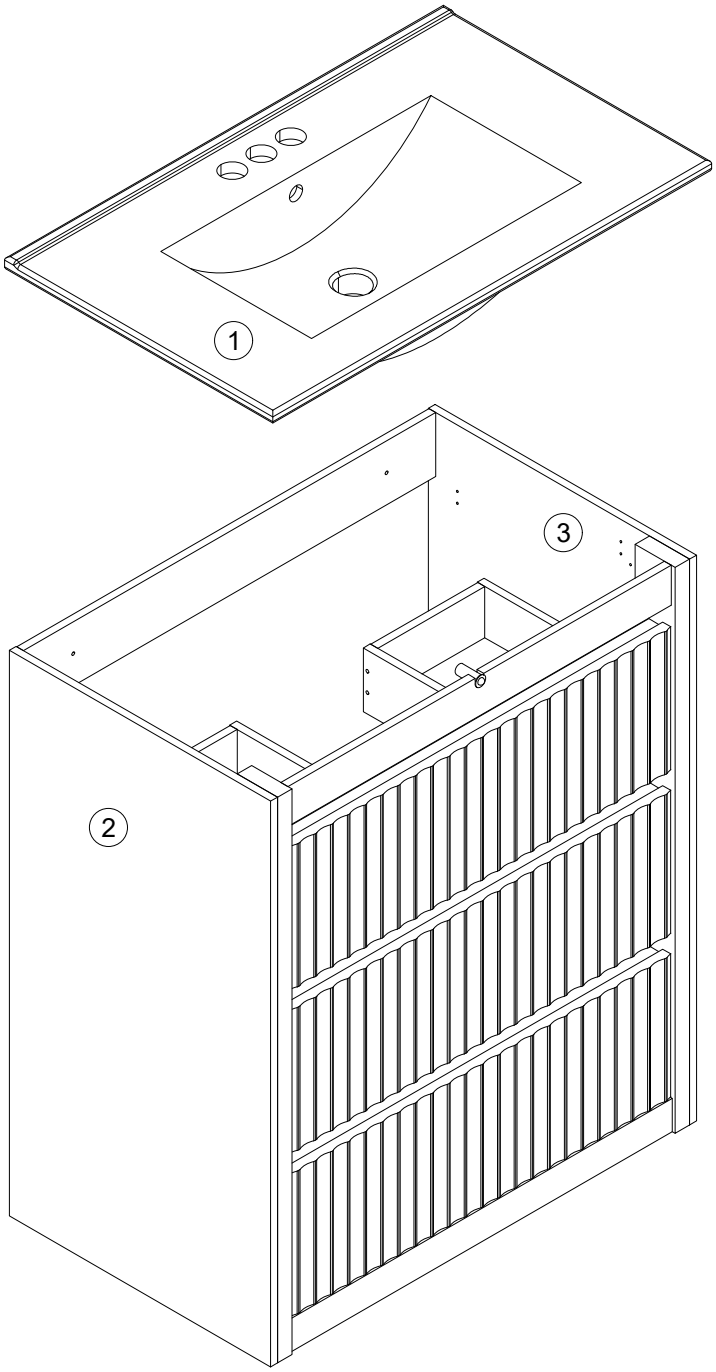

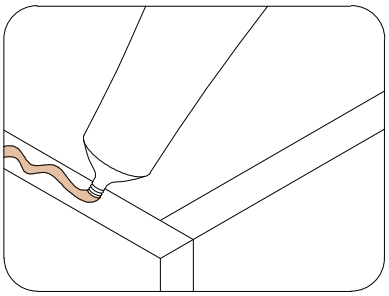

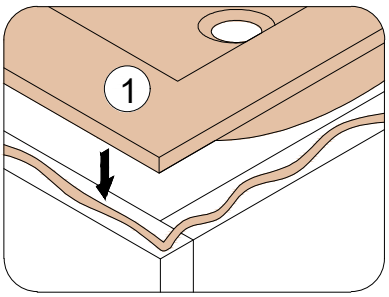

*Apply stain free silicone or latex silicone caulk(not included)to the top edge of vanity. with the help of another adult, gently lower top onto the vanity.wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning