



CHMC001: 24-Bay USB-C Charging Cart Assembly Instructions

PARTS LIST:

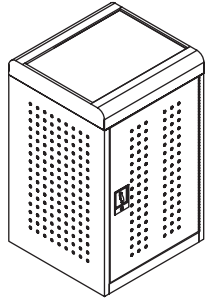

A x 1
Cabinet

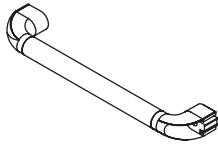

B x 1
Push Handle



C x 2
Handle Corner Cover



D x 1
Cable Wrap




E x 2
Locking Stem Caster




F x 2
Stem Caster

HARDWARE:



G x 2
Push Handle Screw
M10x40mm



H x 1
Cable Wrap Screw
M10x15mm

ASSEMBLY TOOLS:



J x 1
Large Allen Wrench




K x 1
Small Allen Wrench



L x 2
Keys

ASSEMBLY INSTRUCTIONS:


1

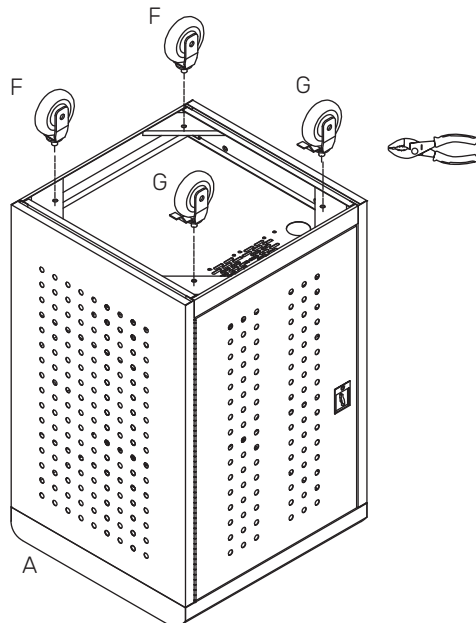

With Cabinet (A) upside down, attach two Locking Stem Casters (E) and two Stem Casters (F) as shown. Tighten using pliers (not included). Attach the Locking Stem Casters (E) to the side with holes for the Push Handle (B).

2

Align Push Handle (B) as shown, secure using two Push Handle Screws (G) and the Large Allen Wrench (J). Once secure, press two Handle Corner Covers (C) into place.

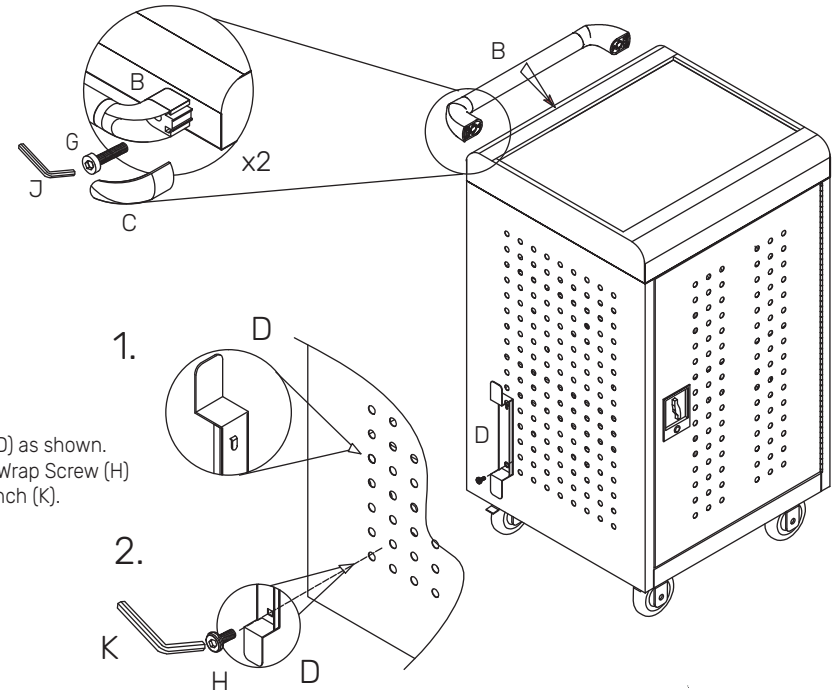

3

Attach Cable Wrap (D) as shown. Secure using Cable Wrap Screw (H) and Small Allen Wrench (K).

Heavy Lifting:
Assistance
Required