



Installation Instruction

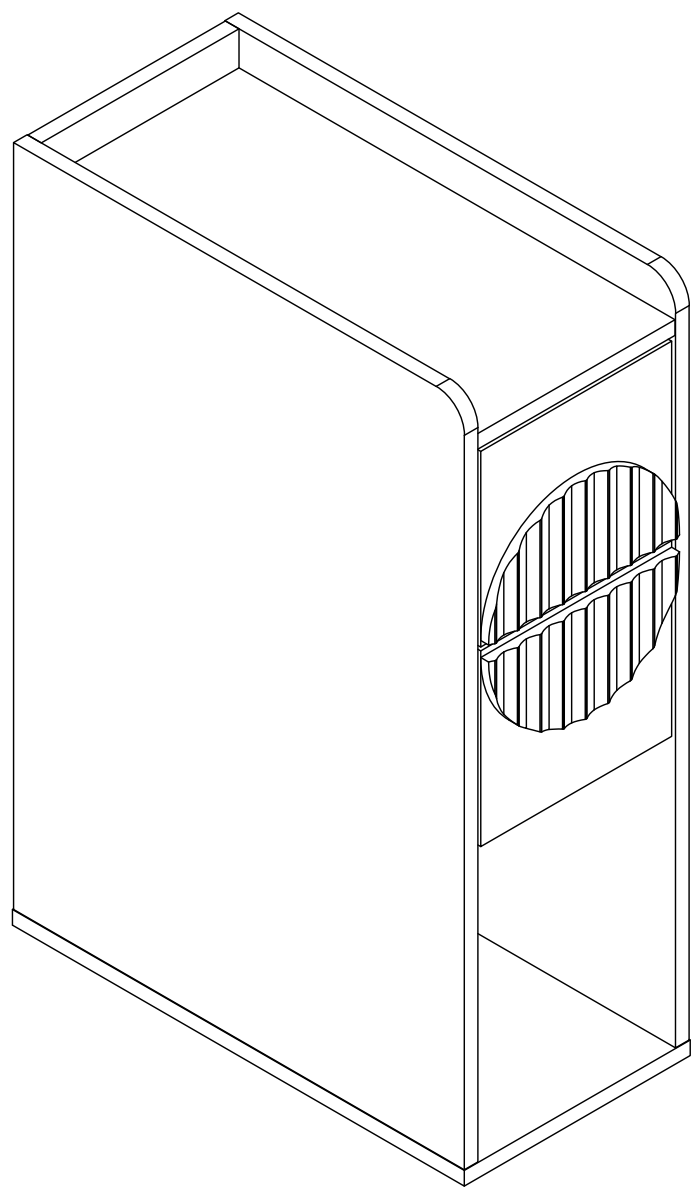

Assembling


What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

 **100** | **35**
lbs table top lbs per

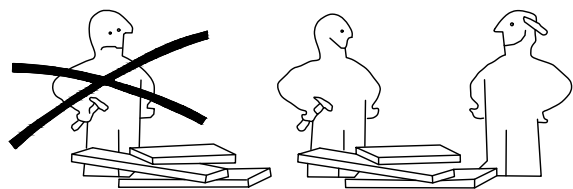


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	16
B	Cam Lock15X10MM	16
C	Wooden Dowel M6X30MM	10
D	Screw M4X30MM	16
E	The screw M3X12MM	26
F	Hole position sticker	12
G	The back button	6
H	Door Rebound Device Holder	2
I	Screw M3.5X12MM	2
J	Anchor	2
K	L-shaped metal sheet	2
L	Door Rebound Device	2
M	EVA Foot mat	4
CL	Left mother extended orbit	2
CR	Right mother extended orbit	2
DL	Left public extension track	2
DR	Right public extends track	2

The Hardwares

A




B



C



D




E




F




G




H




I




J




K




L




M




CL

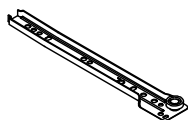


CR



DL



DR





IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories


Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left side panel	1
4	Right side panel	1
5	Rear waistband	1
6	Front gear bar	1
7	Drawer left panel	2
8	Drawer right side panel	2
9	Drawer back panel	2
10	Drawer bottom plate	2
11	Drawer panel	1
12	Drawer panel	1
13	Backboard	1


The Accessoriess

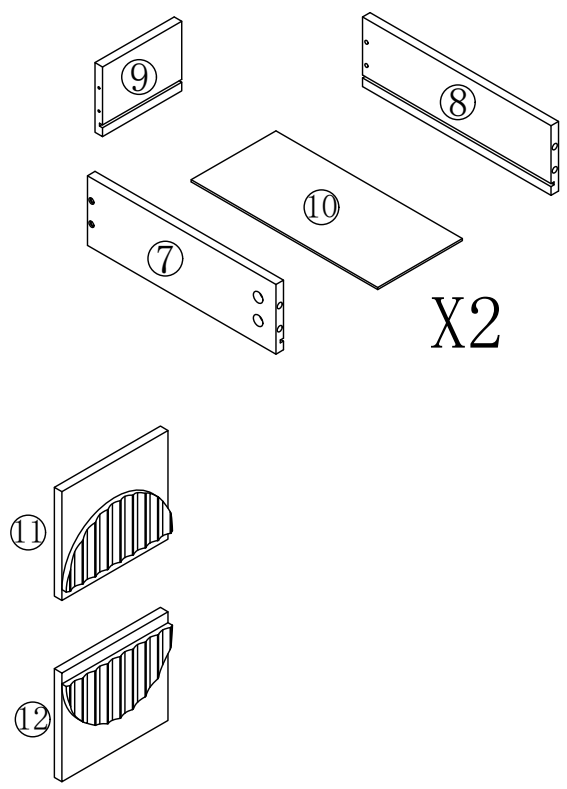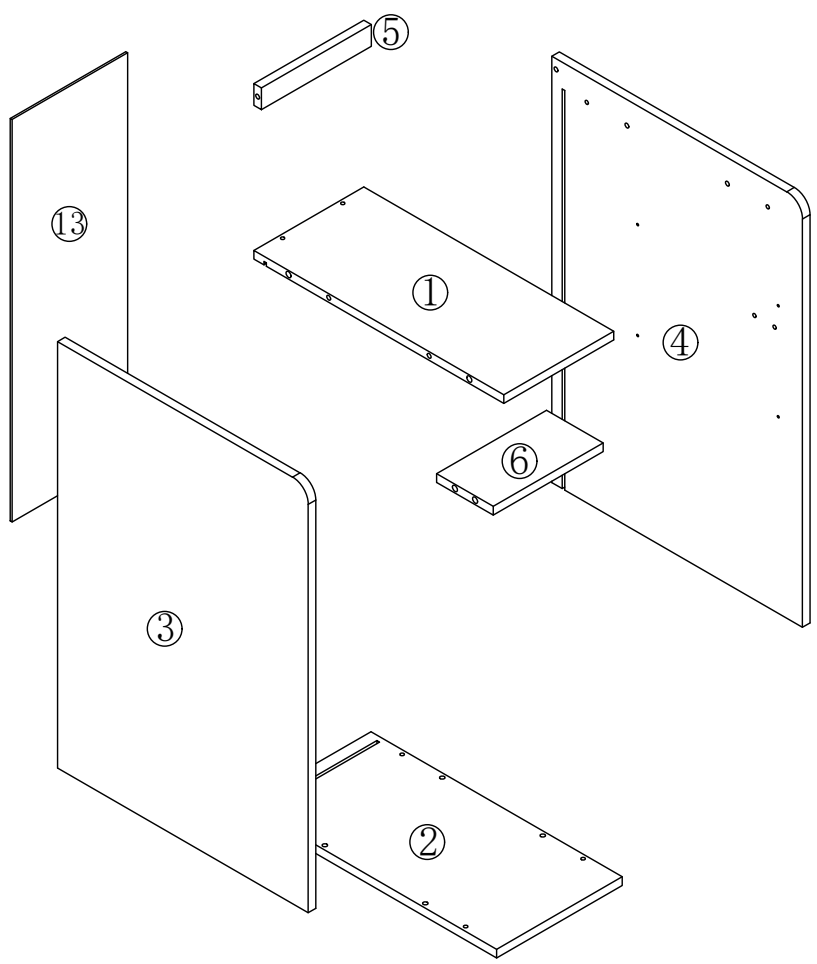


Step 1

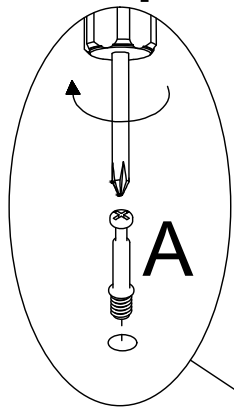




A	×8
	

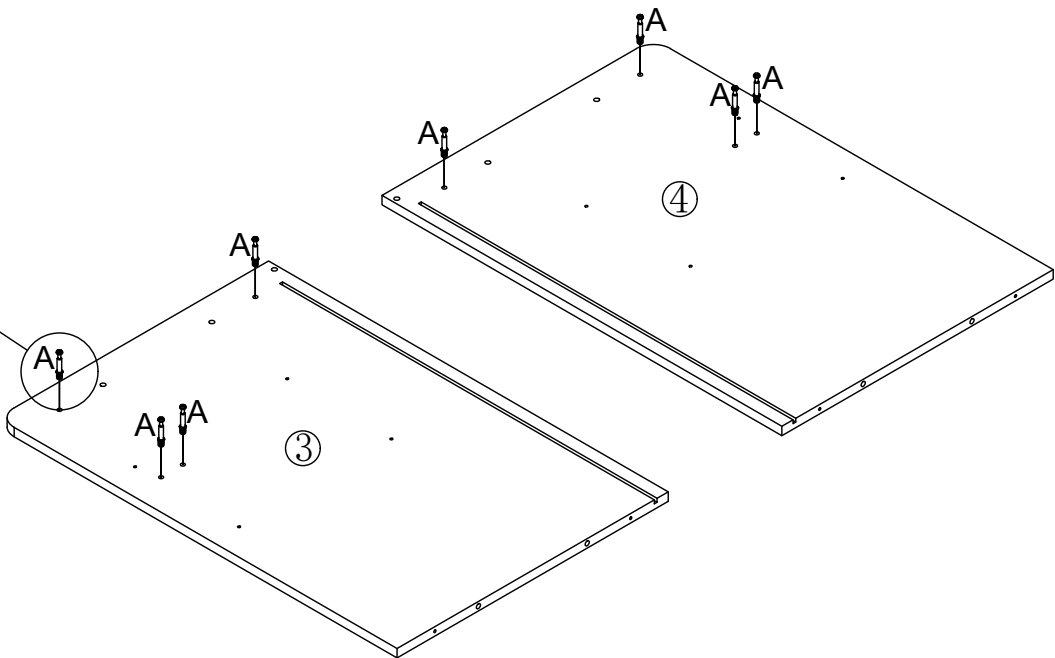


Step 2


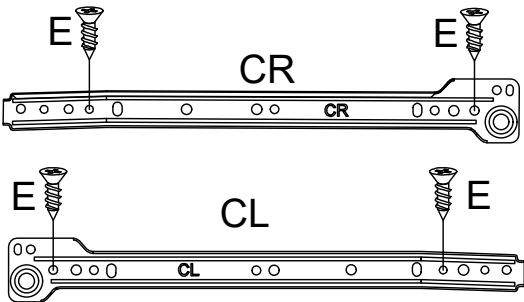


E	×8	CL	×2	CR	×2
					

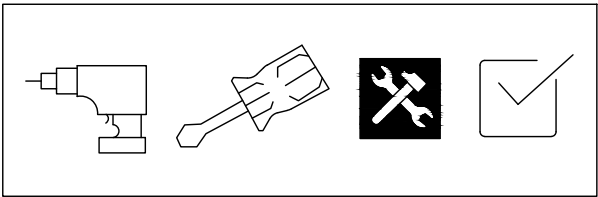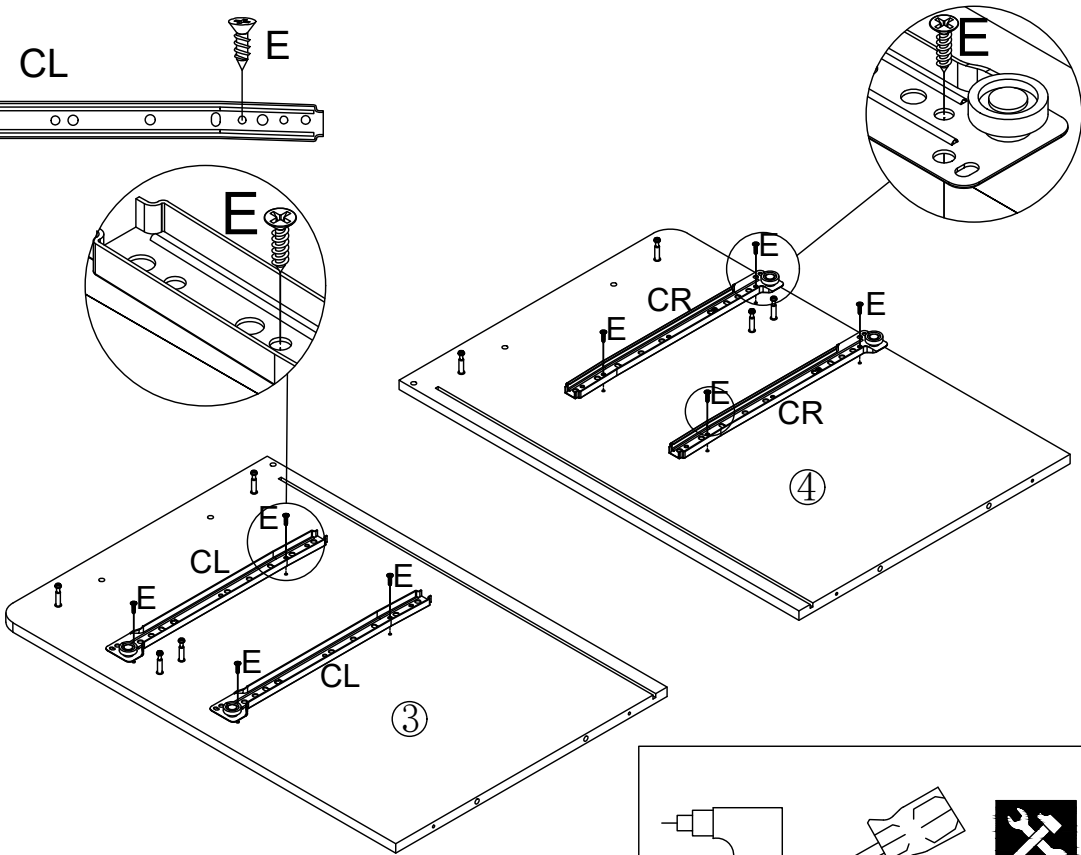




Step 3

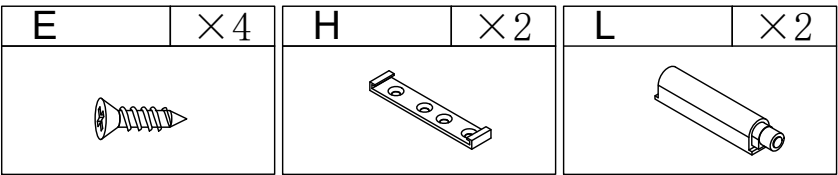E	×4	H	×2	L	×2
					

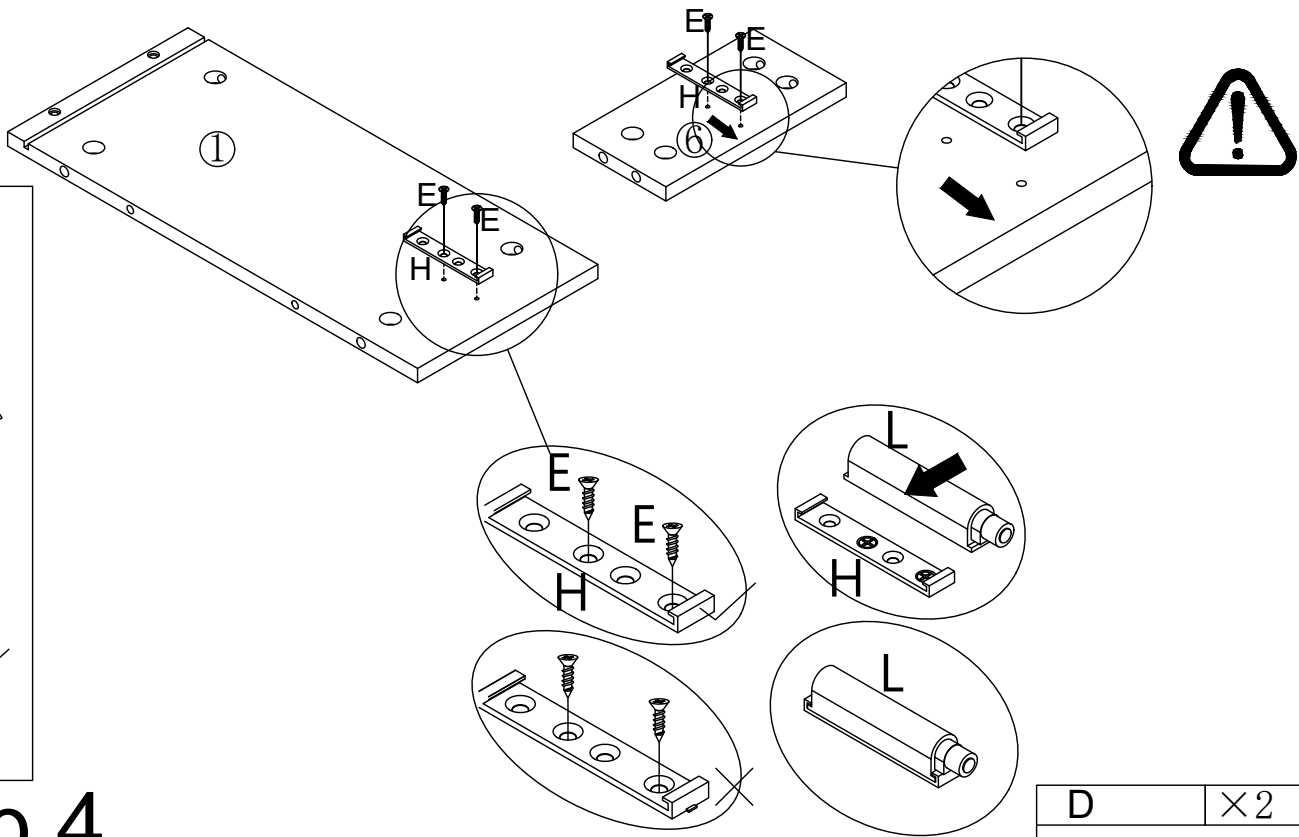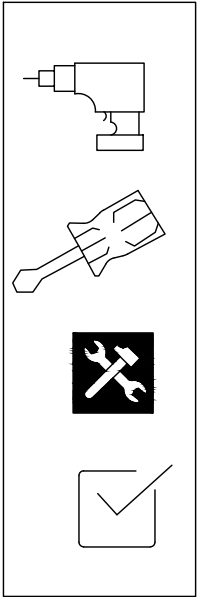



Step 4

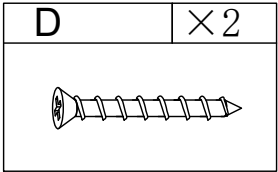D	×2
	

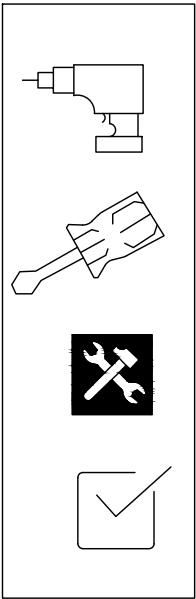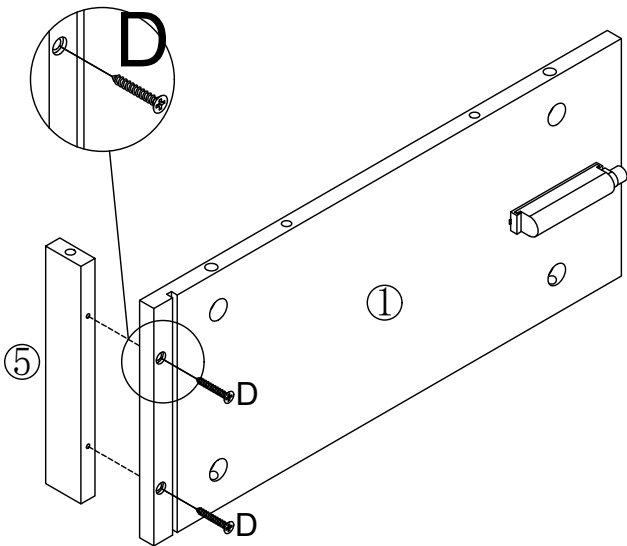



Step 5

B	×4	C	×3	F	×2

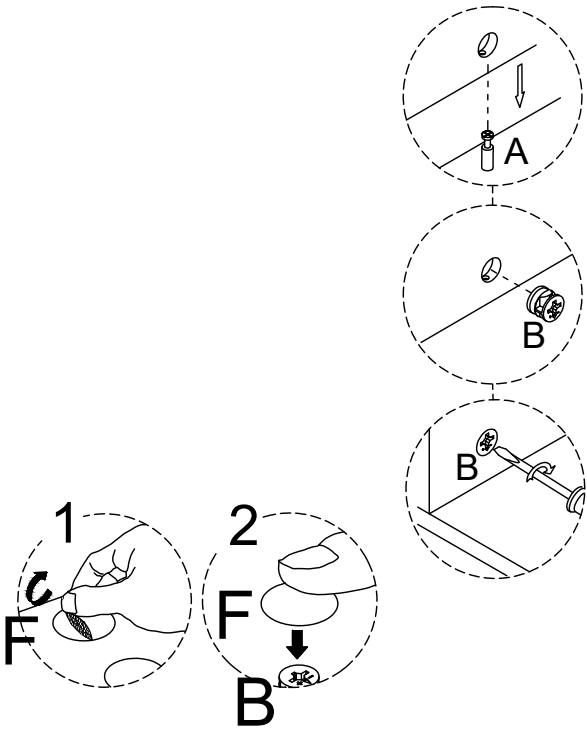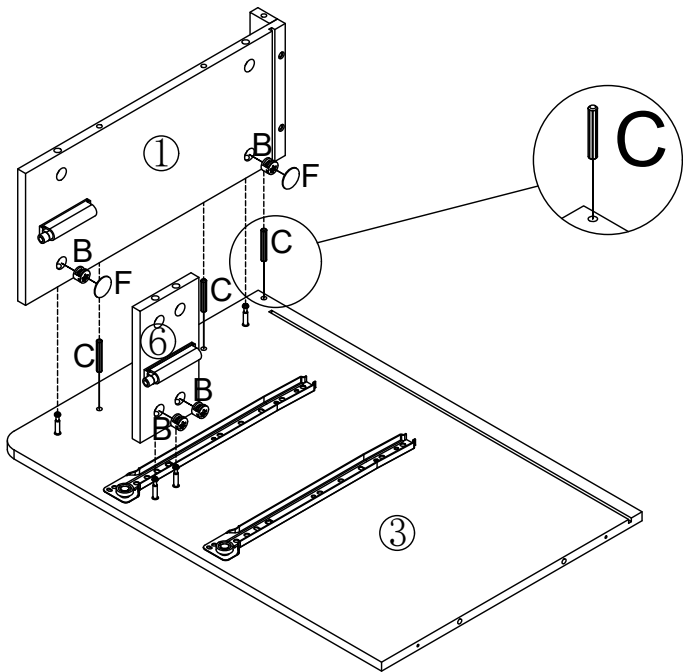


Step 6


B	×4	C	×3	F	×2

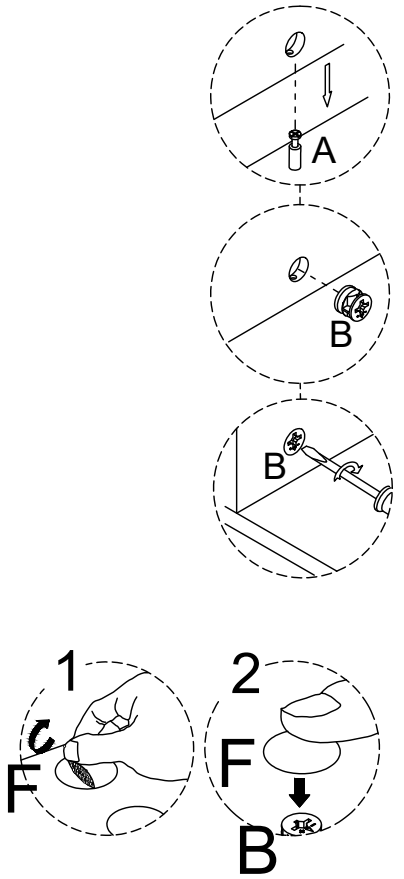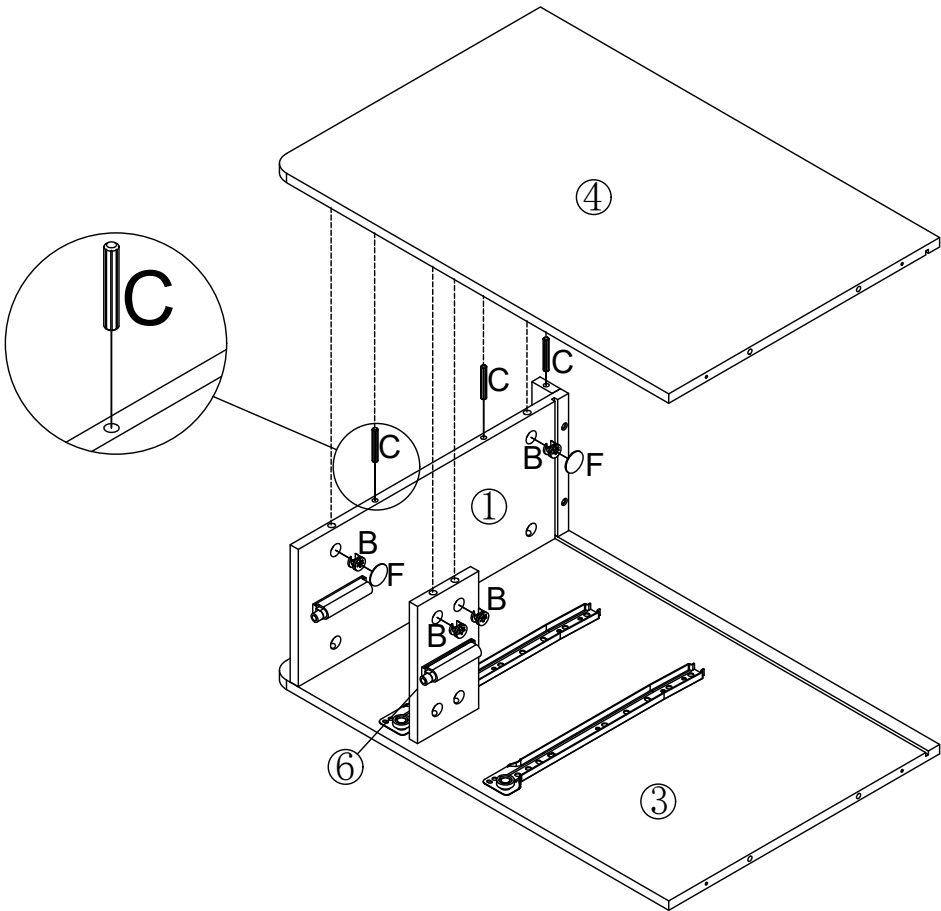


Step 7

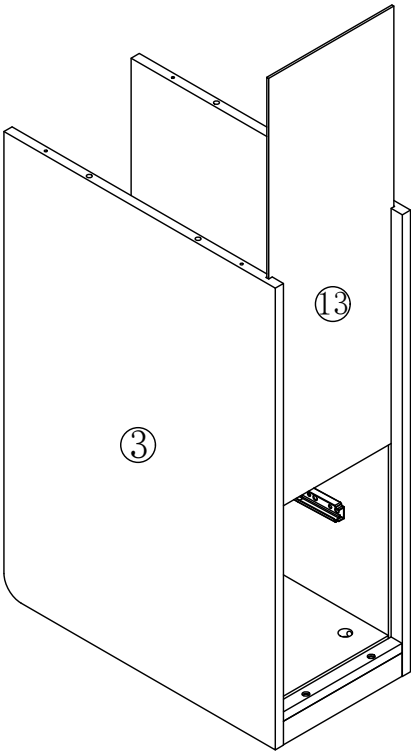


Step 8

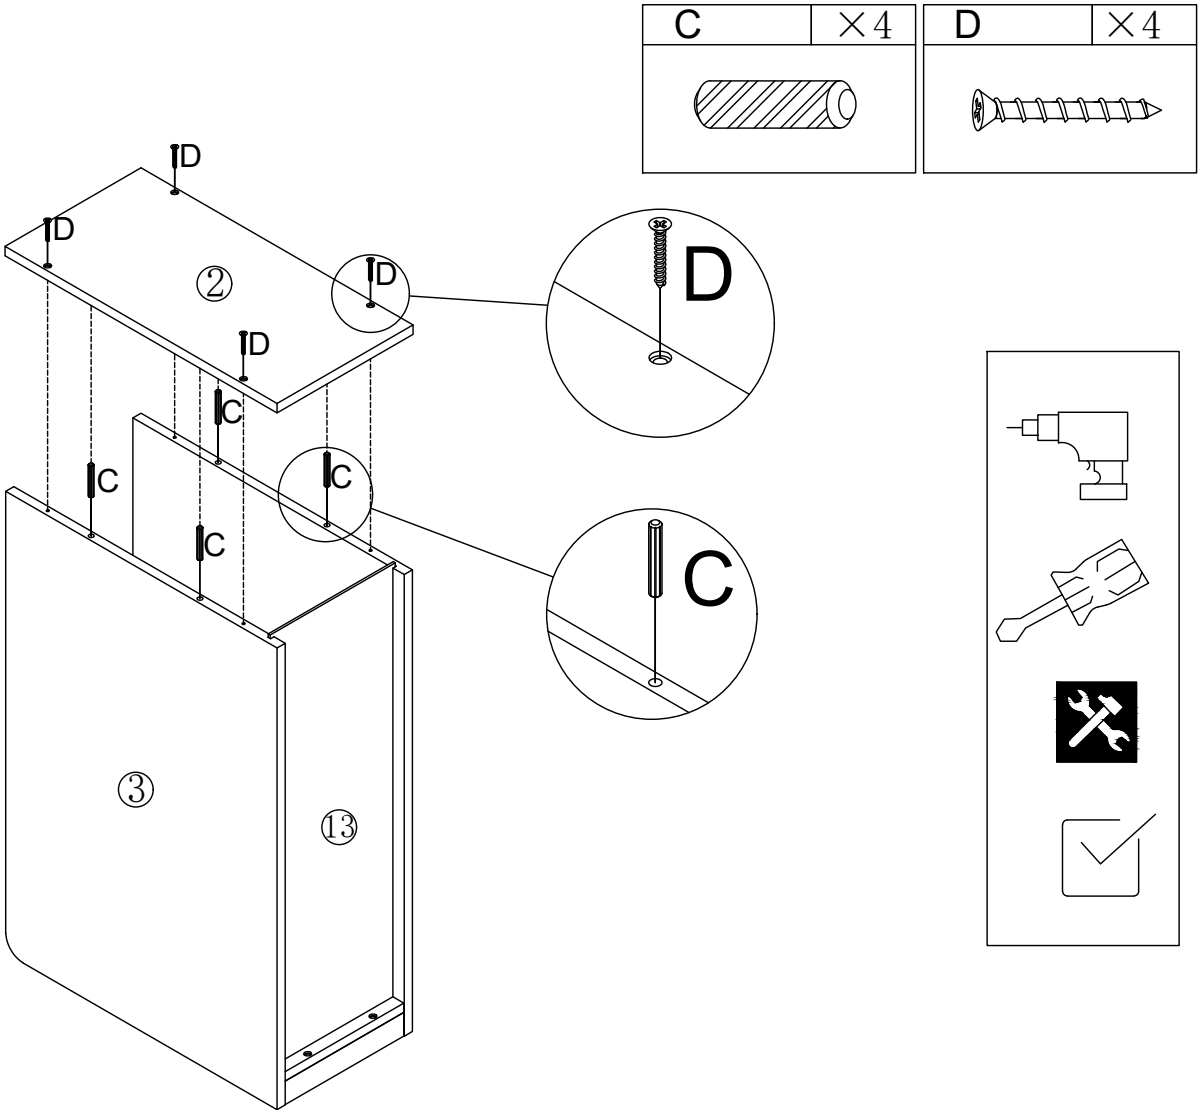

Step 9


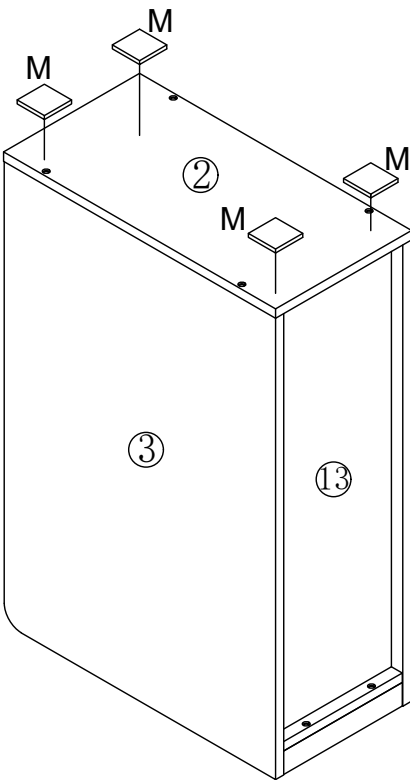


M	×4


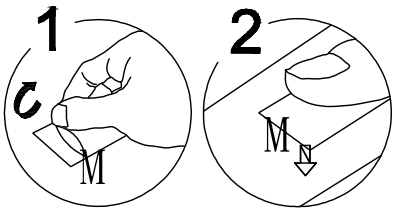


Step 10




E	×6	G	×6	K	×2
		I	×2		

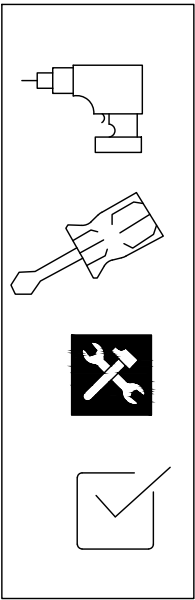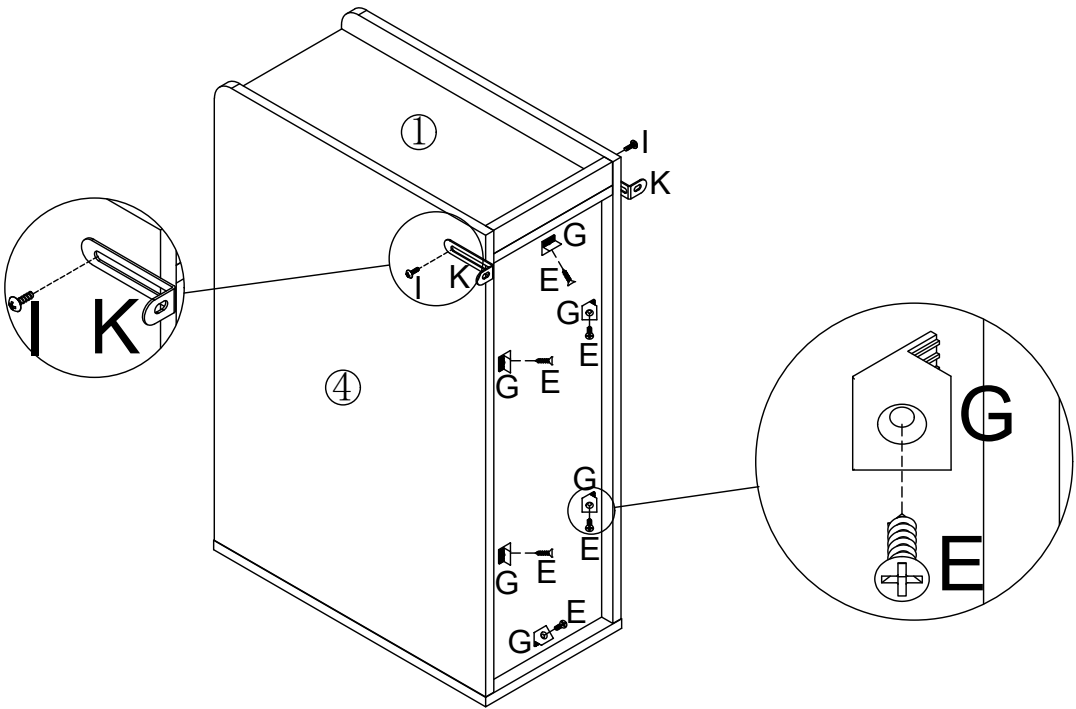


Step 11

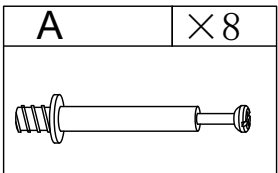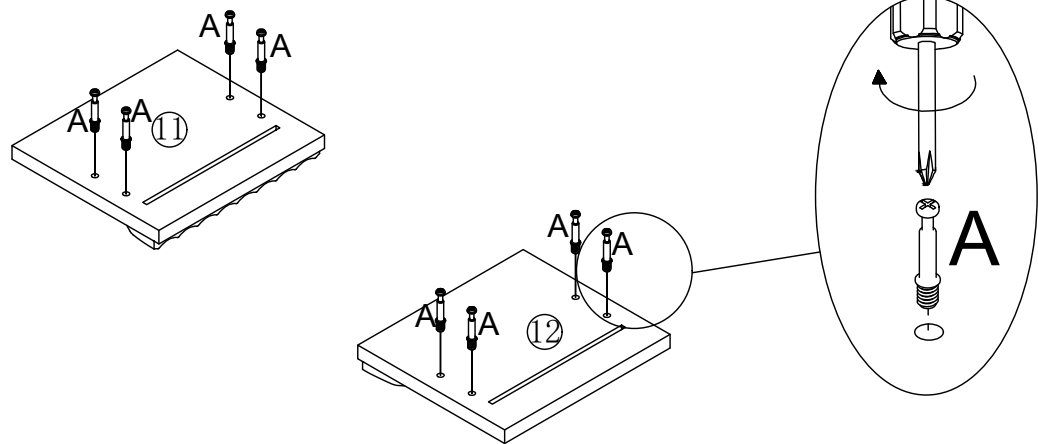

Step 12


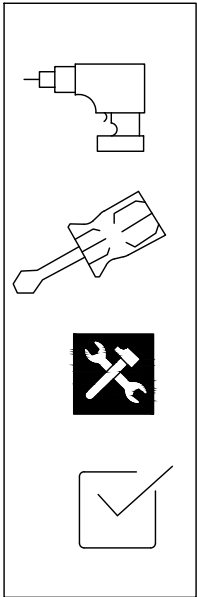
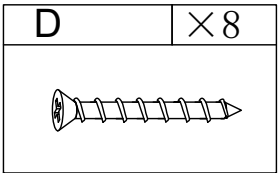
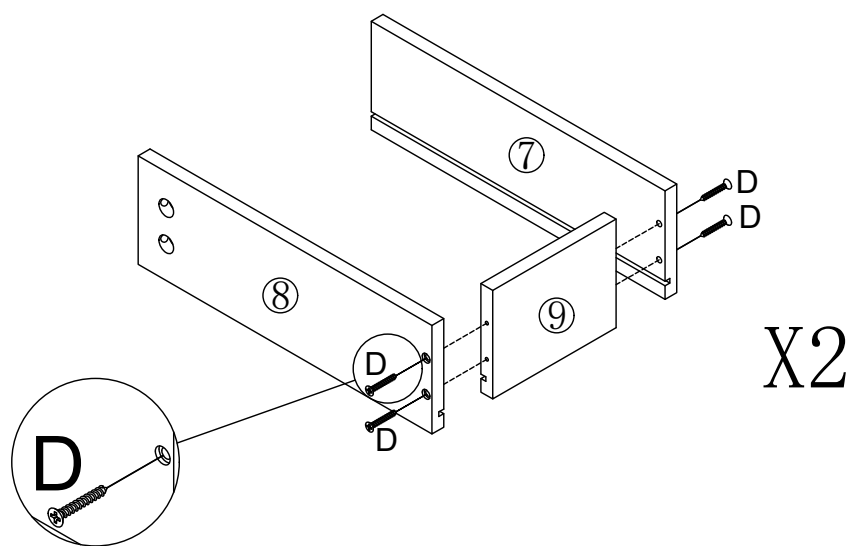


Step 13

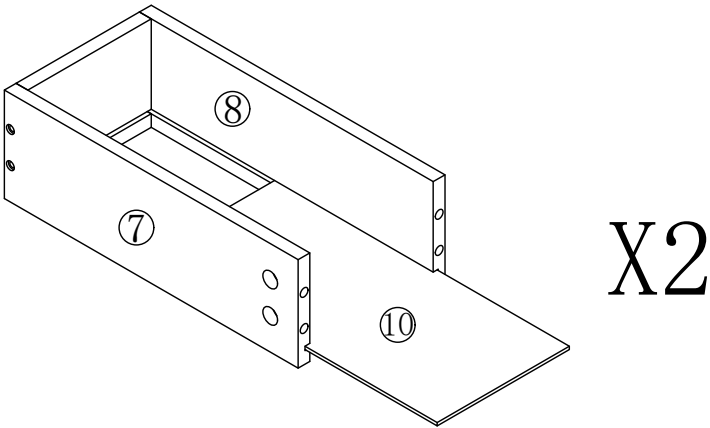


Step 14

B	$\times 8$	F	$\times 8$

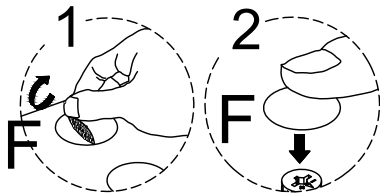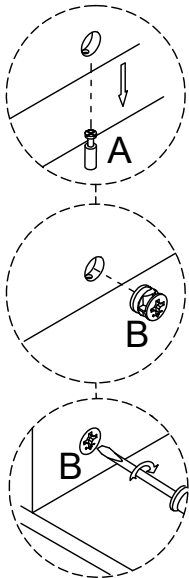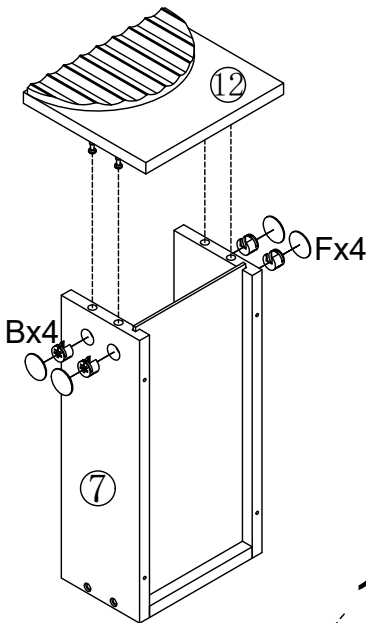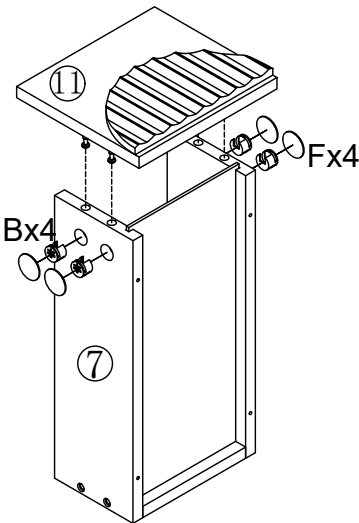


Step 15

E	×8	DL	×2	DR	×2

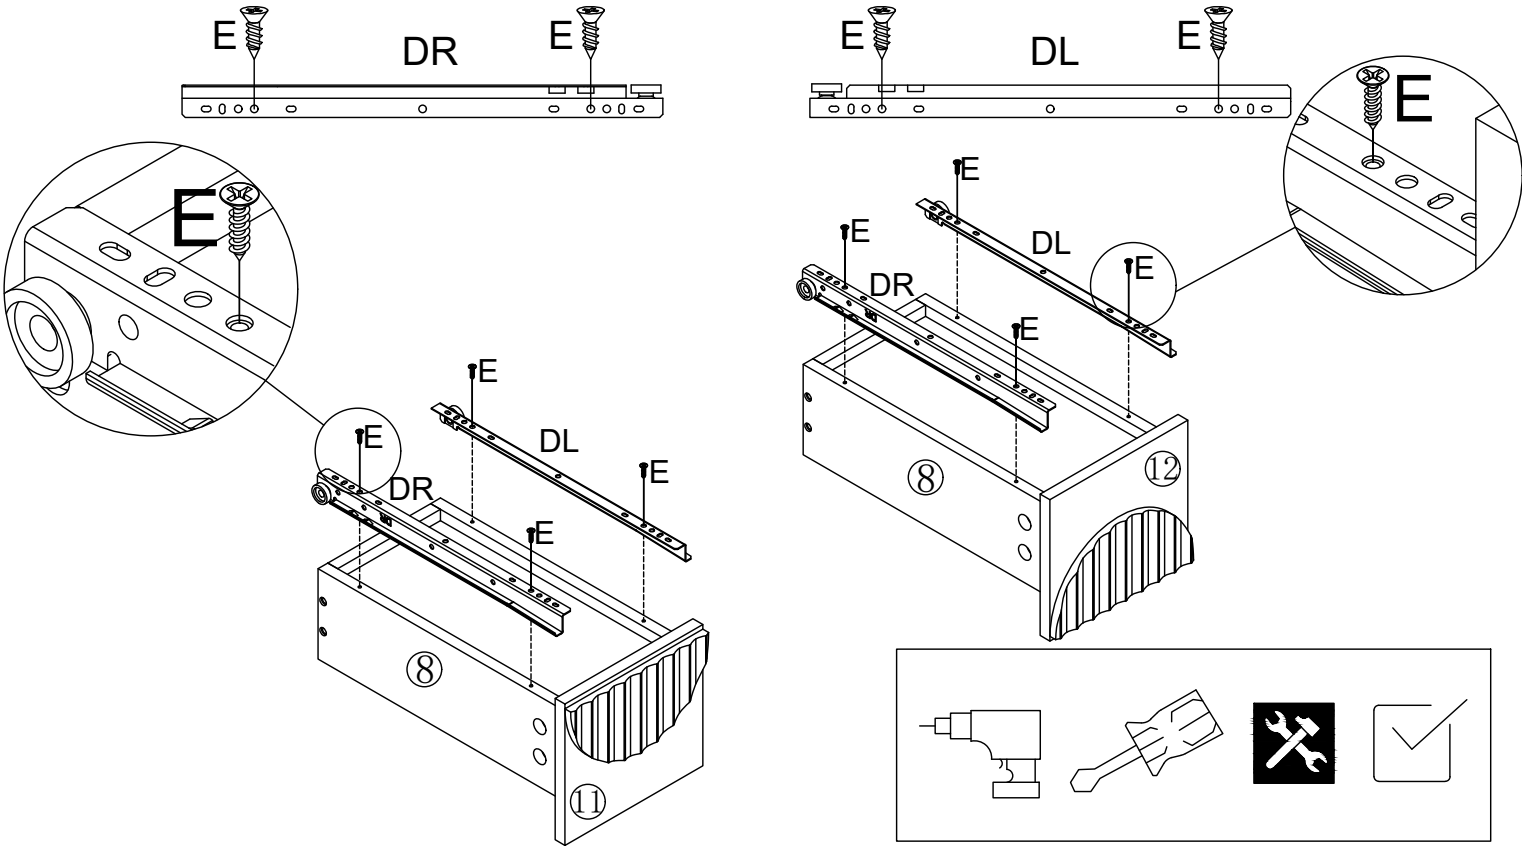


Step 16


D	×2	J	×2

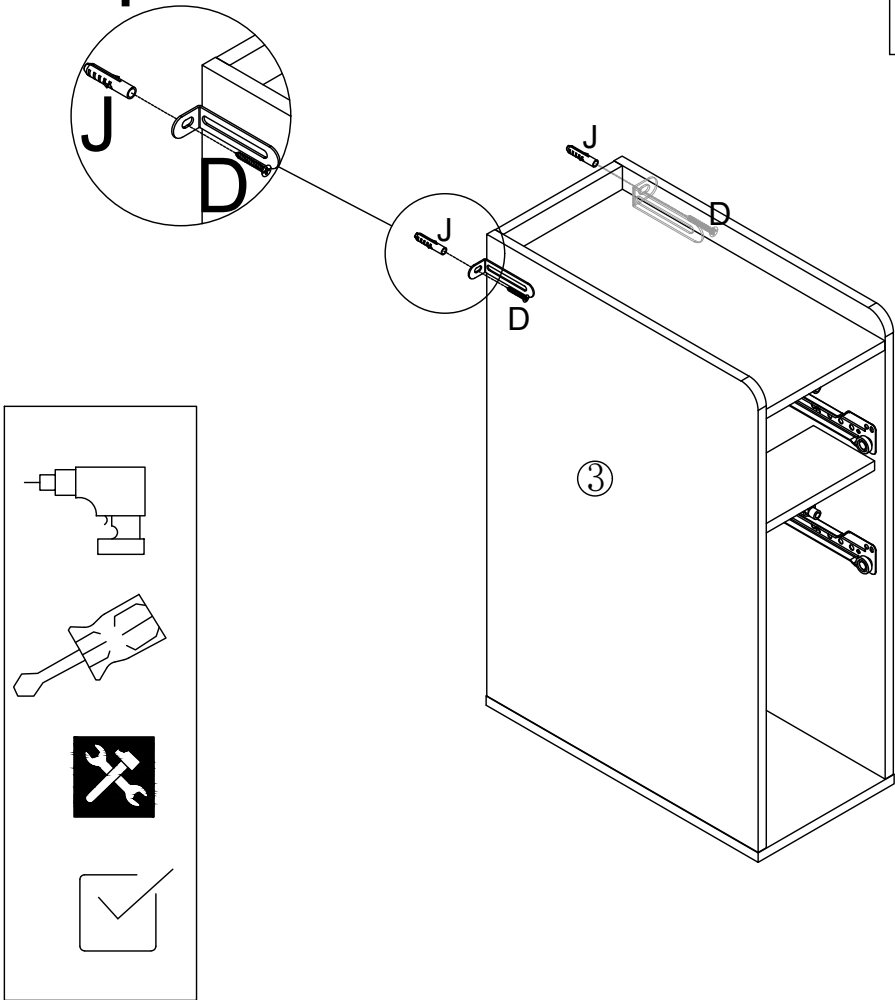

drill hole in wall

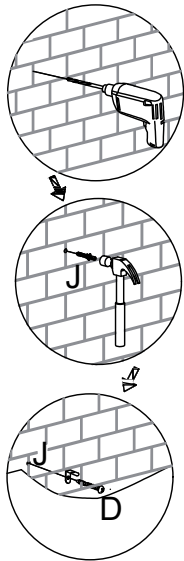


Step 17


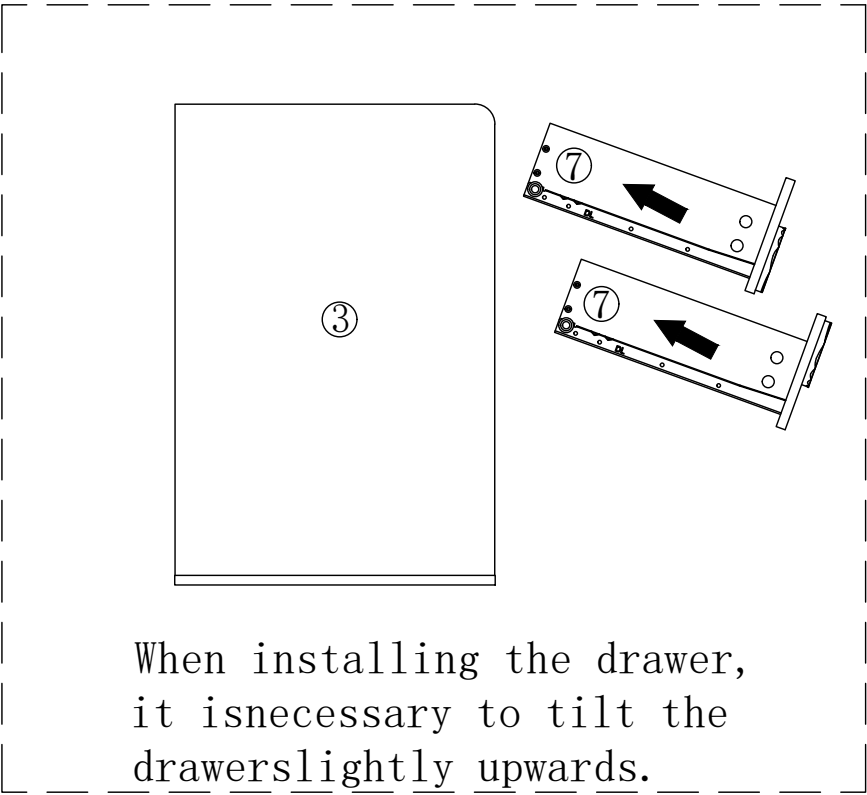


When installing the drawer, it is necessary to tilt the drawers slightly upwards.

If the spring-loaded drawer cannot be opened by pressing, you can rotate the head of component L to adjust its length.

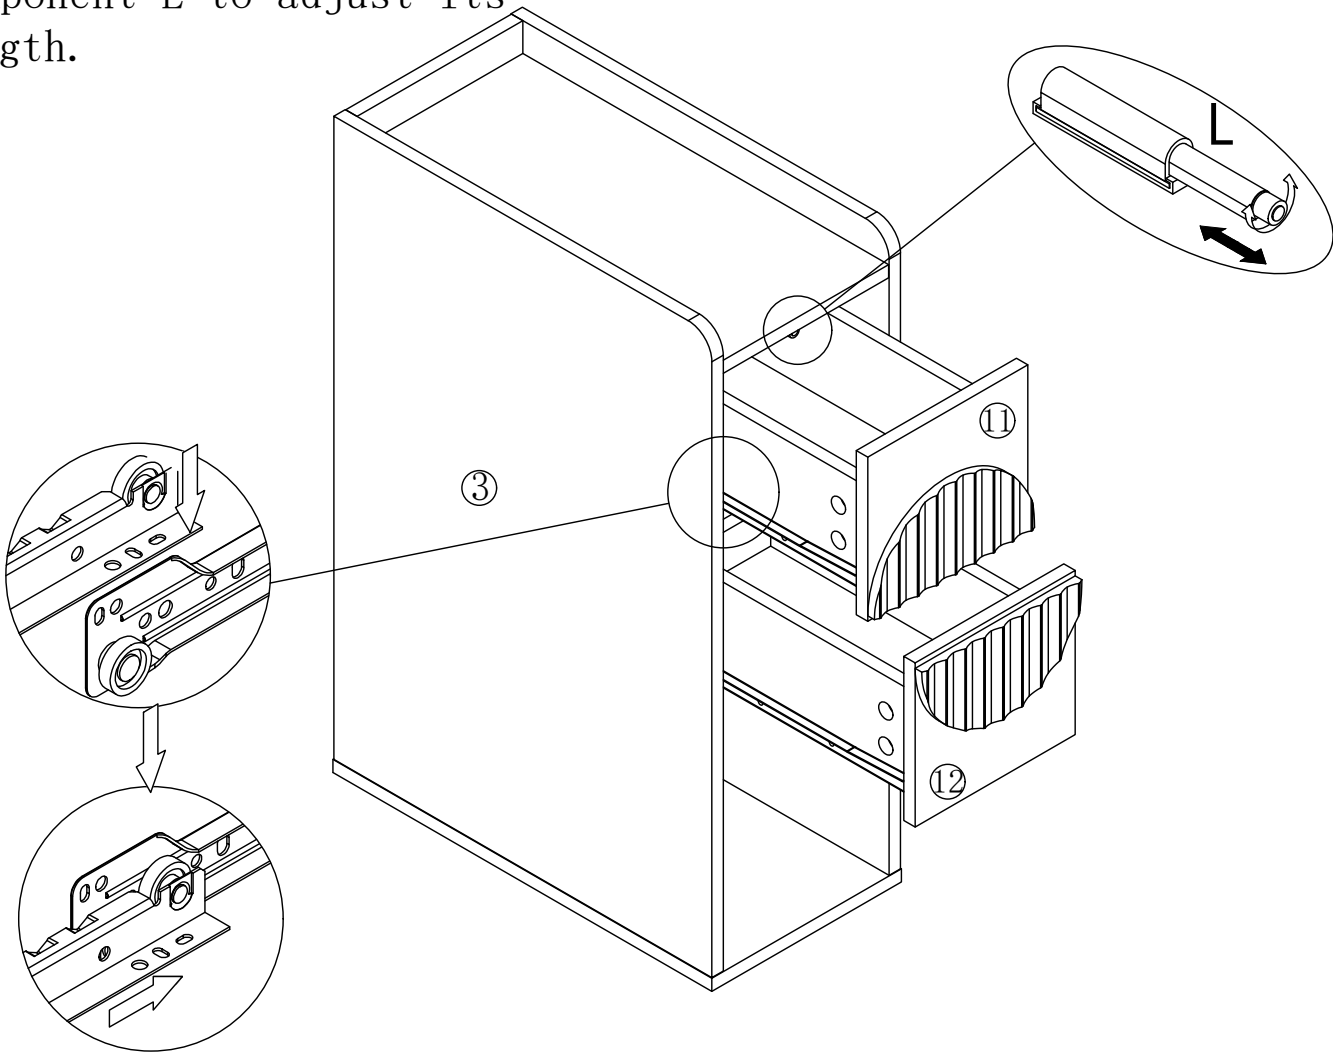

Step 18

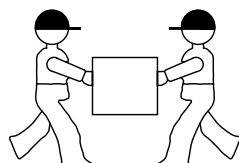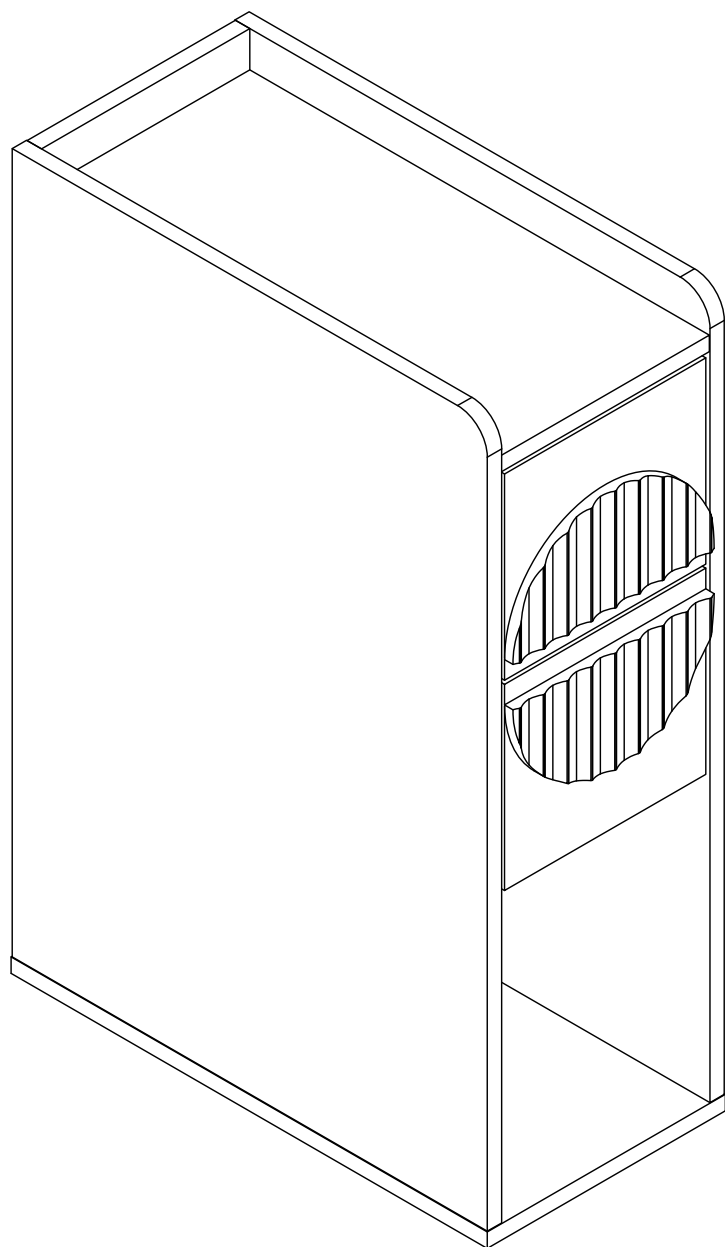

Two people work together to move the cabinet.
Make sure you lift it off the ground.
Don't push and pull.