




STEP 17 Assemble the panel no. 1 to the unit by using Mini Fix 15mm (F2). Make sure the panel no. 18 support by the 3mm MDF Support (G12).

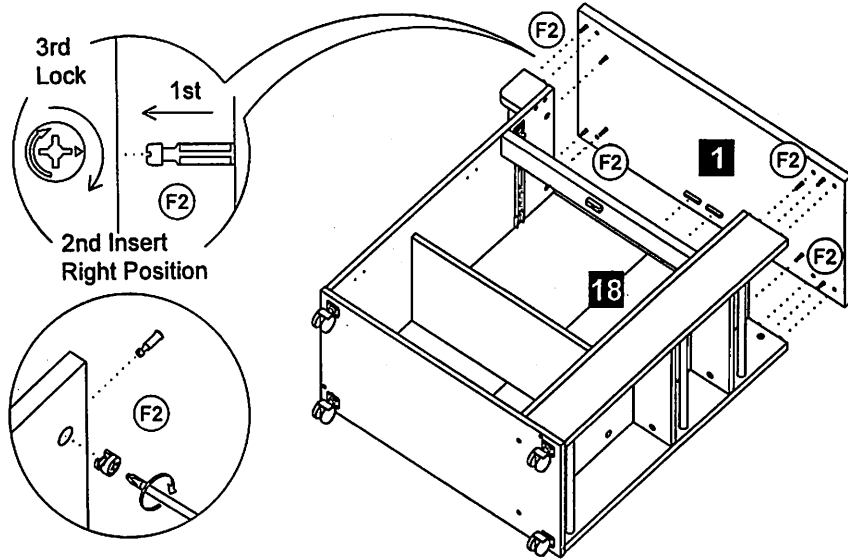


STEP 18 Assemble the Single Plastic Cap (R2) by using Screw (A2) to secure the panel no. 18. Use Nail (N3) to secure the panel no. 14 & 18.

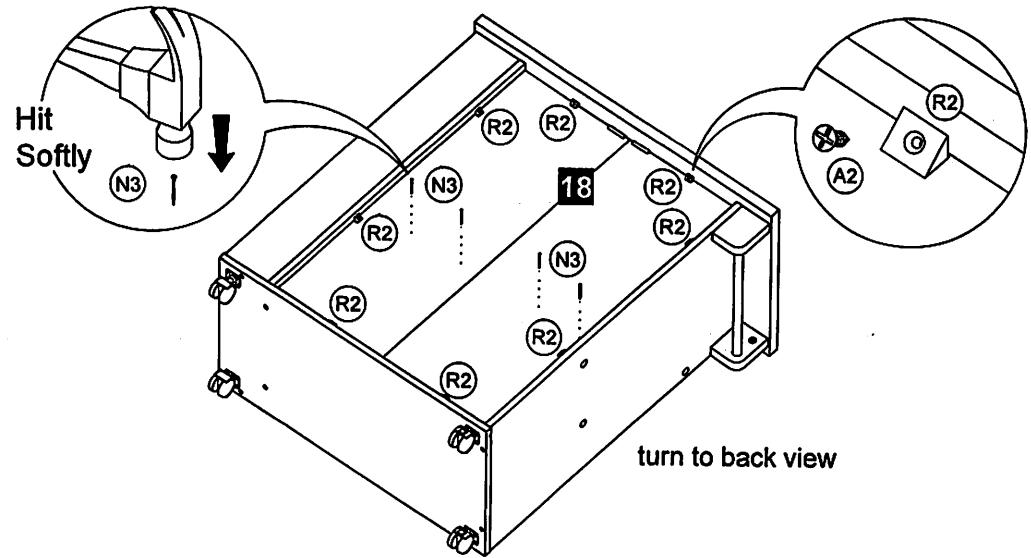


STEP 19 Finally, insert the drawer & attach door & adjusting the Hinges (E9) screw to parallel between a door gaps.

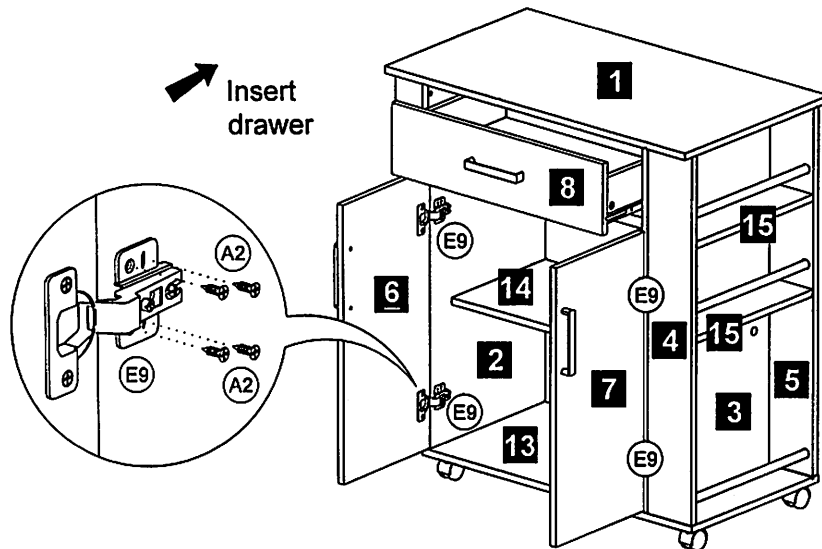


COMPLETE

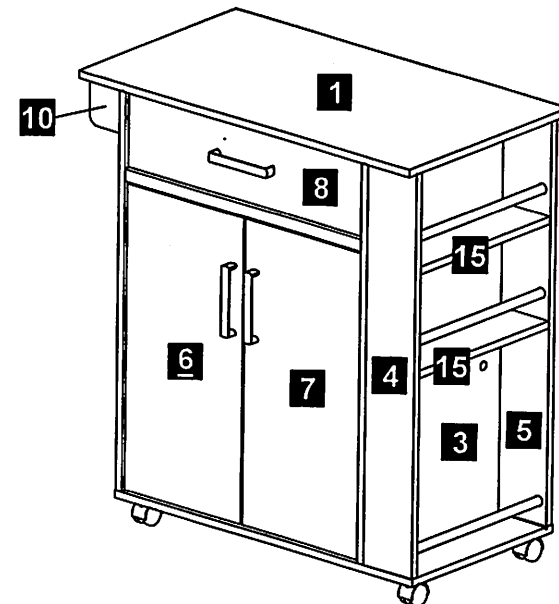


- STEP 13** Assemble the panel no. 9 & 10 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17).

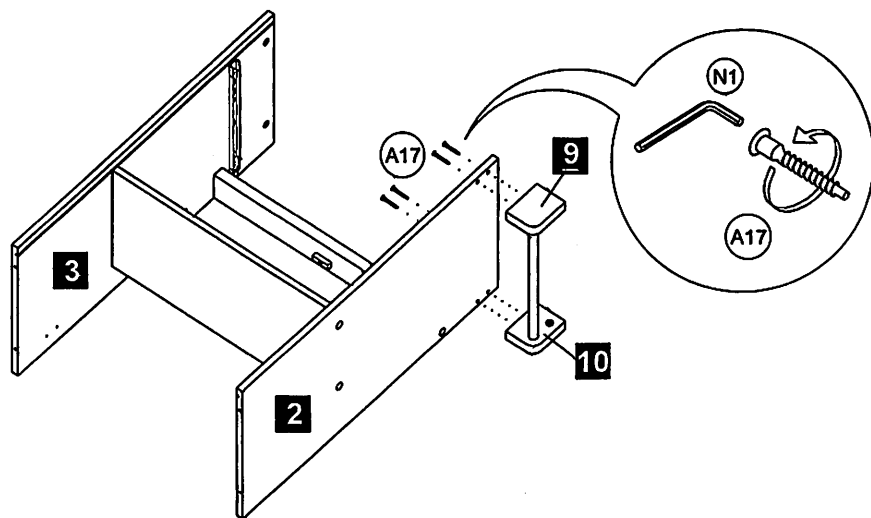


- STEP 14** Assemble the panel no. 13 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17).

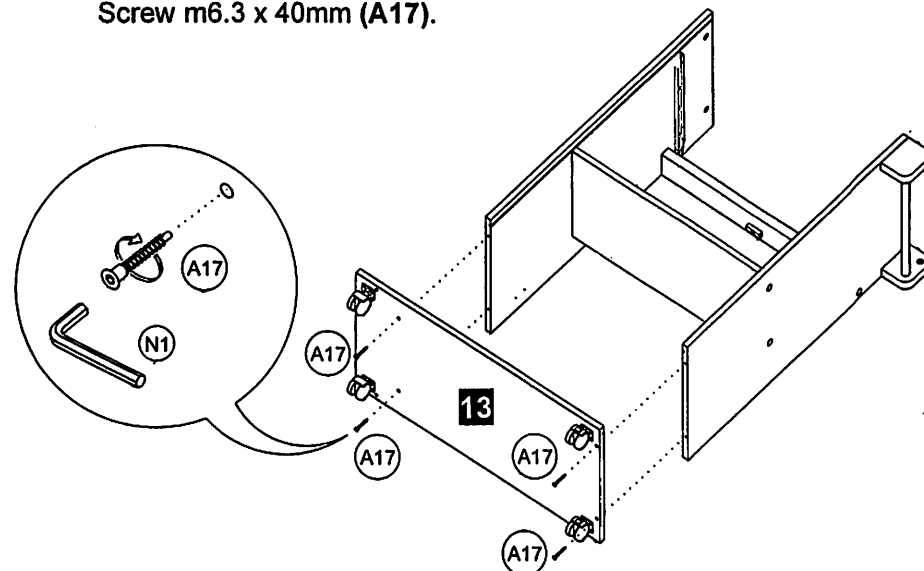


- STEP 15** Slide the back panel no. 18 until the groove end.

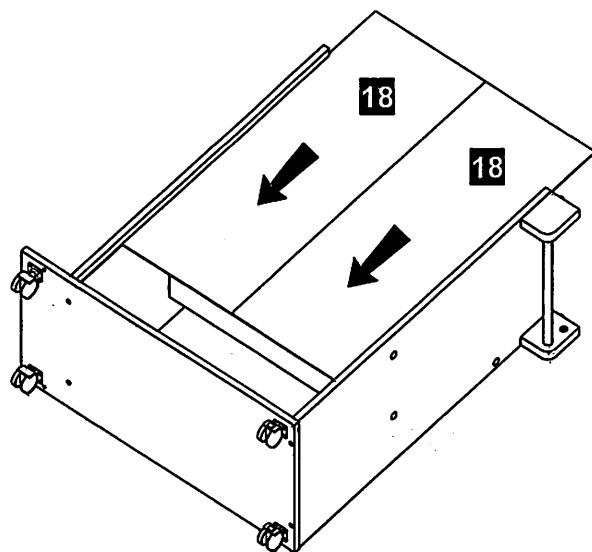


- STEP 16** Assemble the combination of panel no. 4, 5 & 15 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17).

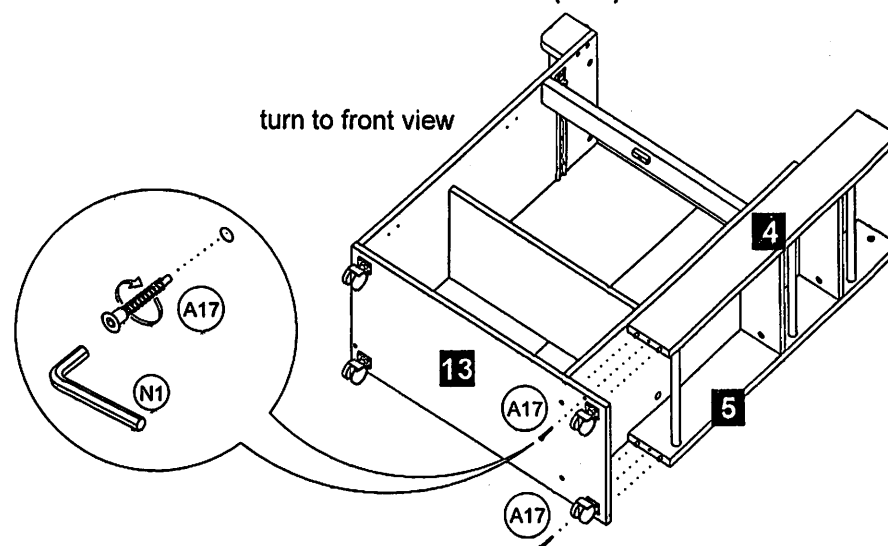


STEP 9 Assemble the Handle (H15) at panel no. 6 & 7 by using Screw m4 x 30mm (A7). Use Screw m3.5 x 14mm (A2) to assemble the Hinges 7/8 (E9) at panel no. 6 & 7.

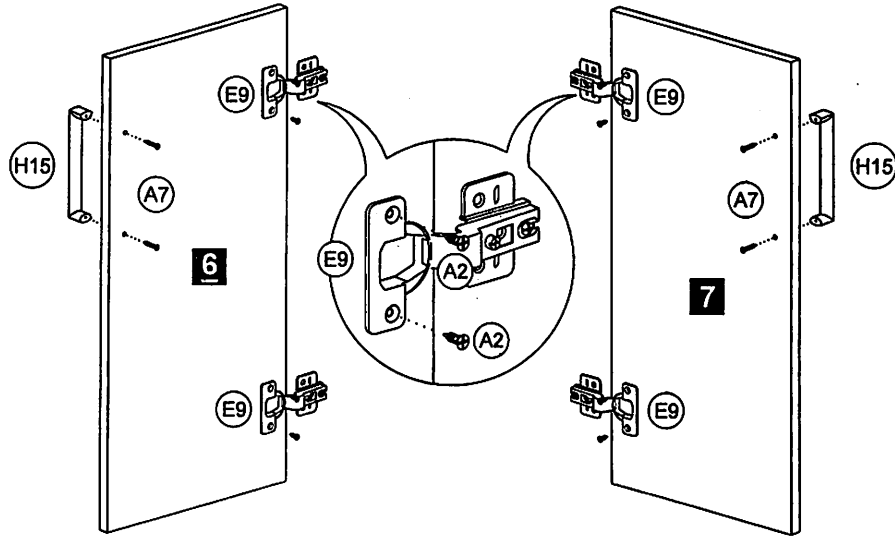


STEP 10 Insert the Hanging Steel Pipe 18mm x 377mm (P) into the large marking hole between the panel no. 9 & 10.

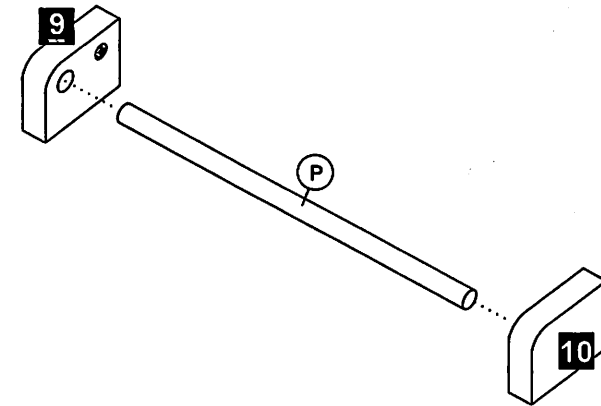


STEP 11 Insert the Hanging Steel Pipe 18mm x 377mm (P) into the large marking hole between the panel no. 4 & 5. Use Mini Fix 15mm (F2) to assemble all panels below together.

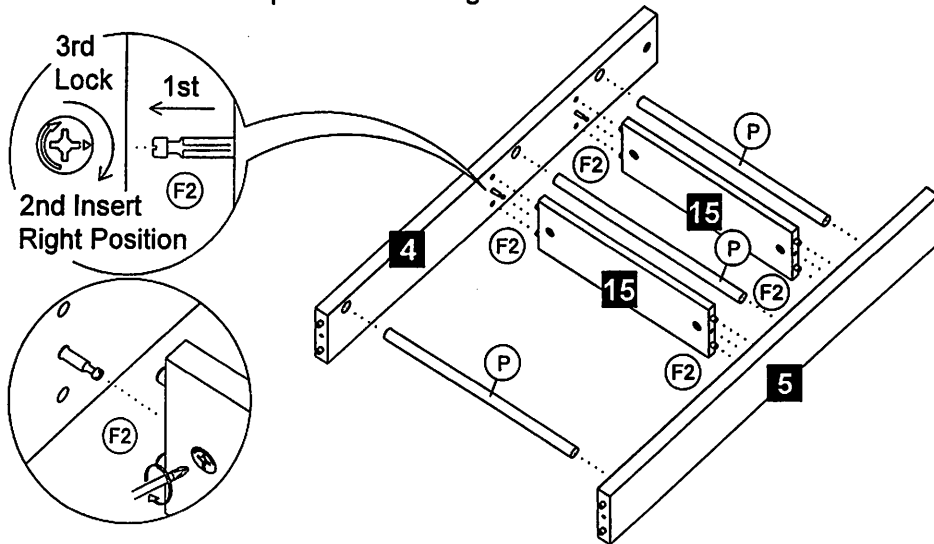


STEP 12 Assemble the panel no. 2, 3, 14 & 17 together by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17) & button the screw head by using Crosshead Cover (Y).

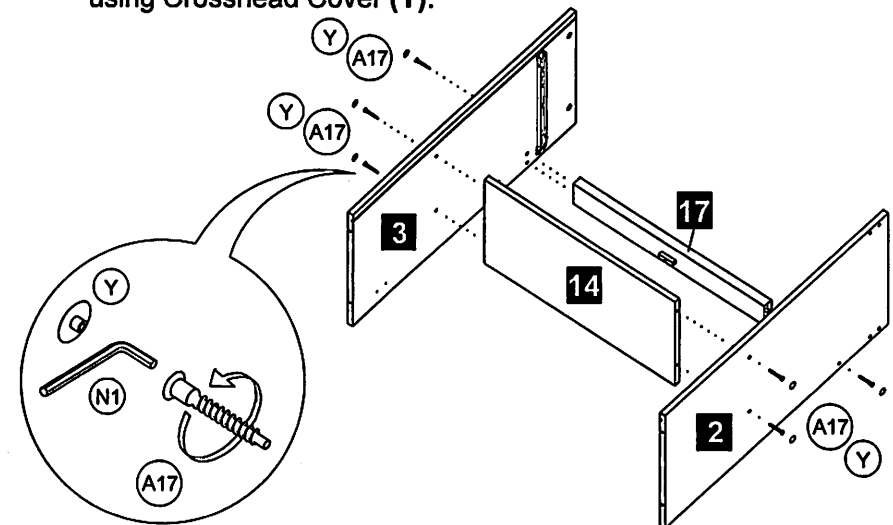


STEP 5 Fix the Mini Fix Bolt (F2) & 3mm MDF Support (G12) at panel no. 1. Use Screw (A2) to assemble the Plate Caster Wheel P50 2S/2F (W6) at panel no. 13.

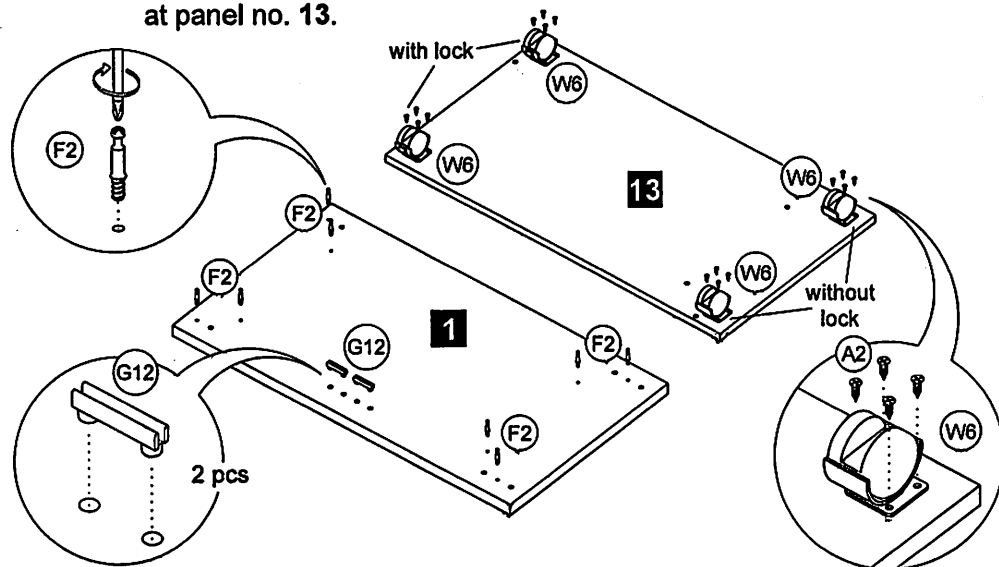


STEP 6 Insert the Mini Fix Cam (F2) at panel no. 2, 3, 9 & 10. Insert the Wood Dowel (D6) at panel no. 9 & 10. Assemble the Drawer Metal Slide 350mm (M6) in right position at marking hole at panel no. 2 & 3 by using Euro Screw (A34).

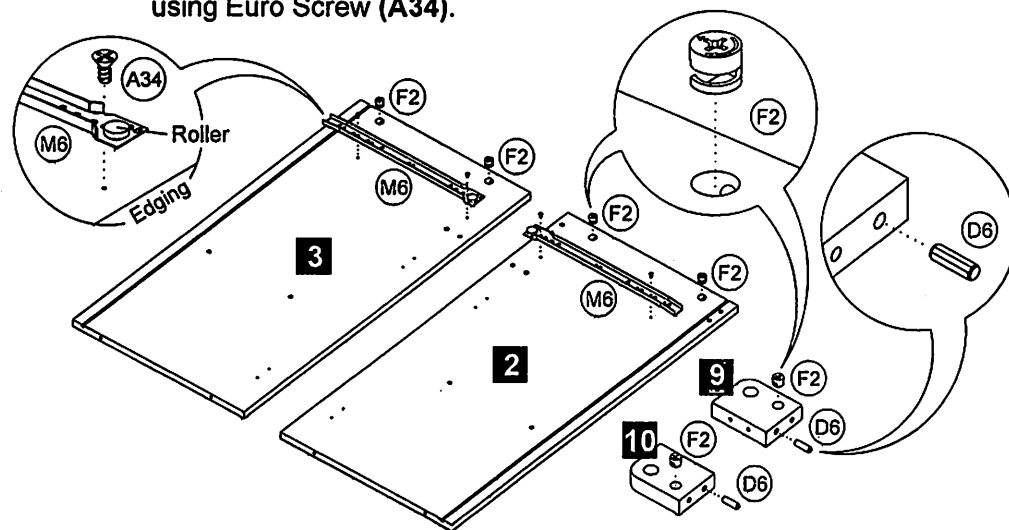


STEP 7 Insert the Wood Dowel (D6) & Mini Fix Cam (F2) at panel no. 15. Insert Wood Dowel (D6) & Door Stopper (S2) at panel no. 17.

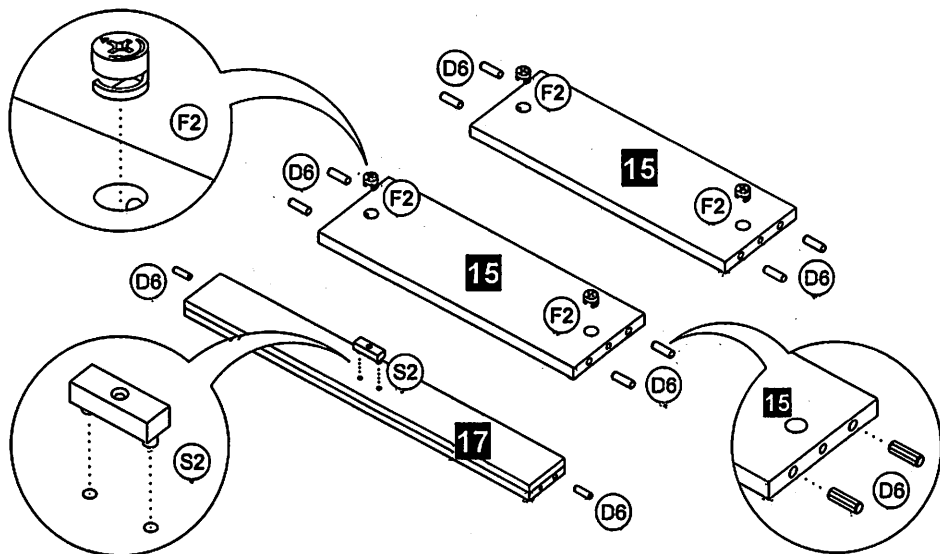


STEP 8 Insert Mini Fix Cam (F2) & Mini Fix Bolt (F2) at panel no. 4 & 5. Insert Wood Dowel (D6) at panel no. 4 & 5.

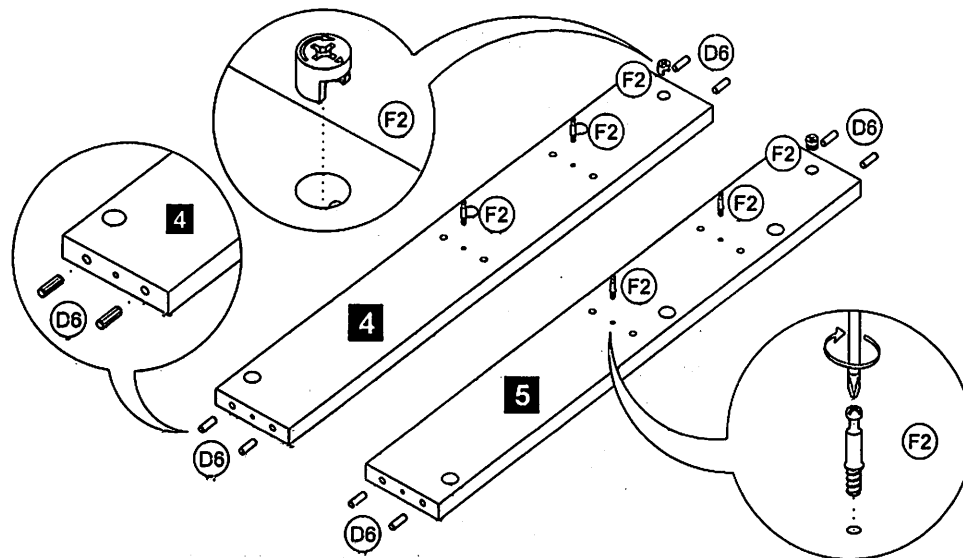


STEP 1 Insert the Mini Fix Bolt (F2) & assemble the Handle (H15) at panel no. 8 by using Screw m4 x 30mm (A7). Insert the Mini Fix Cam (F2) & Wood Dowel (D4) at panel no. 11 & 12.

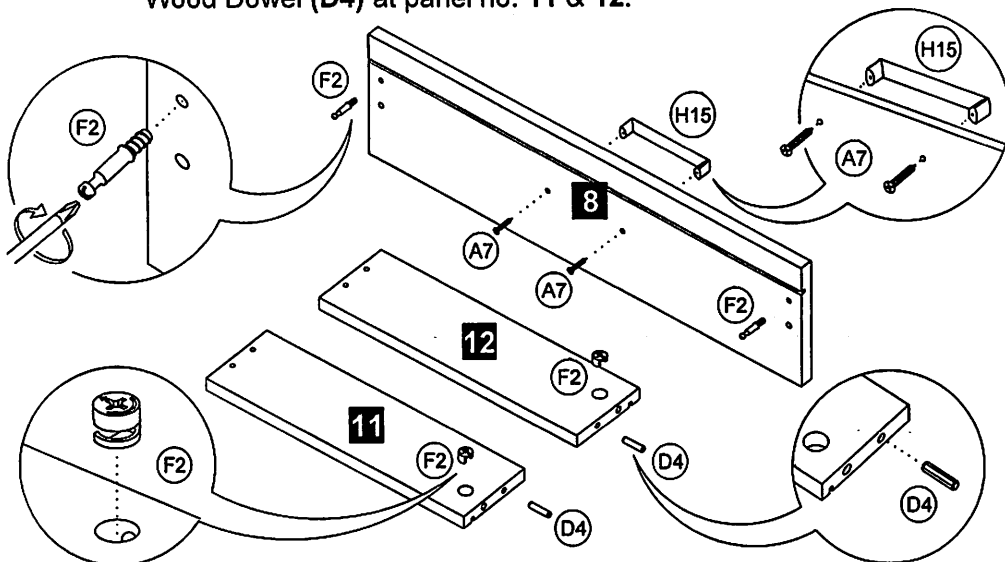


STEP 2 Assemble the panel no. 11, 12 & 16 together by using Screw (A10).

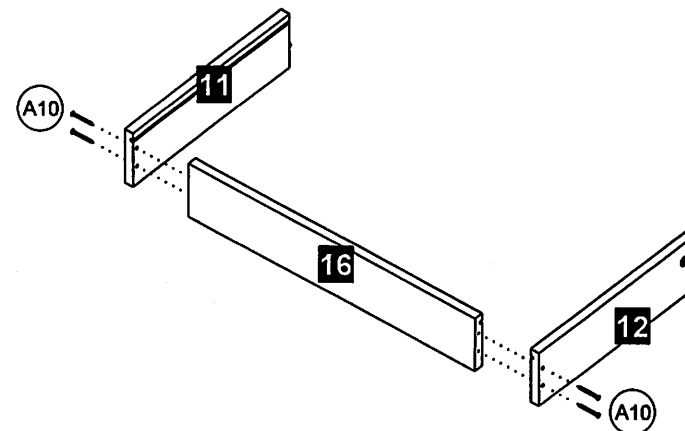

STEP 3 Slide the panel no. 19 until the groove end. Then assemble the drawer head panel no. 8 by using Mini Fix 15mm (F2).

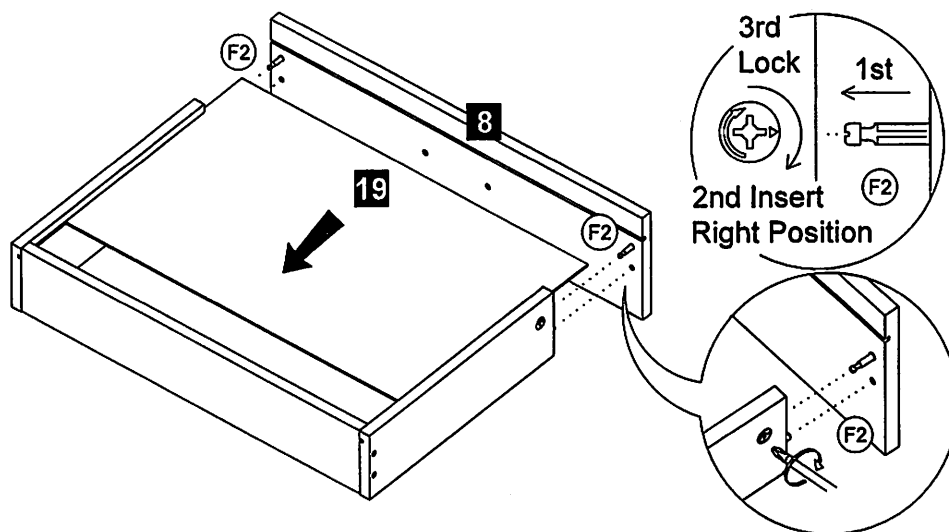


STEP 4 Assemble the Drawer Metal Slide 350mm (M6) at the left & right panel using Screw m3.5 x 14mm (A2). Use Screw m3.5 x 14mm (A2) to assemble the Single Plastic Cap (R2) to secure the drawer bottom panel.


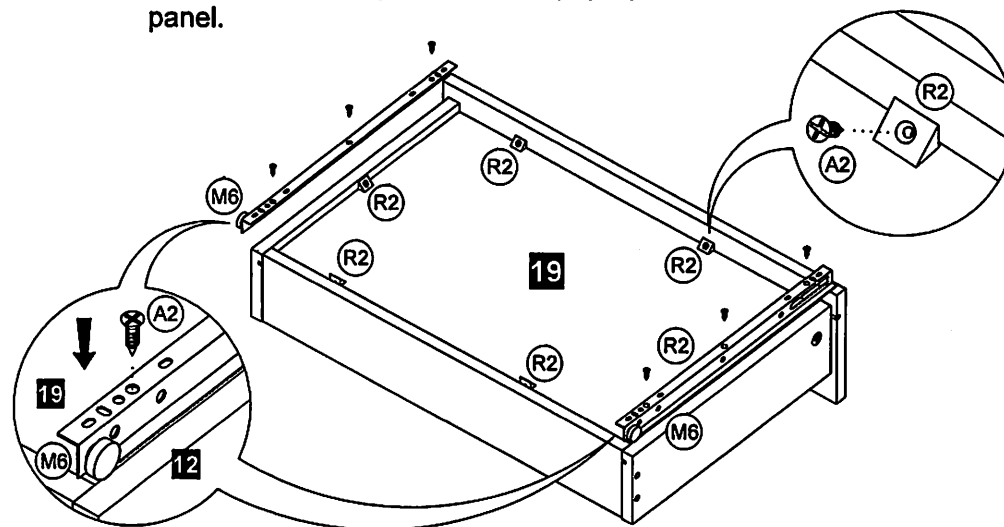


Reference Screw Size.



Place your screw on top to identify the size

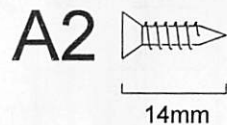



Screw
m3.5 x 14mm

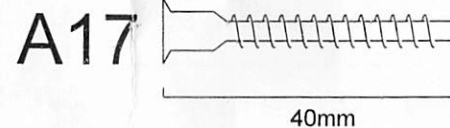



Crosshead Screw
6.3 x 40mm

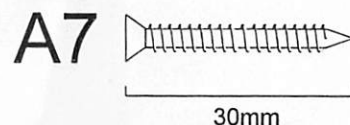


Screw
m4 x 30mm

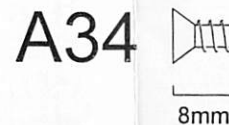

Euro Screw
m5 x 8mm

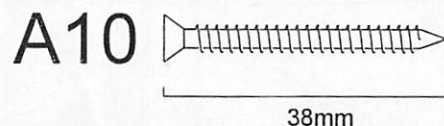

Screw
m4 x 38mm






















Before you begin, please follow assembly instruction carefully, then follow step by step.

Read instruction carefully. See furniture Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place and assemble furniture on a clean flat soft surface, such as carpet, rug or carton to prevent being scratched.

Reminder :

Please ensure that all surface and edges with colours / laminations are facing forward / outward.

HARDWARE LIST			QTY
A2		Screw m3.5 x 14mm	60
A7		Screw m4 x 30mm	6
A10		Screw m4 x 38mm	4
A17		Crosshead Screw 6.3 x 40mm	16
A34		Euro Screw m5 x 8mm	4
D4		Wood Dowel 6 x 25mm	2
D6		Wood Dowel 8 x 25mm	20
E9		Door Hinges 7/8"	4
F2		Mini Fix 15mm	14 Sets

G12		3mm MDF Support	2
H15		Handle 128mm	3
M6		Drawer Metal Slide 350mm	1 Set
N1		Allen Key	1
N3		Nail	4 (+-3)
P		Hanging Steel Pipe 18mm x 377mm	4
R2		Single Plastic Cap	14
S2		Door Stopper	1
W6		Plate Caster Wheel P50 2S / 2F	1 Set
Y		Crosshead Cover	6

Each pack have contain different type hardware and size of screw for easy assemble.

Please refer to page 2, check a screw size.

CAUTION

MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL. AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.



USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

