

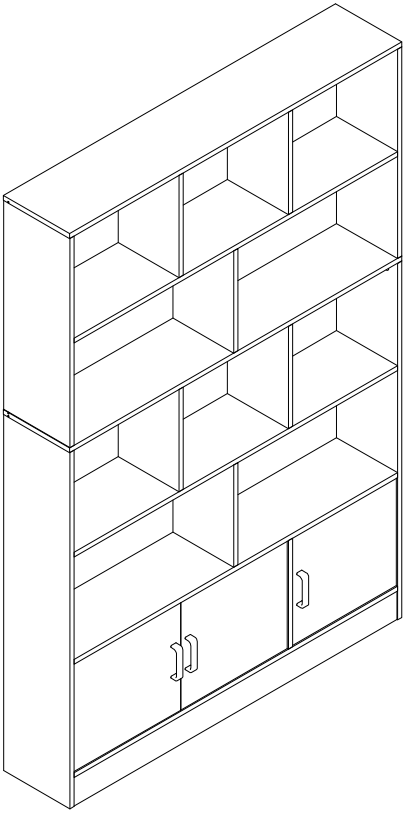
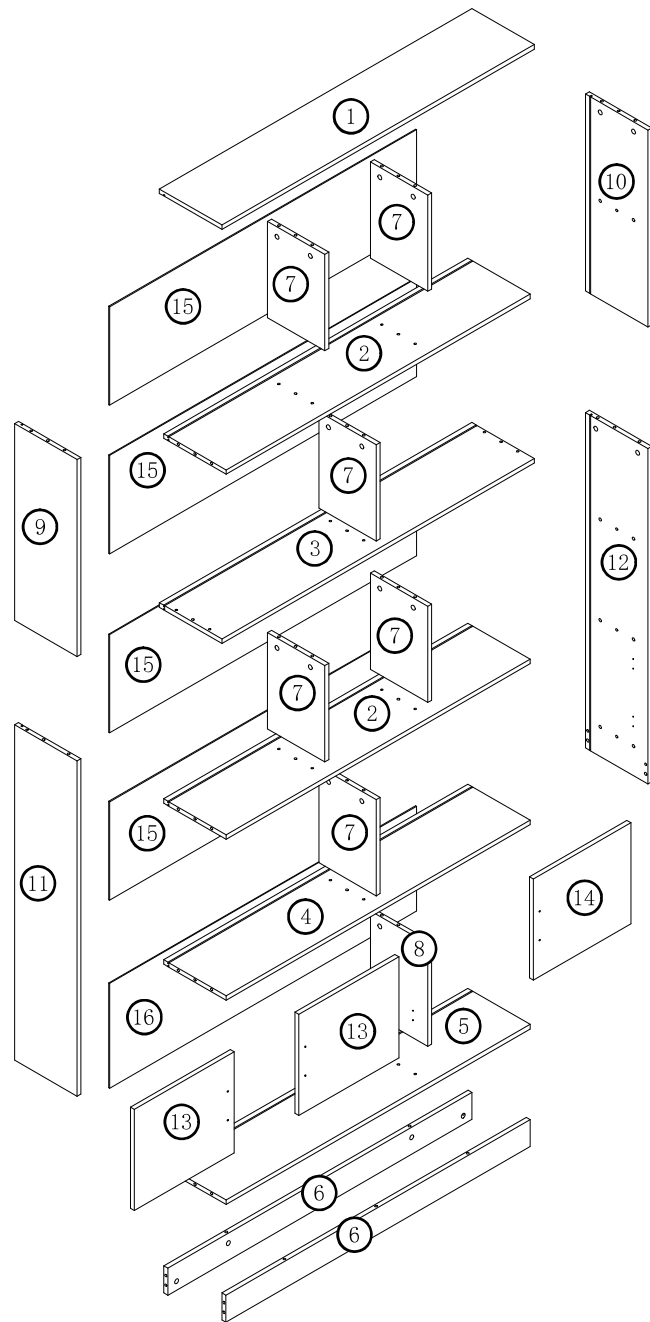
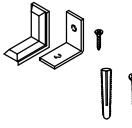



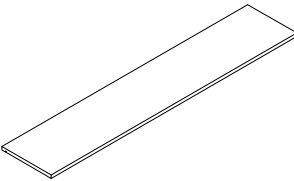
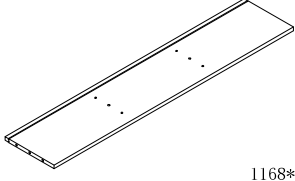
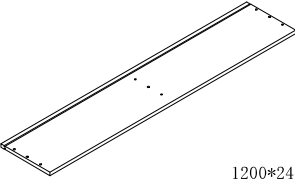
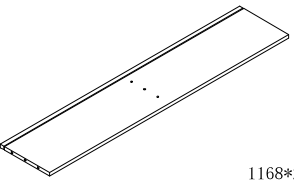
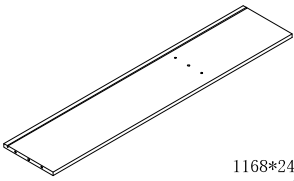
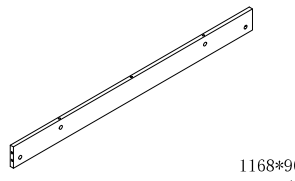






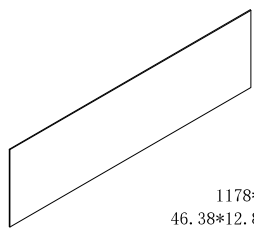

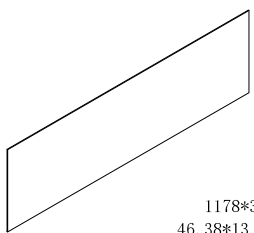


H  38PCS	I 96  3PCS	J 4*18  6PCS	K  6PCS	L  2PCS	M  2PCS	A  46PCS	B  46PCS	C 8*40  34PCS	D 7*50  18PCS	E 3.5*14  40PCS	F  30PCS	G 3*12  30PCS
--	---	---	---	--	---	--	--	--	--	---	--	--

1  1200*240 (mm) 47.24*9.45 (inch) 1PC	2  1168*240 (mm) 45.98*9.45 (inch) 2PCS	3  1200*240 (mm) 47.24*9.45 (inch) 1PC	4  1168*240 (mm) 45.98*9.45 (inch) 1PC
5  1168*240 (mm) 45.98*9.45 (inch) 1PC	6  1168*90 (mm) 45.98*3.54 (inch) 2PCS	7  320*220 (mm) 12.6*8.66 (inch) 6PCS	8  340*220 (mm) 13.39*8.66 (inch) 1PC
9  655*240 (mm) 25.79*9.45 (inch) 1PC	10  655*240 (mm) 25.79*9.45 (inch) 1PC	11  1115*240 (mm) 43.9*9.45 (inch) 1PC	12  1115*240 (mm) 43.9*9.45 (inch) 1PC
13  384*336 (mm) 15.12*13.23 (inch) 2PCS	14  375*336 (mm) 14.76*13.23 (inch) 1PC	15  1178*327 (mm) 46.38*12.87 (inch) 4PCS	16  1178*348.5 (mm) 46.38*13.72 (inch) 1PC


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

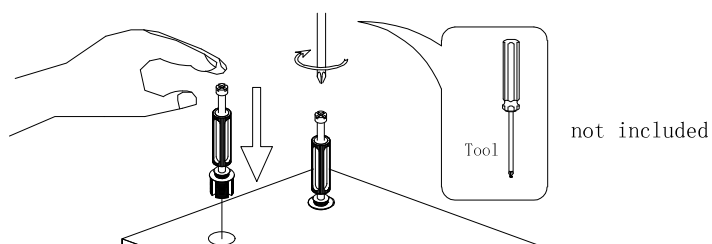








II

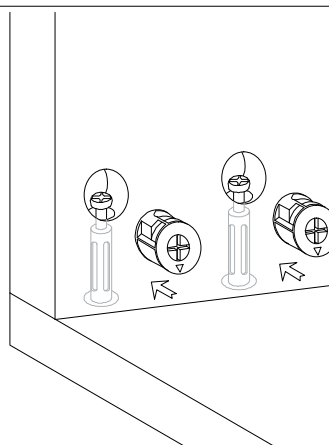

III

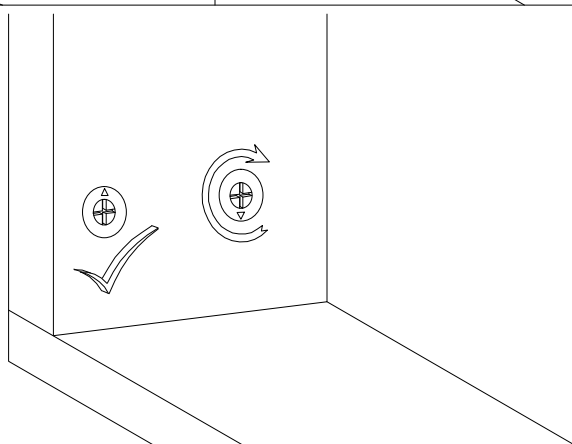

1

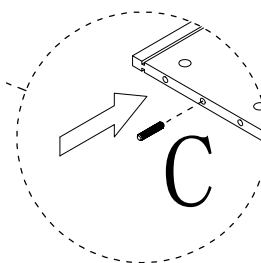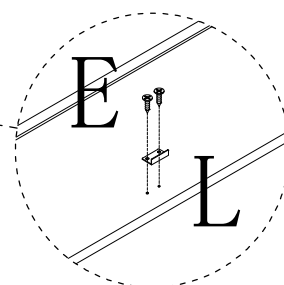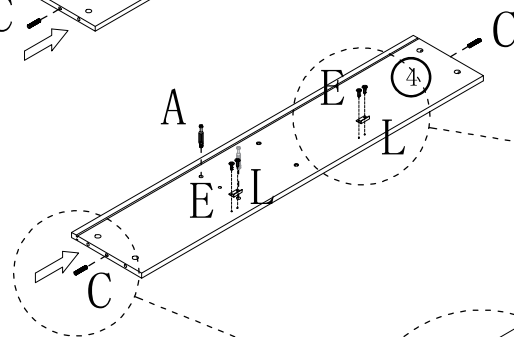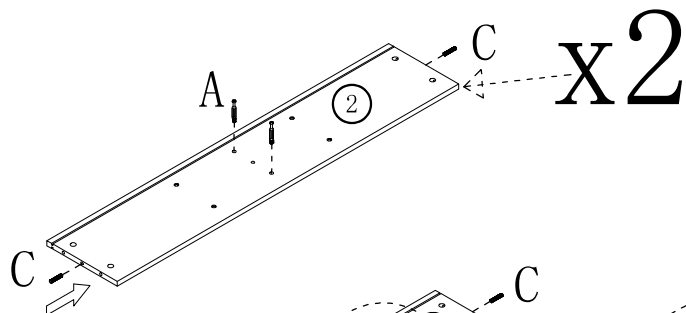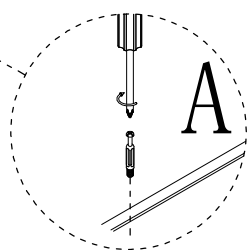
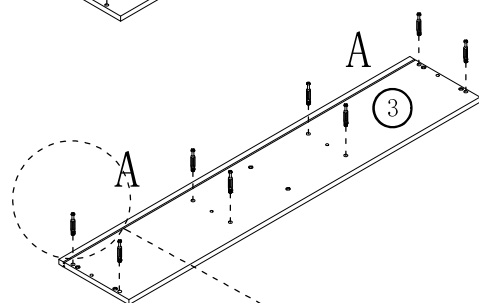
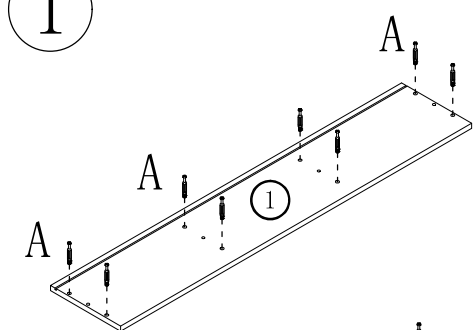


	L*2
	E*4
	C*6
	A*22

Put A on board ① ② ③ ④

Put C on board ② ④

2

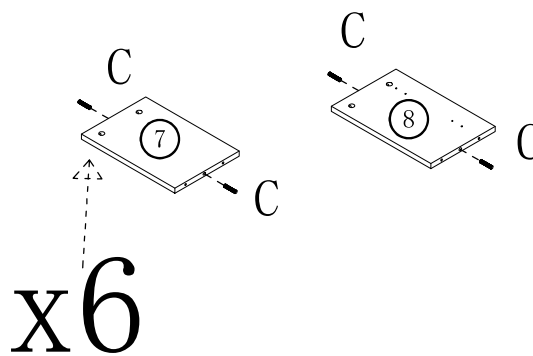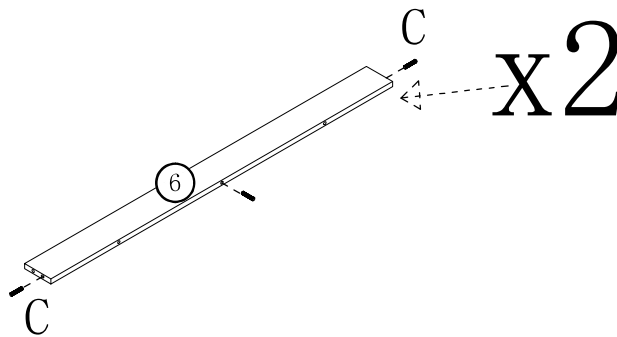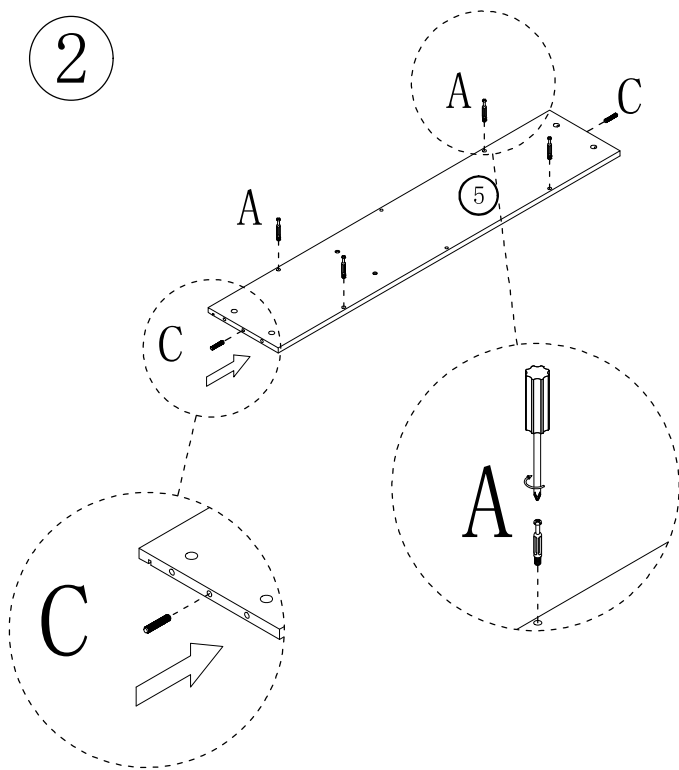

C*22


Put A on board ⑤



A*4

Put C on board ⑤ ⑥ ⑦ ⑧

3



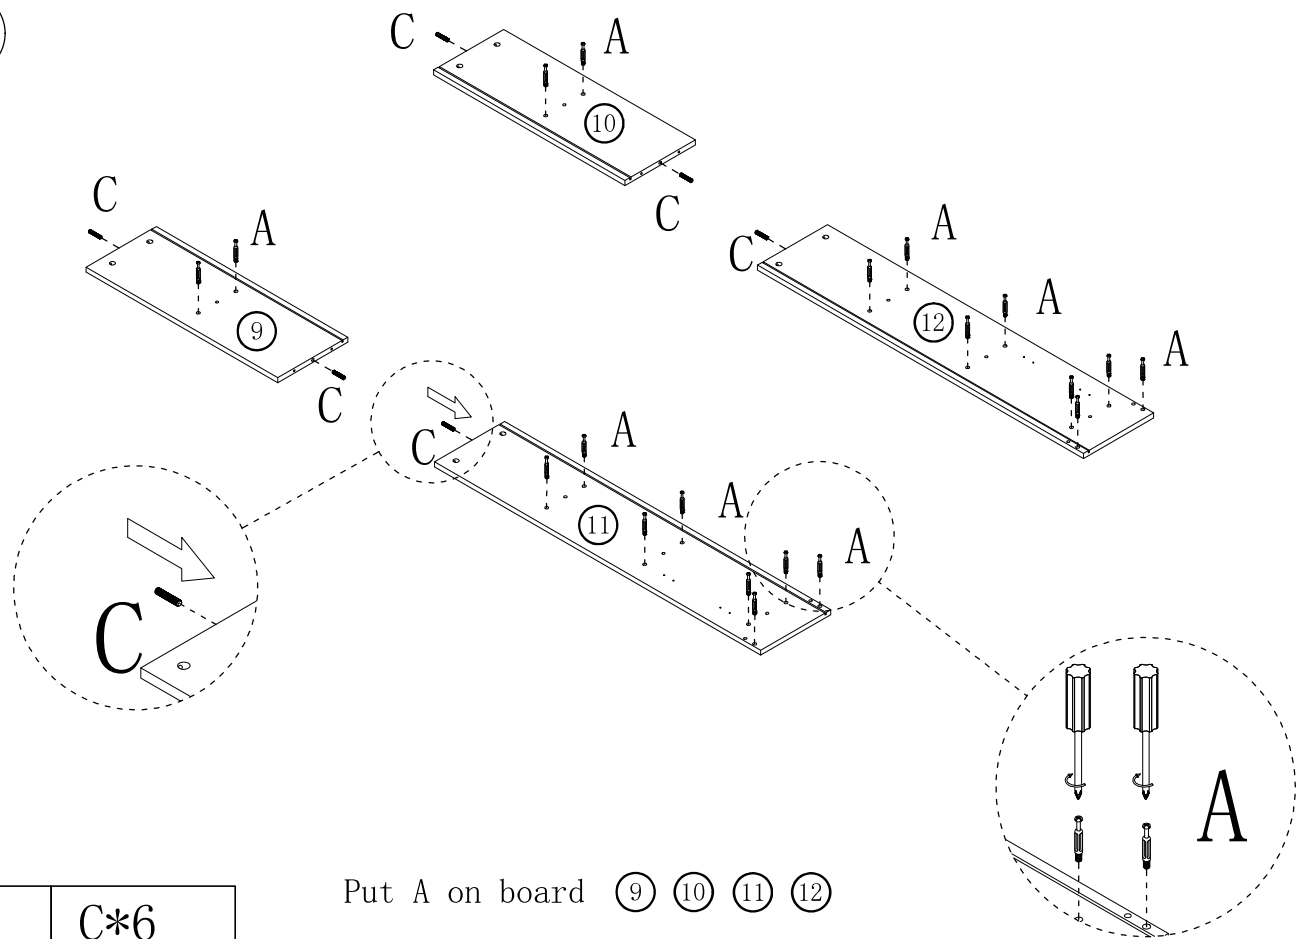


	C*6
	A*20

Put A on board 9 10 11 12

Put C on board 9 10 11 12

4

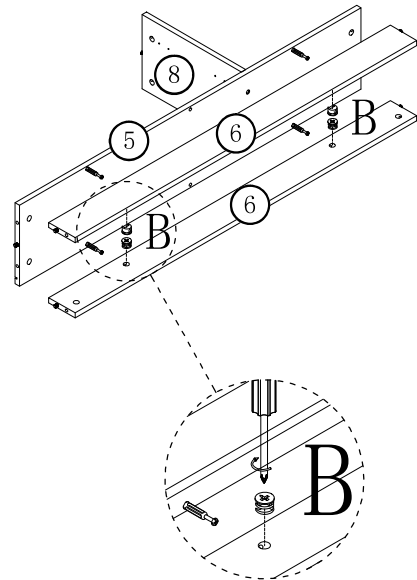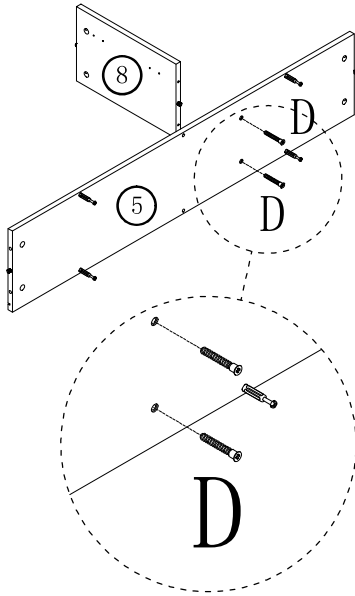





	D*2
	B*4

Put D on board ⑤

Put B on board ⑥

Make sure the arrow on the screw align to the hole on the side.

5

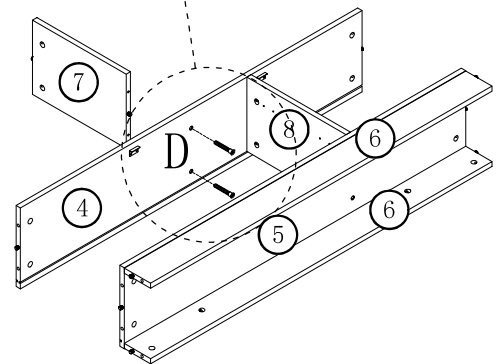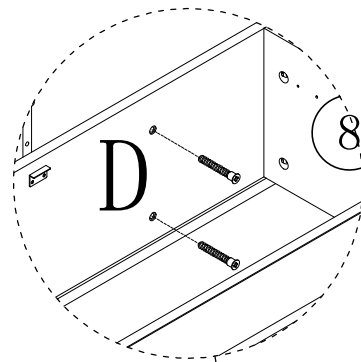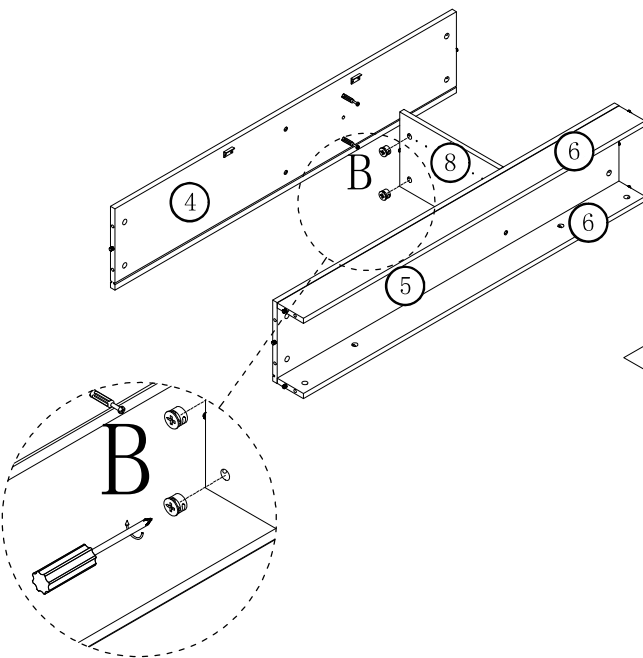

Make sure the arrow on the screw align to the hole on the side.


	D*2
	B*2

Put D on board (4)



Put B on board (8)

6

Make sure the arrow on the screw
align to the hole on the side.


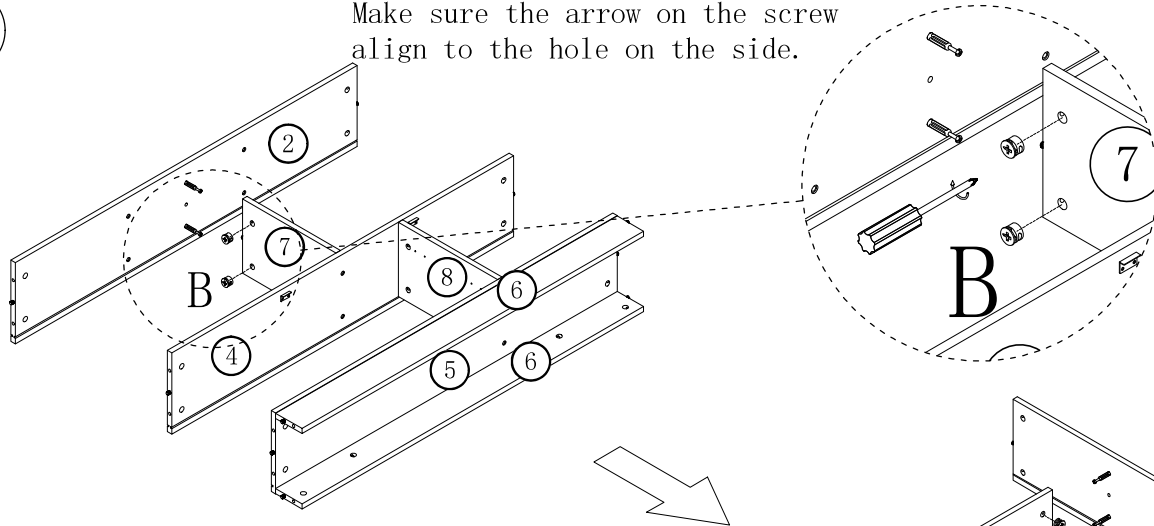


Put B on board 7 2 4 5 6

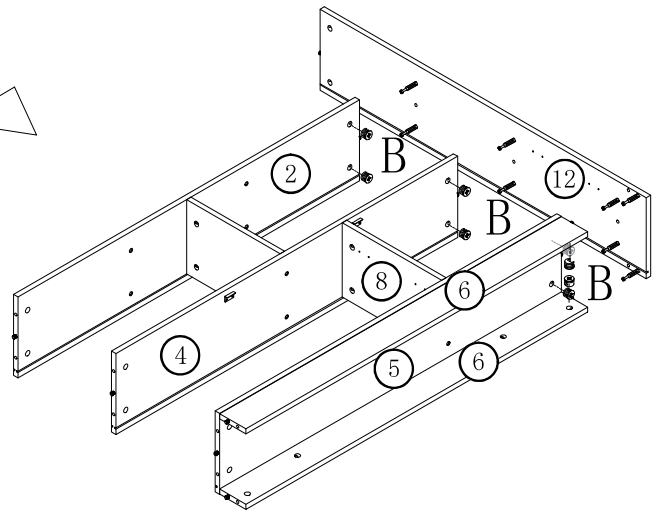



B*10

7

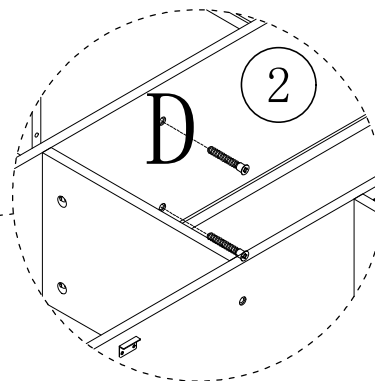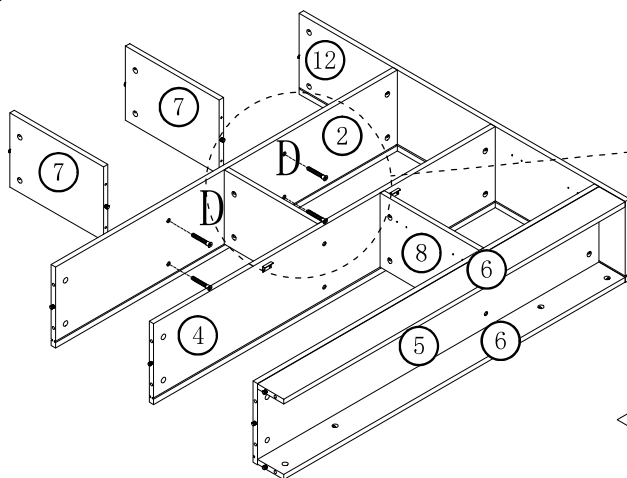


Put D on board ②

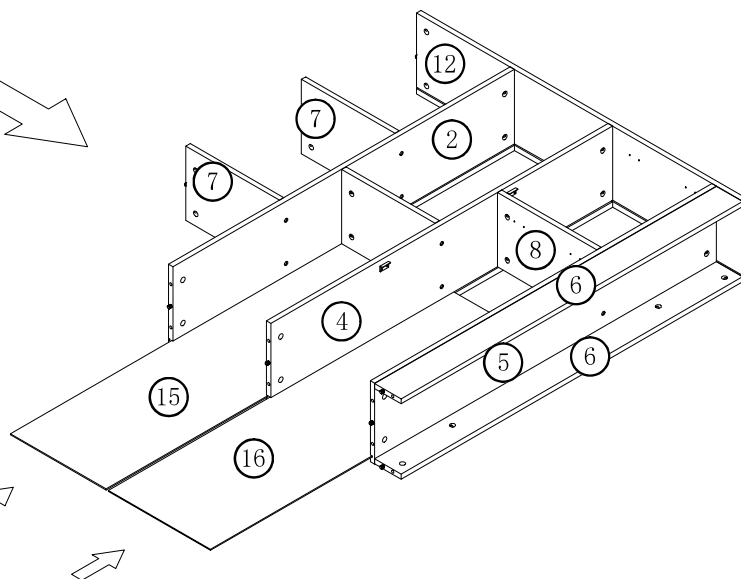


D*4

8

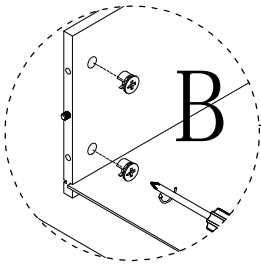

Make sure the arrow on the screw align to the hole on the side.

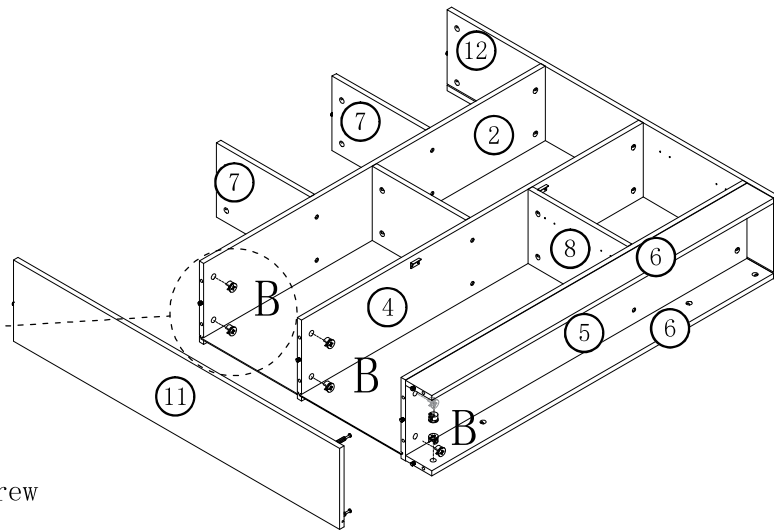


Put B on board 2 4 5 6



B*8

9

Make sure the arrow on the screw
align to the hole on the side.

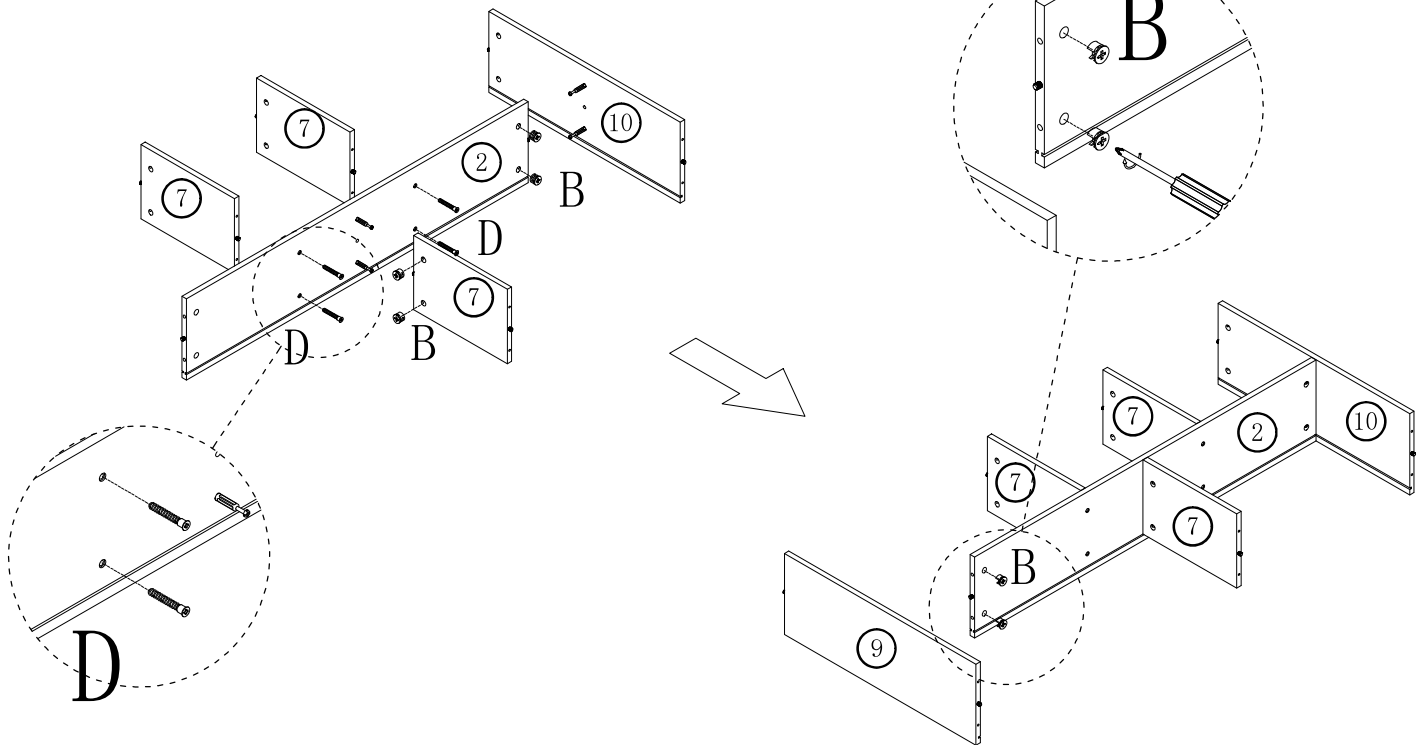


Put D on board ②

Put B on board ② ⑦

	D*4
	B*6

10

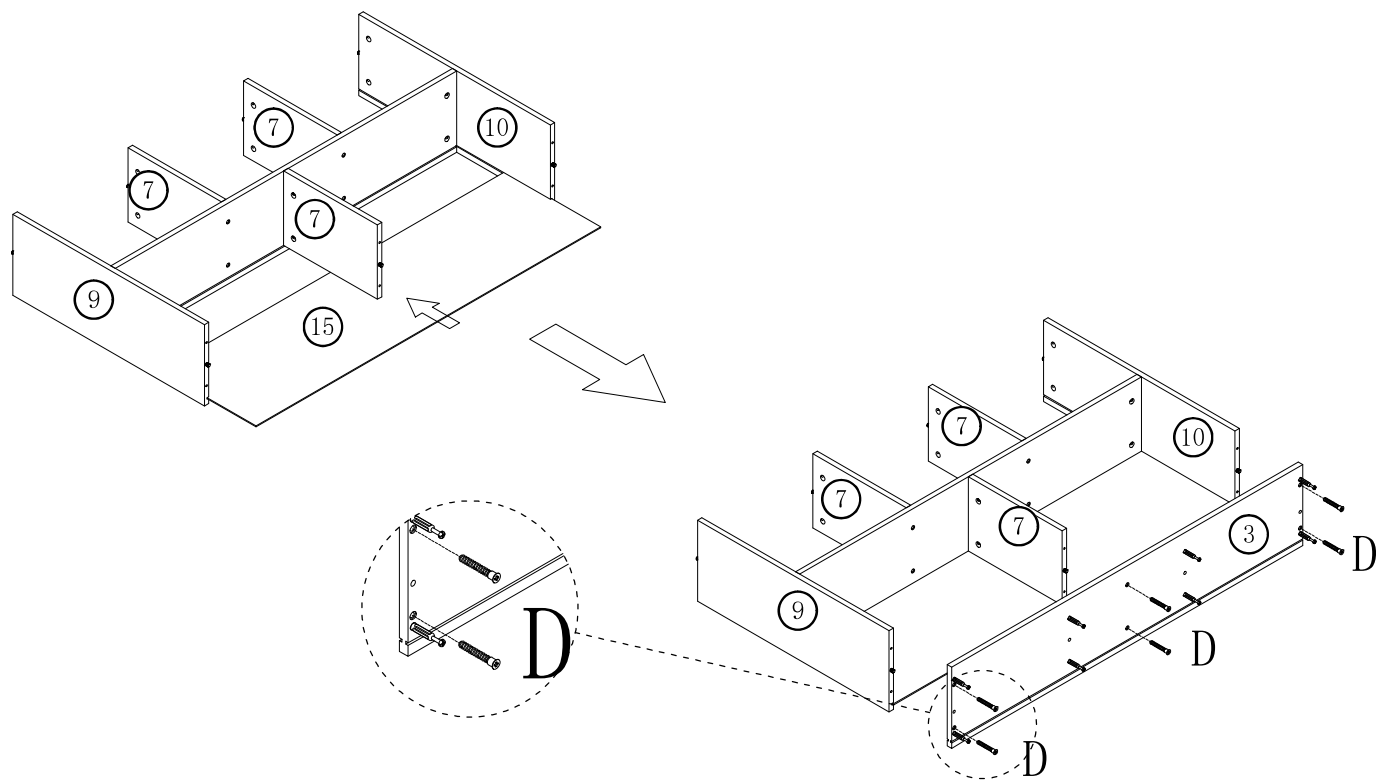




Put D on board ③



D*6

11

Make sure the arrow on the screw align to the hole on the side.

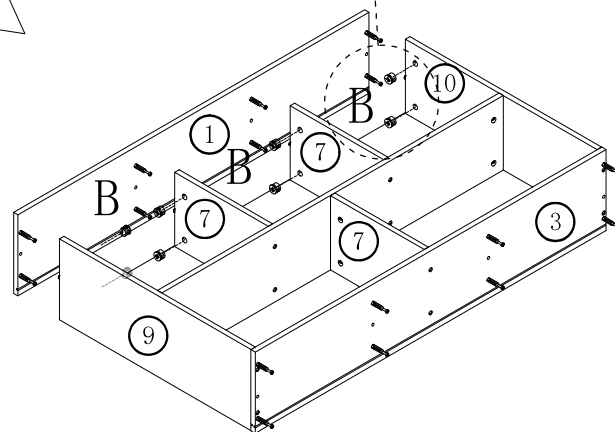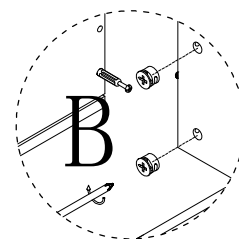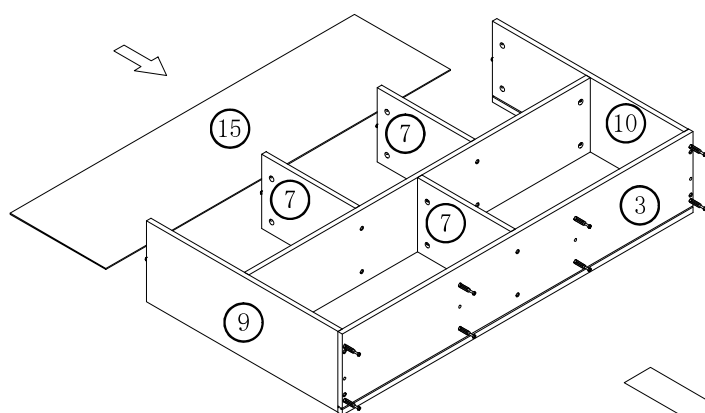


Put B on board 7 9 10






B*8

12

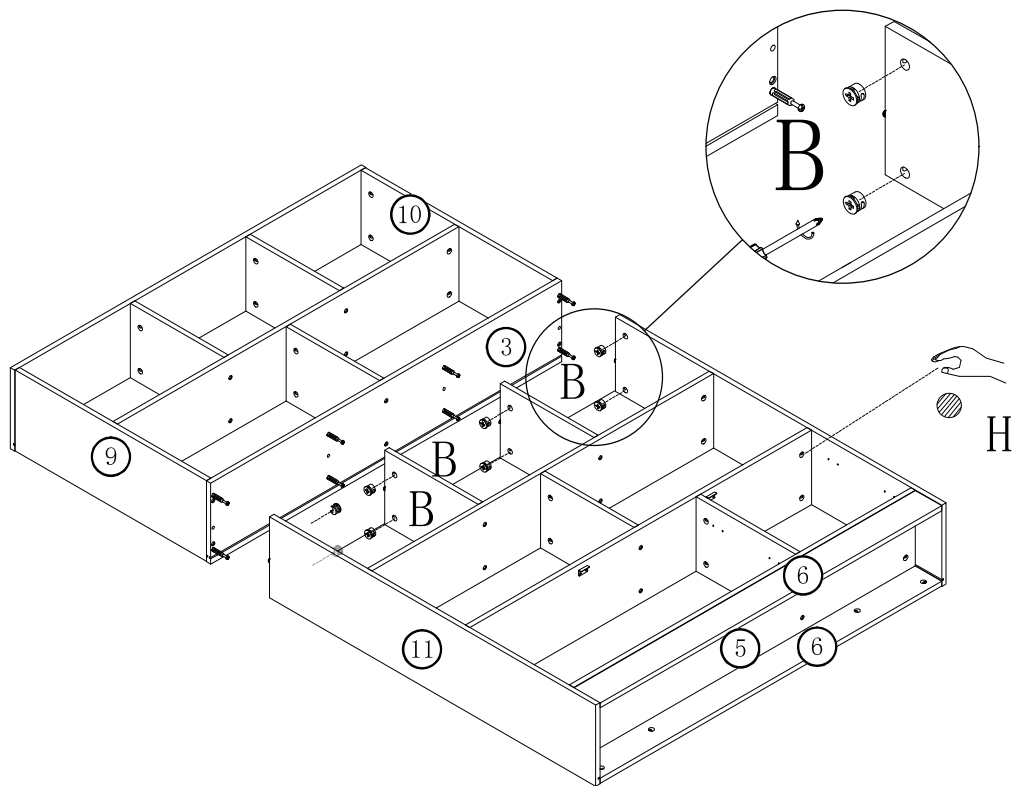



	B*8
	H*38

13

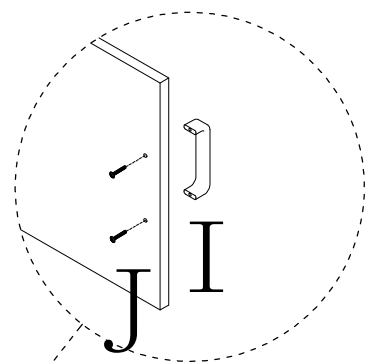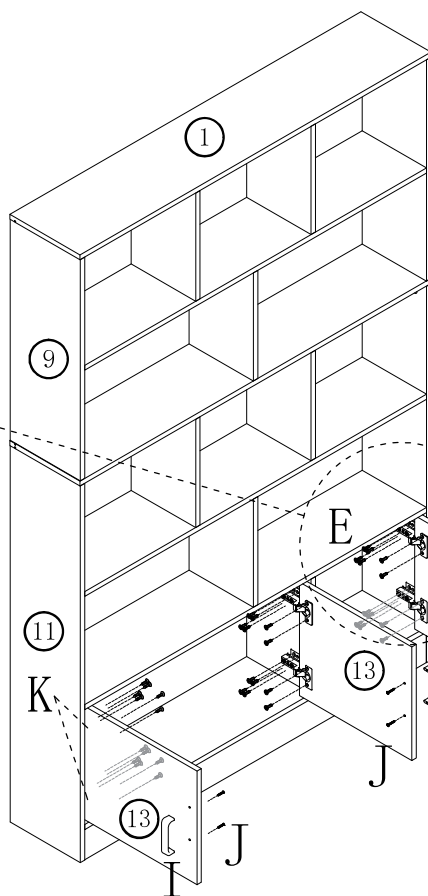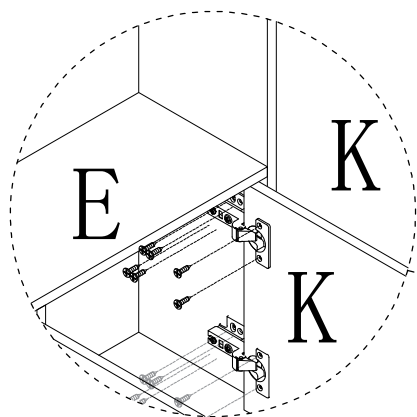

	J*6
	I*3
	E*36
	K*6

14




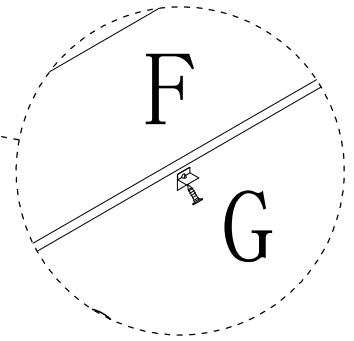
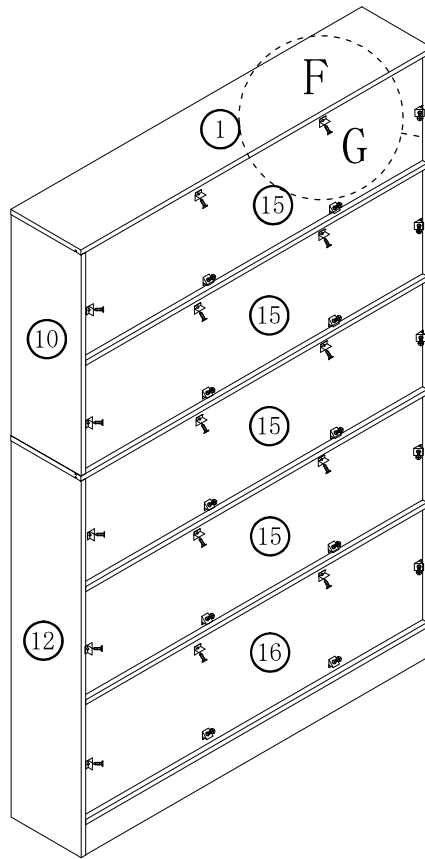


G*30



F*30

15

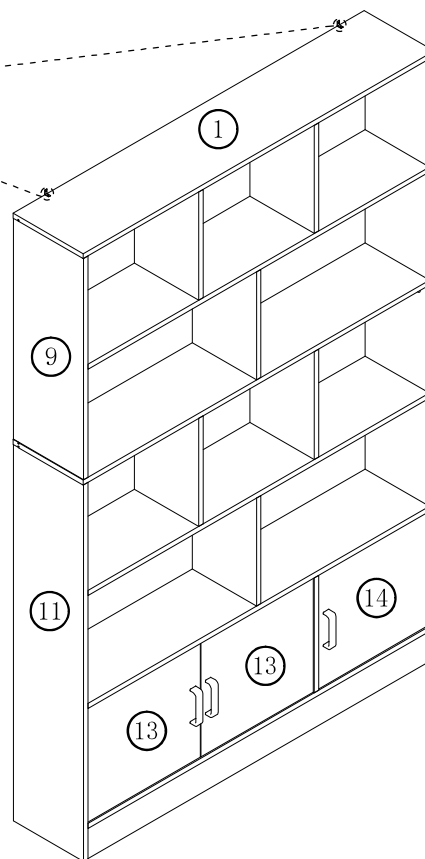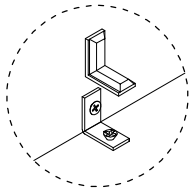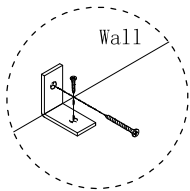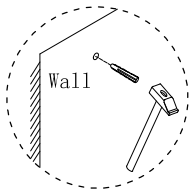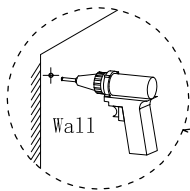

M*2