
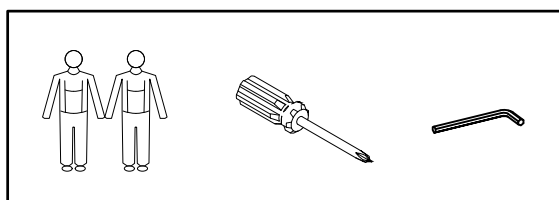


CLOSET SYSTEM

ASSEMBLY INSTRUCTION

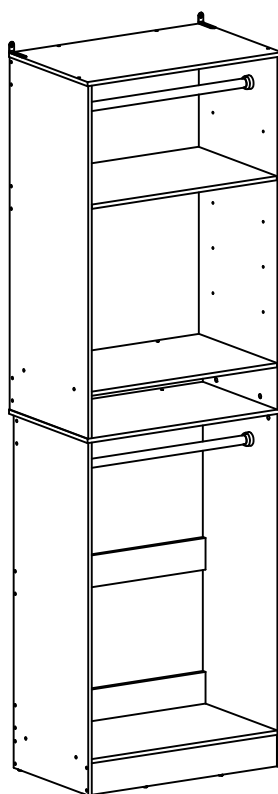

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

Dear Customers,

Thank you for purchasing our products.



As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.

Thanks again for your order. Please feel free to contact us from Amazon or homeycs@hotmail.com in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.



Please follow the instruction manuals and use a pad to protect the product during your assembly.

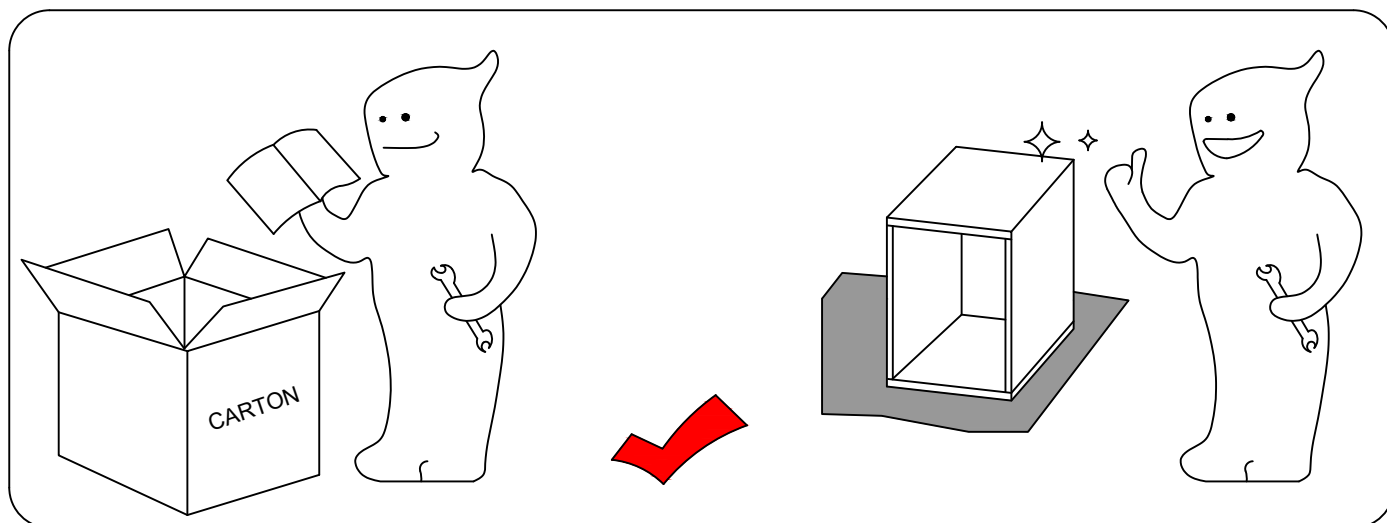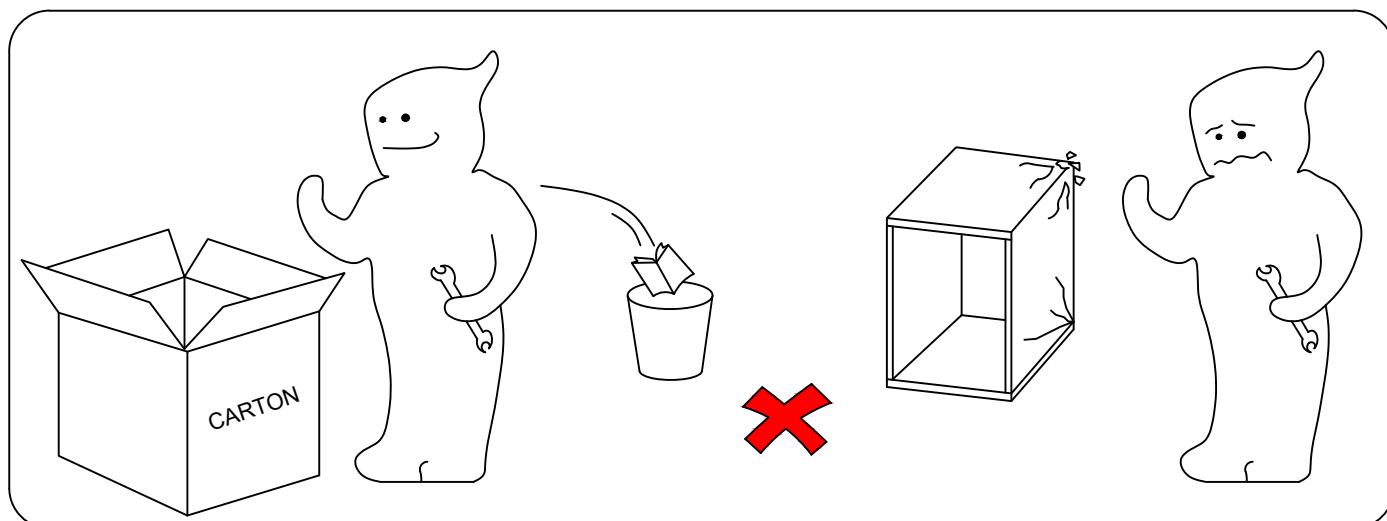


homeycs@hotmail.com

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

1 DO NOT OVER TIGHTEN

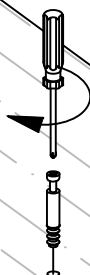

Put the male camlock into the entry hole.


2

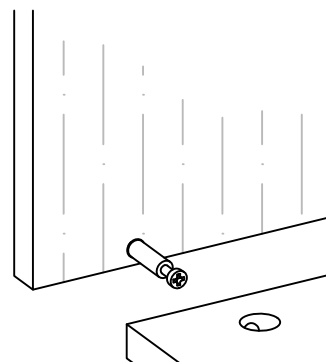

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

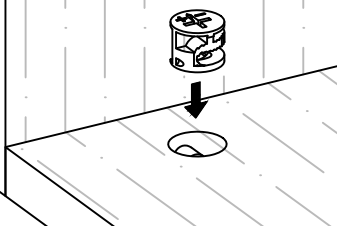



Screw the female camlock clockwise with a screwdriver.

You will feel a click when the camlock is locked in place.

The camlock is now completed.


4

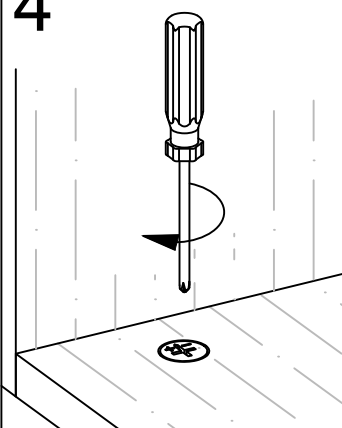

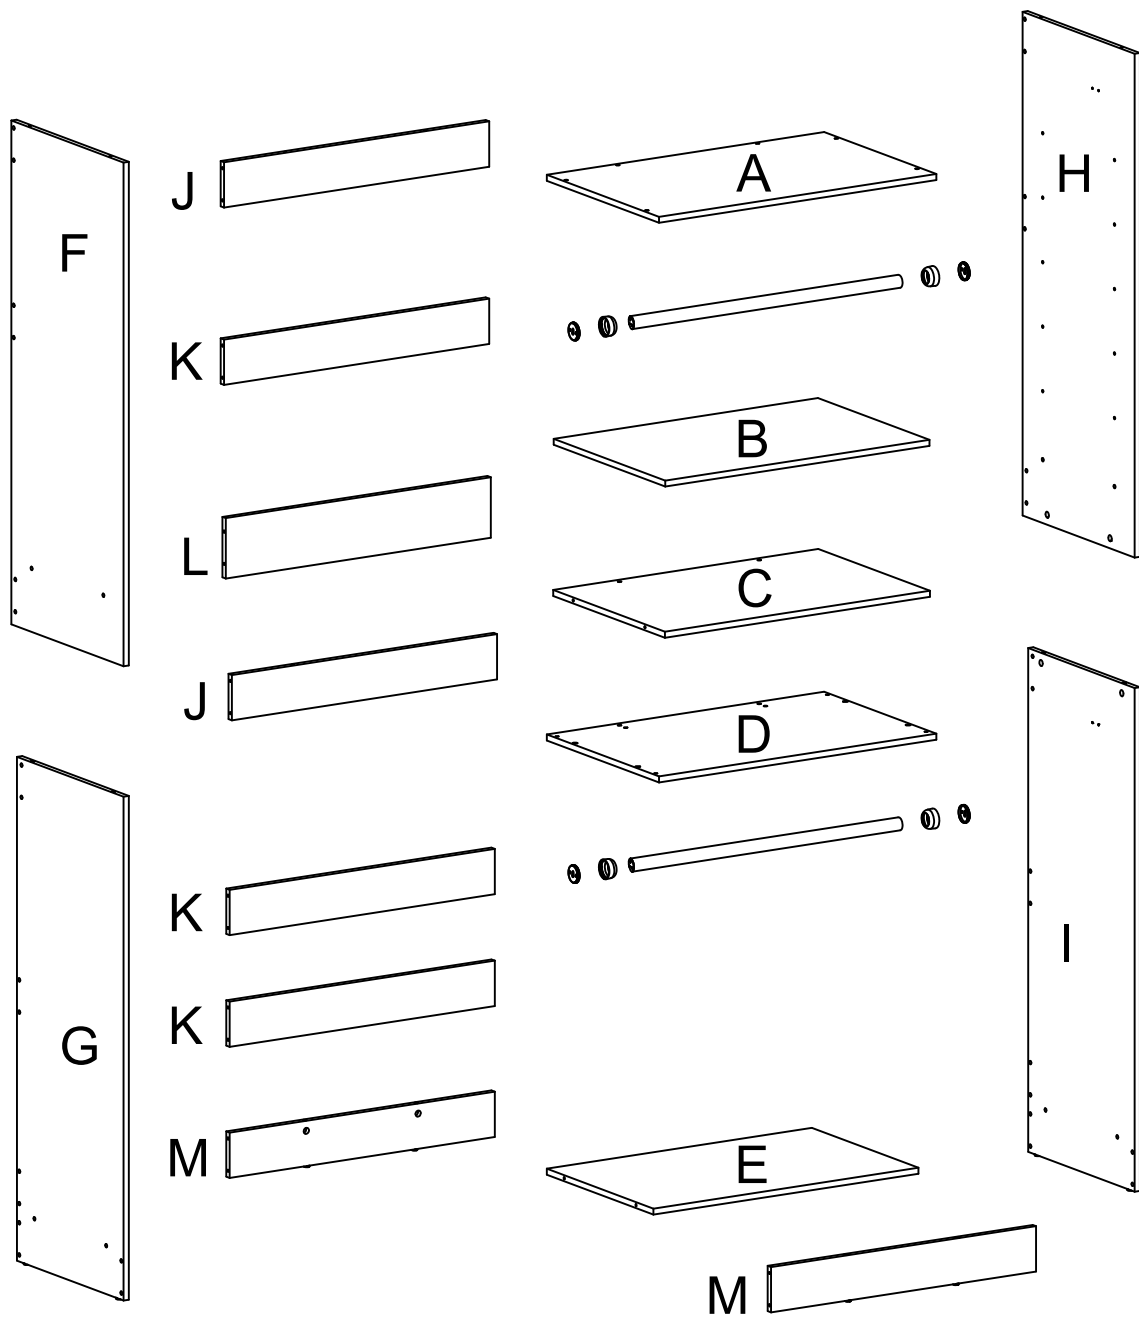


PART LIST

A

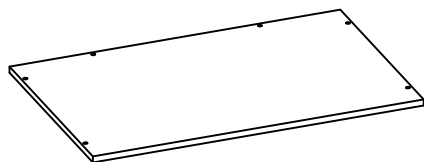


1 pc

B

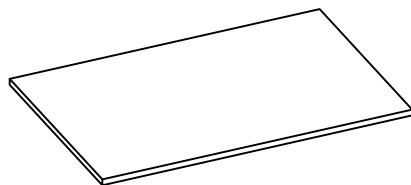


1 pc

C

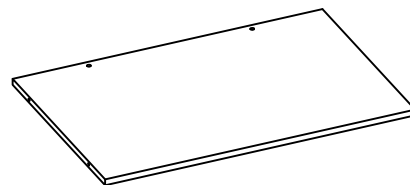


1 pc

D

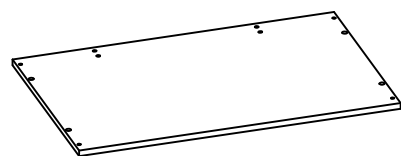


1 pc

E

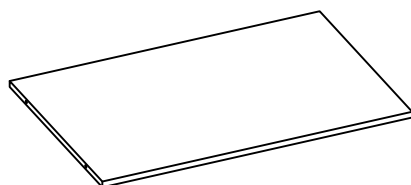


1 pc

F

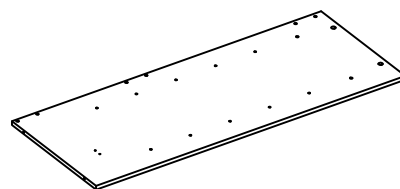


1 pc

G

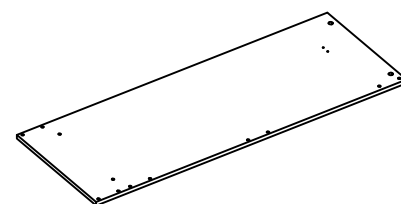


1 pc

H

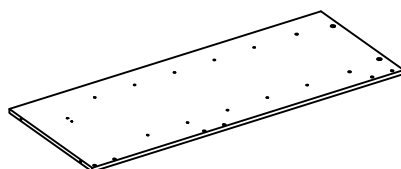


1 pc

I

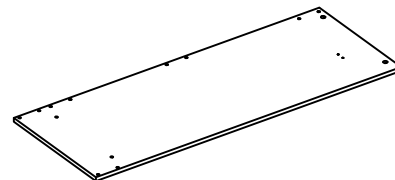


1 pc

J




2 pcs

K




3 pcs

L

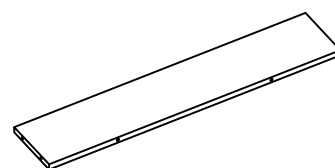





1 pc

M



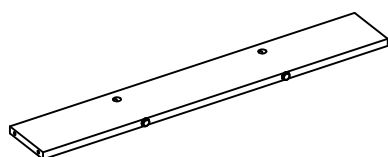


2 pcs



HARDWARE LIST

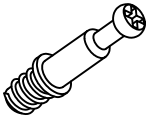①  M6x28 12 pcs	②  Ø12 12 pcs	③  M4x12 8 pcs	④  M6x40 52 pcs
⑤  Ø7x19 4 pcs	⑥  M4x40 2 pcs	⑦  M6x30 4 pcs	⑧  4 pcs
⑨  4 pcs	⑩  Ø25x294 2 pcs	⑪  1 pc	⑫  M4 1 pc

STEP 1

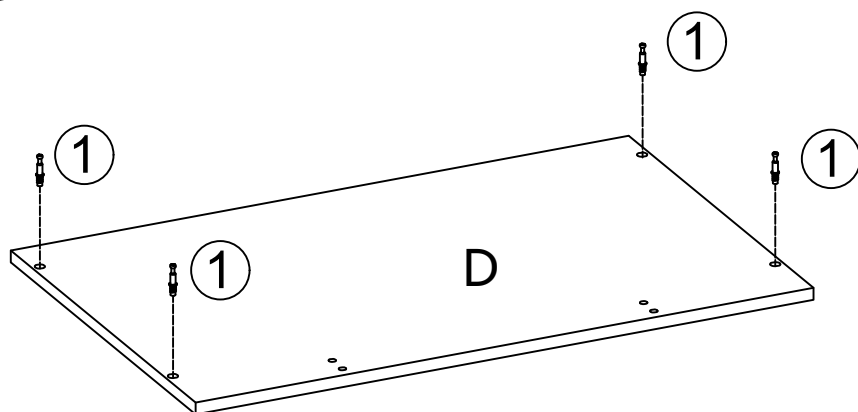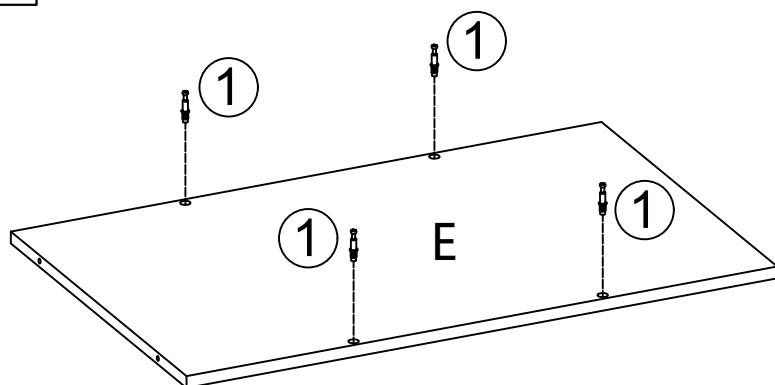


STEP 2

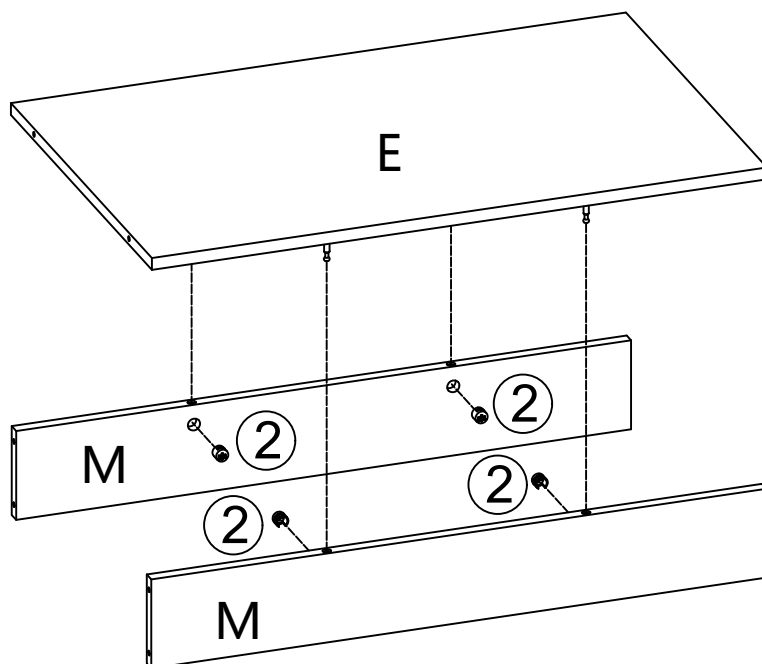


STEP 3

Keep the holes of the
Part J toward this direction
as shown

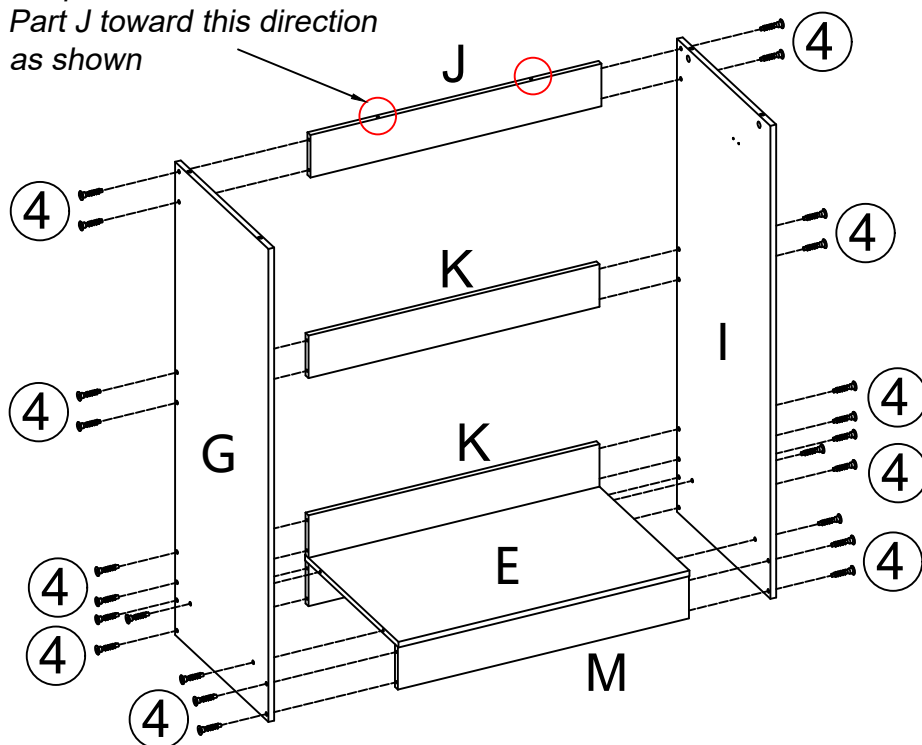


④  x24

STEP 4

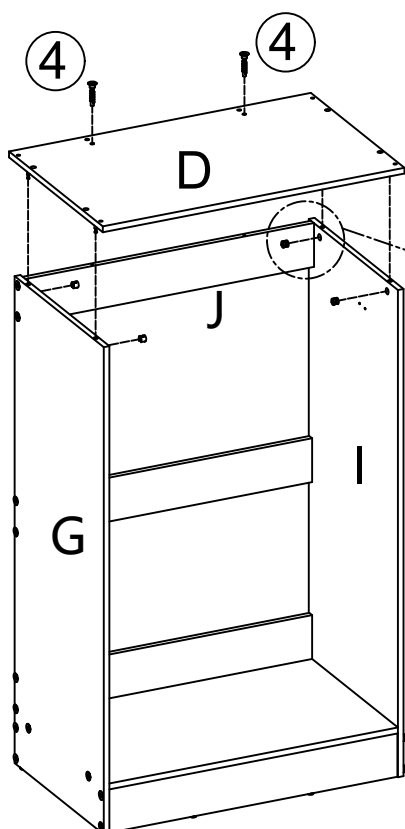


④  x2

②  x4

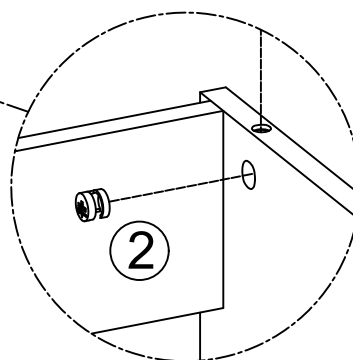

STEP 5


4  x2

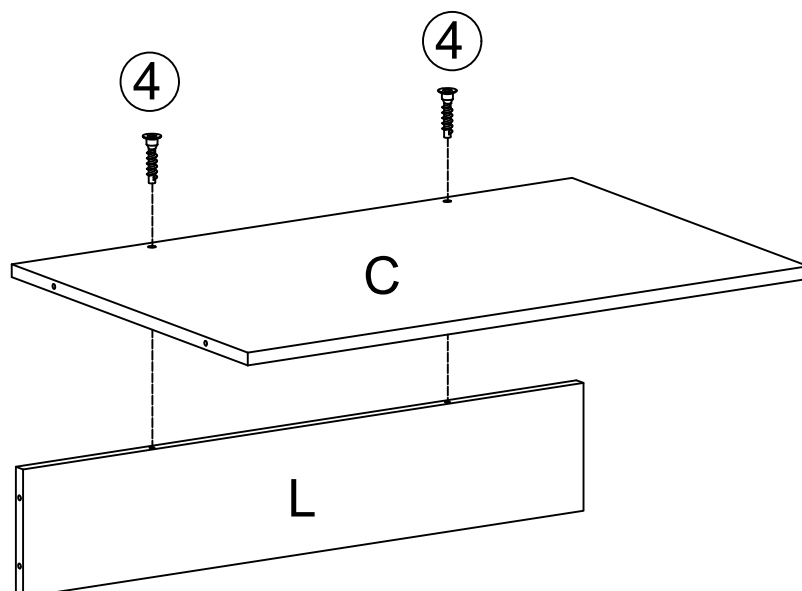


STEP 6

Keep the holes of the
Part J toward this direction
as shown

4  x16

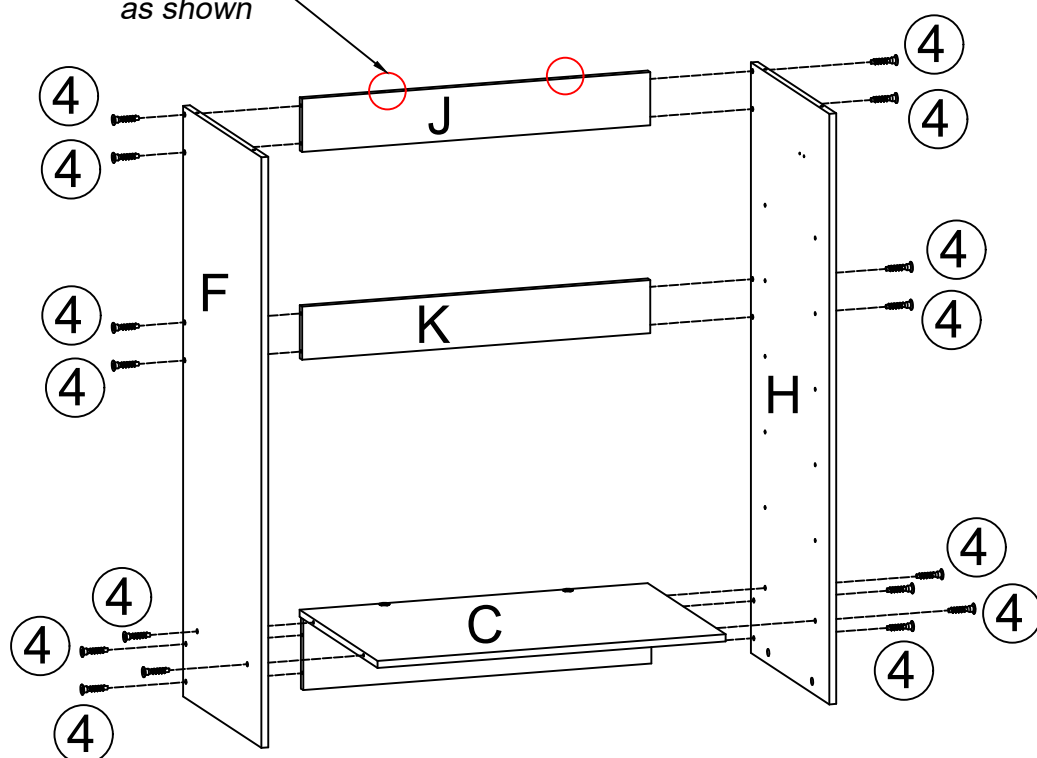


STEP 7

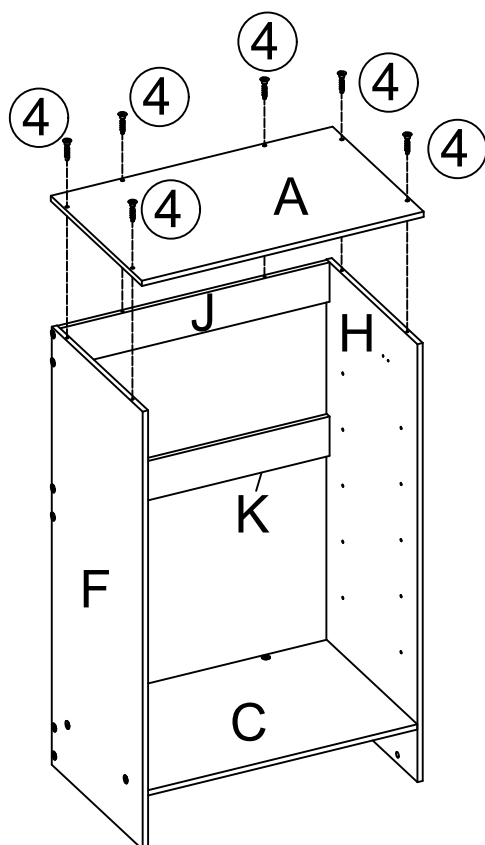



4  x6

STEP 8


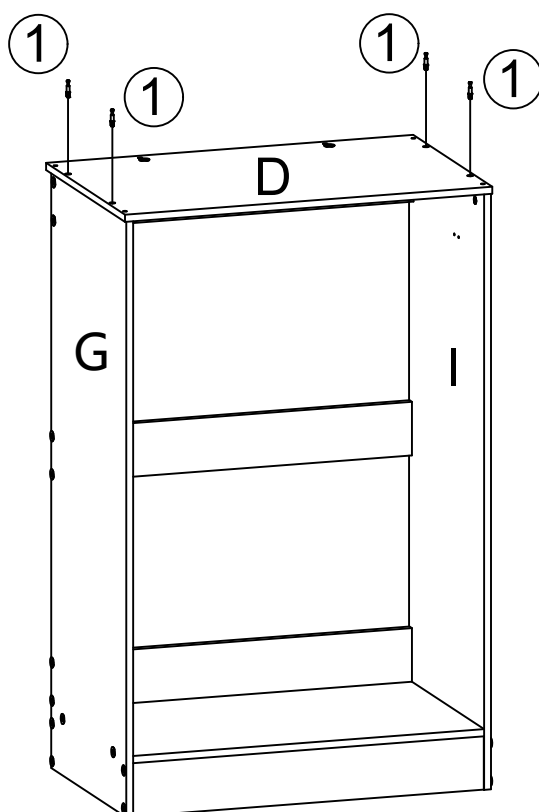


1  x4


STEP 9

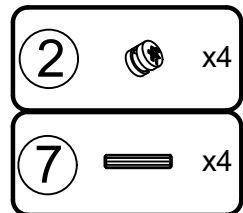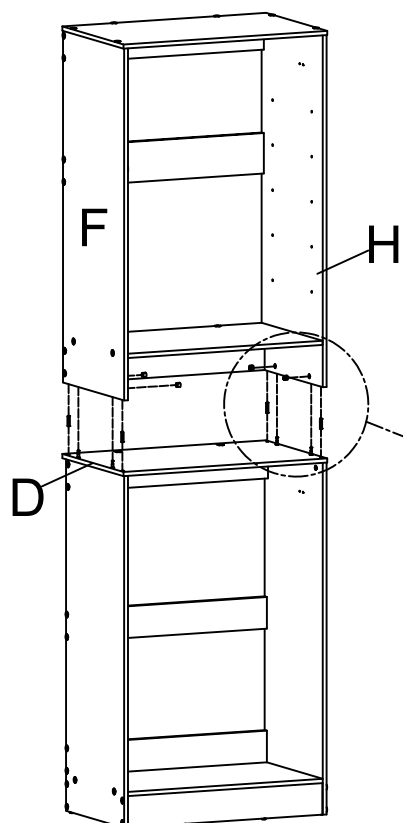


STEP 10

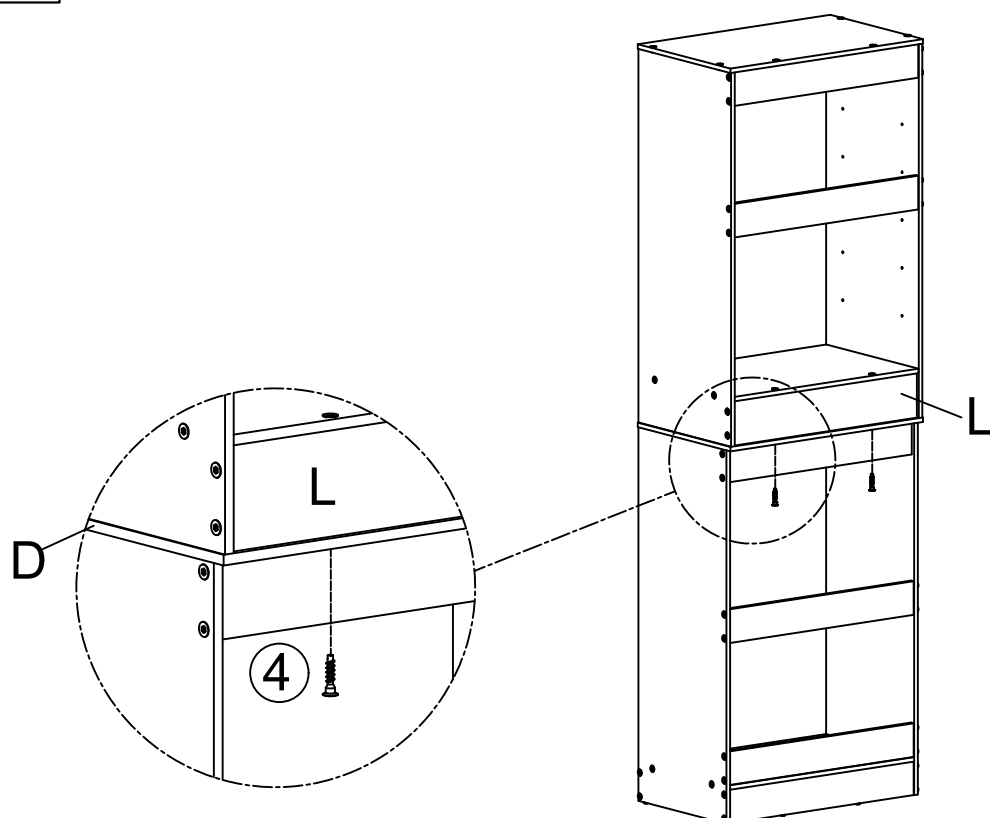


STEP 11

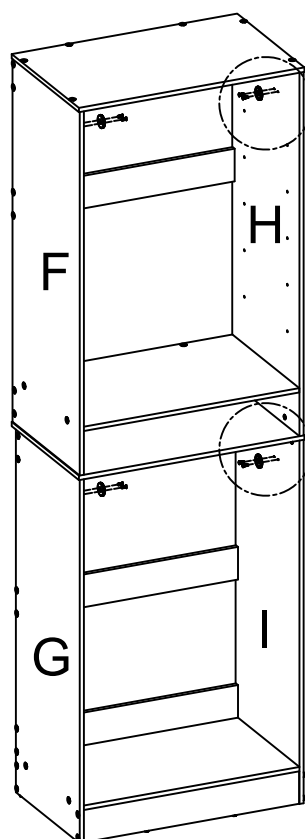


- 3  x8
- 8  x4

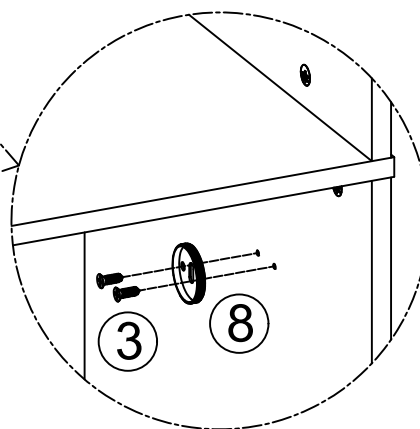



Please rotate and take out parts 8 and 9 as instructed.

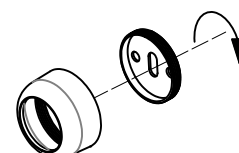


STEP 12

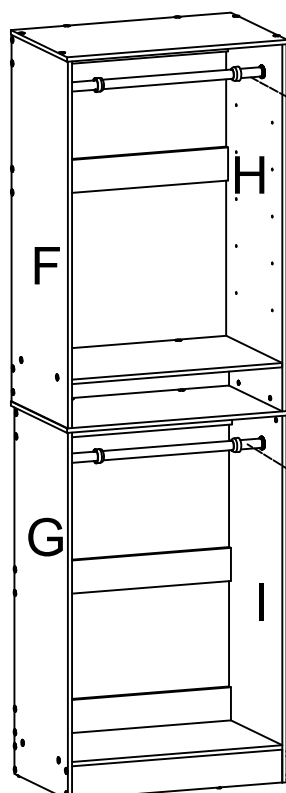


- 9  x4
- 10  x2

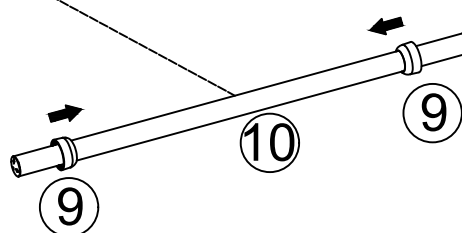

Please slip part 9 over the rod part 10 with facing outward screw threads.


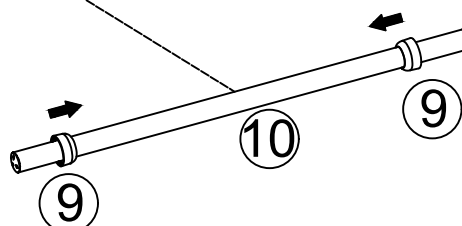


STEP 13

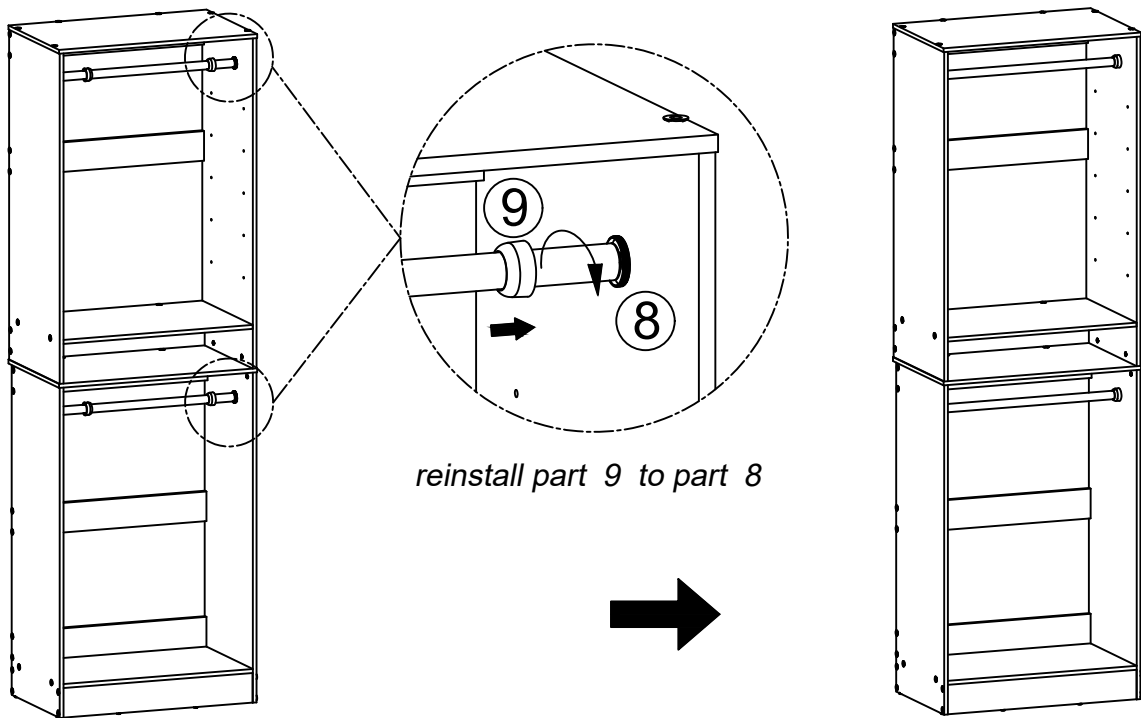


STEP 14

this closet can be used in two situation. you can install two closet poles OR one adjustable shelf and one pole.

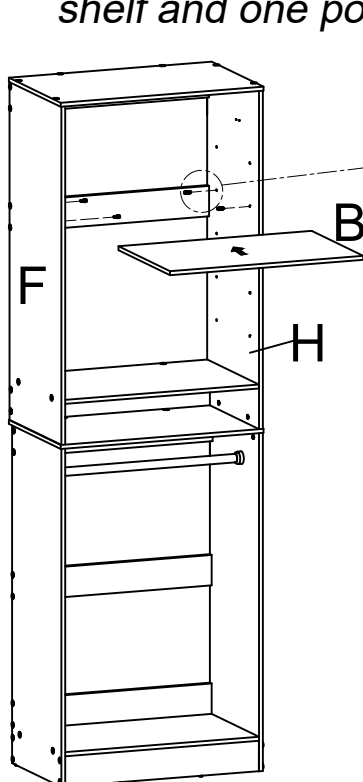

There are 5 heights for the upper shelves to be adjusted as you need.

STEP 15



TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

