

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 202809 202810

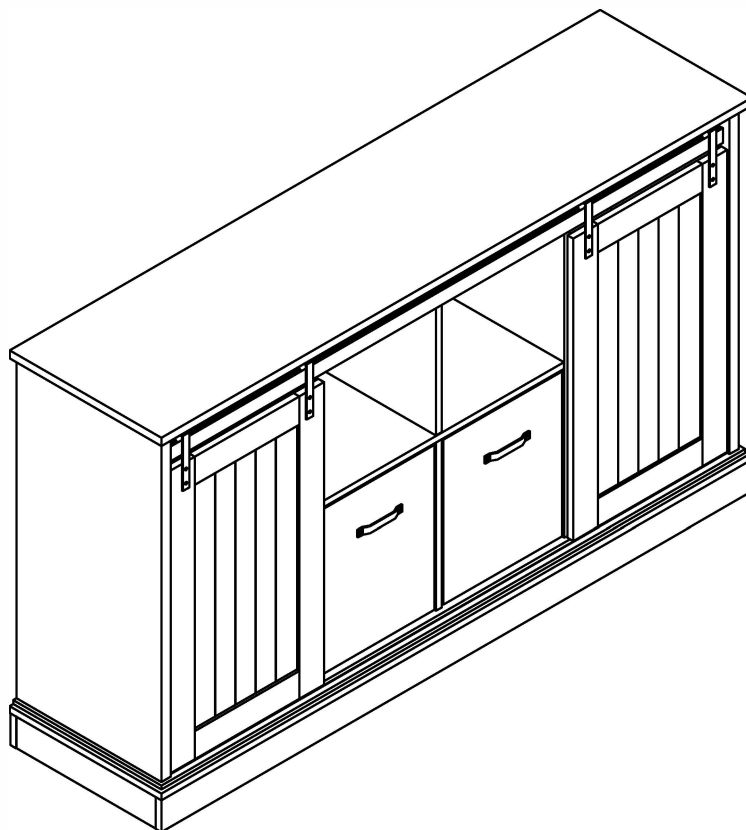

PARTS IDENTIFICATION

ITEM#: 202809 202810

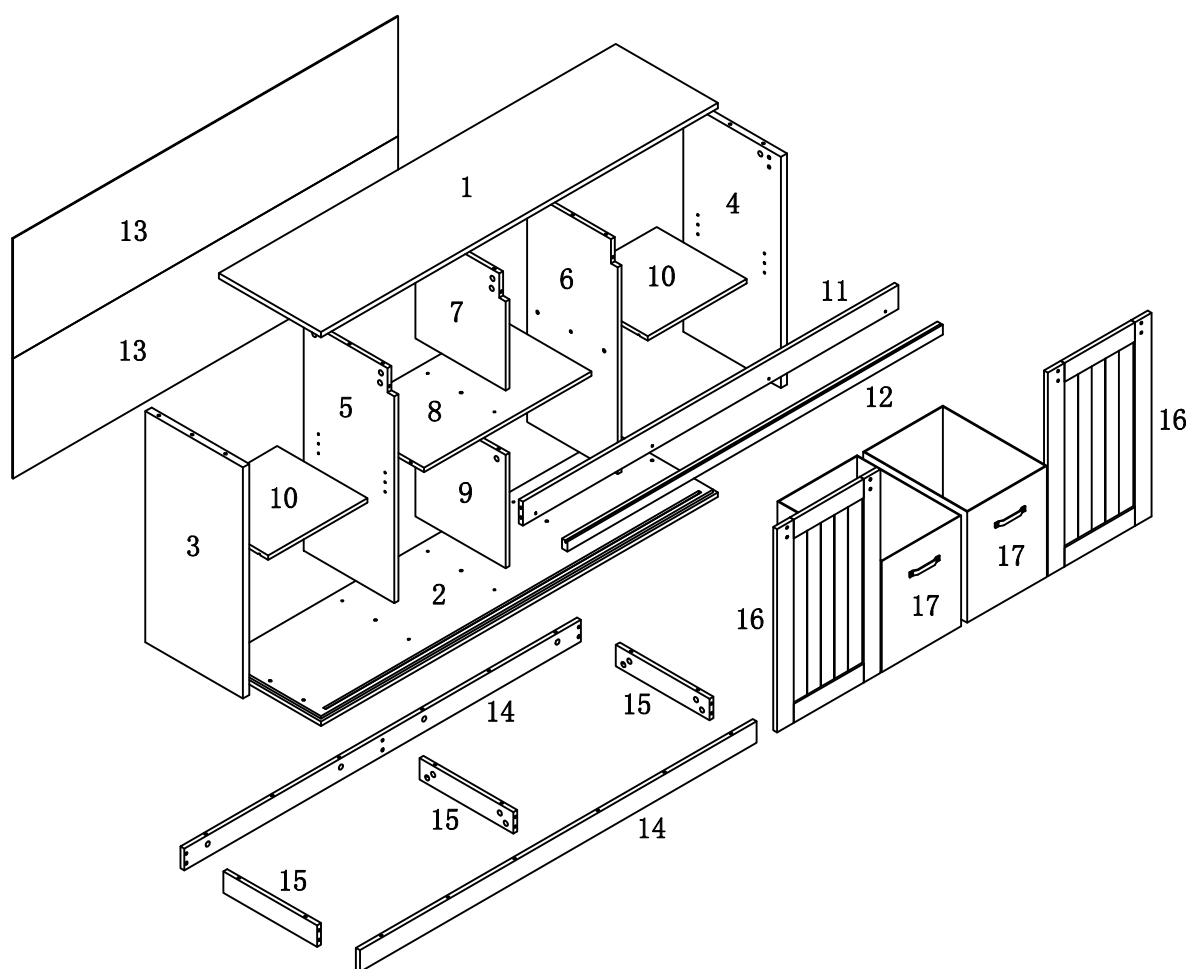


(1)	1pc	(7)	1pc	(13)	2pcs
(2)	1pc	(8)	1pc	(14)	2pcs
(3)	1pc	(9)	1pc	(15)	3pcs
(4)	1pc	(10)	2pcs	(16)	2pcs
(5)	1pc	(11)	1pc	(17)	2pcs
(6)	1pc	(12)	1pc		

HARDWARE IDENTIFICATION

ITEM#: 202809

202810

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W



L29

29pcs



ø15

29pcs




ø6x30

4pcs




ø8x25

20pcs




ø4x30

4pcs



ø4x40

8pcs




M6x25

8pcs




M6

8pcs




M10

2pcs



50pcs



ø22

17pcs



ø16

6pcs




ø12xø7x1

8pcs



ø16xø8x2

4pcs



ø7x48

4pcs



ø5

8pcs




4pcs




197×5×1

1pc




ø4x25

1pc



ø5x40

1pc



ø8 x 40

1pc



12×12×1

2pcs




1pc

Glue: For securing please apply to wood
dowel first before inserting into panel

ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

HOW TO




Cam Bolt




Cam Lock

1

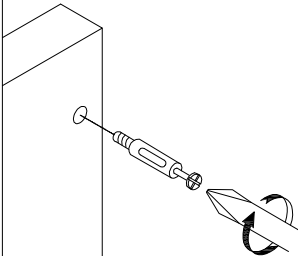


1. Screw Cam Bolt into panel.

2

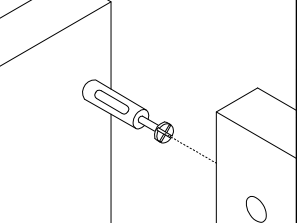


2. Insert Cam Bolt into bolt hole of joining panel.

3

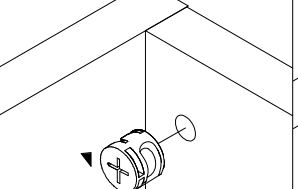


3. Insert Cam Lock. arrow facing bolt.

4

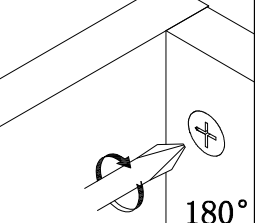


4. Gently turn Cam Lock clockwise to lock position.

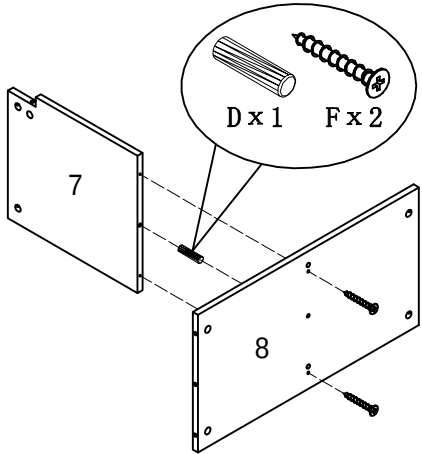


STEP1

STEP2

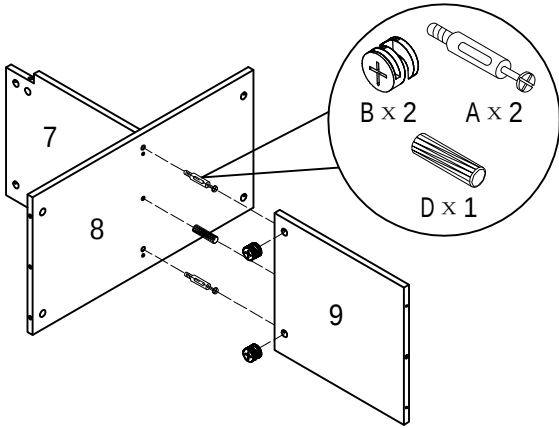


ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

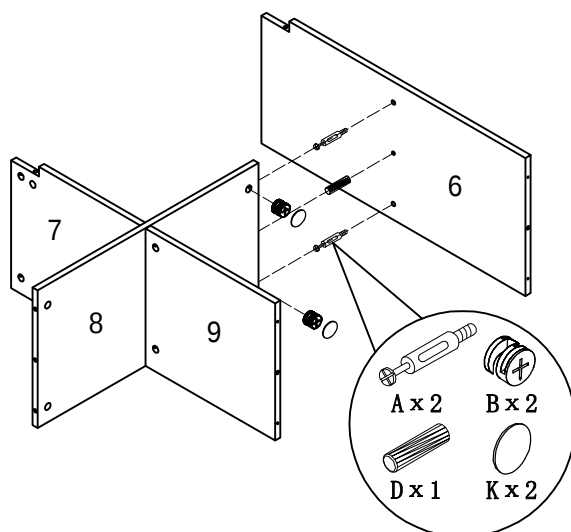


STEP3

STEP4

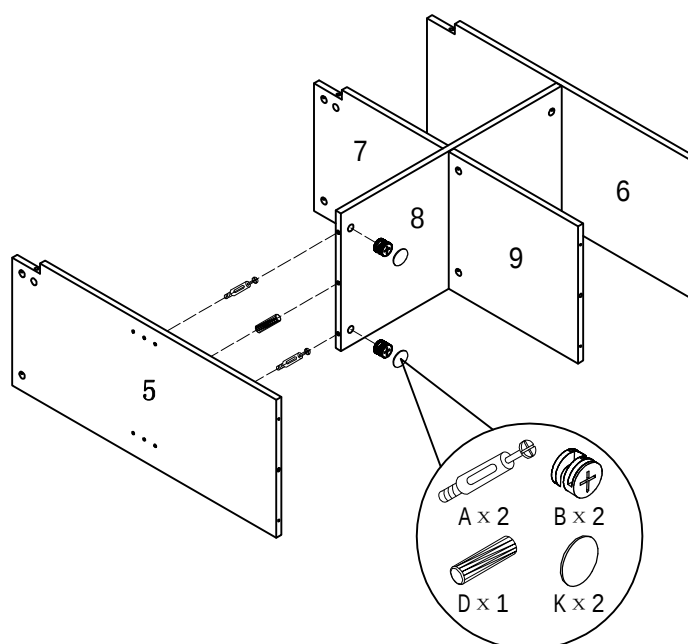


ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

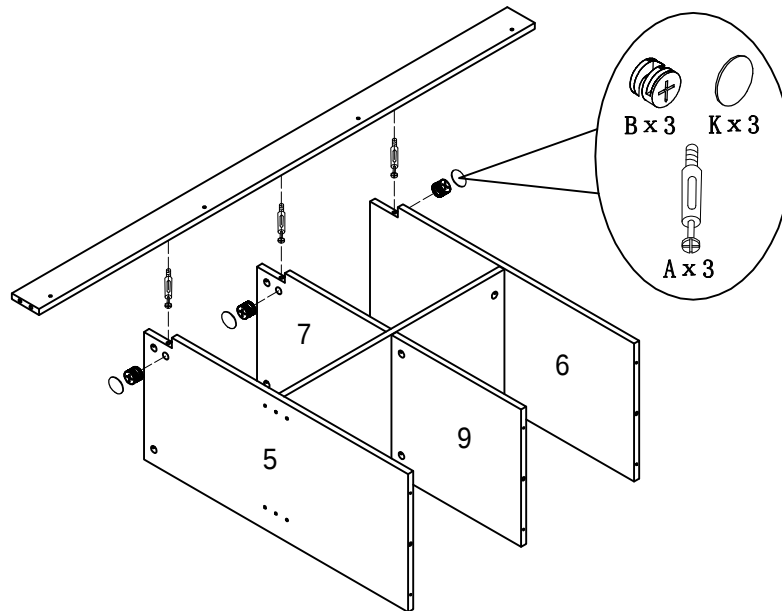


STEP5

STEP6

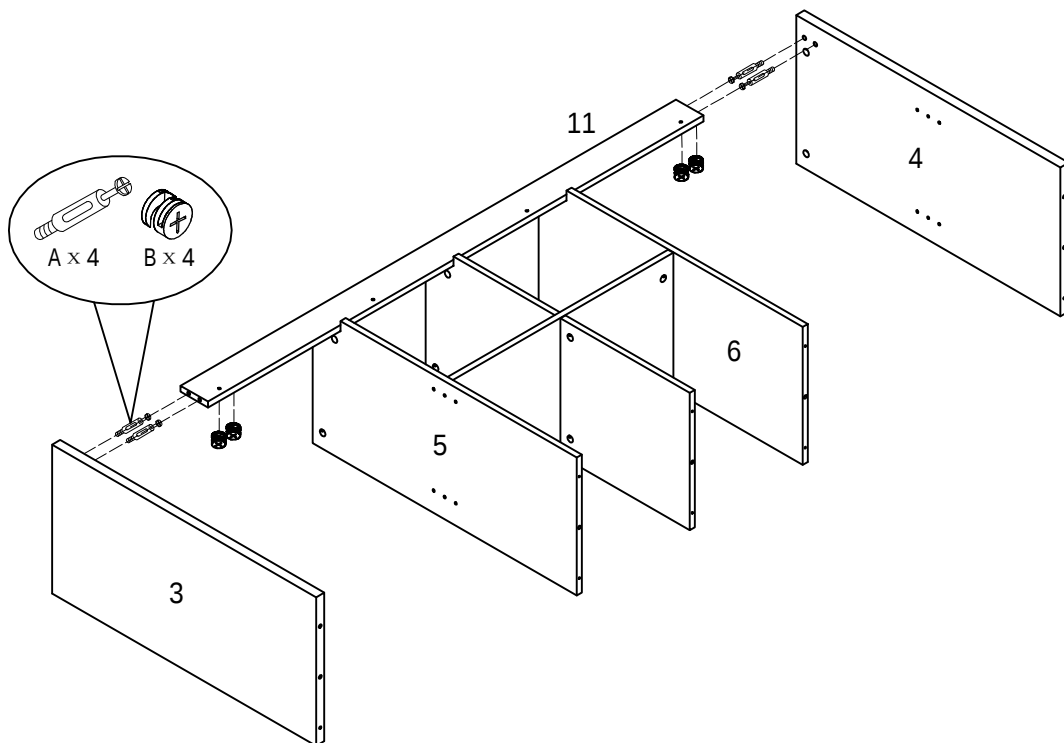


ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

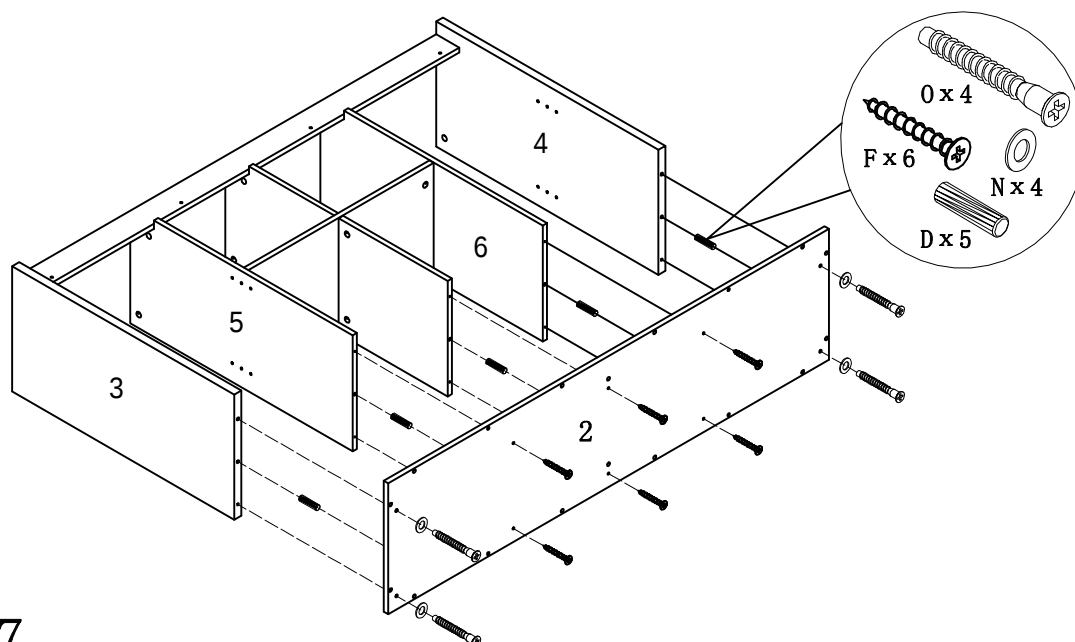


STEP7

STEP8

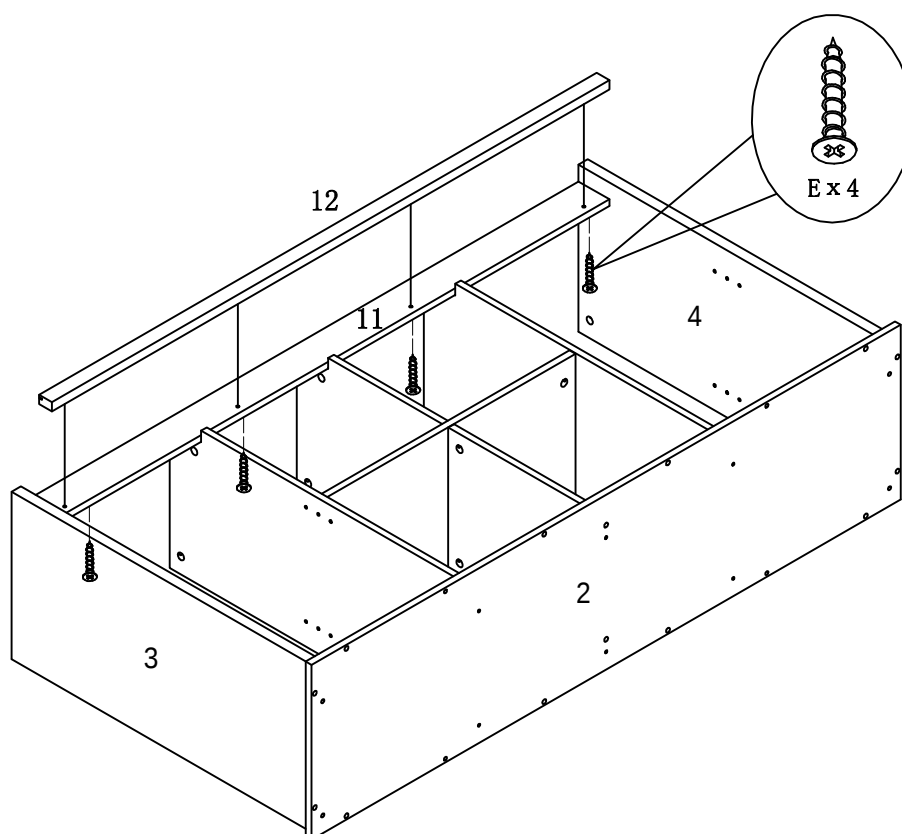


ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

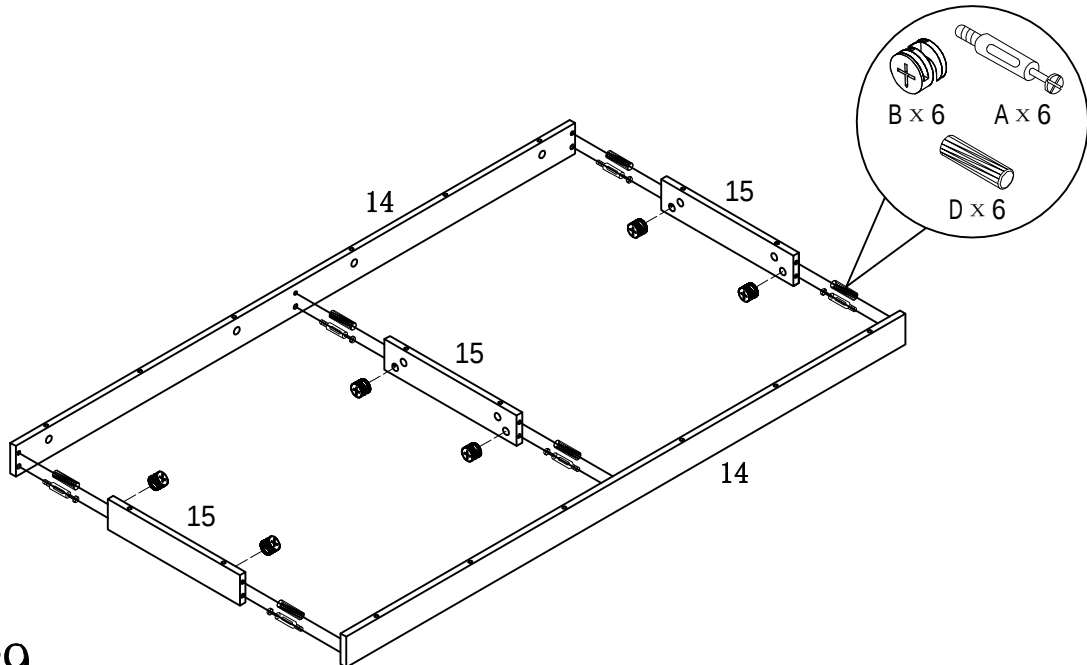


STEP9

STEP10

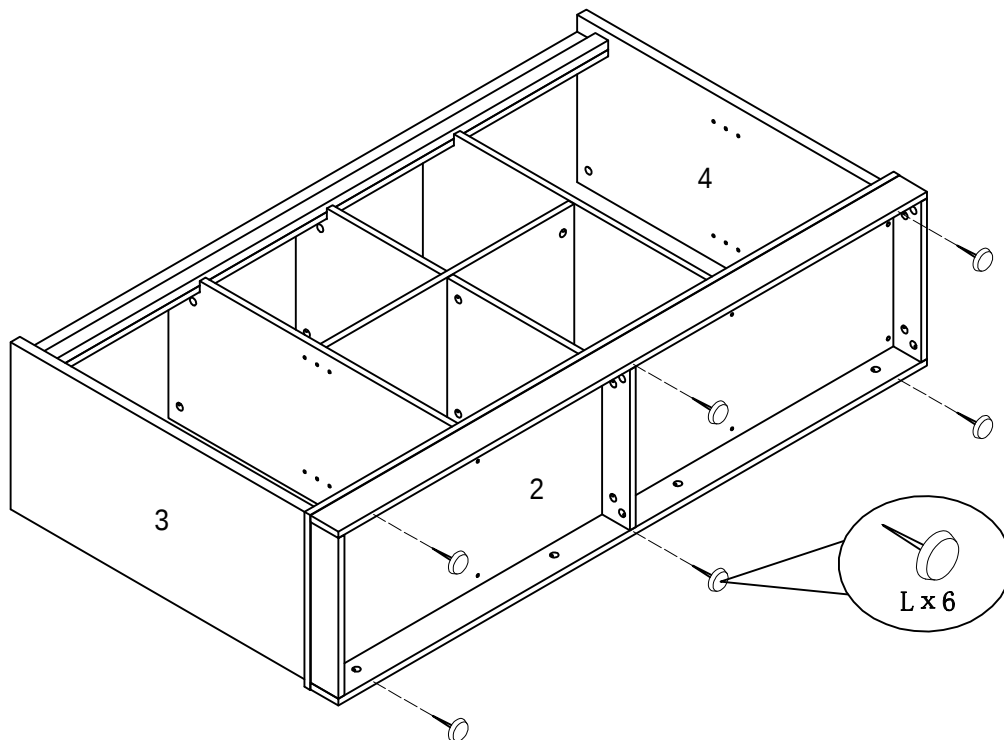


ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

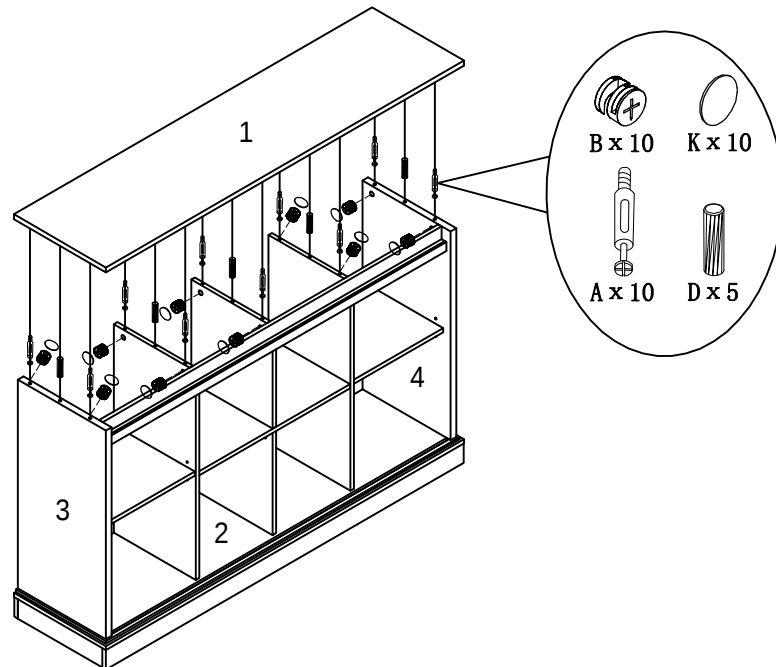


STEP 11

STEP 12

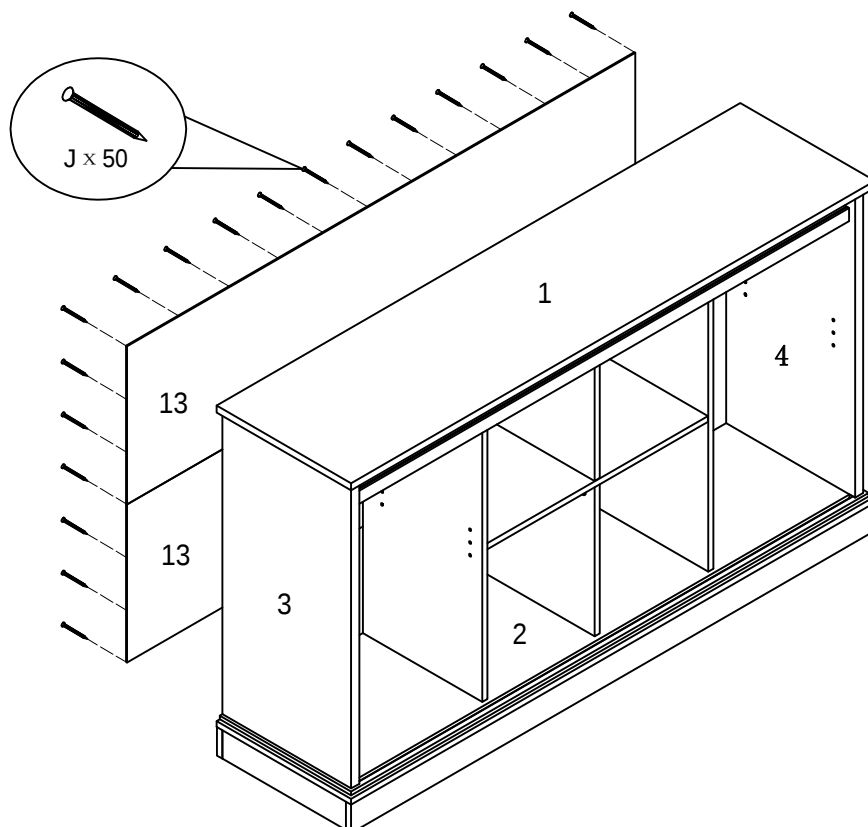


ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

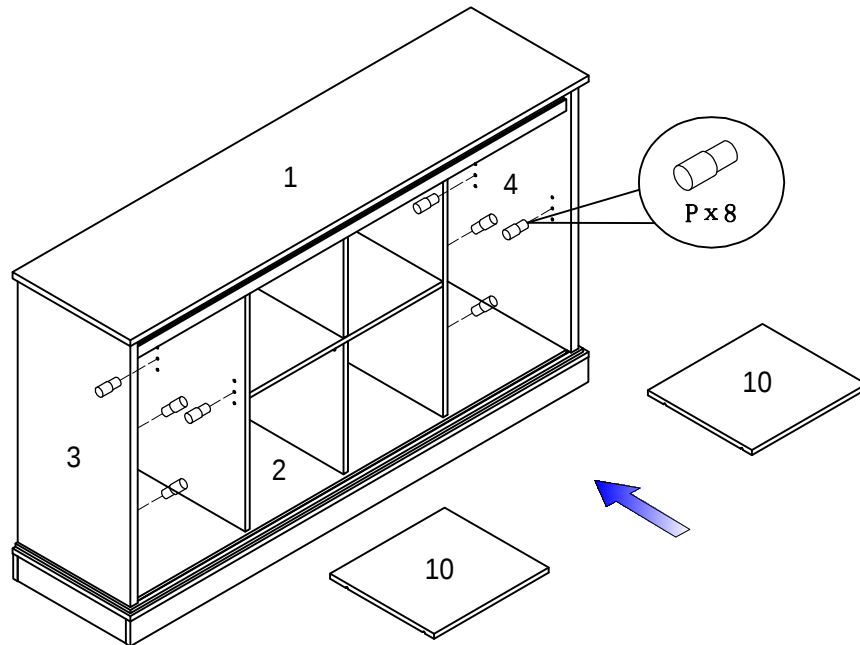


STEP13

STEP14

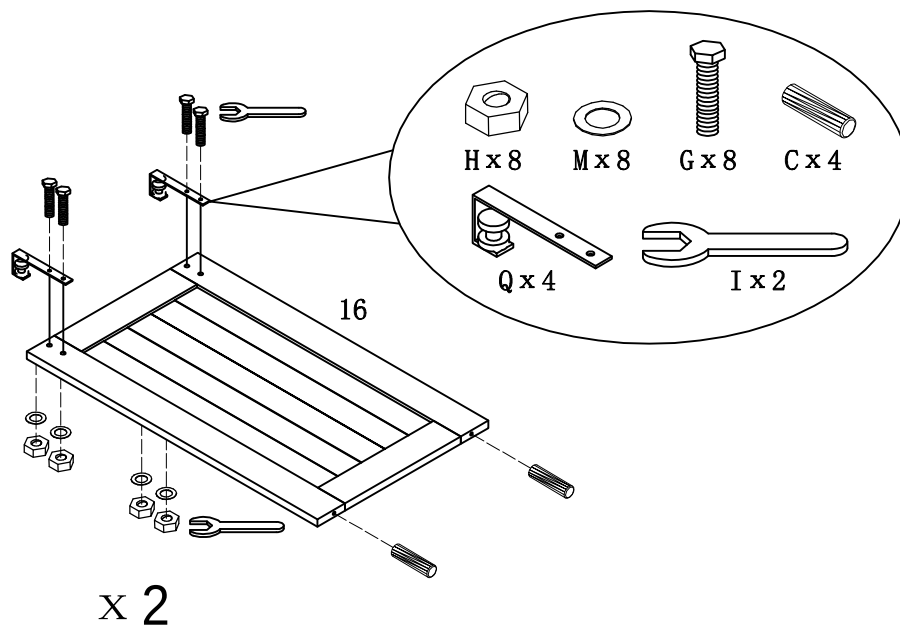


ASSEMBLY INSTRUCTION

ITEM#: 202809 202810

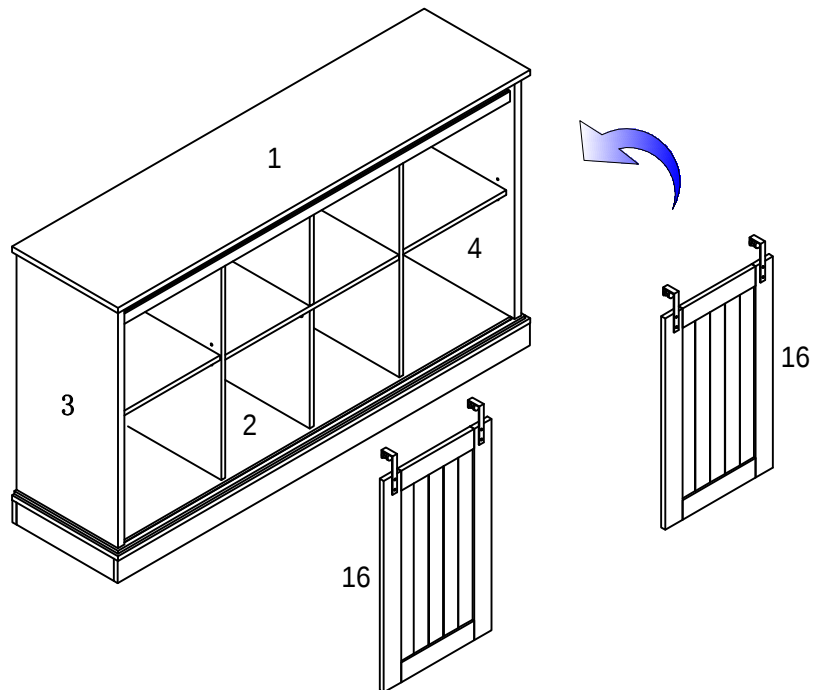

STEP15

STEP16

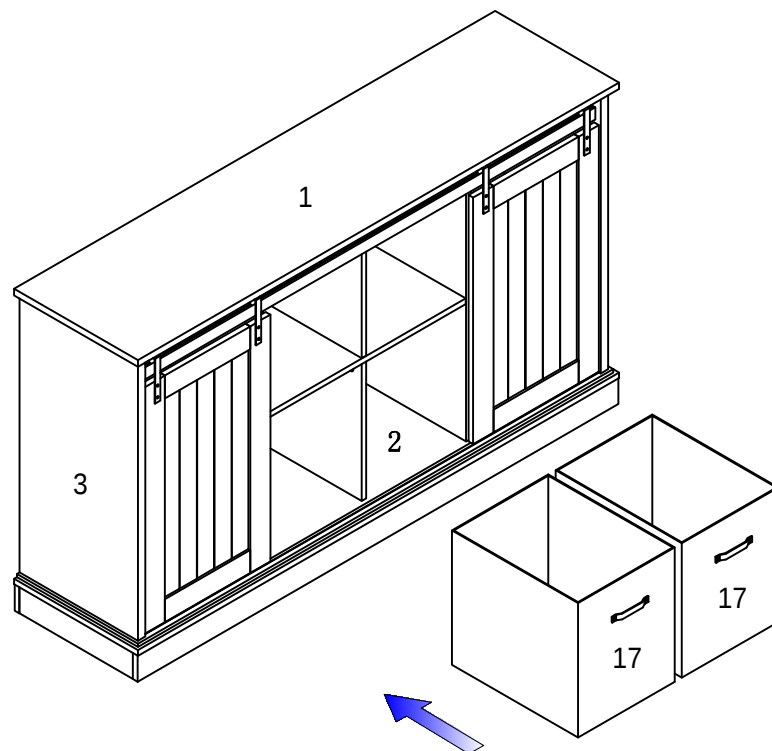

ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

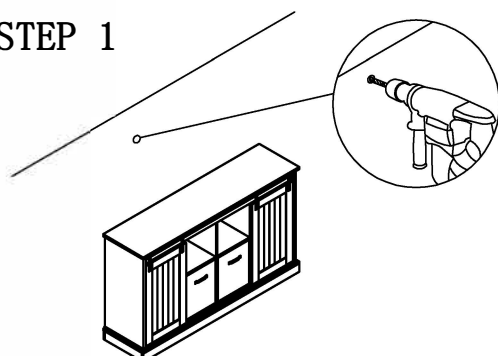


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

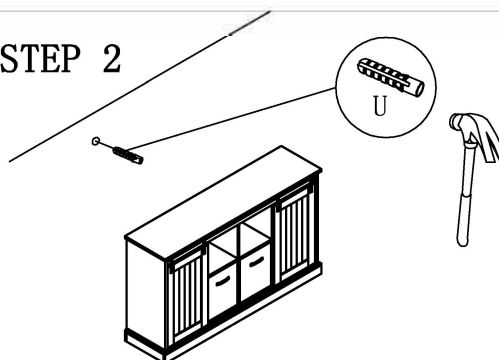


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

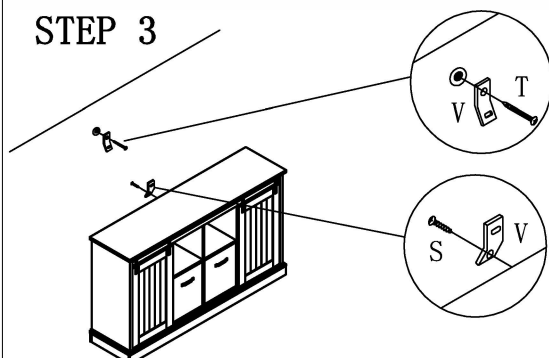

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

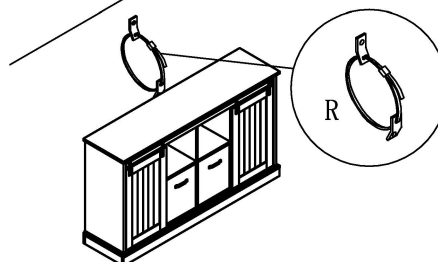

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.