


---

# J9P002

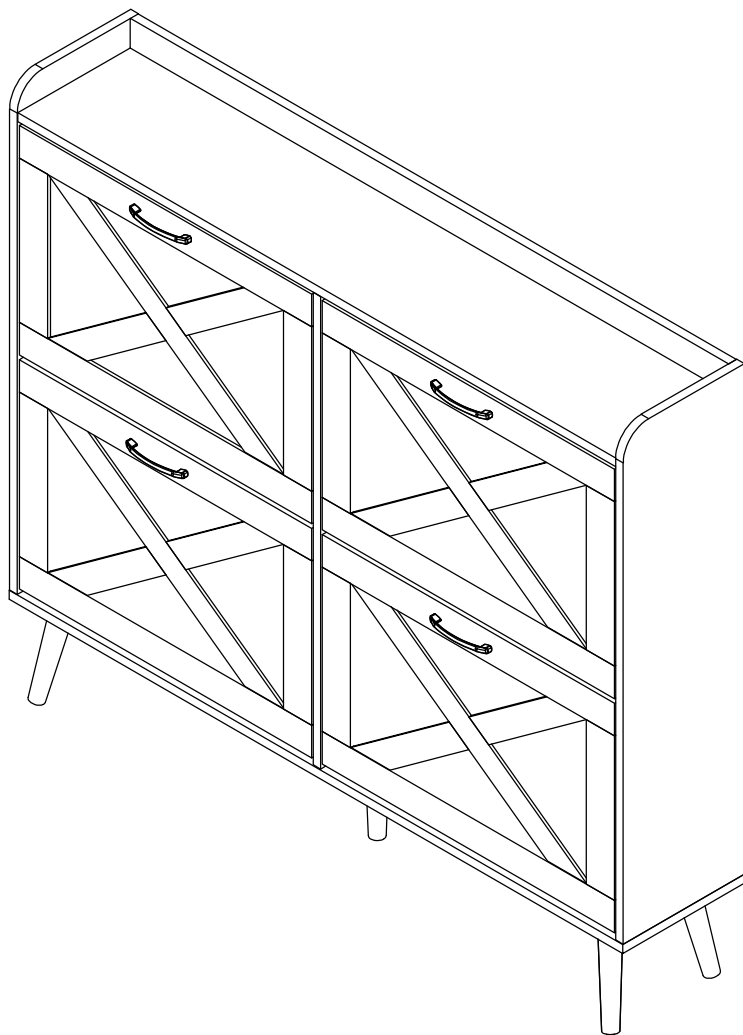

Because it's a narrow cabinet, it must permanently be fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over. It will be very stable and safe when locked on the wall.


Please see page 15 for steps to lock the wall.

As this item contains many parts, please read the installation instruction carefully before installation. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

**hosoteservice@gmail.com**

Our professional after-sales team will serve you online all day.

# Before You Start


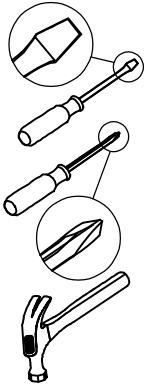


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

## Helpful Hints


### PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

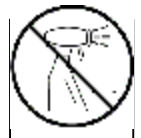


# Board Identification


Not actual size

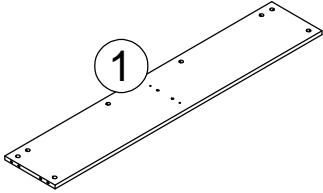


Top panel  
Qty:1

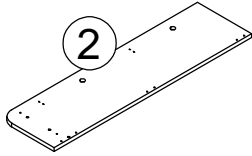


Left side panel  
Qty:1

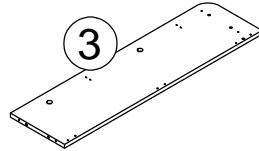


Right side panel  
Qty:1

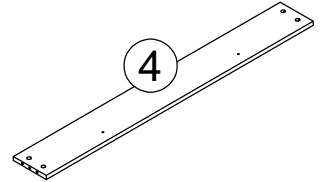


Upper back panel  
Qty:1

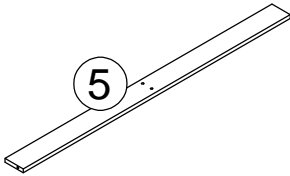


Upper back brace  
Qty:1

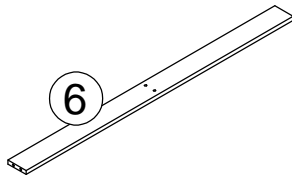


Lower back brace  
Qty:1

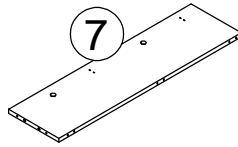


Neutral board  
Qty:1

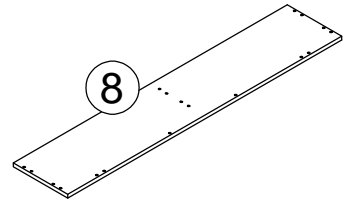


Bottom panel  
Qty:1

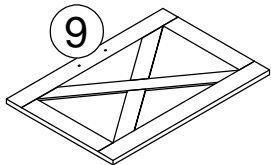


Left door panel  
Qty:4

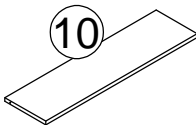

Shoe box layer  
Qty:4




Shoe box bottom  
Qty:4




Shoe box back  
Qty:4


# Part List

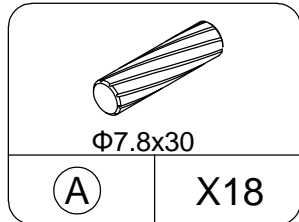


**WOOD DOWEL**  
spare:2

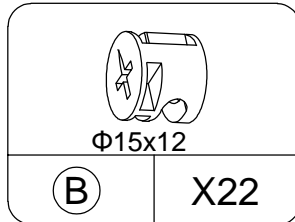


**CAM LOCK**  
spare:2

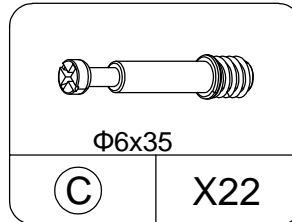


**CAM BOLT**  
spare:2

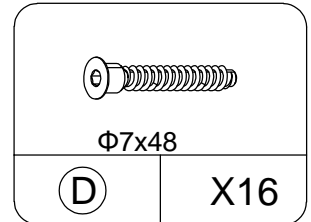


**SCREW**  
spare:2

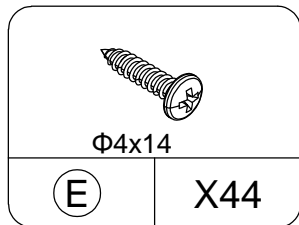


**SCREW**  
spare:3

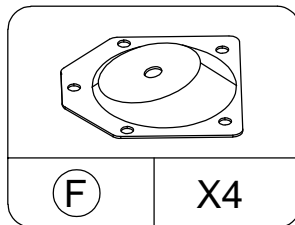


**METAL PLATE**

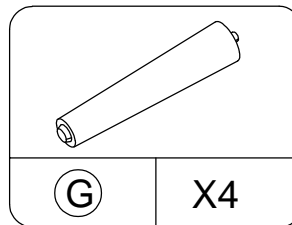


**SOLID WOODEN LEGS**

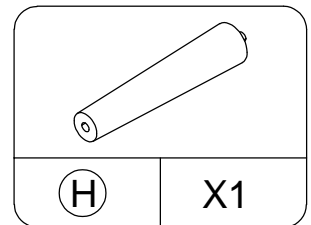


**SOLID WOODEN LEGS**

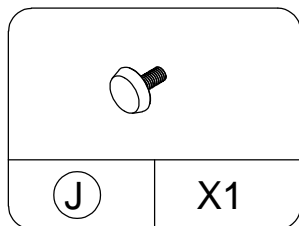


**ADJUSTABLE FEET**

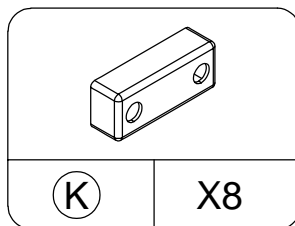


**DOOR STOPPER**

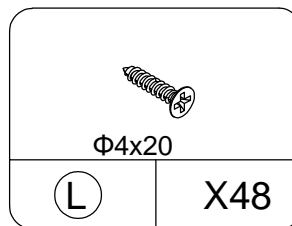


**SCREW**  
spare:3

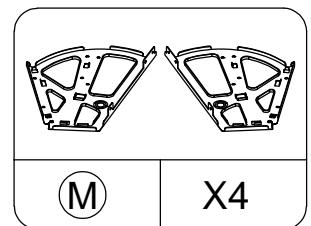


**FLIP FRAME**

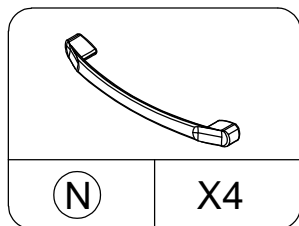


**HANDLE**

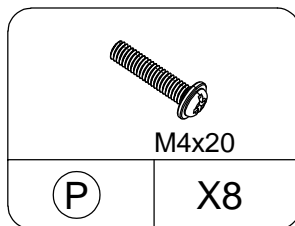


**BOLT**

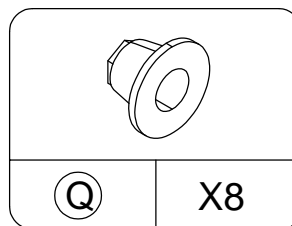


**CIRCULAR AXIS**

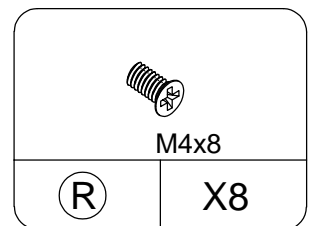


**BOLT**

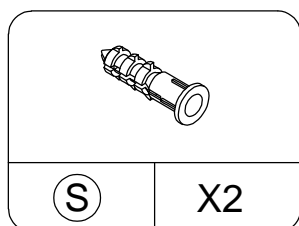


**WALL ANCHOR**

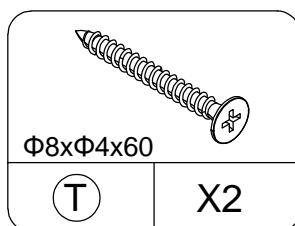

**SCREW**

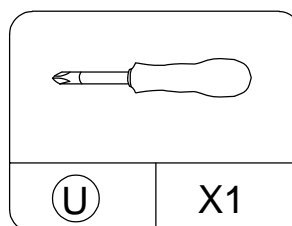

**SCREW DRIVER**

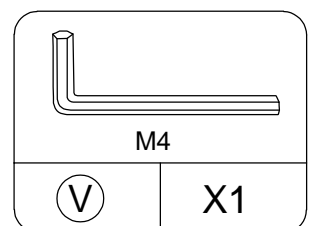


**INNER HEXAGON SPANNER**

# Part List


## Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.





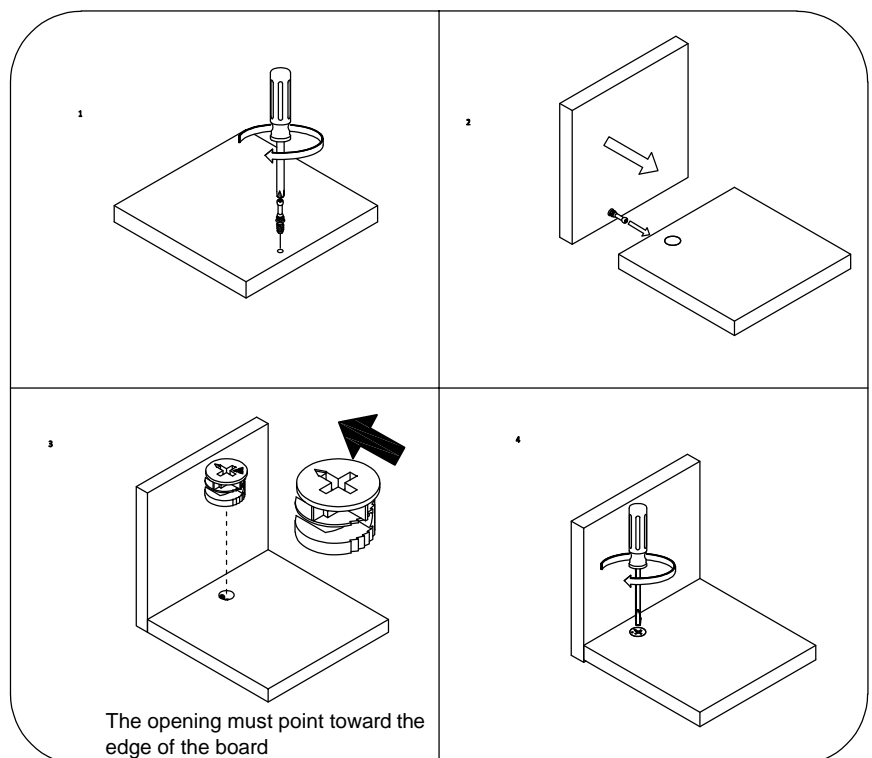


# Board Identification







Not actual size

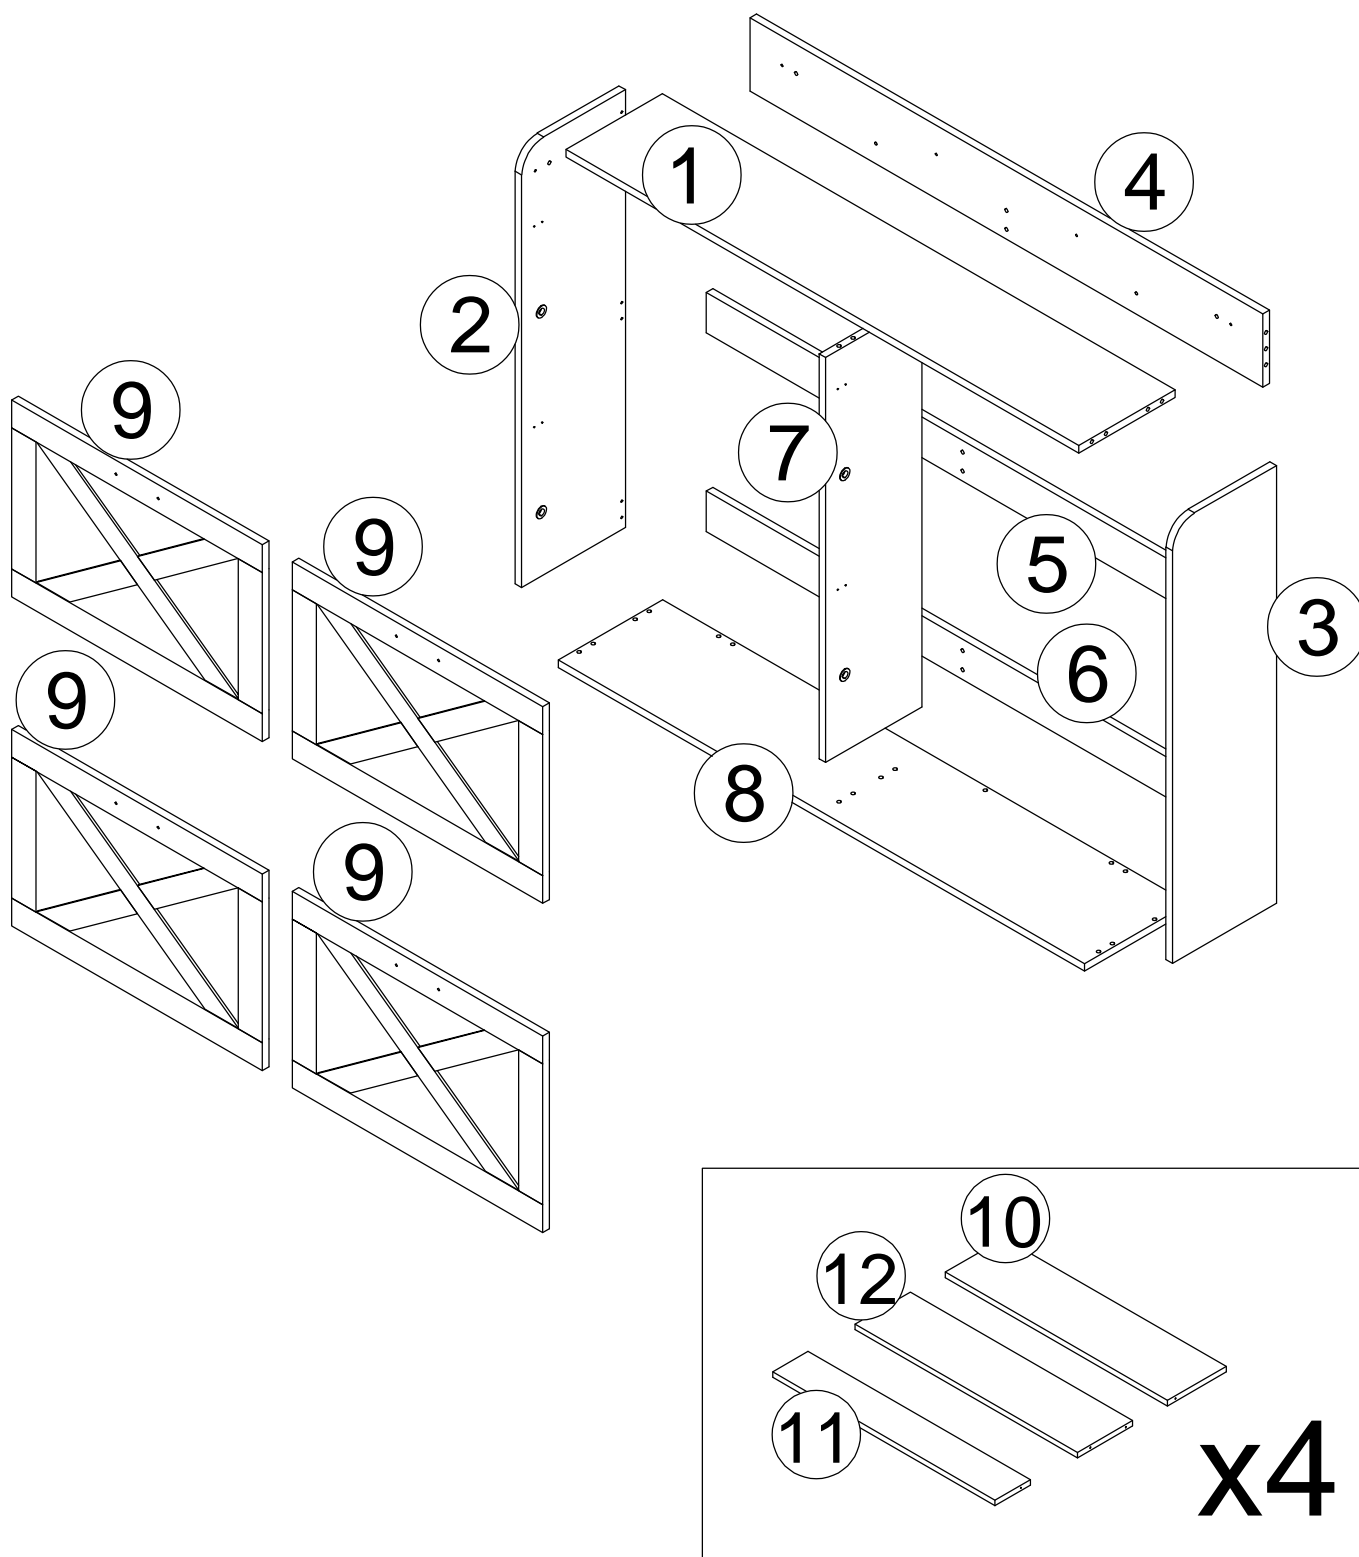


# STEP1

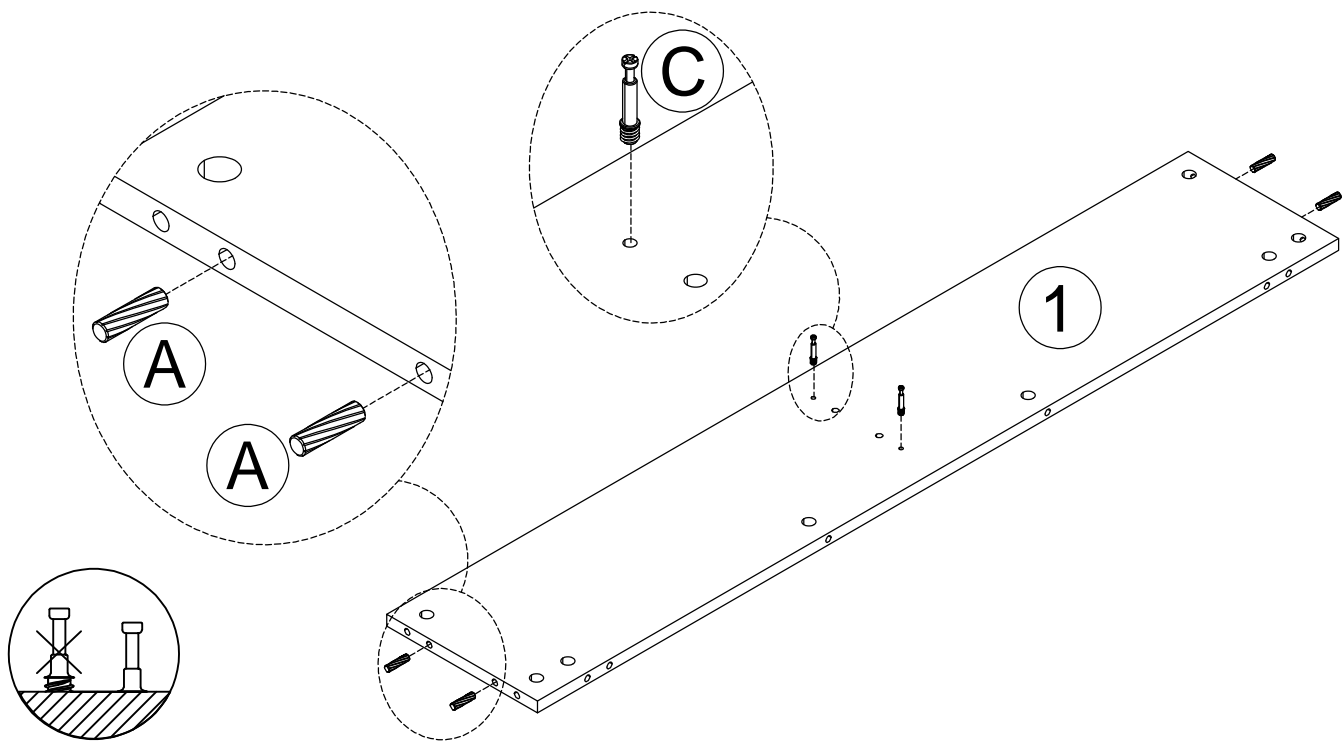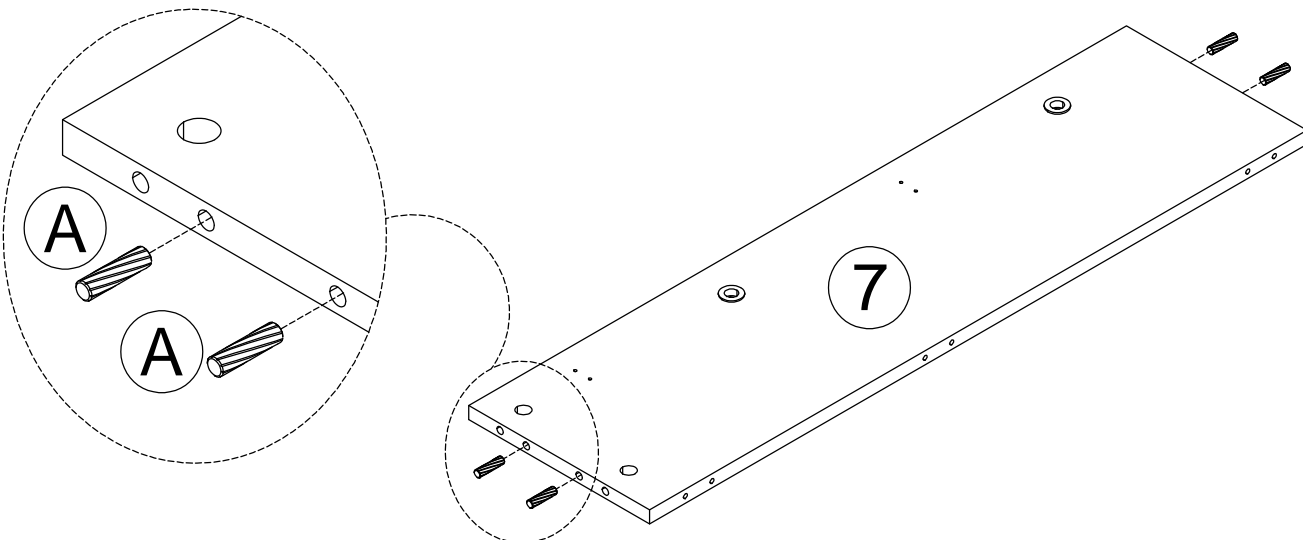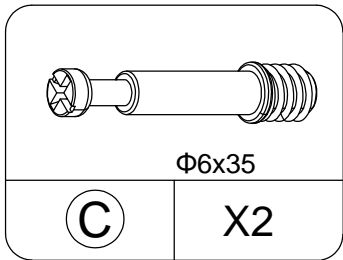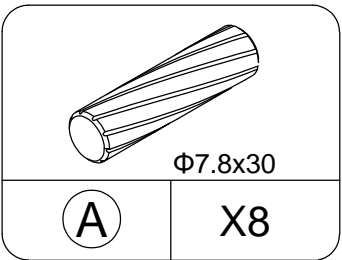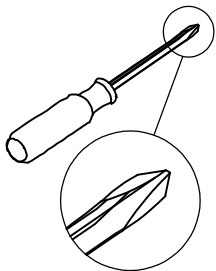

# STEP2

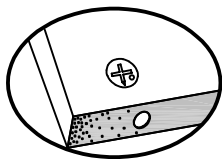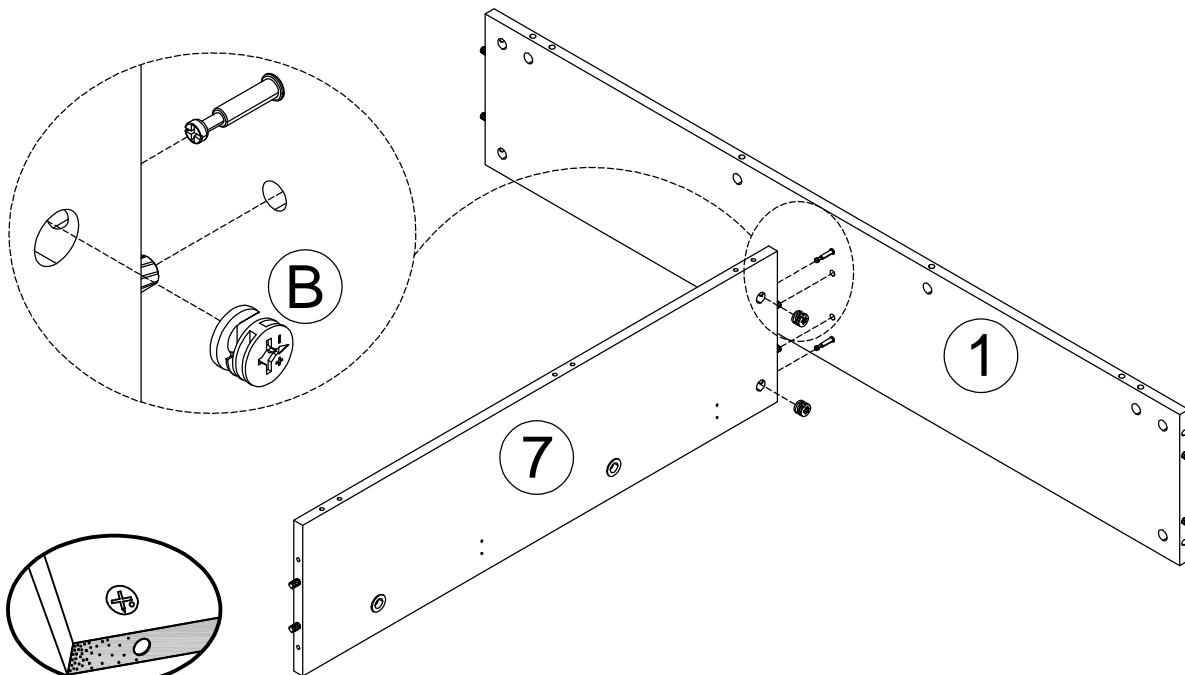
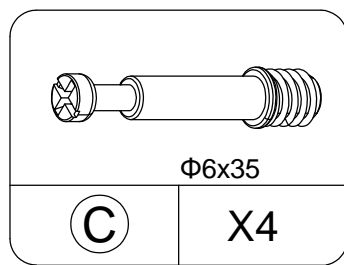
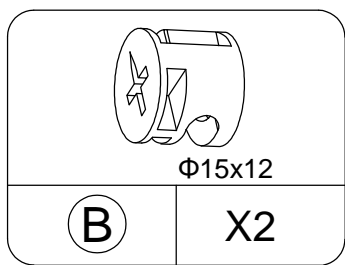
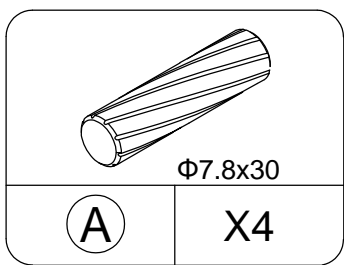
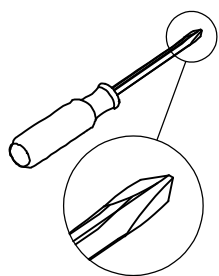


Proper orientation of CAM LOCK


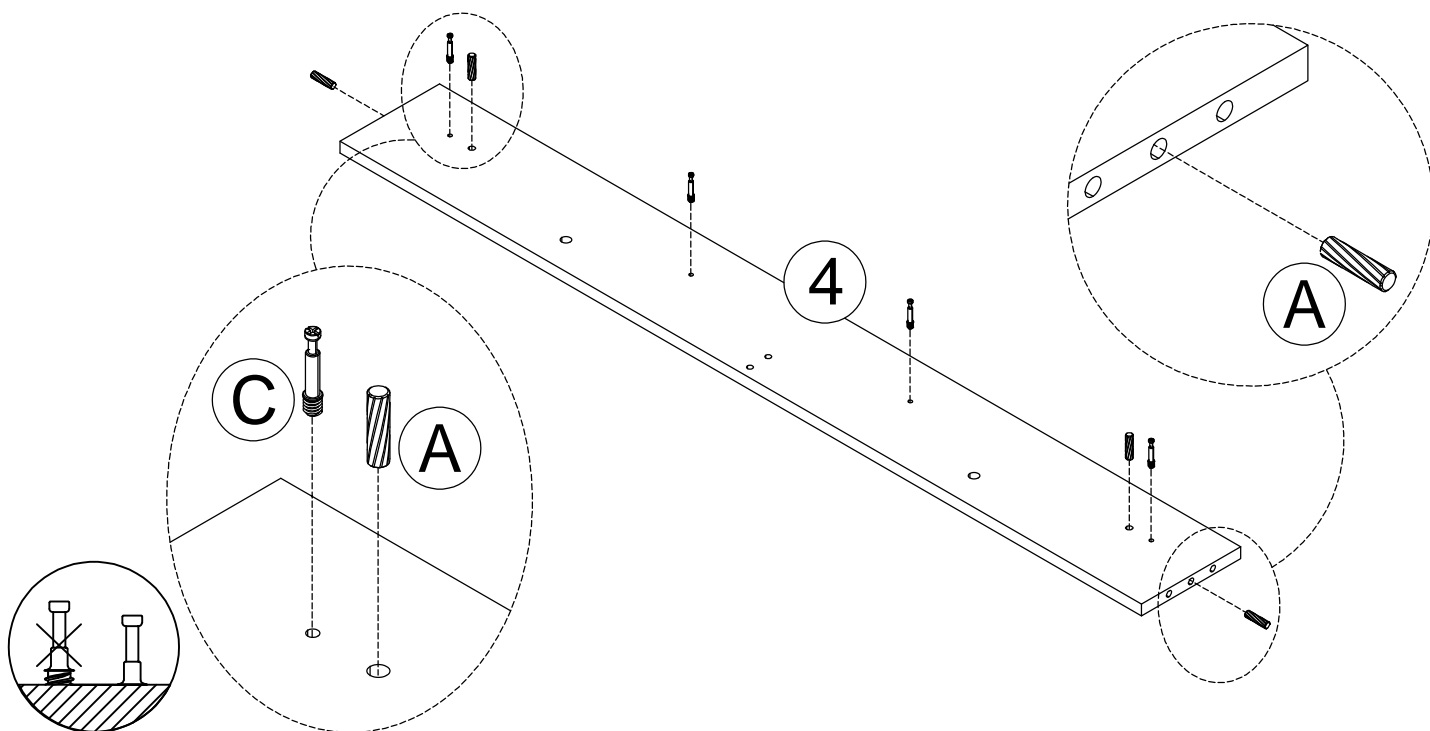







# STEP3

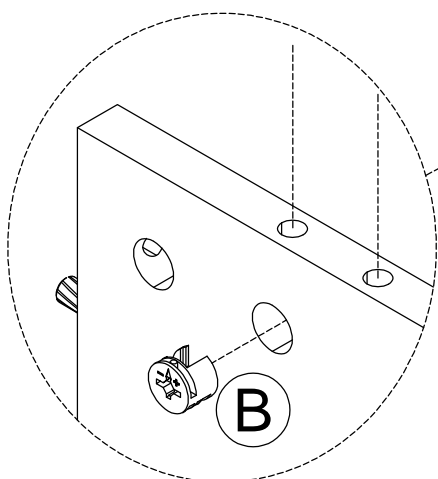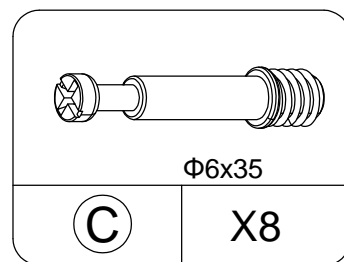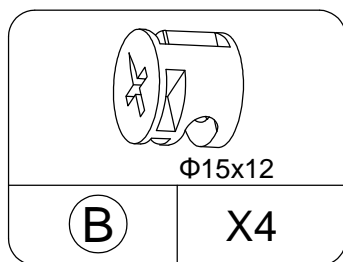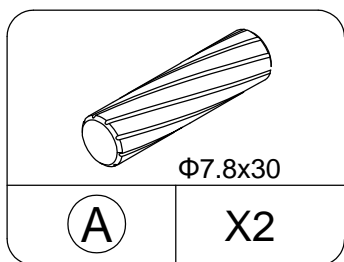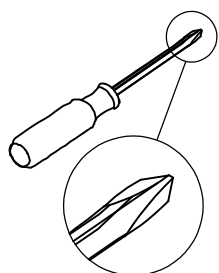




Proper orientation of CAM LOCK

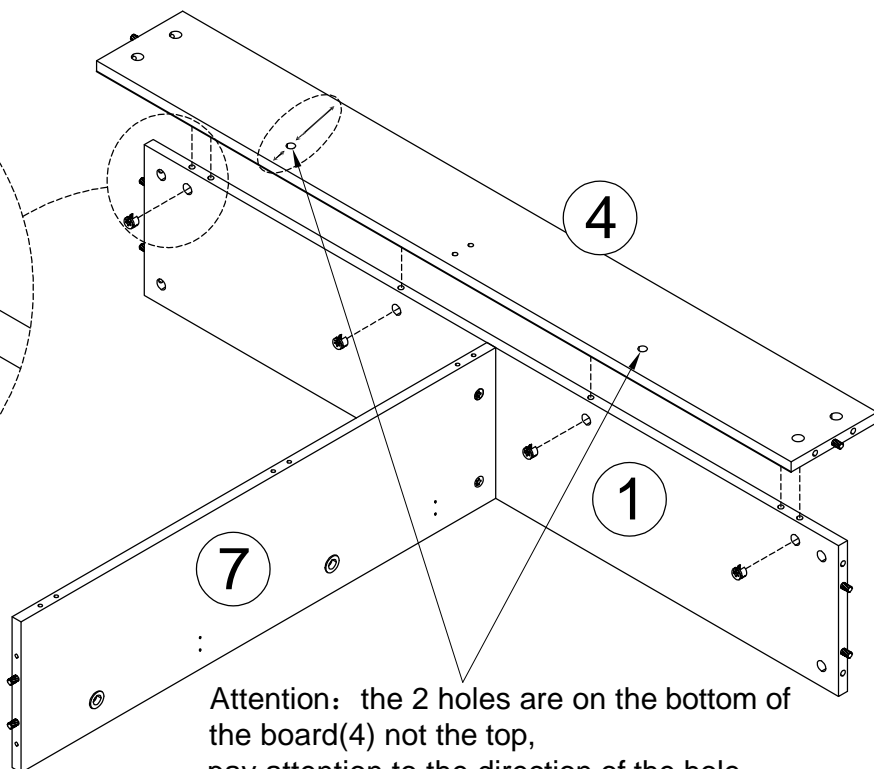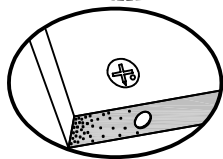



Attention: the 2 holes are on the bottom of the board(4) not the top, pay attention to the direction of the hole position.

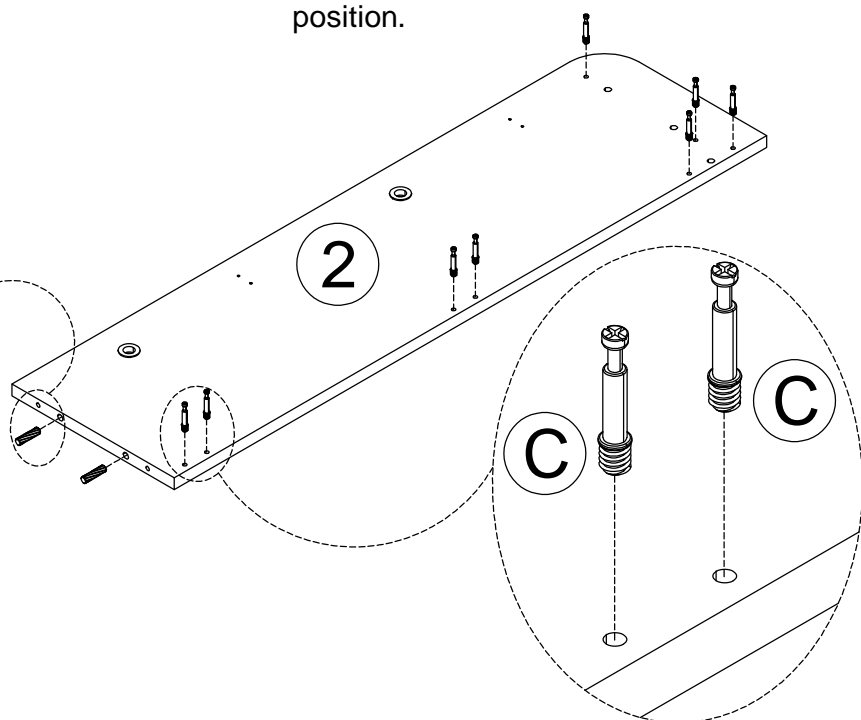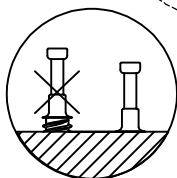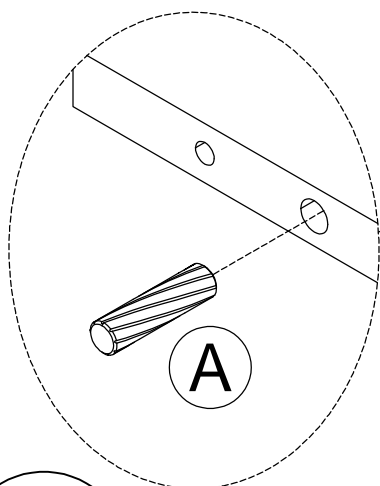


# STEP4

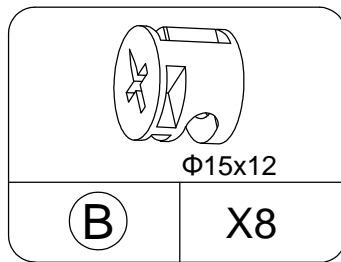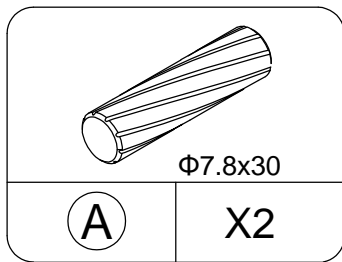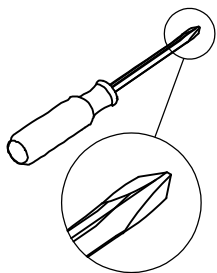


Note: If the holes are not aligned in this step, please check whether the direction of the board(4) in the previous step is installed wrong.

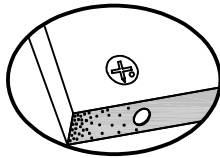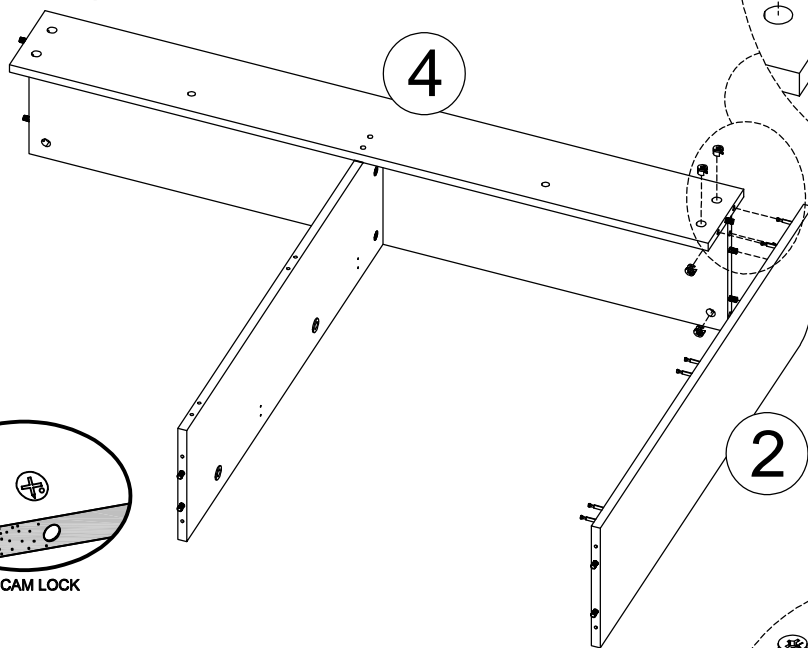

Proper orientation of CAM LOCK

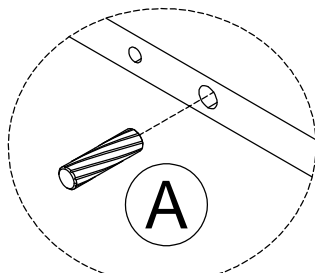

A

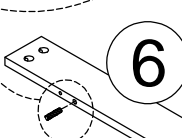


6

5


4

2

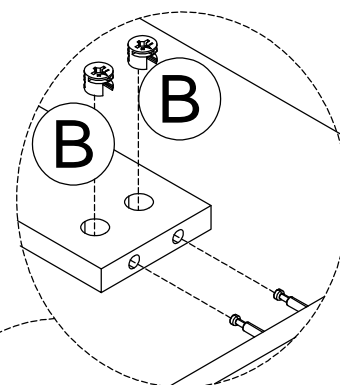

B













B

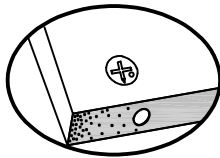

Proper orientation of CAM LOCK







# STEP5

Φ7.8x30

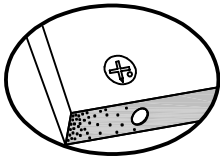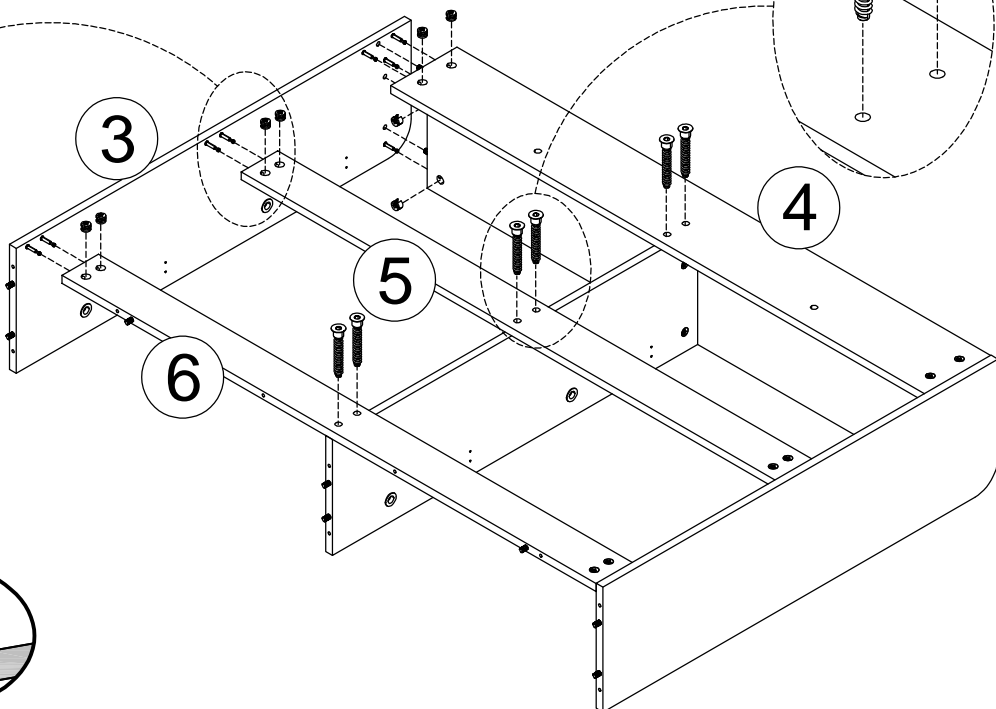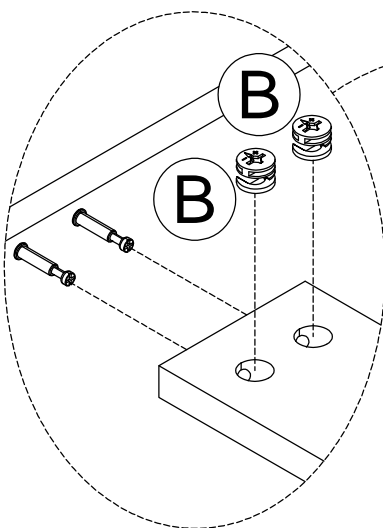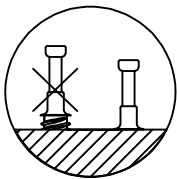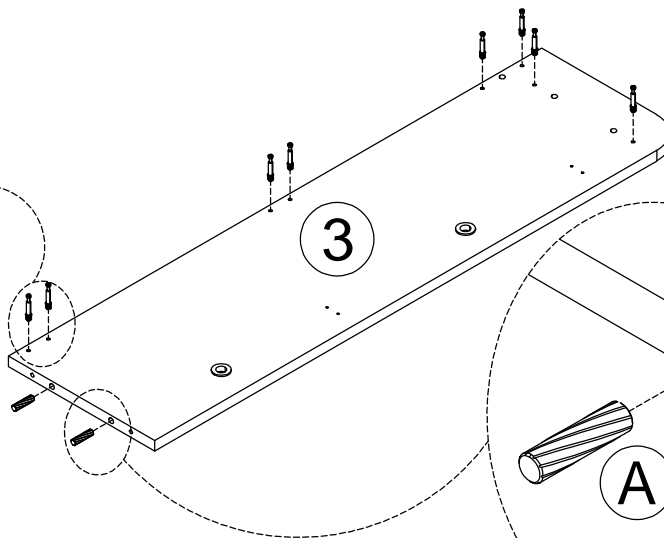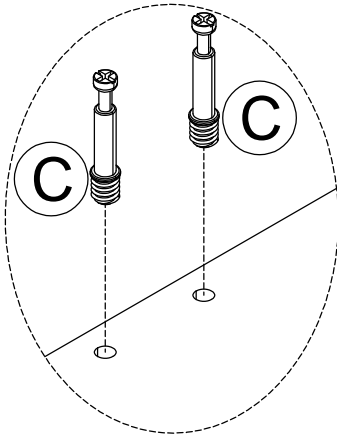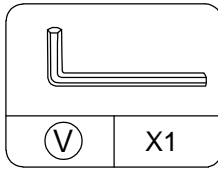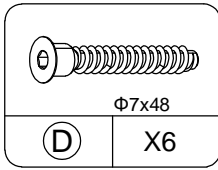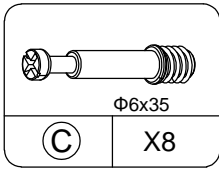
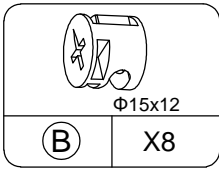
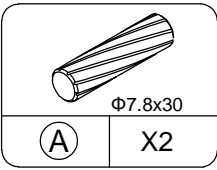
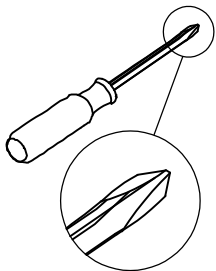


Proper orientation of CAM LOCK

# STEP6

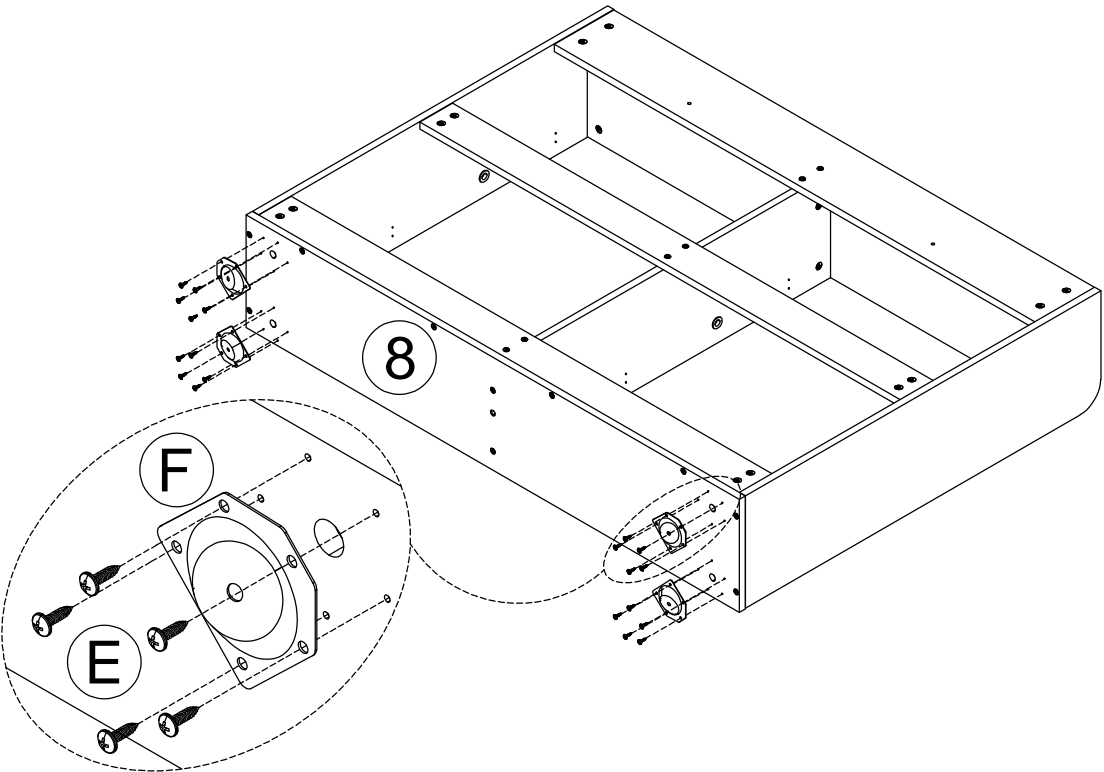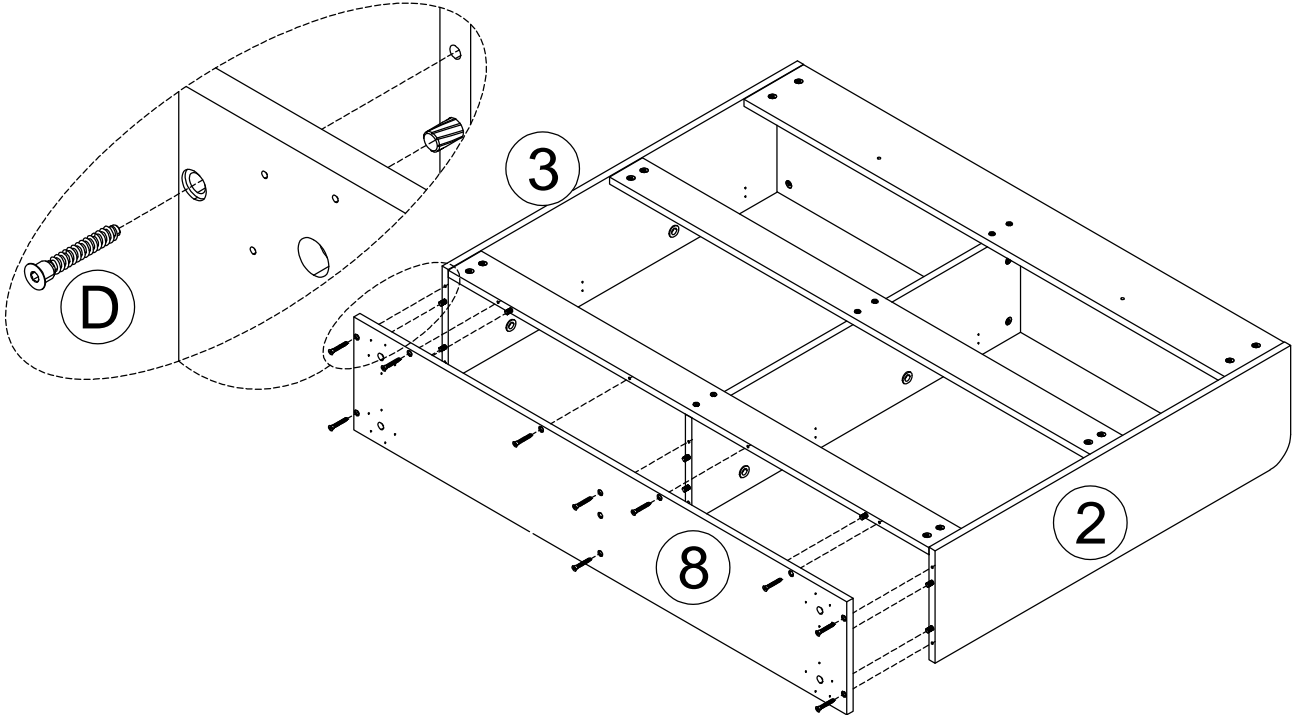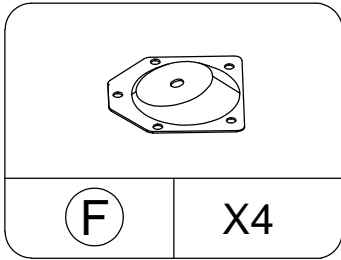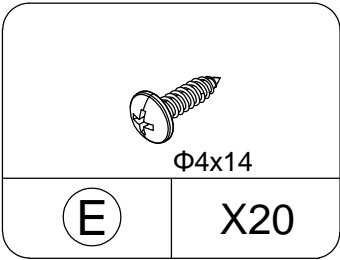
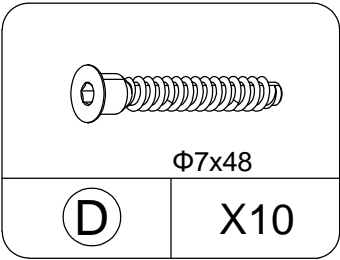
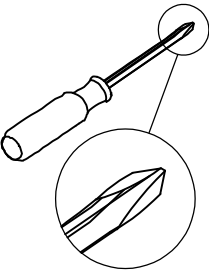


## STEP7

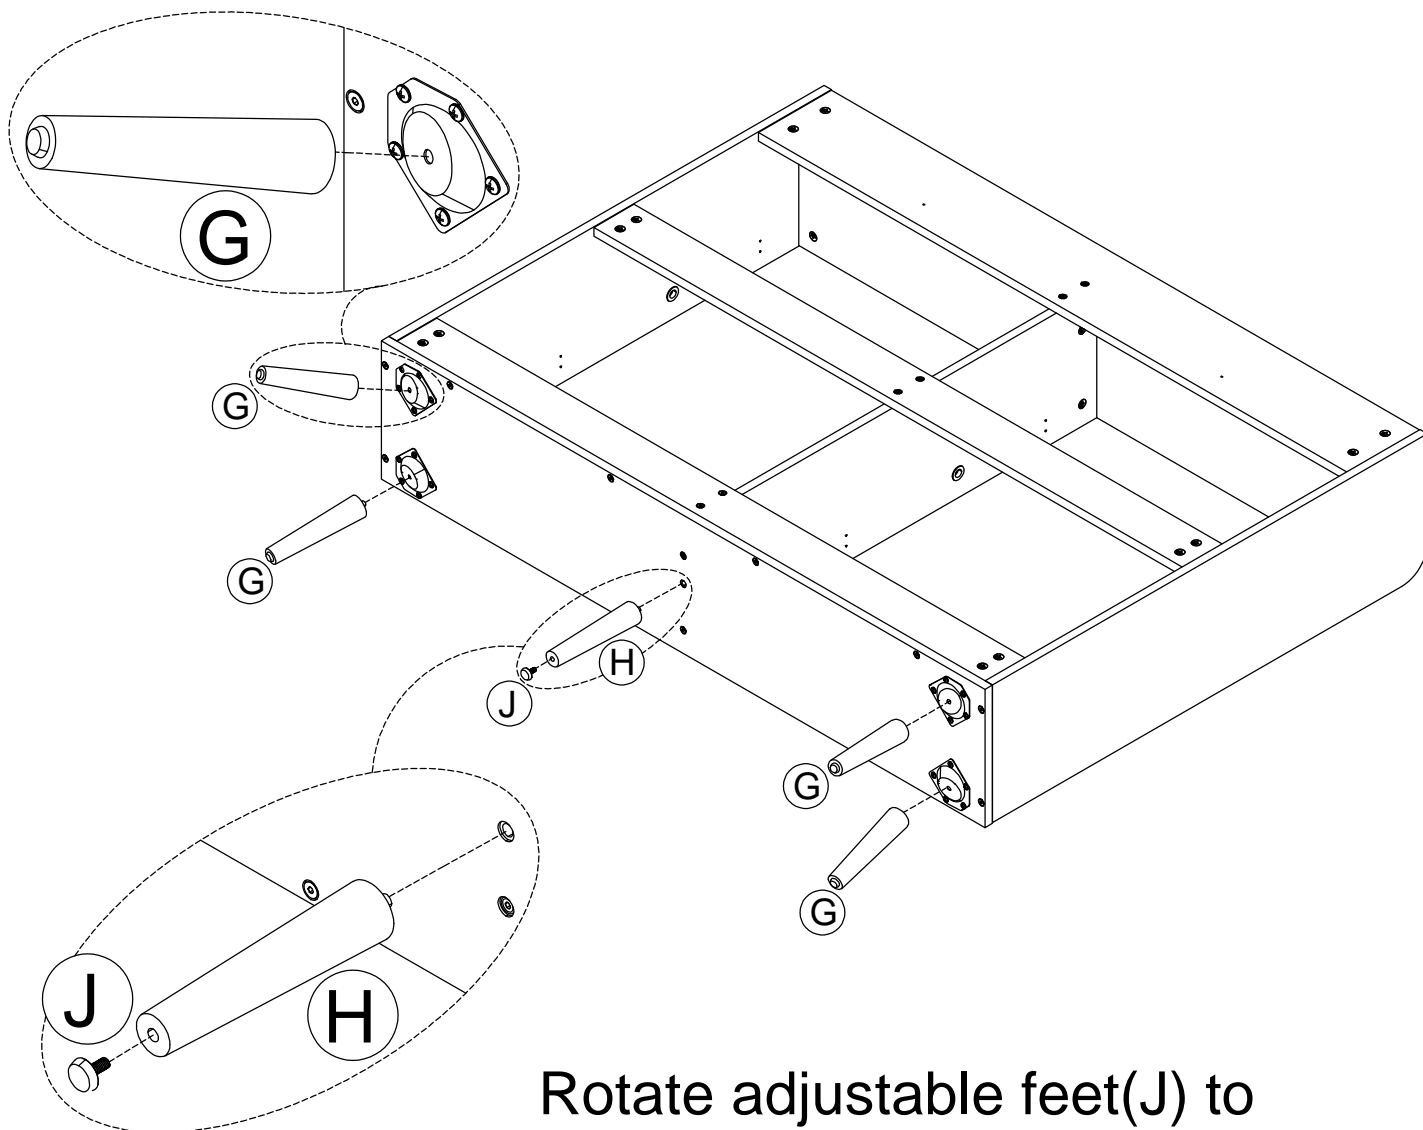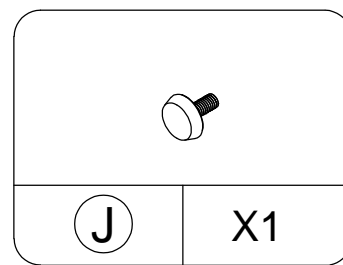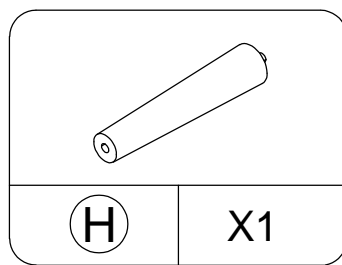
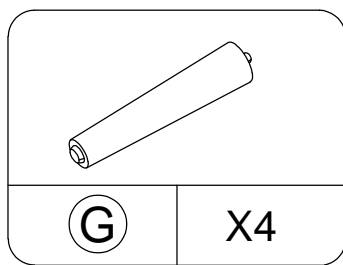


Rotate adjustable feet(J) to  
adjust overall balance.

## STEP8


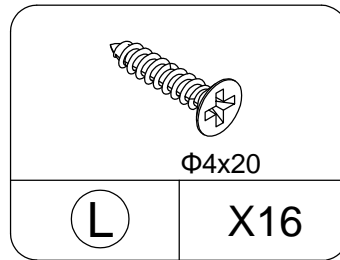
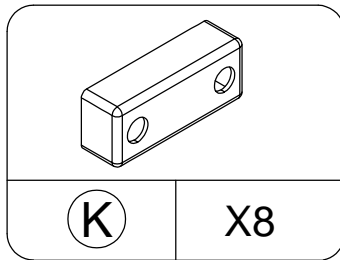
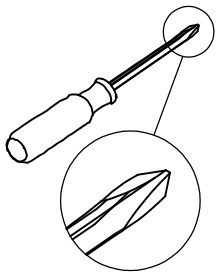


Assemble the  
other side

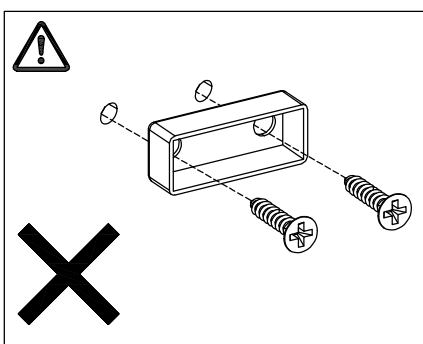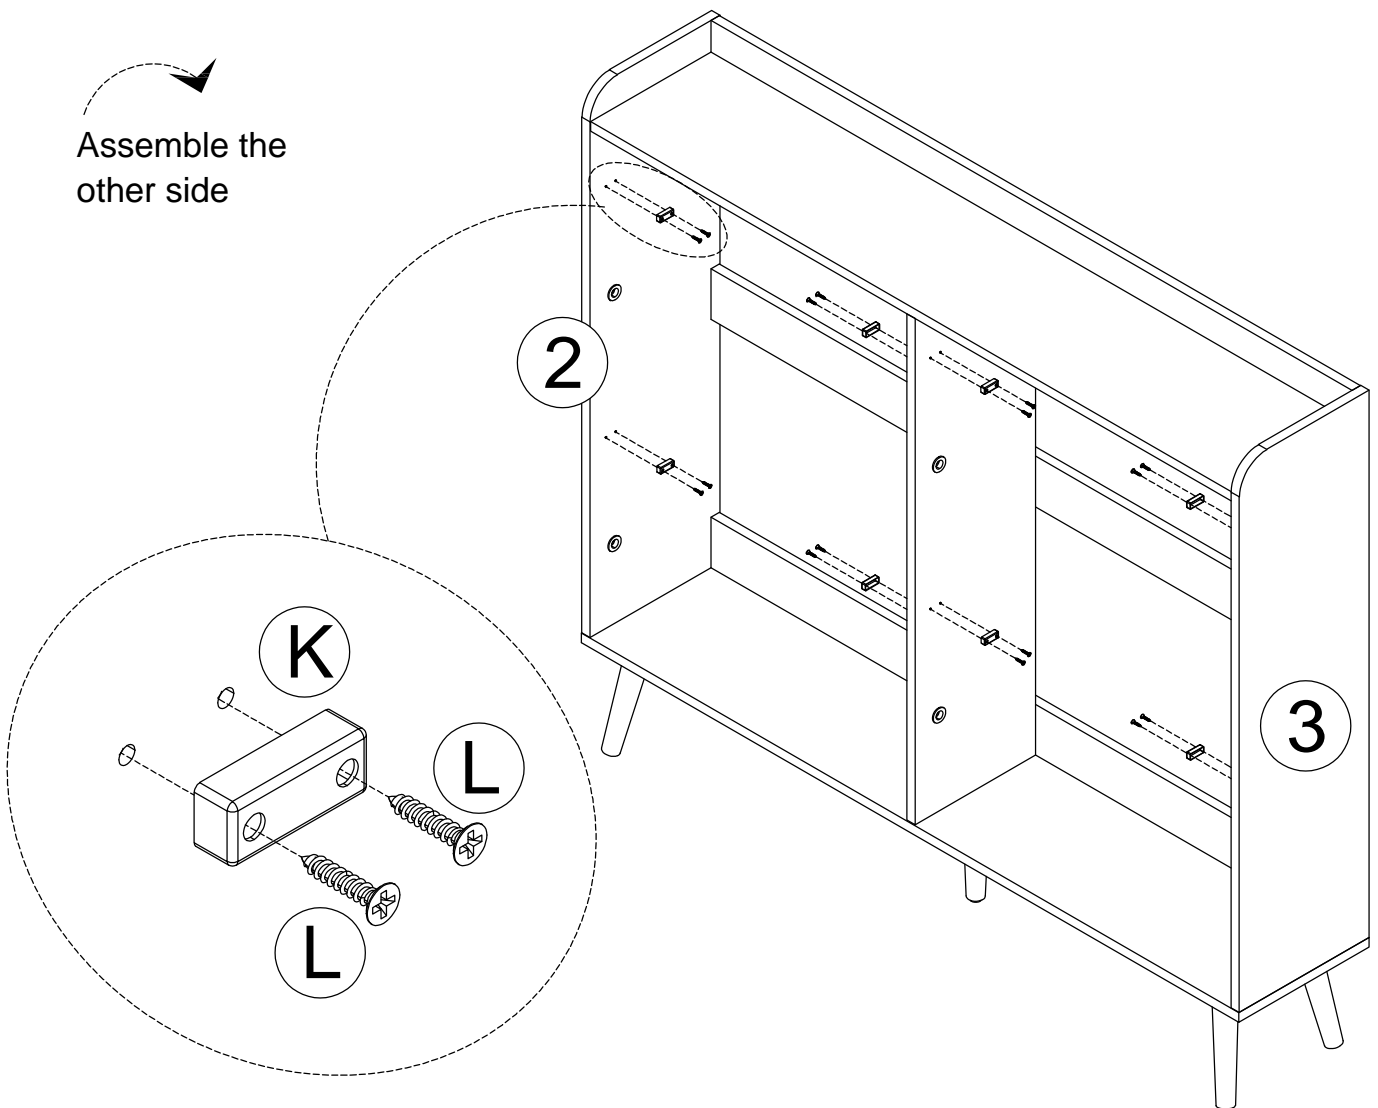


Be careful not to install the door  
stopper upside down, as the screws  
will screw through the wooden board.





# STEP9

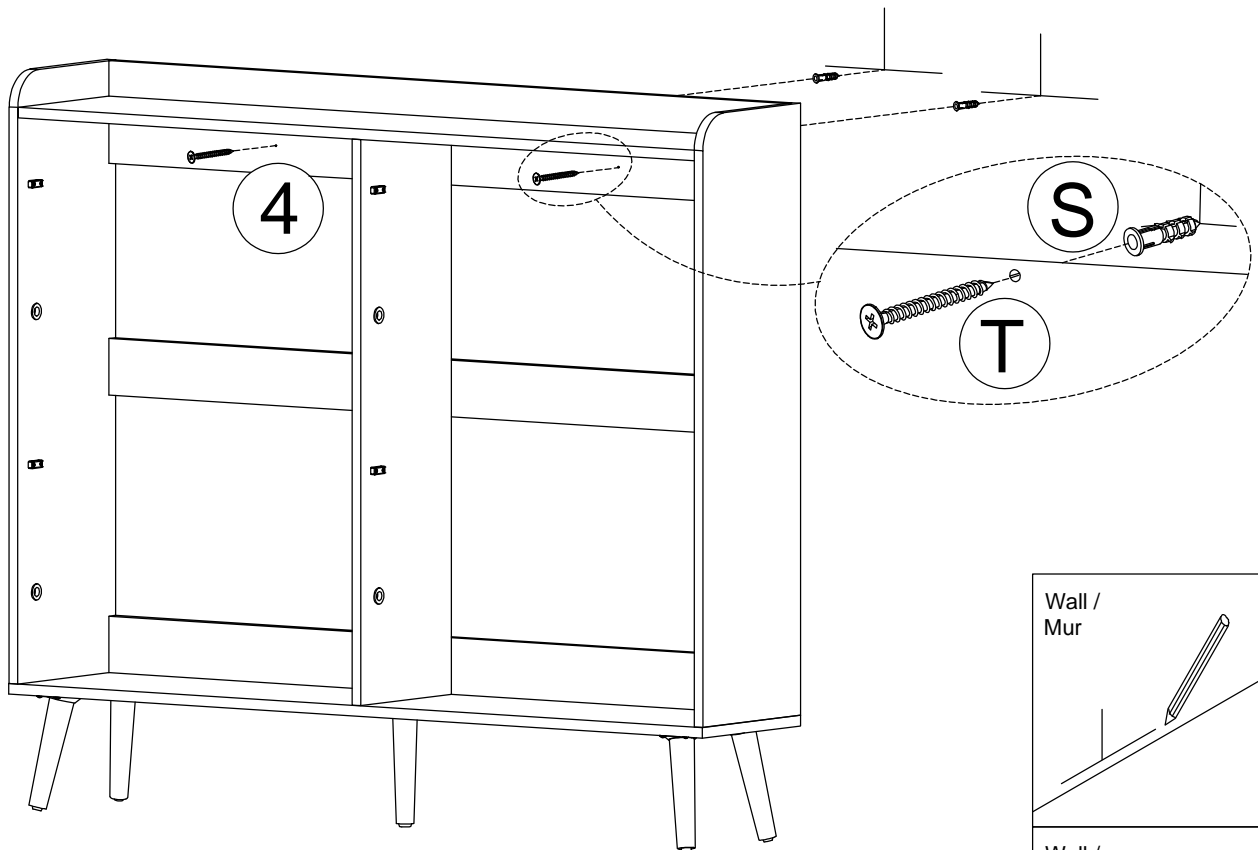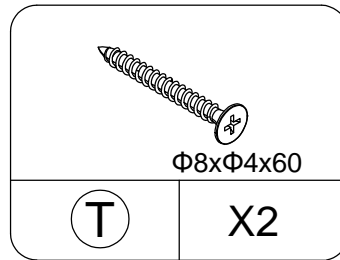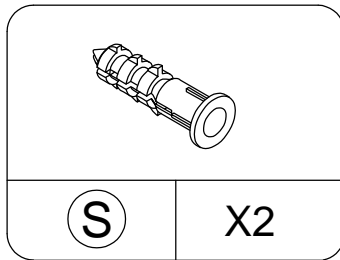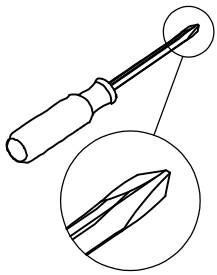

- Cabinet must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over.
- .Mark the drill position on the wall with a pencil.
  - .Drill holes on the marked position using a bit.
  - Gently insert the wall anchor (S) into the drilled hole with the help of a hammer.
  - .Fixed the cabinet to the wall with provided screws (T).




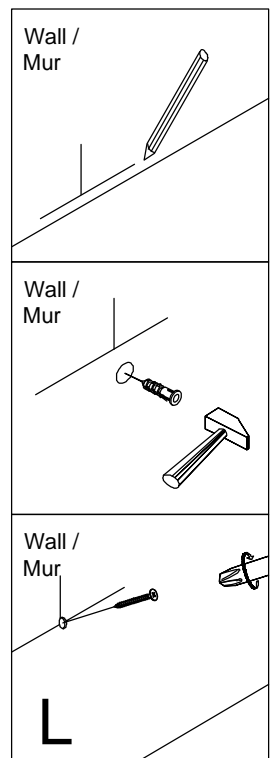


# STEP10

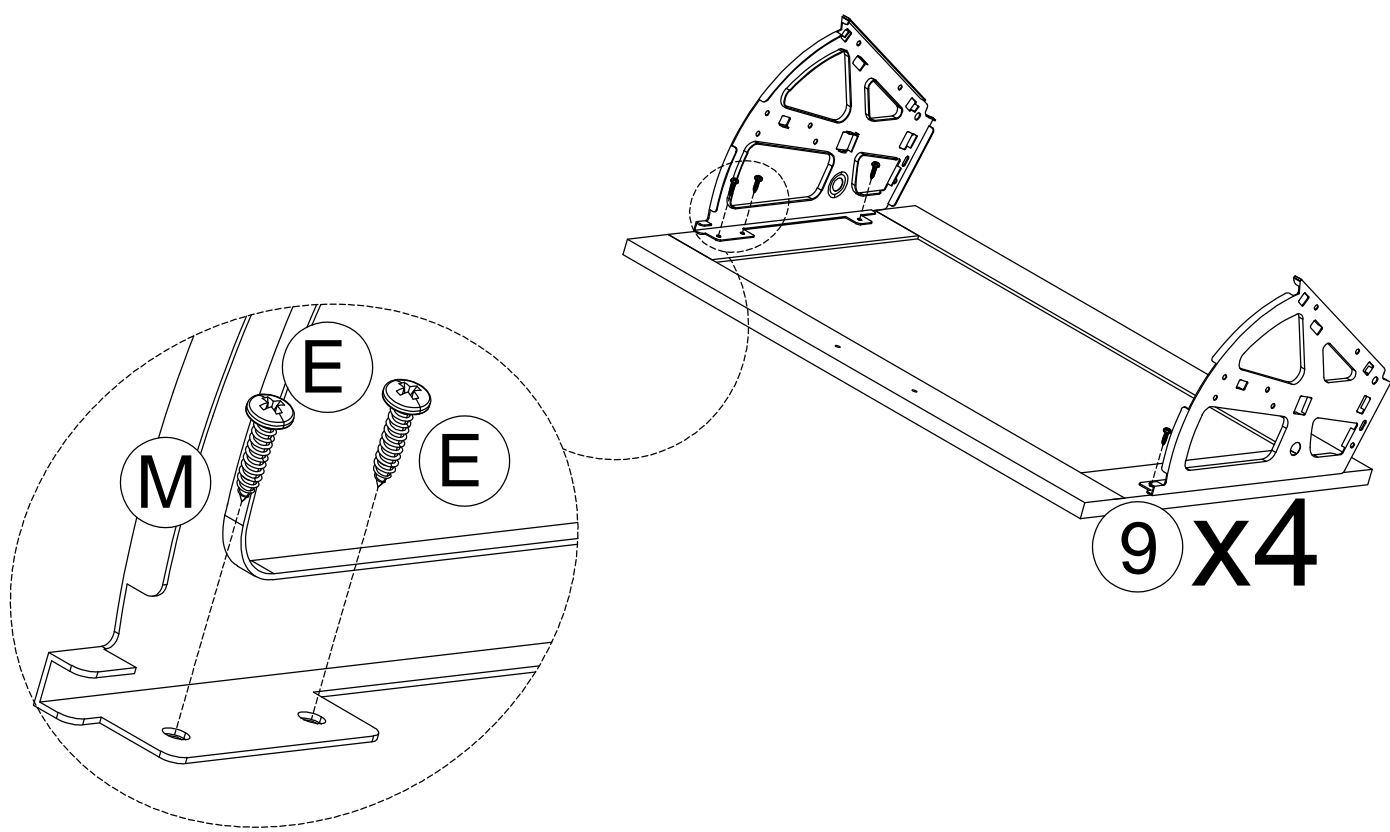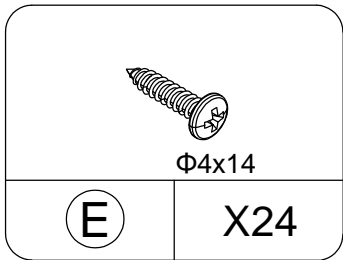
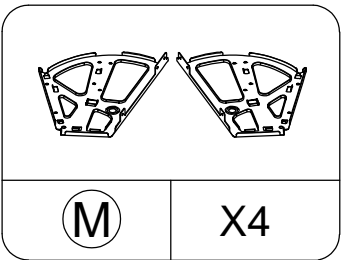
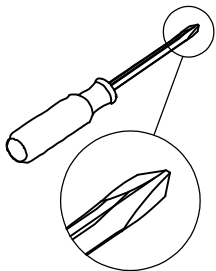




# STEP11

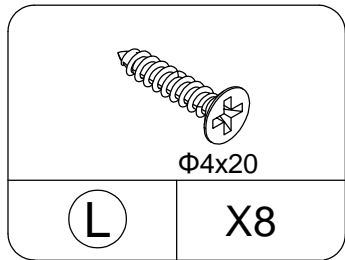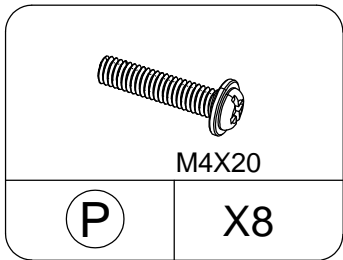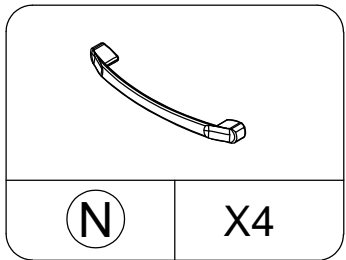
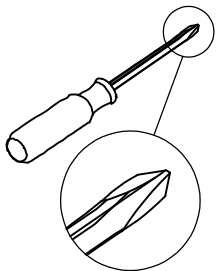


Align the hole positions  
and lock the screws

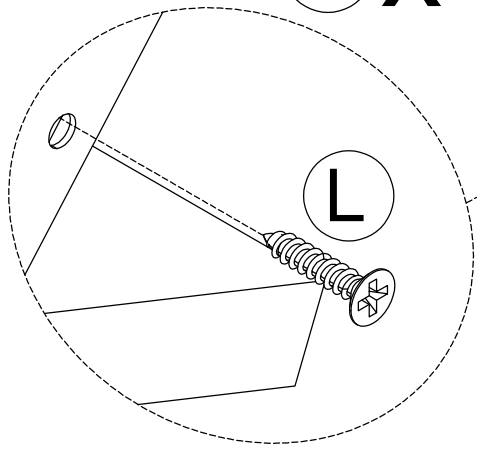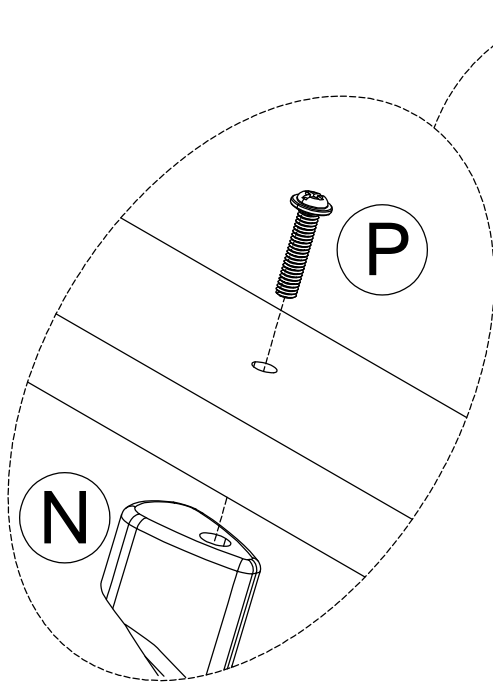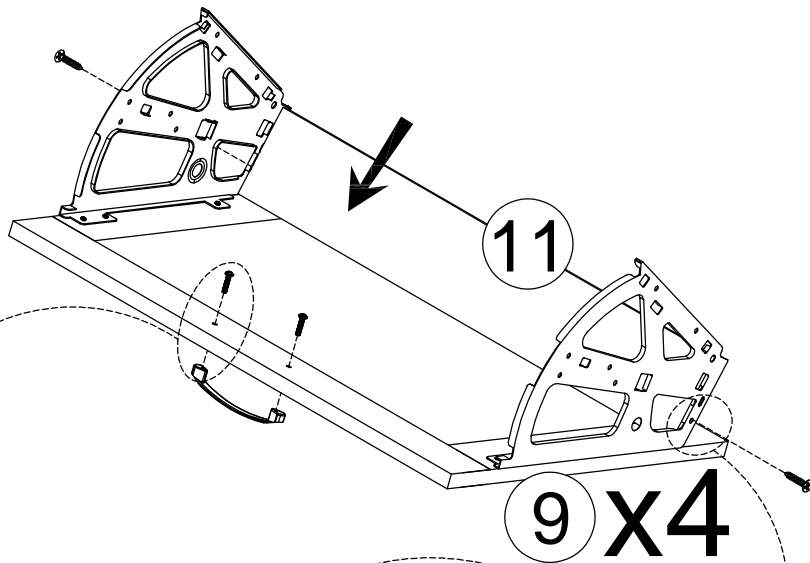


# STEP12





---

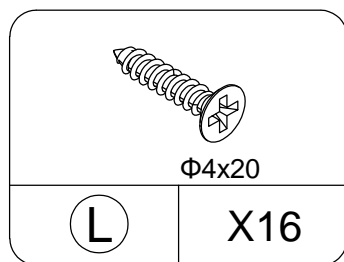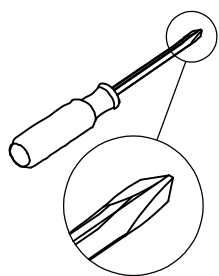


Align the hole positions  
and lock the screws

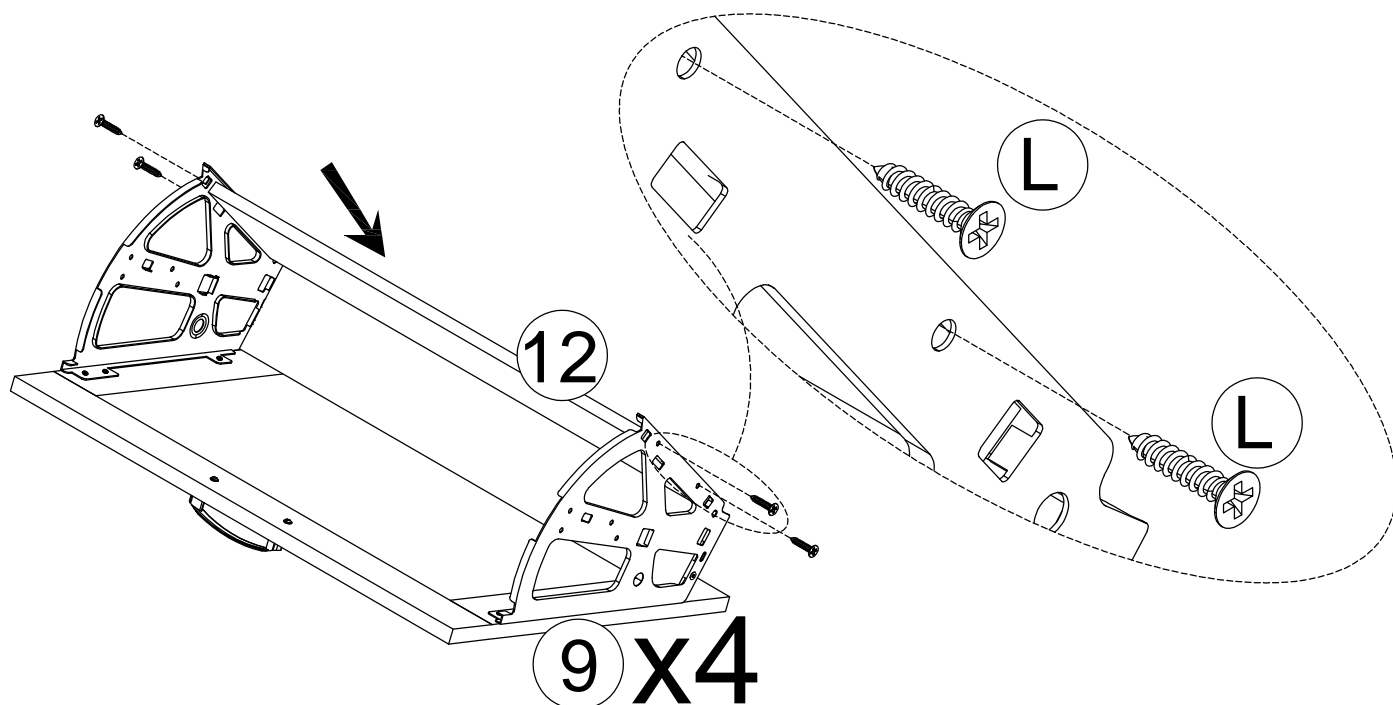


# STEP13

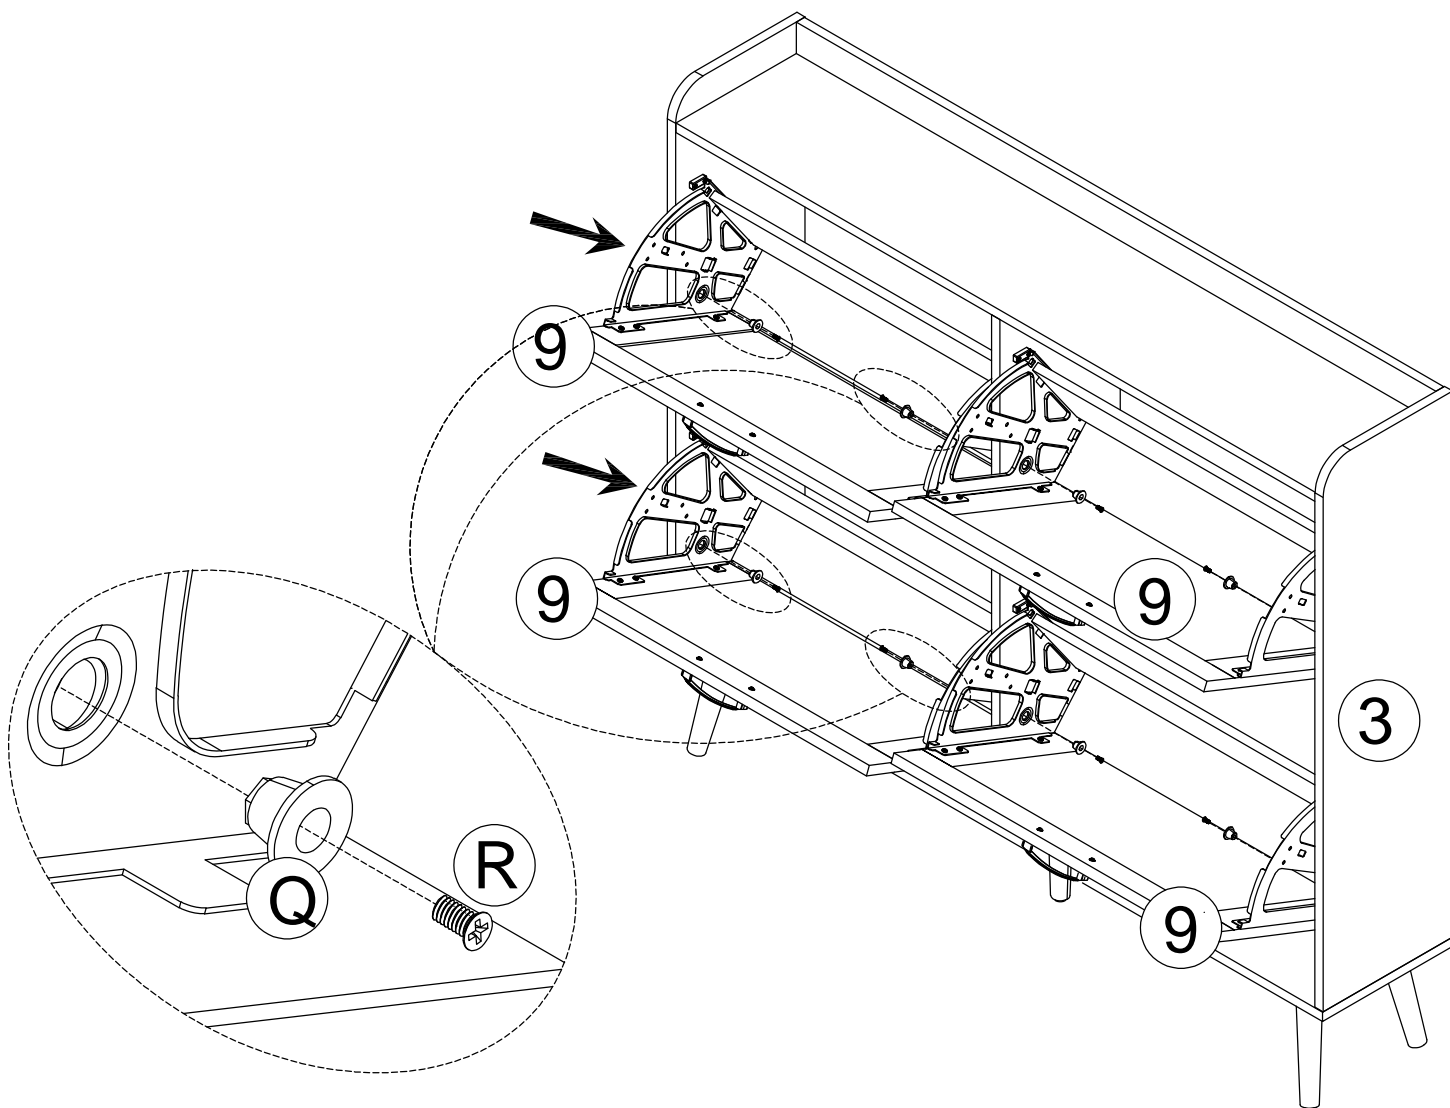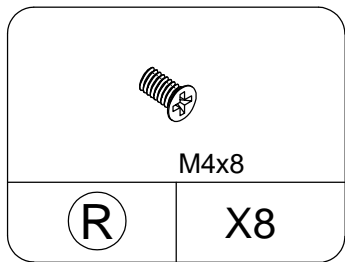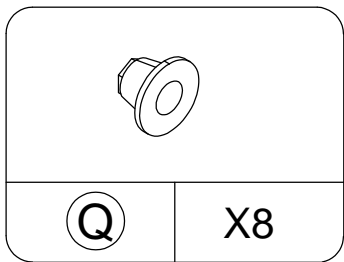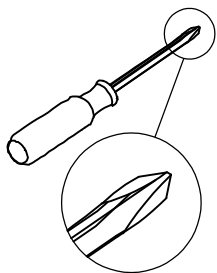



# STEP14

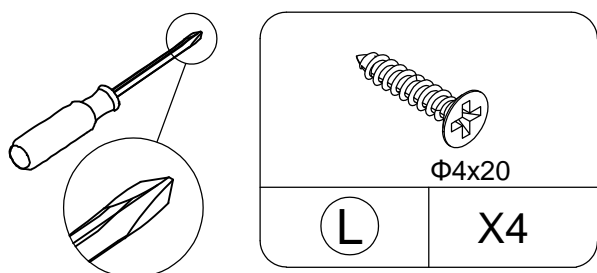

Align the hole positions  
and lock the screws

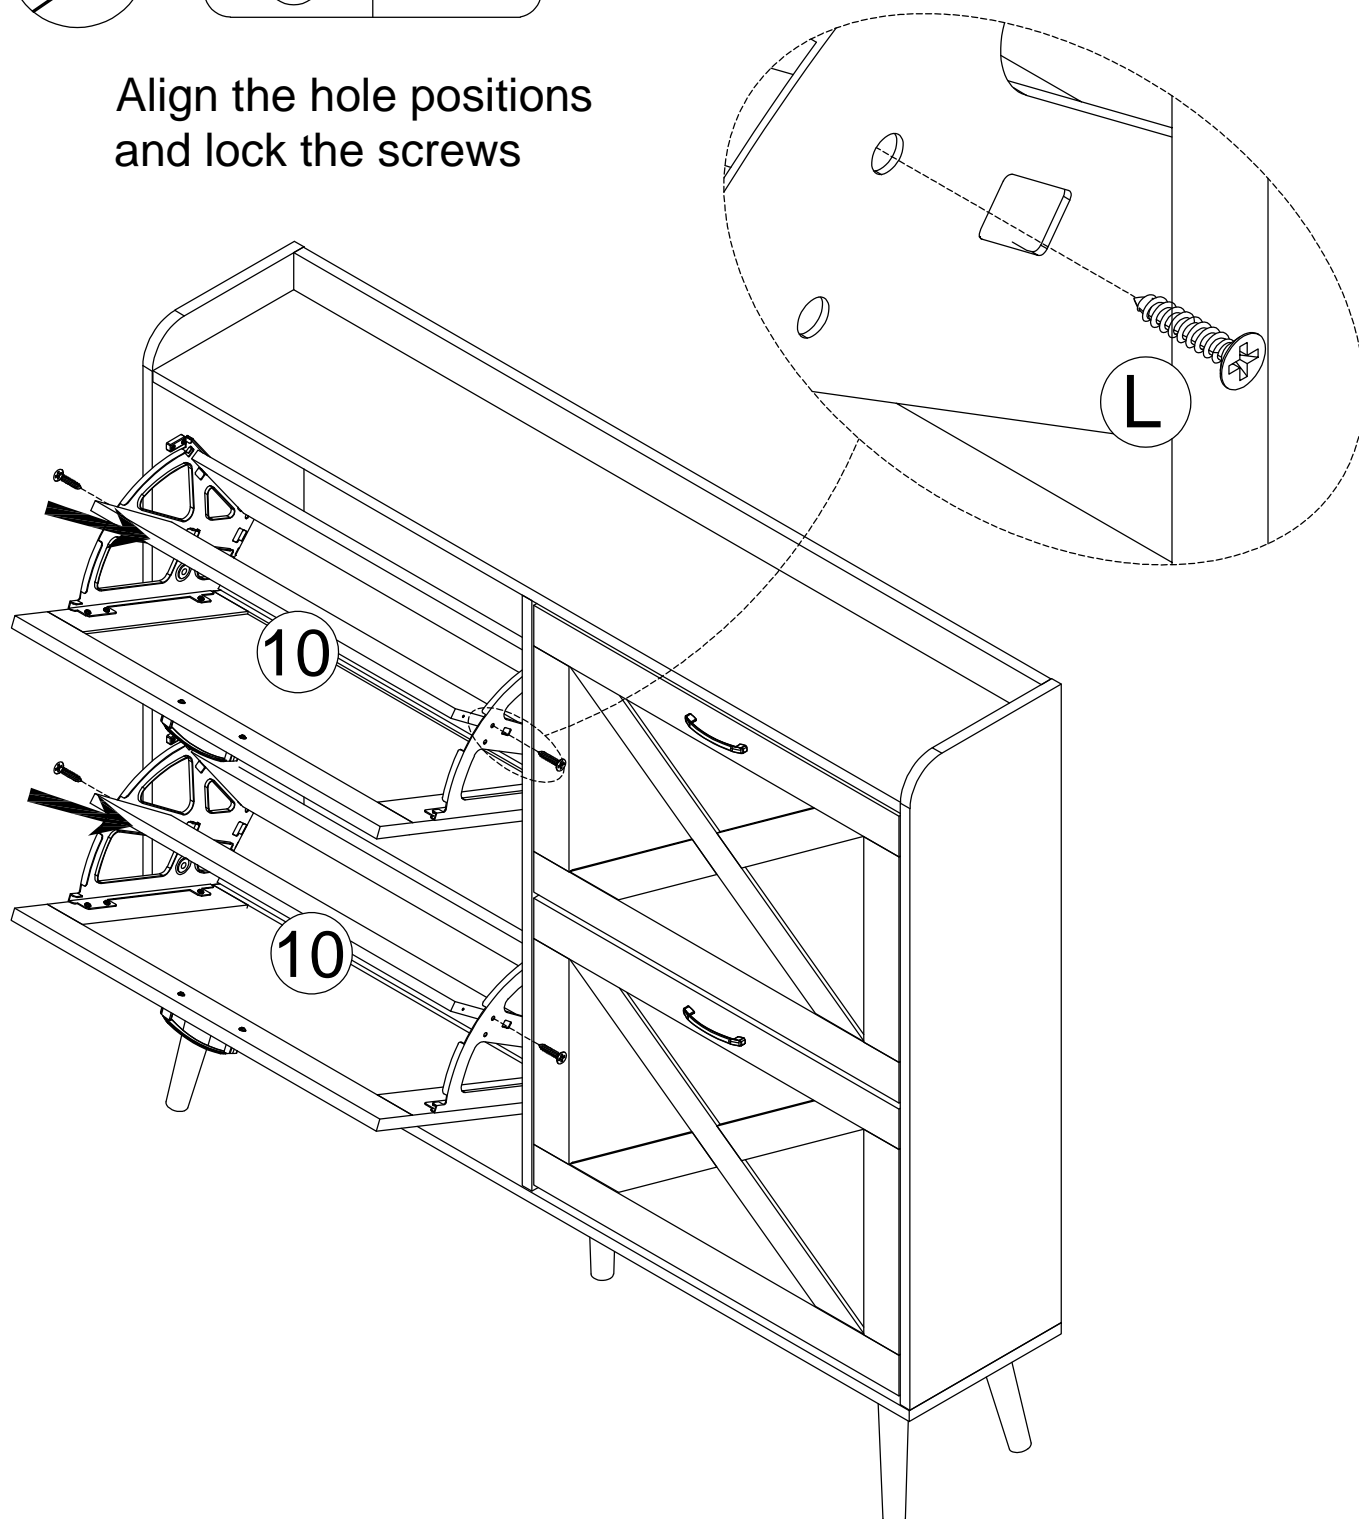

# STEP15

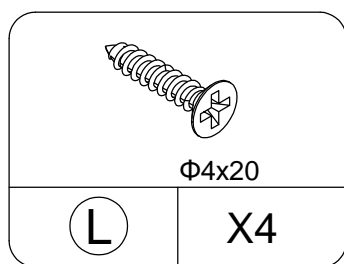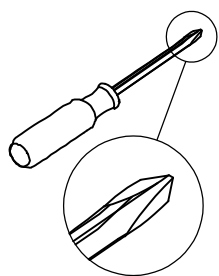

Align the hole positions  
and lock the screws

