



STEP 1 Once the shelf is level, mark with pencil as to where holes should be drilled.

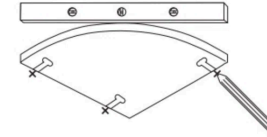

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING
IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE A SPECIALIST FITTING (NOT SUPPLIED), IF YOU'RE ATTACHING TO A WOOD WALL, MOVE TO STEP 3.

STEP 2 Drill holes in your wall to a depth of 30mm using a 5m drill bit, then insert wall plugs. Make sure ends are flush to the wall.

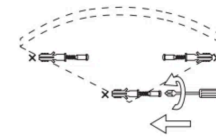

STEP 3 Insert screws into wall plugs leaving 8mm of the screw head out of the wall

- (1) Push shelf into the two screw heads then
- (2) rest the shelf onto the 3rd screw head

