
SICOTAS

Savanna Dresser with 6-Drawers

DR006A1XBNY2030 / DR006A1XLTY2031 / DR006A1XBKY2032

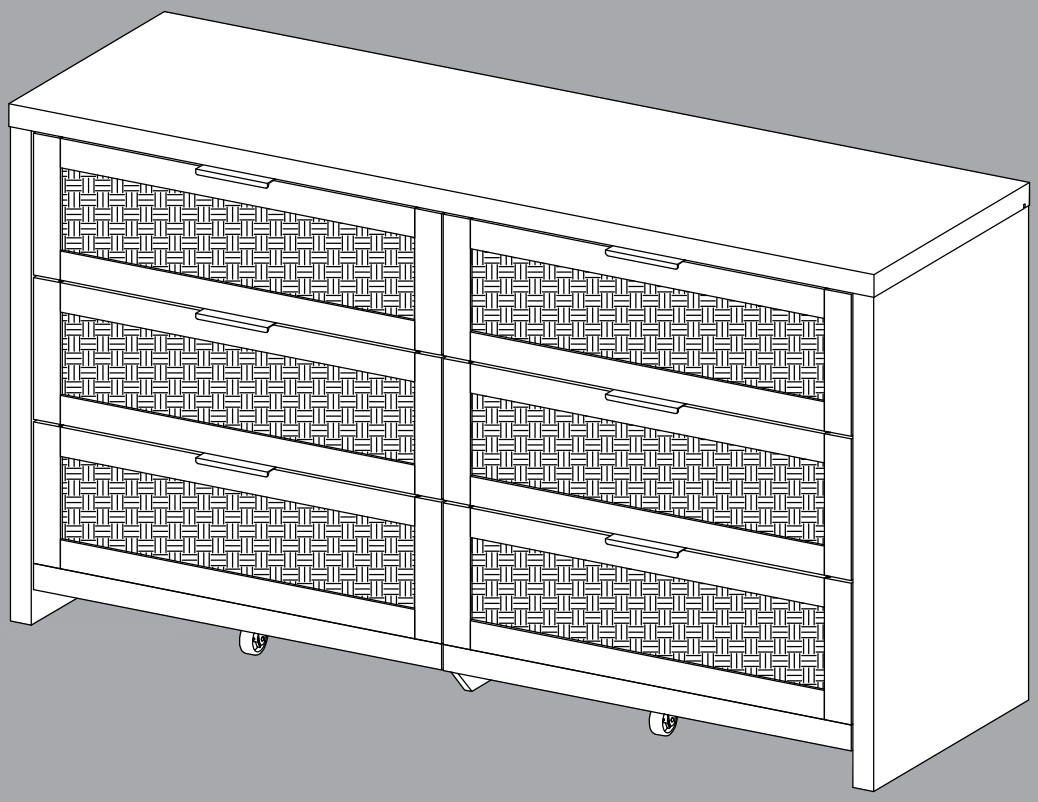

Savanna Collection

Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference.
Following these guidelines will ensure a smooth and successful assembly of your product.

1. Part Identification:

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2. Work Surface:

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3. Step-by-Step Assembly:

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

4. Proper Screw Seating:

When attaching screws and nuts, it is essential not to fully tighten them until all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

5. Avoid Over-Tightening:

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

SICOTAS customer help center:

If you encounter any questions or problems during the assembly process, please do not hesitate to contact us.

We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.



Email:
service@sicotas.com



Website:
www.sicotas.com



Phone:
(833) 742-6827



Official Website:



WhatsApp:



YouTube:



Instagram:




Facebook:




TikTok:

Parts List

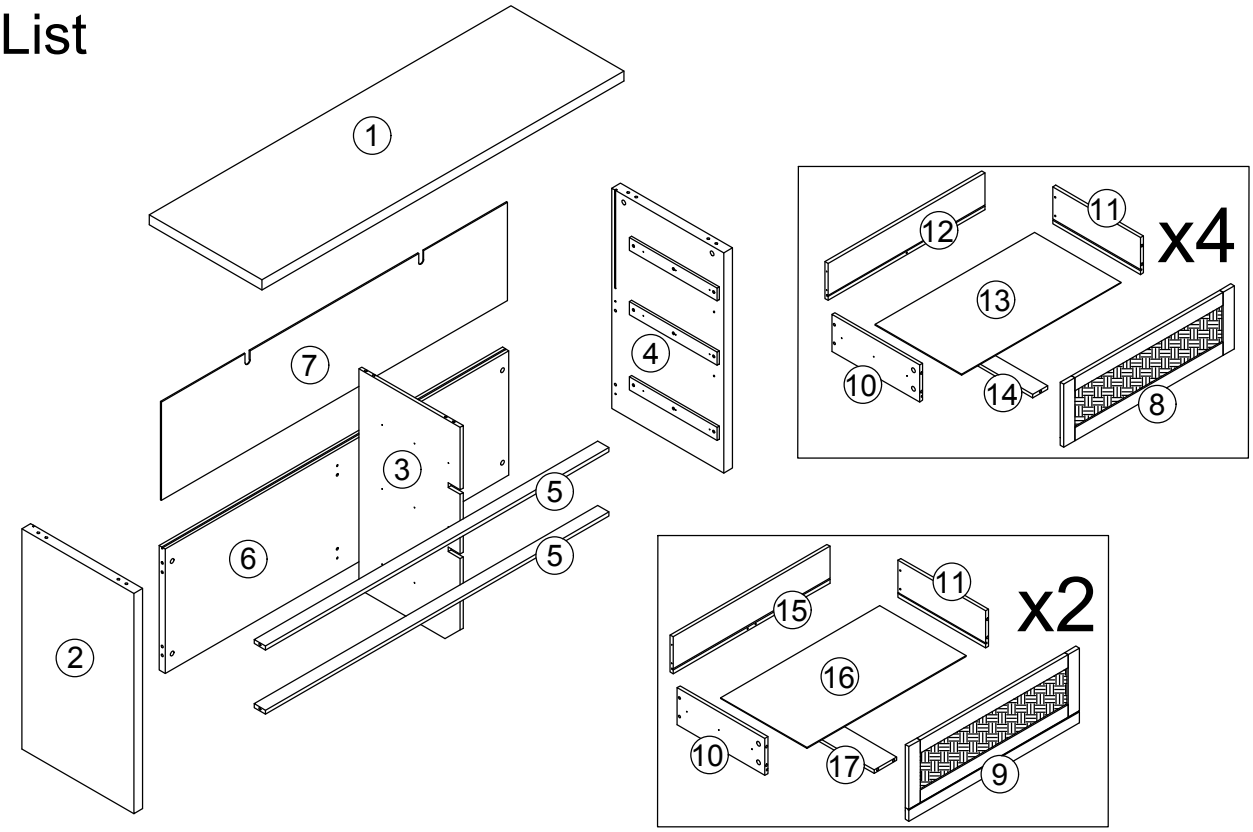


Hardware List

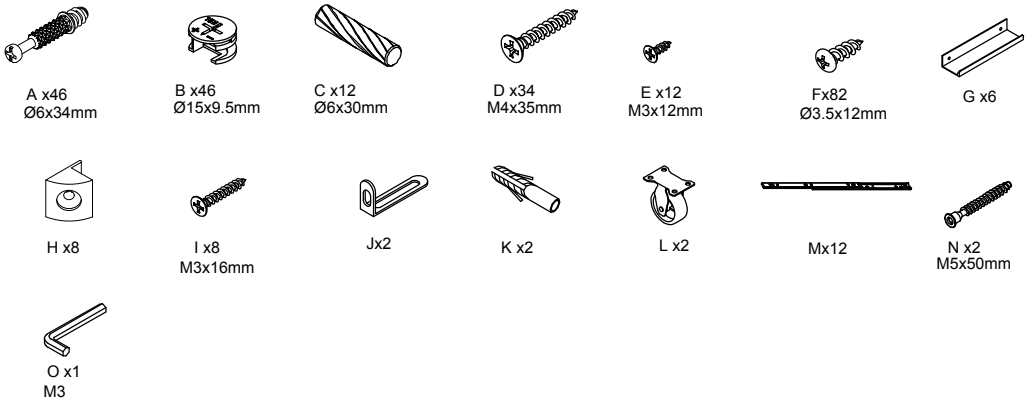


Code	Description	Quantity
A	M6*34mm Cam bolt	46+4
B	Ø15x9.5mm Cam lock	46+4
C	Φ6x30mm Wood dowel	12+2
D	M4x35mm Screw	34+4
E	M3x12mm Screw	12+2
F	Ø3.5x12mm Screw	82+4
G	Handle	6
H	Back clip	8+2
I	M3x16mm Screw	8+2
J	Anti falling iron sheet	2
K	Plastic expansion screw	2

Code	Description	Quantity
L	Caster	2
M	Drawer Slides	12
N	M5x50 Broken tail screw	2+2
O	M3 Wrench	1

Step 1

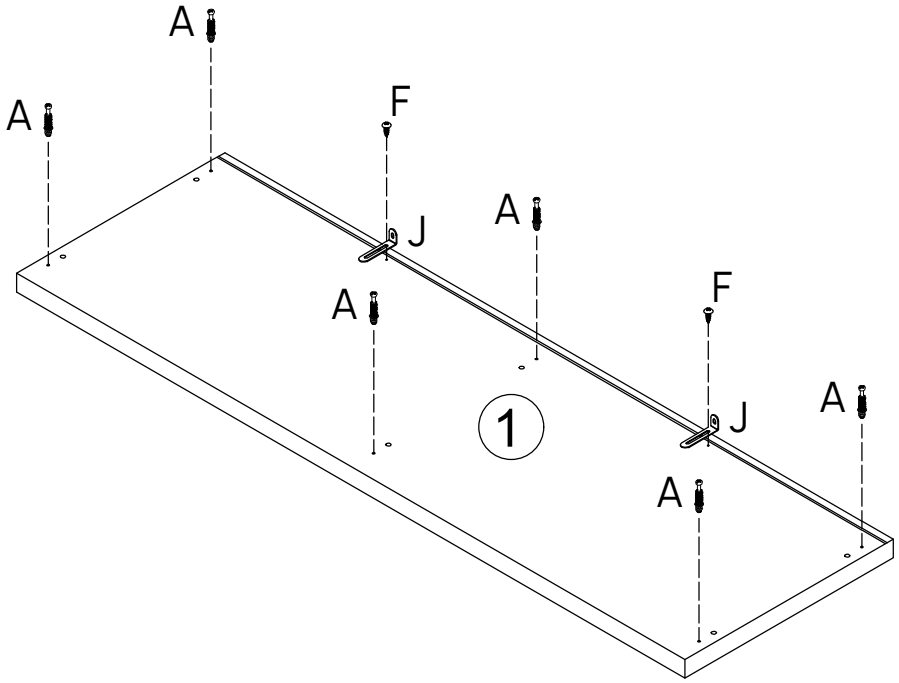



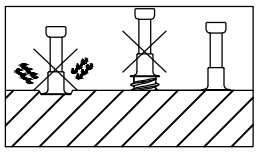


A*6	J*2	F*2
		

Step 2


Press the plastic plastic part in the indicated direotinon to separste drawer runnor M1 and M2 beore assembling.


Attontion
Ploase grip tho M1 part while sliding the M2 prt

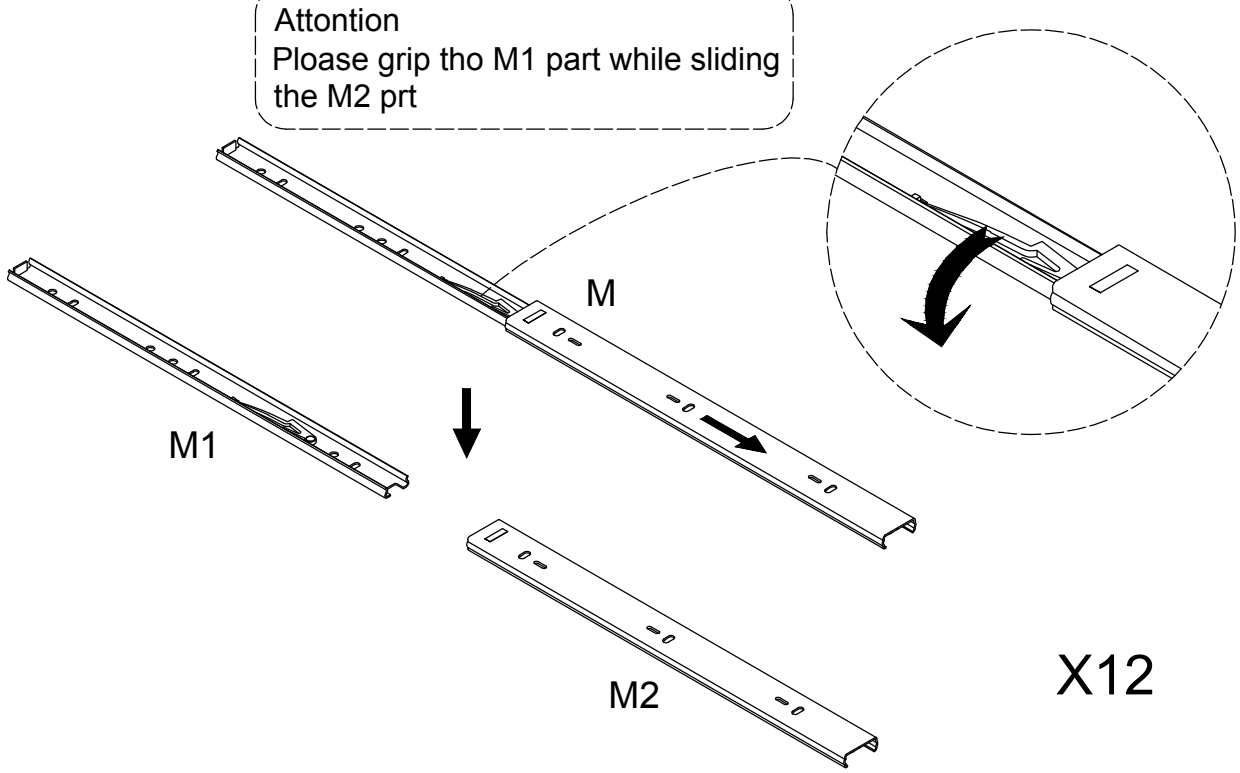


X12


Step 3

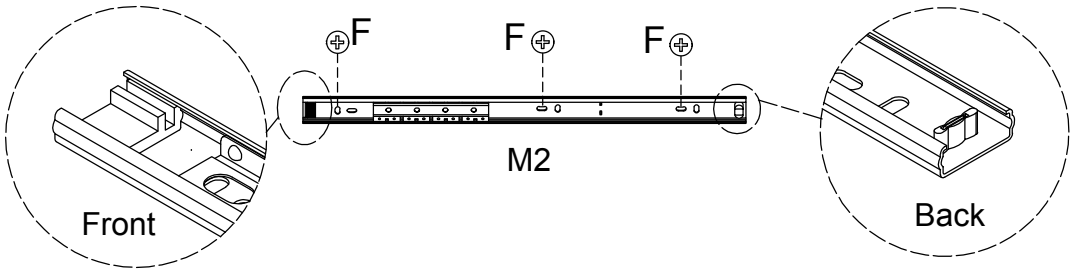

F
F
F
M2
Front
Back

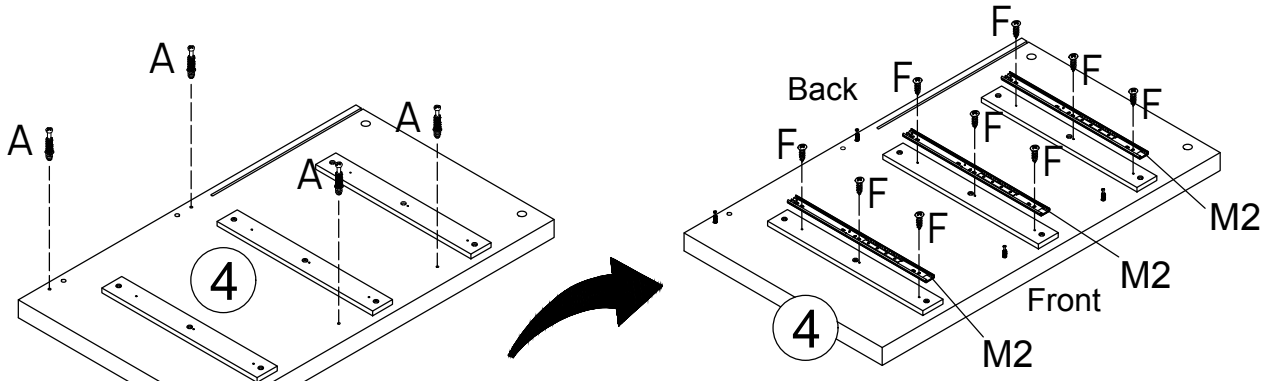

A
A
A
A
4
F
F
F
F
F
F
F
F
F
Back
M2
M2
M2
Front
4

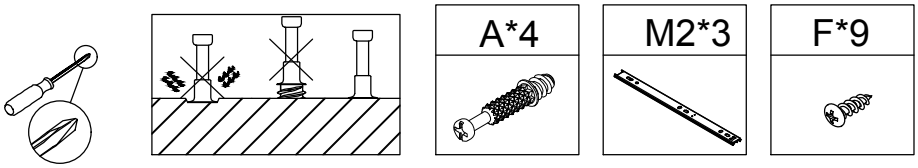
A*4
M2*3
F*9


Step 4

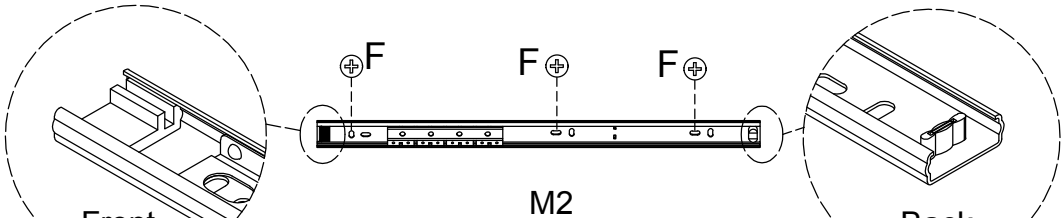
F
F
F
M2
Front
Back

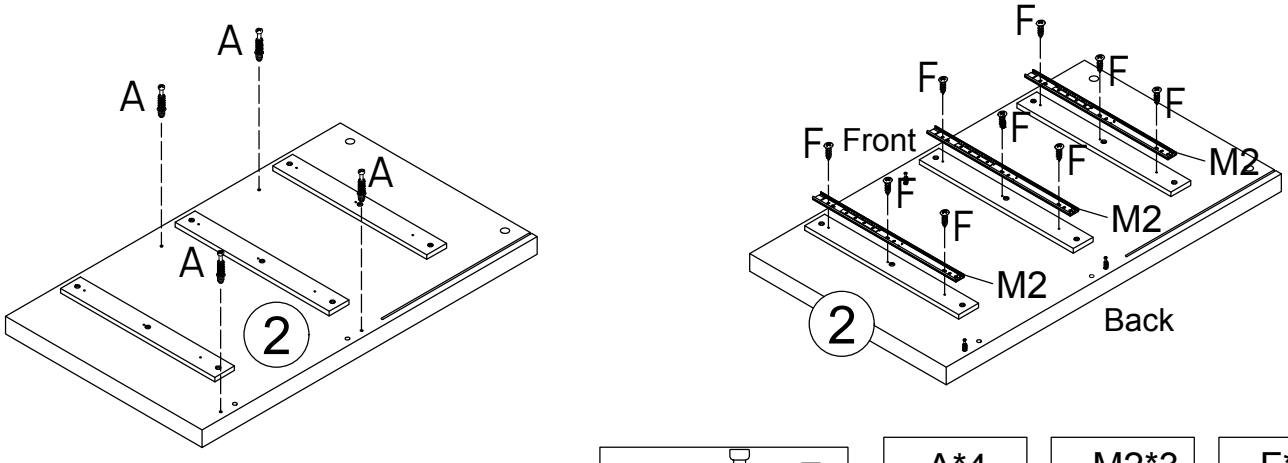
A
A
A
A
2
F
F
F
F
F
F
F
F
F
Front
M2
M2
M2
2
Back

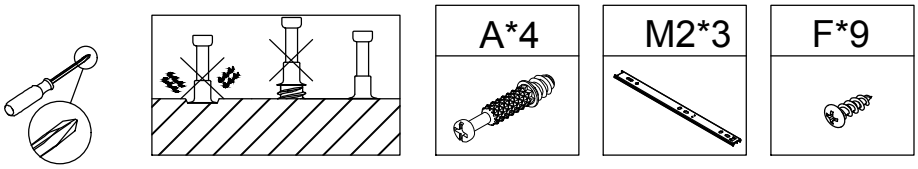

A*4
M2*3
F*9

Step 5

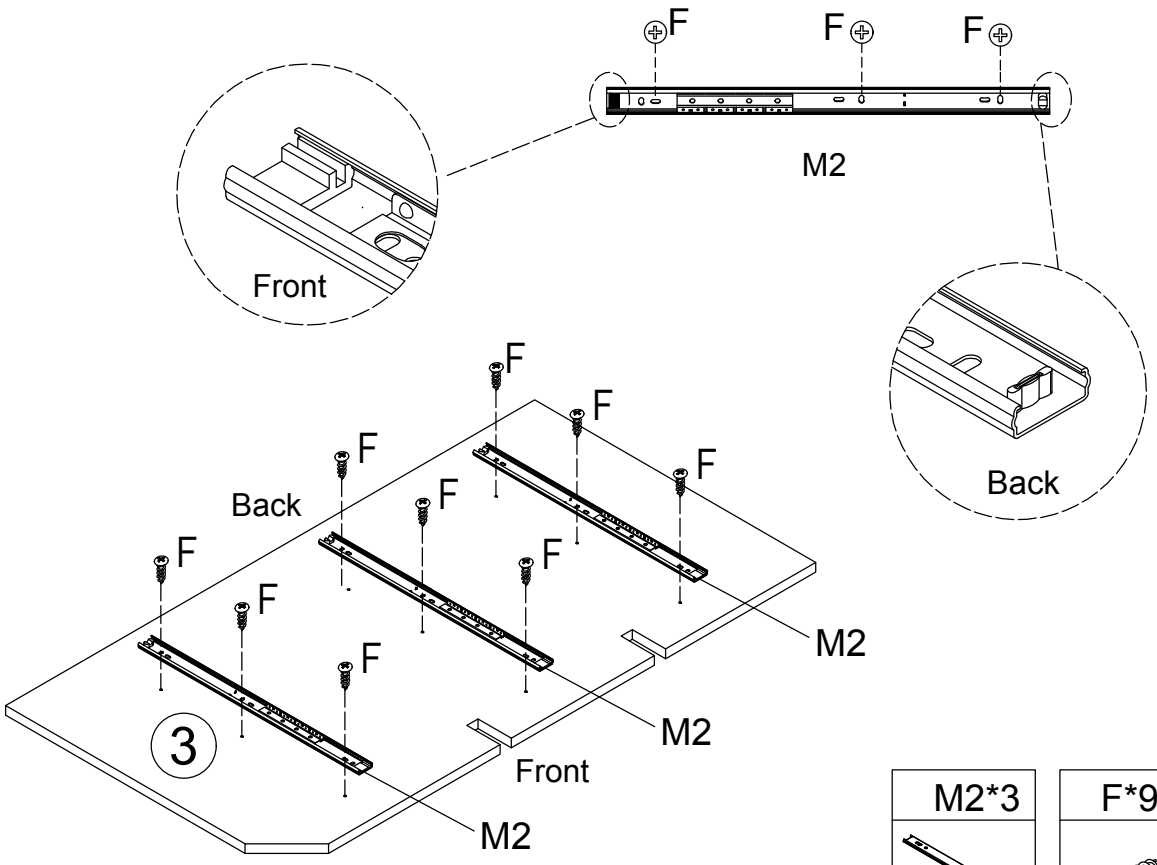

M2*3	F*9


Step 6

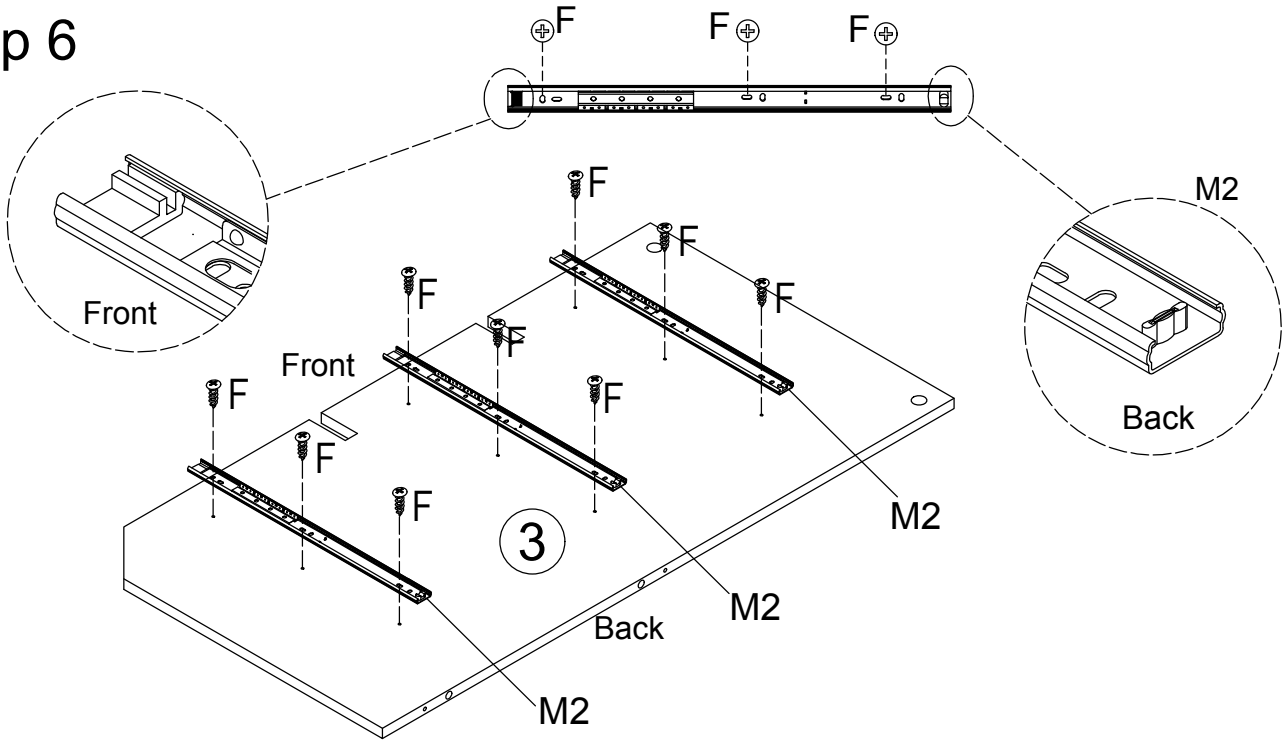

Attention:Ensure that installation is aligned with the position of the pilot hole


M2*3	F*9

Step 7

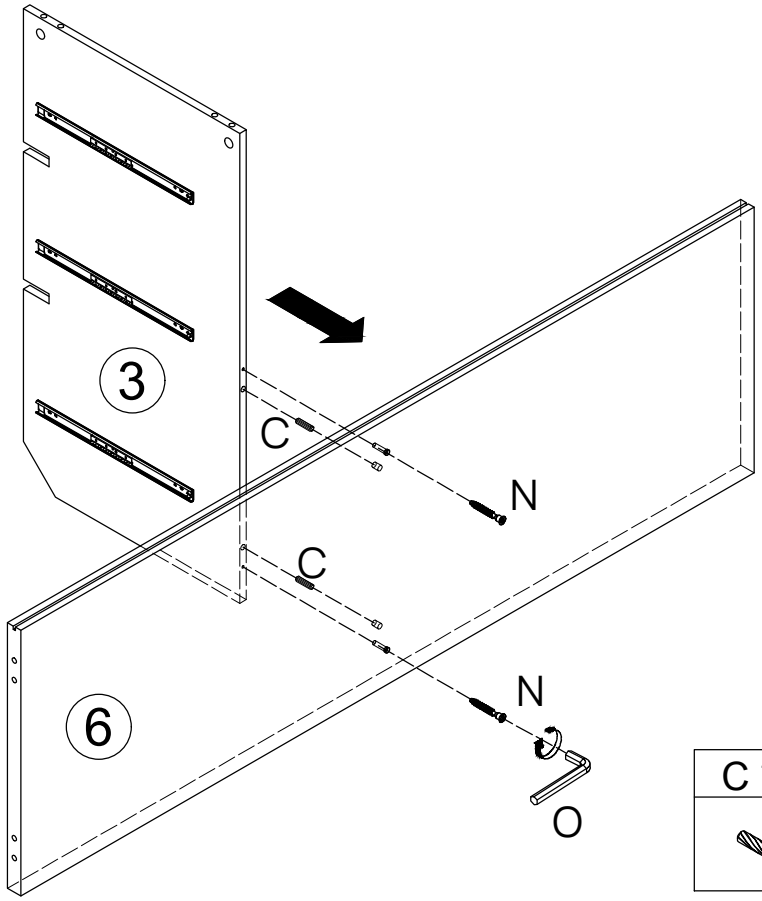


C * 2	N * 2	O * 1
		


Step 8

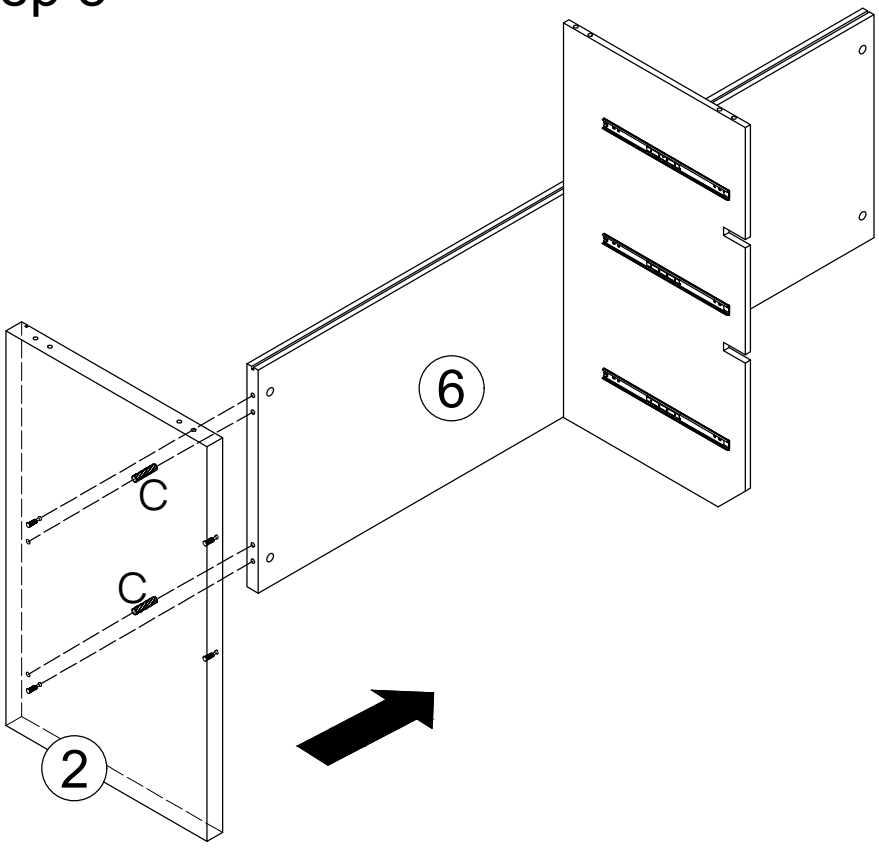


C * 2


Step 9

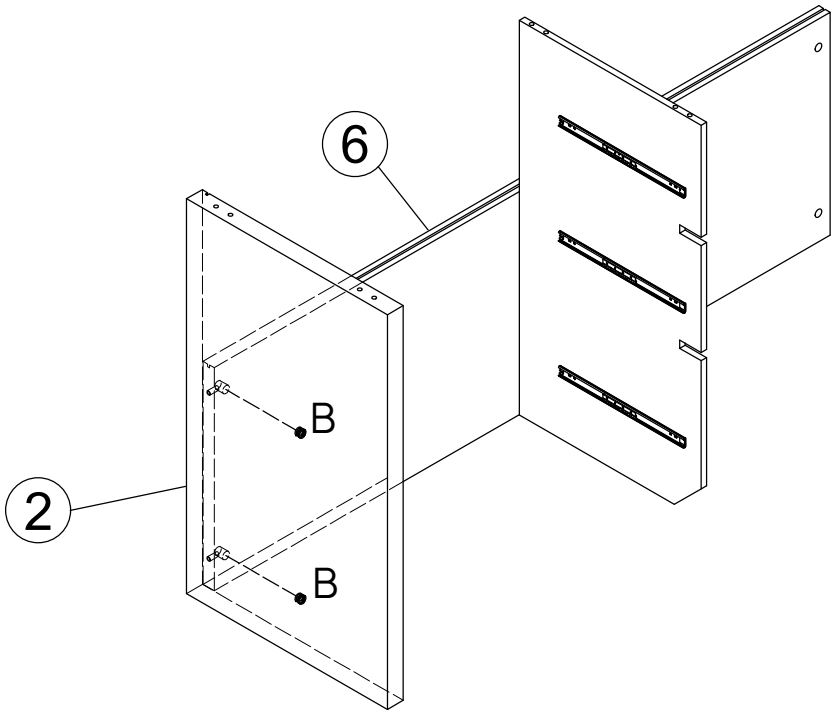


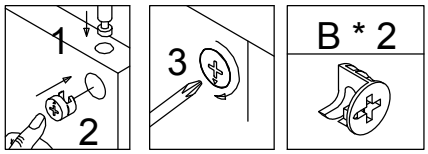


Step 10

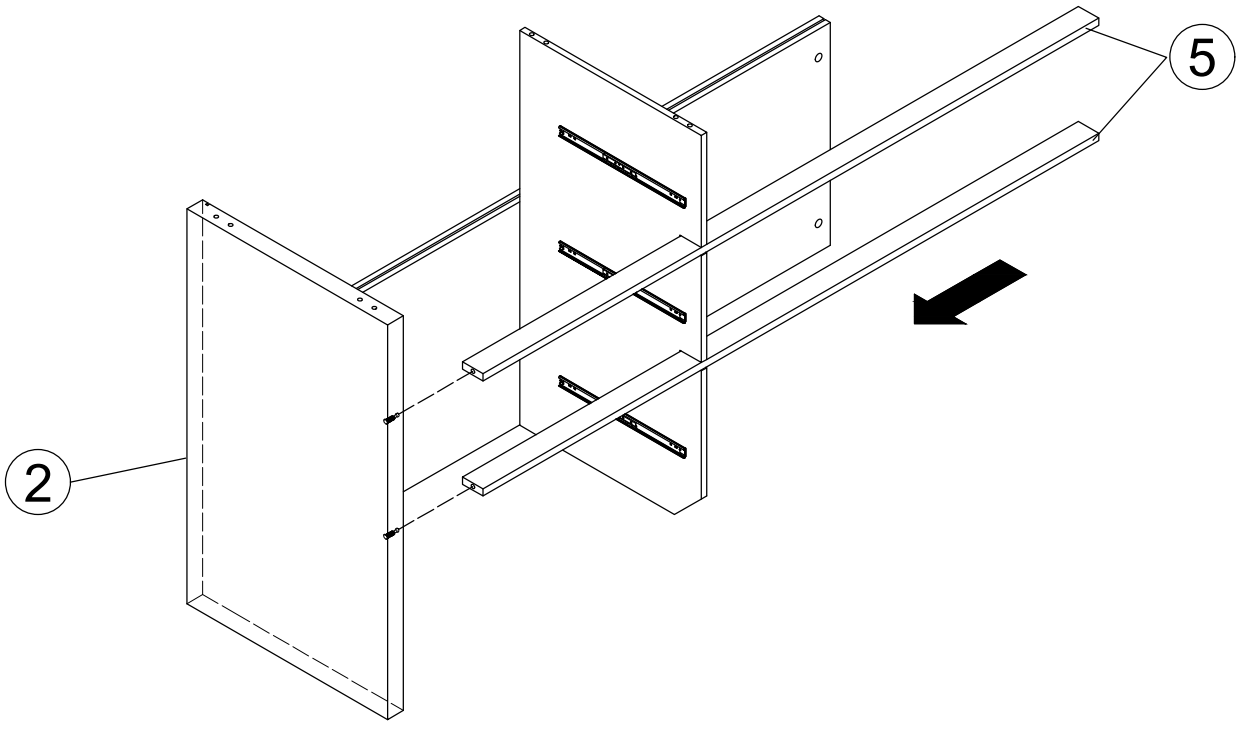



Step 11

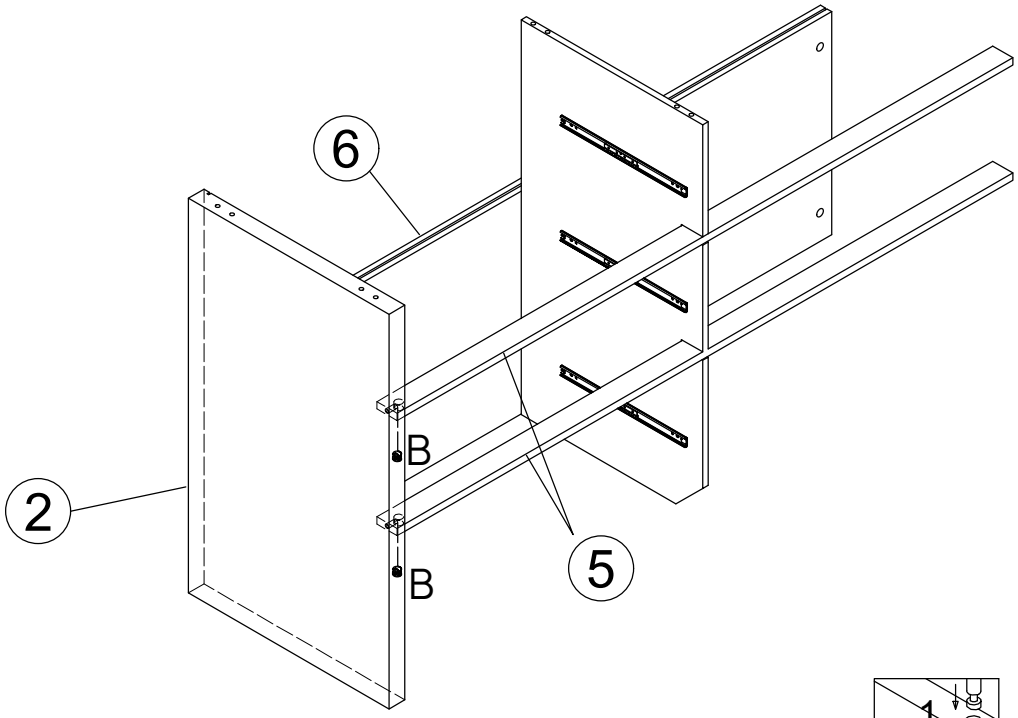

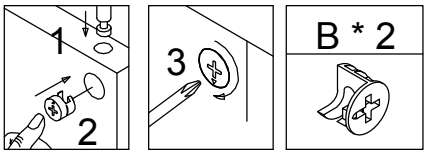



Step 12

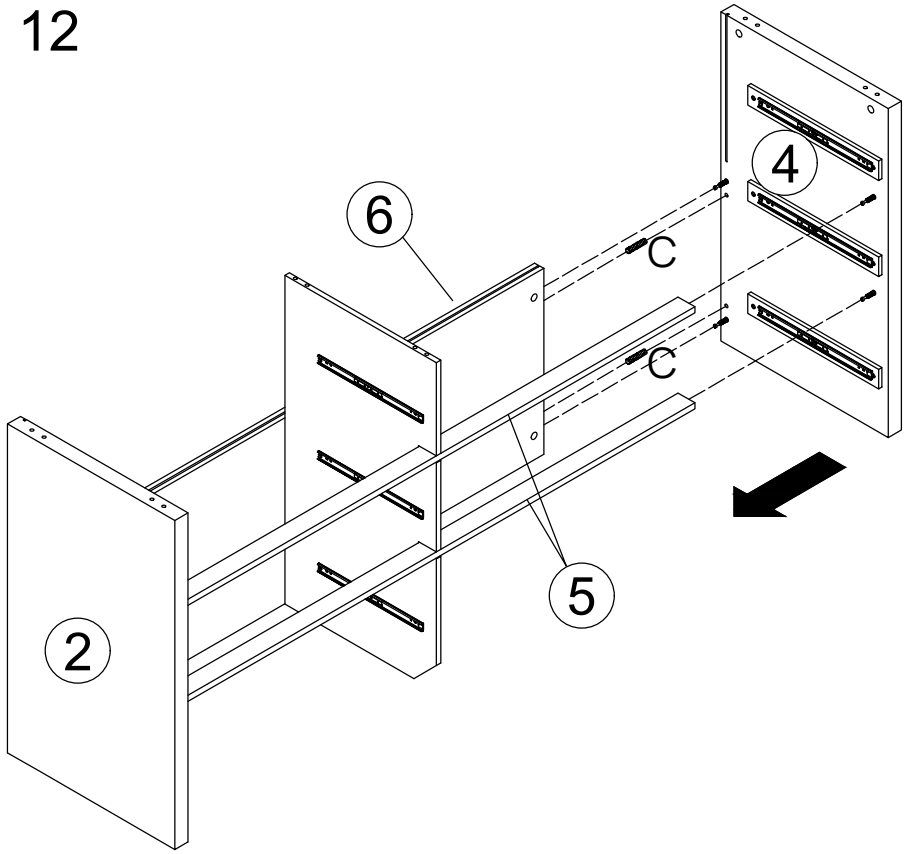

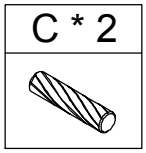


Step 13

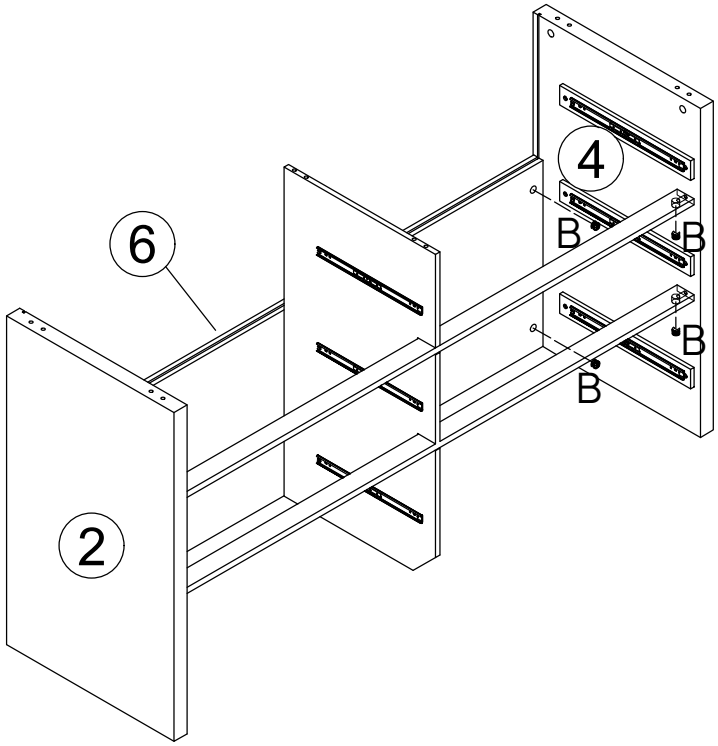


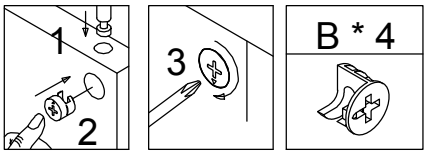


Step 14

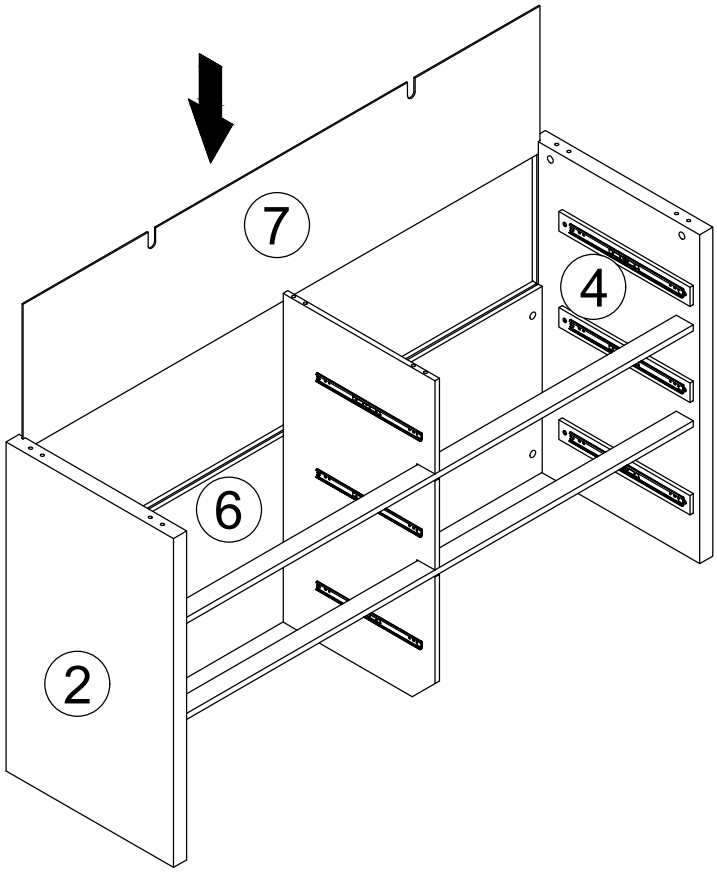



Step 15

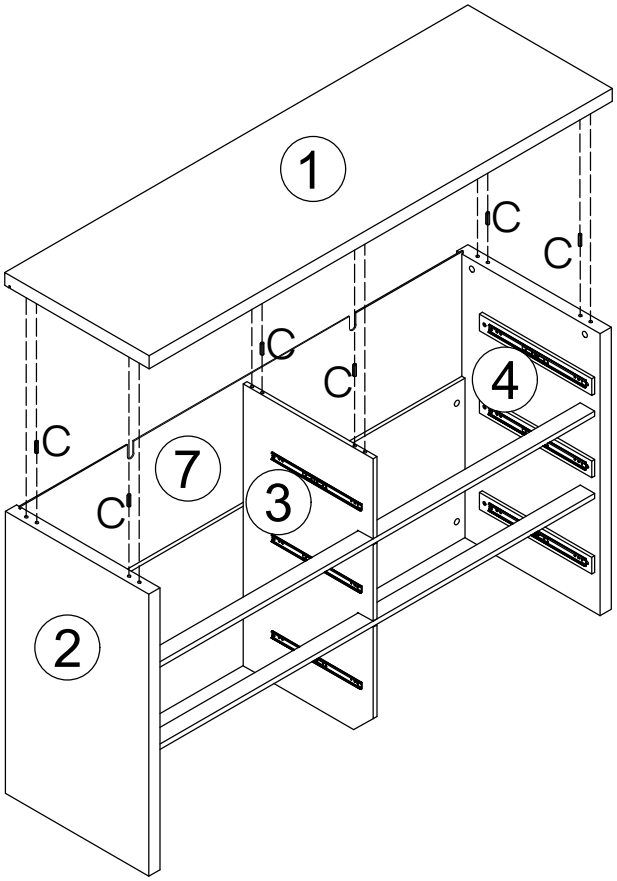

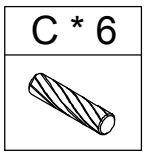


Step 16

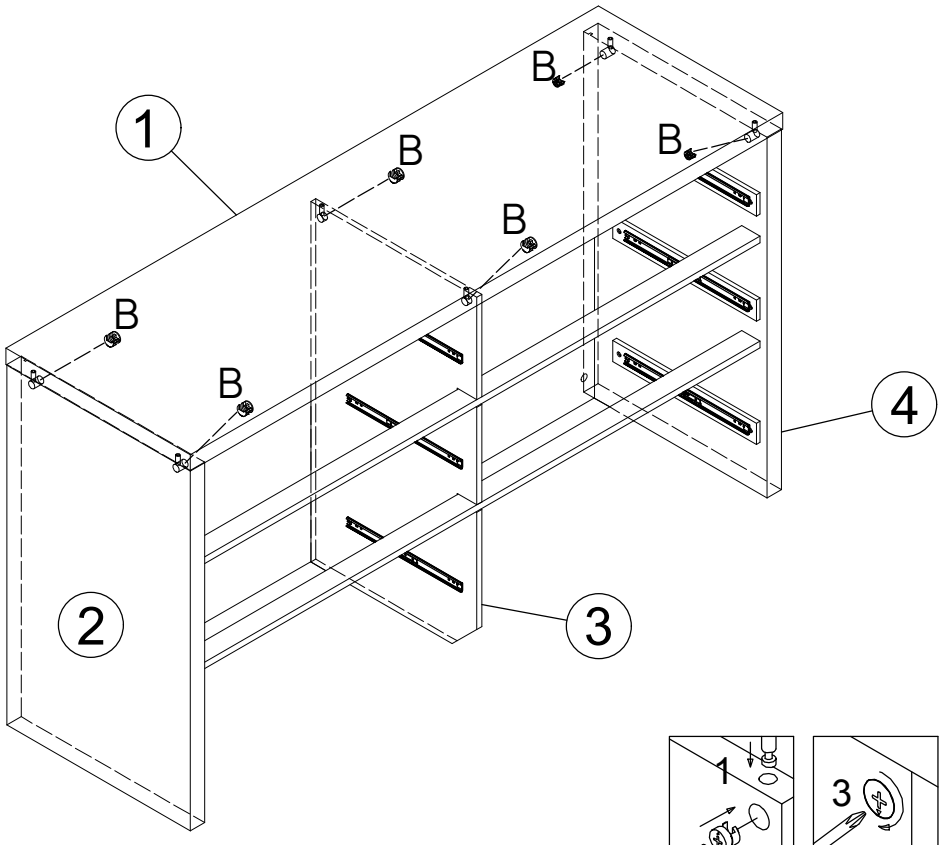


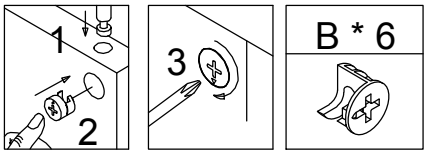

Step 17

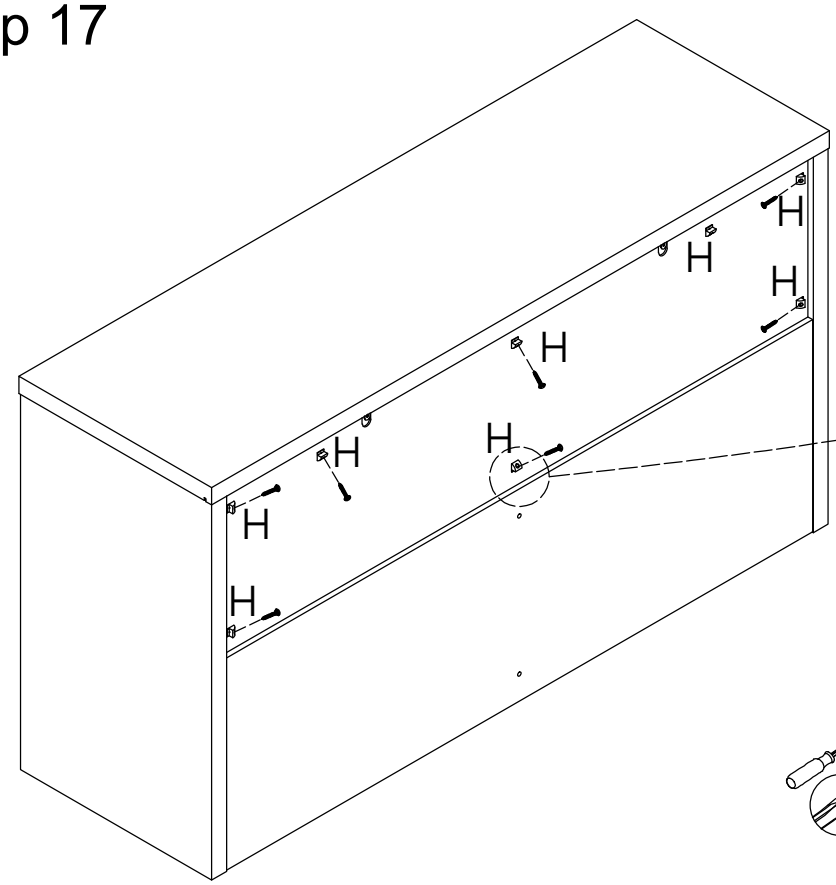



Must Be Installed

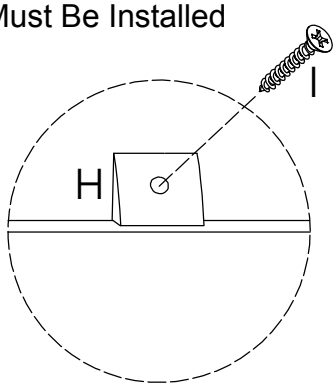


H * 8	I * 8
	


Step 18

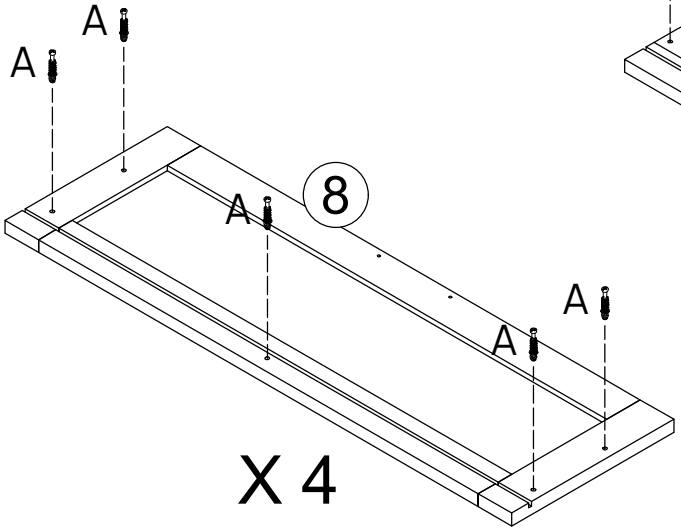

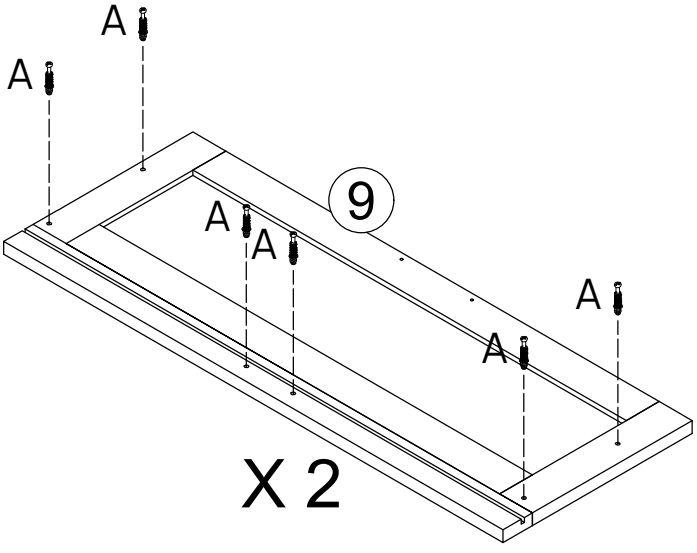




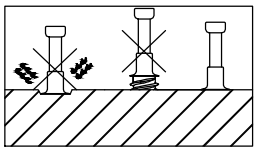


A*32


Step 19

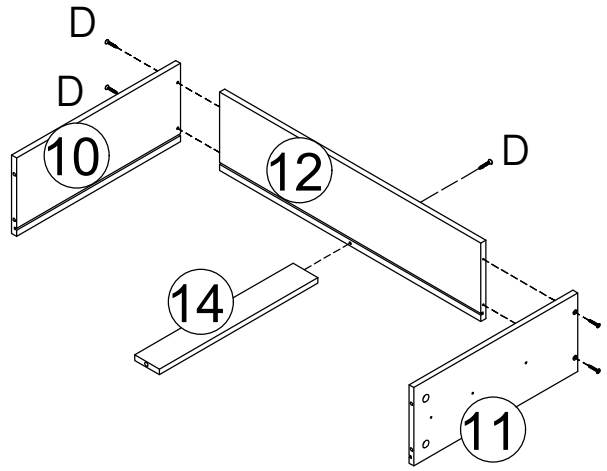


X 4

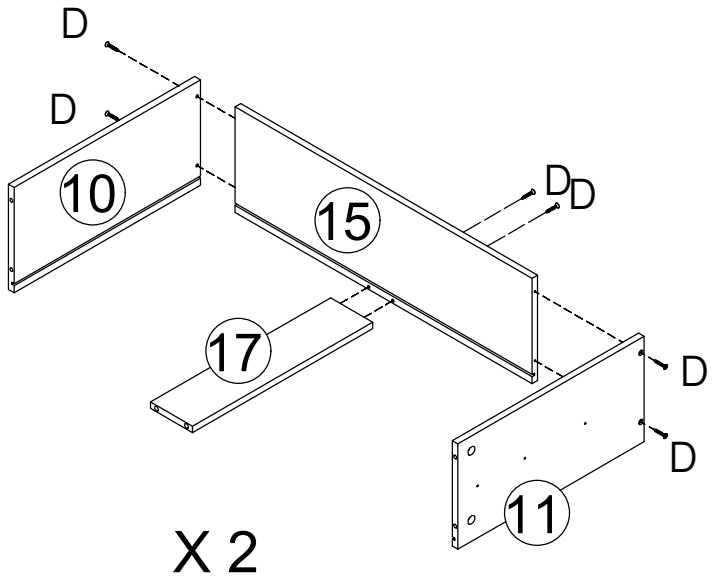


X 2

D * 32


Step 20

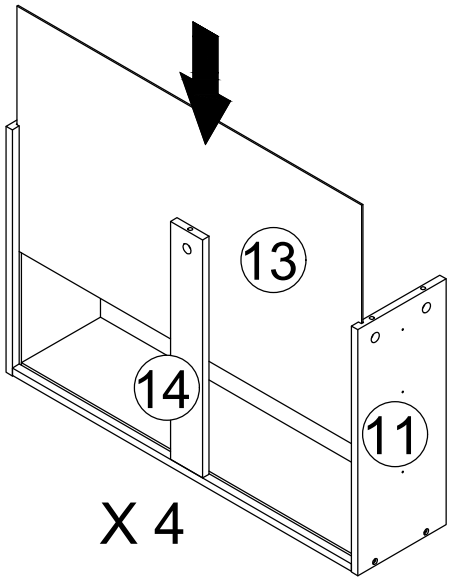


X 4

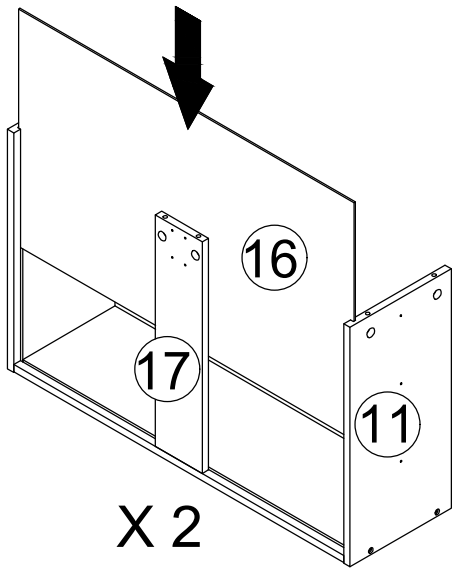

X 2


Step 21


X 2

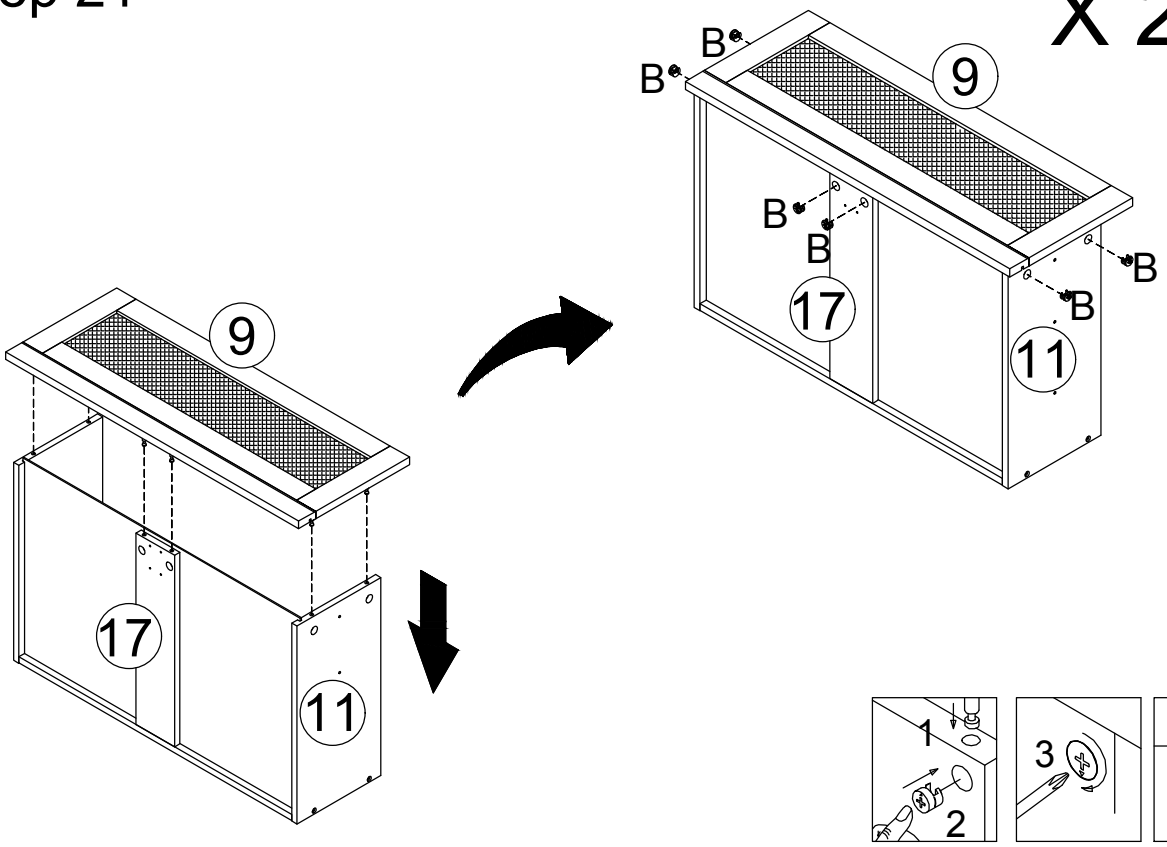


Step 22

X 4

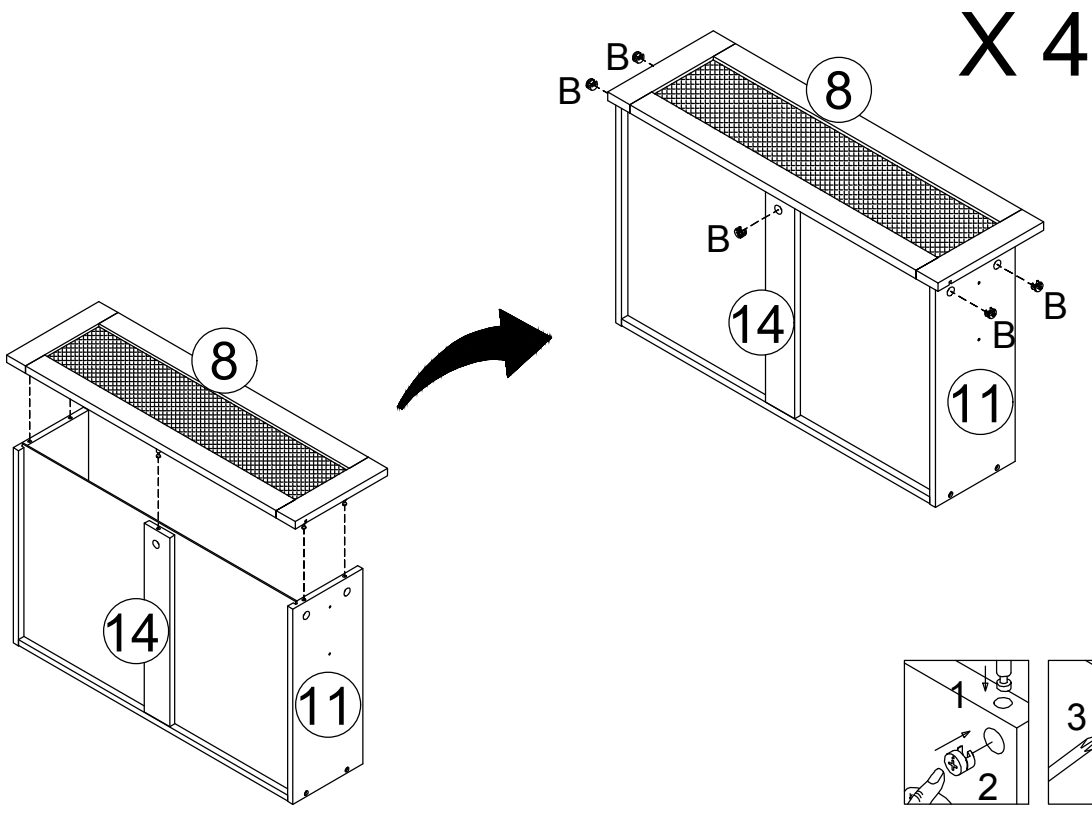


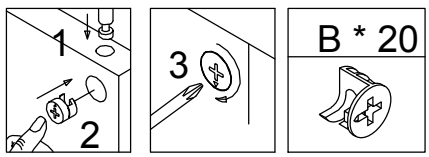


Step 23

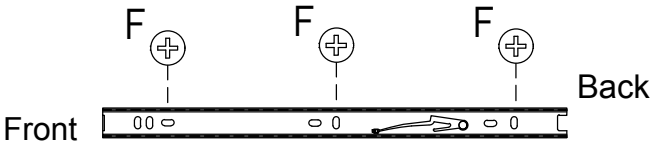


M1

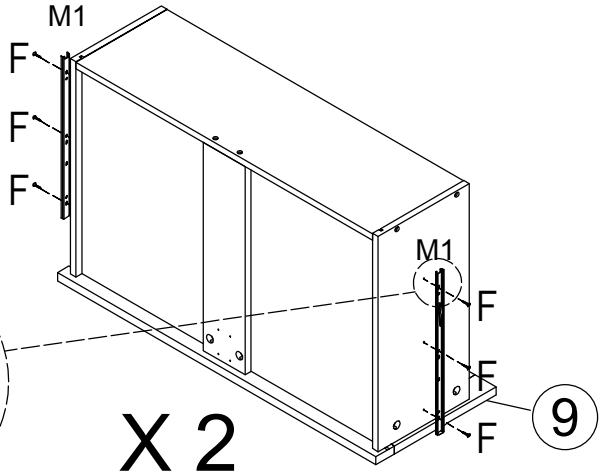

X 2

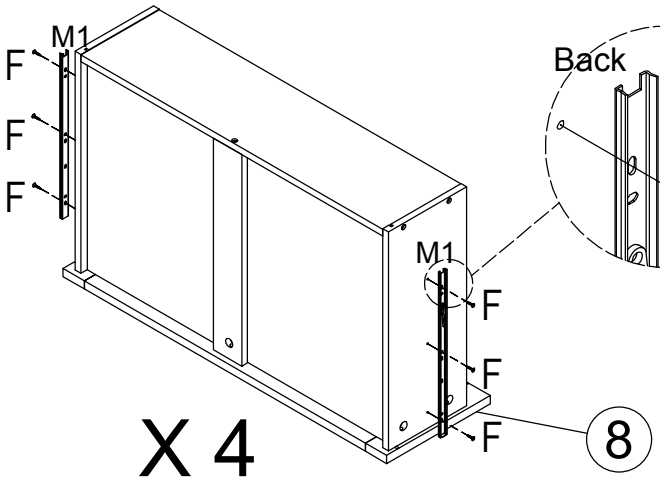


X 4

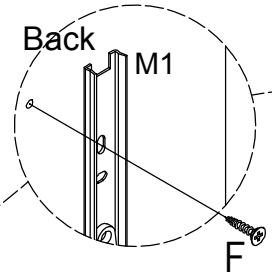



M1*12	F*36
	

Step 24

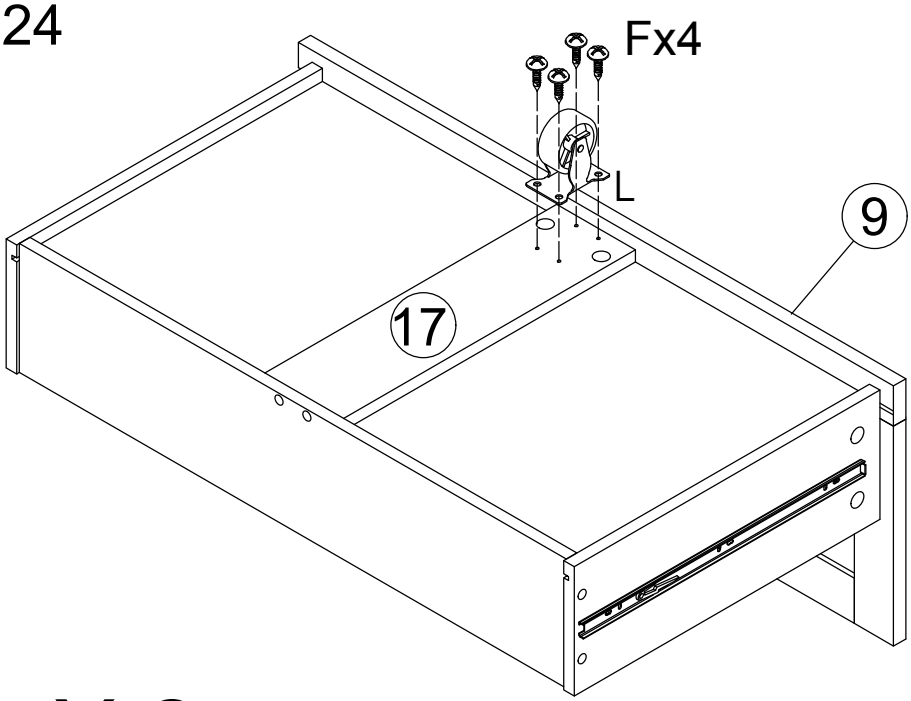


X 2




L*2	F*8
	


Step 25

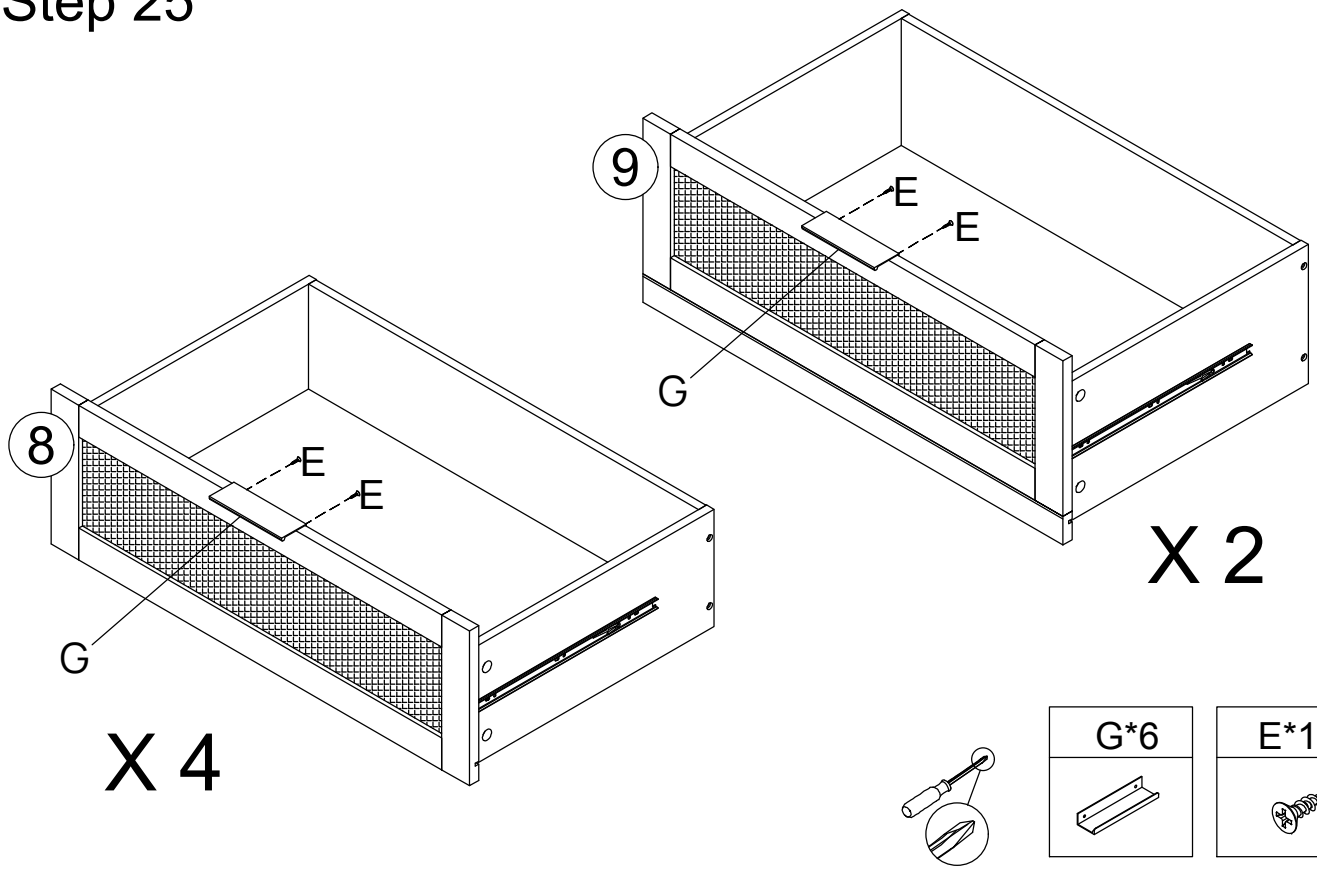

Step 26

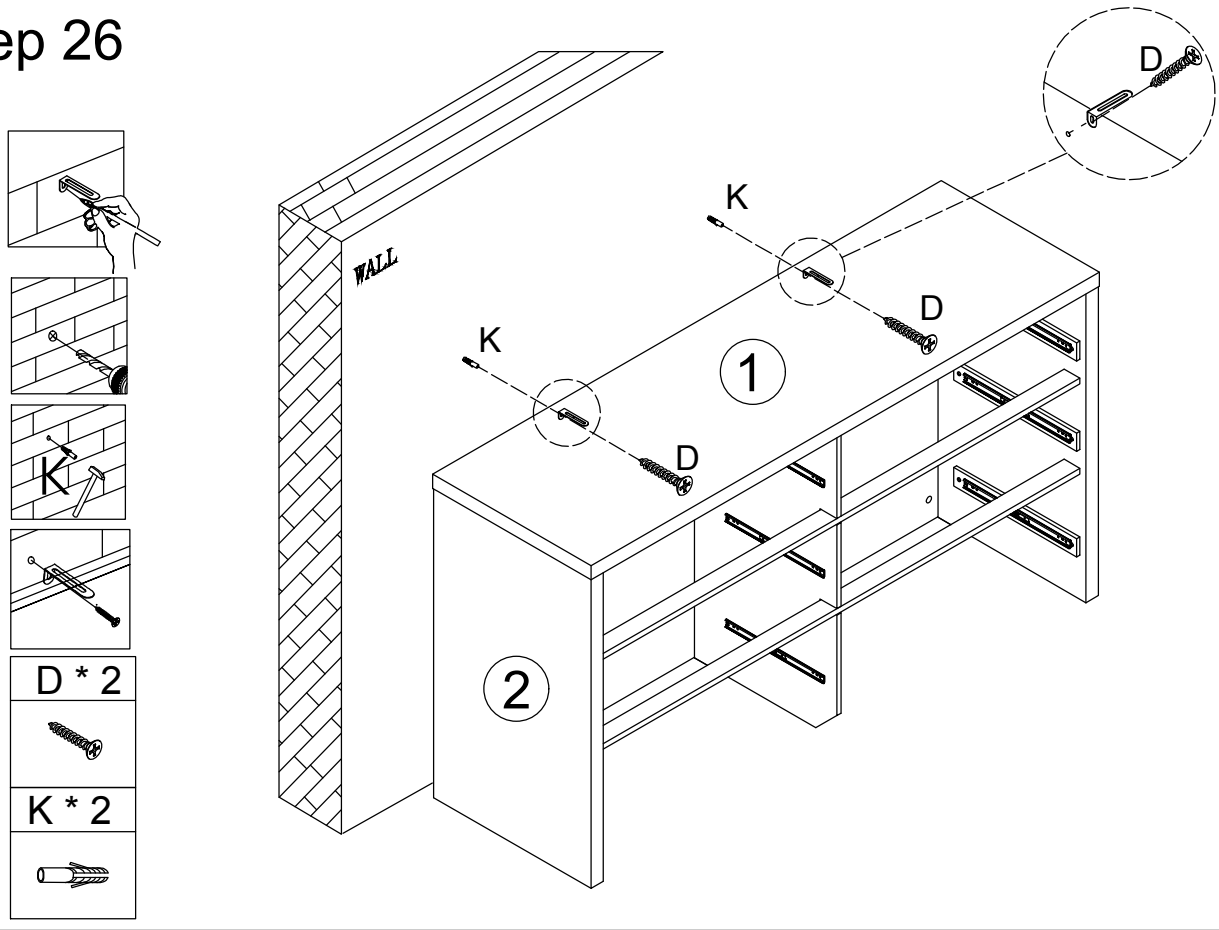



Step 27

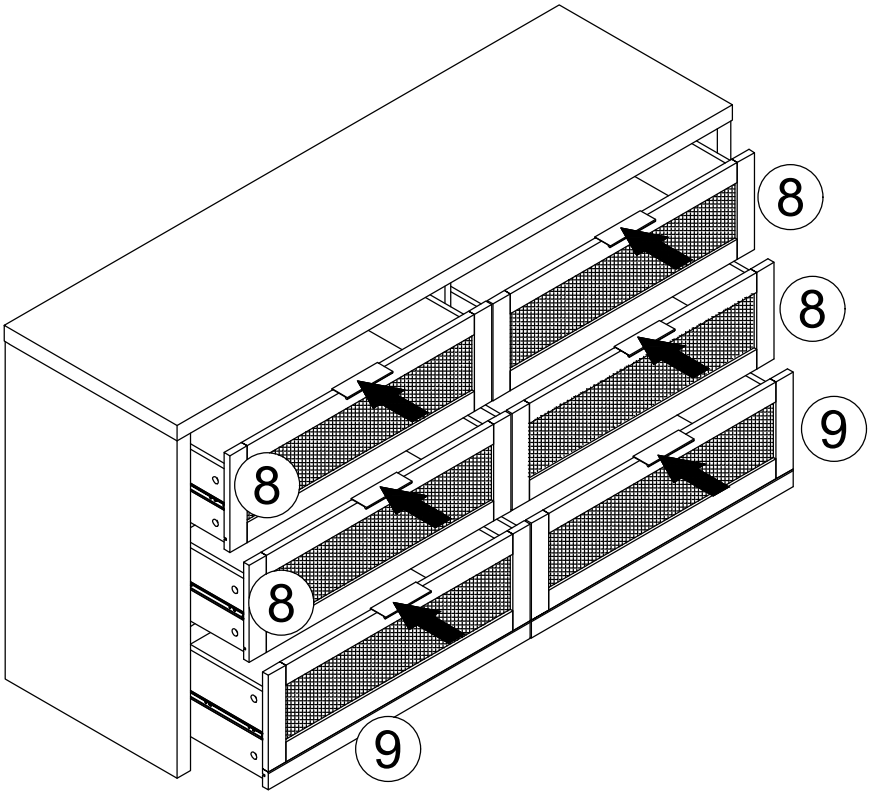

Please install them strictly according to the labels.

Step 28

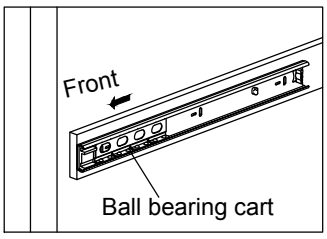

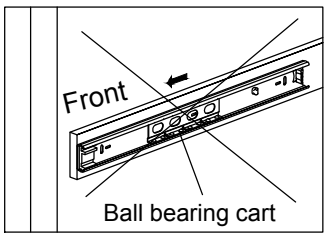

Note：Extend the ball bearing cart fully forward, then align the slide runners on the assembled drawer with the slide tracks and carefully push the drawer from both sides simultaneously until it stops

Step 29

