


ASSEMBLY INSTRUCTION

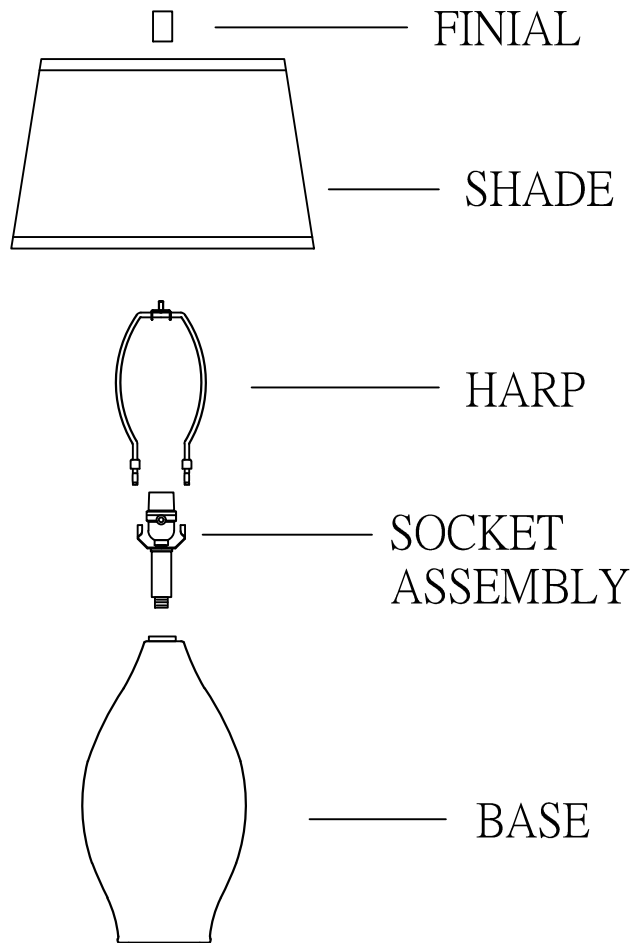

1. SCREW THE SOCKET ASSEMBLY ONTO THE BASE BE CAREFUL NOT TO TWIST WIRE TIGHTEN SECURELY
2. SQUEEZE THE OPENING OF THE HARP AND INSERT IT CAREFULLY INTO THE HORNS OF THE BASE
3. PUT ON THE SHADE AND AIM AT THE SCREW ON THE HARP
4. USE THE FINIAL AND SCREW THE SHADE AND THE HARP TOGETHER