


Assembly Instructions

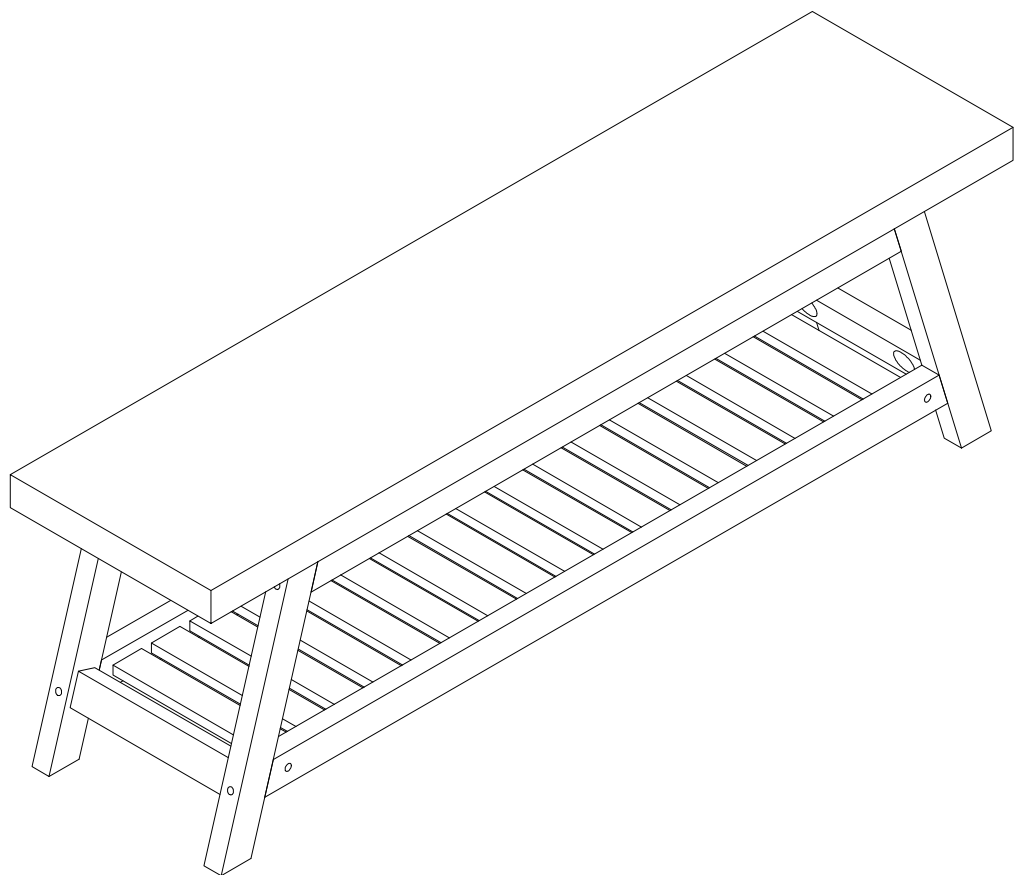


Shoe Stool

Model No.
HOGA-LD0015
HOGA-LD0055

Contact Us




We're here to help you.

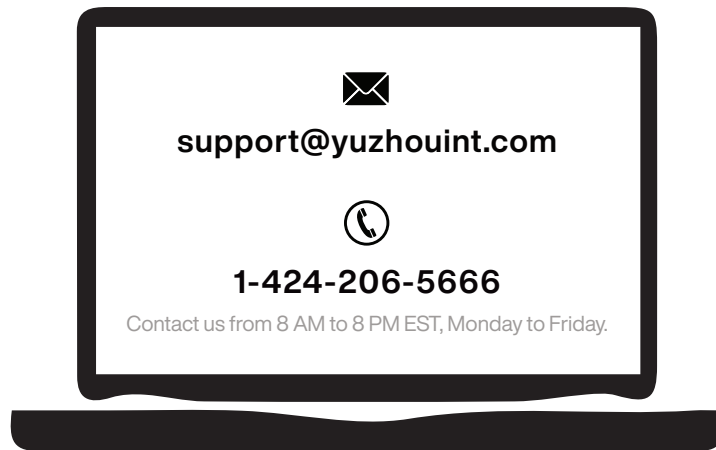

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

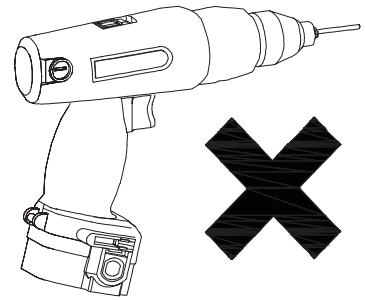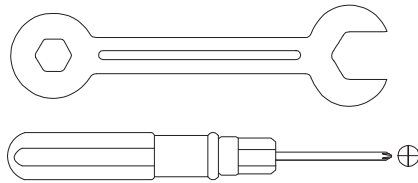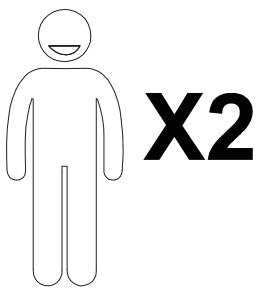



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

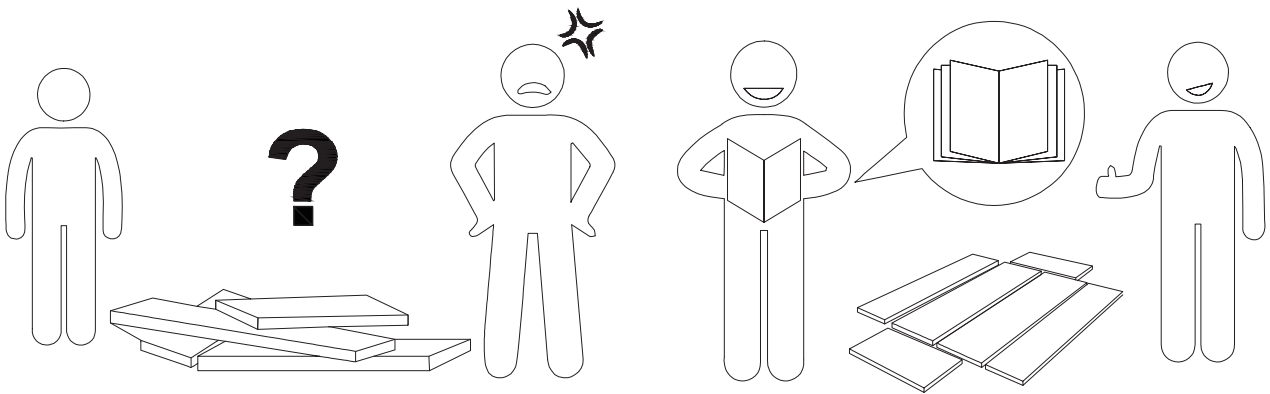

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.








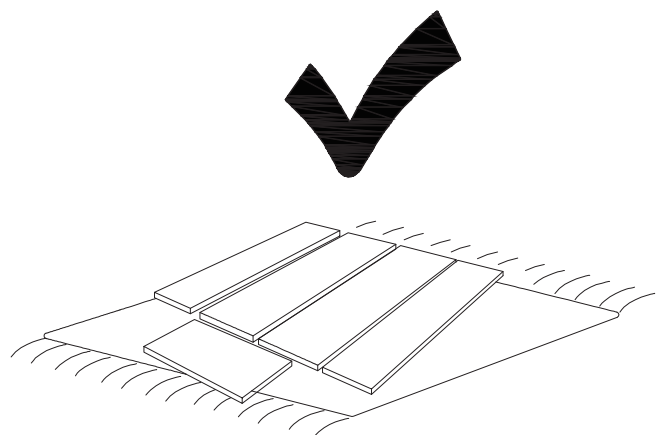
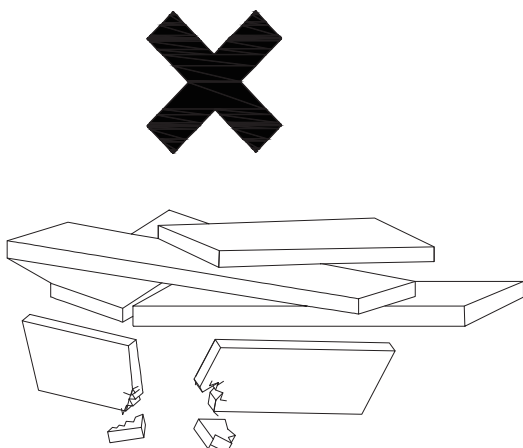


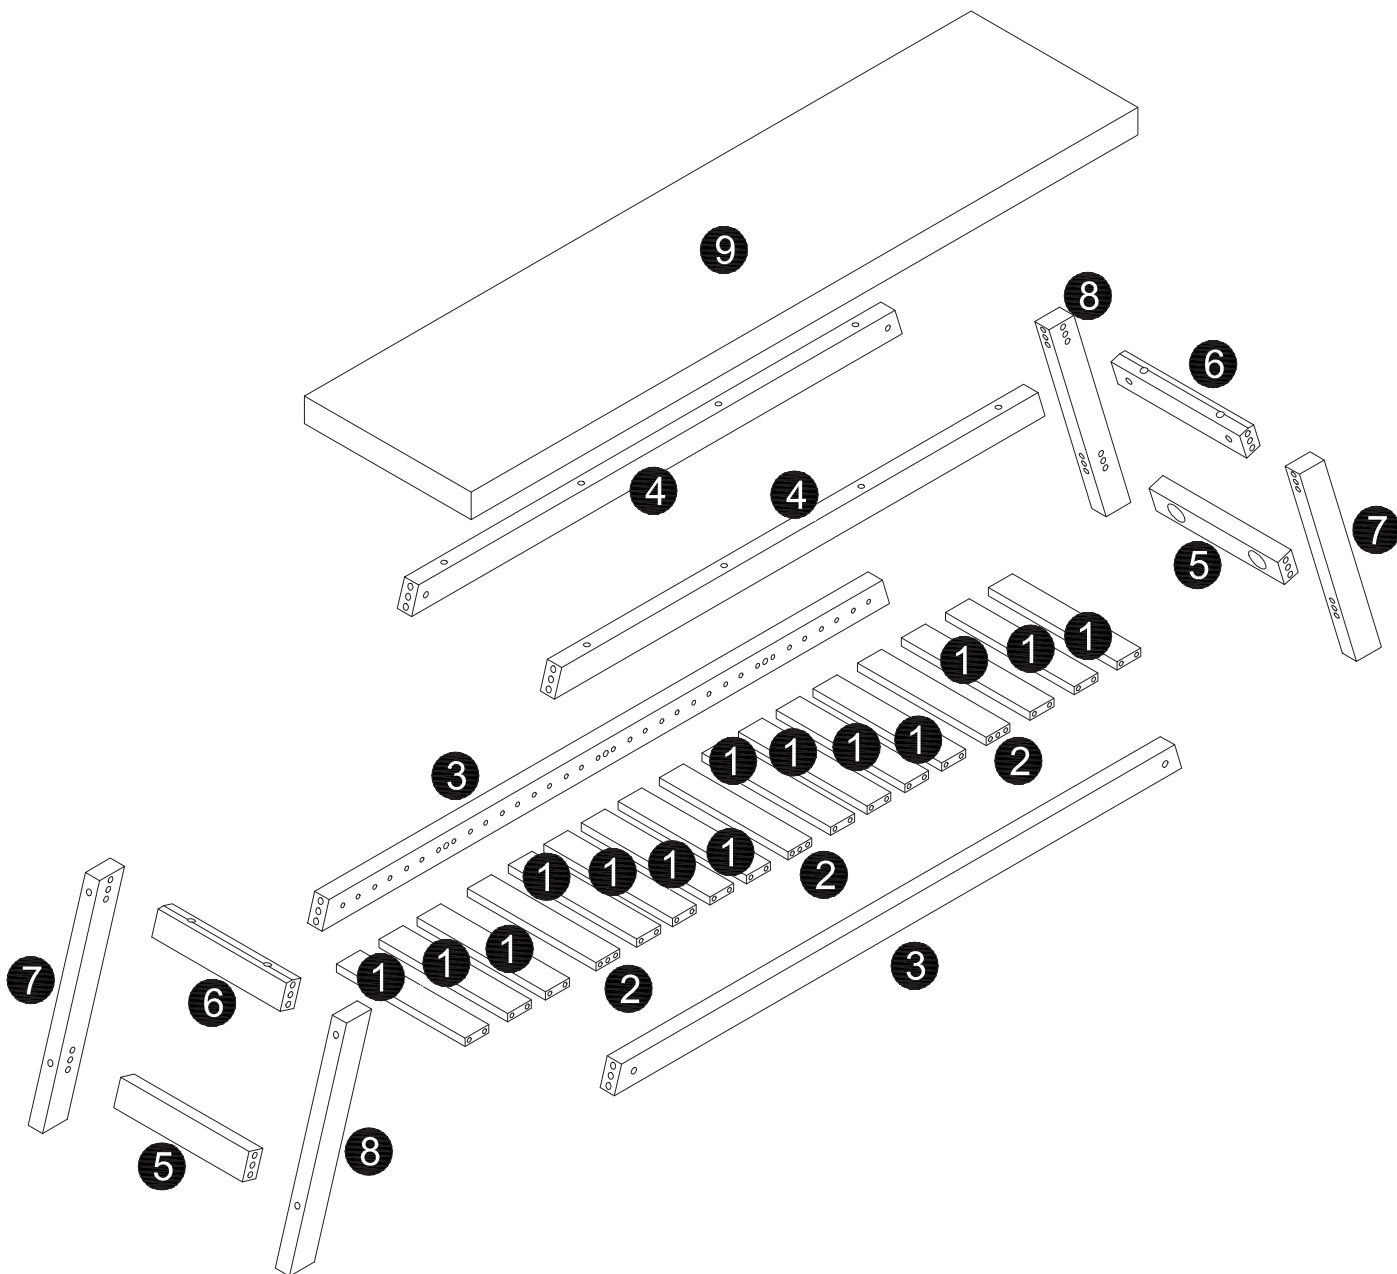





⚠ Caution



Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List

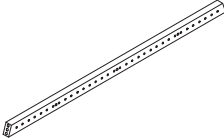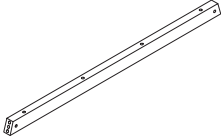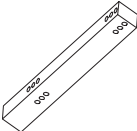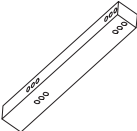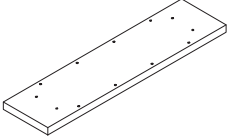1  14 pcs	2  3 pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  2 pcs	8  2 pcs	9  1 pc	

Hardware List

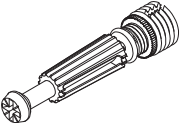
A	B	C	D	E	F
					
M6x40mm	Ø15x12mm	Ø8x30mm	Ø6x50mm	Ø16x3mm	Ø6x70mm
10 pcs	10 pcs	100 pcs	8 pcs	4pcs	4 pcs

G	H	I	J	K	L
				 M6 Wrench	
4 pcs	M6 4 pcs	Ø6x60mm 8 pcs	M6 8 pcs	1 pc	1 pc


M	N				
					
Ø21 4 pcs	Ø4x50mm 4 pcs				

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

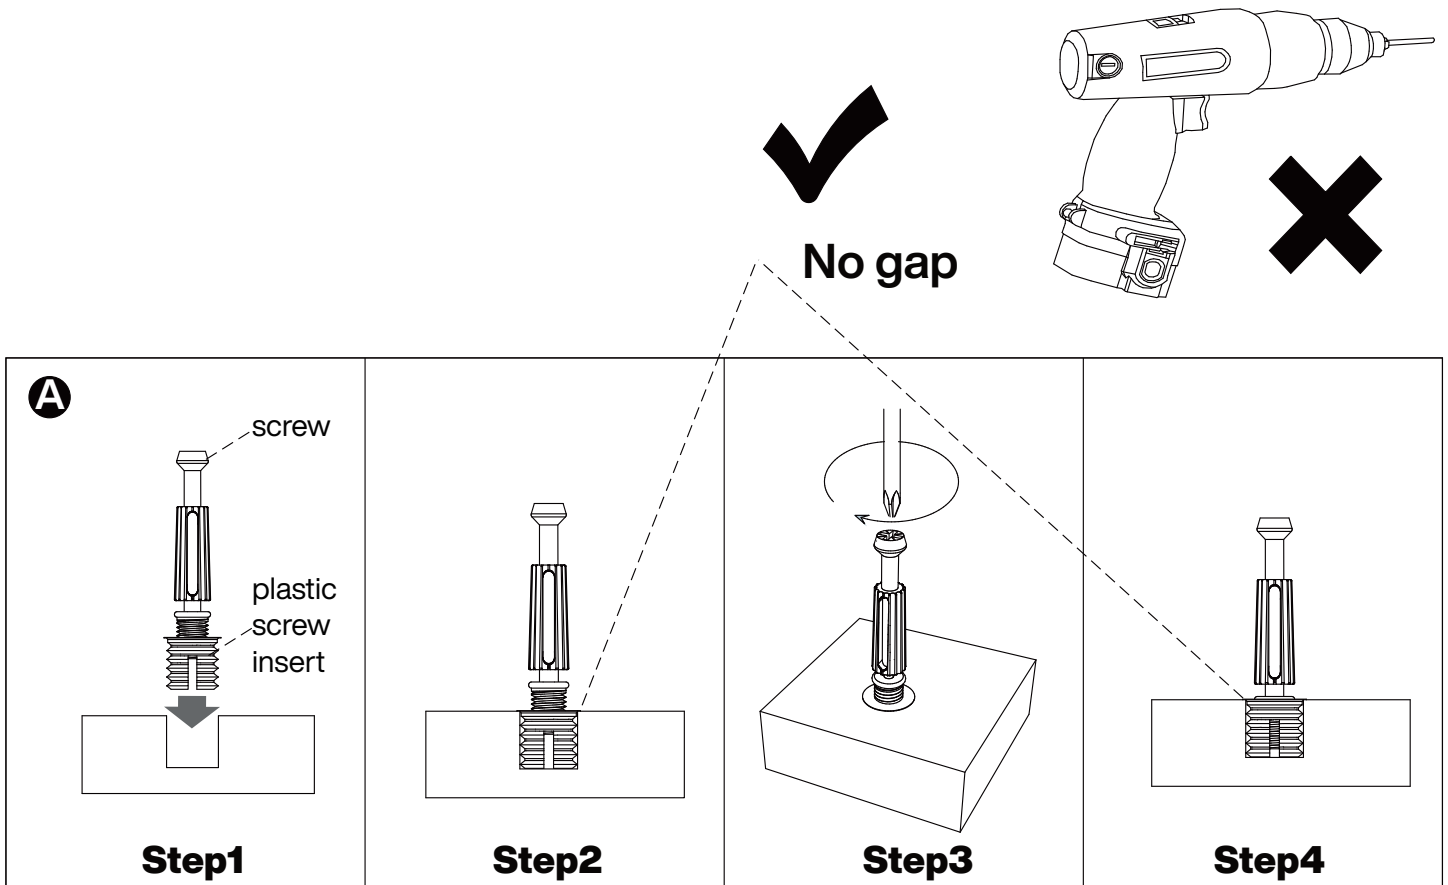



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

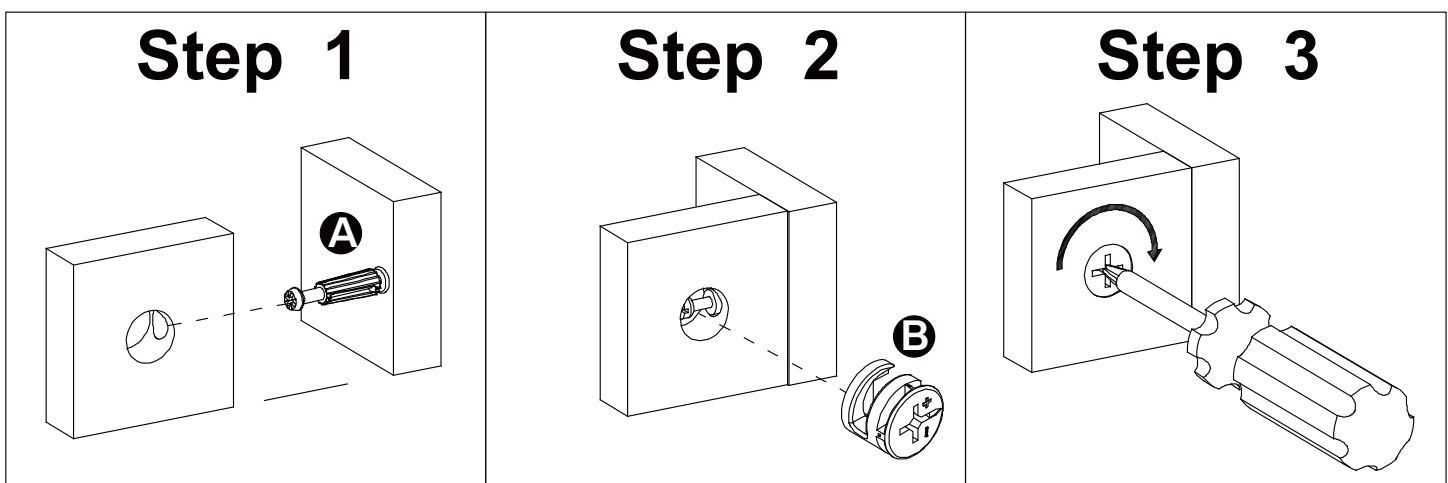


1

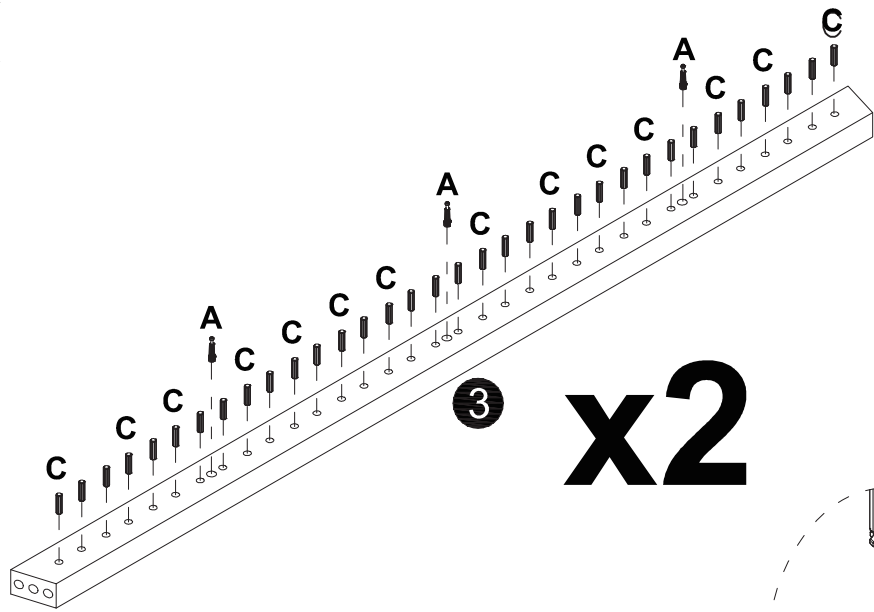

A	C
	
M6x35mm	Ø8x30mm
6pcs	68pcs

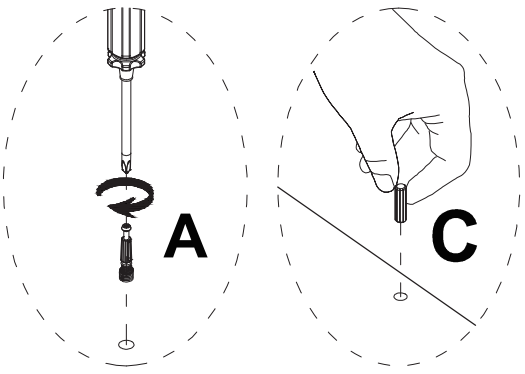


2

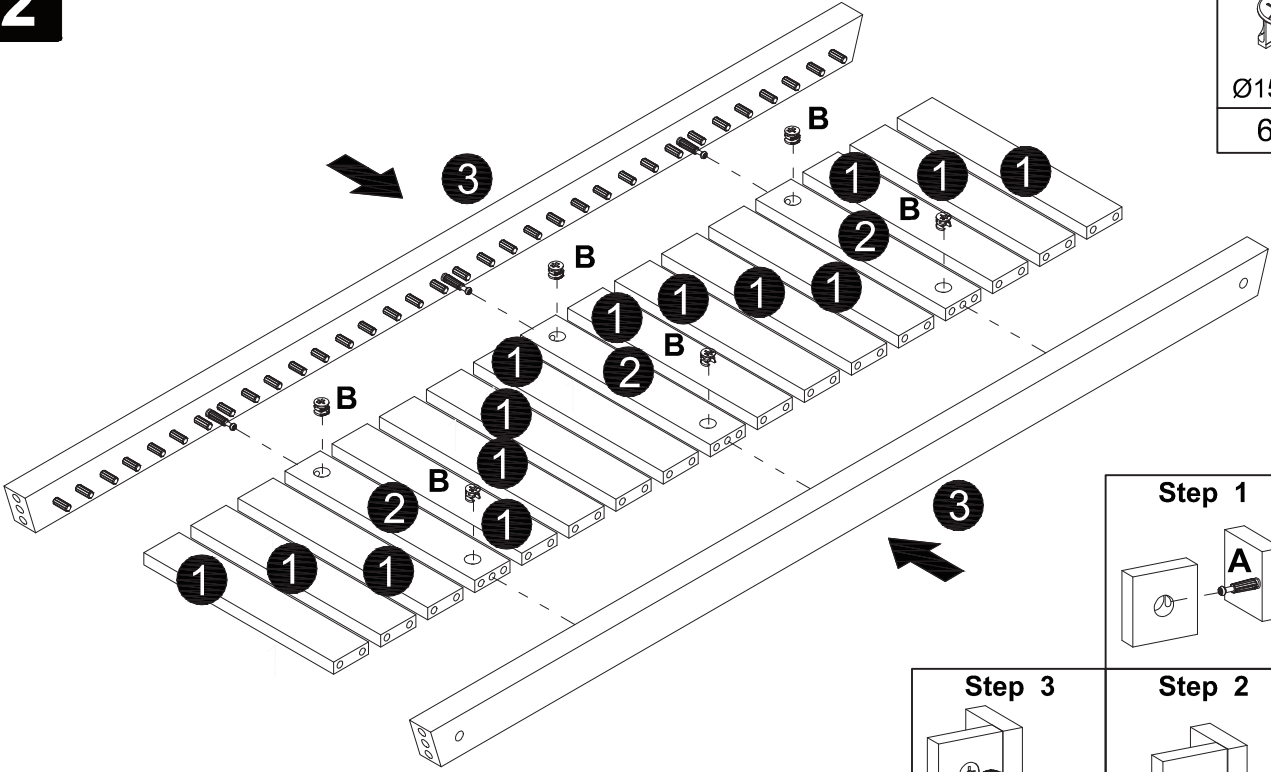




B

Ø15x12mm
6pcs


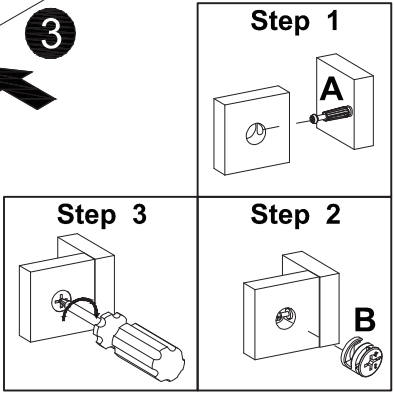


3



F	A	C
		
Ø6x70mm	M6x35mm	Ø8x30mm
4pcs	4pcs	32pcs

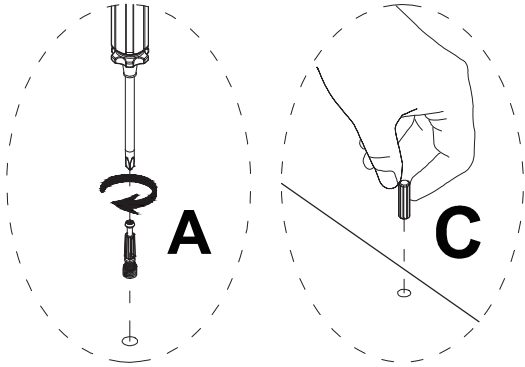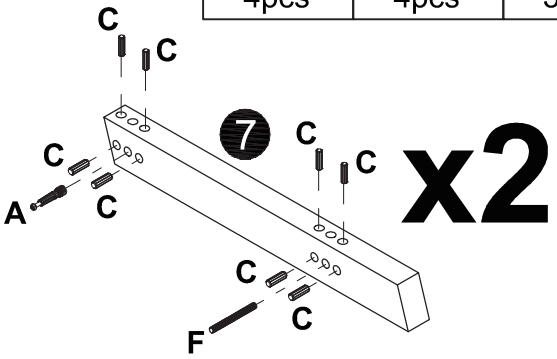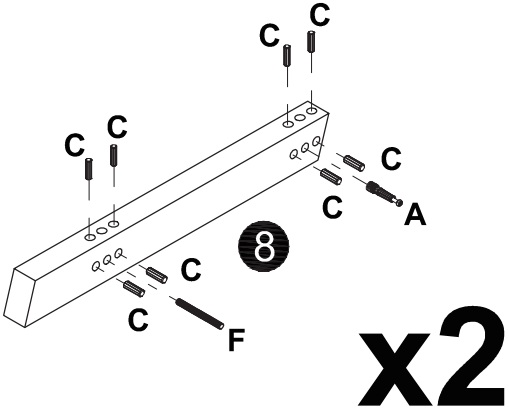


4

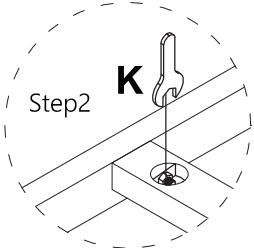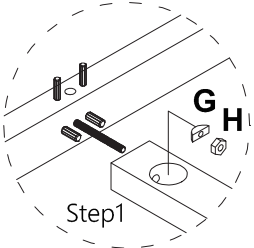

H	G	B
		
M6		Ø15x12mm
4pcs	4pcs	4pcs

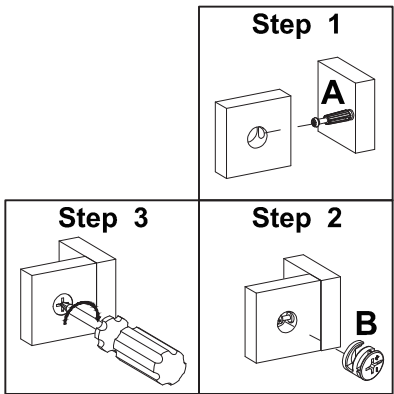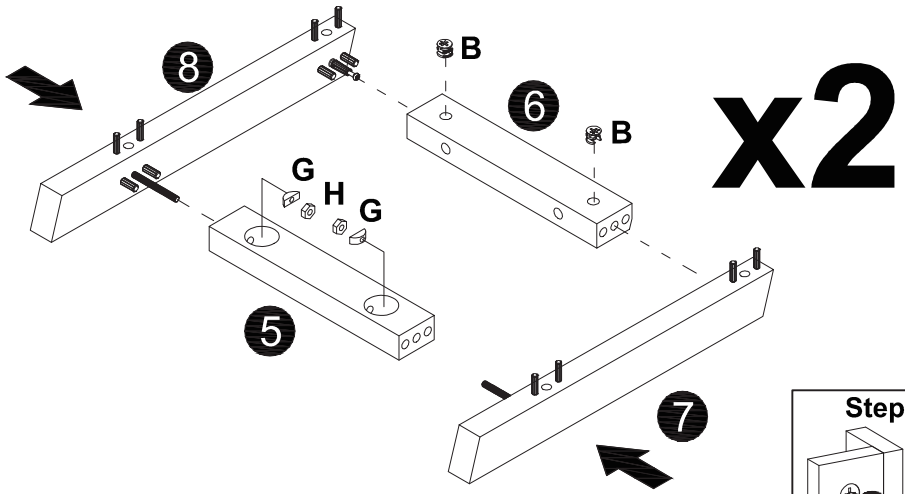


5

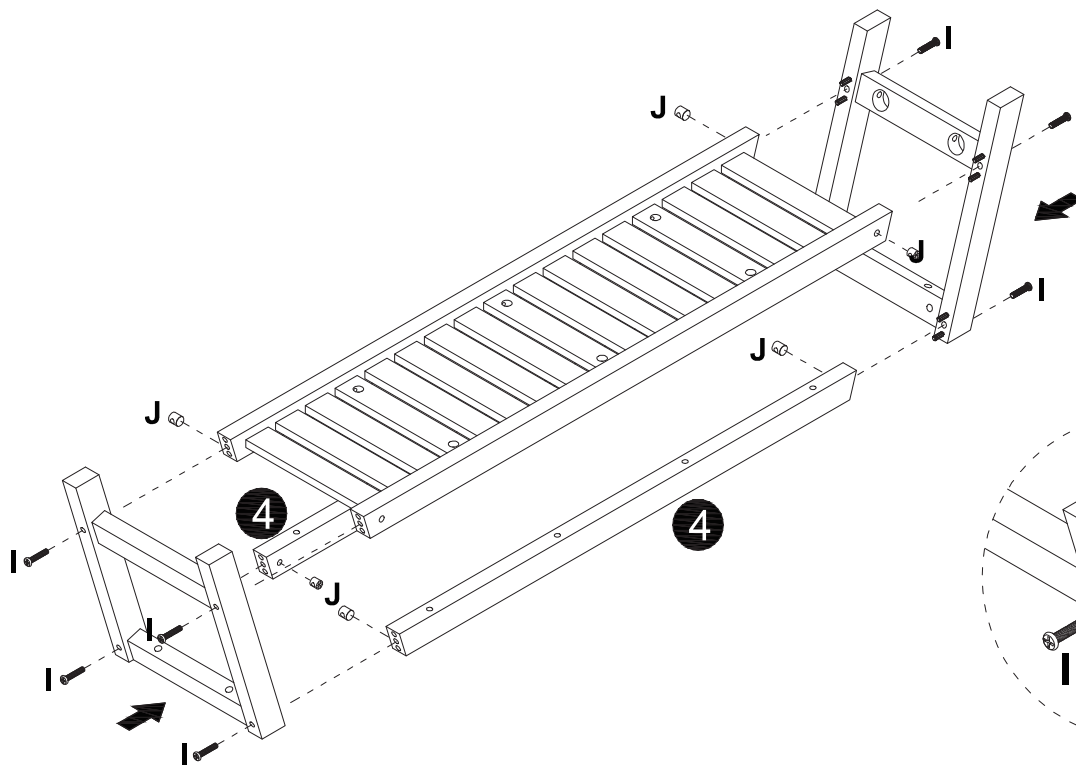


J	I
	
M6	Ø6x60mm
8pcs	8pcs

6

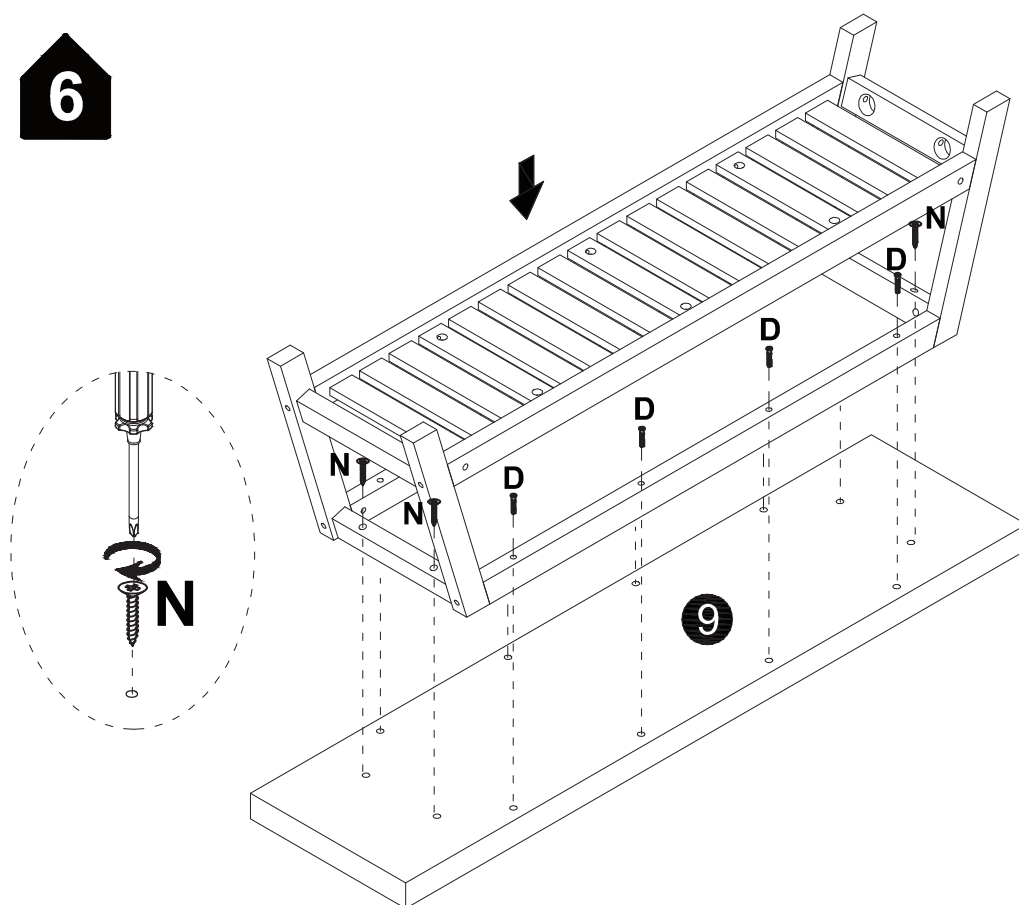

D	N
	
Ø6x50mm	Ø4x50mm
8pcs	4pcs


7

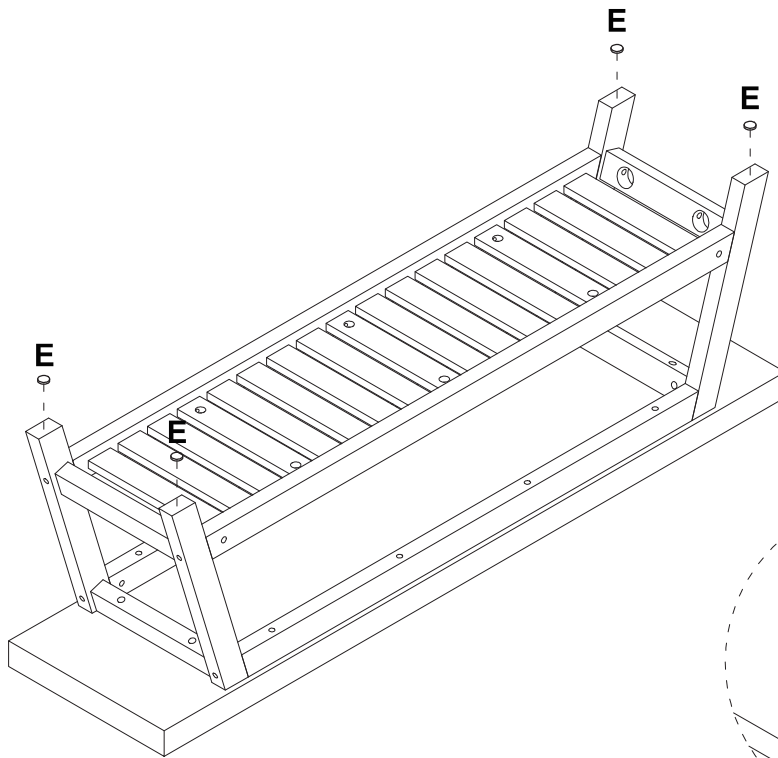



E

Ø16x3mm
4pcs

8

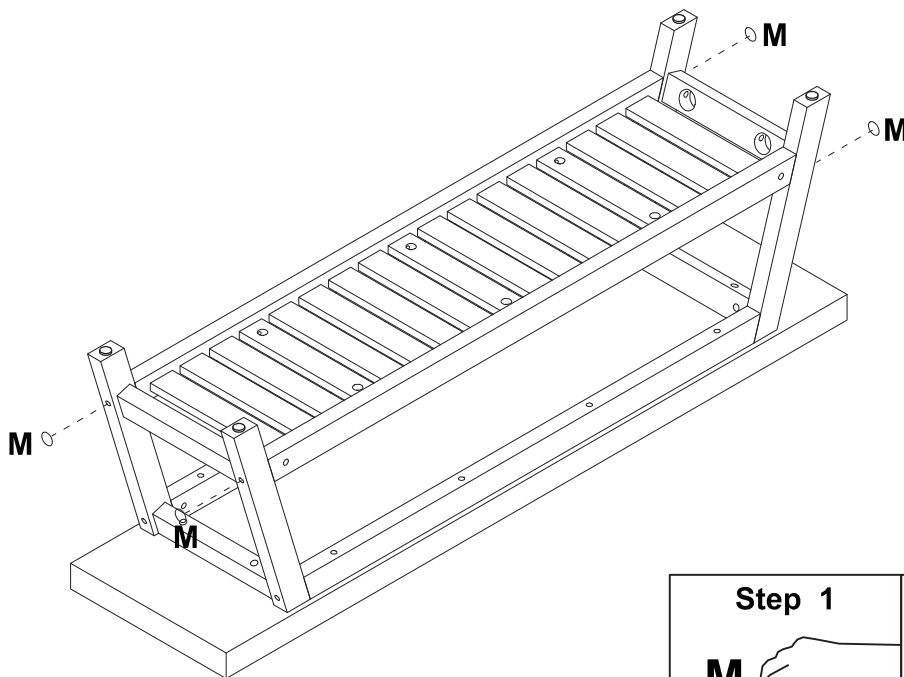

M

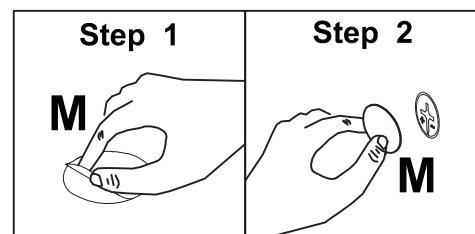4pcs



Thank you for your support !

