

ASSEMBLY INSTRUCTION

AVA QUEEN BED

B1891-315 AVA 5/0 Q HEADBOARD, FOOTBOARD & SLAT KIT-EBONY

B1891-335 AVA 6/6-5/0 EK/Q PANEL SIDE RAILS-EBONY




Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.


CAUTION

1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.

PARTS LIST

ITEM	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1 PC
B	RIGHT SIDE FACING (RSF) HEADBOARD LEG		1 PC
C	LEFT SIDE FACING (LSF) HEADBOARD LEG		1 PC
D	FOOTBOARD		1 PC
E	FOOTBOARD LEG		2 PCS
F	SIDE RAIL		2 PCS
G	SLAT		4 PCS
H	SLAT SUPPORT LEG		4 PCS
I	HEADBOARD SUPPORT RAIL		1 PC


HARDWARE LIST

ITEM	DESCRIPTION	SKETCH	QTY
1	BOLT M8 x 3/4"		8 PCS
2	BOLT M6 x 1/2"		6 PCS
3	BOLT M6 x 1 3/8"		6 PCS
4	BOLT M6 x 2"		6 PCS
5	SPRING WASHER M6 x 1/2"		8 PCS
6	FLAT WASHER M6 x 3/4"		8 PCS
7	CSK C/B SCREW M4 x 1 1/4"		8 PCS
8	ALLEN KEY M4 x 4"		1 PC
9	ALLEN KEY M5 x 2 1/2"		1 PC


HARDWARE DIMENSIONS VERIFICATION TOOL




STEP 1: Please the Headboard (A) face down on a soft and clean area. Attach RSF Headboard leg (B) and RSF Headboard leg (C) to the Headboard (A) by using Allen Key (8) with hardware 4, 5, and 6.

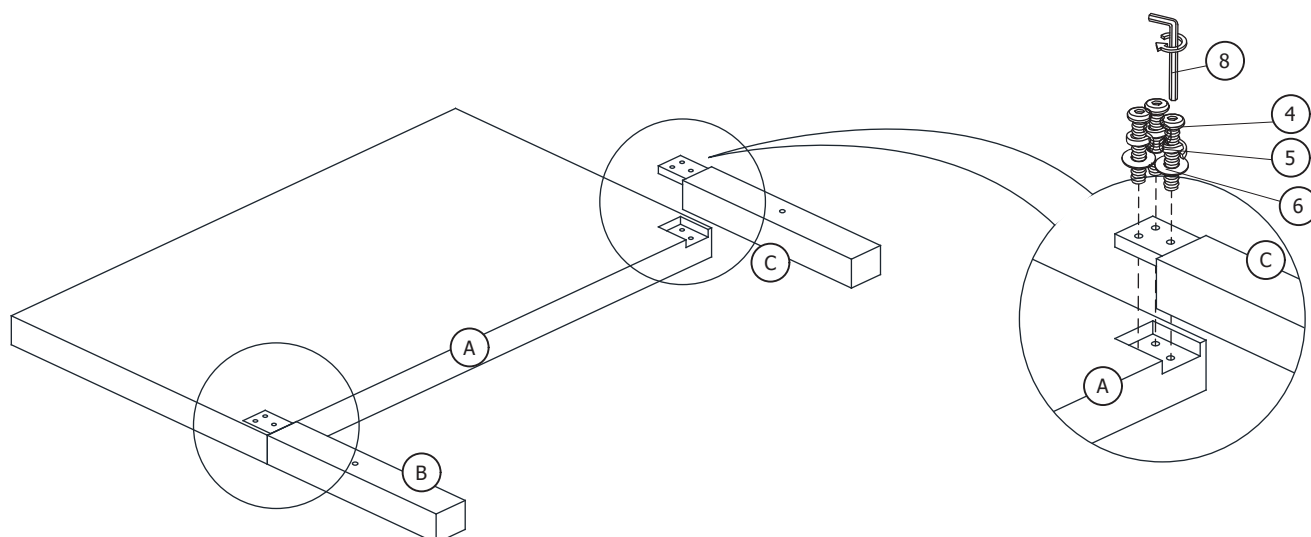


STEP 2: Attach Headboard Support Rail (I) to the RSF Headboard leg (B) and RSF Headboard leg (C) by using Allen Key (8) with hardware 3, 5, and 6.

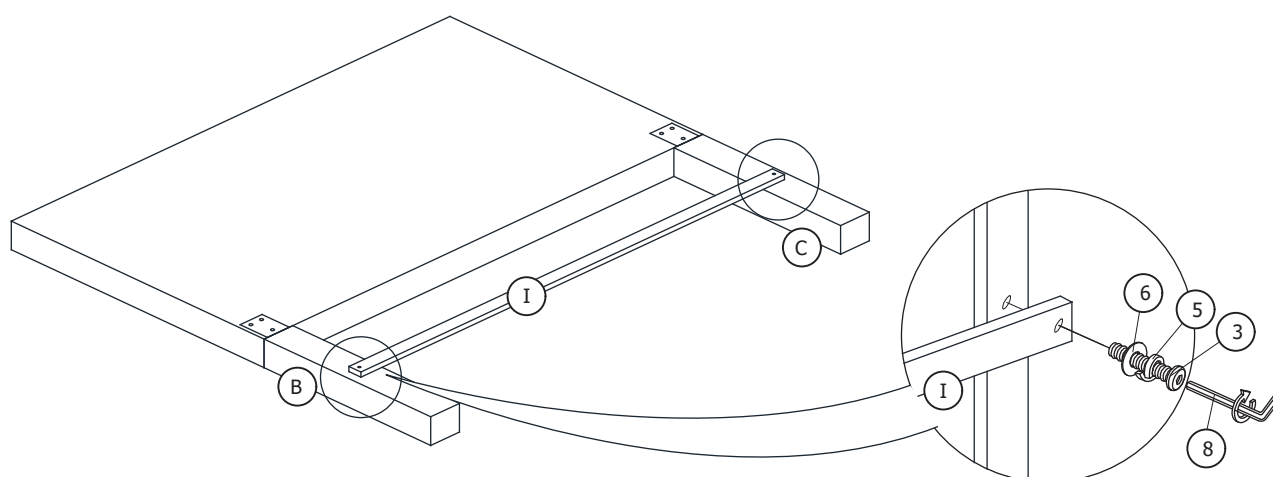


STEP 3: Place the Footboard (D) upside down. Attache the RSF Footboard leg (E) to the Footboard (D) by using Allen key (8) with hardware 2.

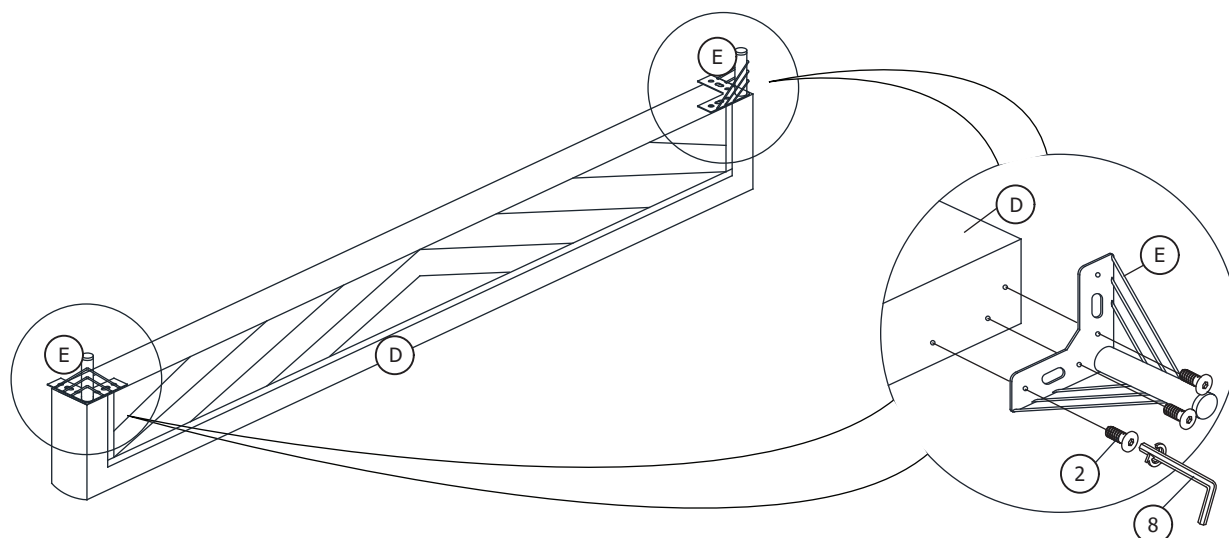


STEP 4: Attach the Side Rails (F) to the Headboard Legs (B & C) and to the Footboard (D) by using the Allen Key (9) with hardware 1.

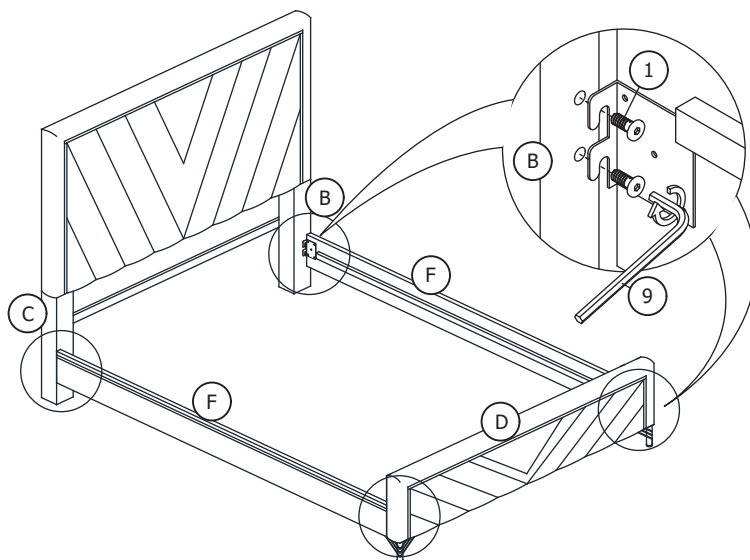


STEP 5: Assemble the Slat Support Leg (H) to the Slat (G) by using Allen Key (8) with hardware 3. Repeat for each slat.

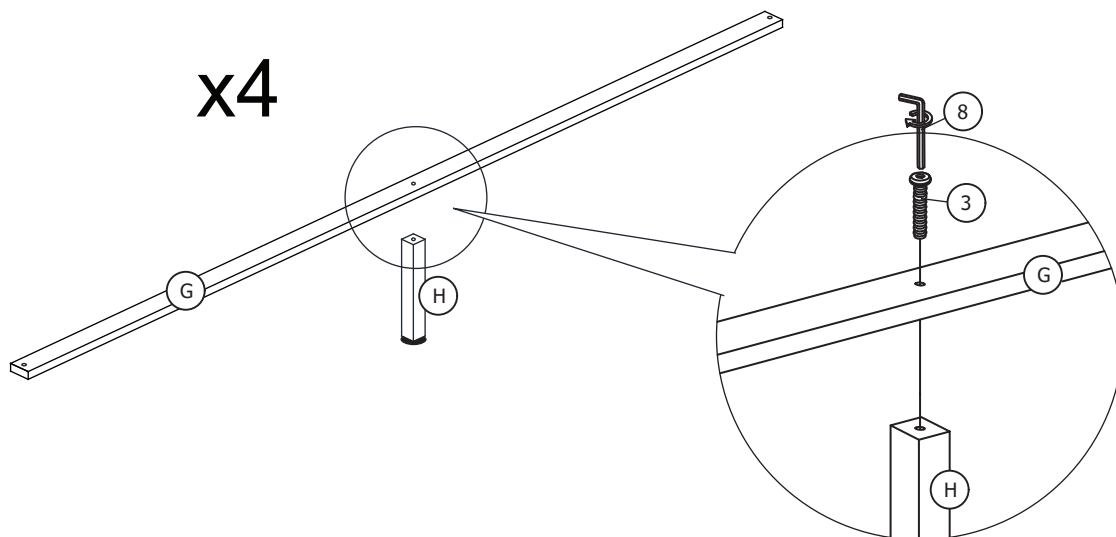

STEP 6: Assemble the Slats (G) to the Side Rails (F) by using a screwdriver with hardware (7).

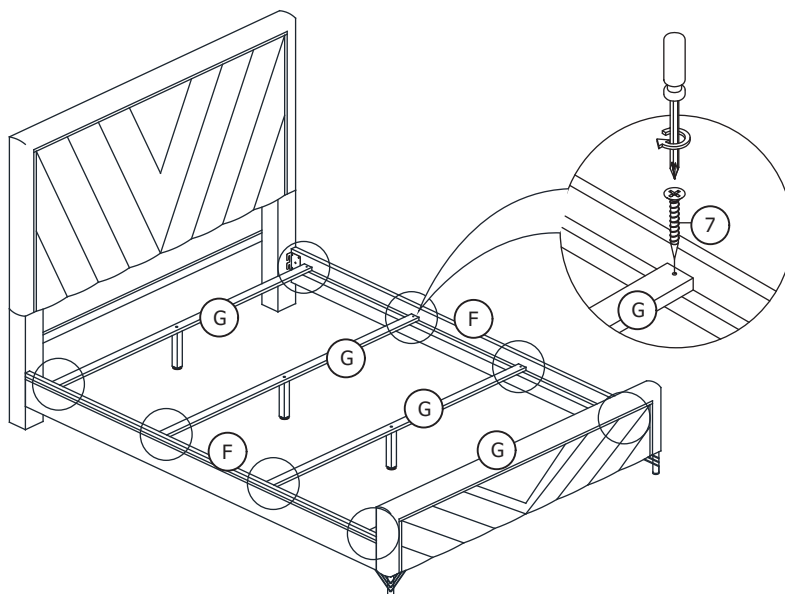

STEP 7

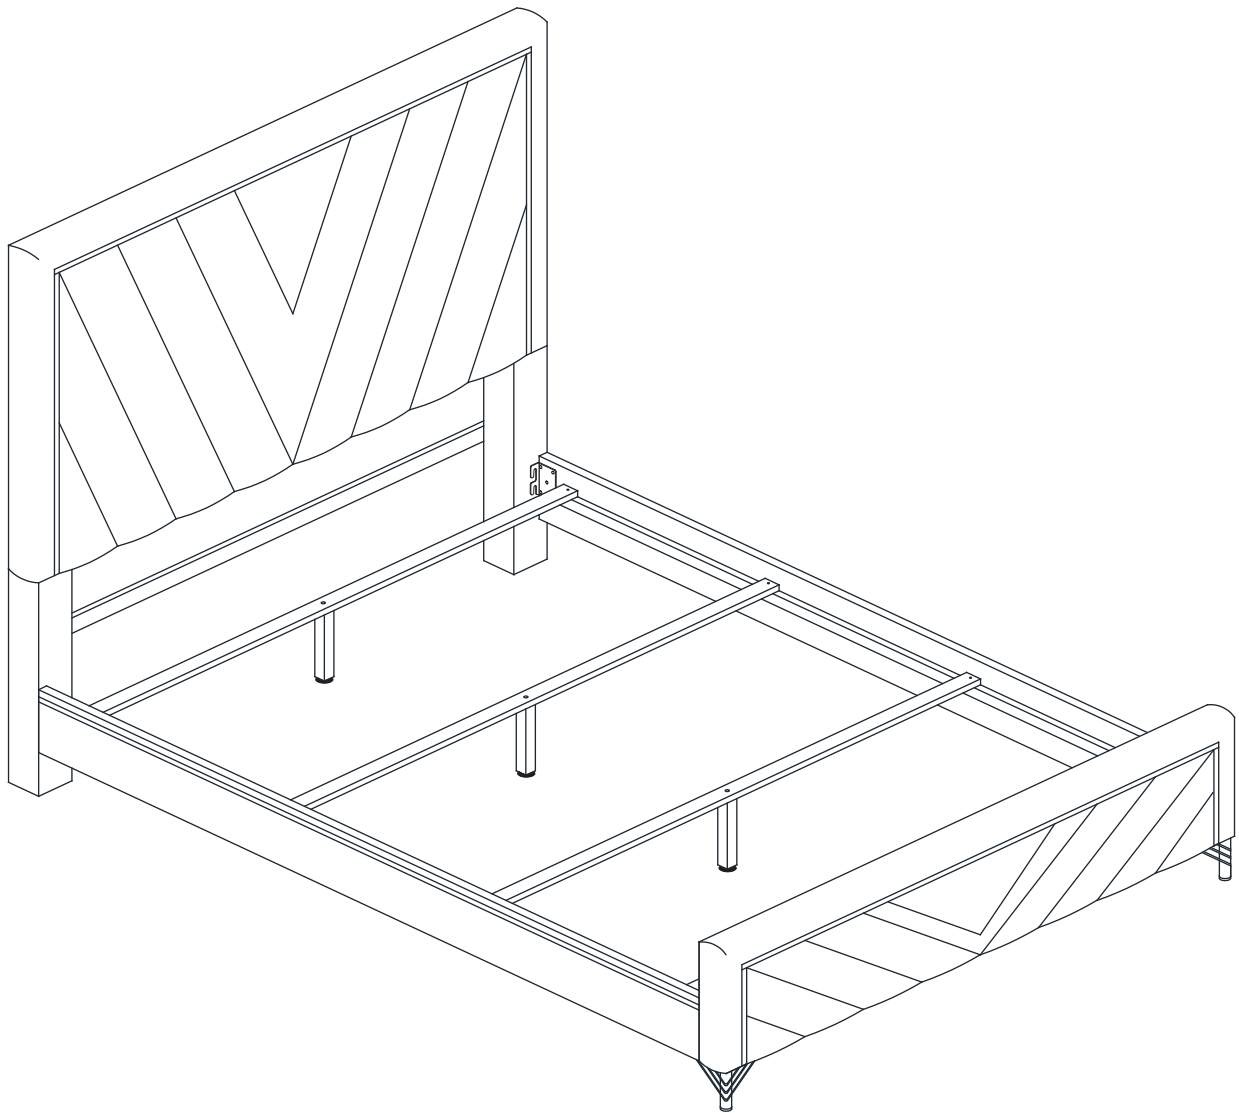

ASSEMBLY COMPLETED
MADE IN MALAYSIA

ASSEMBLY INSTRUCTIONS

AVA COLLECTION



MODEL : B1891-050 AVA 7 DRAWER DRESSER
(1 Per Carton)

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.

CAUTION

1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.

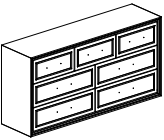PARTS LIST				HARDWARE LIST			
ITEM	DESCRIPTION	SKETCH	QTY	ITEM	DESCRIPTION	SKETCH	QTY
A	DRESSER		1 PC	1	BOLT M6 x 5/8"		12 PCS
B	METAL LEG		4 PCS	2	FLAT WASHER M6 x 3/4"		8 PCS
C	CENTER SUPPORT LEG		1 PC	3	ALLEN KEY M4 x 2 3/8"		1 PC
				4	ANTI-TIPPING KIT		1 PC


HARDWARE DIMENSIONS VERIFICATION TOOL

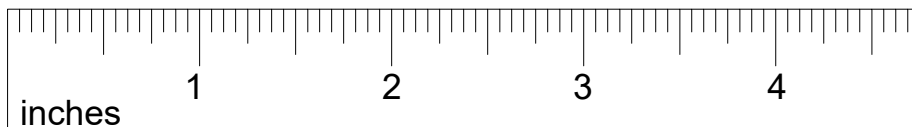

STEP 1: Place the Dresser (A) upside down on a soft and clean surface.

Assemble the Metal Legs (B) with the Chest (A) by using Allen Key (3) with hardware (1) and (2).

****Attention: DO NOT OVER TIGHTEN THE BOLTS.**

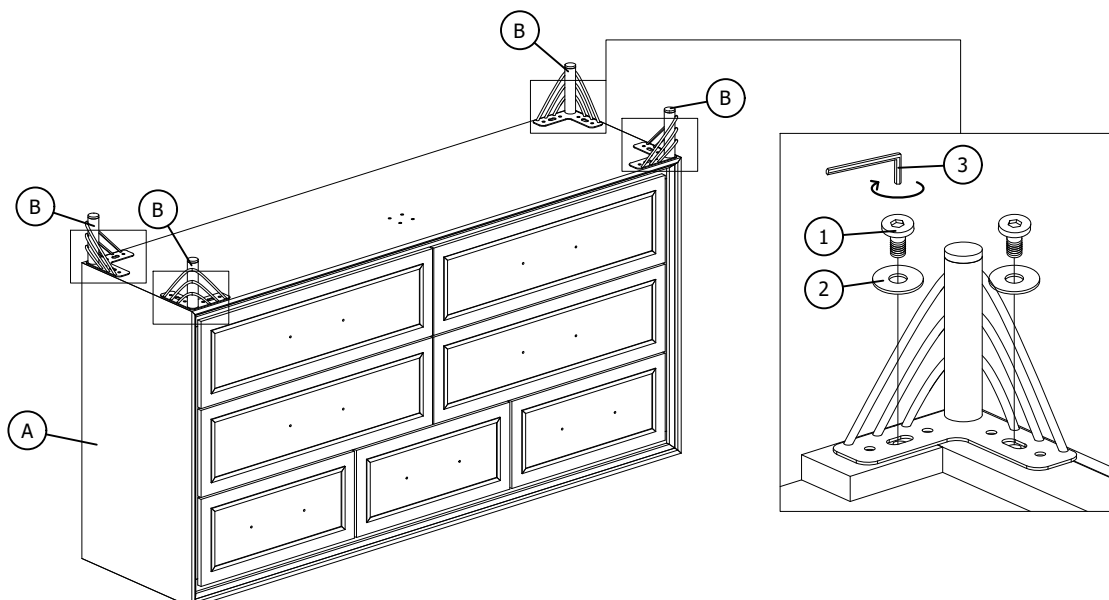


ASSEMBLY INSTRUCTIONS

AVA COLLECTION

MODEL : B1891-050 AVA 7 DRAWER DRESSER
(1 Per Carton)

STEP 2: Assemble the Center Support Leg (C) by using Allen Key (3) with hardware (1).


****Attention: DO NOT OVER TIGHTEN THE BOLTS.**

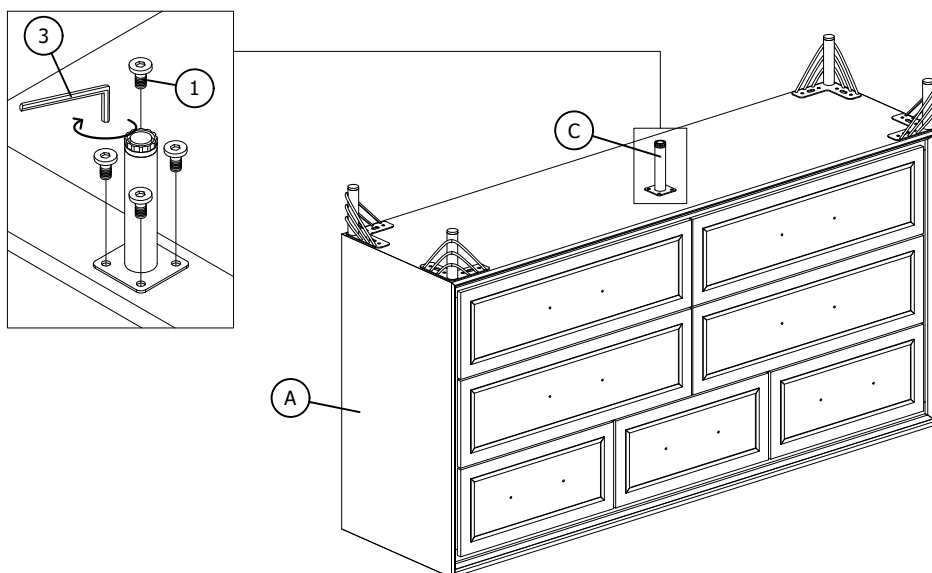

STEP 3: Install the handle by unscrewing the bolts with a screwdriver and move the handle to the outside of the drawer and screw the bolts back in from the inside of the drawer.

Repeat for each handle.

****Attention: DO NOT OVER TIGHTEN THE SCREWS.**


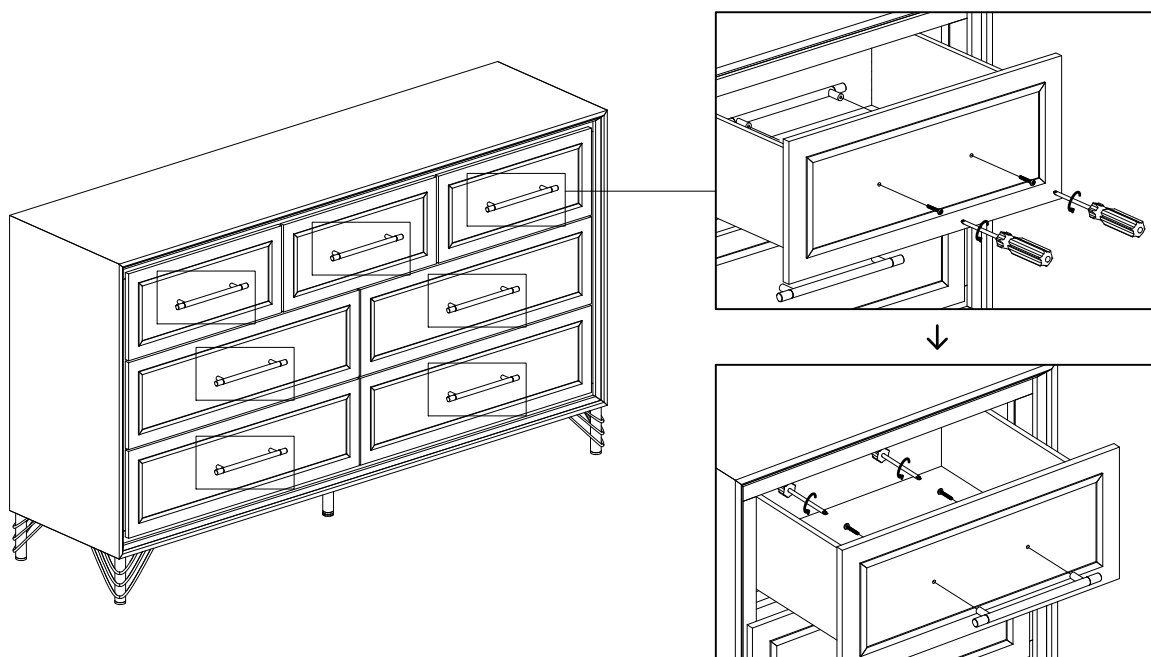


ASSEMBLY INSTRUCTIONS

AVA COLLECTION

MODEL : B1891-050 AVA 7 DRAWER DRESSER
(1 Per Carton)

STEP 4: Follow the instructions from the Anti-Tipping Kit (4) to install the Anti-Tipping Restraint.

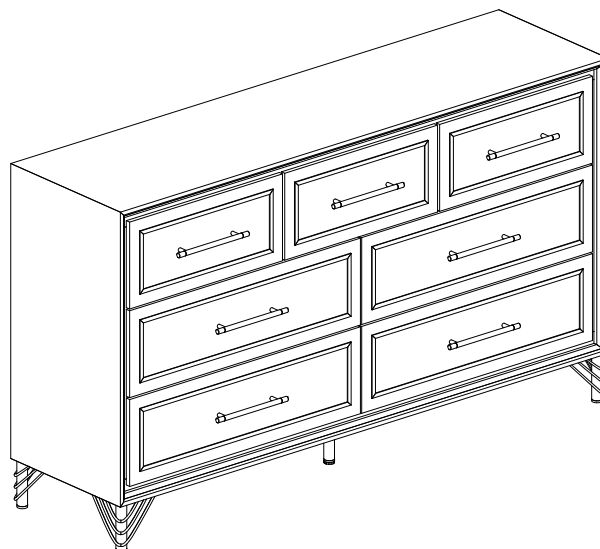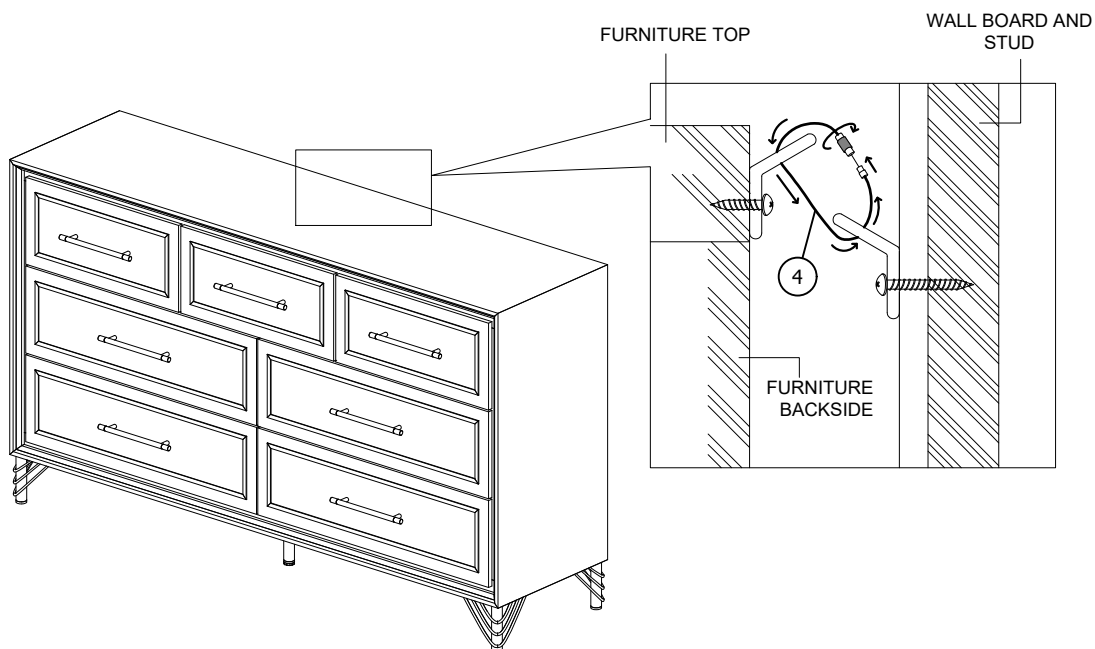

ASSEMBLY COMPLETED

MADE IN MALAYSIA

ASSEMBLY INSTRUCTIONS

SYMMETRY COLLECTION



MODEL : B1891-060 AVA MIRROR
(1 Per Carton)

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.

CAUTION


1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.

PARTS LIST				HARDWARE LIST			
ITEM	DESCRIPTION	SKETCH	QTY	ITEM	DESCRIPTION	SKETCH	QTY
A	MIRROR		1 PC	1	BOLT M6 x 1 9/16"		8 PCS
B	MIRROR SUPPORT		2 PCS	2	SPRING WASHER M6 x 1/2"		8 PCS
C	DRESSER (FROM DRESSER BOX)		1 PC	3	FLAT WASHER M6 x 3/4"		8 PCS
				4	ALLEN KEY M4 x 2 3/8"		1 PC

HARDWARE DIMENSIONS VERIFICATION TOOL

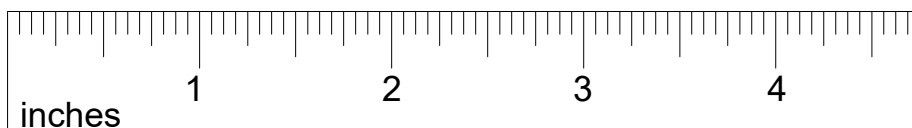


STEP 1: Assemble the Mirror Support (B) with the Dresser (C) by using Allen Key (4) with hardware (1), (2) and (3).
** Attention: DO NOT OVER TIGHTEN THE BOLTS.

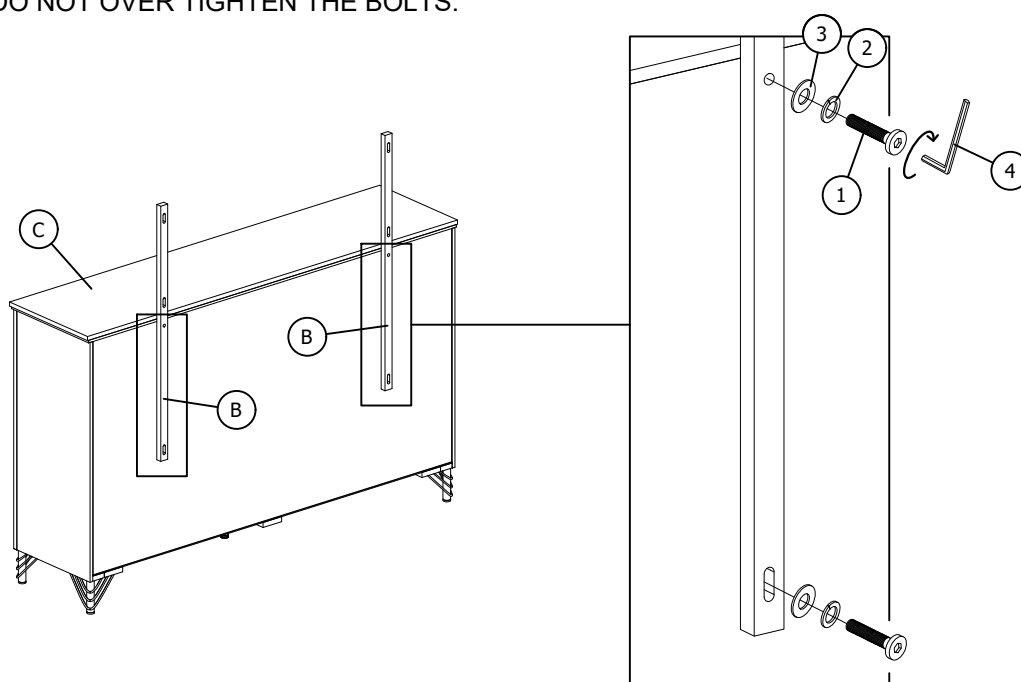


ASSEMBLY INSTRUCTIONS SYMMETRY COLLECTION

MODEL : B1891-060 AVA MIRROR
(1 Per Carton)

STEP 2: Assemble the Mirror (A) with the Mirror Support (B) by using Allen Key (4) with hardware (1), (2) and (3).
** Attention: DO NOT OVER TIGHTEN THE BOLTS.

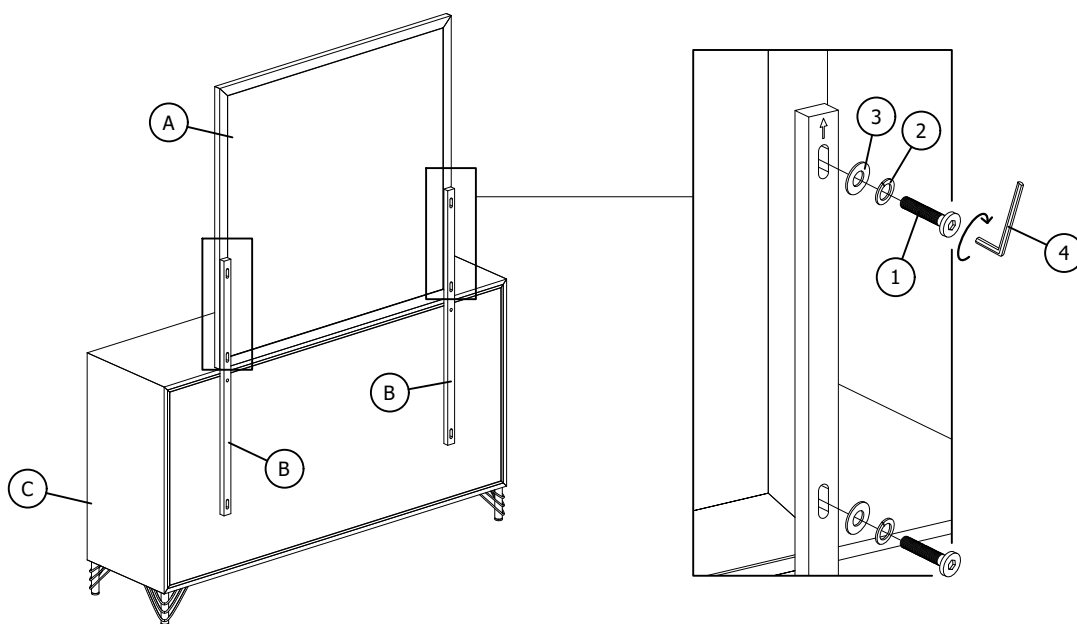

STEP 3: Complete.

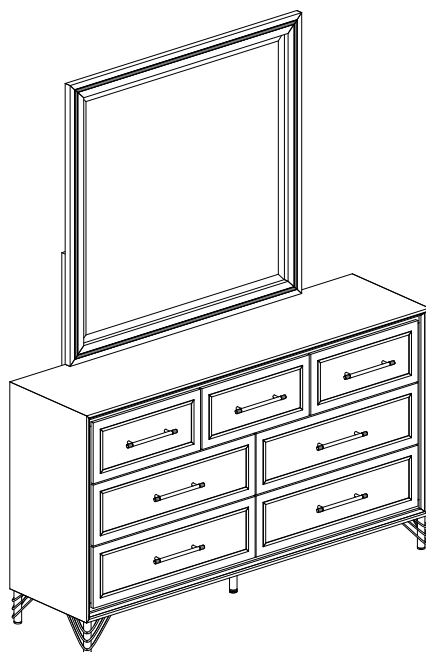

ASSEMBLY COMPLETED

ASSEMBLY INSTRUCTIONS

AVA COLLECTION



MODEL : B1891-070 AVA 5 DRAWER CHEST
(1 Per Carton)

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.

CAUTION

1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.

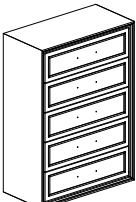PARTS LIST				HARDWARE LIST			
ITEM	DESCRIPTION	SKETCH	QTY	ITEM	DESCRIPTION	SKETCH	QTY
A	CHEST		1 PC	1	BOLT M6 x 5/8"		8 PCS
B	METAL LEG		4 PCS	2	FLAT WASHER M6 x 3/4"		8 PCS
				3	ALLEN KEY M4 x 2 3/8"		1 PC
				4	ANTI-TIPPING KIT		1 PC


HARDWARE DIMENSIONS VERIFICATION TOOL

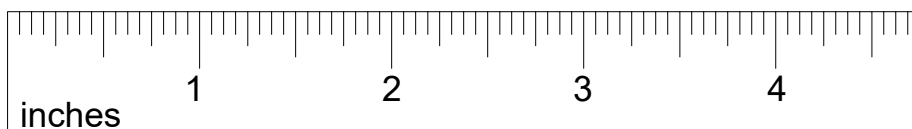

STEP 1: Place the Chest (A) upside down on a soft and clean surface.

Assemble the Metal Legs (B) with the Chest (A) by using Allen Key (3) with hardware (1) and (2).

****Attention: DO NOT OVER TIGHTEN THE BOLTS.**

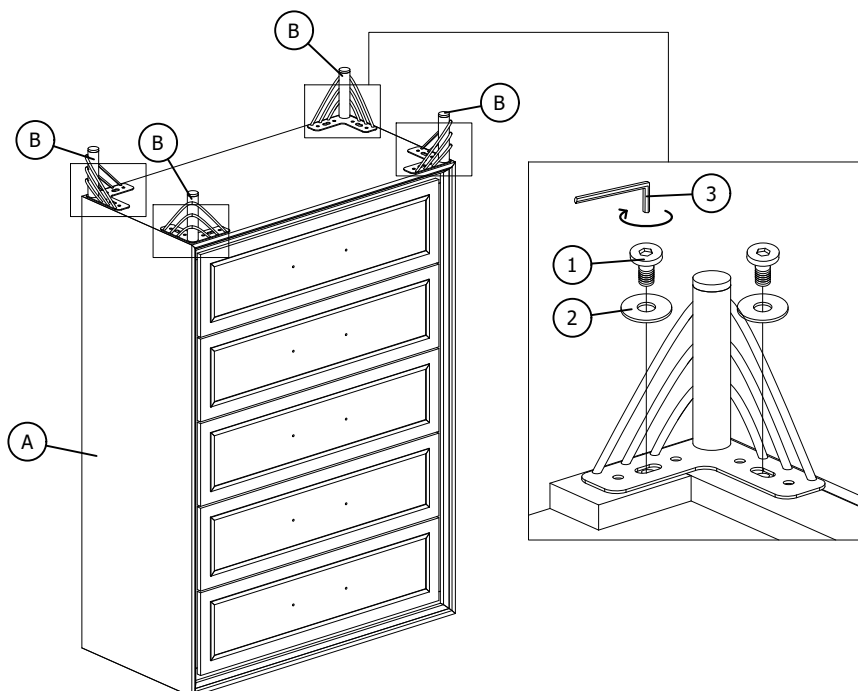

ASSEMBLY INSTRUCTIONS


AVA COLLECTION

MODEL : B1891-070 AVA 5 DRAWER CHEST
(1 Per Carton)


STEP 2: Install the handle by unscrewing the bolts with a screwdriver and move the handle to the outside of the drawer and screw the bolts back in from the inside of the drawer.

Repeat for each handle.

****Attention: DO NOT OVER TIGHTEN THE SCREWS.**

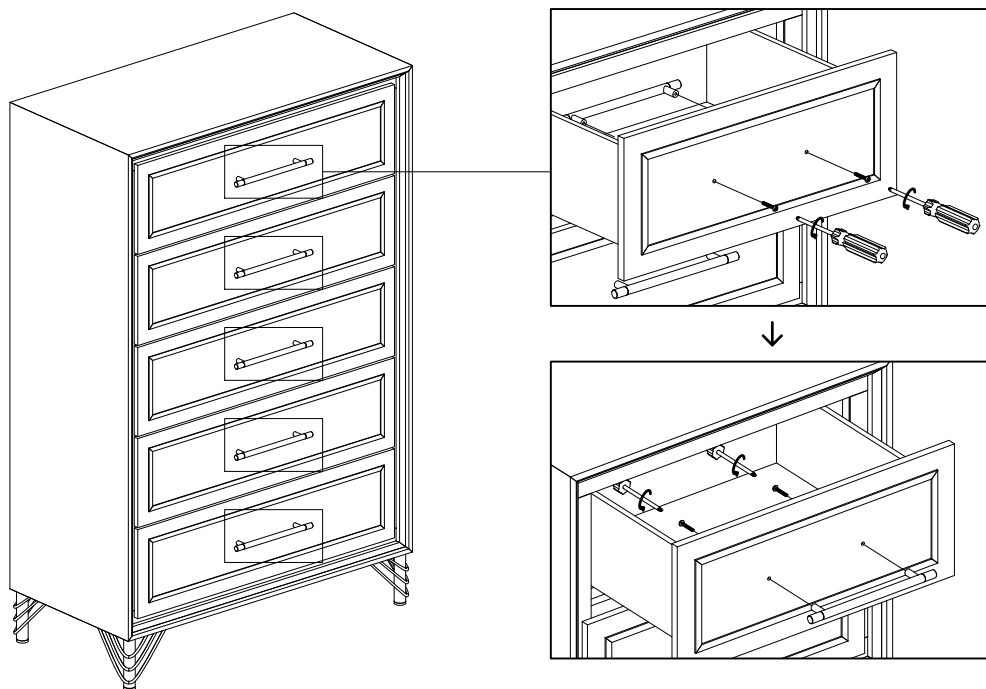

STEP 3: Follow the instructions from the Anti-Tipping Kit (4) to install the Anti-Tipping Restraint.

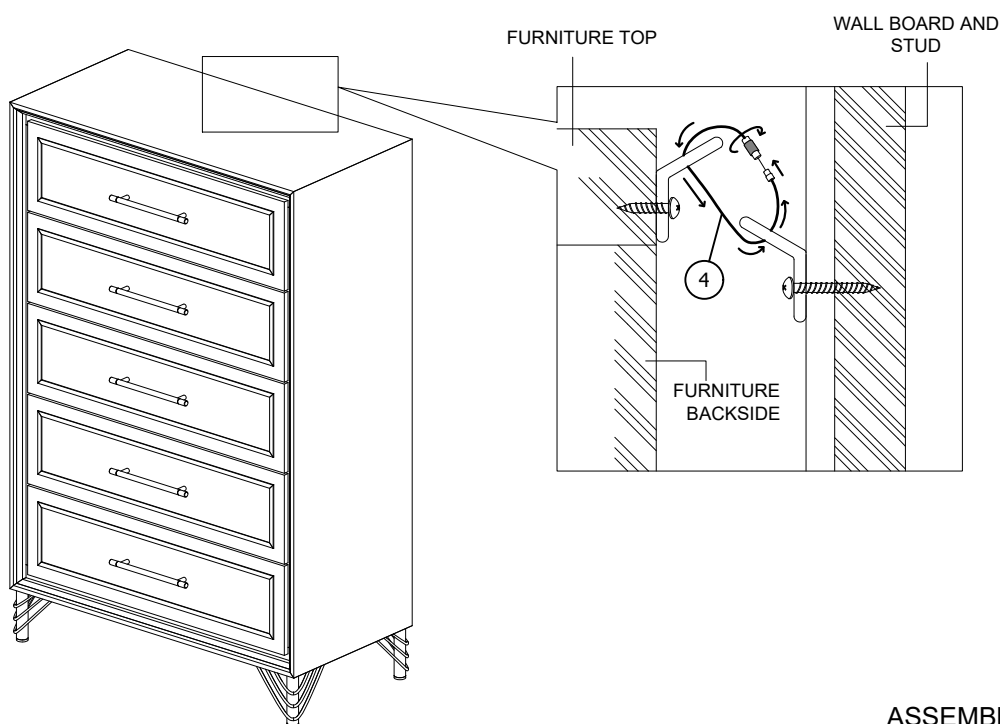

ASSEMBLY COMPLETED

MADE IN MALAYSIA

ASSEMBLY INSTRUCTIONS

AVA COLLECTION



MODEL : B1891-040 AVA 2 DRAWER NIGHTSTAND
(1 Per Carton)

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.


CAUTION

1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.

PARTS LIST			
ITEM	DESCRIPTION	SKETCH	QTY
A	NIGHTSTAND		1 PC
B	METAL LEG		4 PCS

HARDWARE LIST			
ITEM	DESCRIPTION	SKETCH	QTY
1	BOLT M6 x $\frac{5}{8}$ "		8 PCS
2	FLAT WASHER M6 x $\frac{3}{4}$ "		8 PCS
3	ALLEN KEY M4 x 2 $\frac{3}{8}$ "		1 PC


HARDWARE DIMENSIONS VERIFICATION TOOL

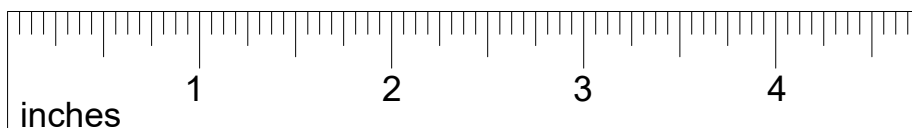

STEP 1: Place the Nightstand (A) upside down on a soft and clean surface.

Assemble the Metal Legs (B) with the Nightstand (A) by using Allen Key (3) with hardware (1) and (2).

****Attention: DO NOT OVER TIGHTEN THE BOLTS.**

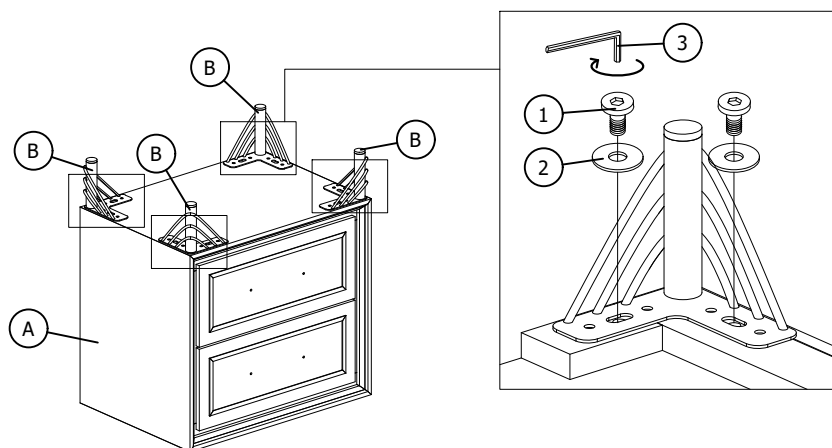

ASSEMBLY INSTRUCTIONS


AVA COLLECTION

MODEL : B1891-040 AVA 2 DRAWER NIGHTSTAND
(1 Per Carton)

STEP 2: Install the handle by unscrewing the bolts with a screwdriver and move the handle to the outside of the drawer and screw the bolts back in from the inside of the drawer.

Repeat for each handle.

****Attention: DO NOT OVER TIGHTEN THE SCREWS.**

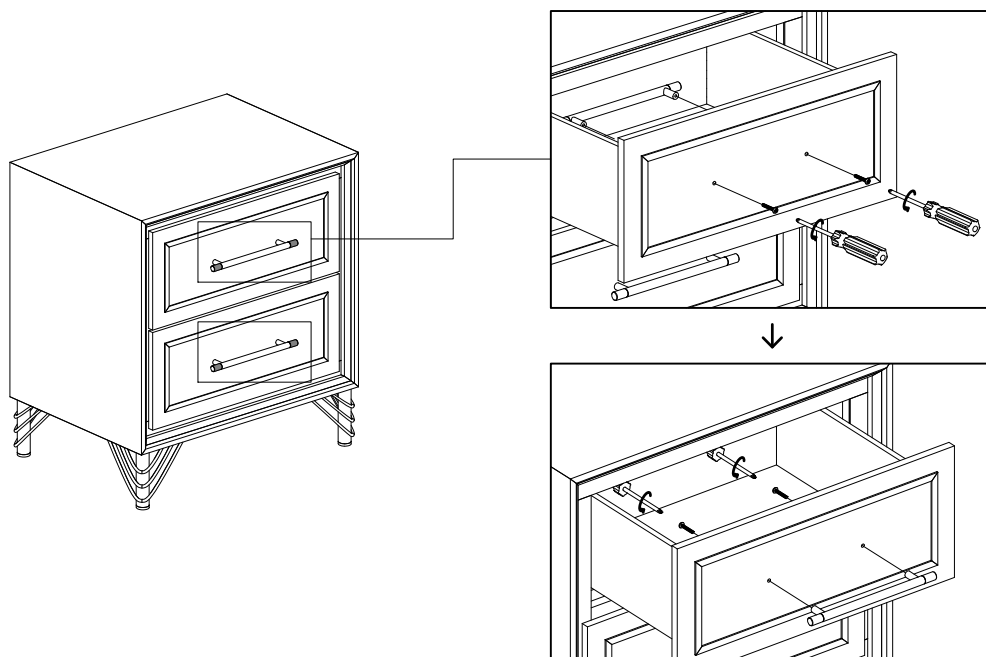

ASSEMBLY COMPLETED

MADE IN MALAYSIA