


Closet Organizer System

ASSEMBLY INSTRUCTION

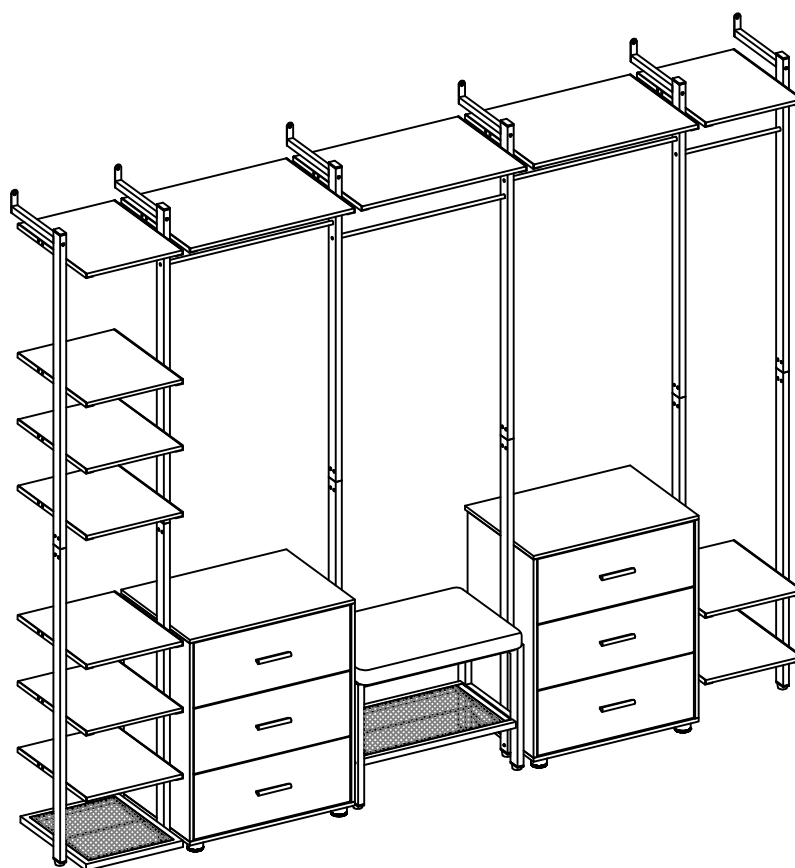

There are two packages for this rack, you may not receive them at the same time, please wait a few days if you only get one package.



(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time,We will provide you with a 100% satisfactory solution.

TIPS:


1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install,which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

Using Camlocks

Connect the male camlock as directed in the assembly instructions using a screwdriver.


1

DO NOT OVER TIGHTEN

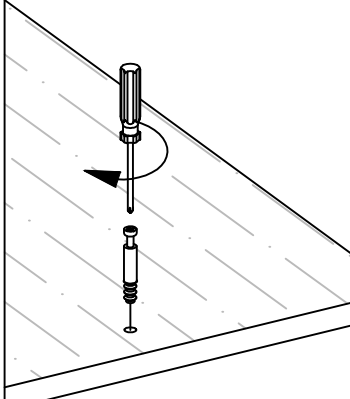

Push the male camlock into the entry hole.


2

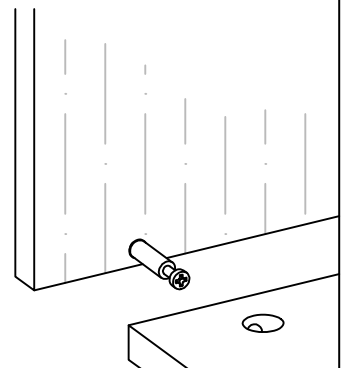

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

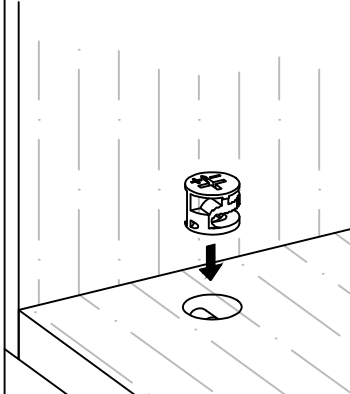









Turn the female camlock clockwise with a screwdriver.







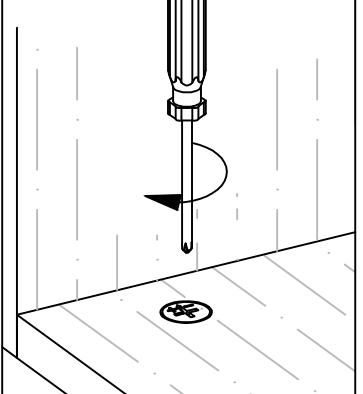


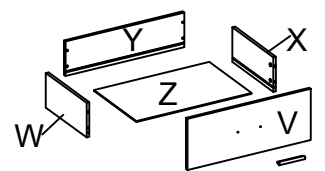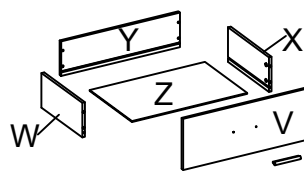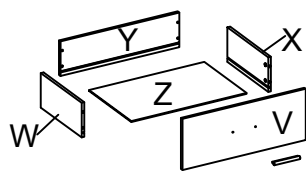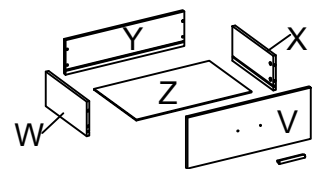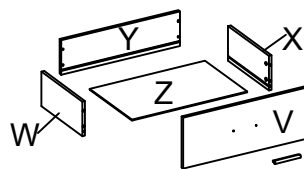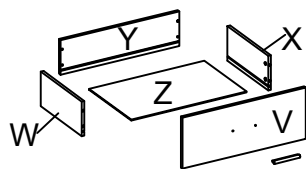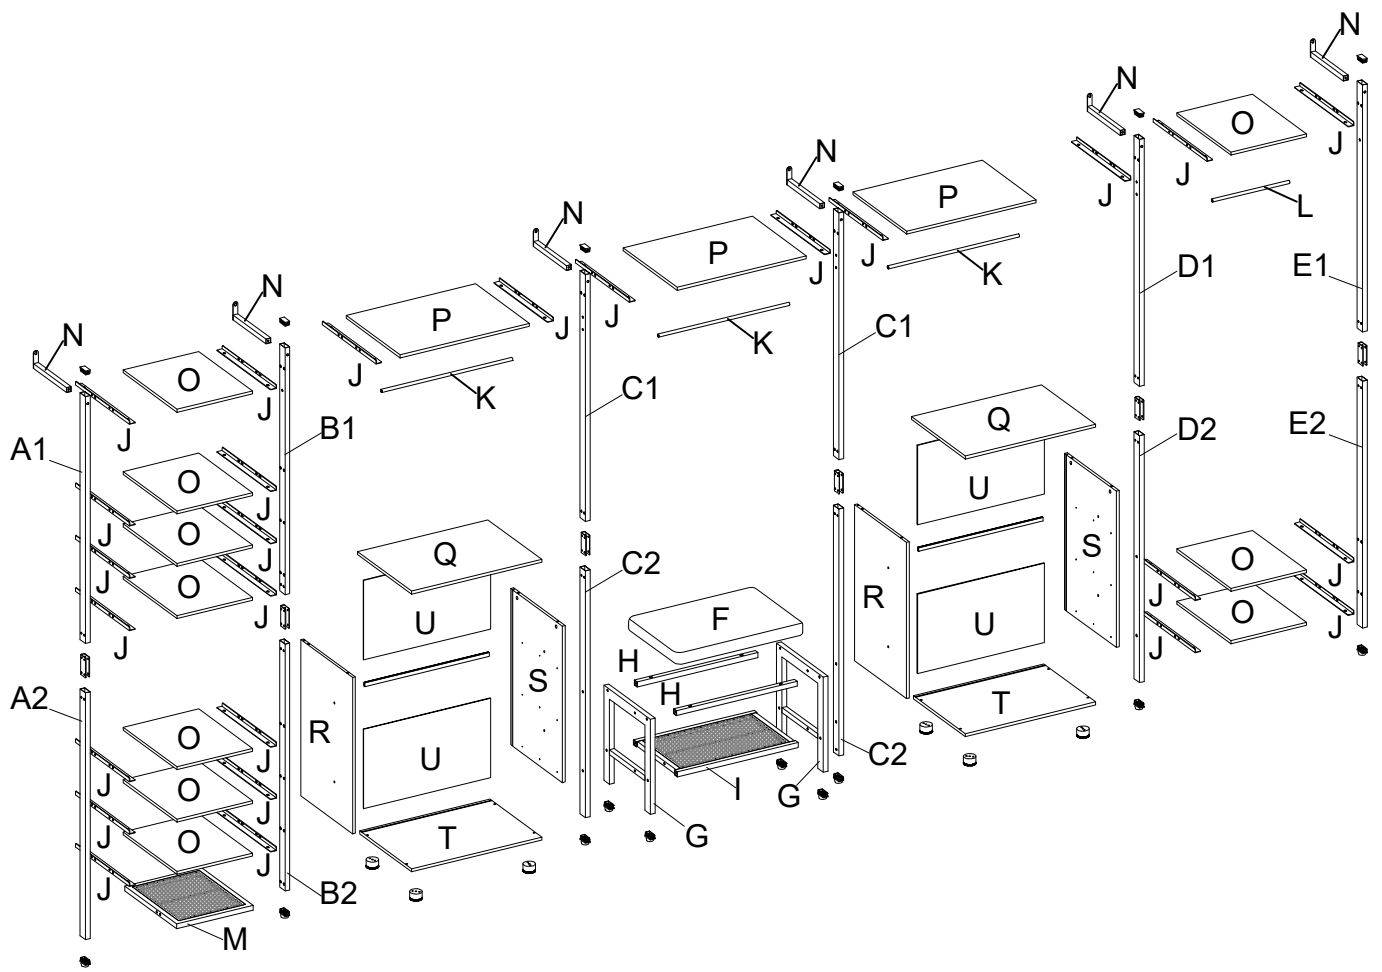

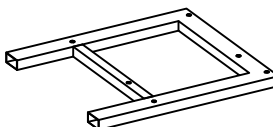



















You should feel a click when the camlock is locked in place.

The joint is now secure.







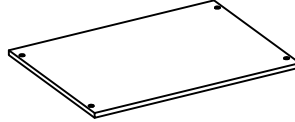
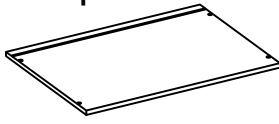



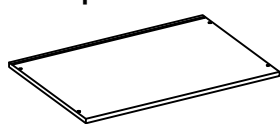















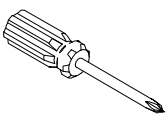
4







PART LIST A			
A1 x 1pc 	A2 x 1pc 	B1 x 1pc 	B2 x 1pc 
C1 x 2pcs 	C2 x 2pcs 	D1 x 1pc 	D2 x 1pc 
E1 x 1pc 	E2 x 1pc 	F x 1pc 	G x 2pcs 
H x 2pcs 	I x 1pc 	J x 26pcs 	K x 3pcs 
L x 1pc 	M x 1pc 	N x 6pcs 	O x 10pcs 
P x 3pcs 			
PART LIST B			
Q x 2pcs 	R x 2pcs 	S x 2pcs 	T x 2pcs 
U x 4pcs 	V x 6pcs 	W x 6pcs 	X x 6pcs 
Y x 6pcs 	Z x 6pcs 		

HARDWARE LIST

<p>①</p>  <p>M6x35 26 pcs</p>	<p>②</p>  <p>M6x27 8 pcs</p>	<p>③</p>  <p>M6x8 48 pcs</p>	<p>④</p>  <p>M6x40 8 pcs</p>
<p>⑤</p>  <p>M4x30 24 pcs</p>	<p>⑥</p>  <p>M3x12 96 pcs</p>	<p>⑦</p>  <p>M6x10 52 pcs</p>	<p>⑧</p>  <p>M6x12 52 pcs</p>
<p>⑨</p>  <p>M4x15 12 pcs</p>	<p>⑩</p>  <p>6 pcs</p>	<p>⑪</p>  <p>M6x12 8 pcs</p>	<p>⑫</p>  <p>8 pcs</p>
<p>⑬</p>  <p>M3x16 16 pcs</p>	<p>⑭</p>  <p>M6x28 32 pcs</p>	<p>⑮</p>  <p>Ø12 32 pcs</p>	<p>⑯</p>  <p>20x40 6 pcs</p>
<p>⑰</p>  <p>528mm 2 pcs</p>	<p>⑱</p>  <p>20x40 6 pcs</p>	<p>⑲</p>  <p>20x40xM8 10 pcs</p>	<p>⑳</p>  <p>M4x40 6 pcs</p>
<p>㉑</p>  <p>6 pcs</p>	<p>㉒</p>  <p>6 pcs</p>	<p>㉓</p>  <p>6 pcs</p>	<p>㉔</p>  <p>6 pcs</p>
<p>㉕</p>  <p>M6x55 8 pcs</p>	<p>㉖</p>  <p>24 pcs</p>	<p>㉗</p>  <p>M4 1 pc</p>	<p>㉘</p>  <p>1 pc</p>

STEP 1

⑤  x4


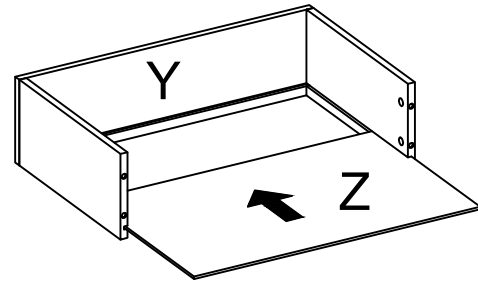
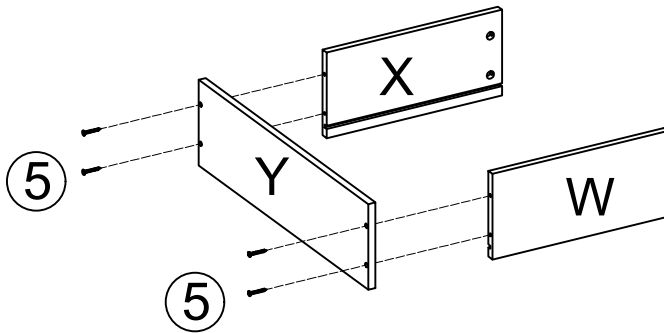


Please make sure part "Z" is fully seated in part "Y"

STEP 2

⑭  x4


⑮  x4

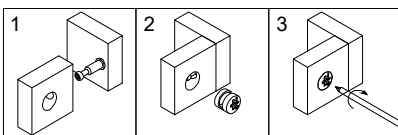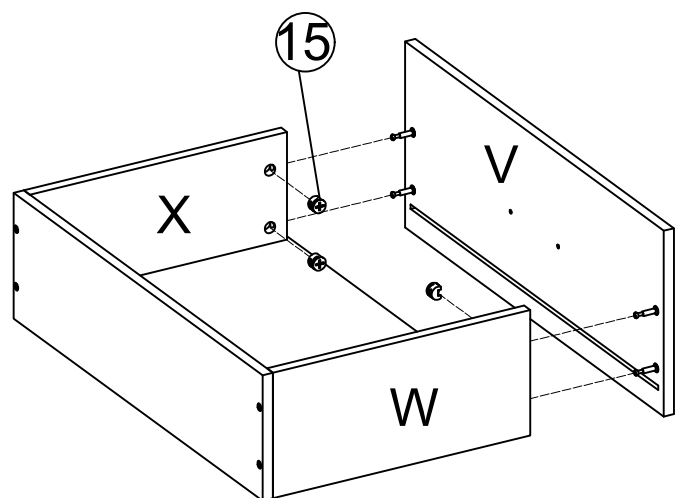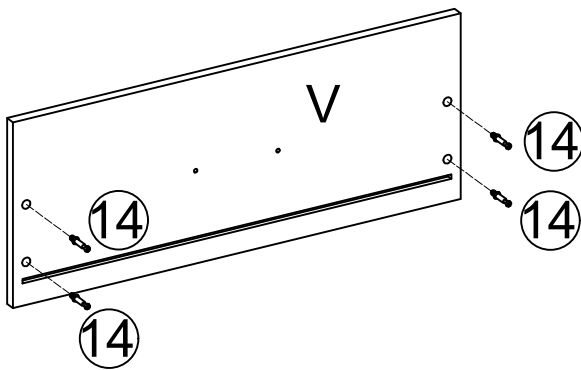


Please point the arrow upward to the mounting hole when installing Part ⑮ then use screwdriver to tighten it in the "+" direction.

Cam Lock Fastening System

STEP 3

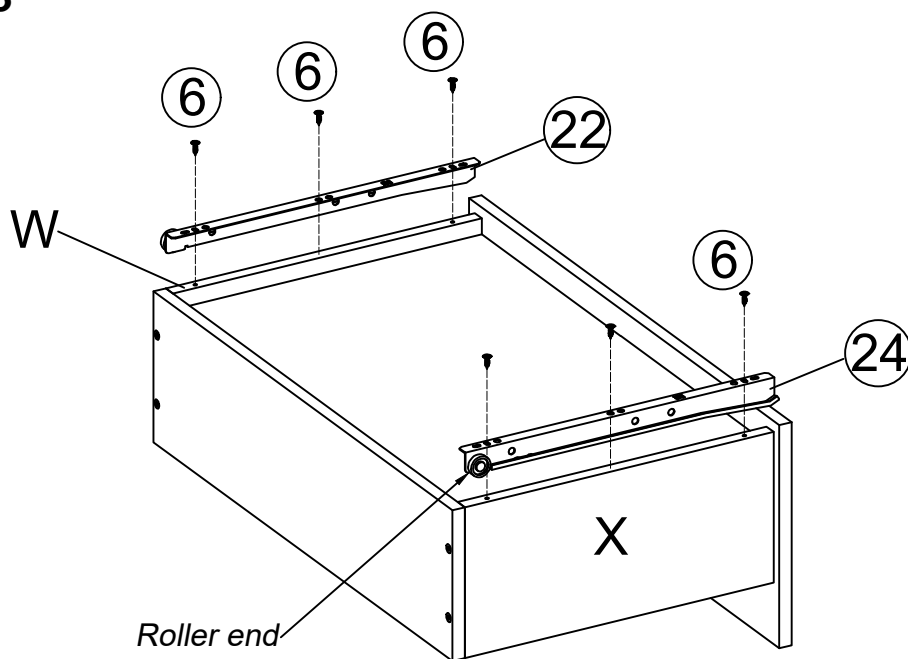

⑥  x6

②②  x1

②④  x1


STEP 4

NOTICE:


The installation for all the six drawers is base on the one to four steps.

⑨  x2


①⑩  x1

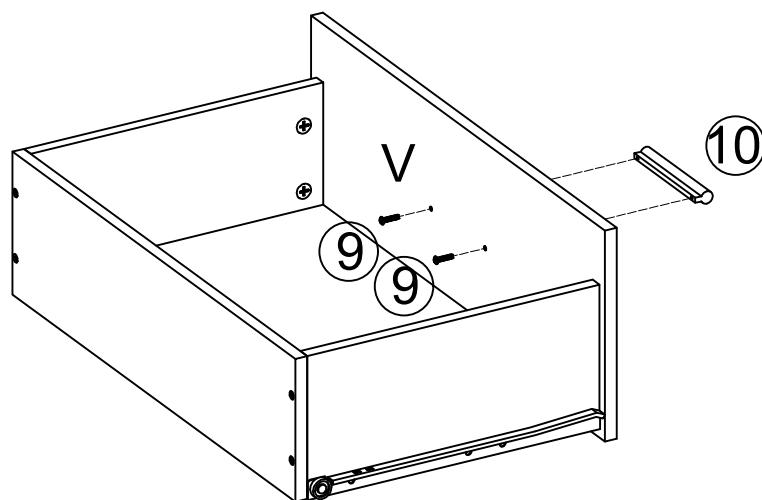

STEP 5

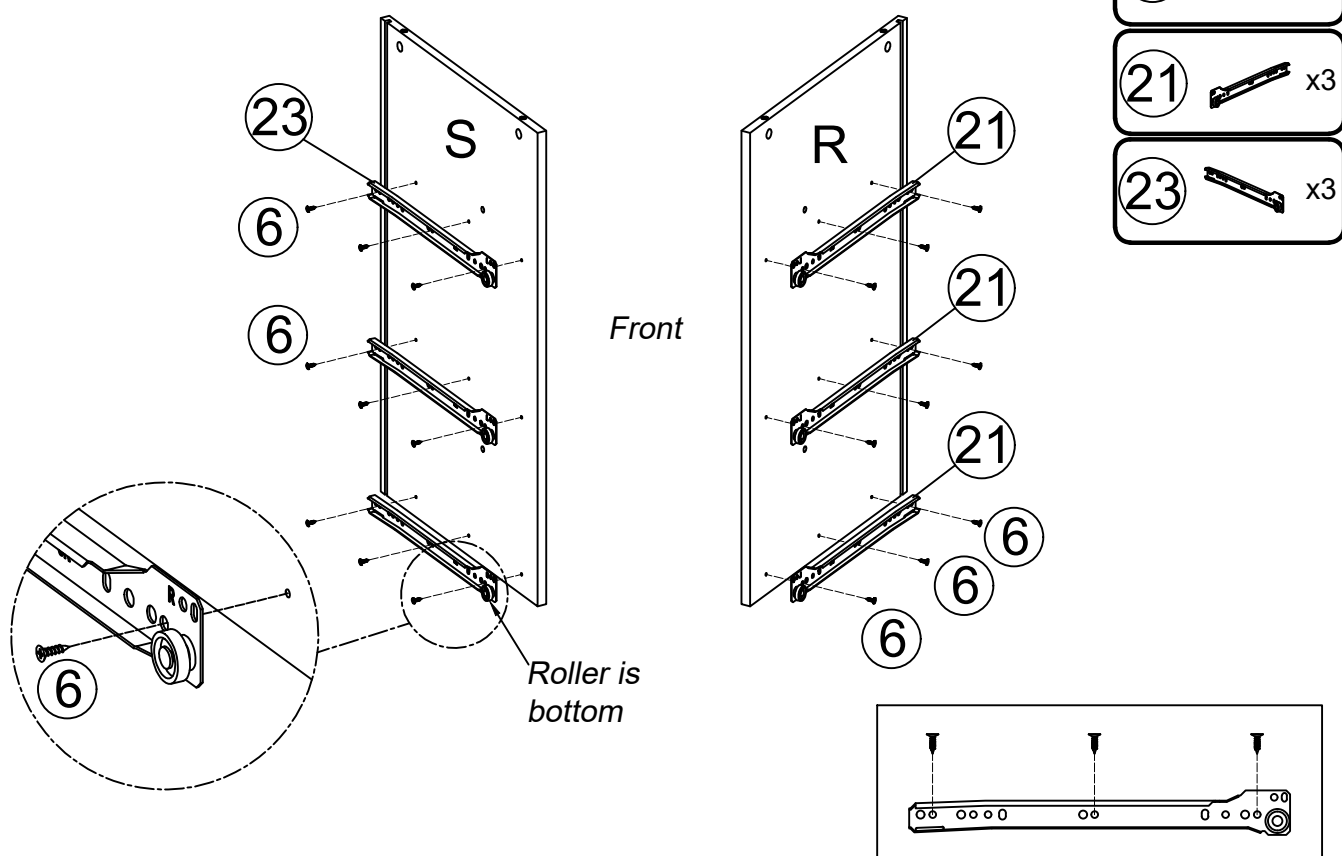


STEP 6

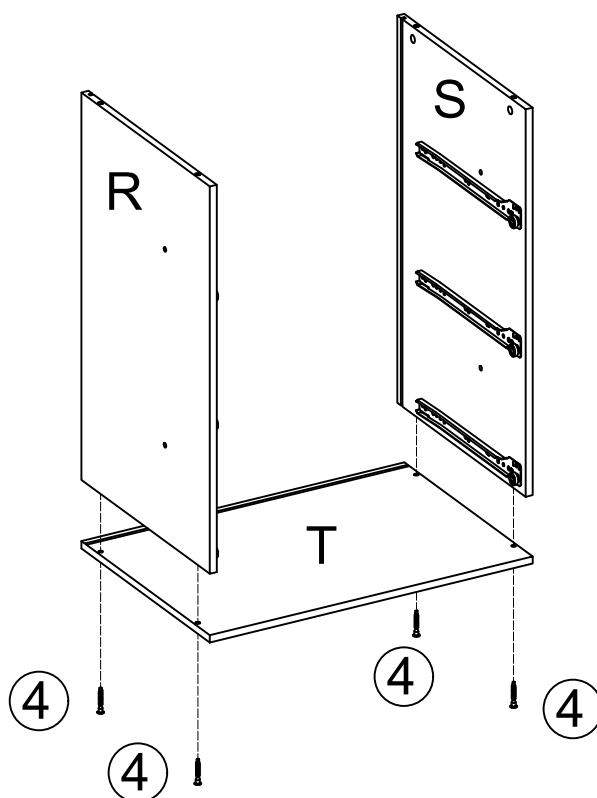


STEP 7

17 — x1

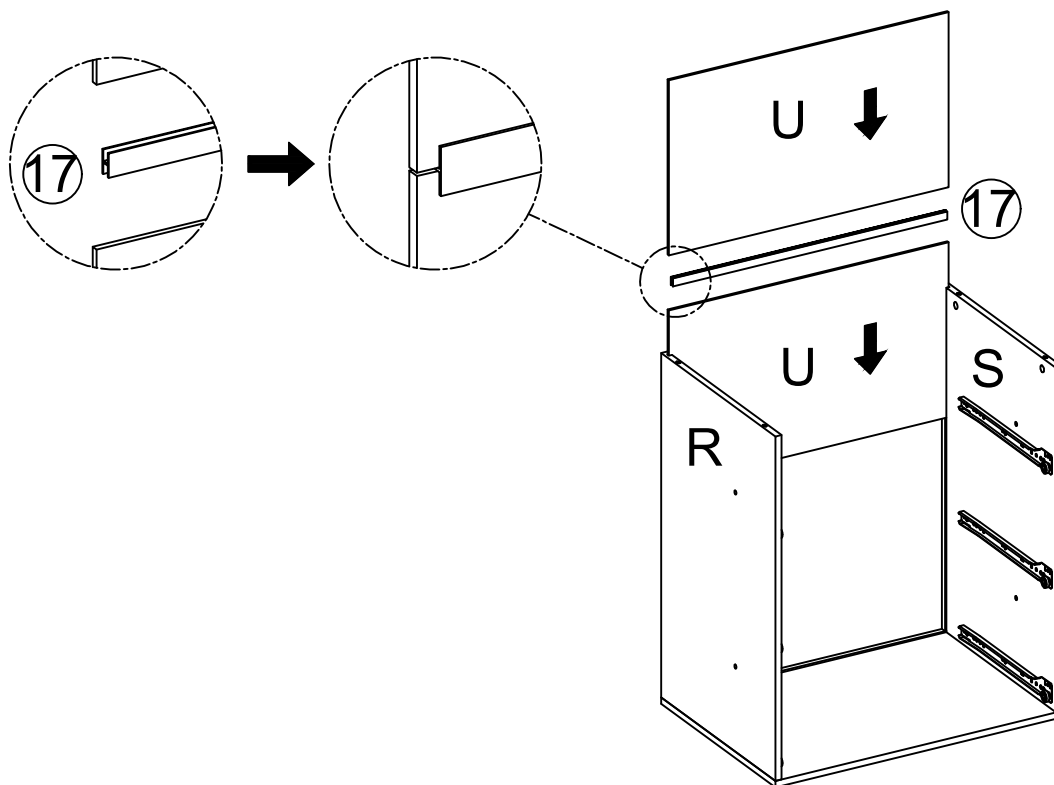


STEP 8

14 — x4

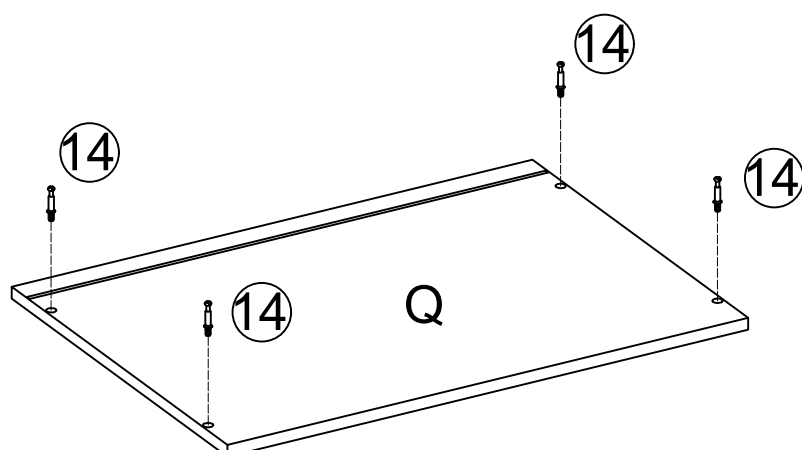

STEP 9


15  x4

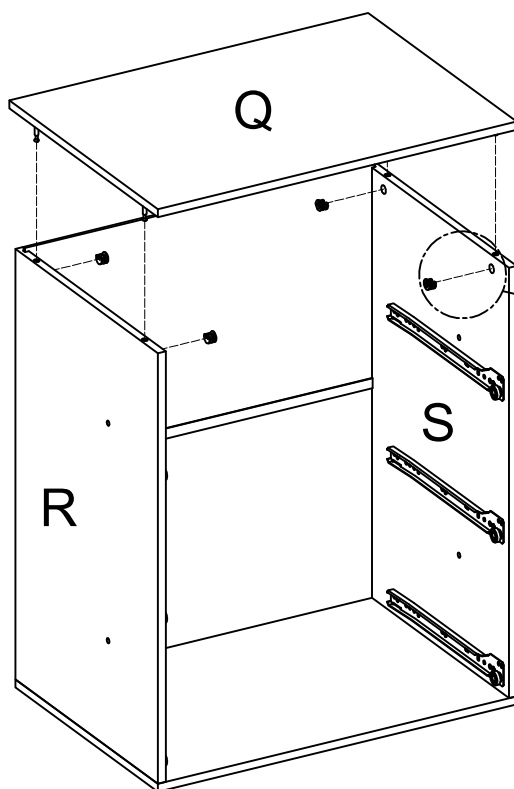

STEP 10


11  x4

12  x4

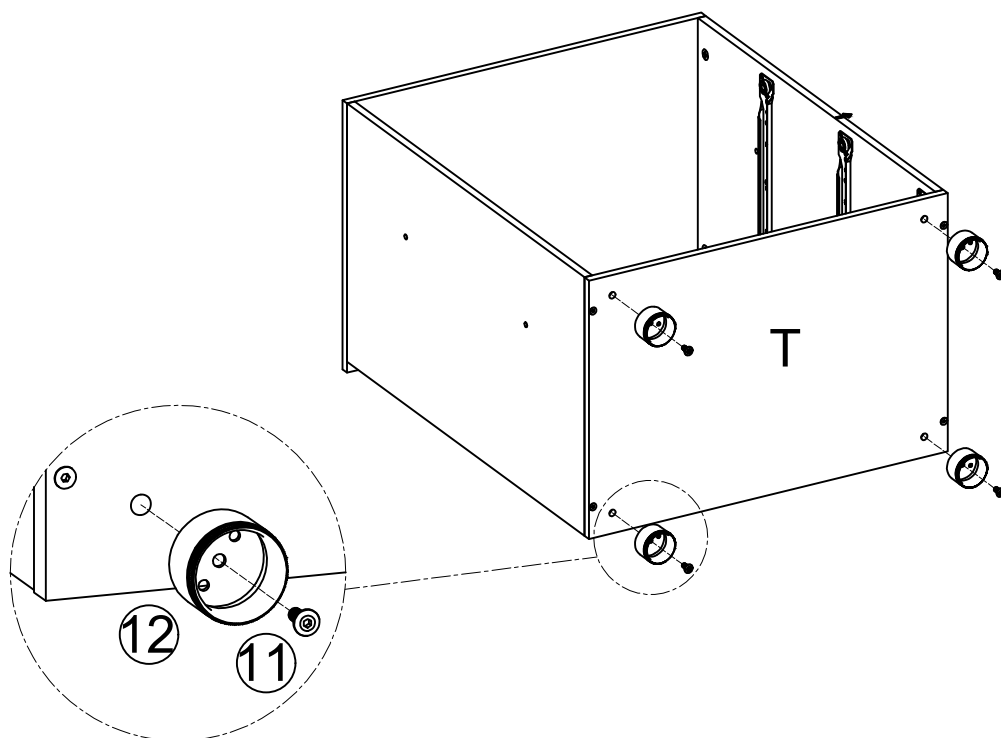

STEP 11

13  x8

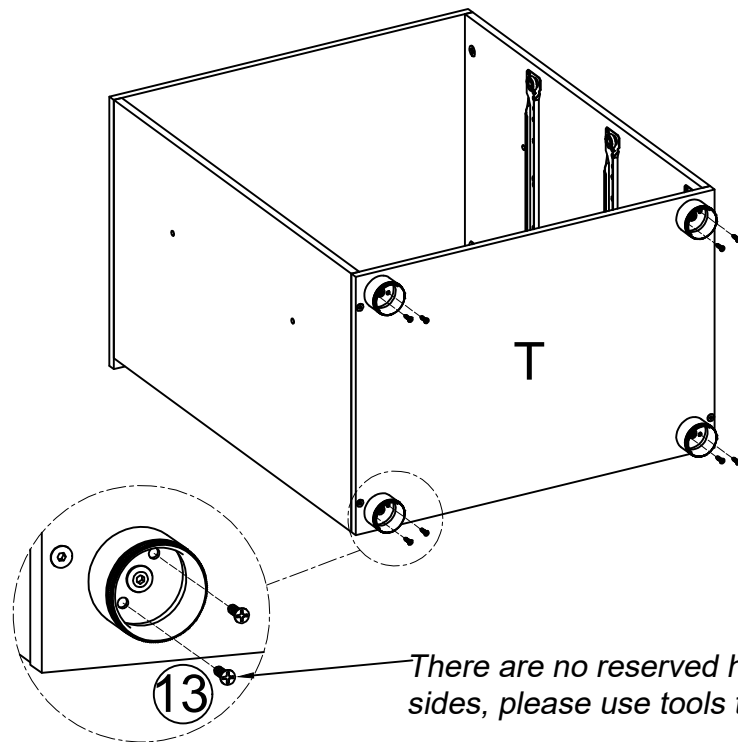


STEP 12

NOTICE:

The installation for all the two drawer cabinet is base on the step 5-12 above.

6  x12

26  x12

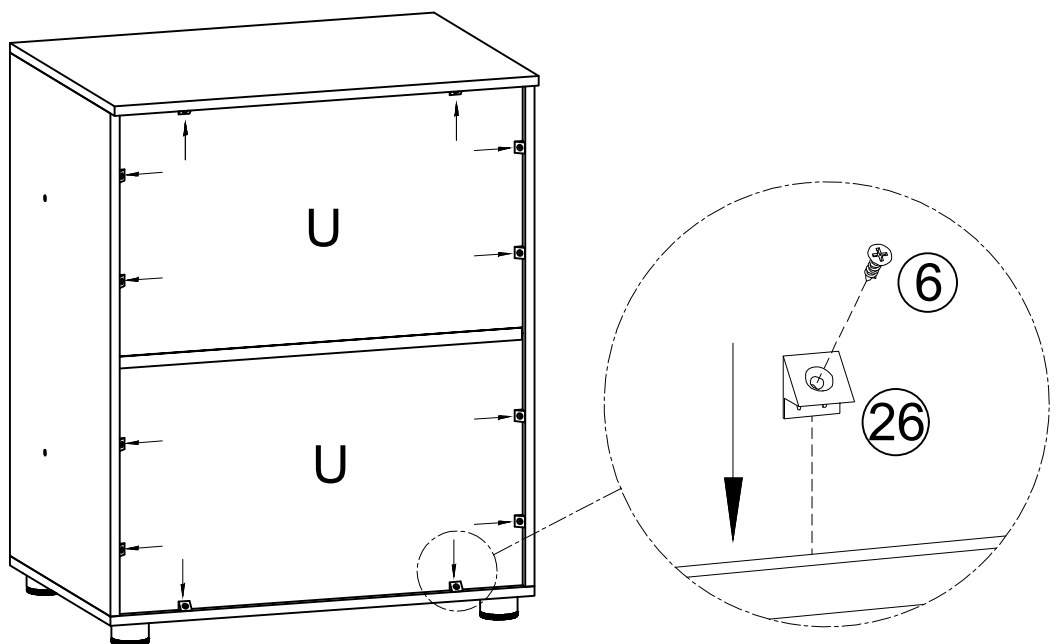


STEP 13

19



x4

Please use a hammer or solid tools
(not included) to knock the footpads
into the frame.

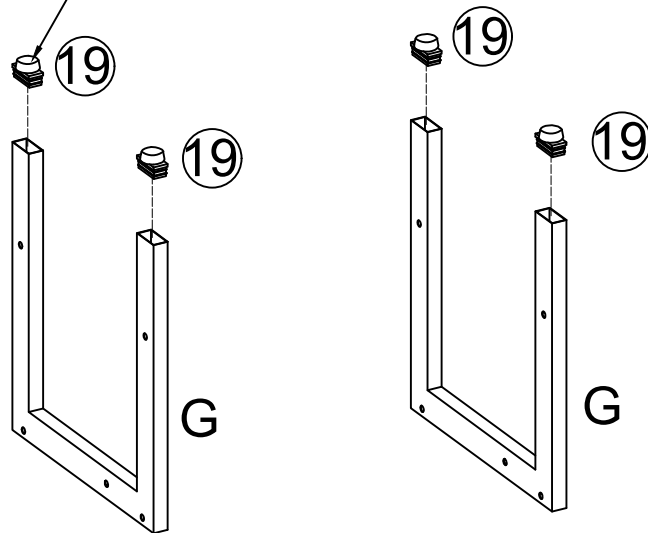


STEP 14

1




x8

Keep the holes of the
Part G ,Part H and Part I as shown

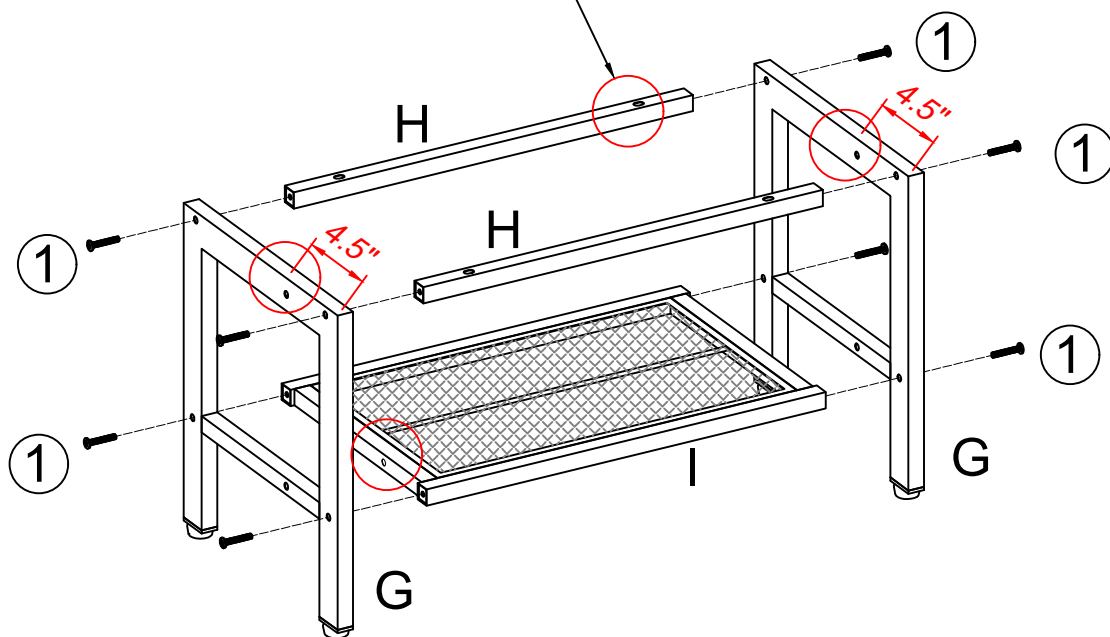

STEP 15


1 x4

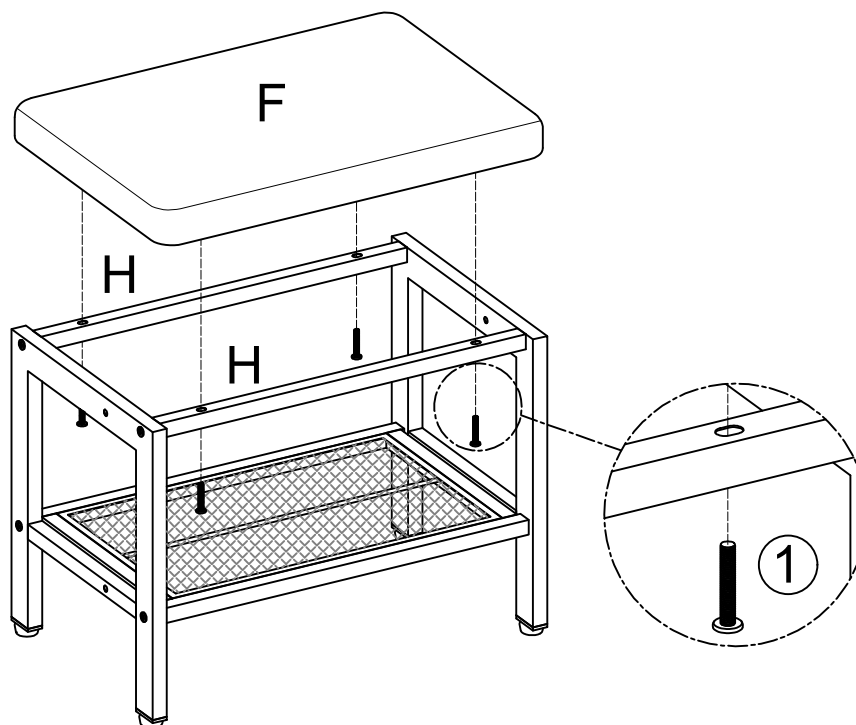

STEP 16


The installation steps are directional, please put all the parts in accordance to the direction of below image first, and then assemble step by step.

18 x6

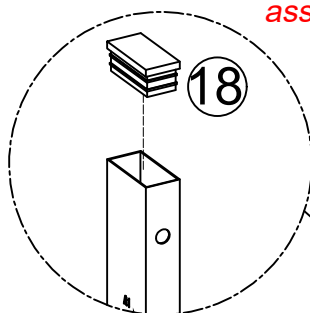

Notice the number A1,B1,C1,C1,D1, E1 is in the top of up legs.

Please use a hammer or solid tools (not included) to knock the plastic pads into the frame.

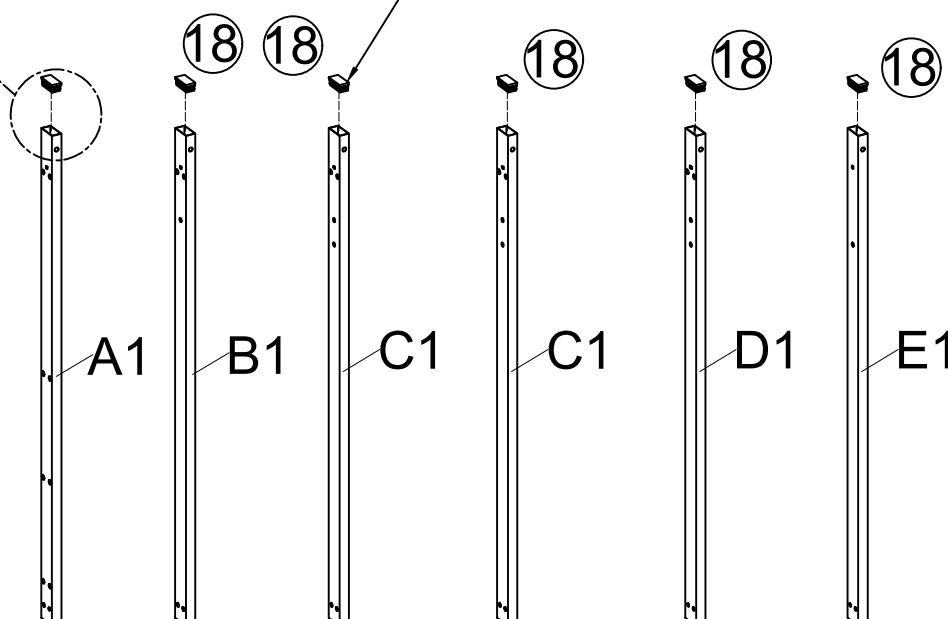


STEP 17

19



x6

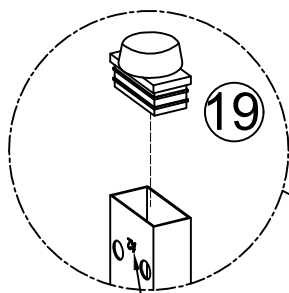

Notice the number
A2,B2,C2,C2,D2,
E2 is at the bottom
of lower legs.

Please use a hammer or solid tools
(not included) to knock the footpads
into the frame.

19

19

19

19

19

A2

B2

C2

C2

D2

E2

STEP 18

3







x16

16



x2

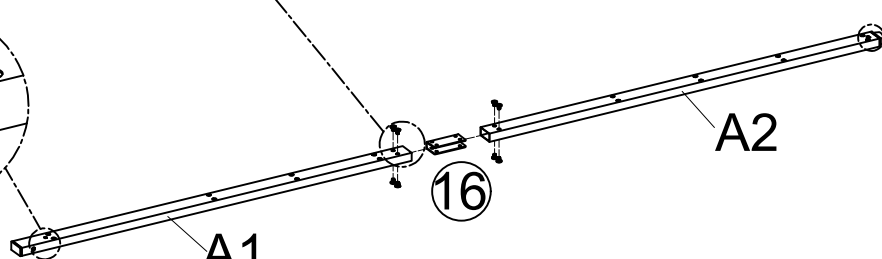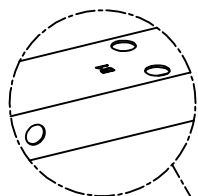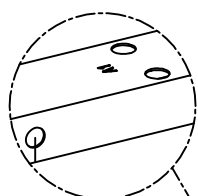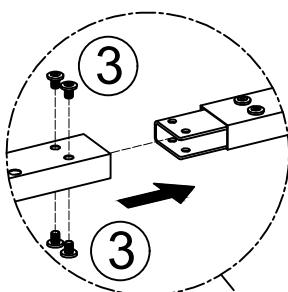

A1



16

A2

B1


16


B2

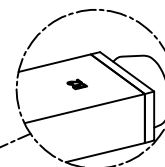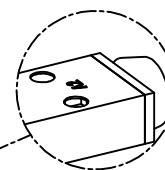

STEP 19


③  x32

①⑥  x4

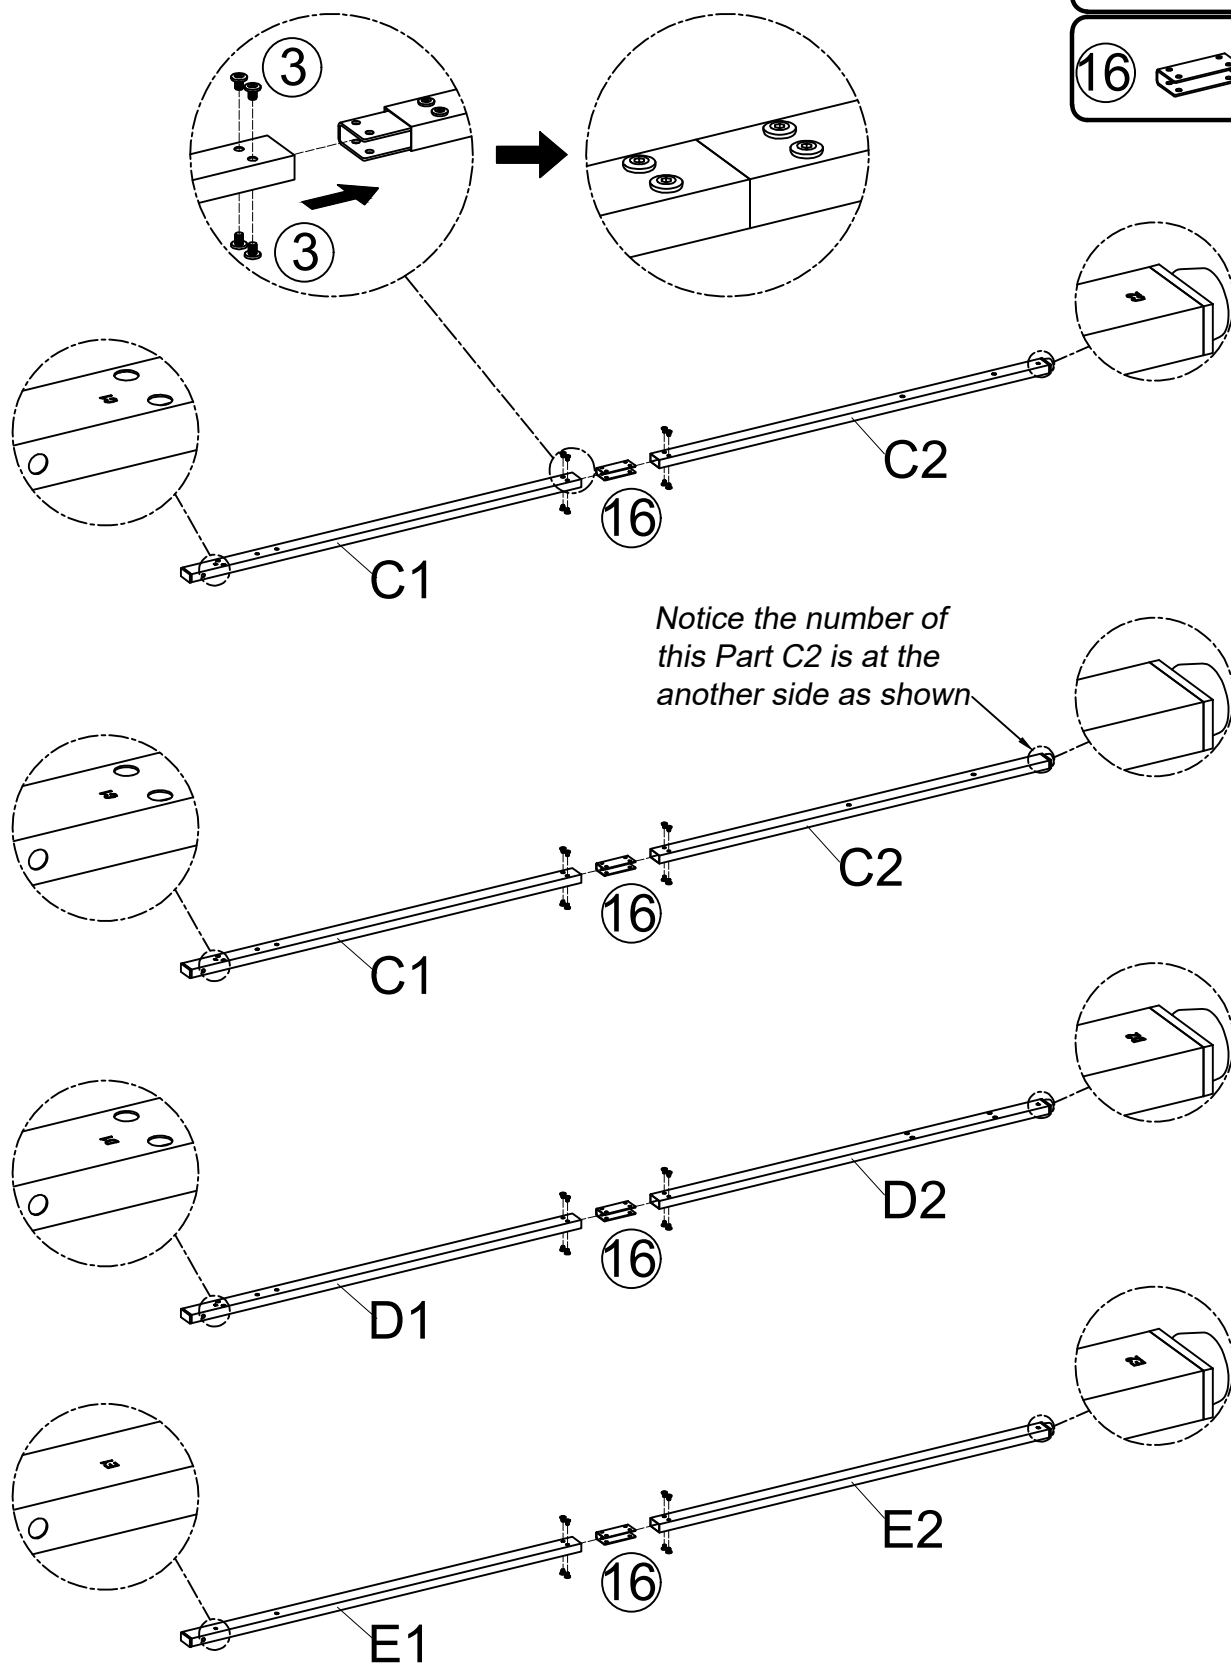


STEP 20

8 x30

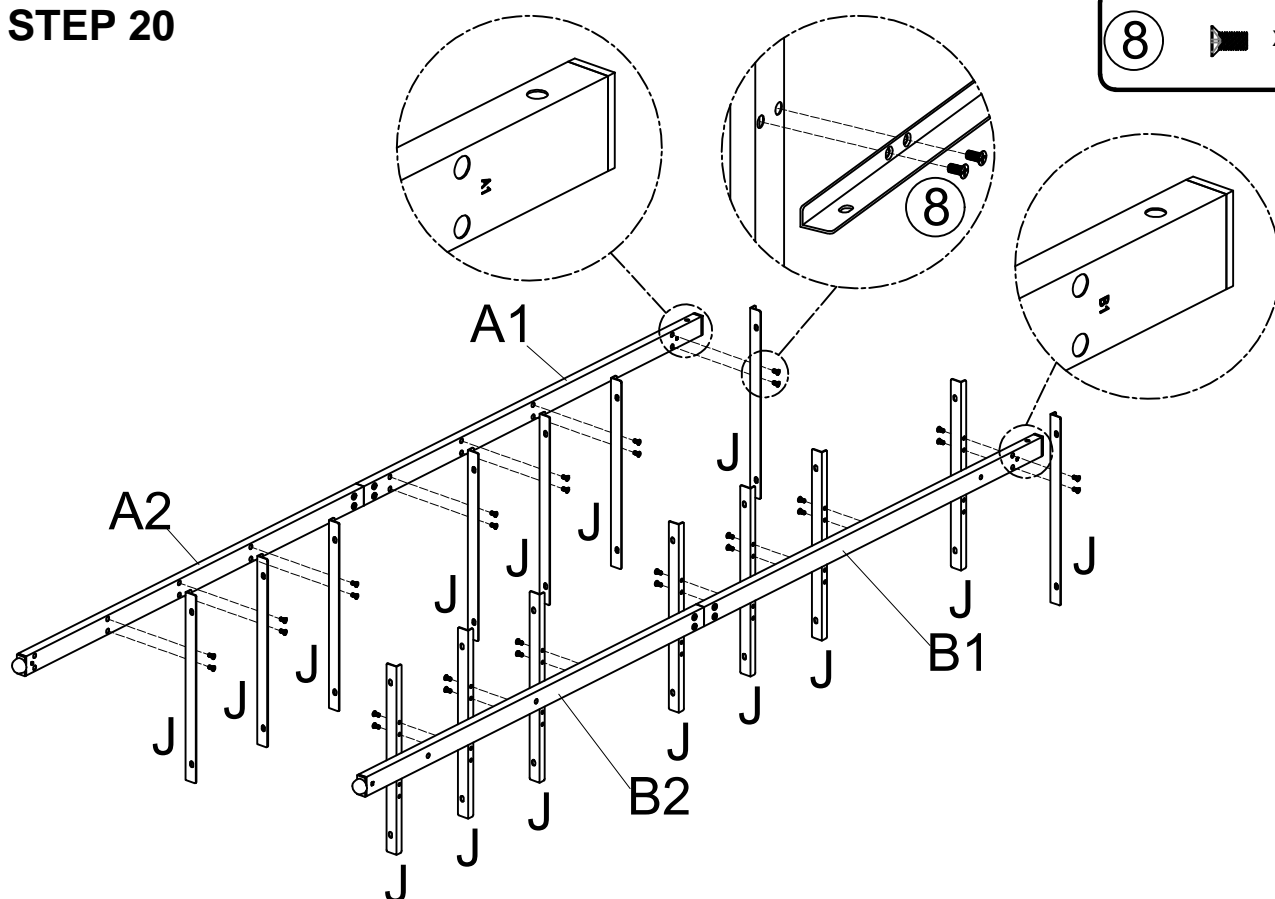


STEP 21

25 x2

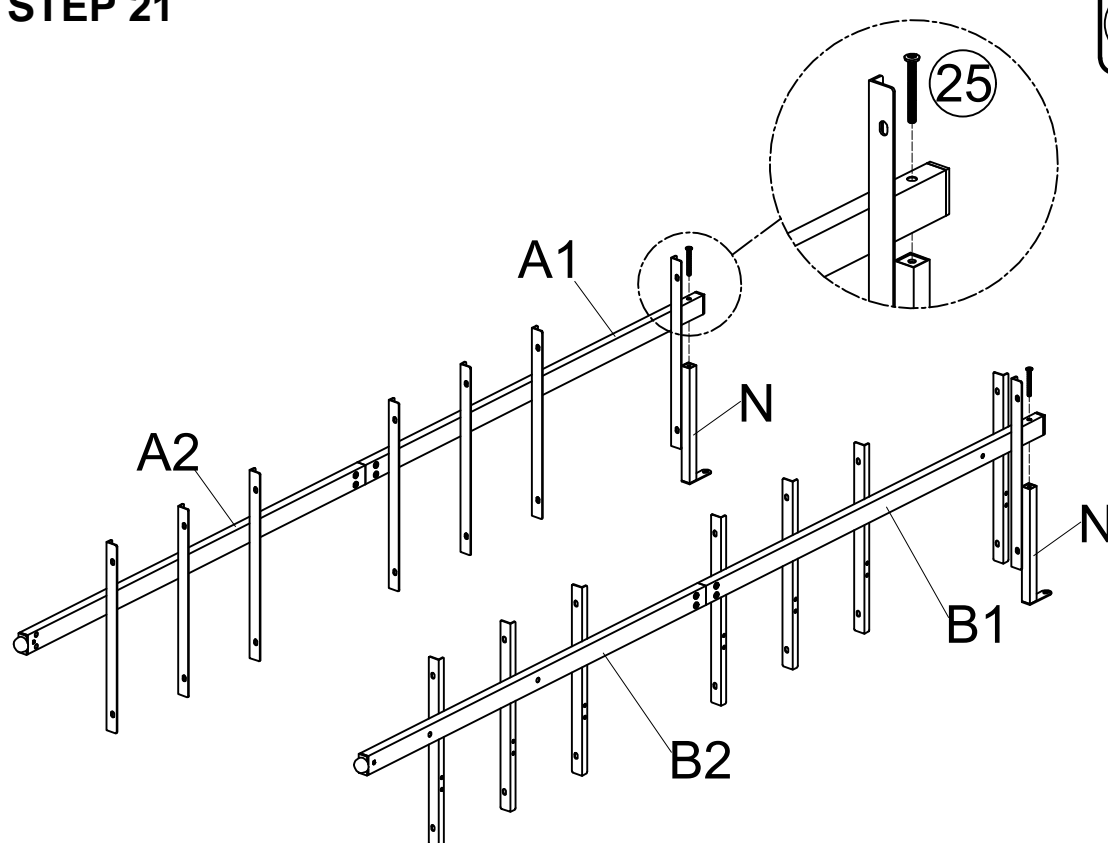

STEP 22


7  x16

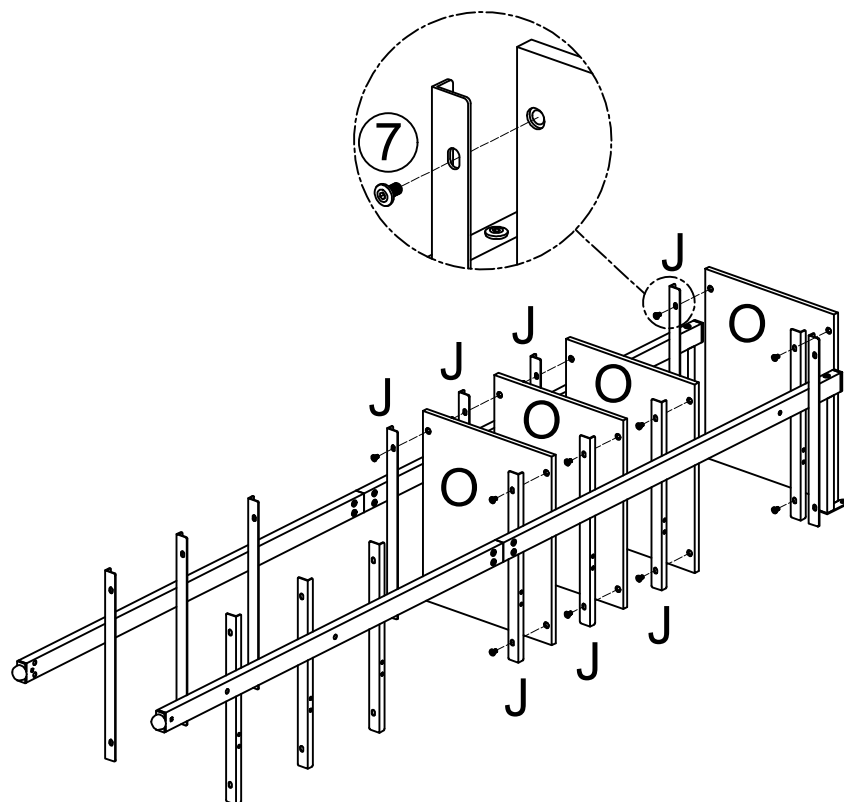


STEP 23

1  x4


7  x12

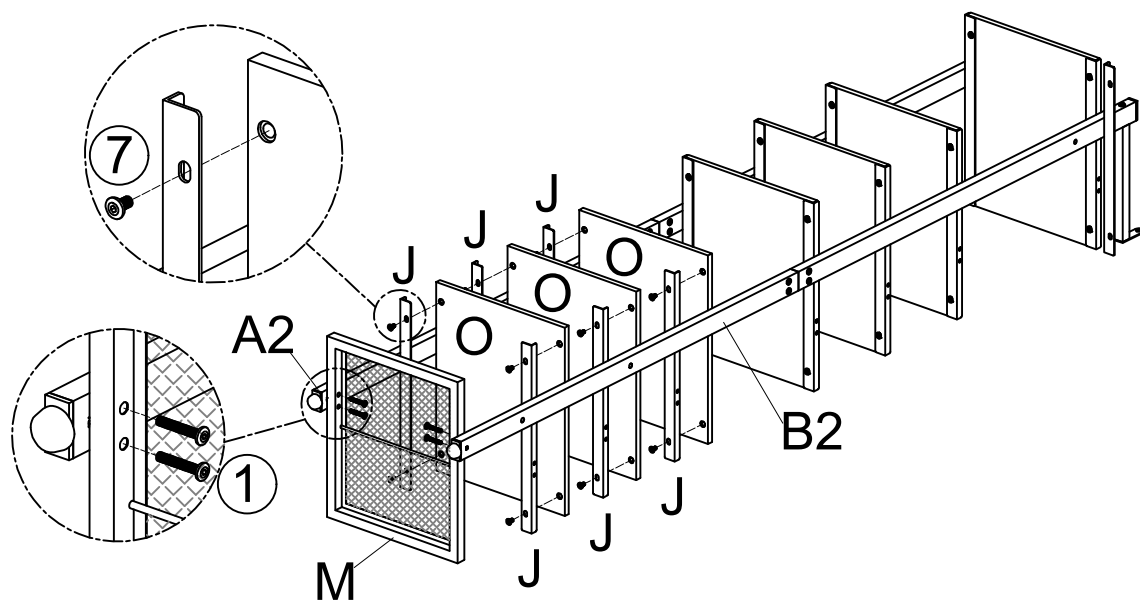


STEP 24

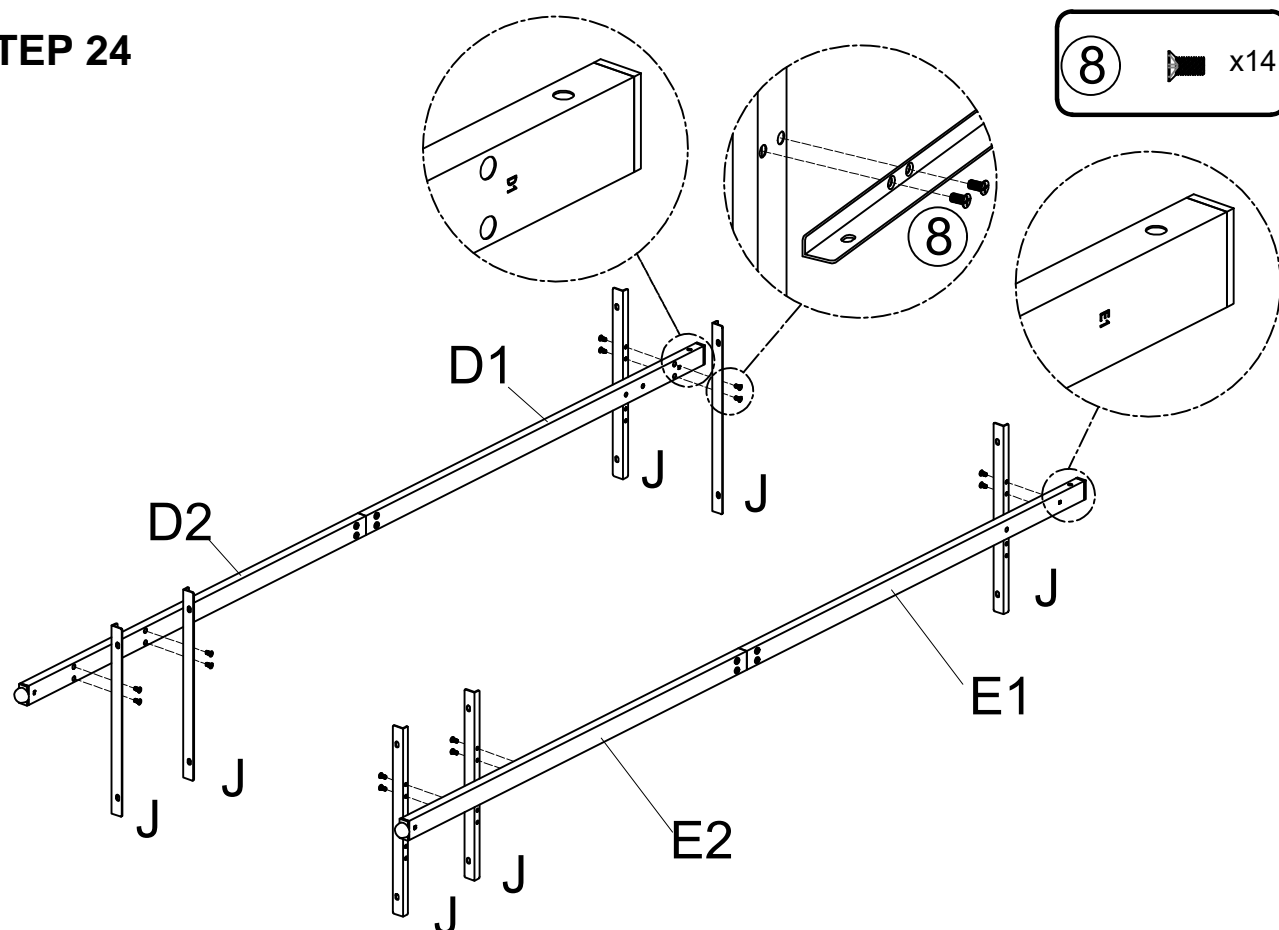


STEP 25

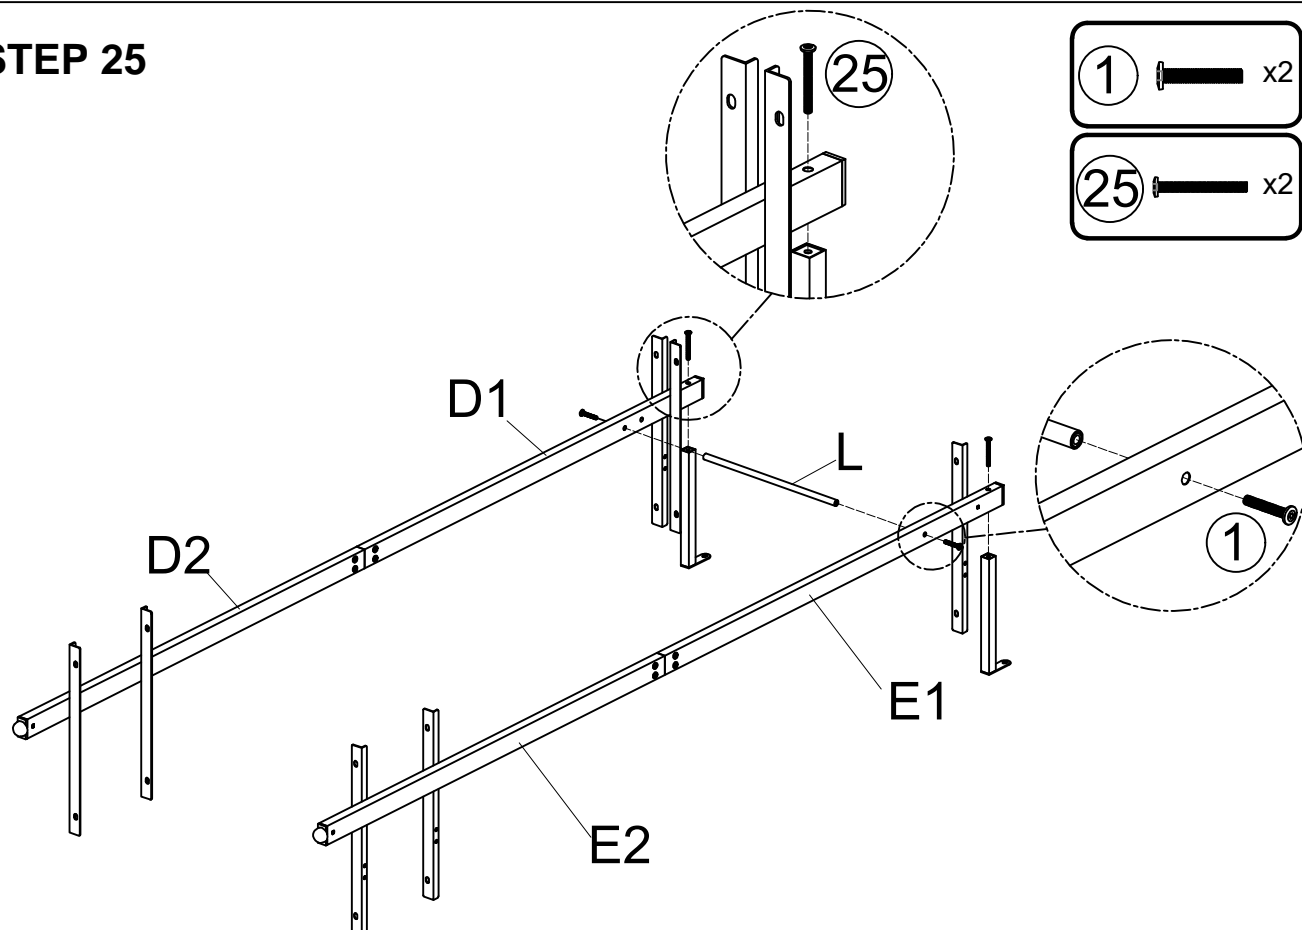


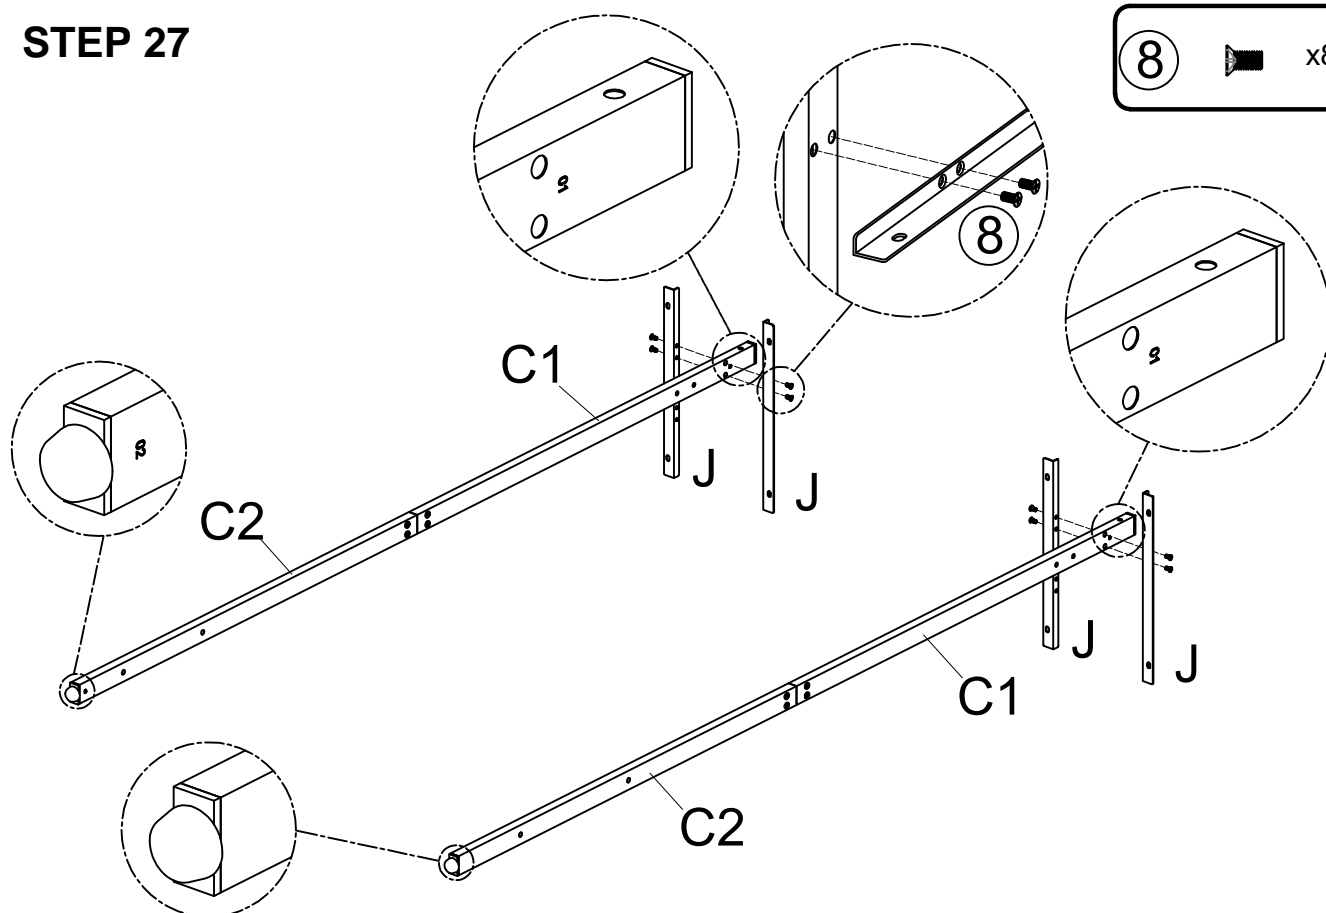
STEP 26

7  x12

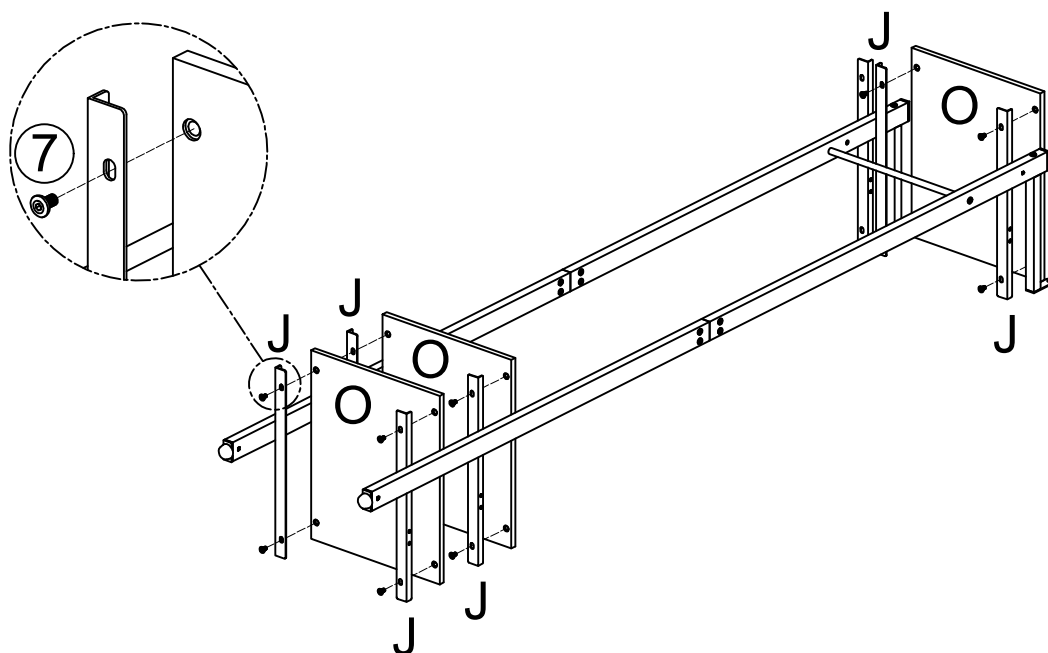


STEP 27


8  x8





STEP 28

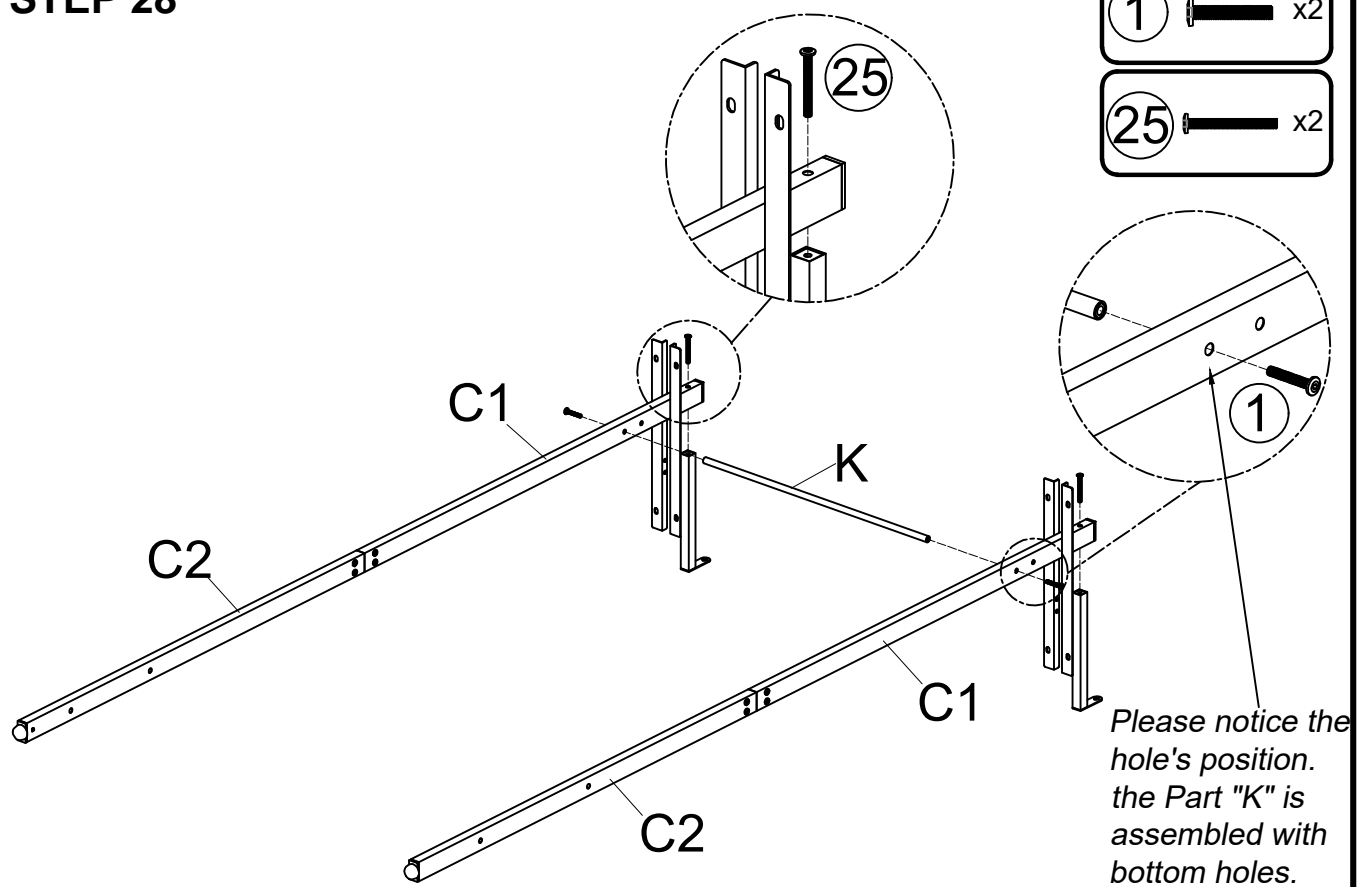

STEP 29


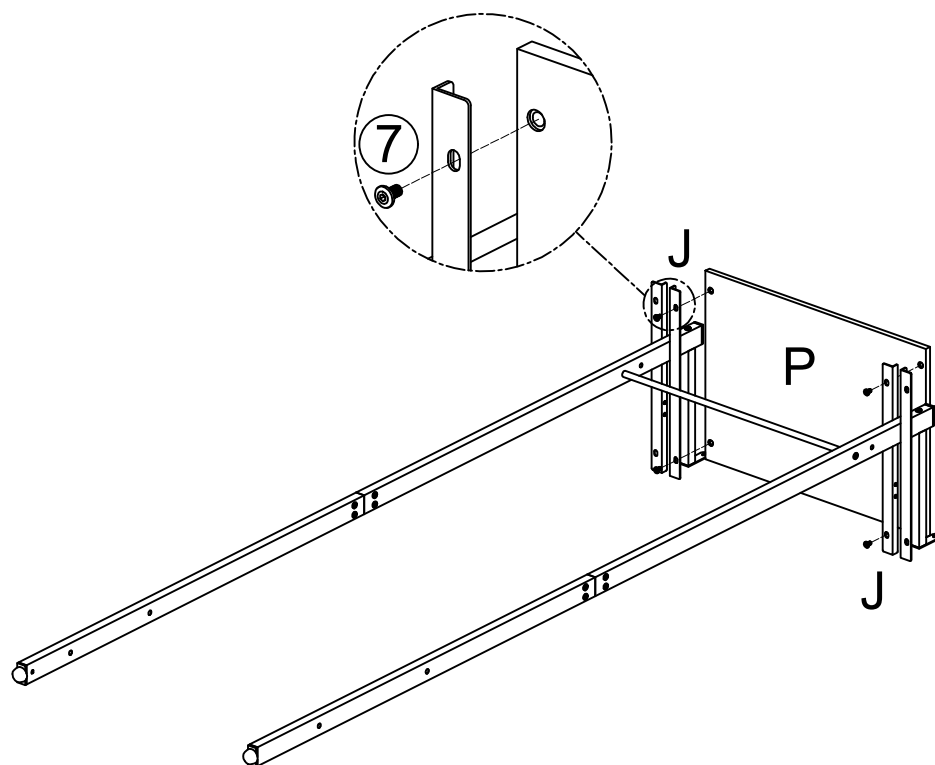


STEP 30

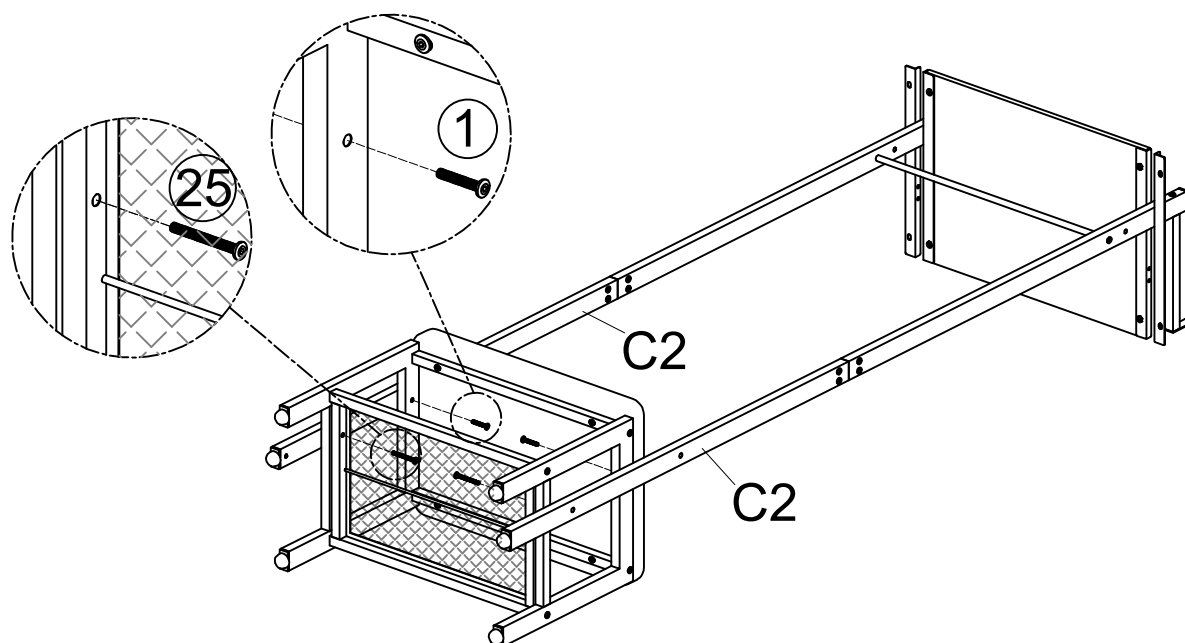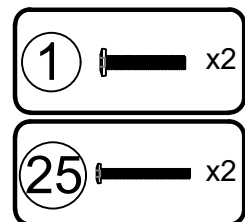


STEP 31

We recommend 2 person to assemble.

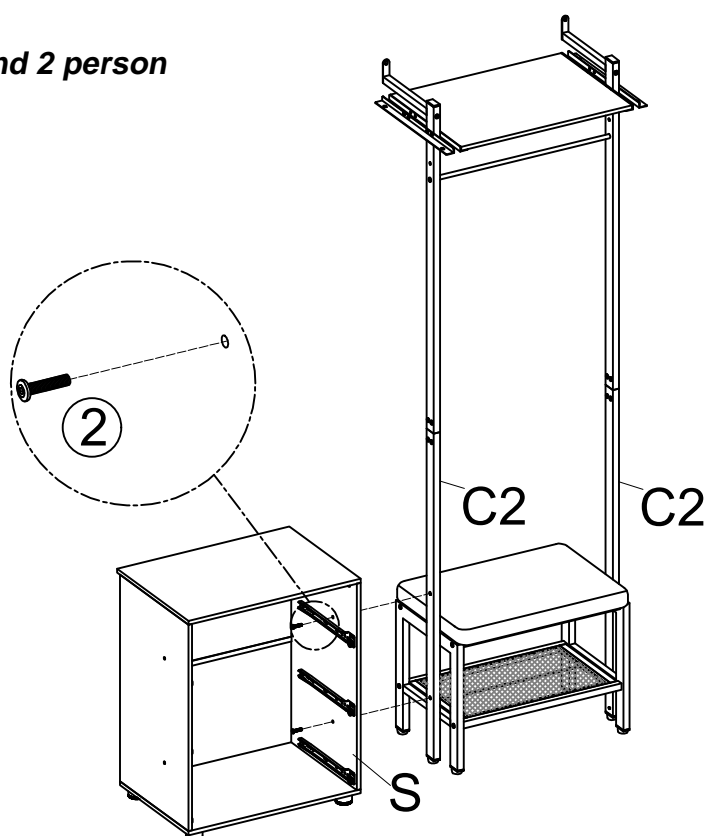


STEP 32


We recommend 2 person to assemble.

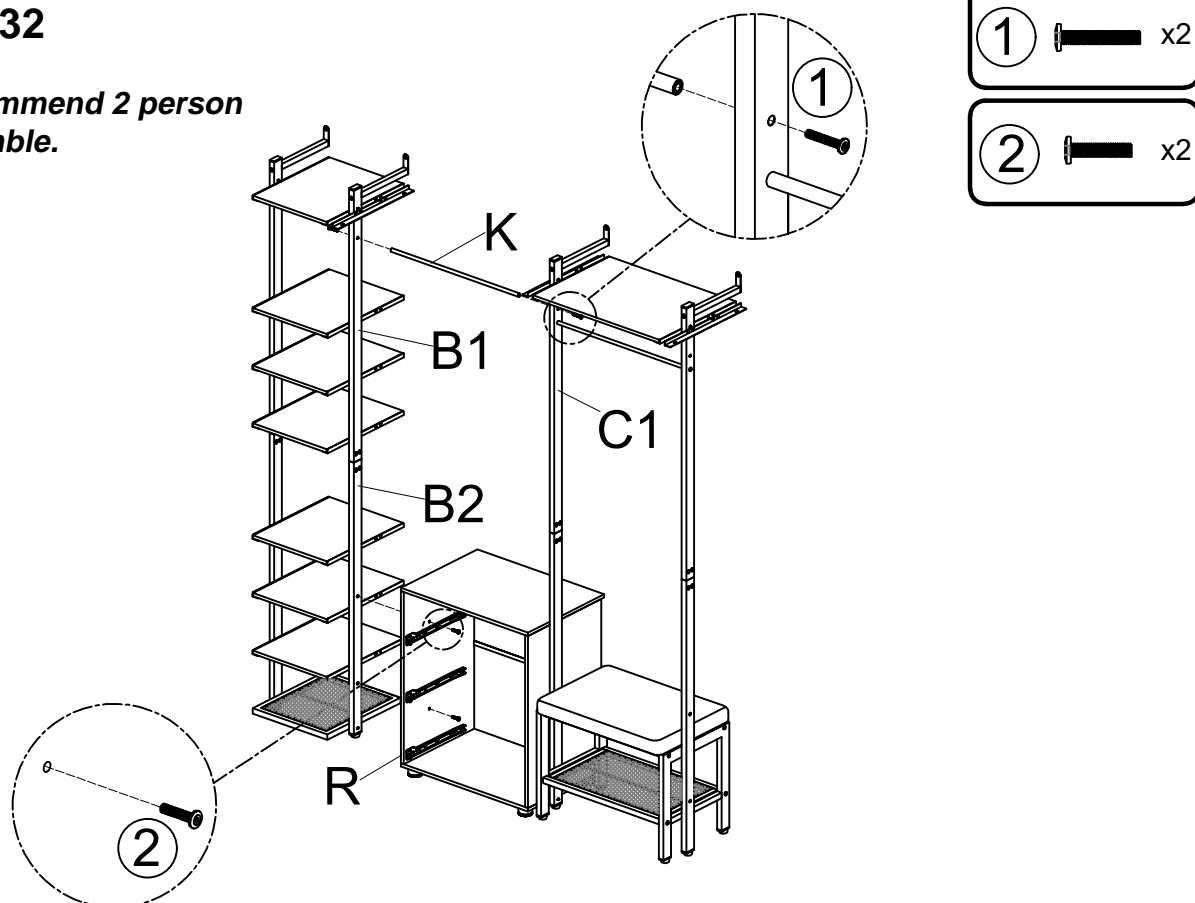


STEP 33

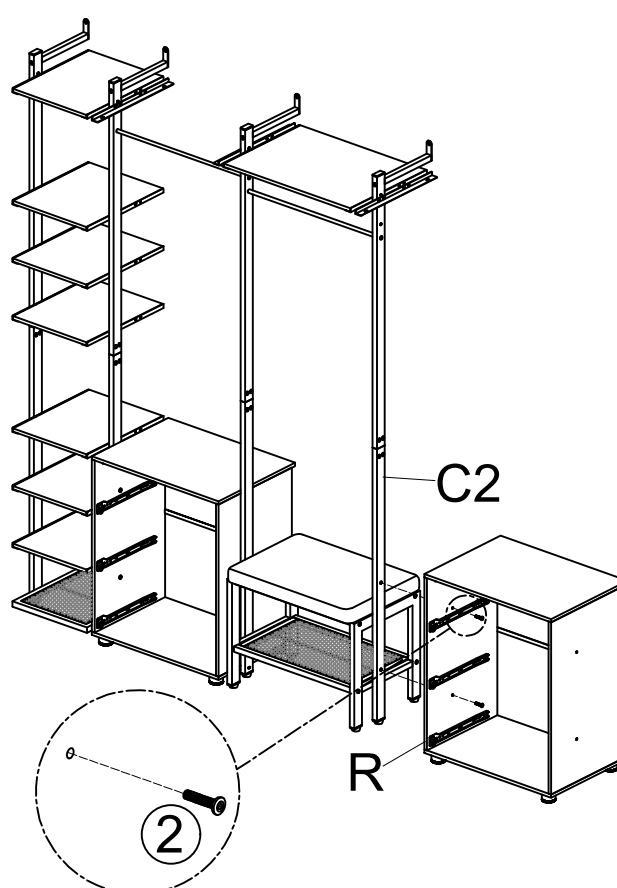


STEP 34

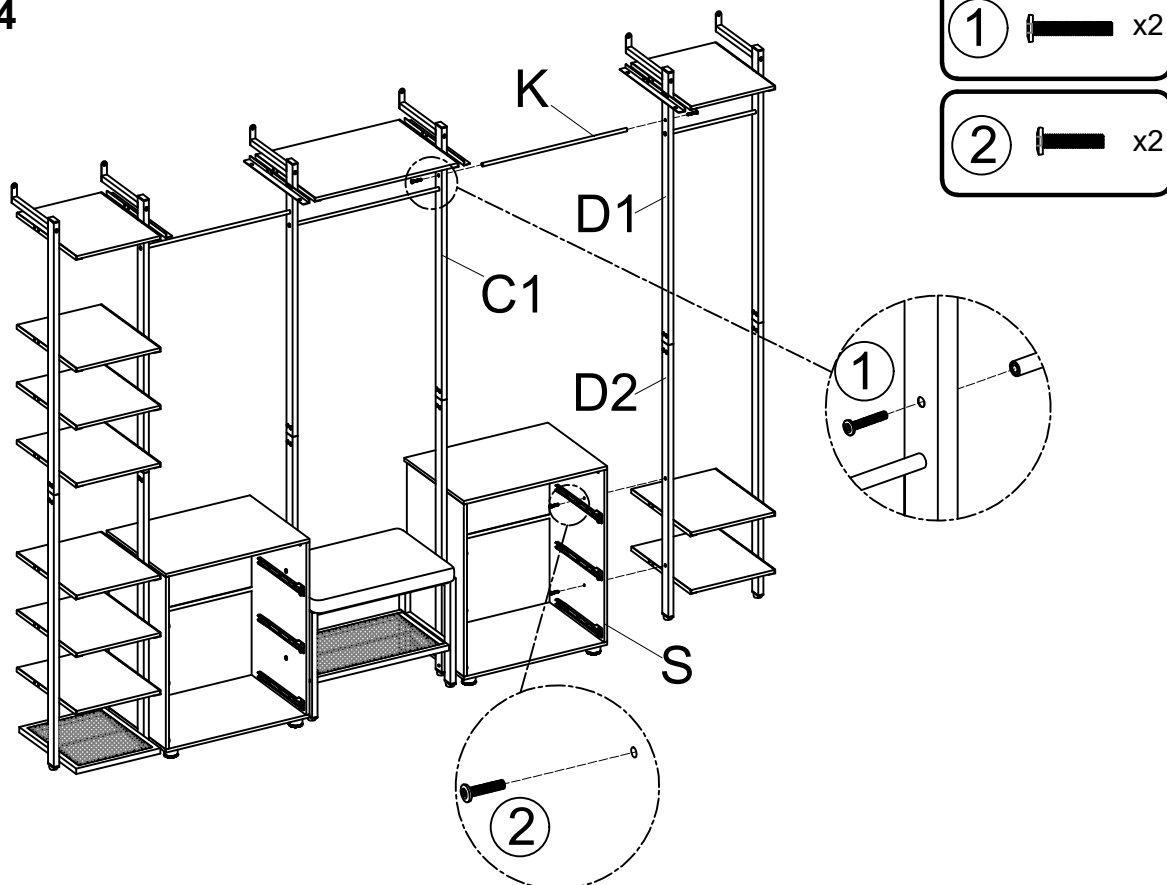

STEP 35

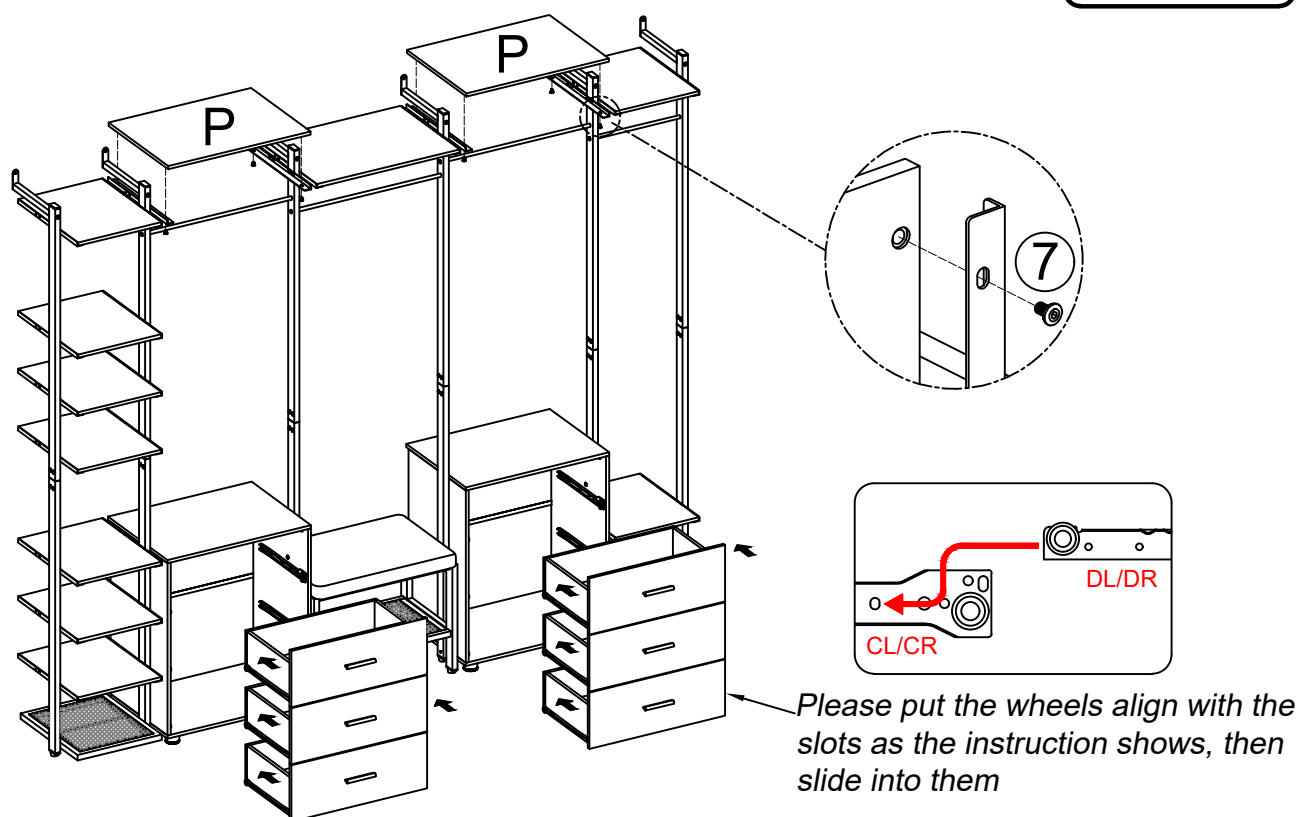



STEP 36



TIPPING RESTRAINT HARDWARE

Note: We have included six Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

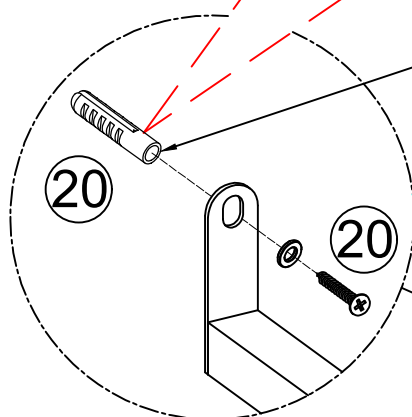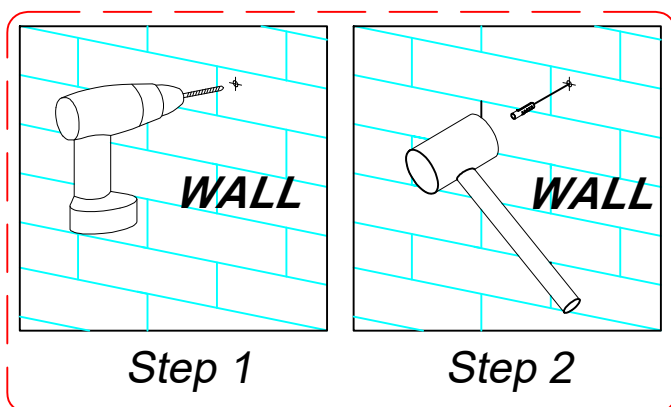

Tipping
Restraint
Hardware

