


ASSEMBLY INSTRUCTIONS

Storage cabinet

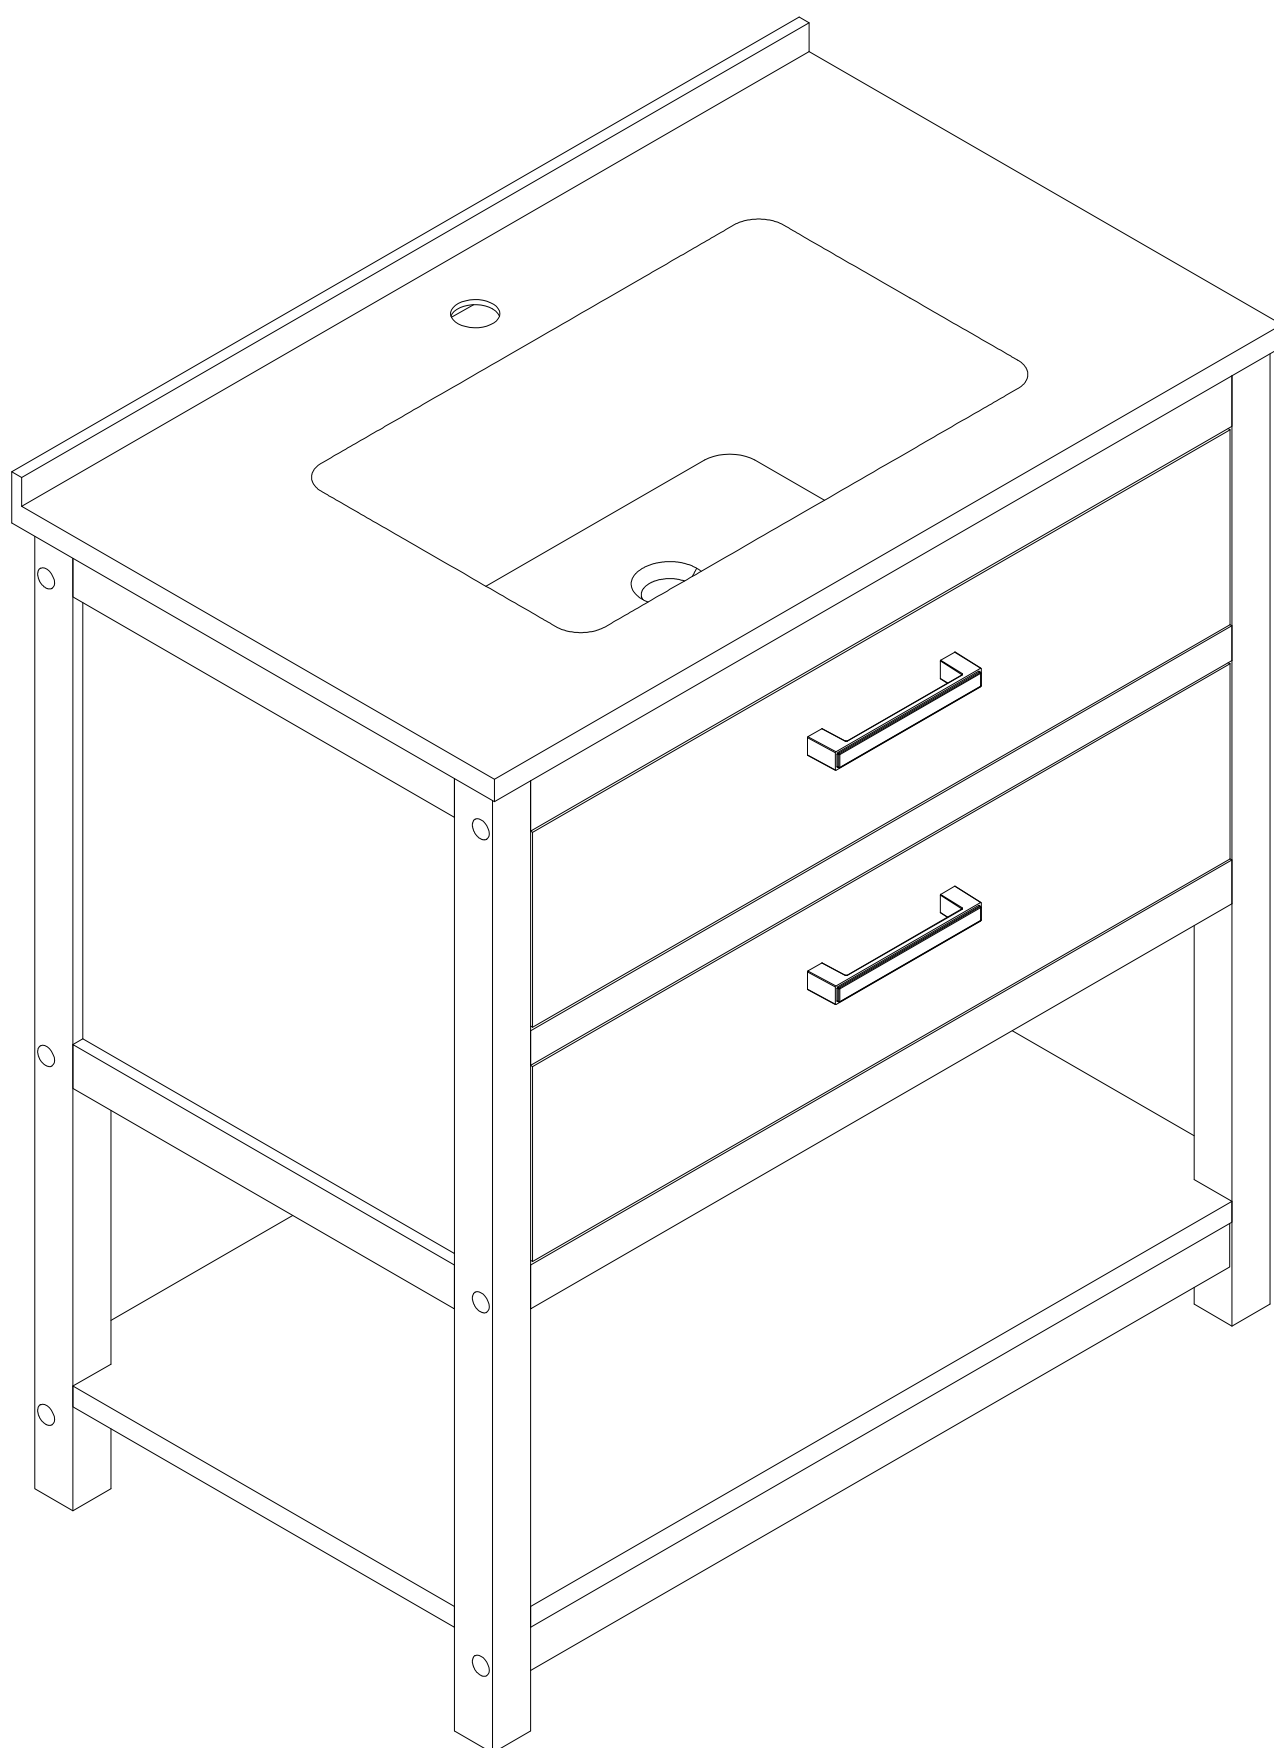

ACBV01

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Important Safety Information



- *Please read all instructions carefully before assembling this storage cabinet.*
 - *For your safety, assembly by two or more adults is strongly recommended.*
 - *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
 - *Hardware may loosen overtime. Periodically check that all connections are tight.*
-

Before Assembly

















- *Power tools are highly recommended for assembly.*
 - *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
 - *The shipping box provides an ideal work surface.*
 - *To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
 - *Use the parts and hardware lists below to identify and separate each of the pieces included.*
Note: Do not fully tighten all bolts until all parts are in place.
 - *Failure to follow these instructions may cause the bolts to misalign during assembly.*
-

Care and Cleaning



- *Routine cleaning of the storage cabinet can be completed with only warm water and soap*

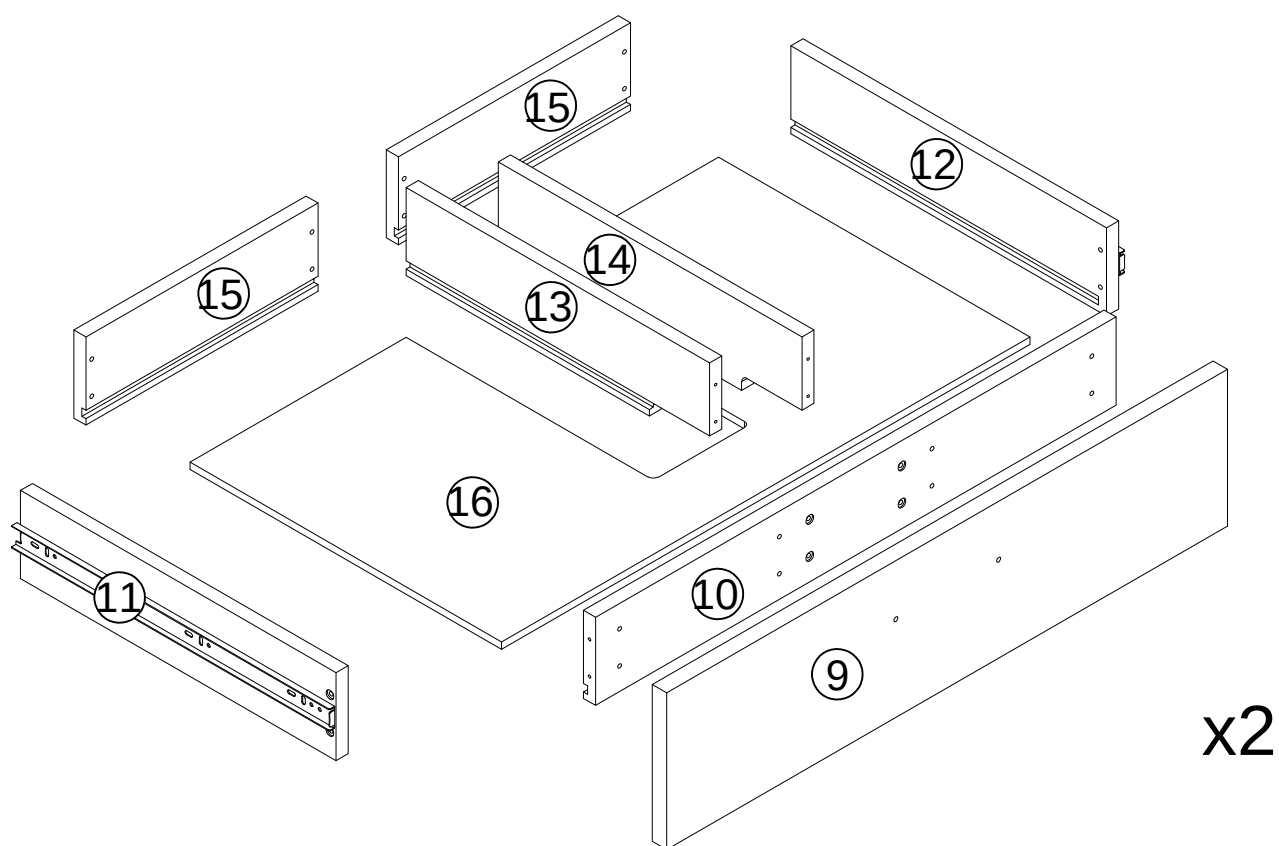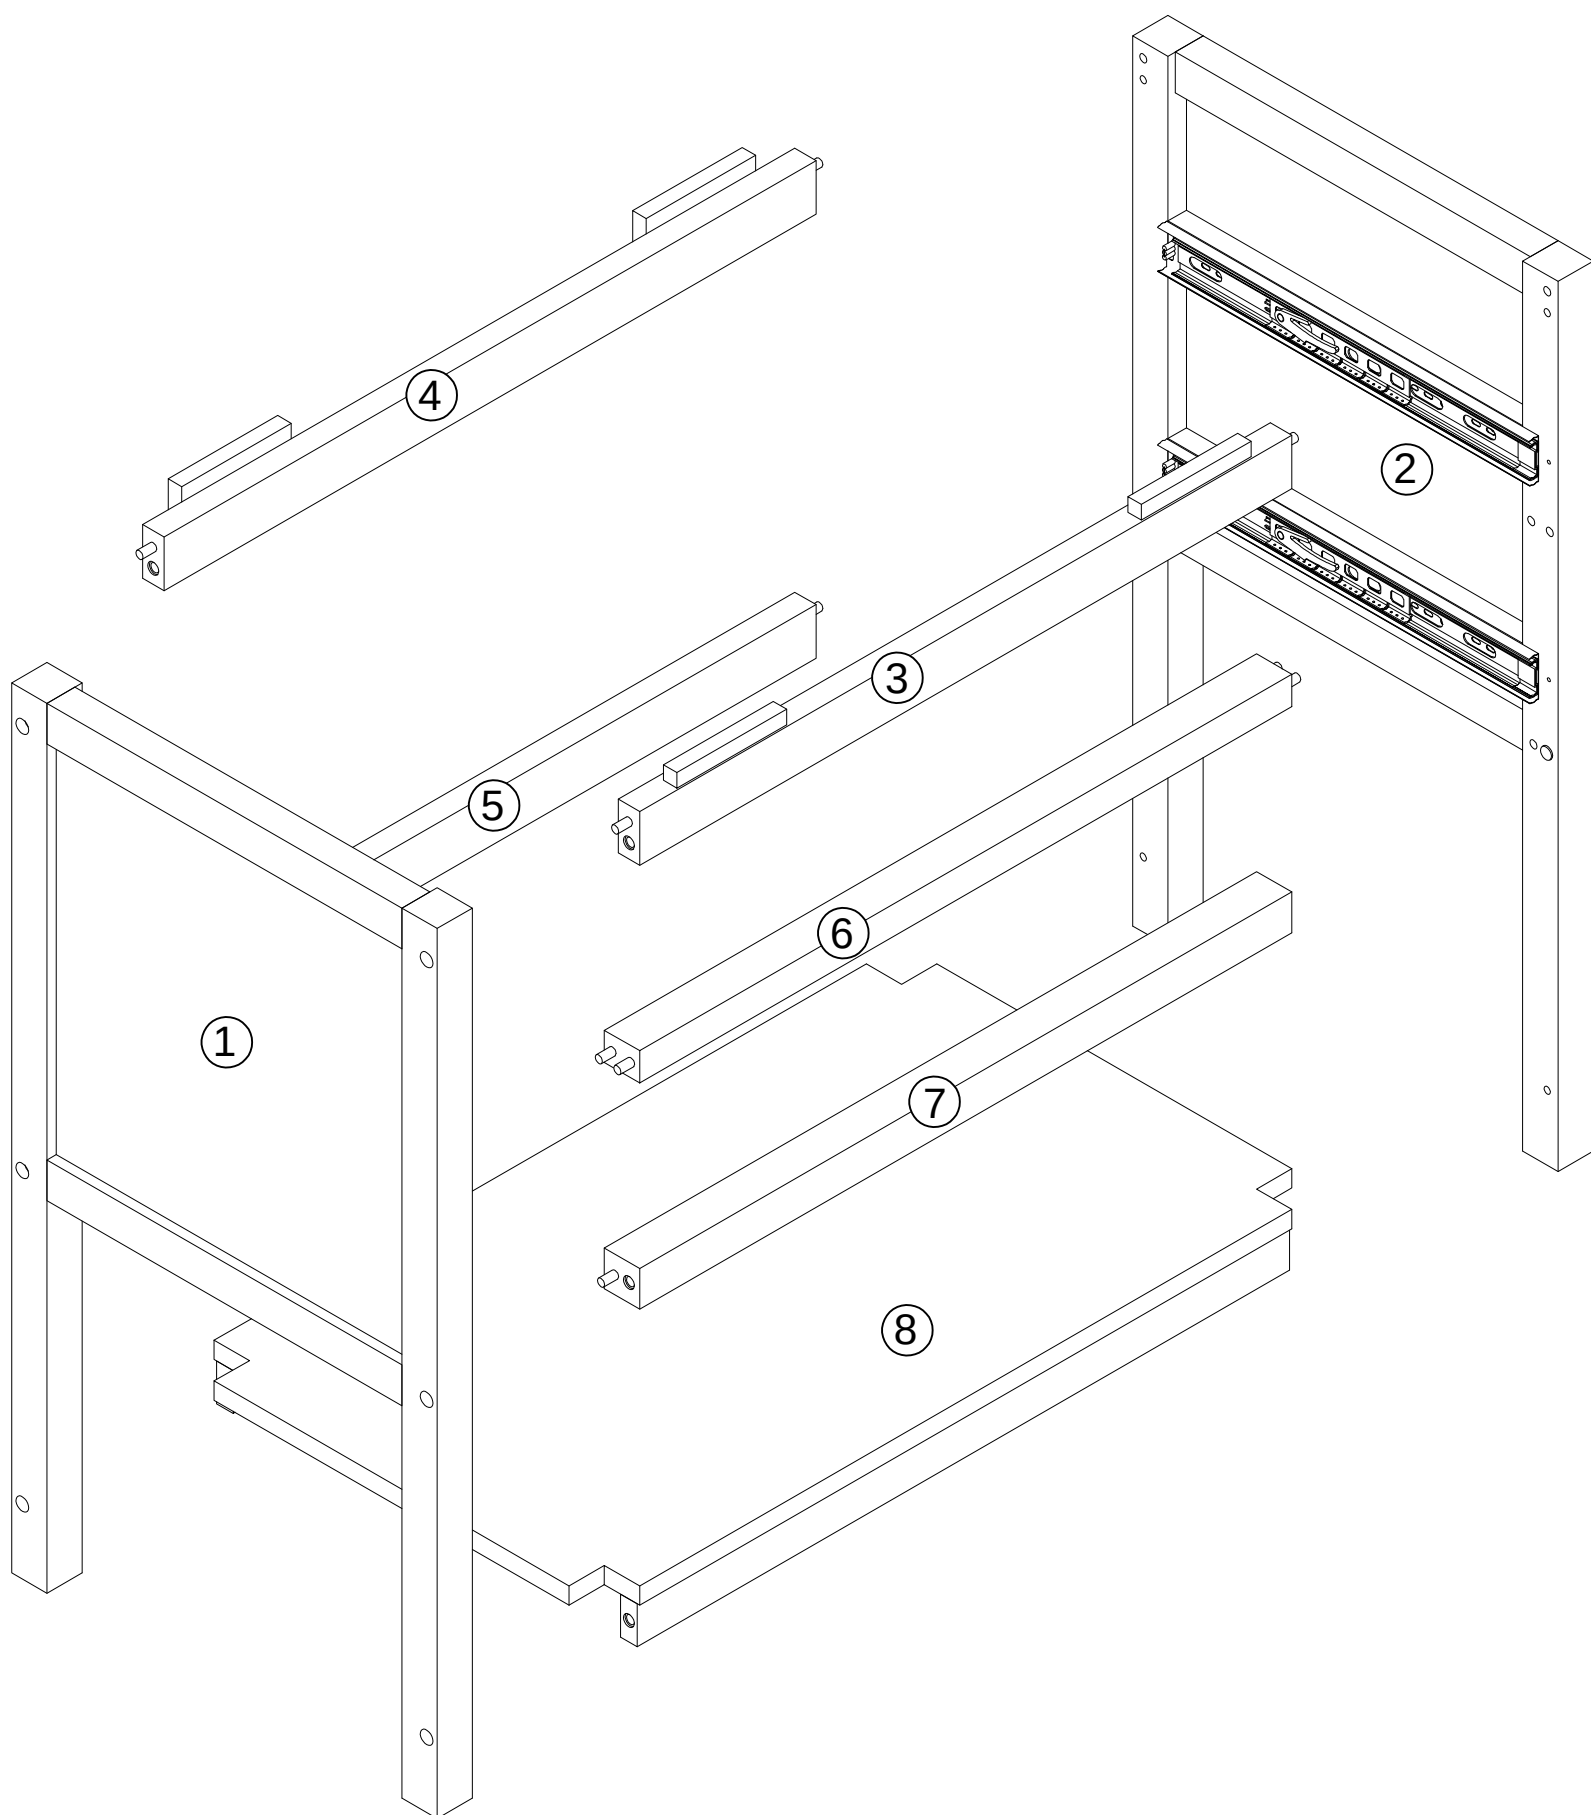



Part List

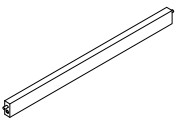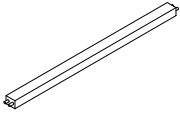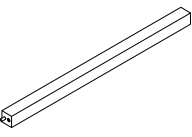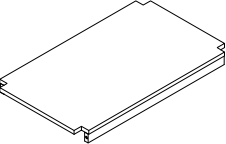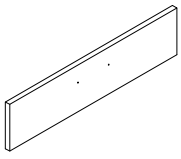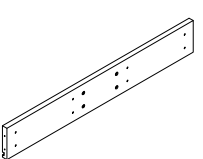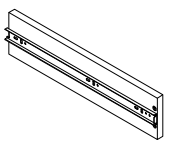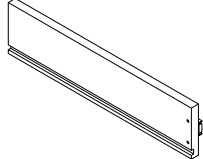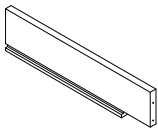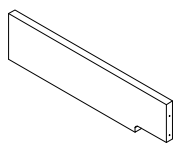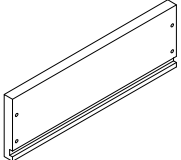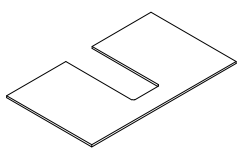① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x1 	⑦ x1 	⑧ x1 
⑨ x2 	⑩ x2 	⑪ x2 	⑫ x2 
⑬ x2 	⑭ x2 	⑮ x4 	⑯ x2 

Hardware List


Ⓐ M6*50mm Bolt Qty: 12 	Ⓑ M4* Bolt Qty: 4 	Ⓒ M4*30mm Screw Qty: 48+2 	Ⓓ Handle Qty: 2 
Ⓔ Sink Qty: 1 	Ⓕ Decorative cover Qty: 12+2 		

Tools Needed for Assembly

 Allen key	 Allen key
---	---


Step 1

- ① x 1
- ③ x 1
- ⑦ x 1
- Ⓐ x 2


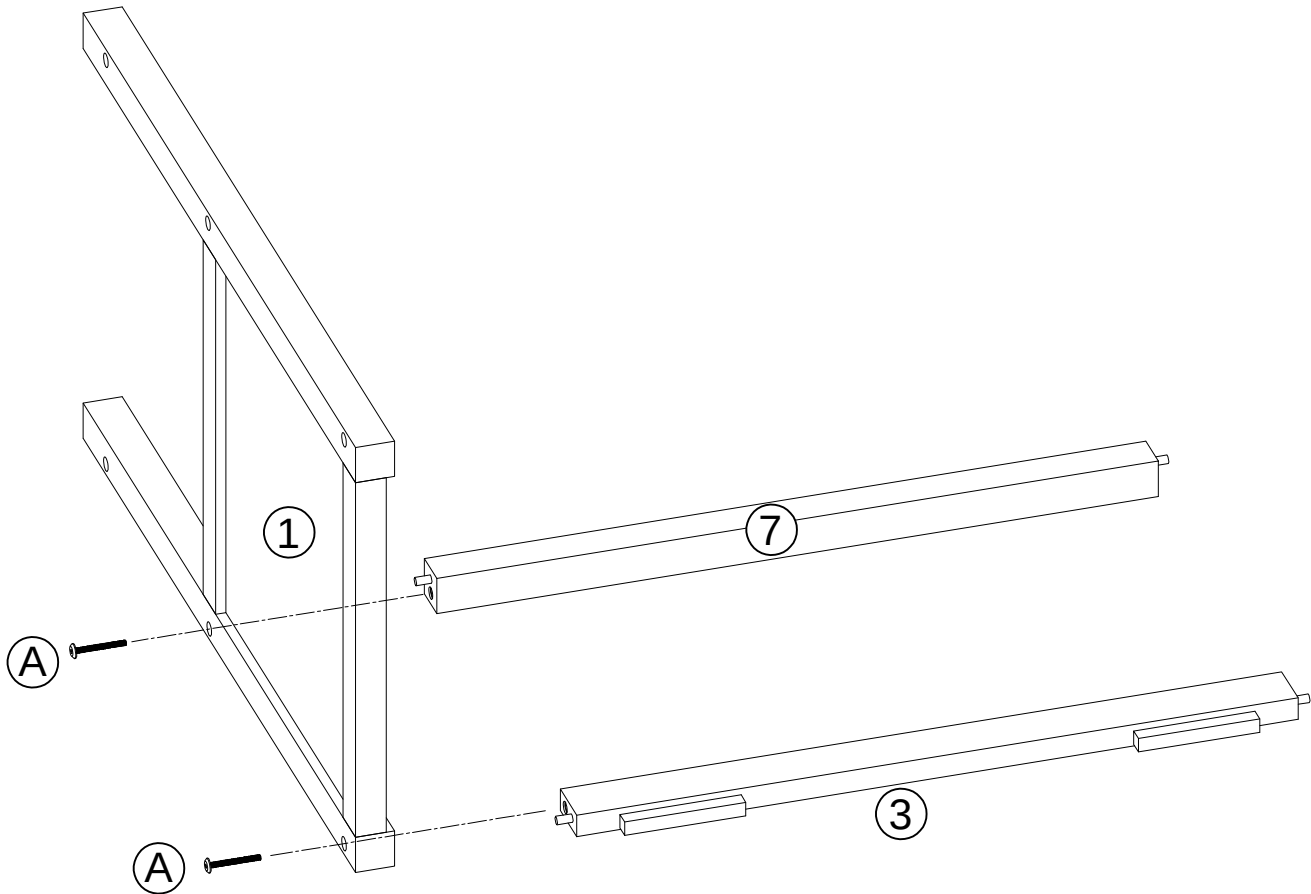


Step 2



- ④ x 1
- ⑤ x 1
- Ⓐ x 2

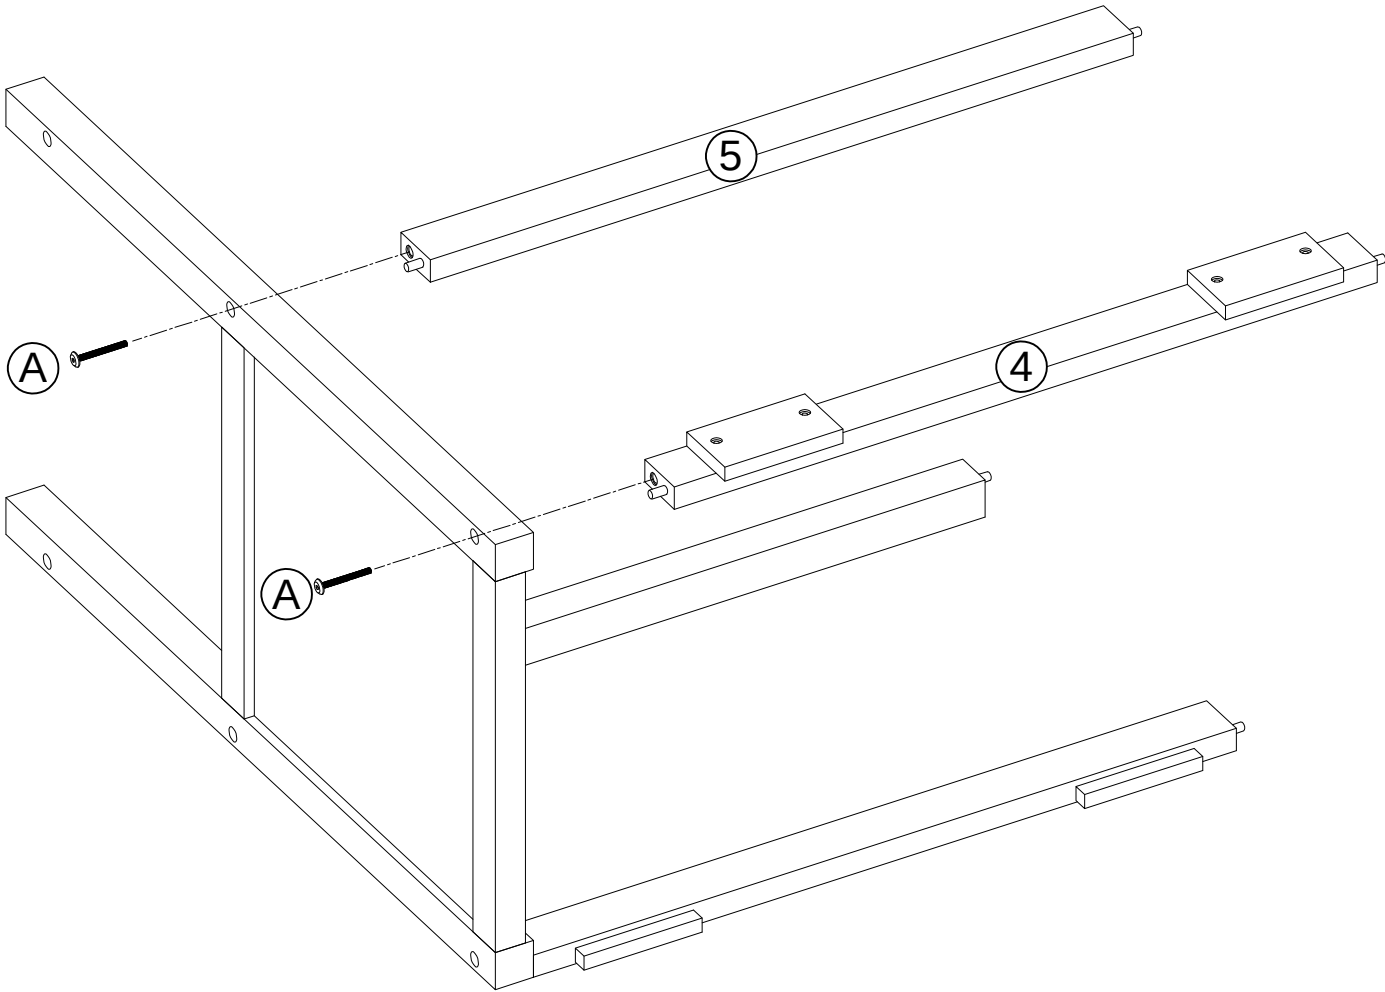



Step 3

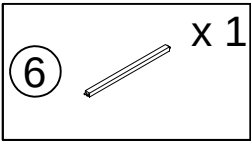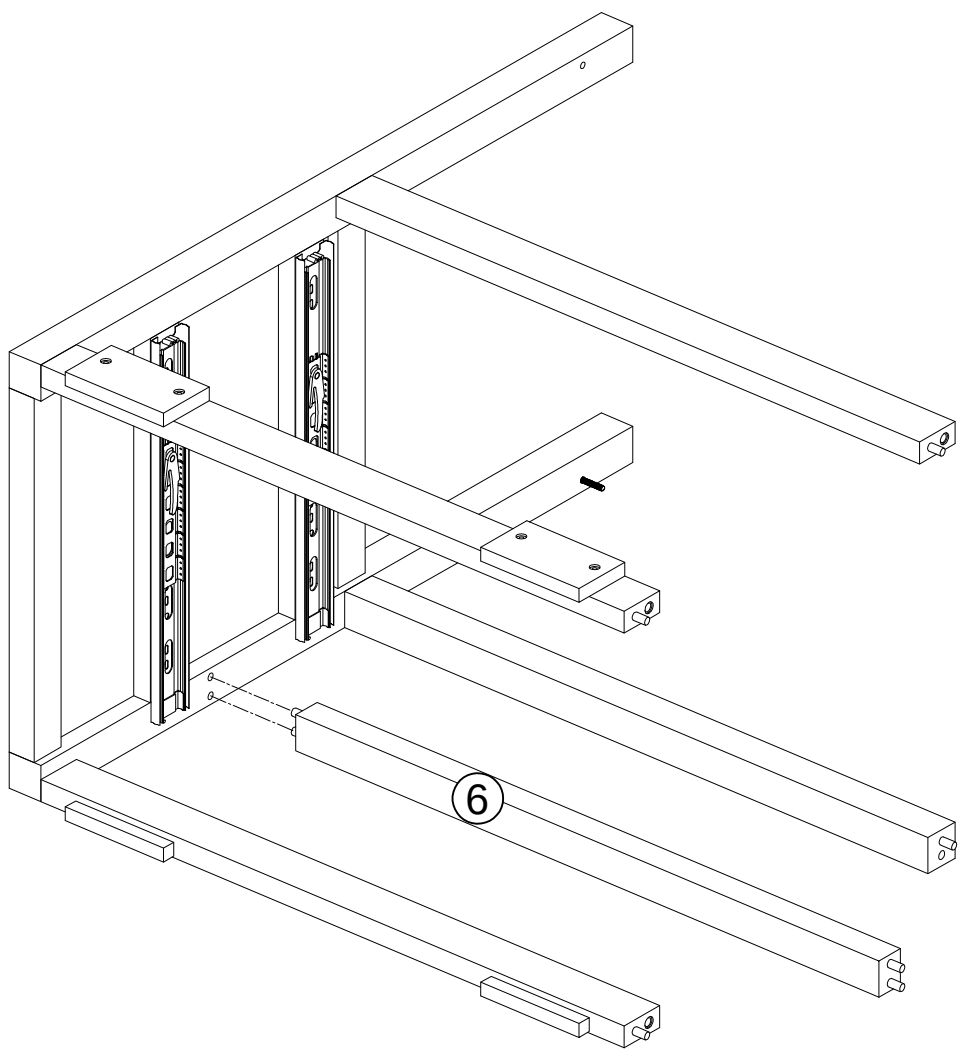



Step 4

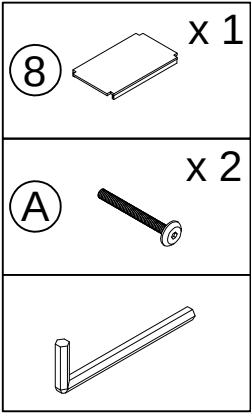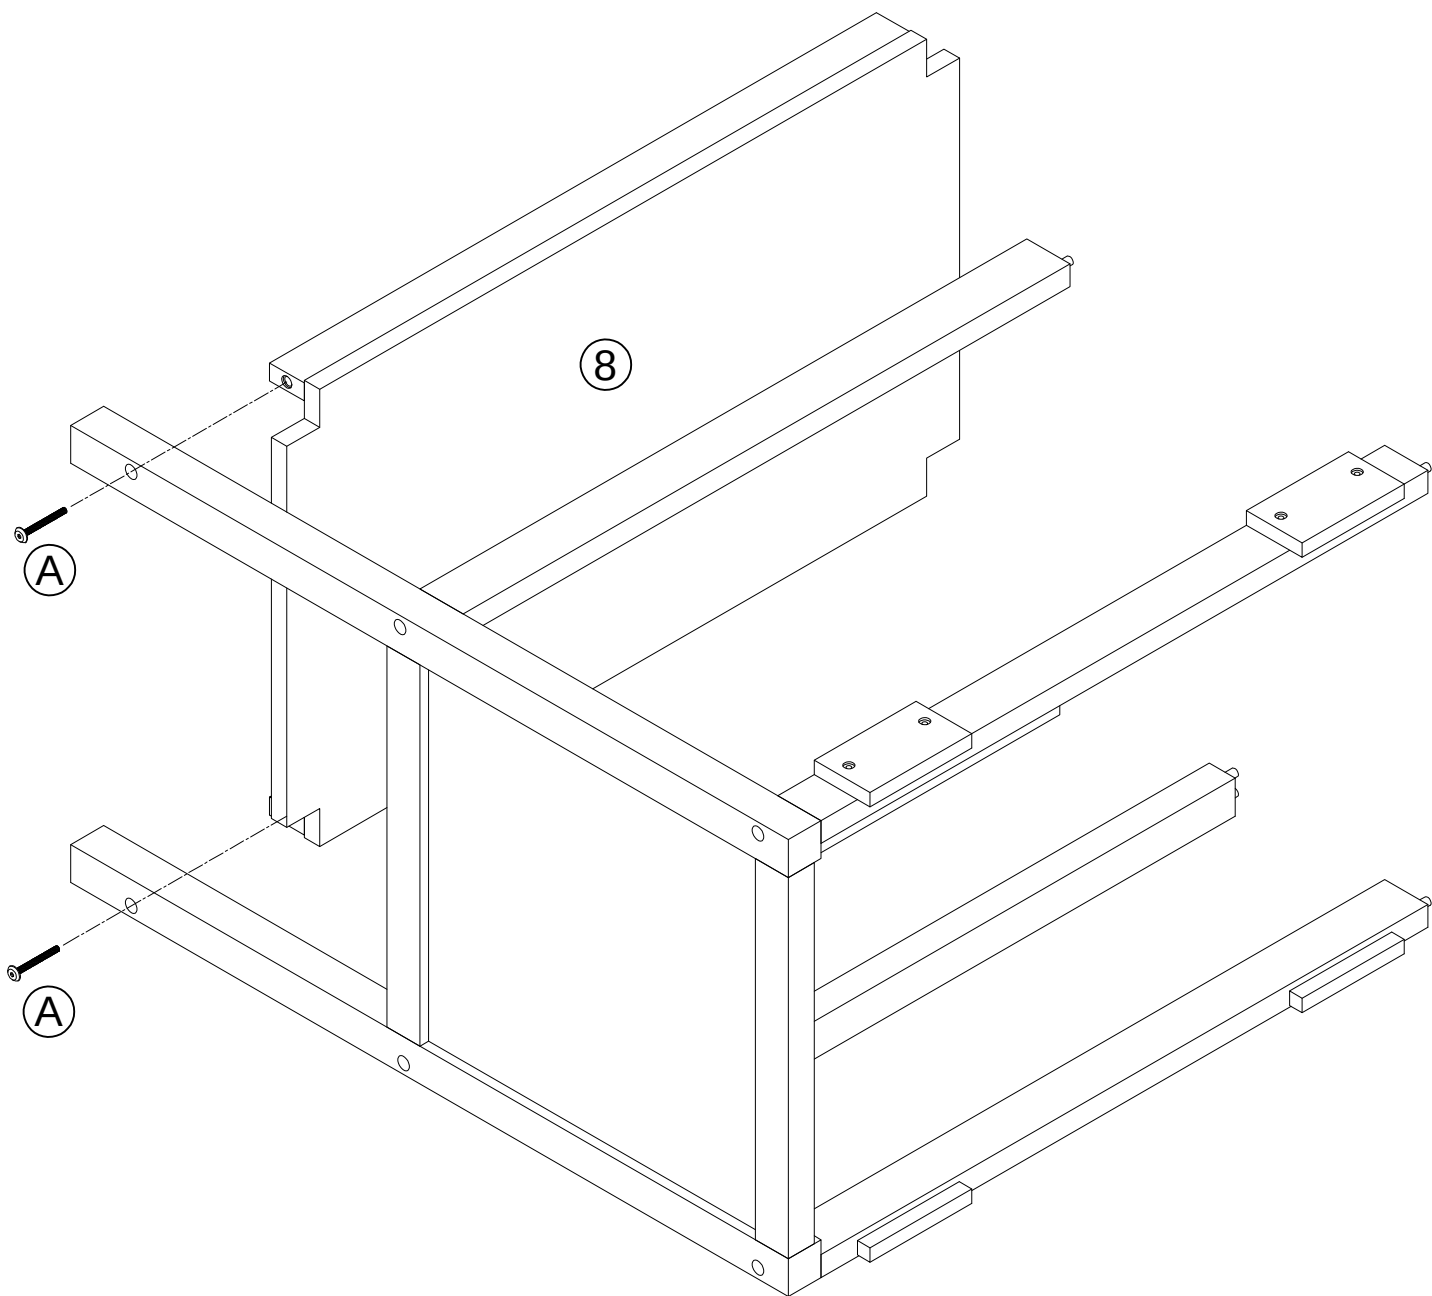



Step 5

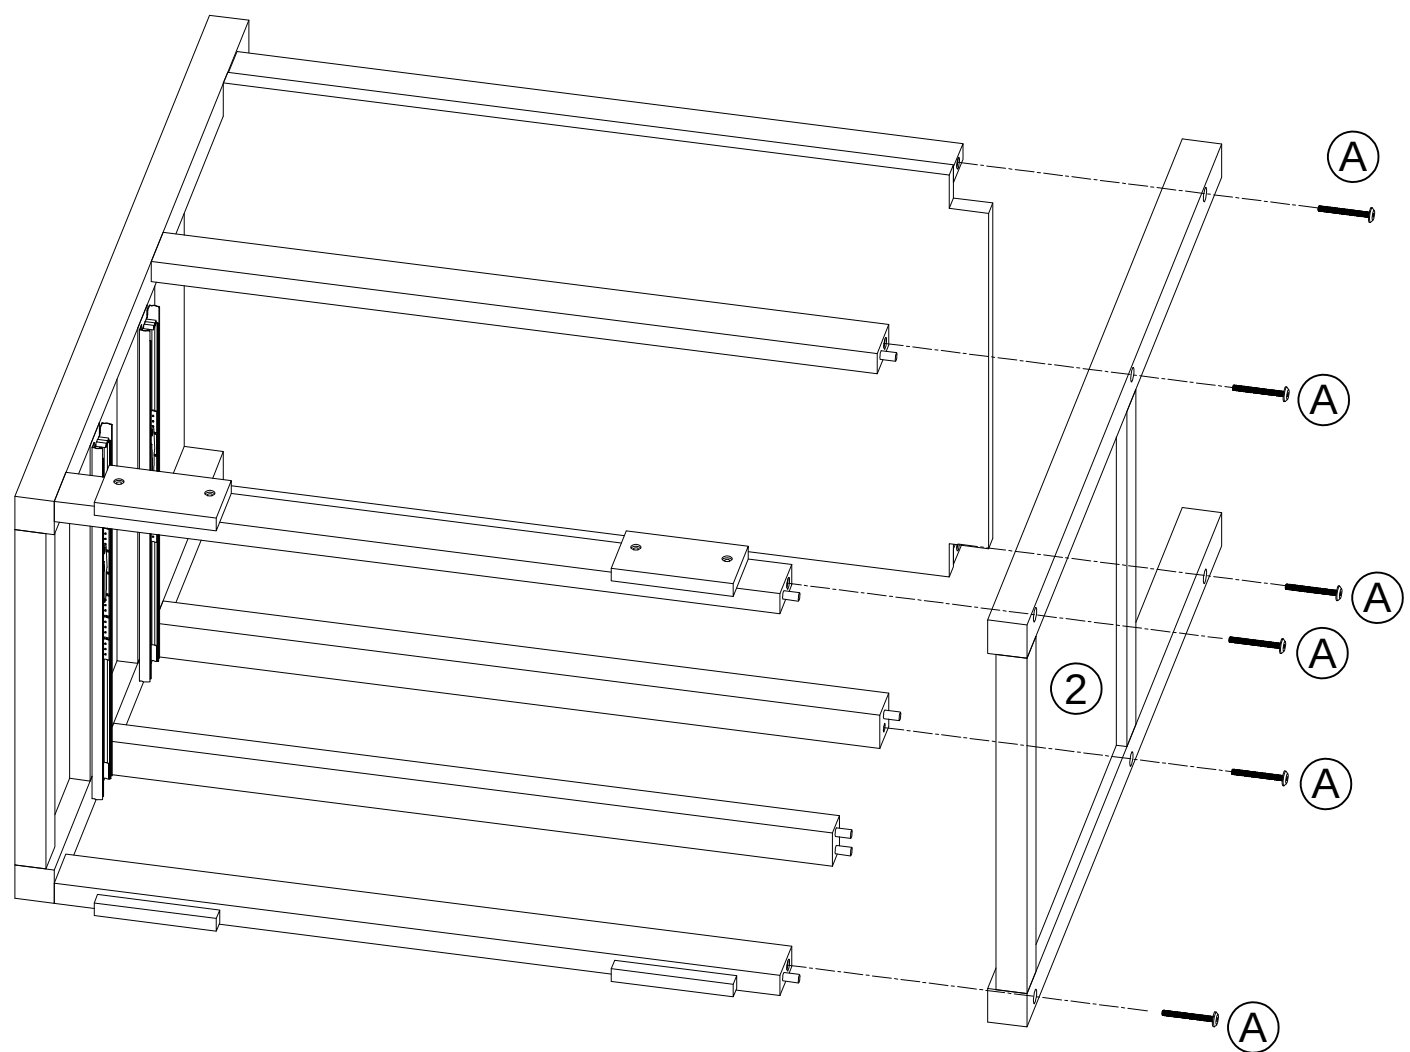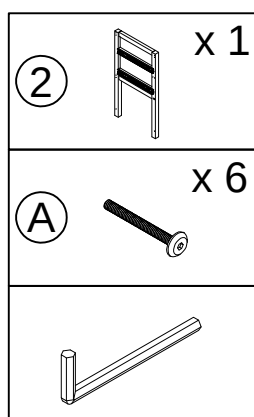



Step 6

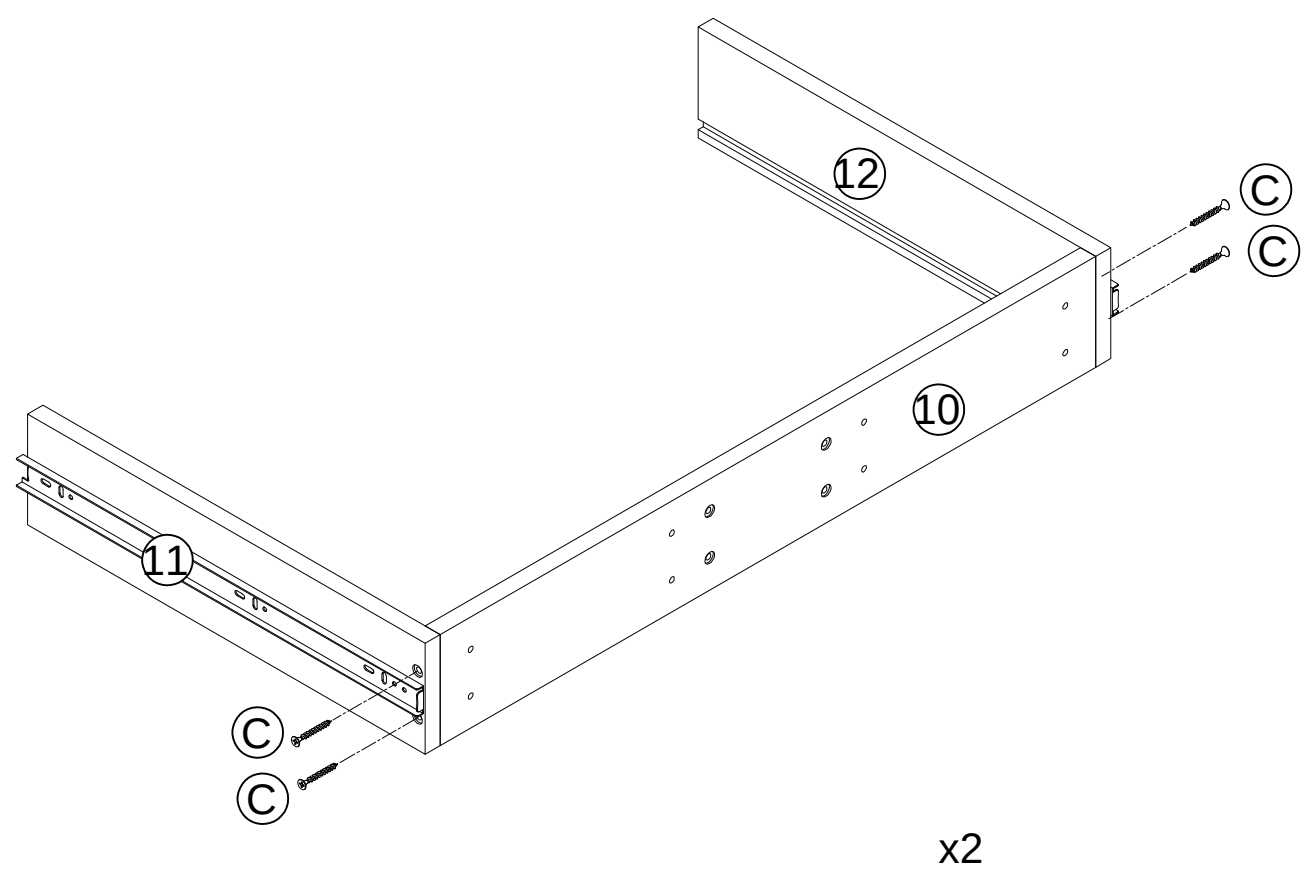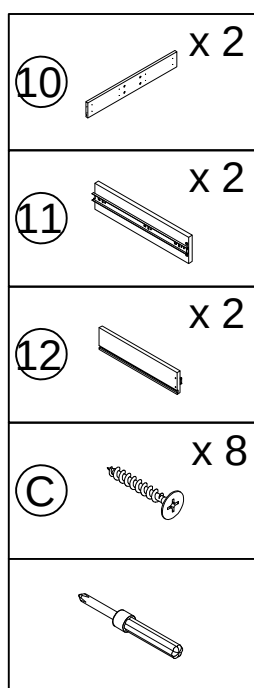


Step 7

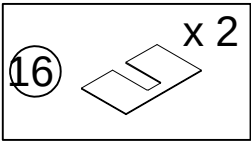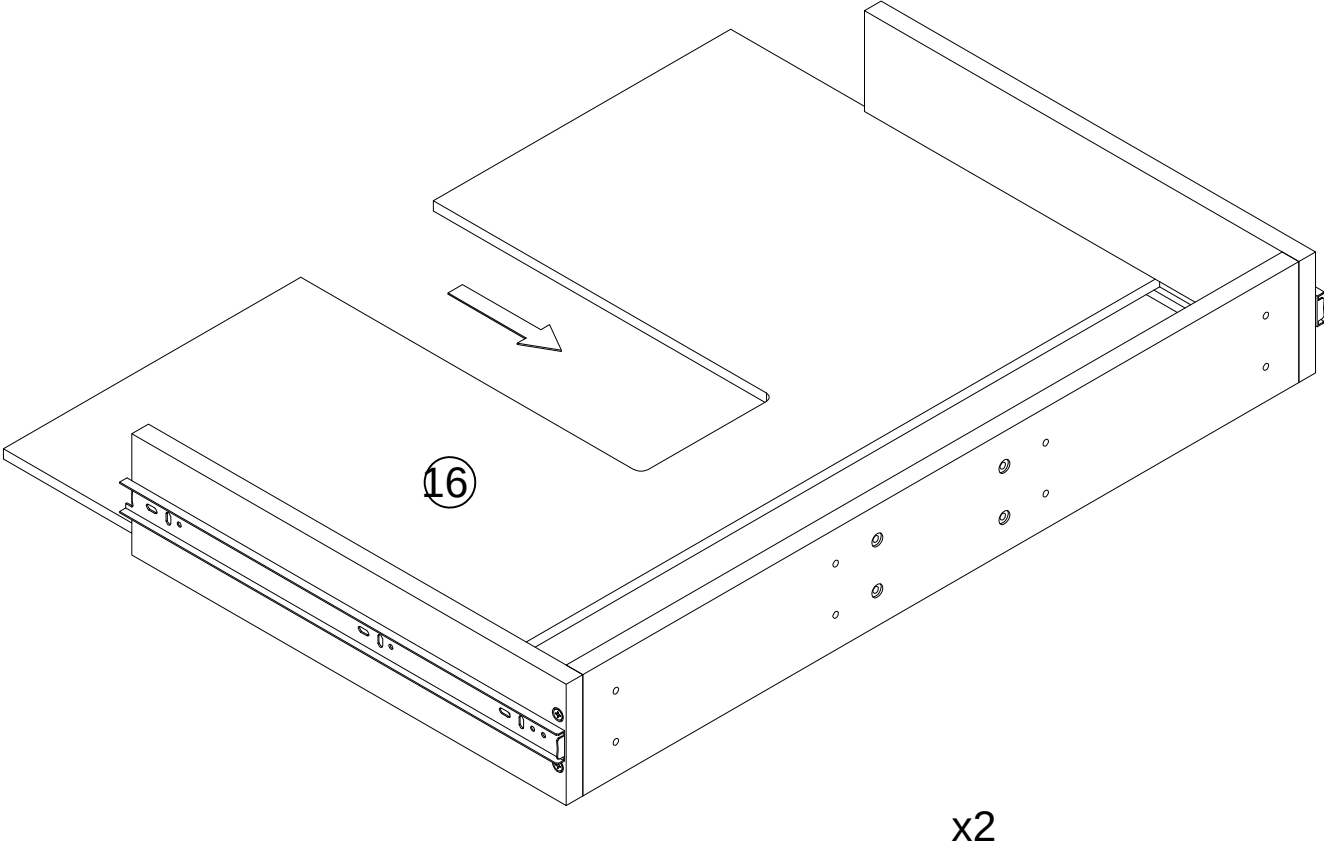


Step 8

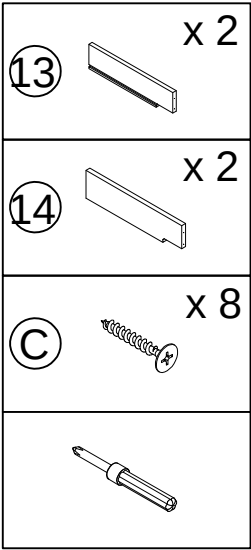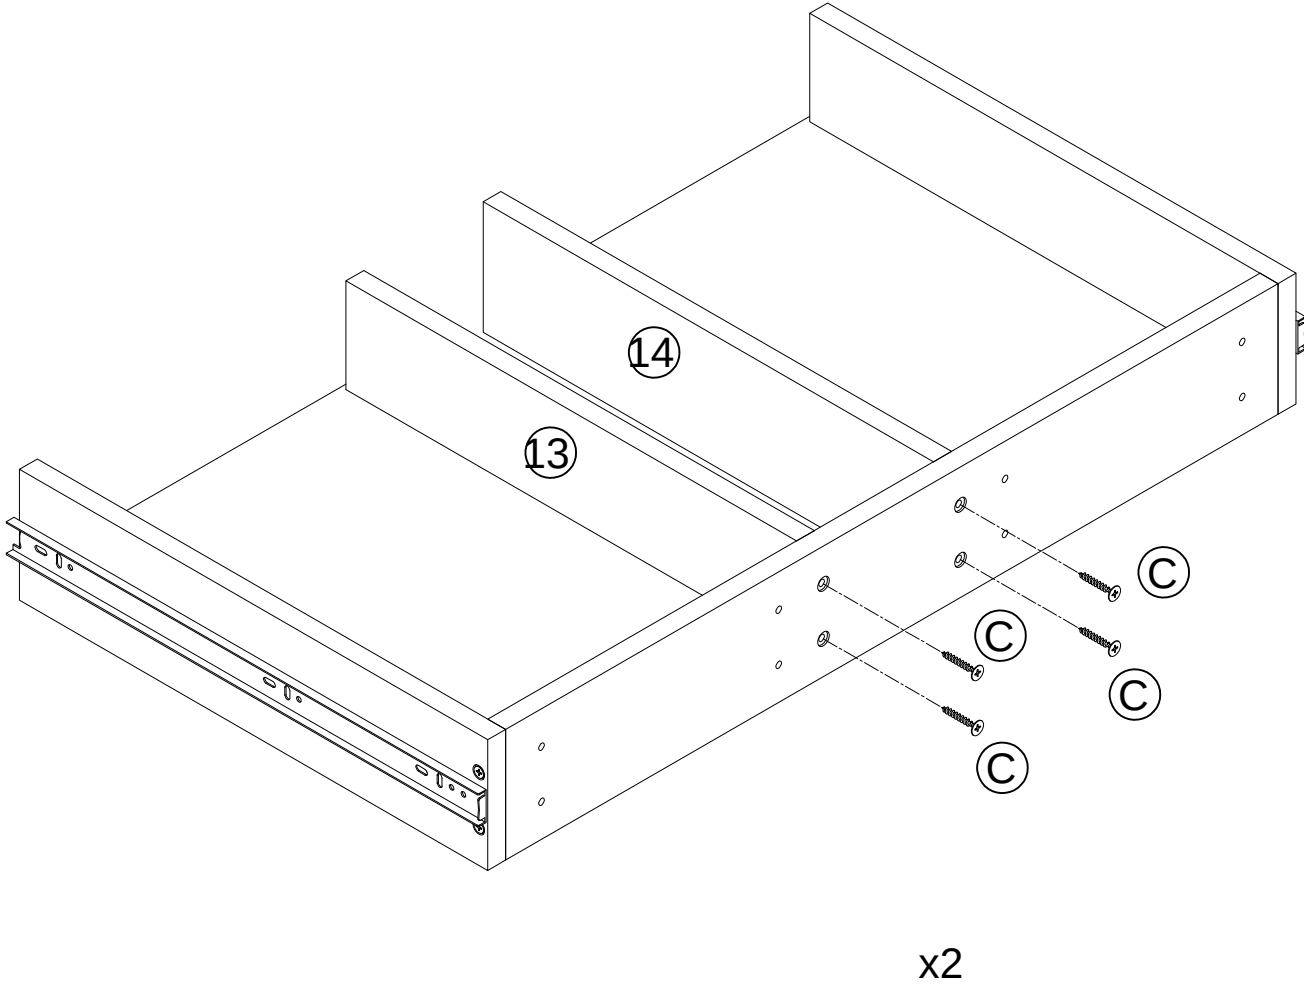



Step 9

⑨		x 2
Ⓒ		x 16
		

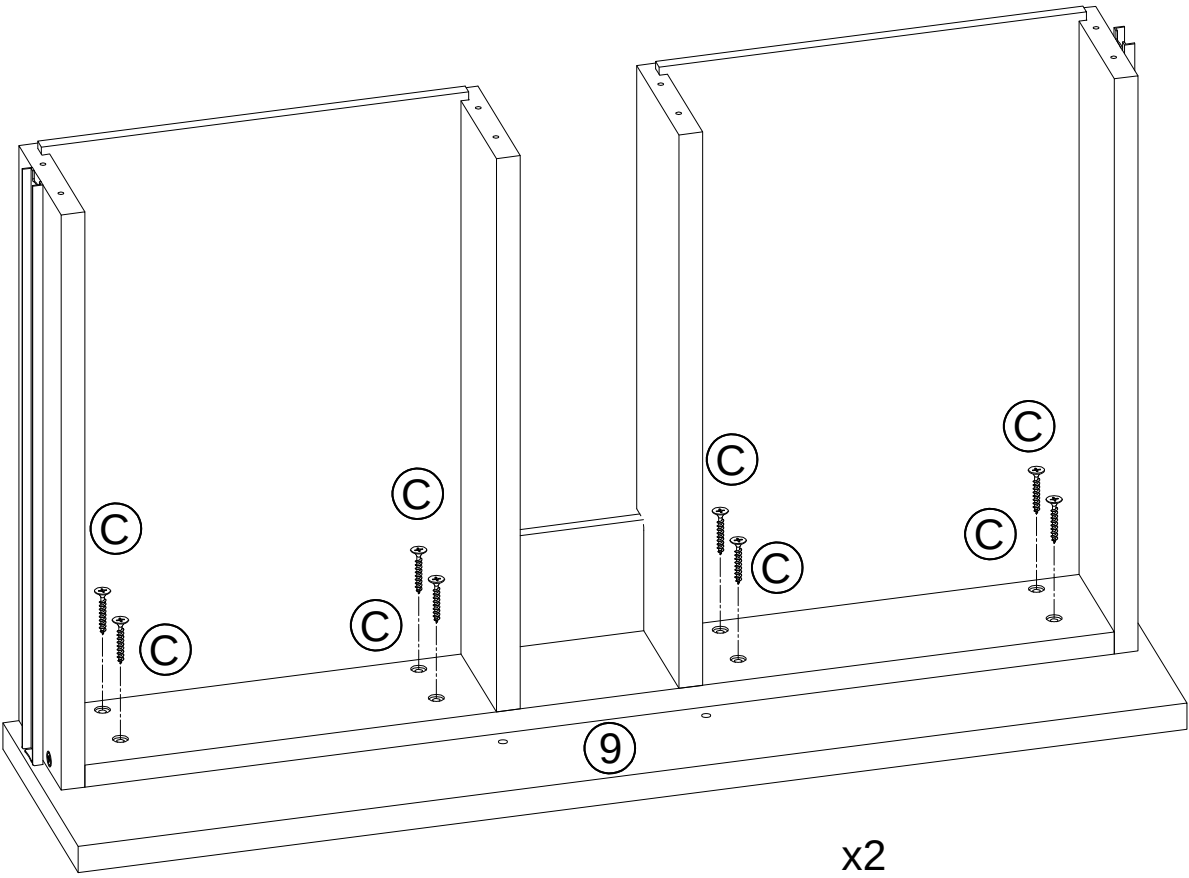


Step 10


⑮		x 4
Ⓒ		x 16
		

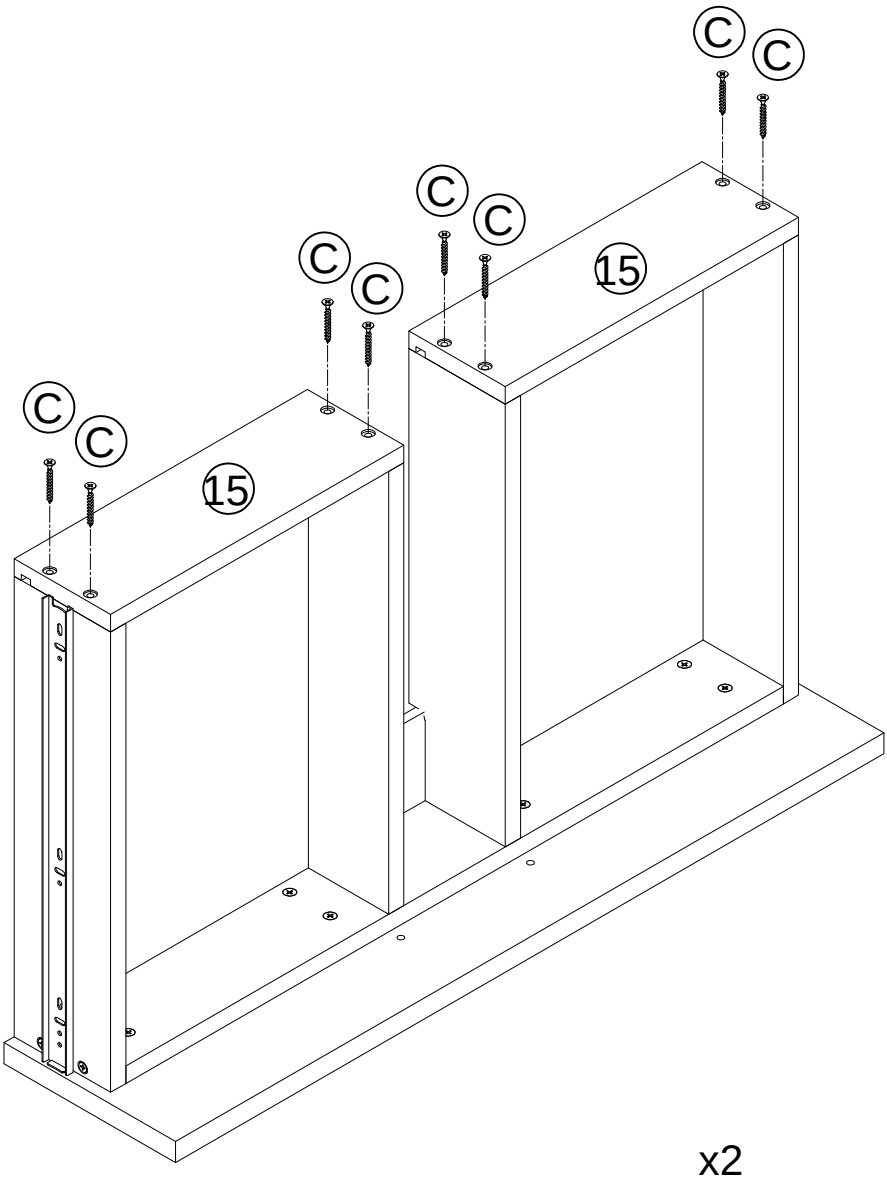



Step 11

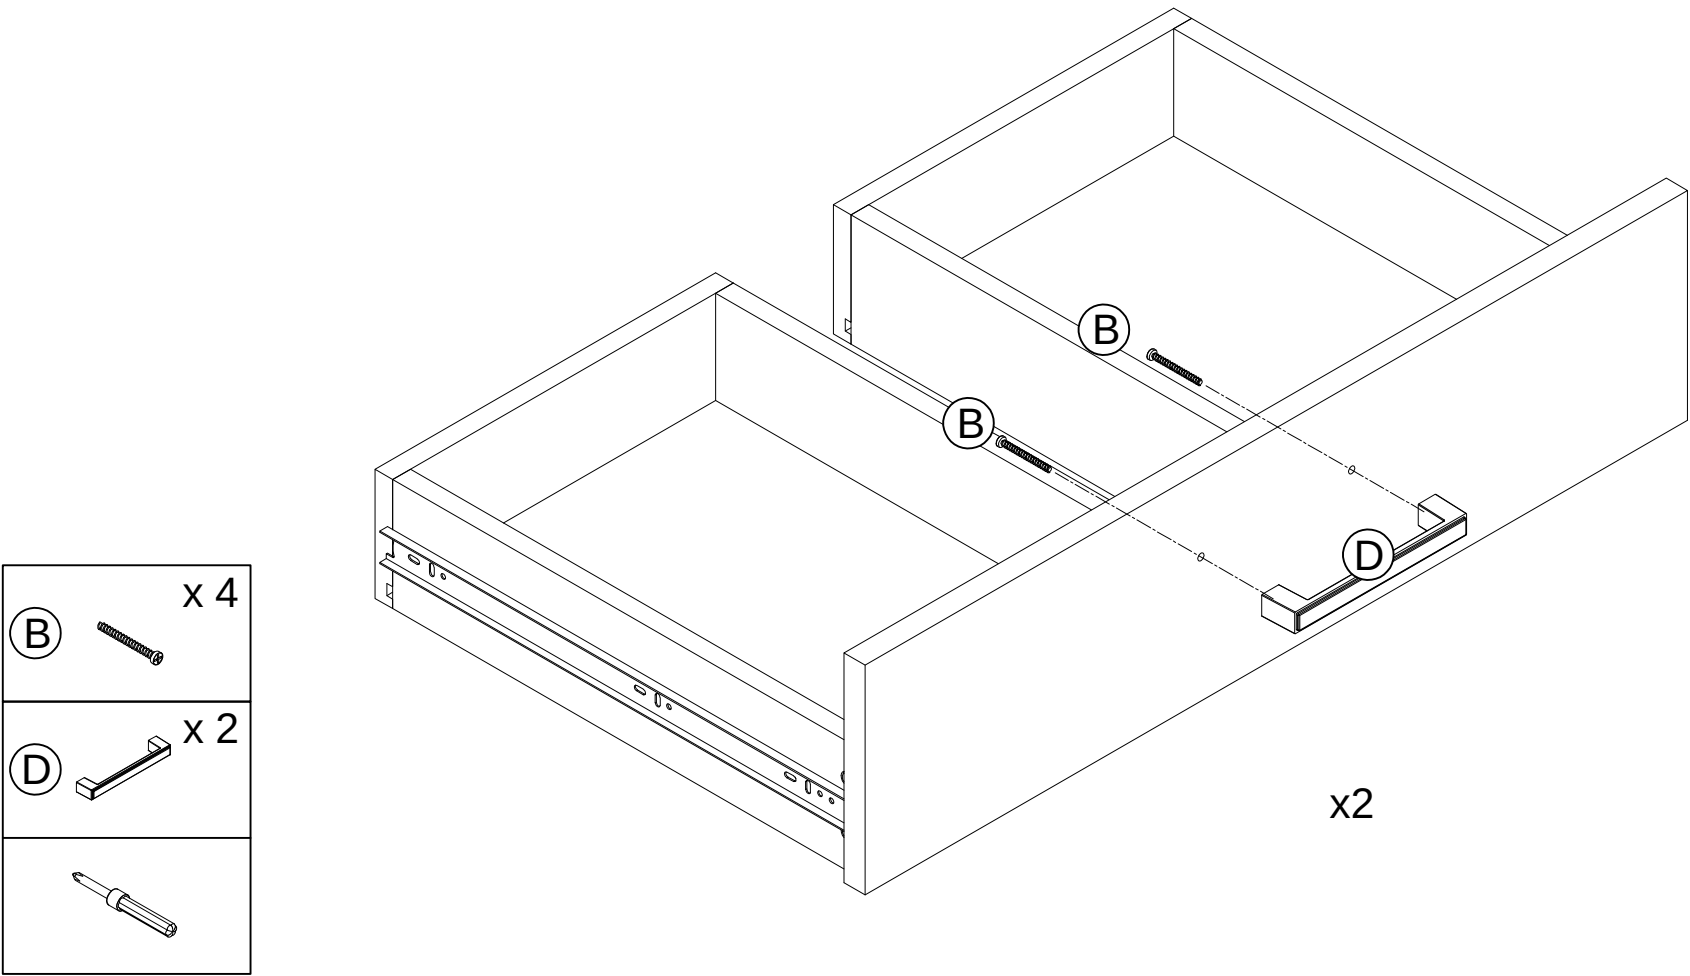

Step 12

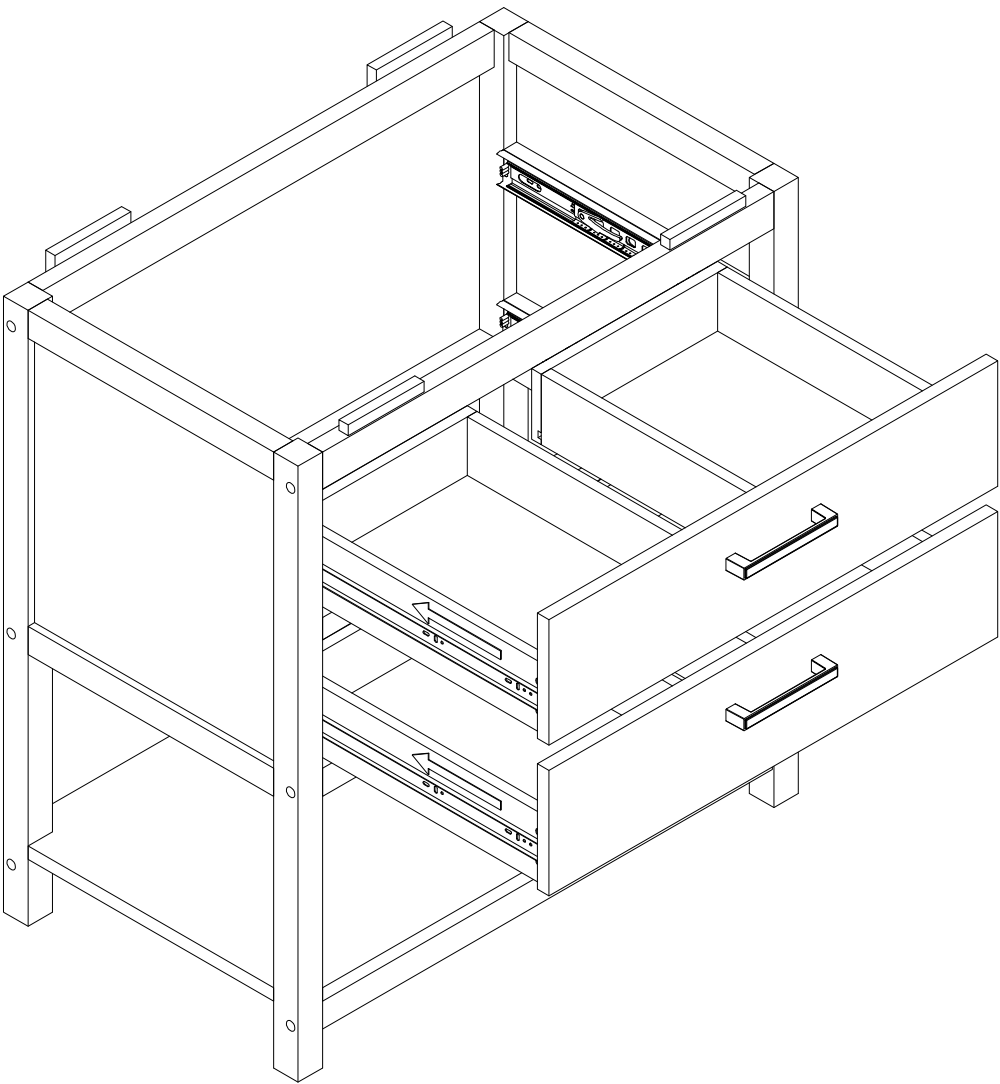


Step 13

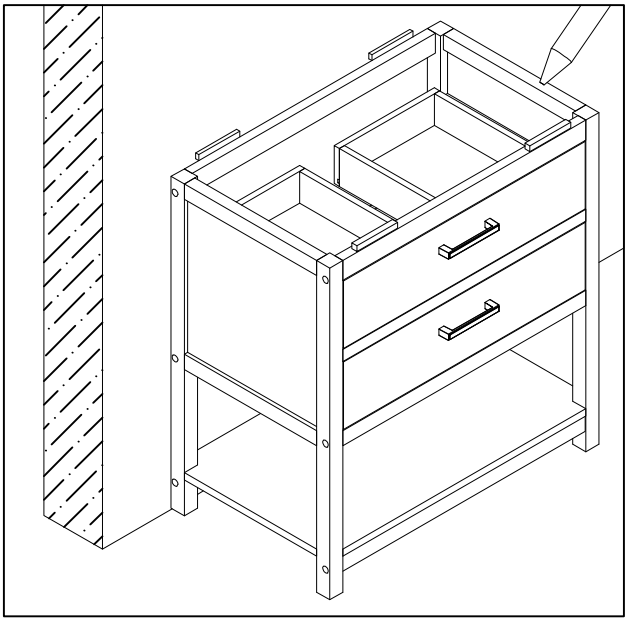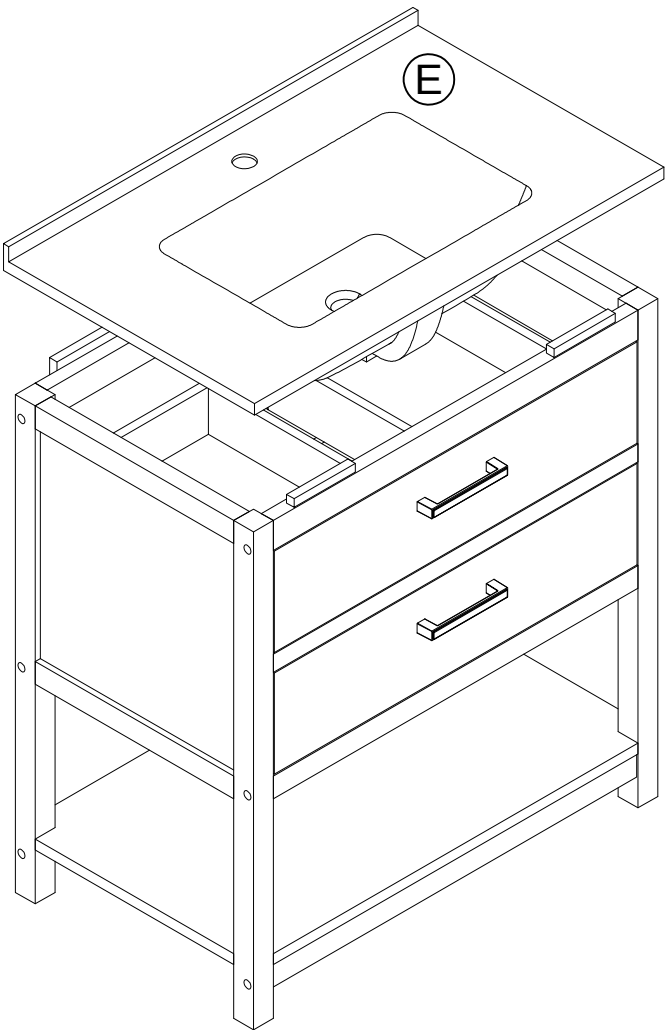



01 It is better if to apply silicone to all four sides of the vanity top

02 Position the cabinet against the wall, lift and align the sink, fix the slot of sink with latch of the cabinet

03 After assembly, let the silicone cure for 24 hours and remove dried excess with a blade

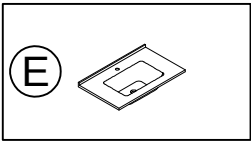

Step 14

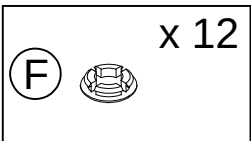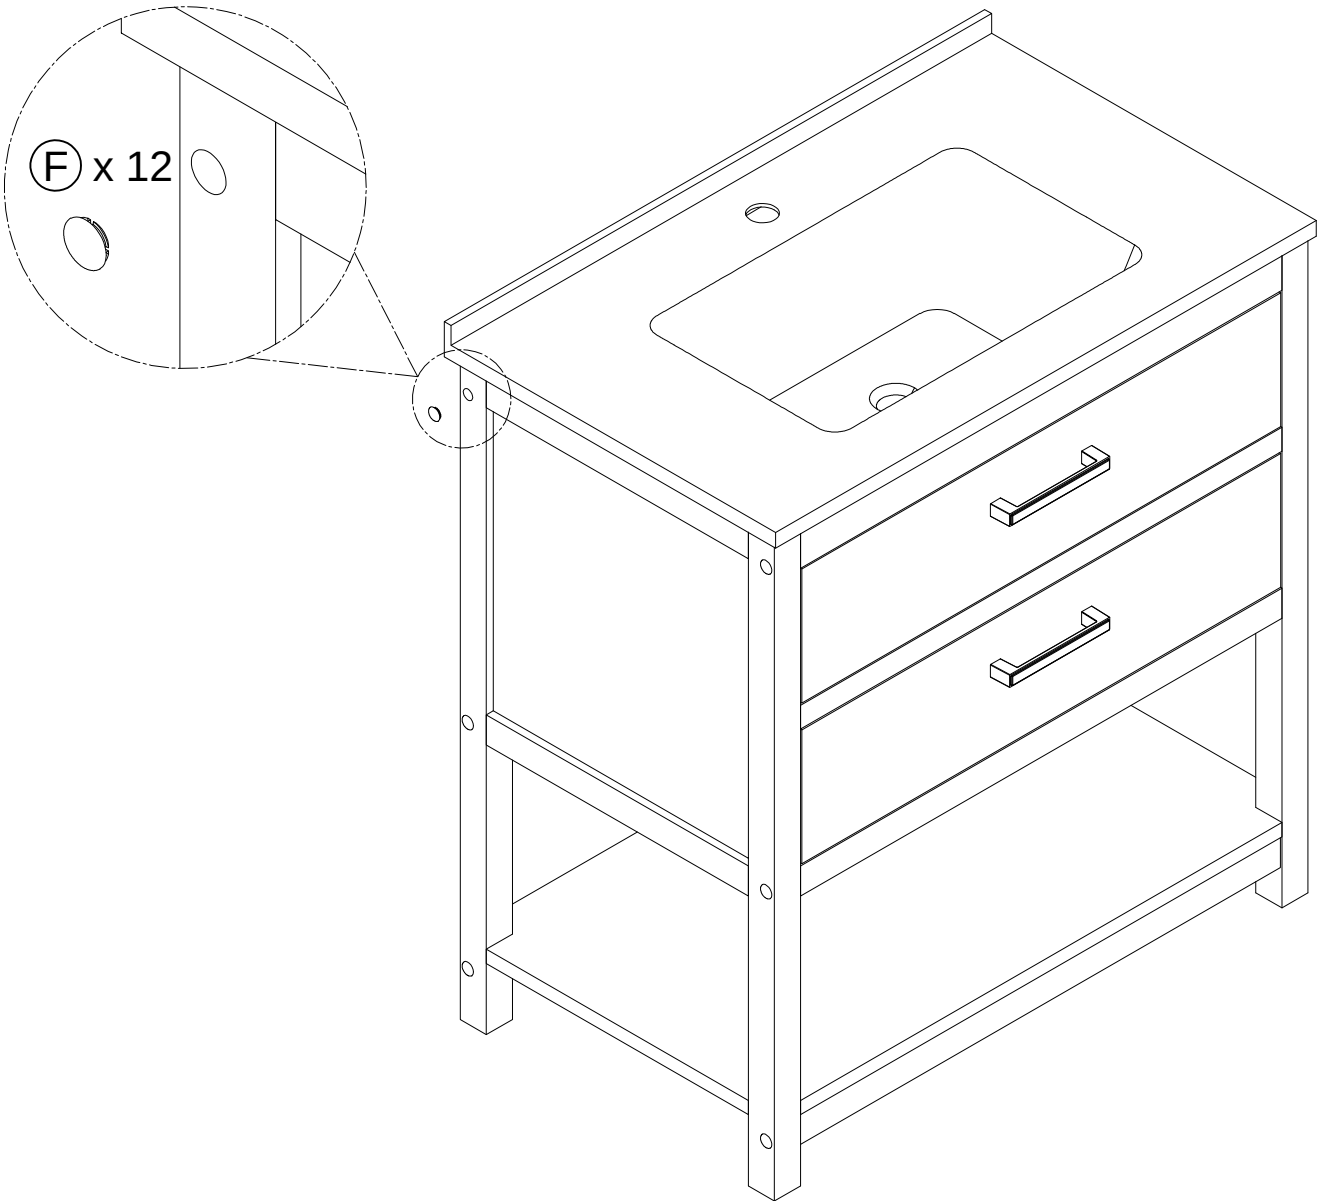

Step 15

