
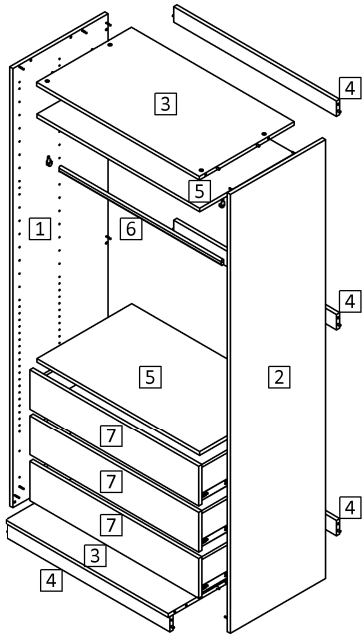


ASSEMBLY INSTRUCTIONS



BOX 03

- ASSEMBLY INSTRUCTIONS:**
- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
 - 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
 - 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
 - 4- DO NOT USE ABRASIVES SOLUTIONS;

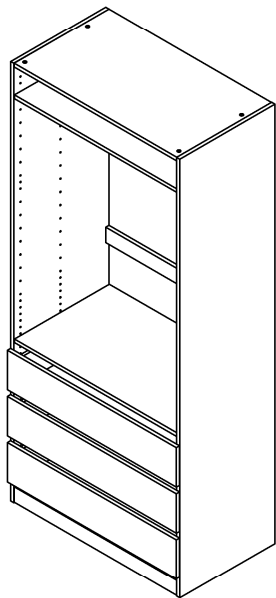


PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	2	SHELVES
6	1	RODS
7	3	REGULAR DRAWER






CABINET HARDWARES	16	16	16
			
	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

CABINET ASSEMBLY

STEP 01 PREPARATION OF THE SIDE PANELS




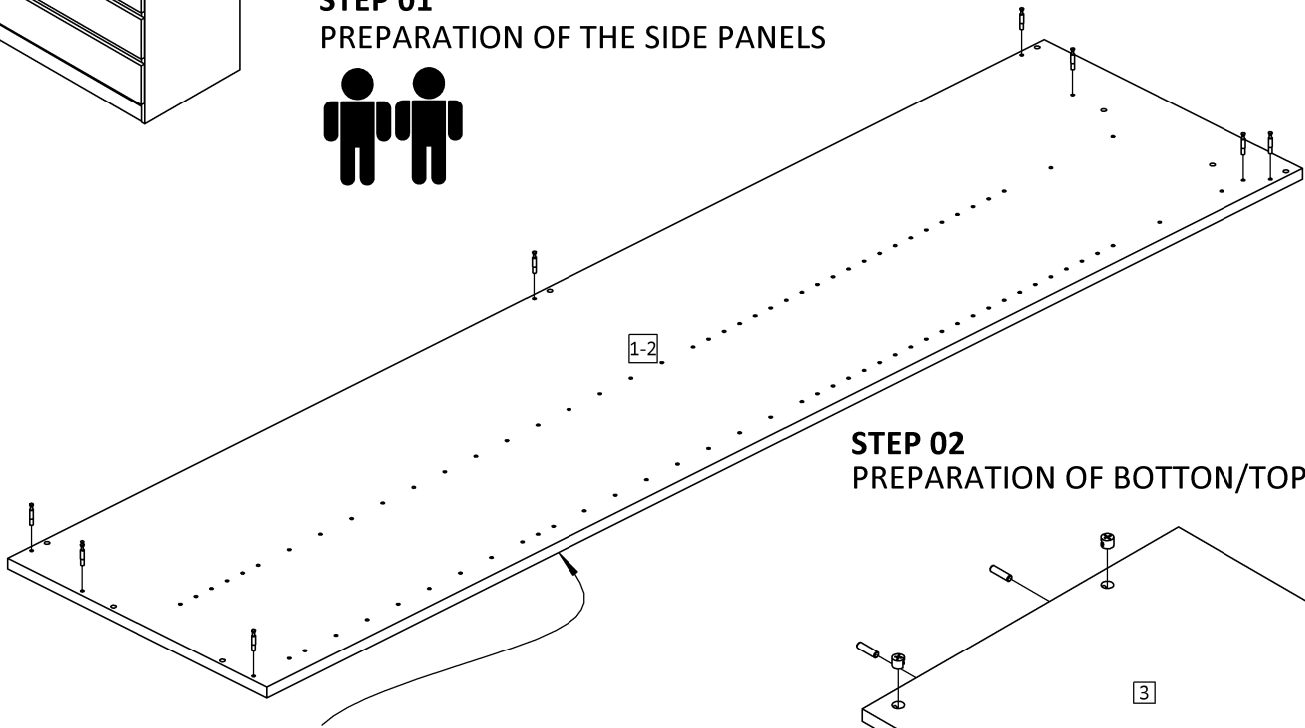


STEP 02 PREPARATION OF BOTTOM/TOP PANELS

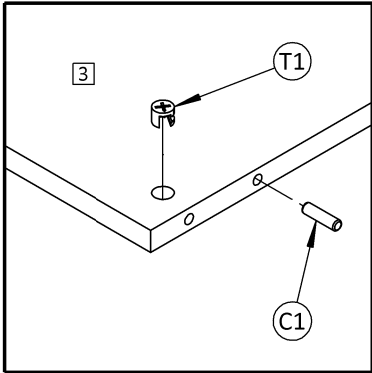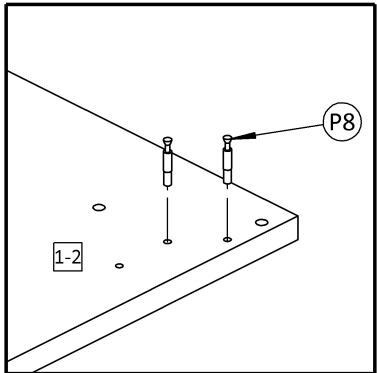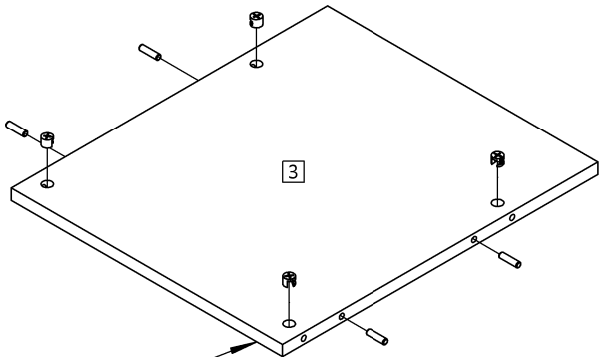

**ASSEMBLY INSTRUCTIONS**

BOX 03

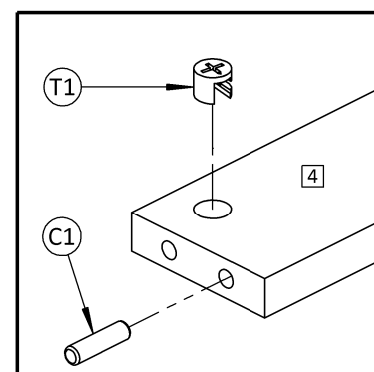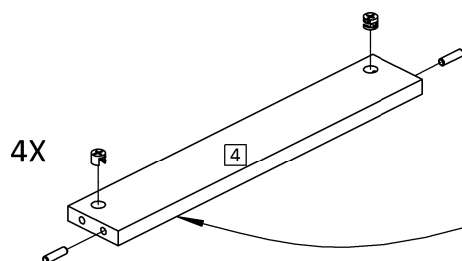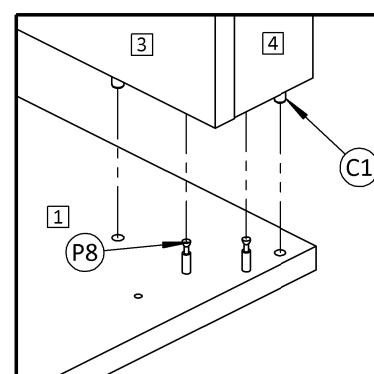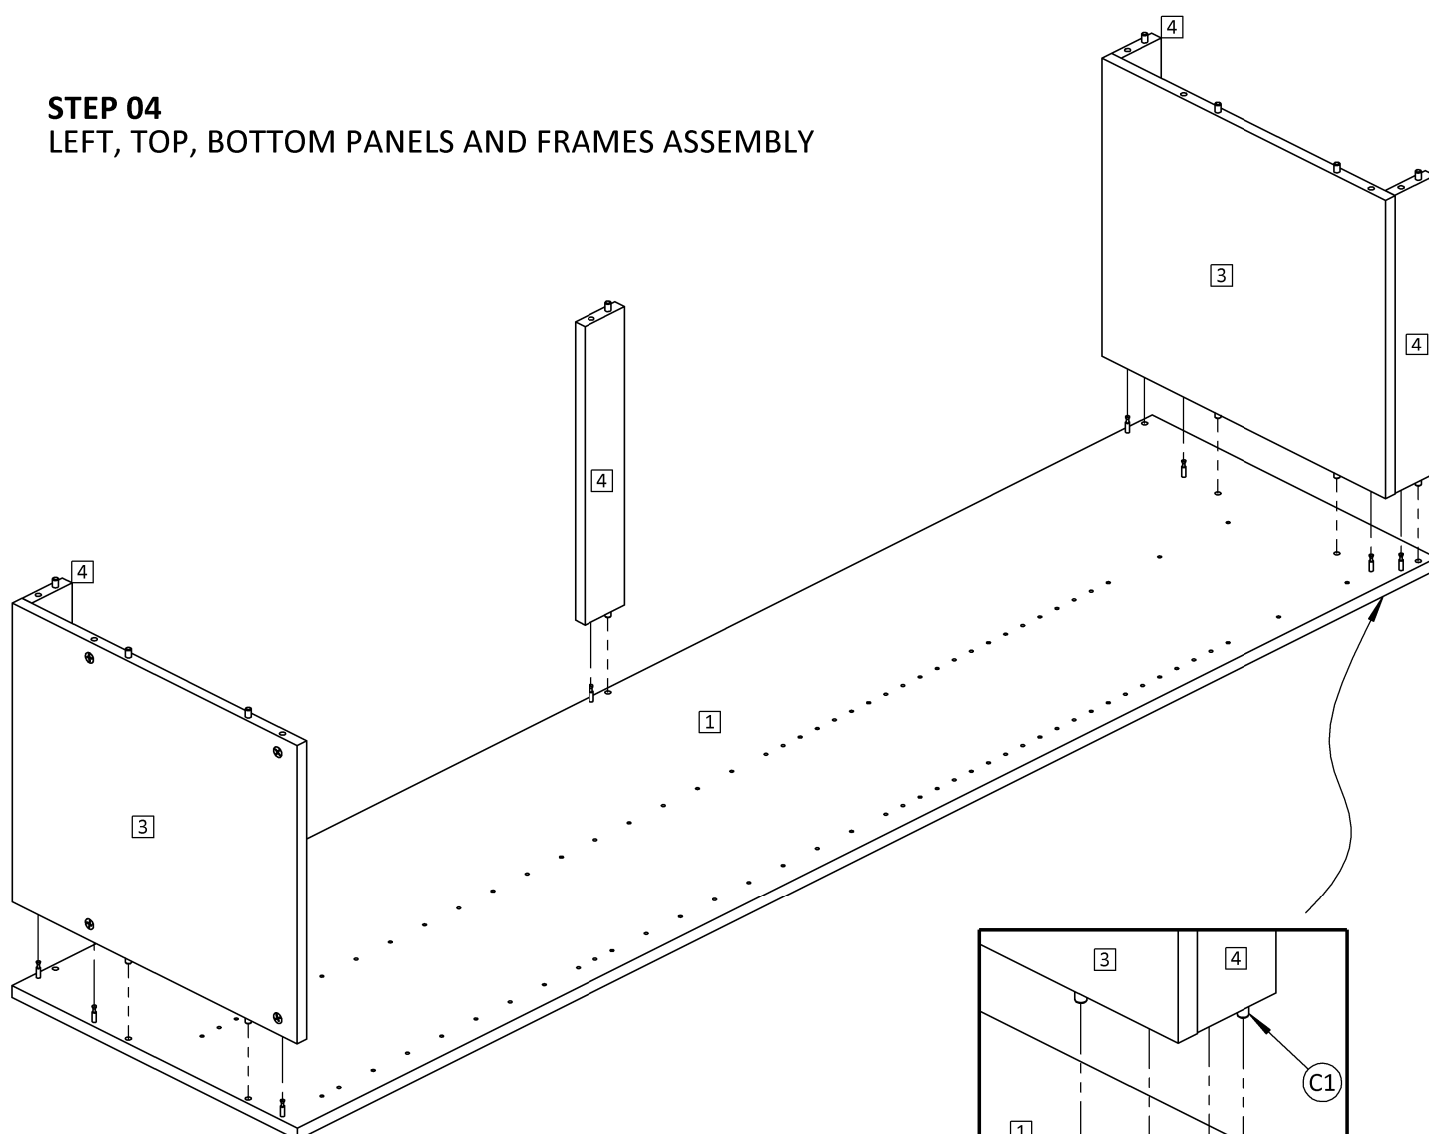STEP 03
PREPARATION OF THE FRAMES**STEP 04**
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY





ASSEMBLY INSTRUCTIONS

BOX 03


STEP 05

RIGHT SIDE PANEL ASSEMBLY

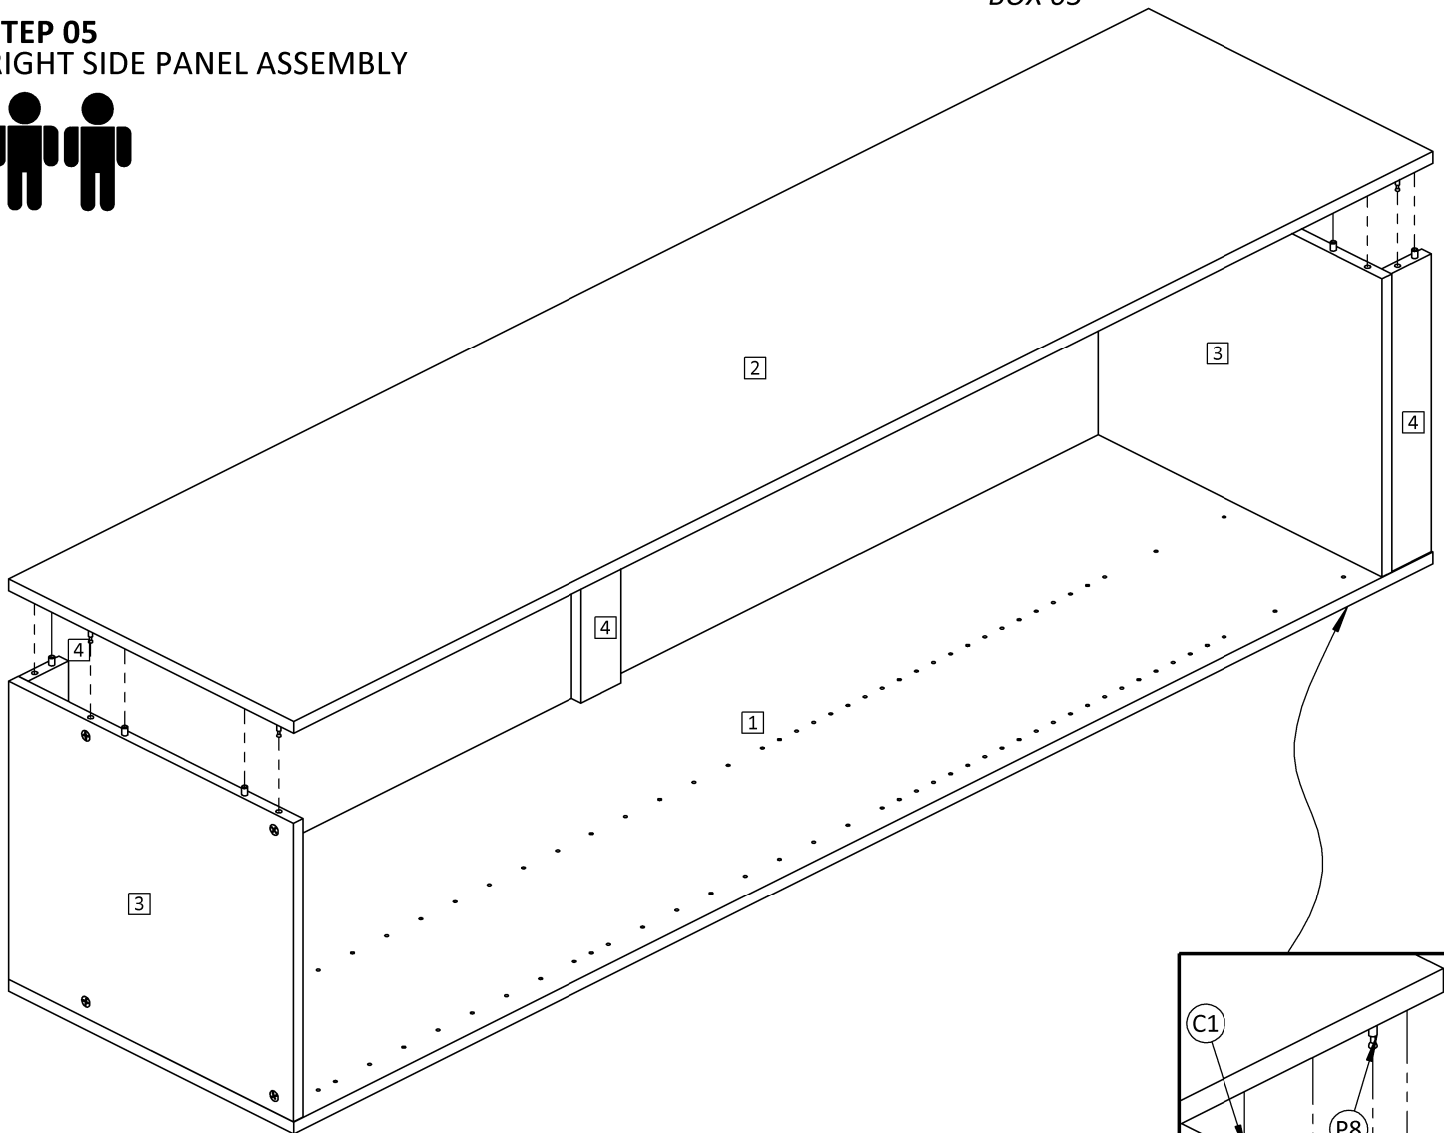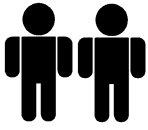

DRAWERS ASSEMBLY


PART NUMBER 7 - REGULAR DRAWER

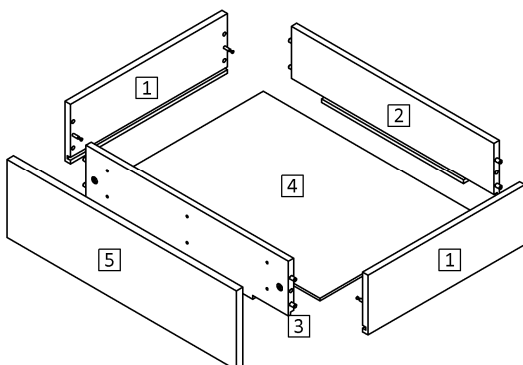

DRAWERS HARDWARES	18	06	12	12	24
	SCREW 9/64 X 1 1/4	SLIDER PIN	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

STEP 06


PREPARATION OF DRAWER SIDE PANNELS

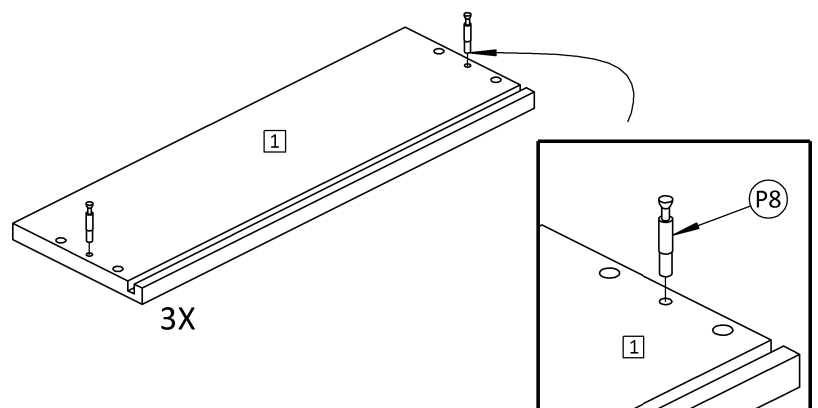

PART LIST		
PART NUMBER	QTY	DESCRIPTION:
1	2	DRAWER SIDE PANEL
2	1	DRAWER BACK PANEL
3	1	DRAWER INSIDE FRONT
4	1	DRAWER BOTTOM PANEL
5	1	DRAWER FRONT

**STEP 07**


PREPARATION OF DRAWER BACK PANNEL
AND DRAWER INSIDE FRONT

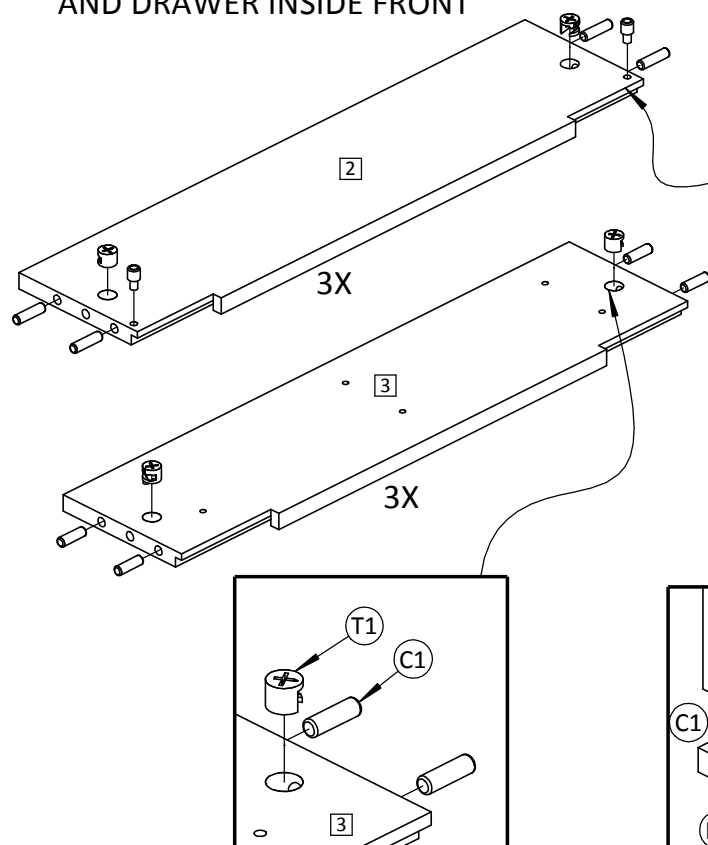**ASSEMBLY INSTRUCTIONS**


BOX 03

STEP 08


DRAWER ASSEMBLY


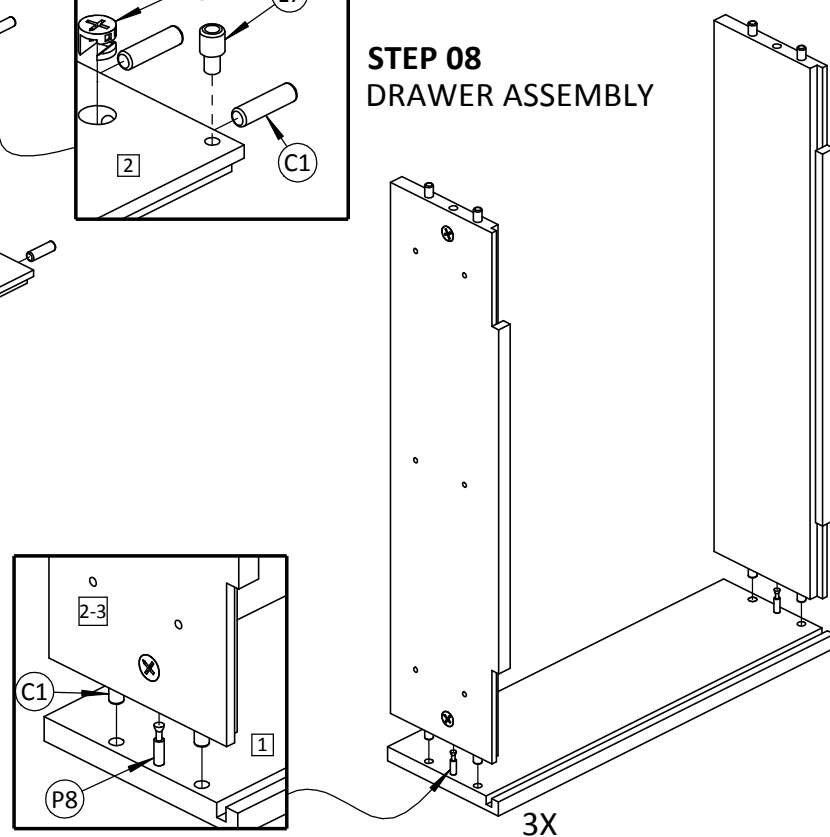
**STEP 09**

BACK PANNEL ASSEMBLY


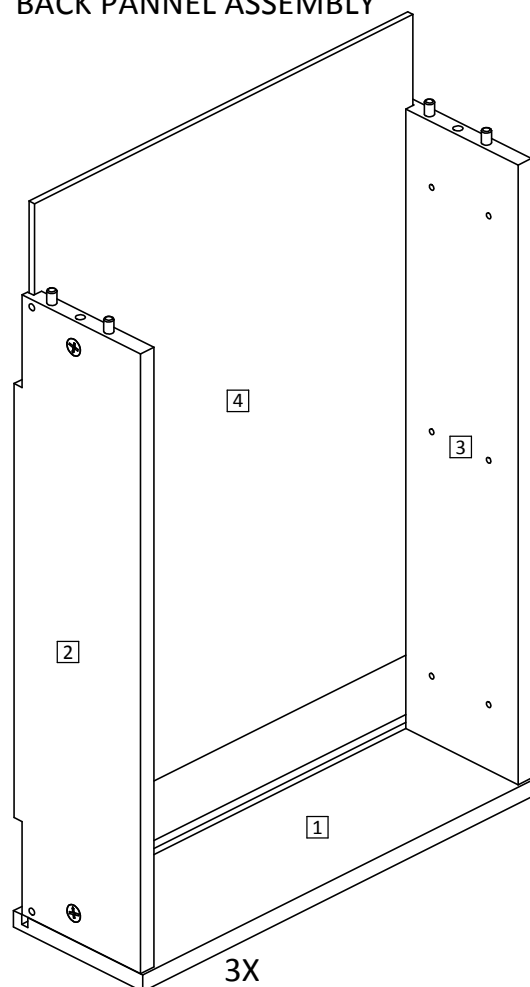
**STEP 10**

RIGHT SIDE PANNEL ASSEMBLY

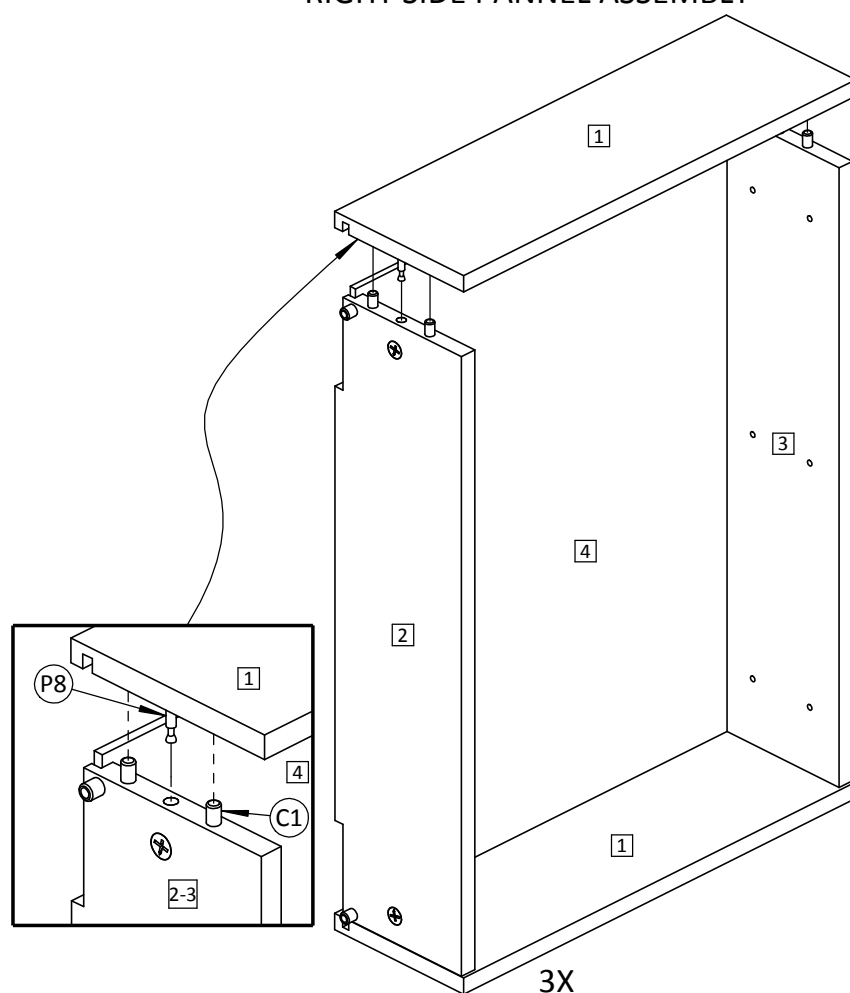

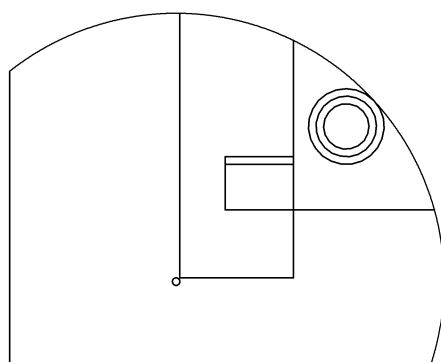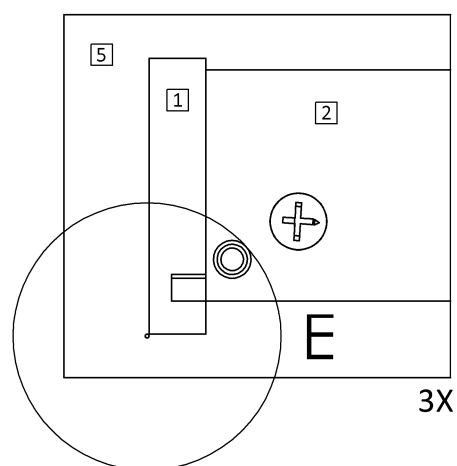**STEP 11**
ASSEMBLING FRONT POSITION**DRAWER BACK VIEW**

DETALHE E

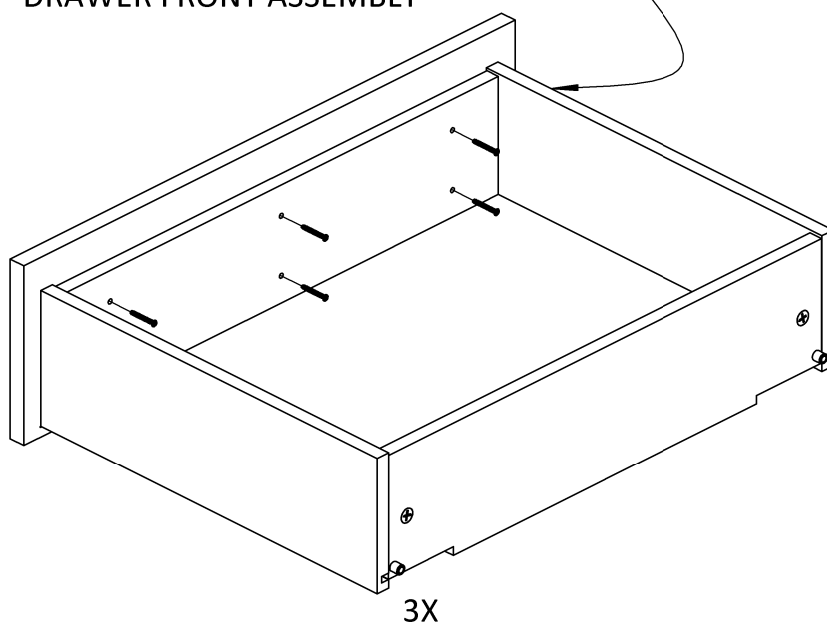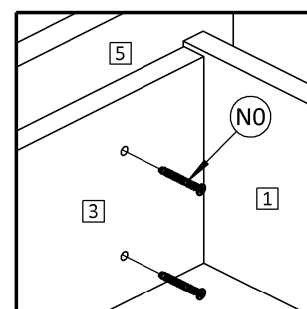ASSEMBLY INSTRUCTIONS
BOX 03**STEP 12**
DRAWER FRONT ASSEMBLY

STEP 13 FIXING THE CABINET ON THE WALL

FIXING THE CABINET

Rev.01



REF.: MCL011




DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG



ASSEMBLY INSTRUCTIONS BOX 03




IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!



FIXING CABINET HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

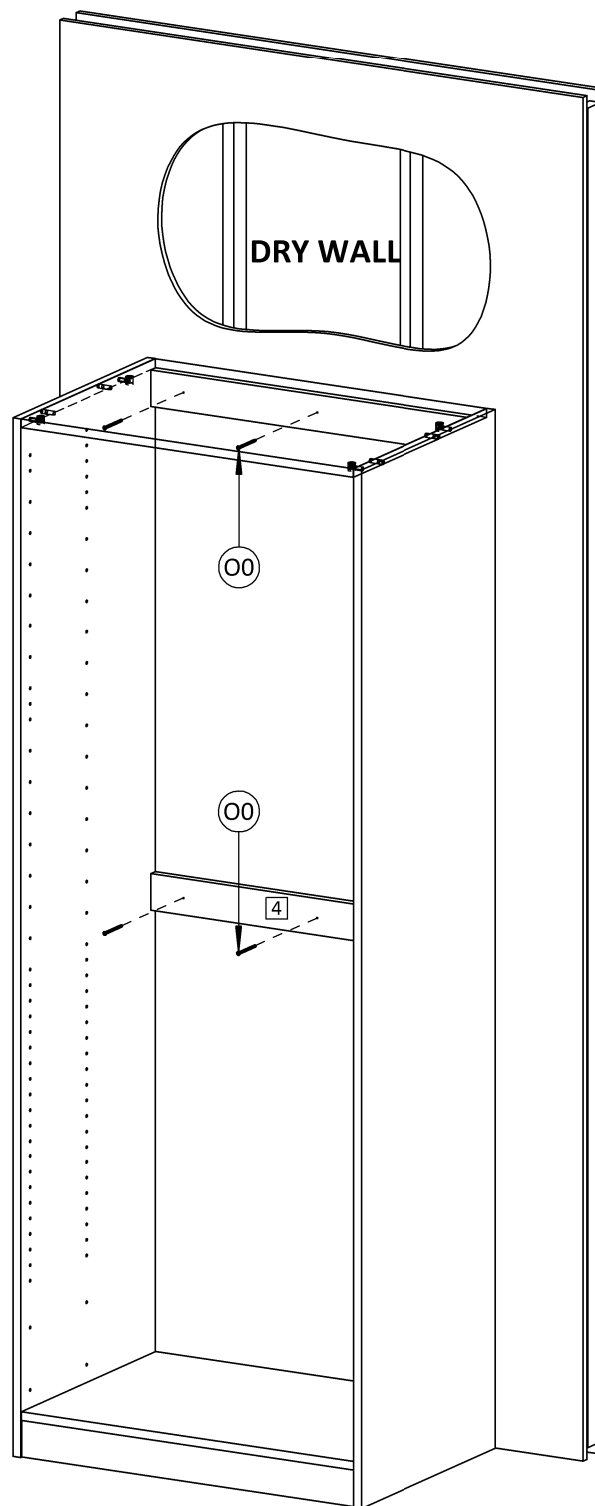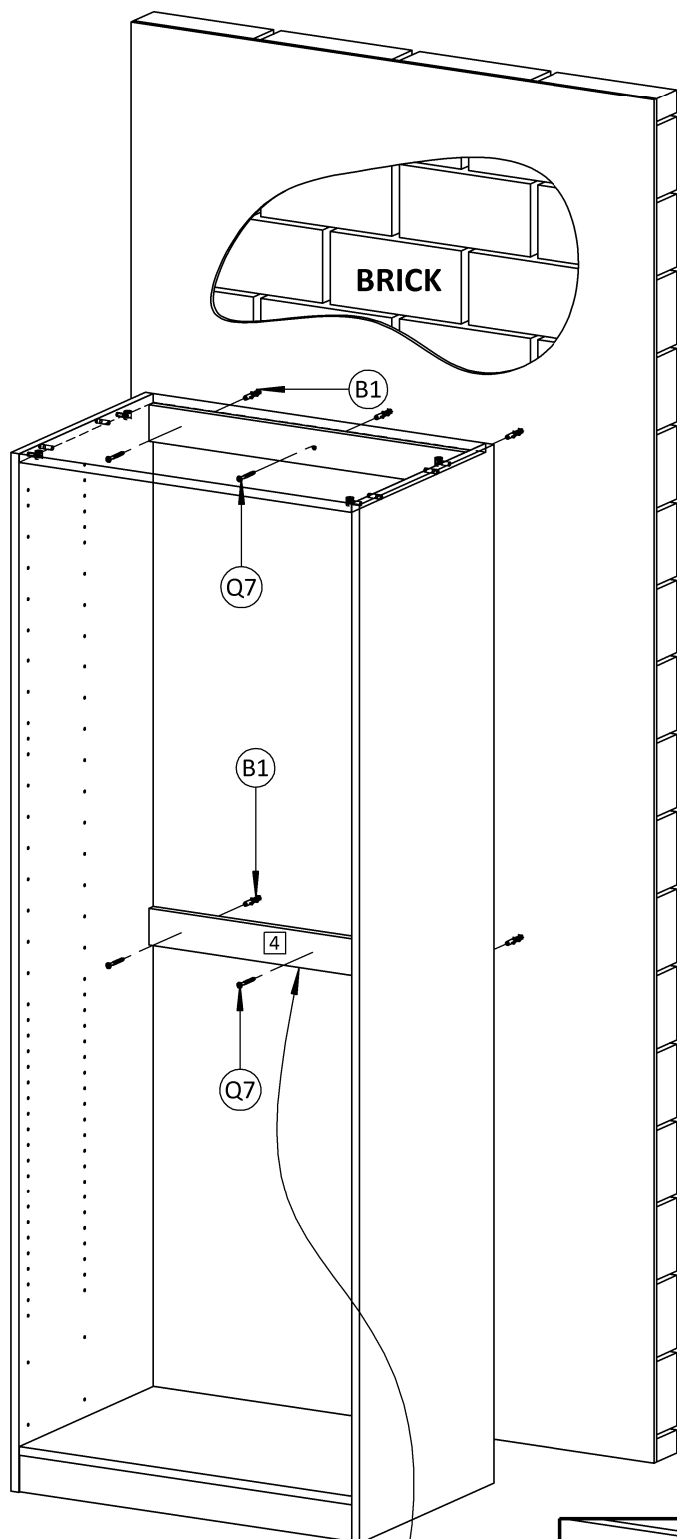

SCREW IN THE CENTER
OF THE FRAME

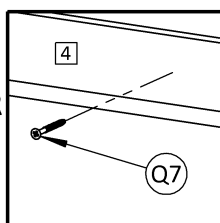

THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND





STEP 14

JOINING THE CABINETS

ASSEMBLY INSTRUCTIONS

BOX 03

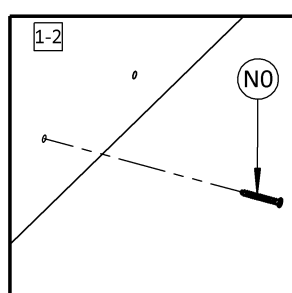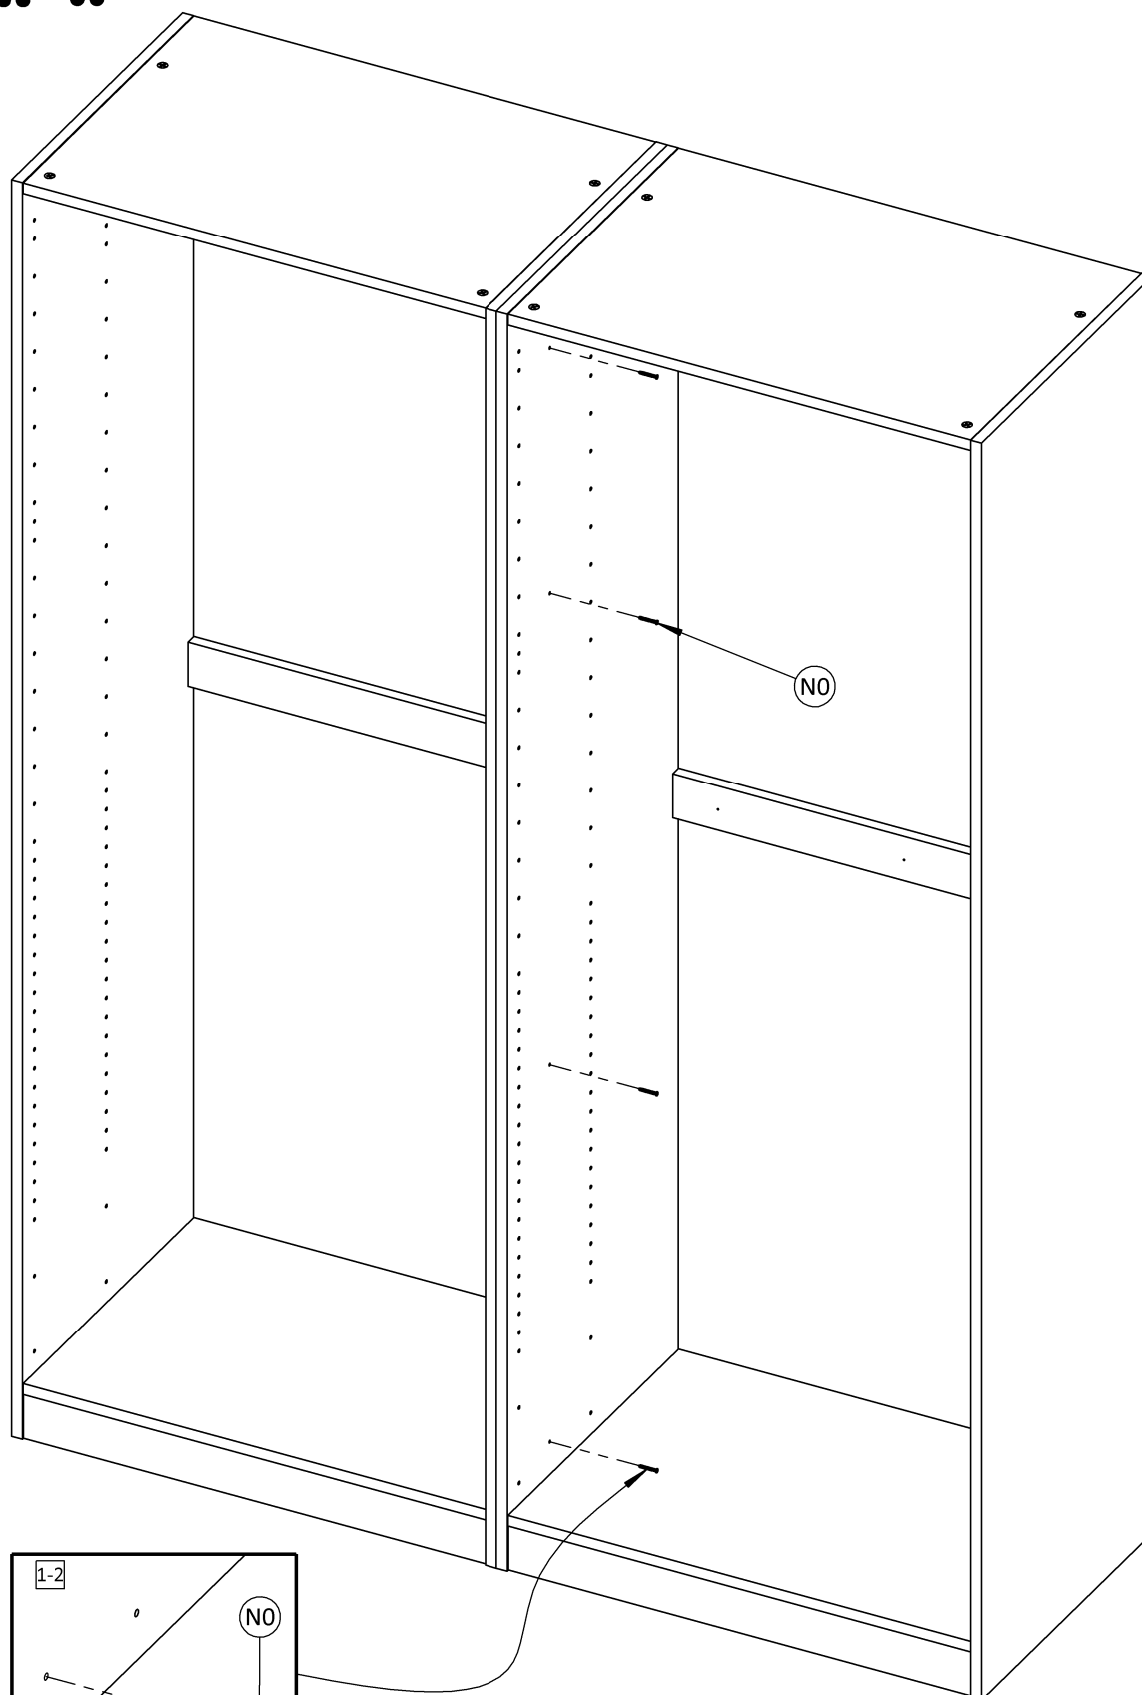






ASSEMBLY INSTRUCTIONS

BOX 03

STEP 15



FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

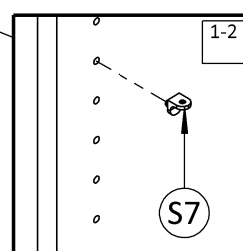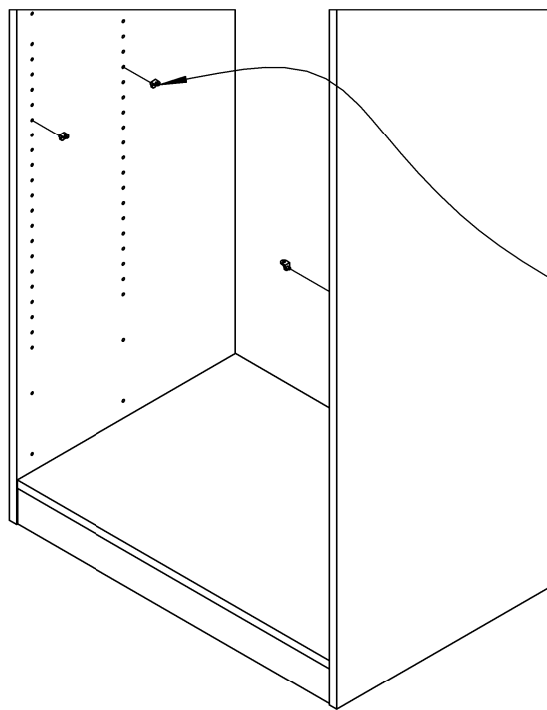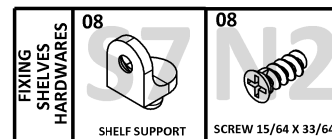

STEP 16



FIT THE SHELF ON THE CLOSET

SCREW THE SHELF
ON THE SUPPORT

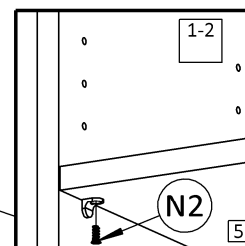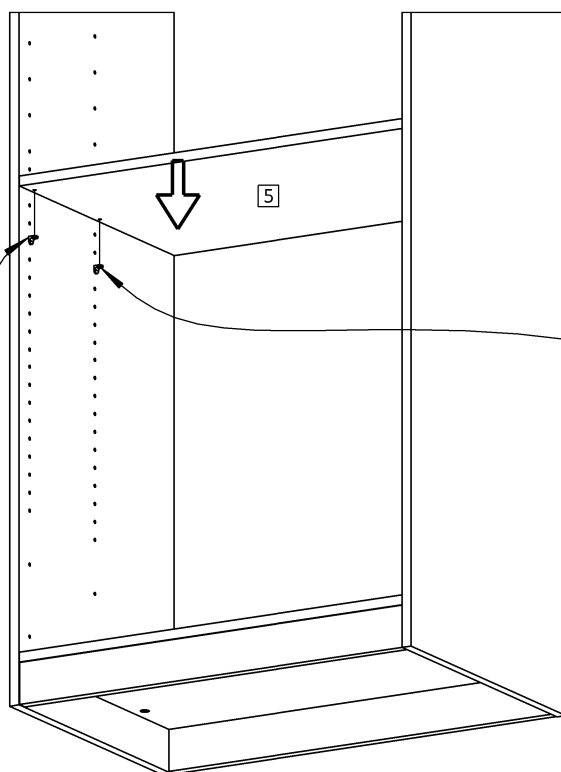





ASSEMBLY INSTRUCTIONS
BOX 03

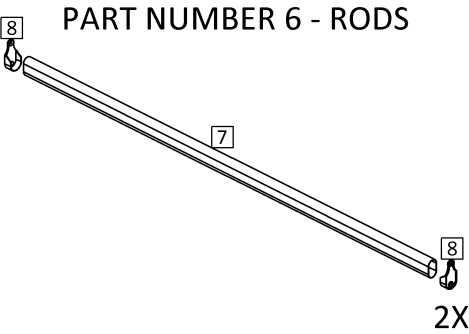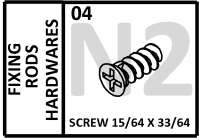




PART LIST		
PART NUMBER	QTY	DESCRIPTION
7	1	ROD
8	2	ROD SUPPORT

STEP 17
ROD SUPPORT FIXATION

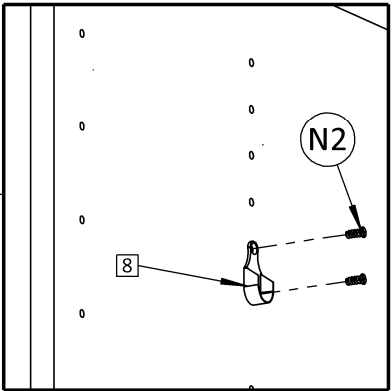
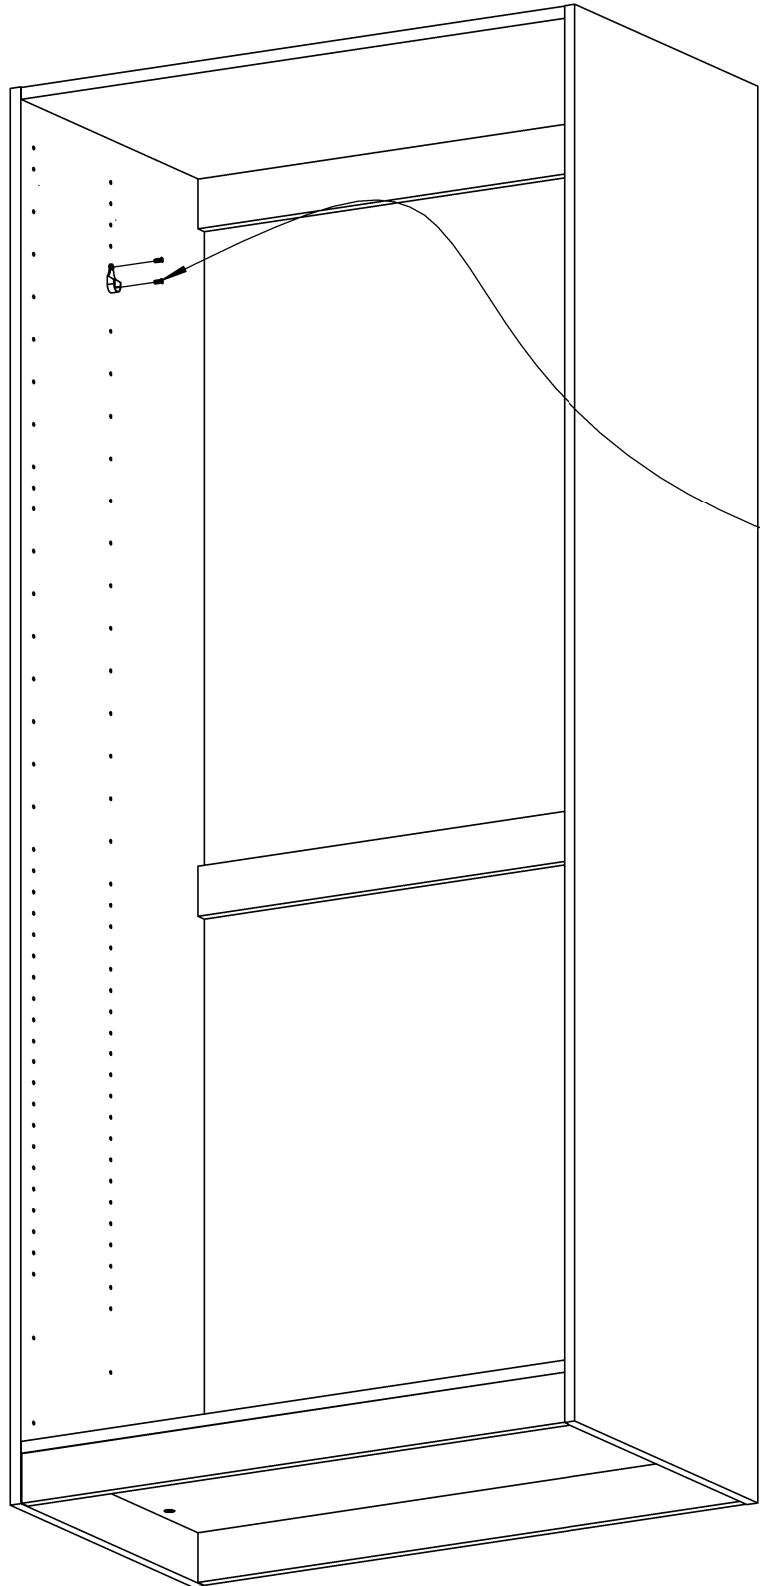


STEP 18
FIT ROD

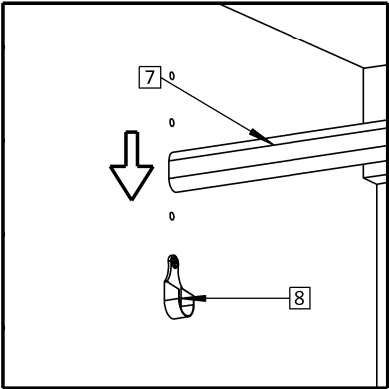

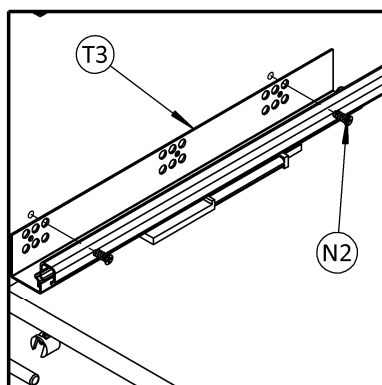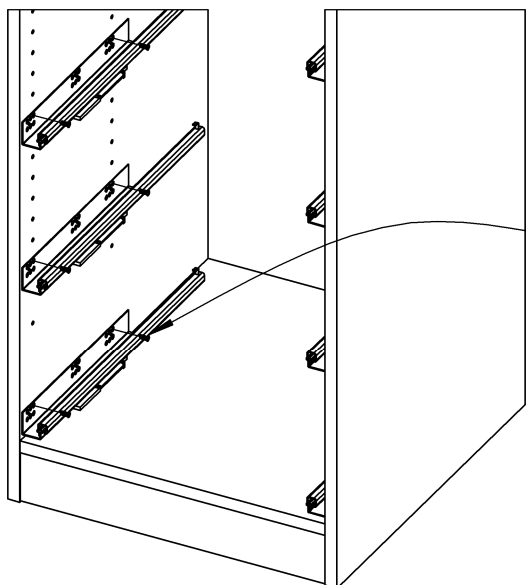**STEP 19**
FIX THE SLIDERS ON THE CLOSET**ASSEMBLY INSTRUCTIONS**
BOX 03

FIXING DRAWERS HARDWARES	03 (PAIR)	12
	SLIDER	SCREW 15/64 X 33/64

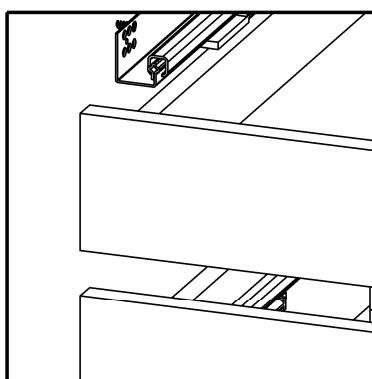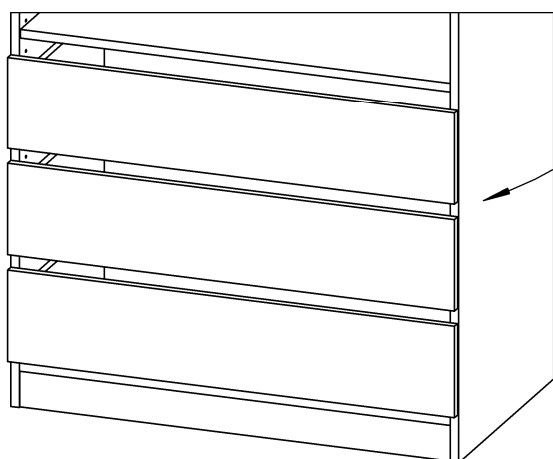STEP 20
FIT THE DRAWERS ON THE SLIDERS

1,25" BETWEEN DRAWERS

STEP 21
FIT THE PIN DRAWERS INTO THE SLIDER