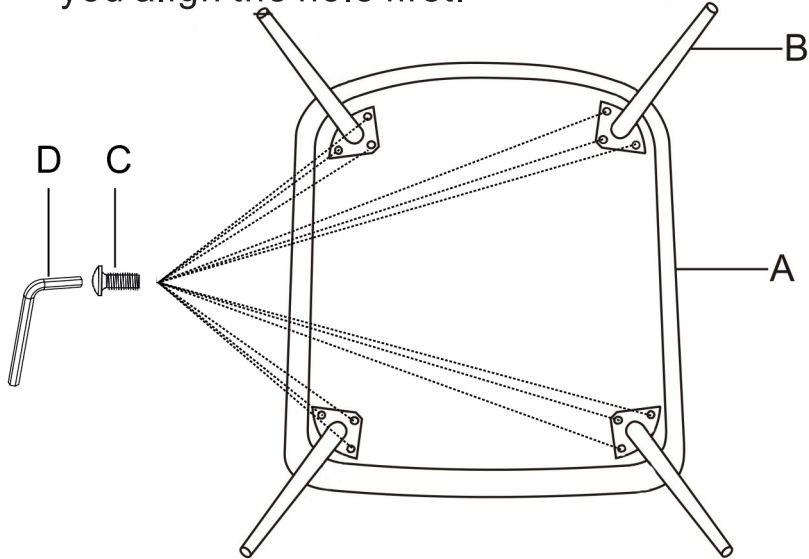
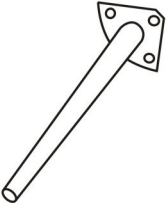
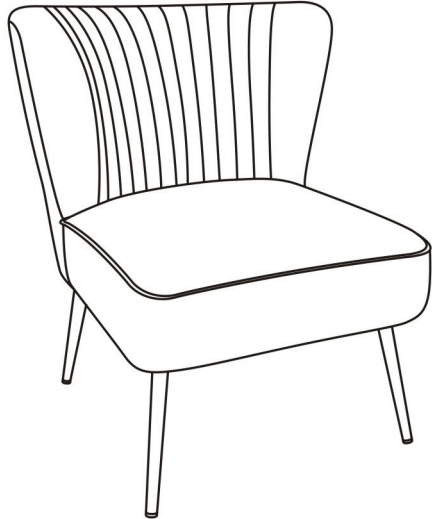


Assembling Instruction

Ax1  1 PC	EXTPA PATRS  2 PCS	① Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first. 
Bx4  4 PCS		
Cx12  M6X18MM 12 PCS		② 
Dx1  1 PC		