

AKT204-RC

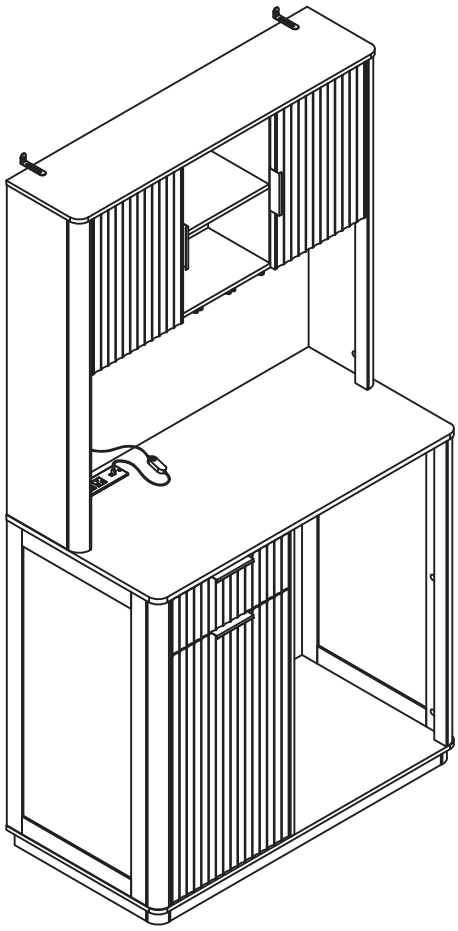

Please thoroughly review the installation instructions priorto commencing the installation process. Ensure that all tools are utilized appropriately and with due care. Should you encounter any questions regarding the product or the installation procedure, do not hesitate to contact us. We will make every effort to assist you in resolving any issues.

We aim to provide you with a distinctive experience.

Before You Start

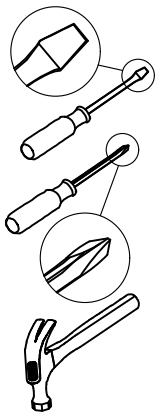

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

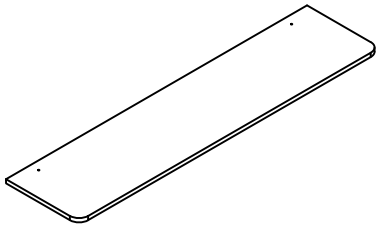


① UPPER TOP
Qty:1

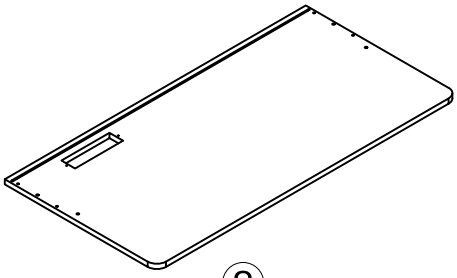


② TOP
Qty:1

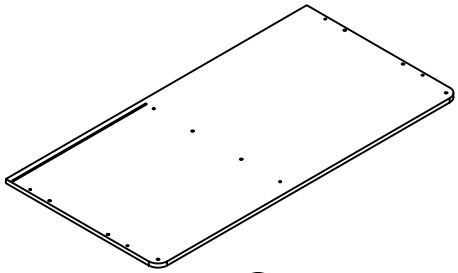


③ BOTTOM
Qty:1

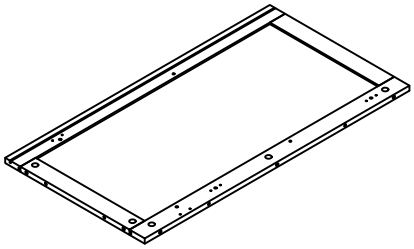


④ LOWER LEFT SIDE PANEL
Qty:1

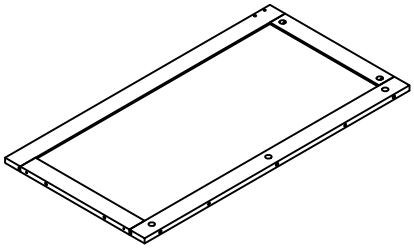


⑤ LOWER RIGHT SIDE PANEL
Qty:1

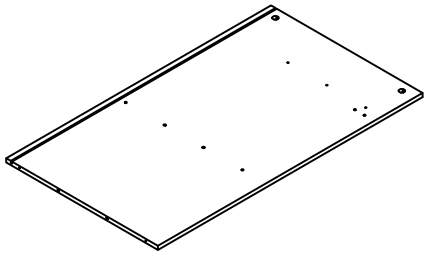


⑥ LOWER MIDDLE SIDE PANEL
Qty:1

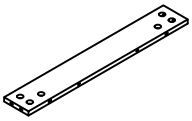


⑦ BACK RAIL
Qty:1

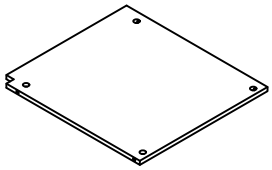


⑧ FIXED SHELF
Qty:1




⑨ SLIDER BLOCK
Qty:1



⑩ FRONT RAIL
Qty:1

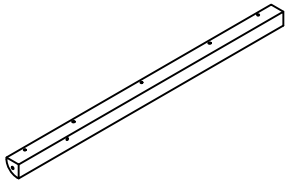


⑪ RAIL
Qty:1

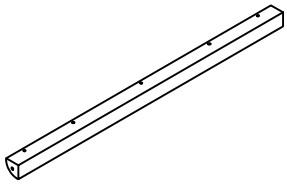


⑫ RAIL
Qty:1

Board Identification


Not actual size




13
FILLER
Qty:2

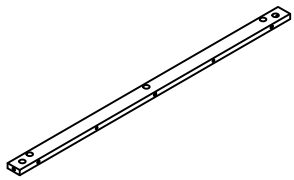


14
FRONT RAIL
Qty:1



15
LEFT RAIL
Qty:1




16
RIGHT RAIL
Qty:1

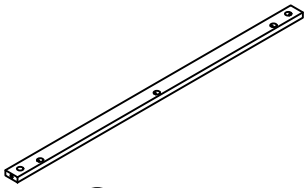


17
BACK RAIL
Qty:1




18
FOOT
Qty:2

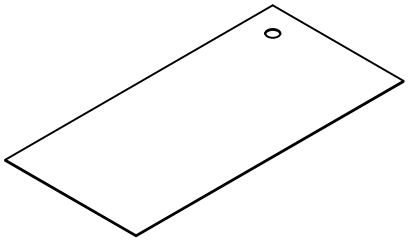


19
BACK PANEL
Qty:1

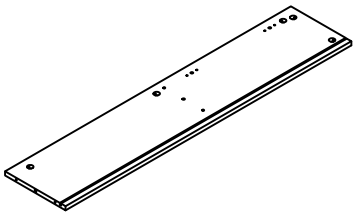


20
UPPER LEFT SIDE PANEL
Qty:1

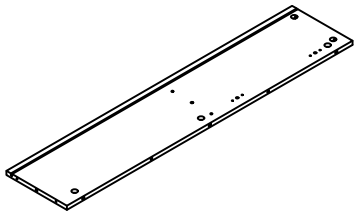


21
UPPER RIGHT SIDE PANEL
Qty:1

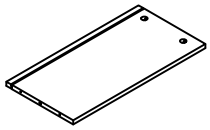

22
UPPER LEFT PARTITION
Qty:1

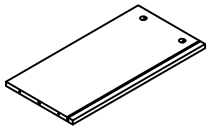


23
UPPER RIGHT PARTITION
Qty:1



24
FIXED SHELF
Qty:1


Board Identification

Not actual size

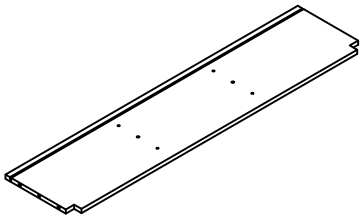


25

FIXED SHELF
Qty:1

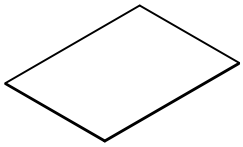


26

UPPER BACK PANEL
Qty:2

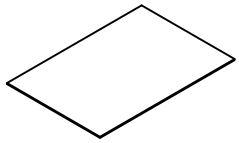


27

UPPER MIDDLE BACK PANEL
Qty:1

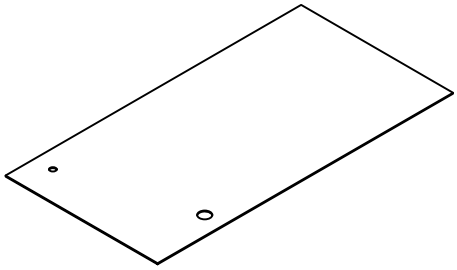


28

MIDDLE BACK PANEL
Qty:1




29

FILLER
Qty:4

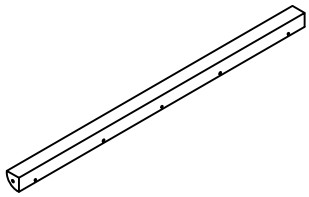


30

RAIL
Qty:2




31

DRAWER LEFT SIDE
Qty:1




32

DRAWER RIGHT SIDE
Qty:1




33

DRAWER BACK
Qty:1

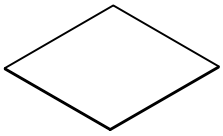


34

DRAWER BOTTOM
Qty:1



35

DRAWER FRONT
Qty:1

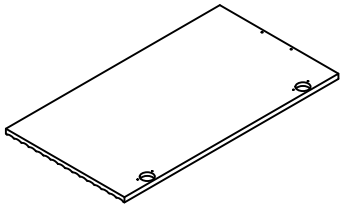


36

LOWER DOOR
Qty:1

Board Identification

Not actual size

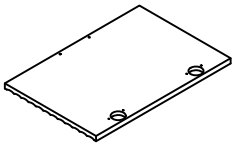

37

UPPER DOOR
Qty:2


Part List



Ø15X9.5mm

A	X68

CAM LOCK
spare:3



Ø6.5X35mm

B	X68


CAM BOLT
spare:3



Ø6X30mm

C	X58


WOODEN DOWEL
spare:3



Ø3X12mm

D	X5


SCREW
spare:1



Ø3.5X12mm

E	X56


SCREW
spare:3



Ø4X35mm

F	X18

SCREW
spare:1



120X31X17mm

G	X4

HANDLE



Ø35mm

H	X6

HINGE



185X50X47mm

I	X1


POWER STRIP



24X7X4.5mm


J	X3

BUCKLES
spare:1

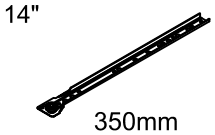


K-CL	X1

LEFT CABINET MEMBER

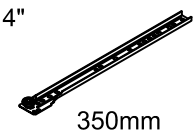


K-CR	X1

RIGHT CABINET MEMBER

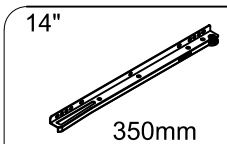

K-DL	X1

LEFT DRAWER RUNNER

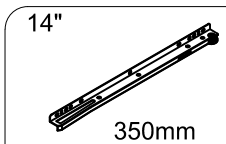

K-DR	X1


RIGHT DRAWER RUNNER



Ø21mm

L	X18


PERFECT STICKER
spare:1



Ø3×14mm

M	X28

BACK PANEL BUCKLE
spare:2



335X180X42mm

N	X1

CAR CUP HOLDER



O	X1


LIGHT STRIP



Ø4X12mm

P	X6


SCREW
spare:1

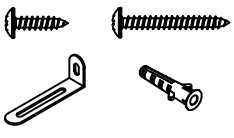

Q	X2set

HIPPING RESTRAINT
HARDWARE KIT

Part List




Ø4X35mm

R	X16

SCREW
spare:1


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

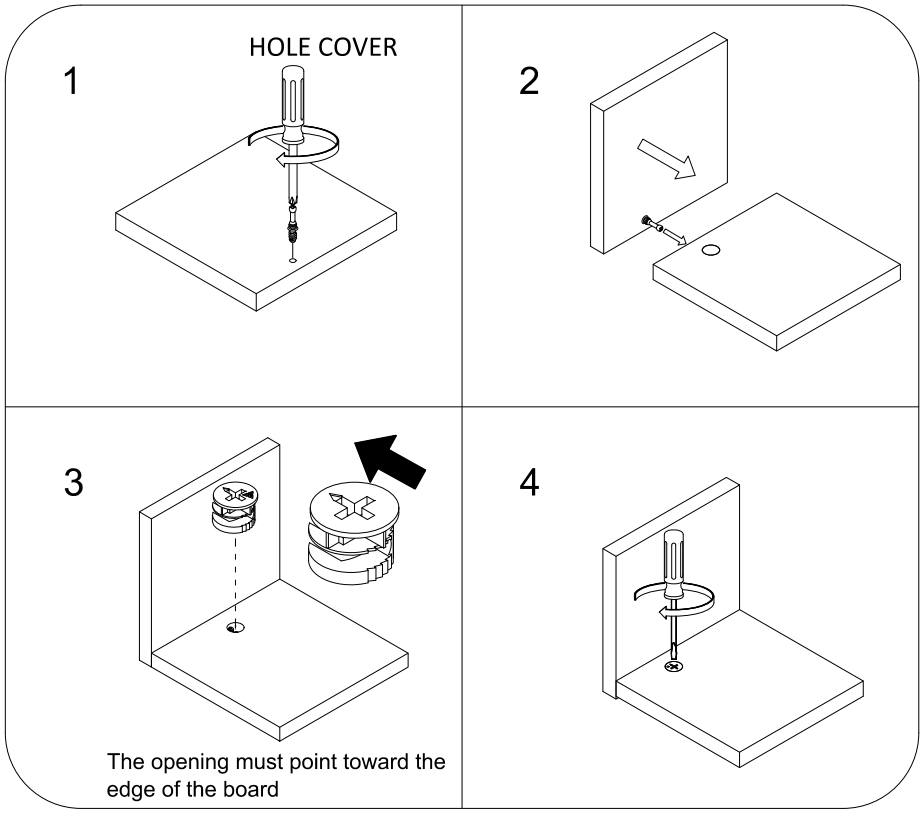


Board Identification


Not actual size

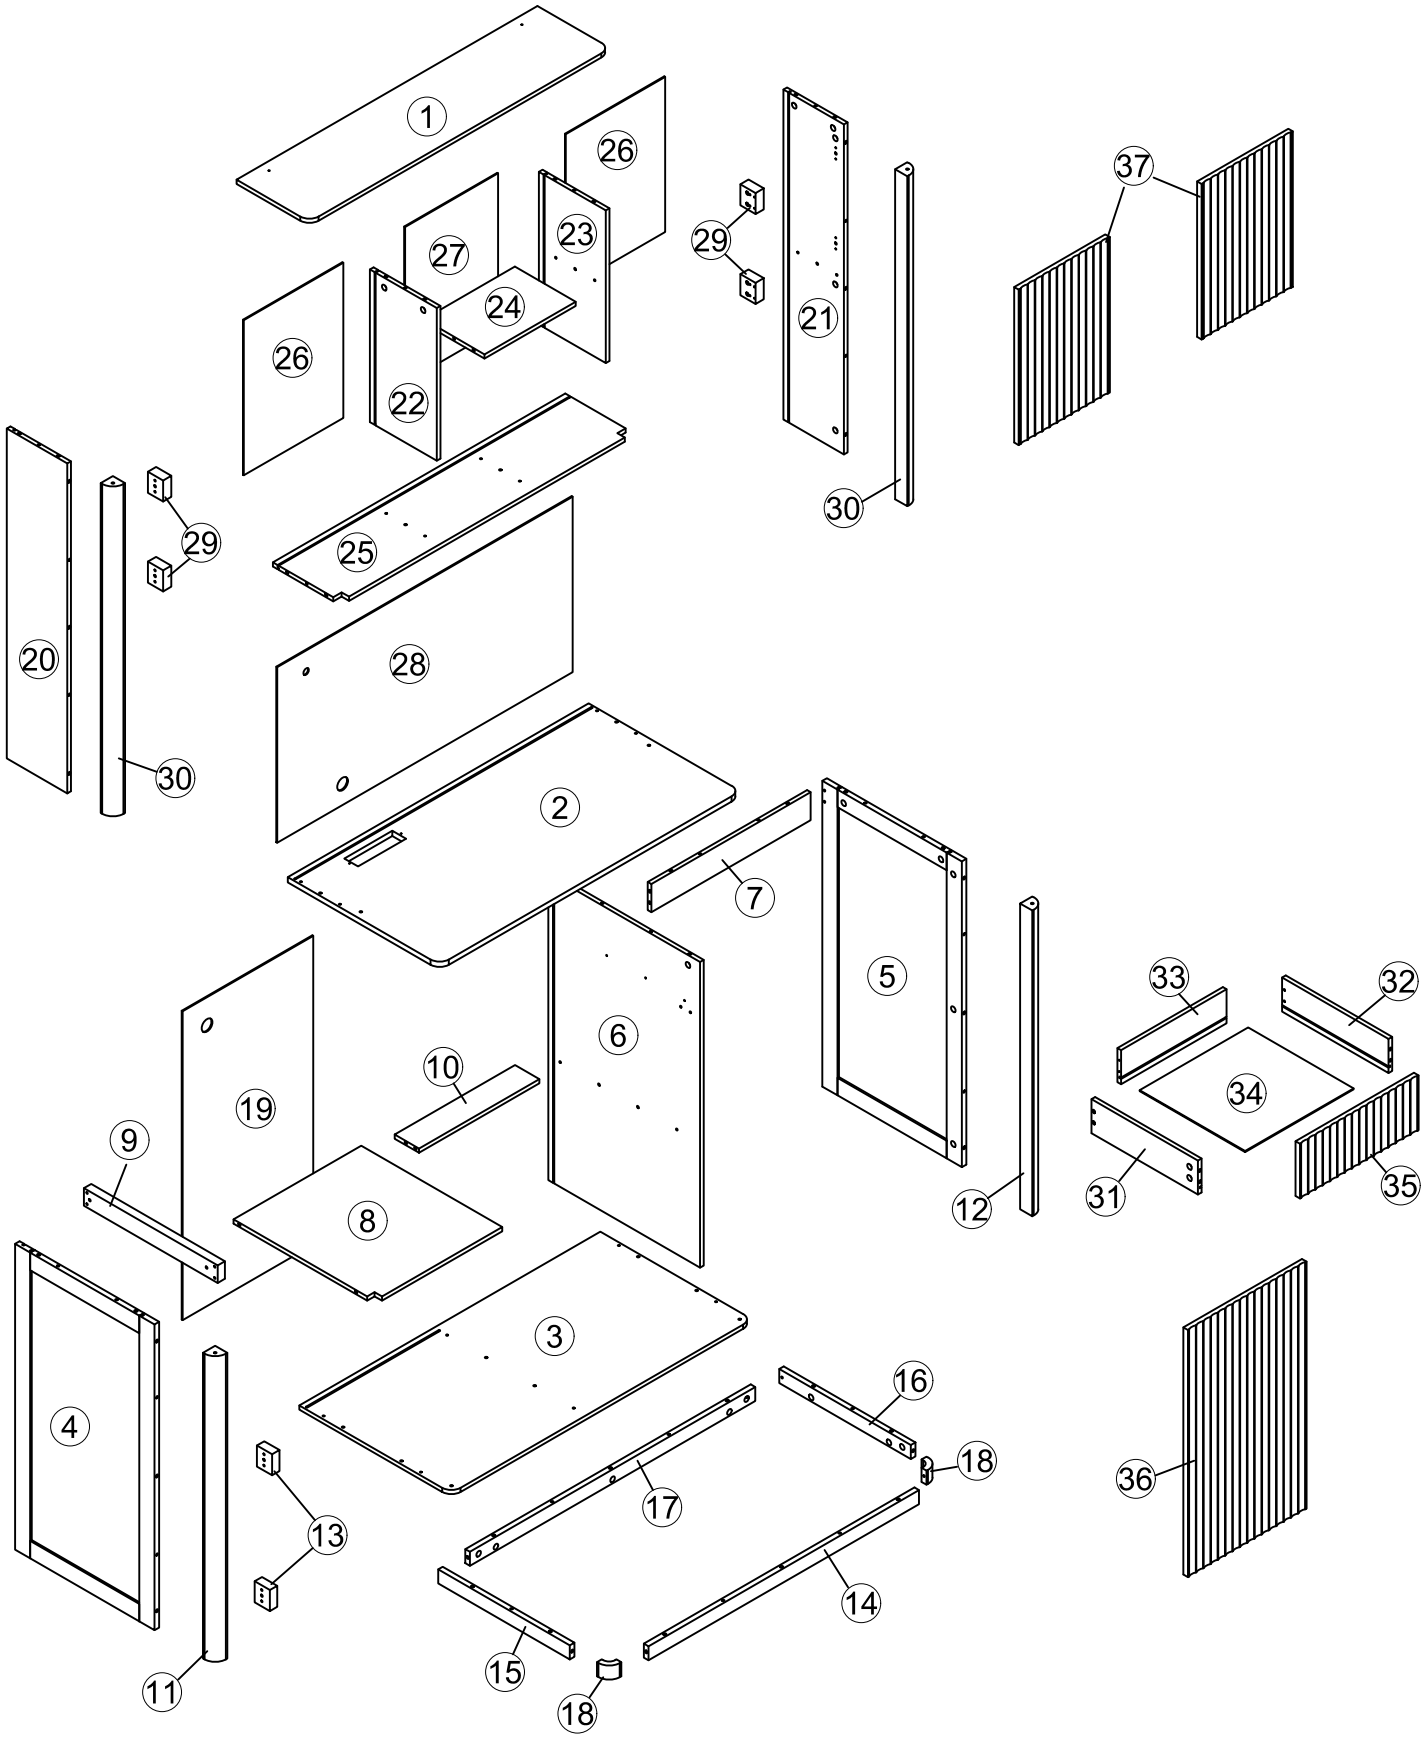


STEP1

Ø15X9.5mm		Ø6.5X35mm		Ø4X35mm	
A	X4	B	X4	F	X4

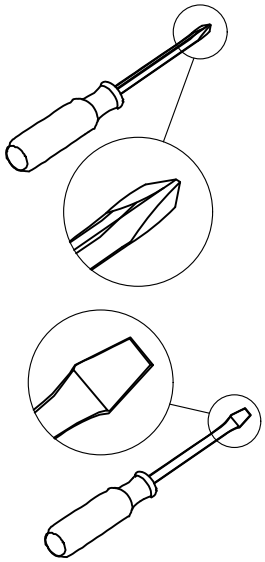


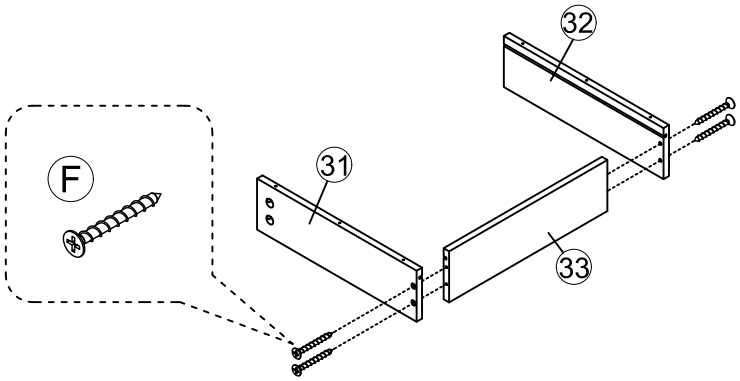

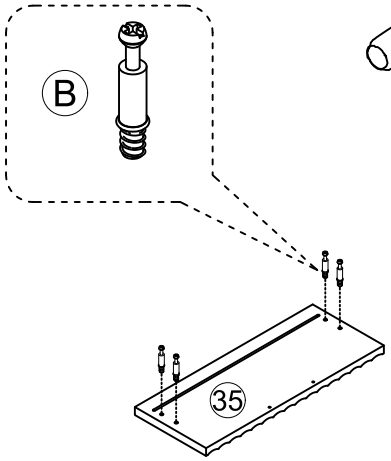


Step 1 Step 3


Step 2 Step 4

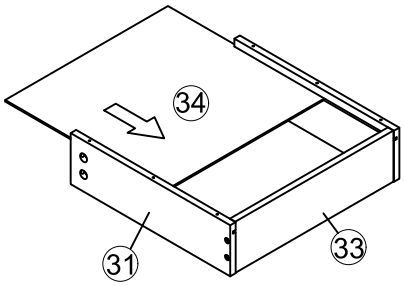


Note the slot on the back.

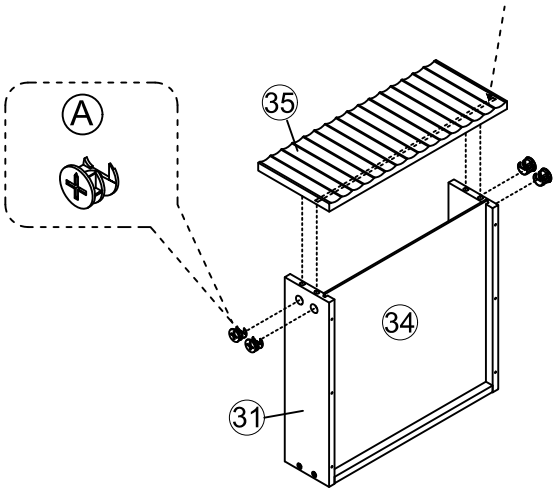


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

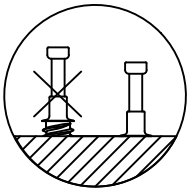


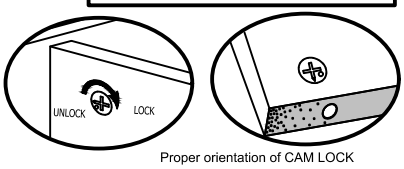

Proper orientation of CAM LOCK


STEP2

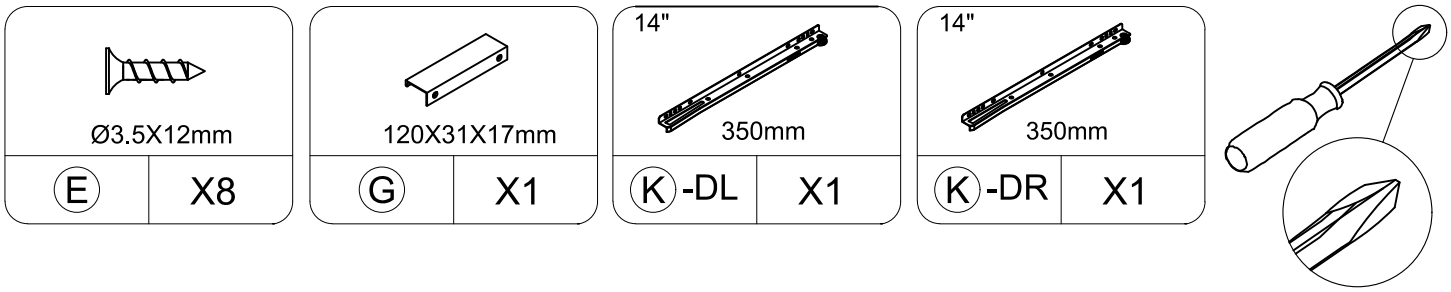


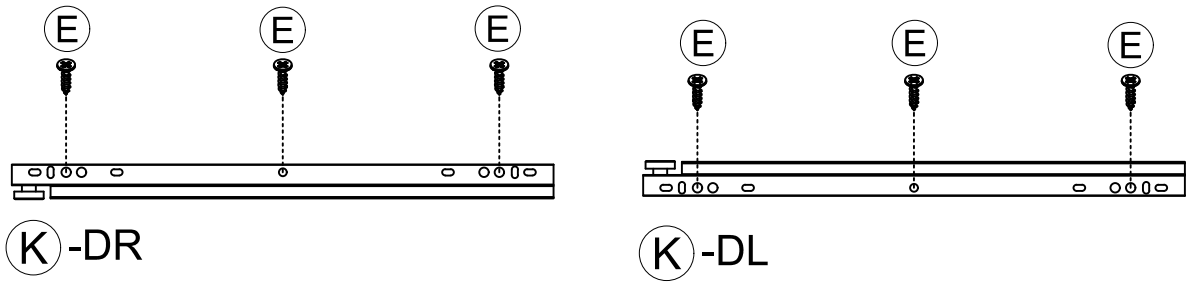

K -DR

K -DL

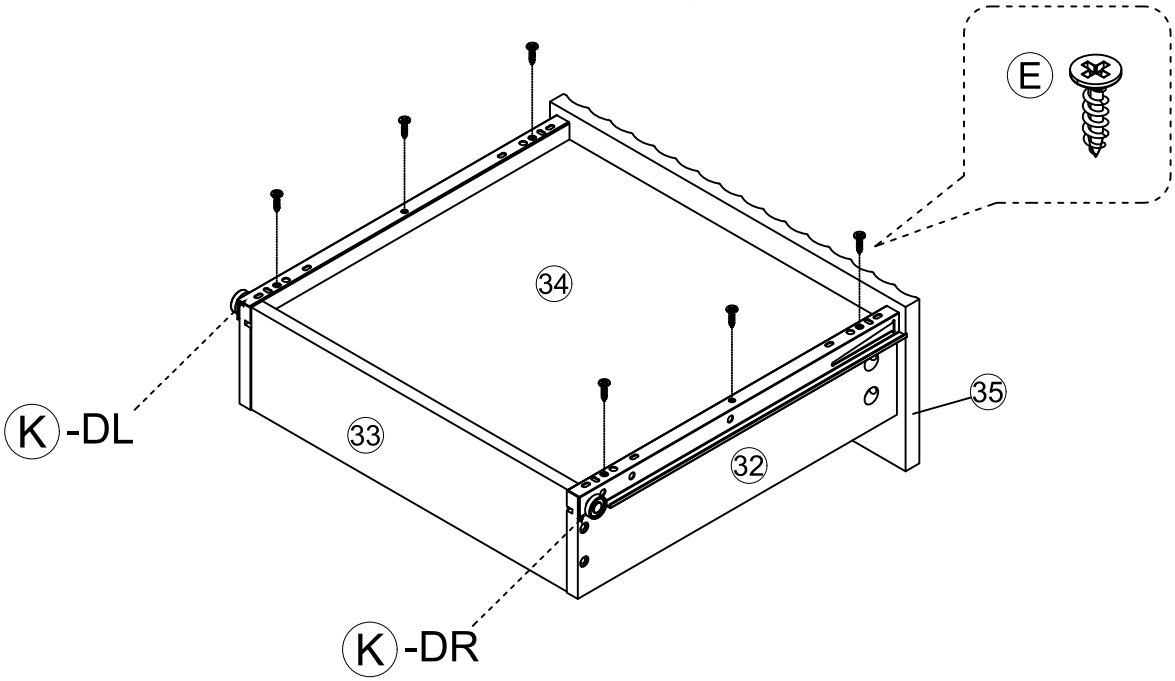


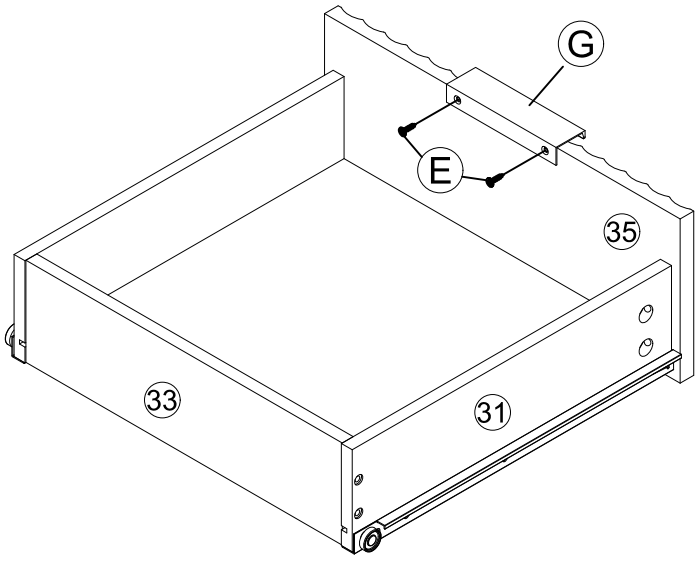


STEP3

Ø6X30mm	
C	X4

Ø4X35mm	
R	X8

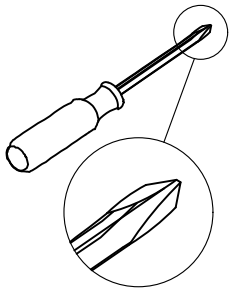



Pay attention to the installation direction of board(9,13).

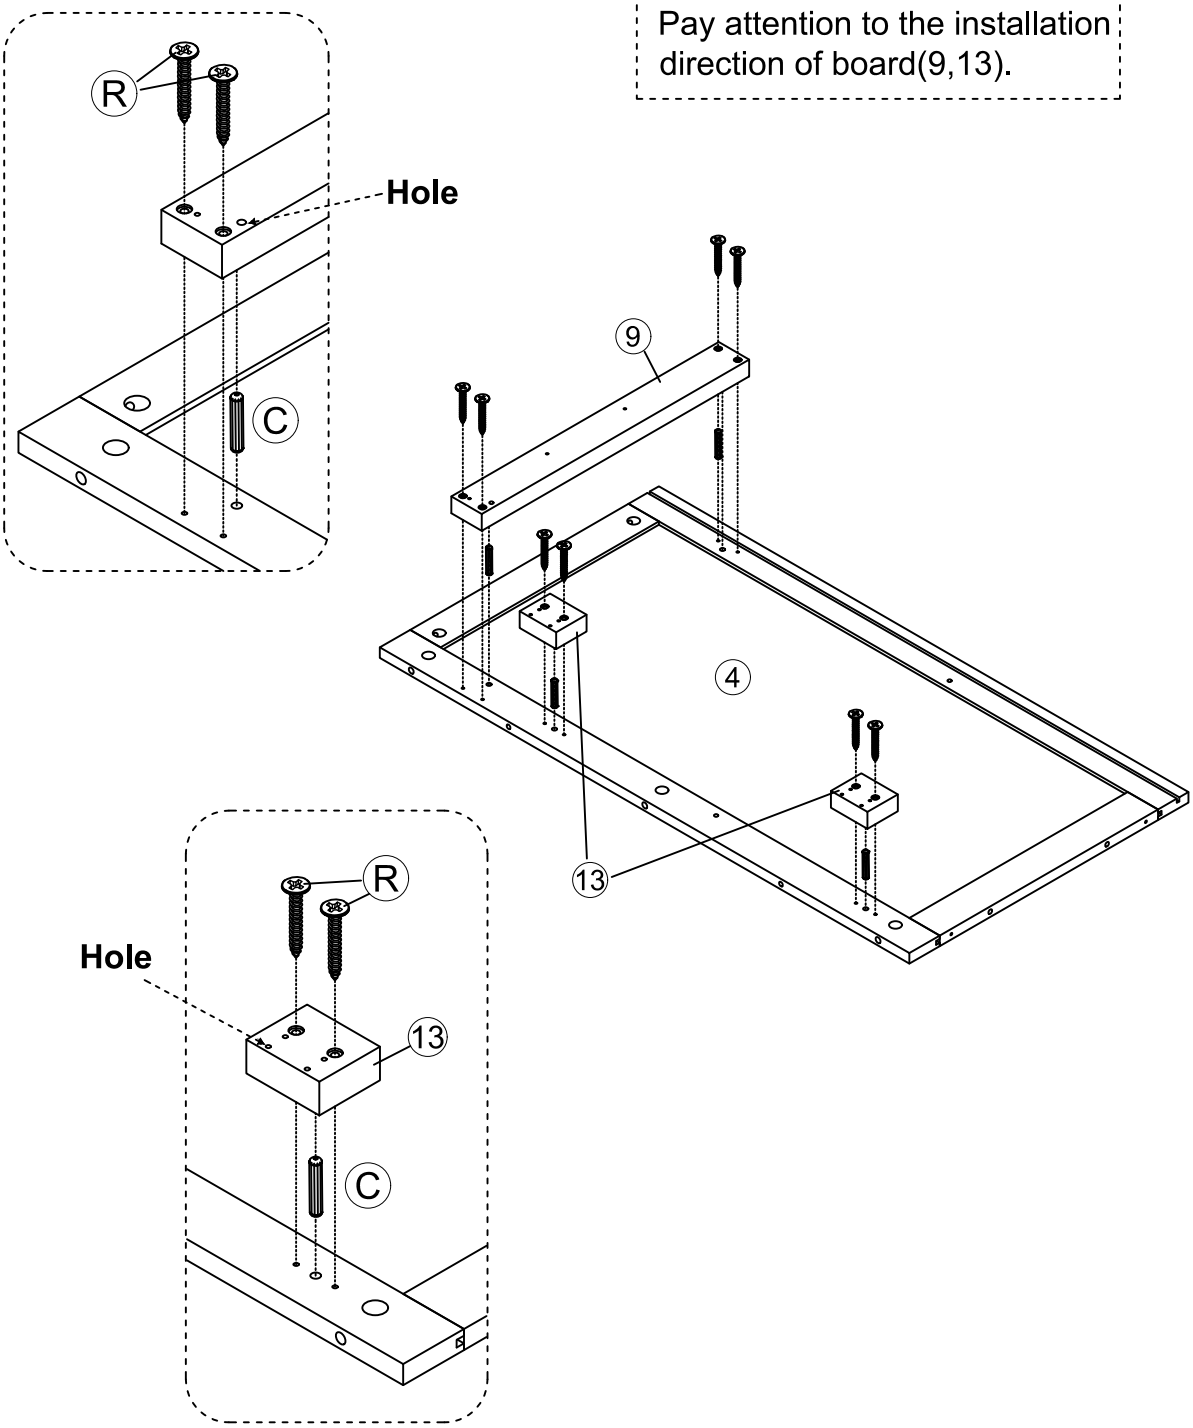



STEP4

Ø15X9.5mm		Ø6.5X35mm		Ø6X30mm	
A	X3	B	X3	C	X2

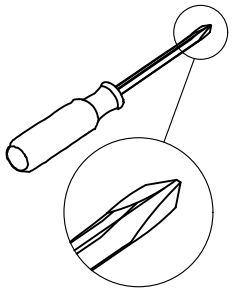


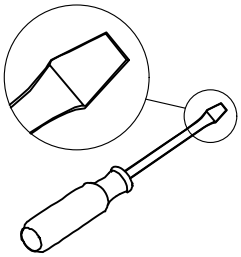

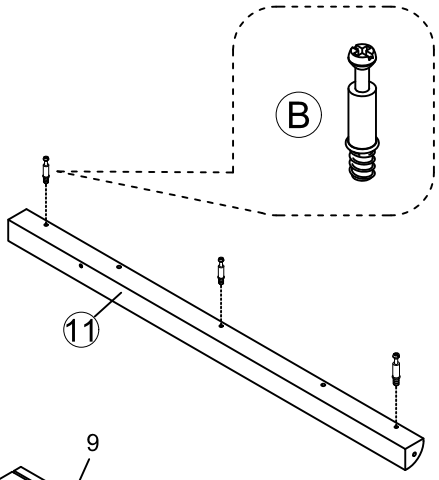


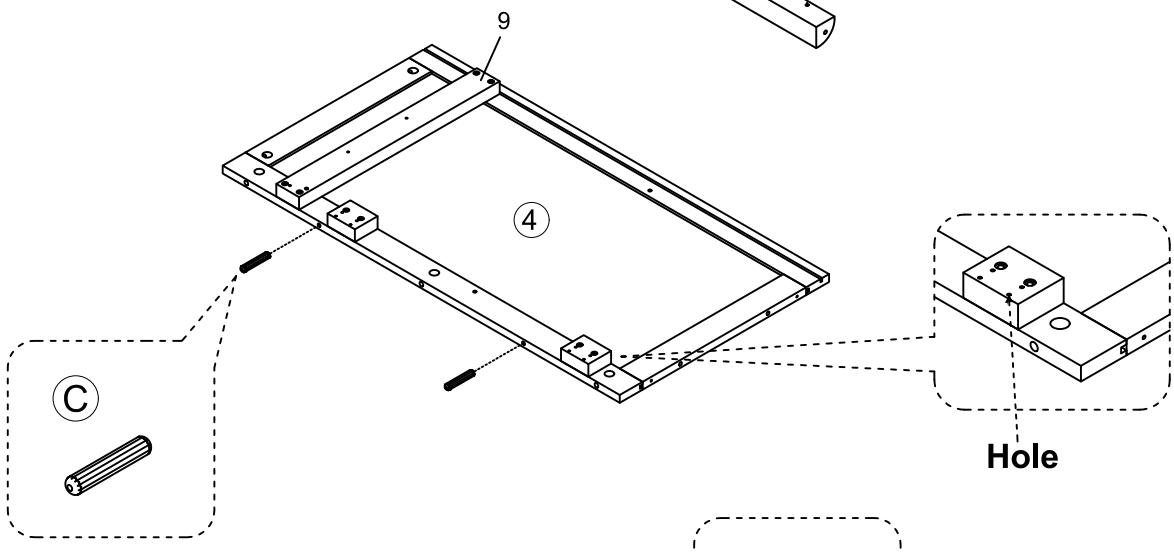


Pay attention to the installation direction of board(11).

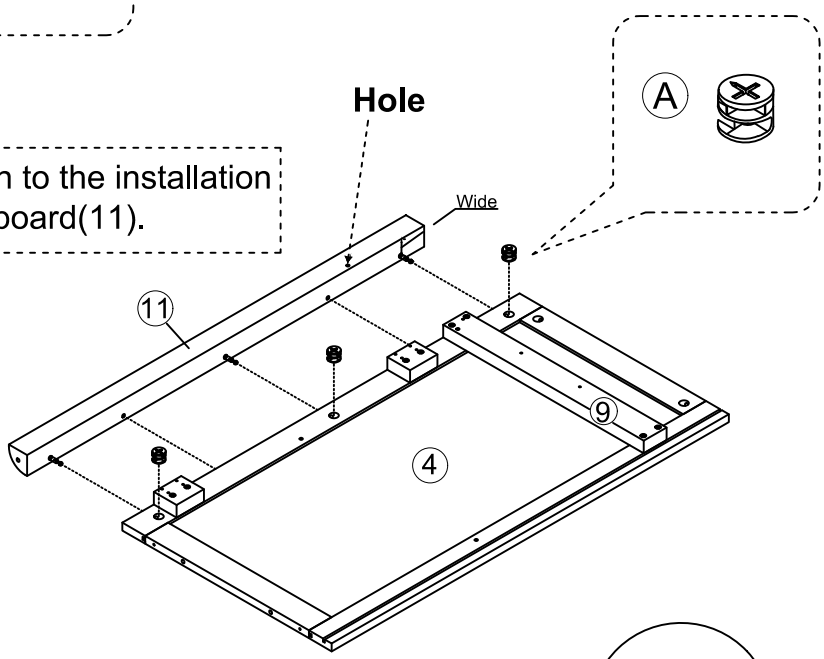


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

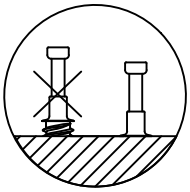


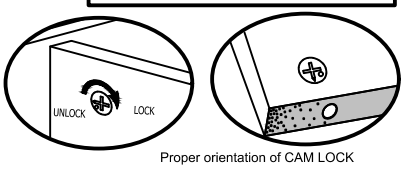



Proper orientation of CAM LOCK


STEP5

 Ø3.5X12mm	
E	X6

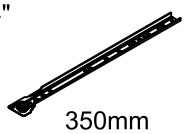
14"  350mm	
K -CL	X1

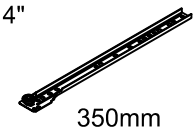
14"  350mm	
K -CR	X1

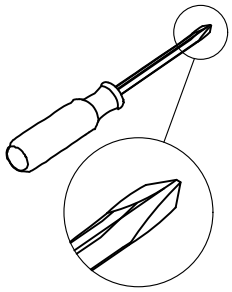

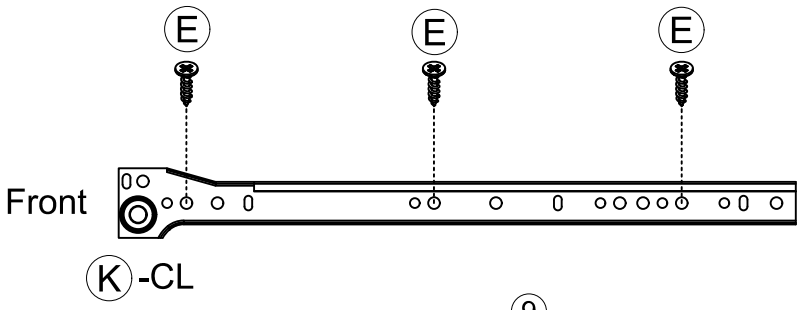


K -CL

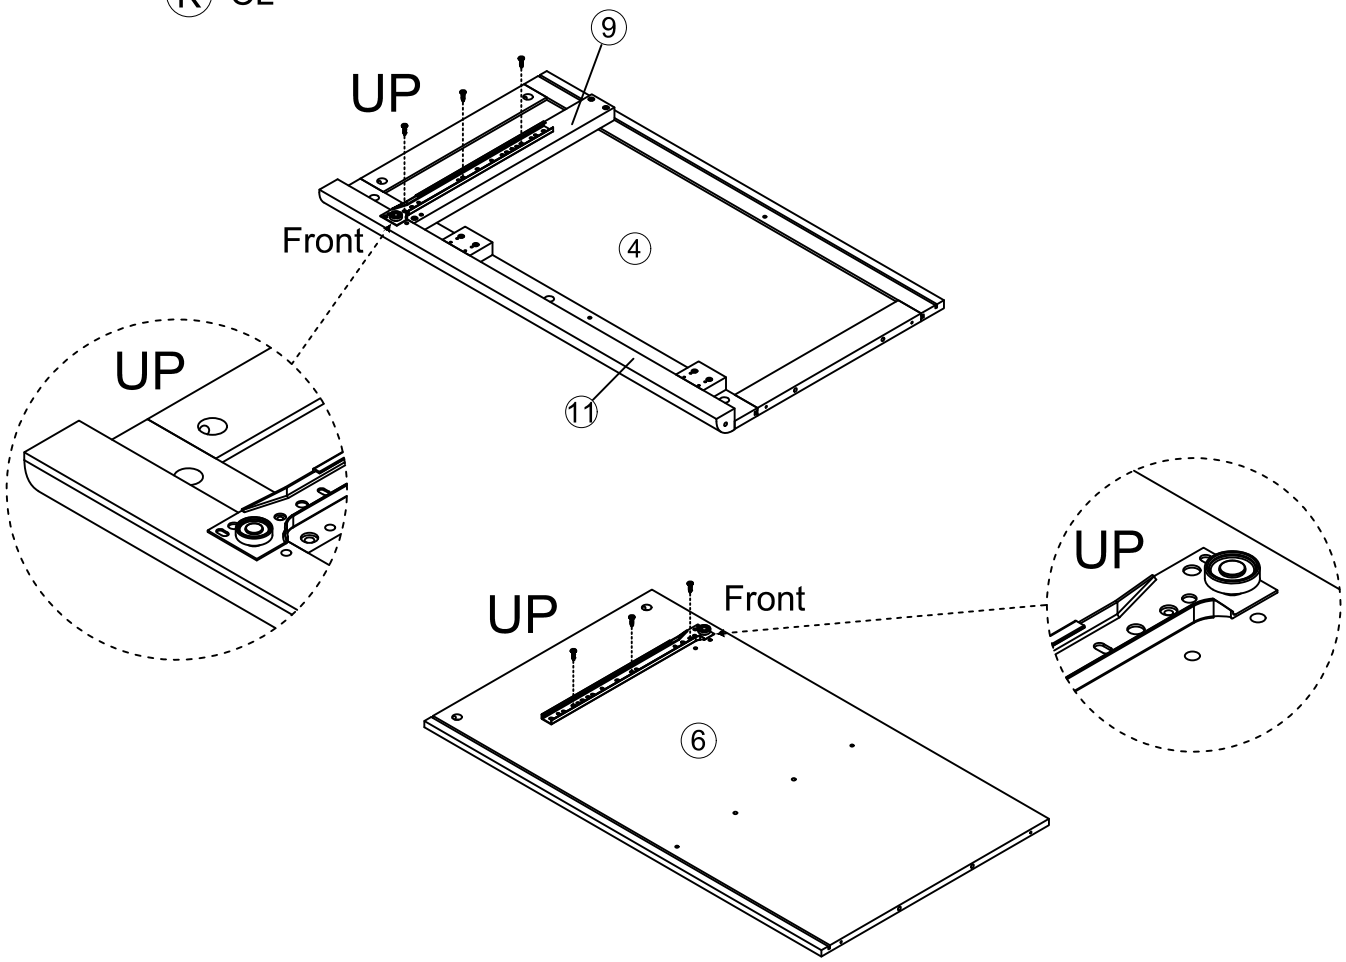


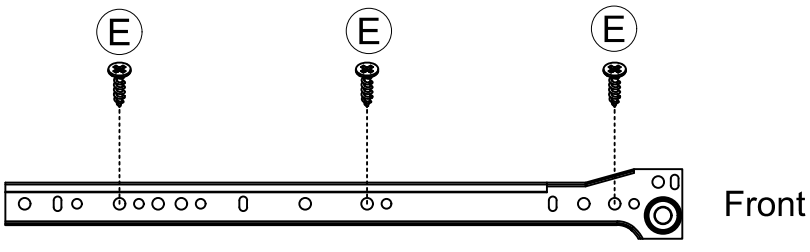



K -CR


STEP6

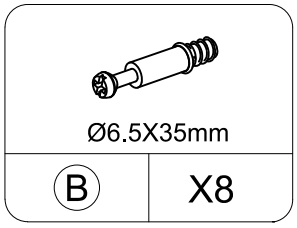

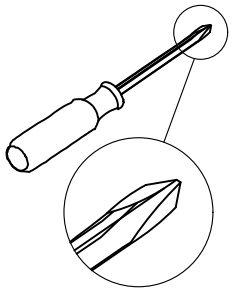

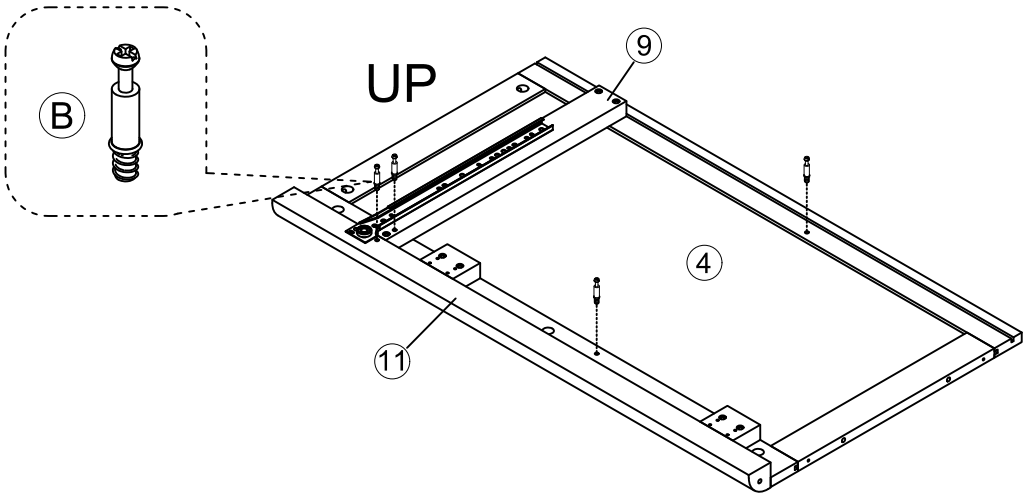

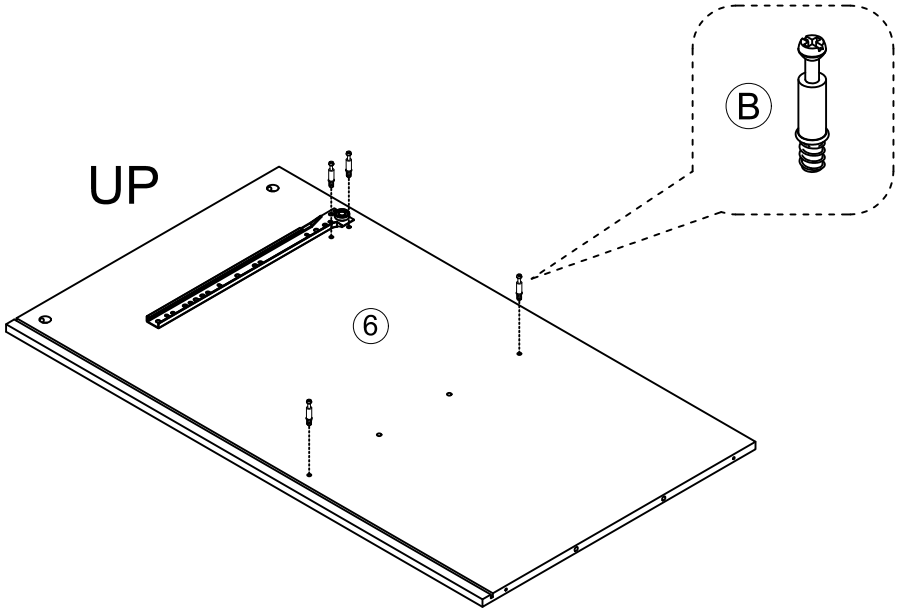


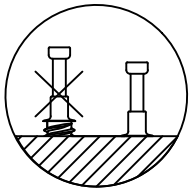


STEP7


Ø15X9.5mm	
A	X4

Ø6X30mm	
C	X2

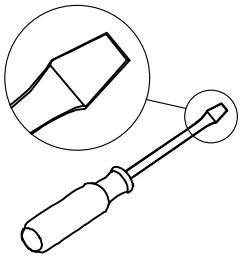


Pay attention to the installation direction of board(8,10).

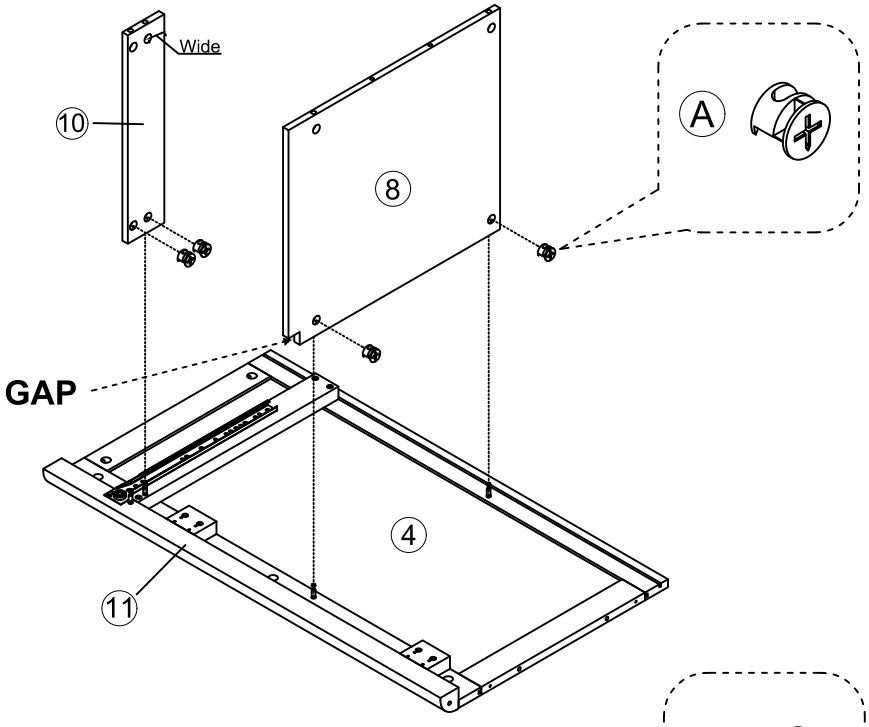

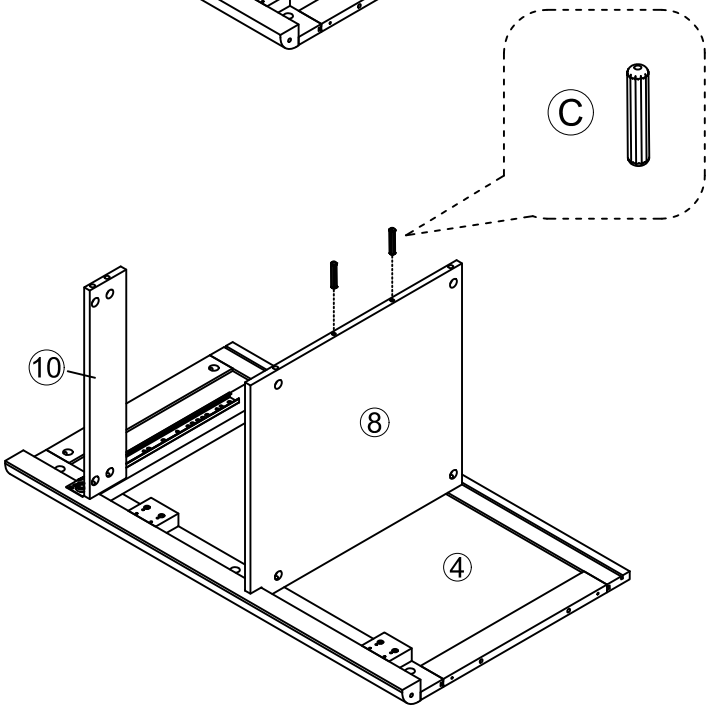


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

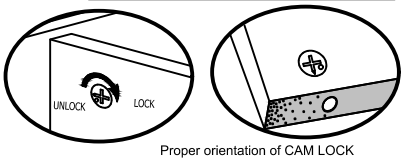



Proper orientation of CAM LOCK

STEP8


 Ø15X9.5mm	 Ø6.5X35mm
A X4	B X2

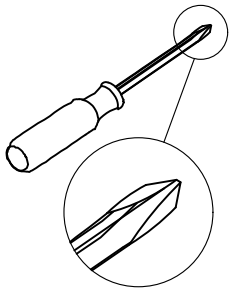

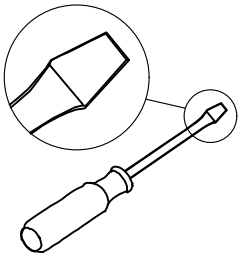


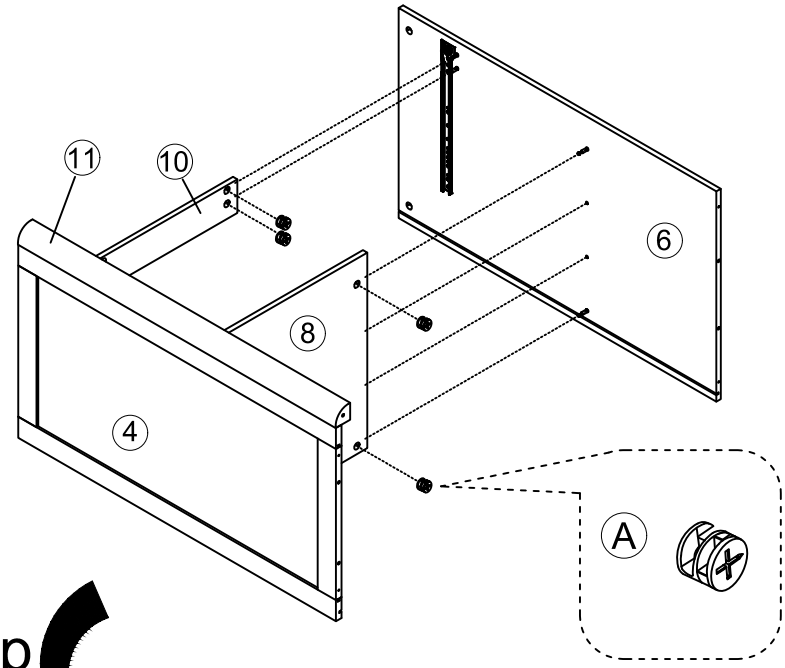

Flip

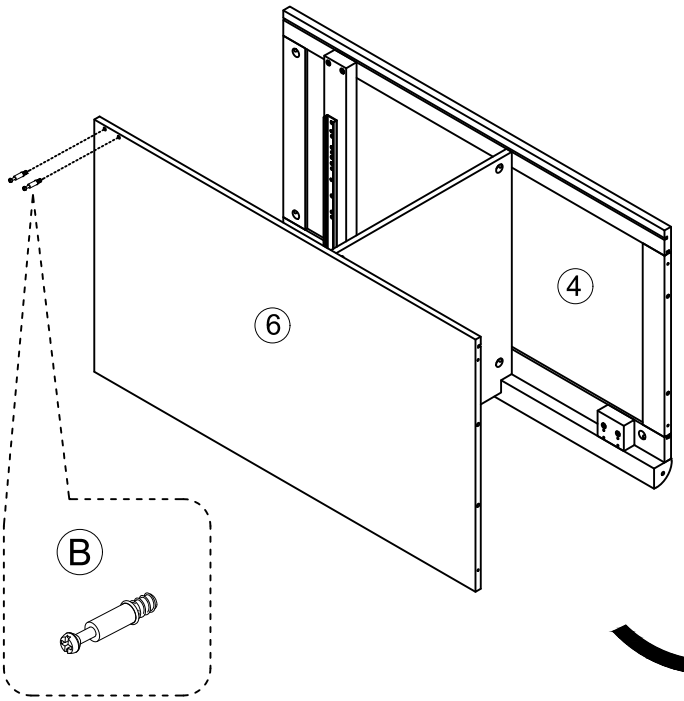



Flip

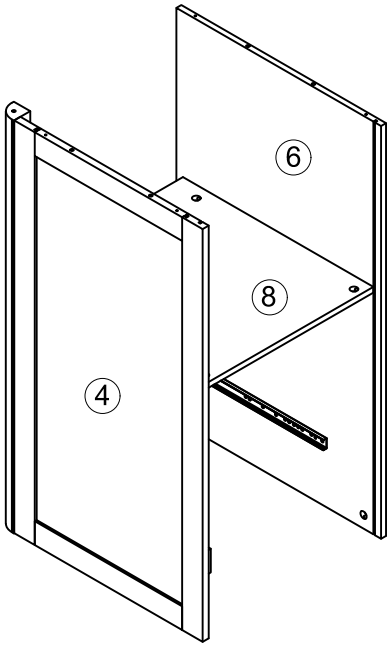

Rotate


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

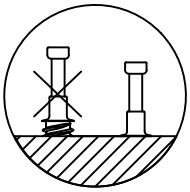

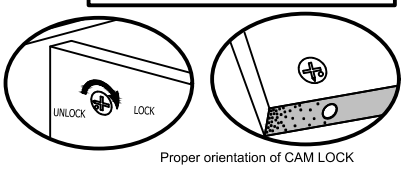

Proper orientation of CAM LOCK

STEP9




Ø6.5X35mm


B	X3





Ø6X30mm

C	X2

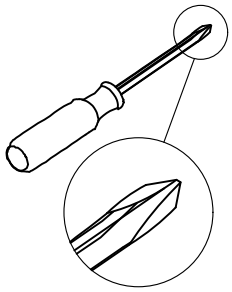

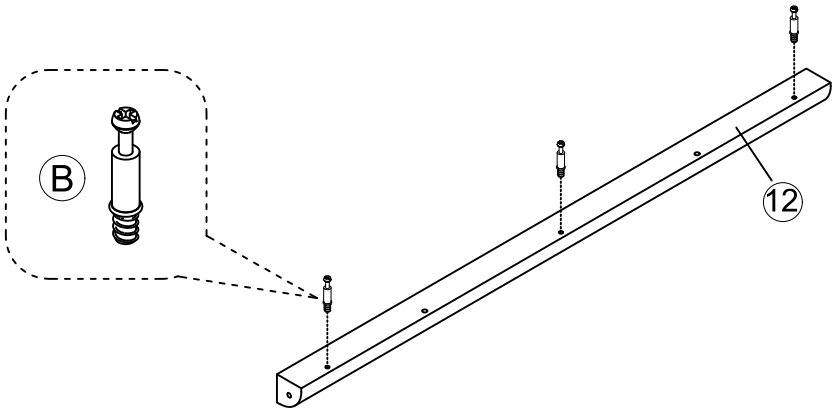

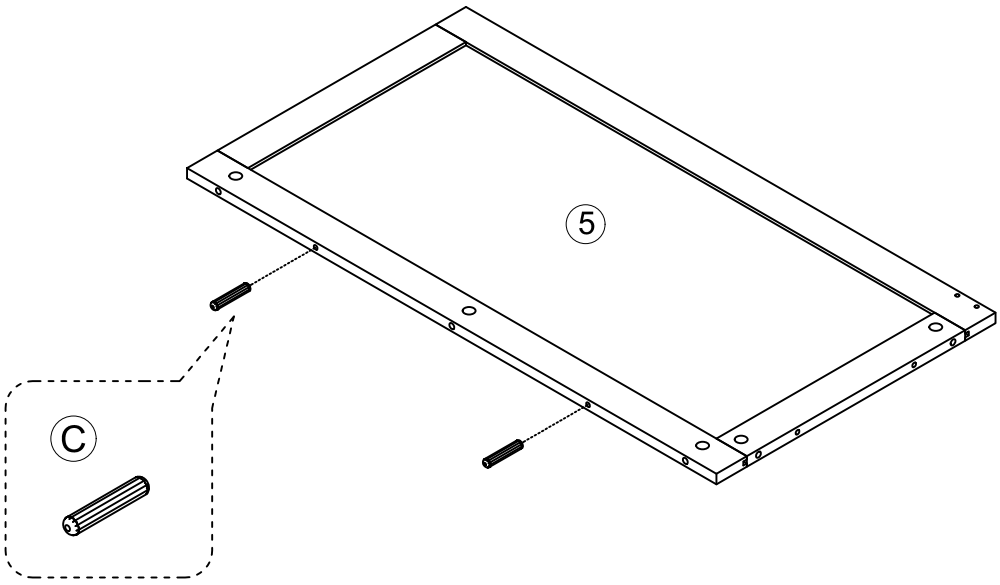


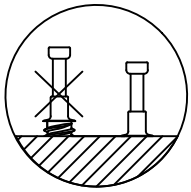


STEP10


Ø15X9.5mm	
A	X3


Ø6.5X35mm	
B	X2

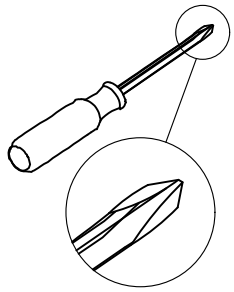

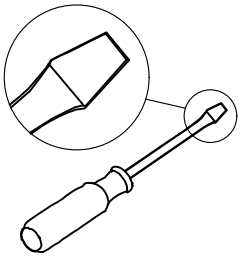



Pay attention to the installation direction of board(12).

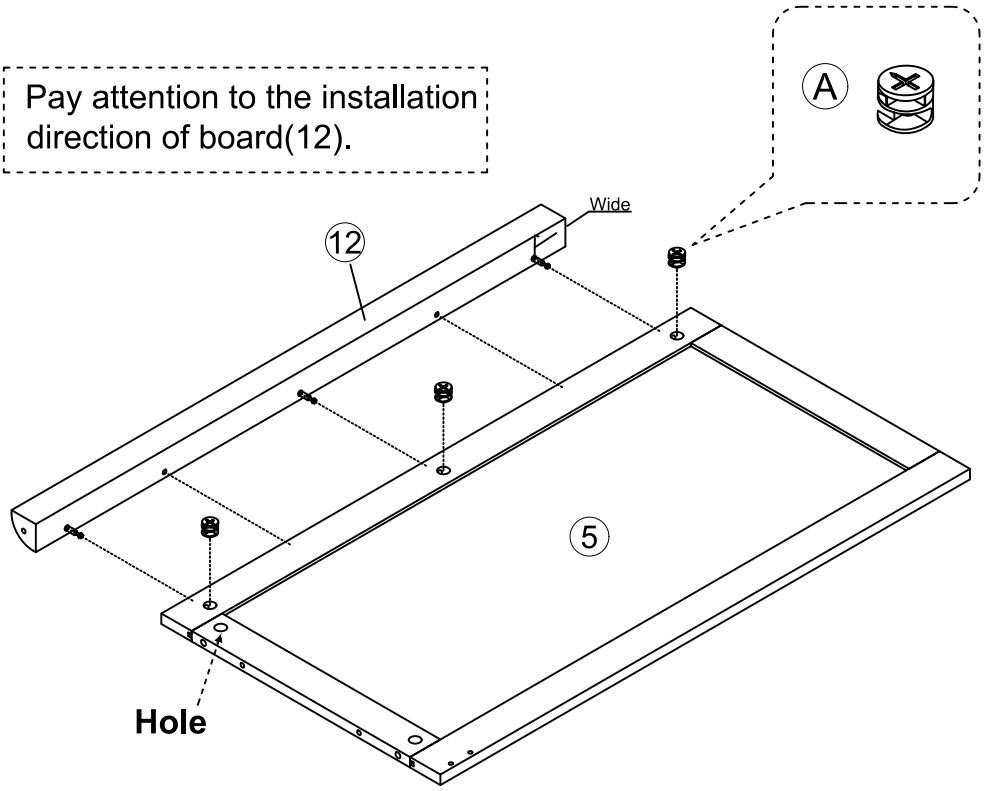

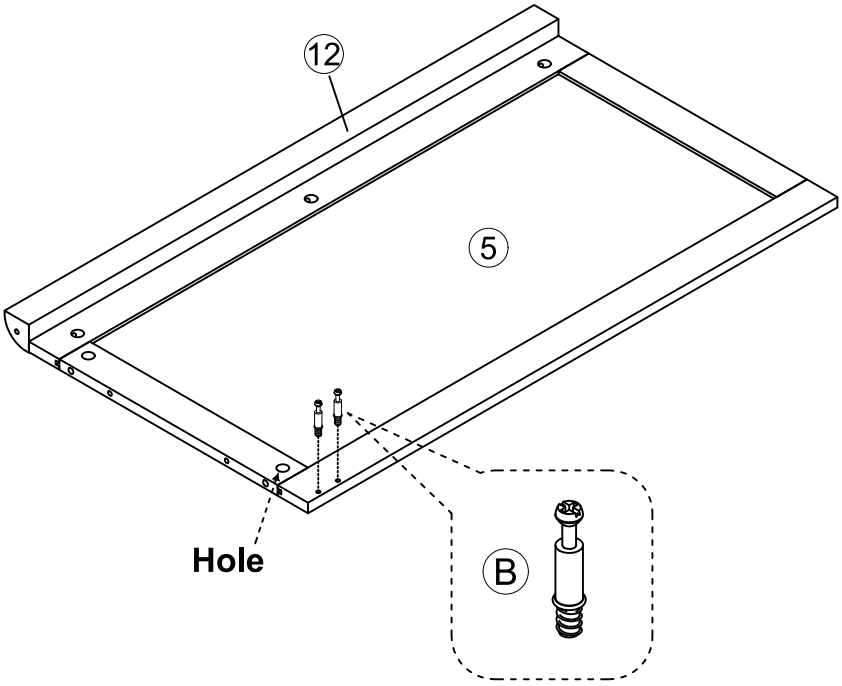


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

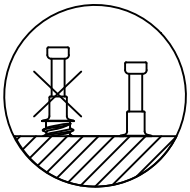

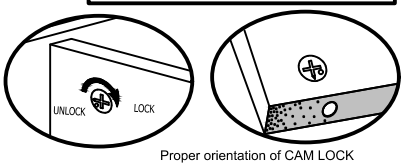



Proper orientation of CAM LOCK

STEP11

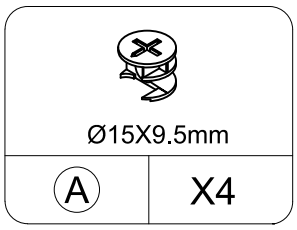


Pay attention to the installation direction of board(7).

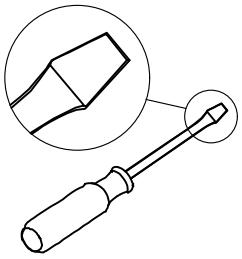


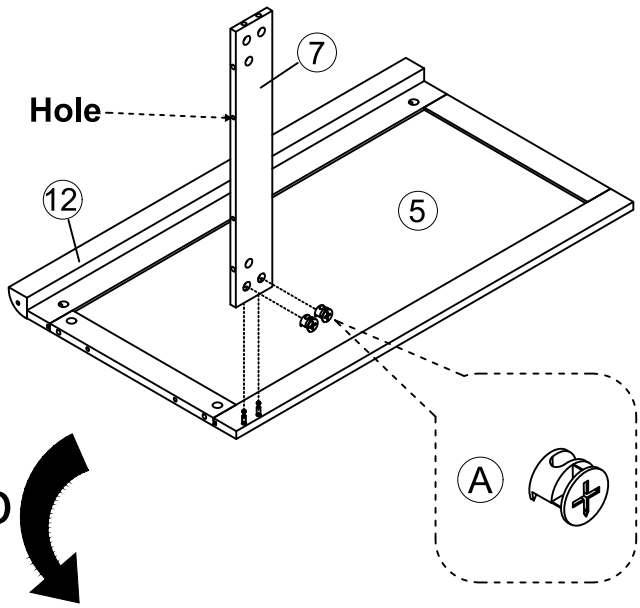

Flip

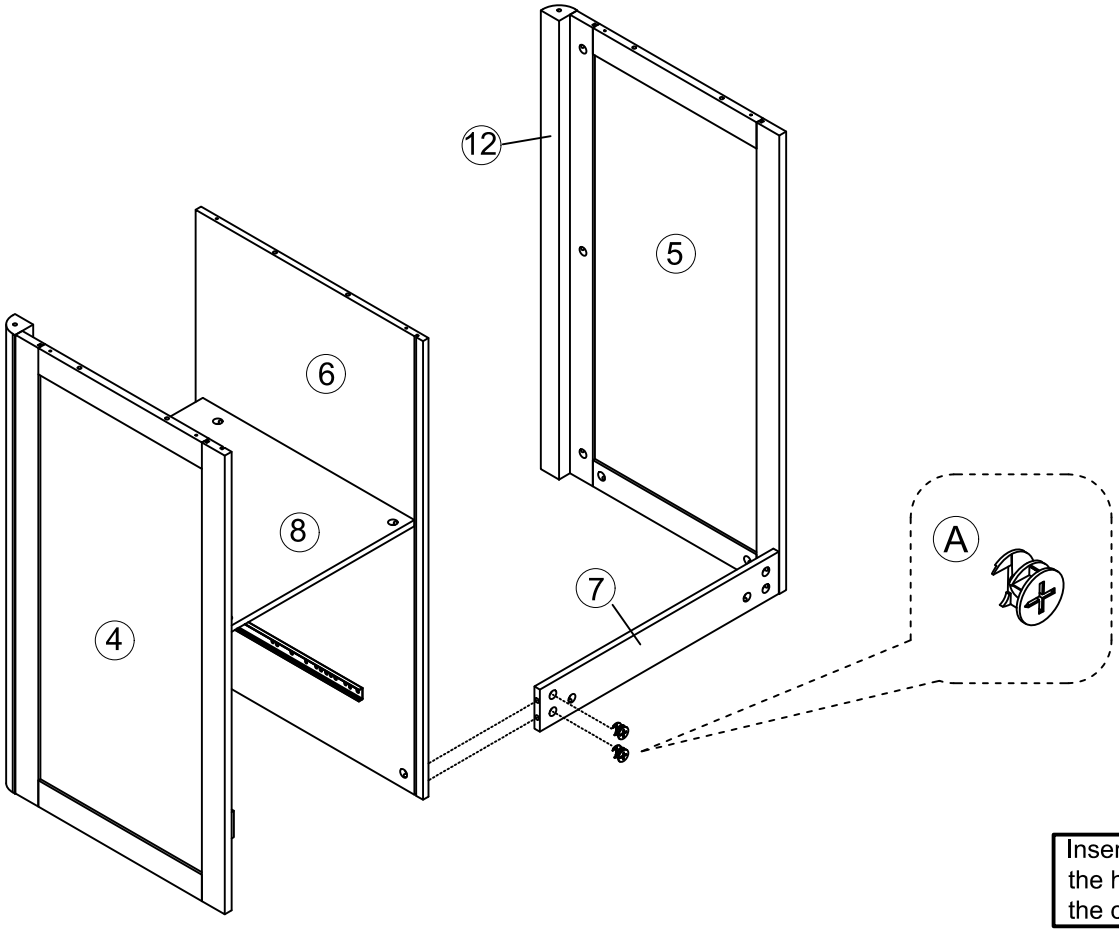

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

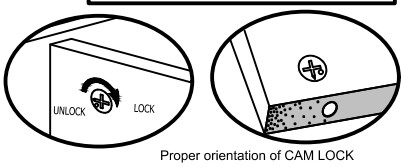


Proper orientation of CAM LOCK

STEP12





Ø6X30mm

C	X8

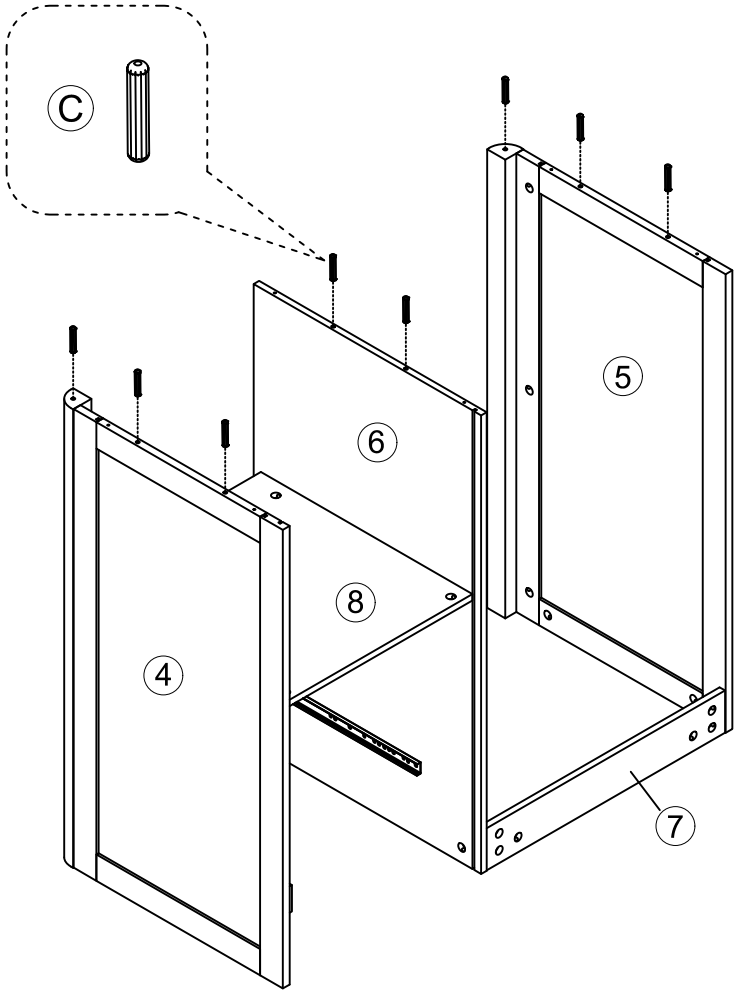


STEP13

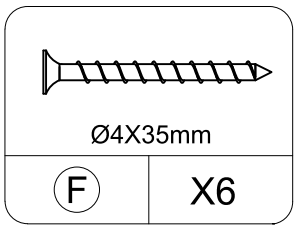

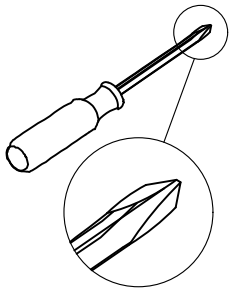



Pay attention to the installation direction of board(3).

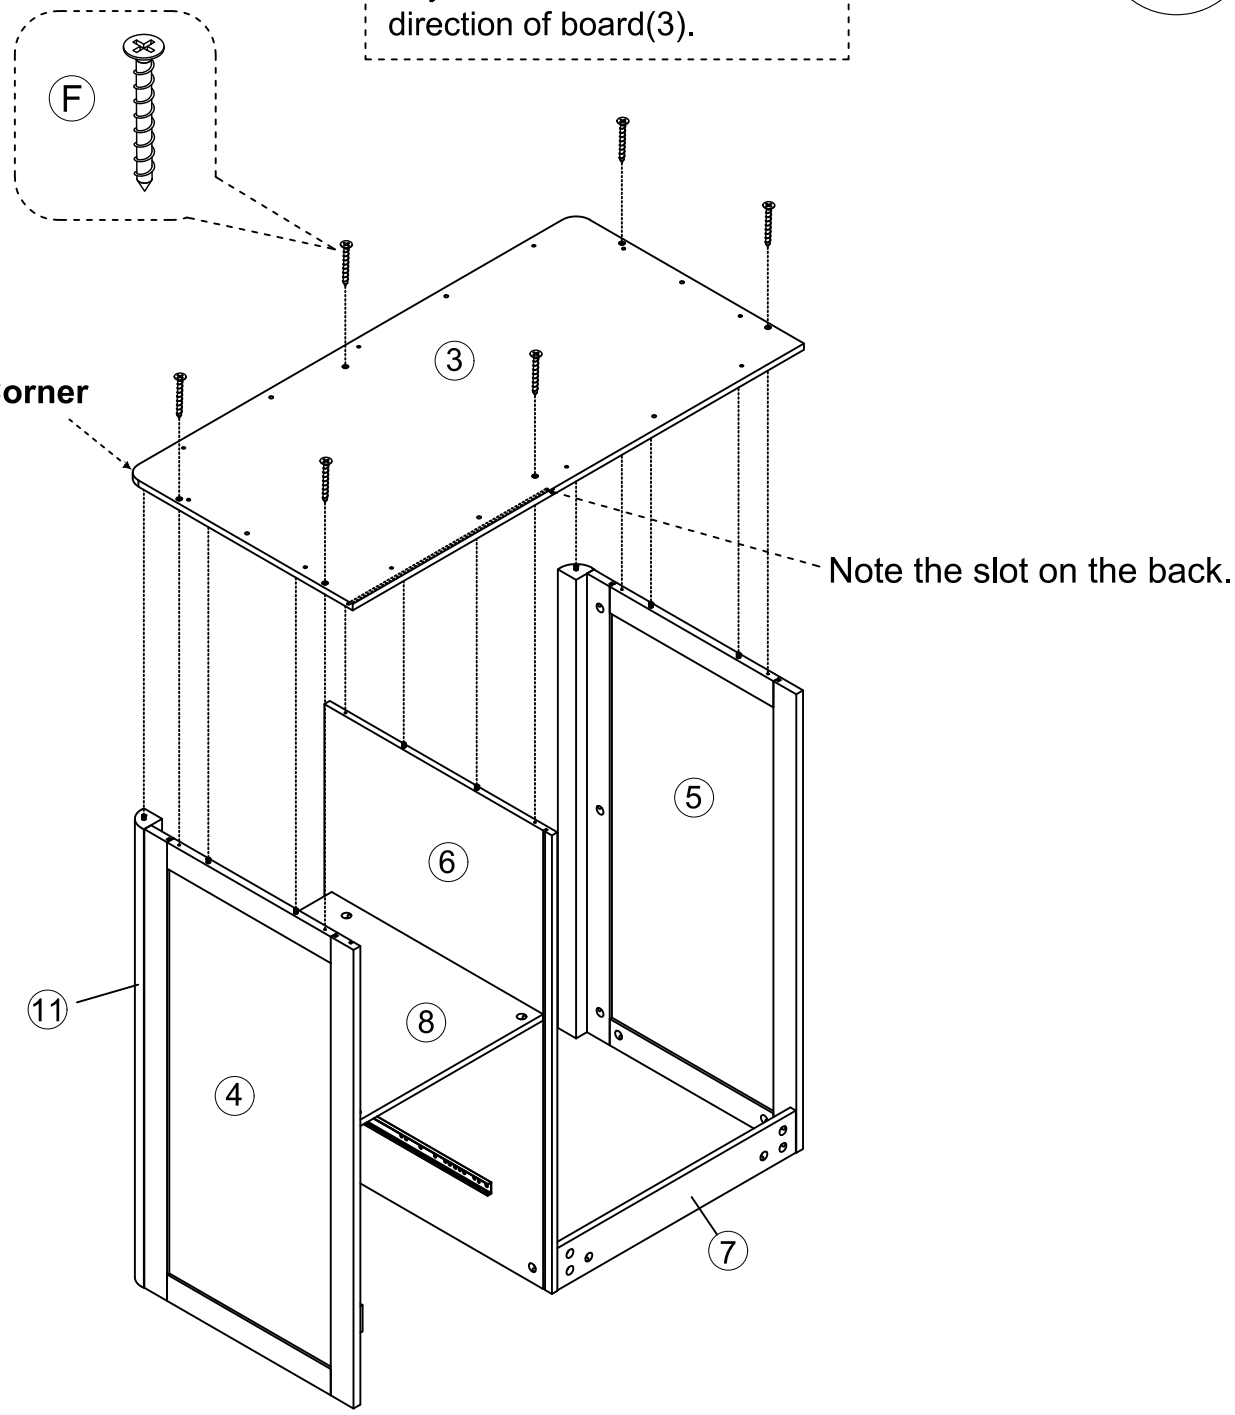


STEP14


 Ø15X9.5mm	 Ø6.5X35mm
A X2	B X6

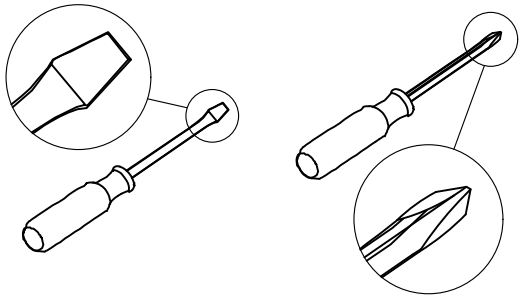


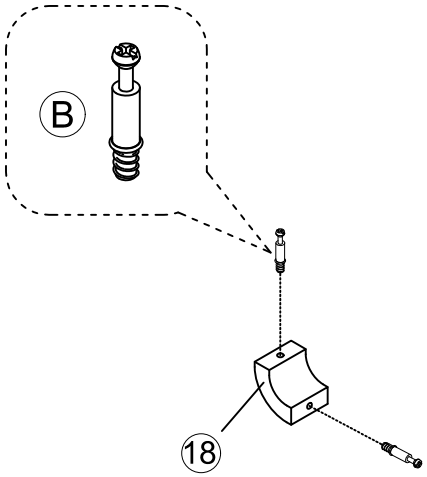

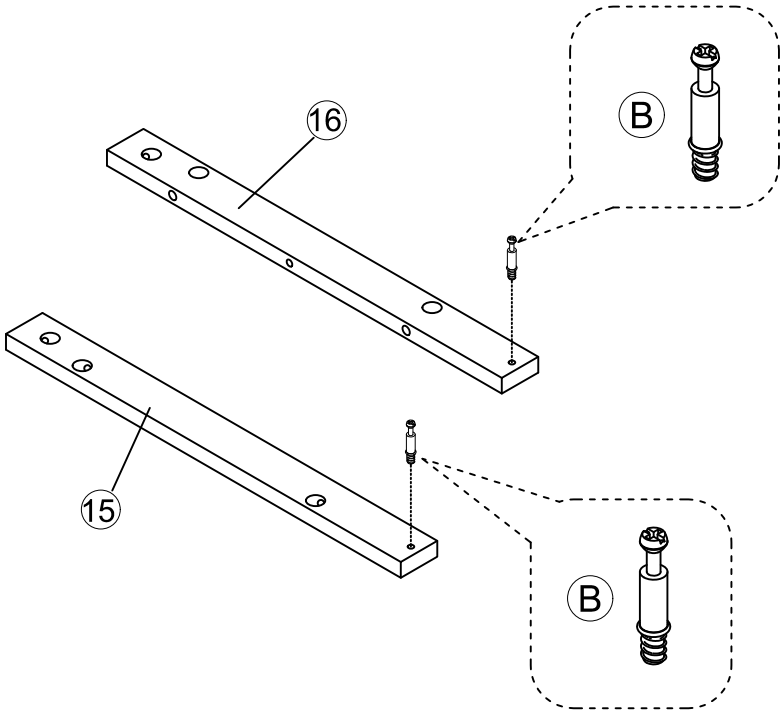



X2

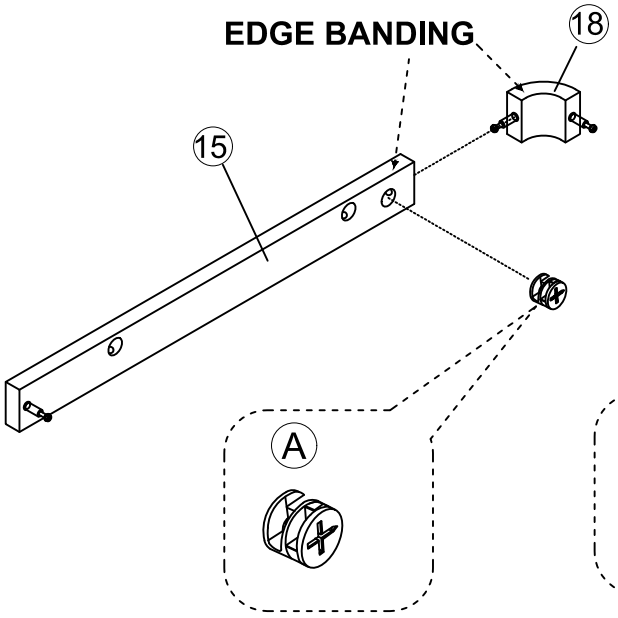

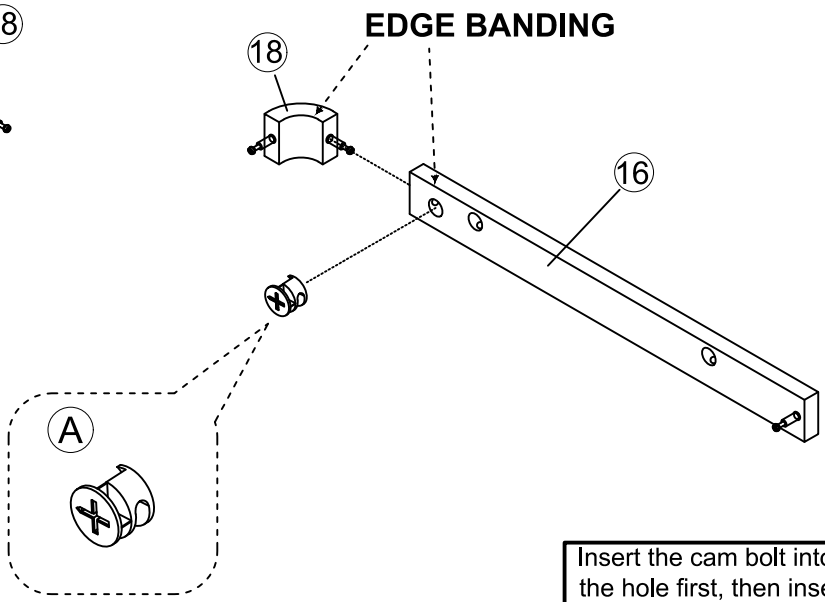


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

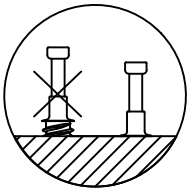


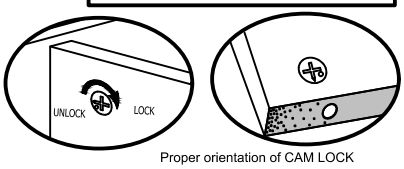


Proper orientation of CAM LOCK


STEP15

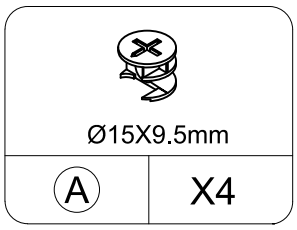

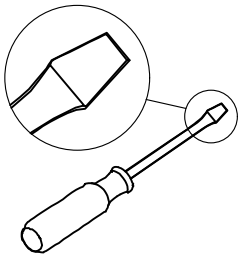

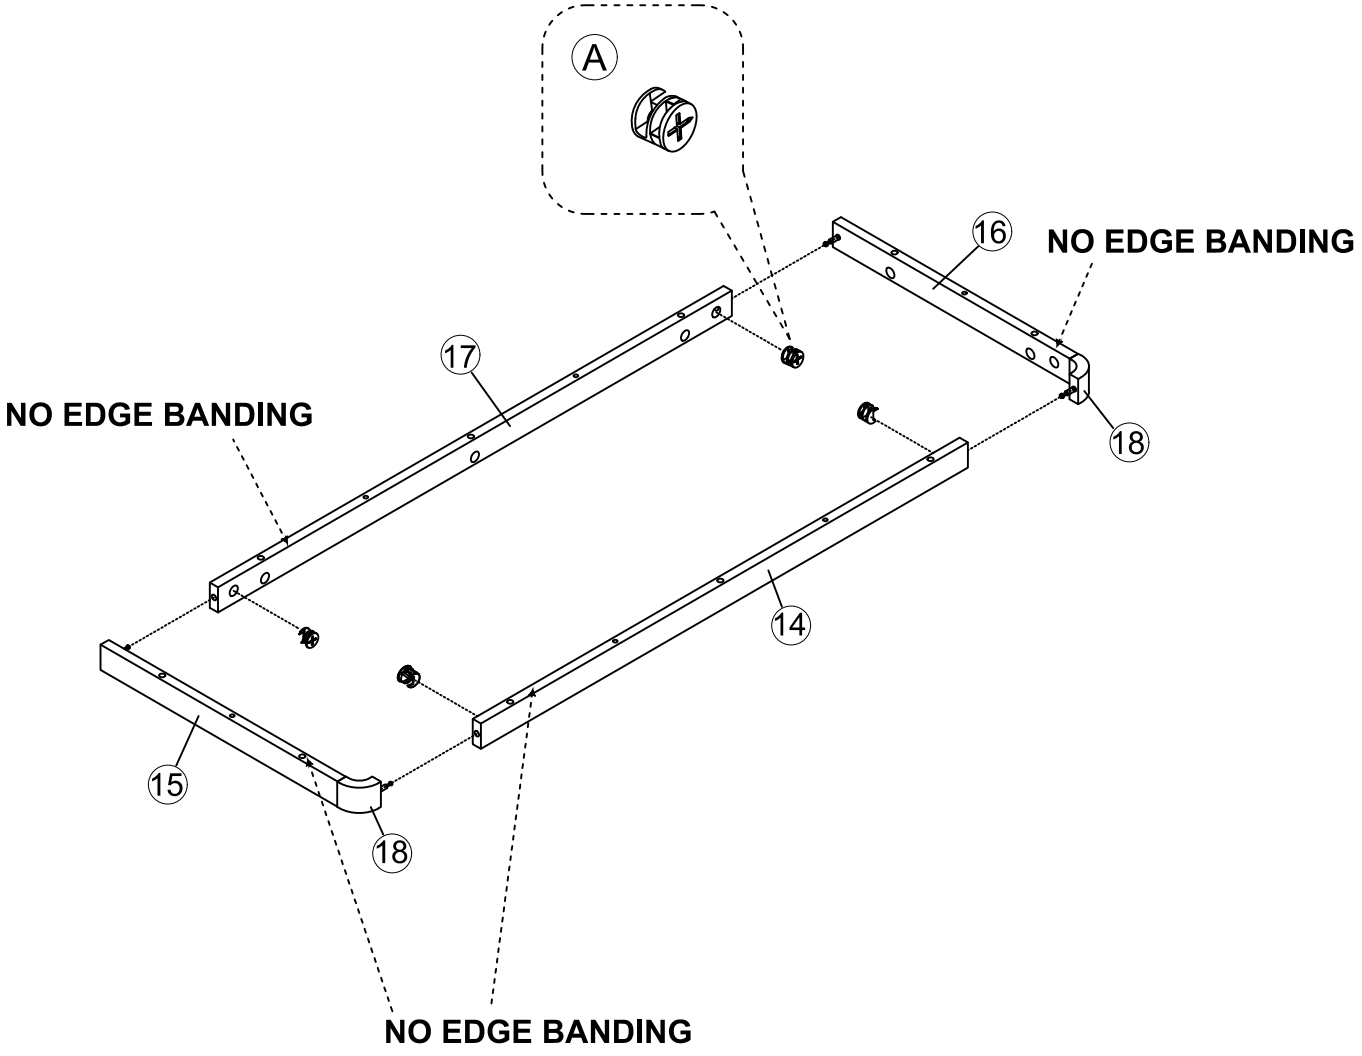



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

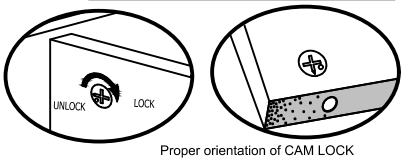



Proper orientation of CAM LOCK

STEP16

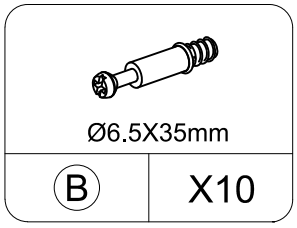

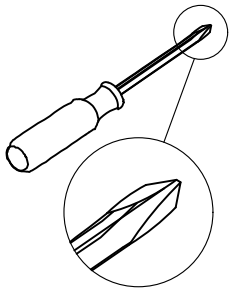

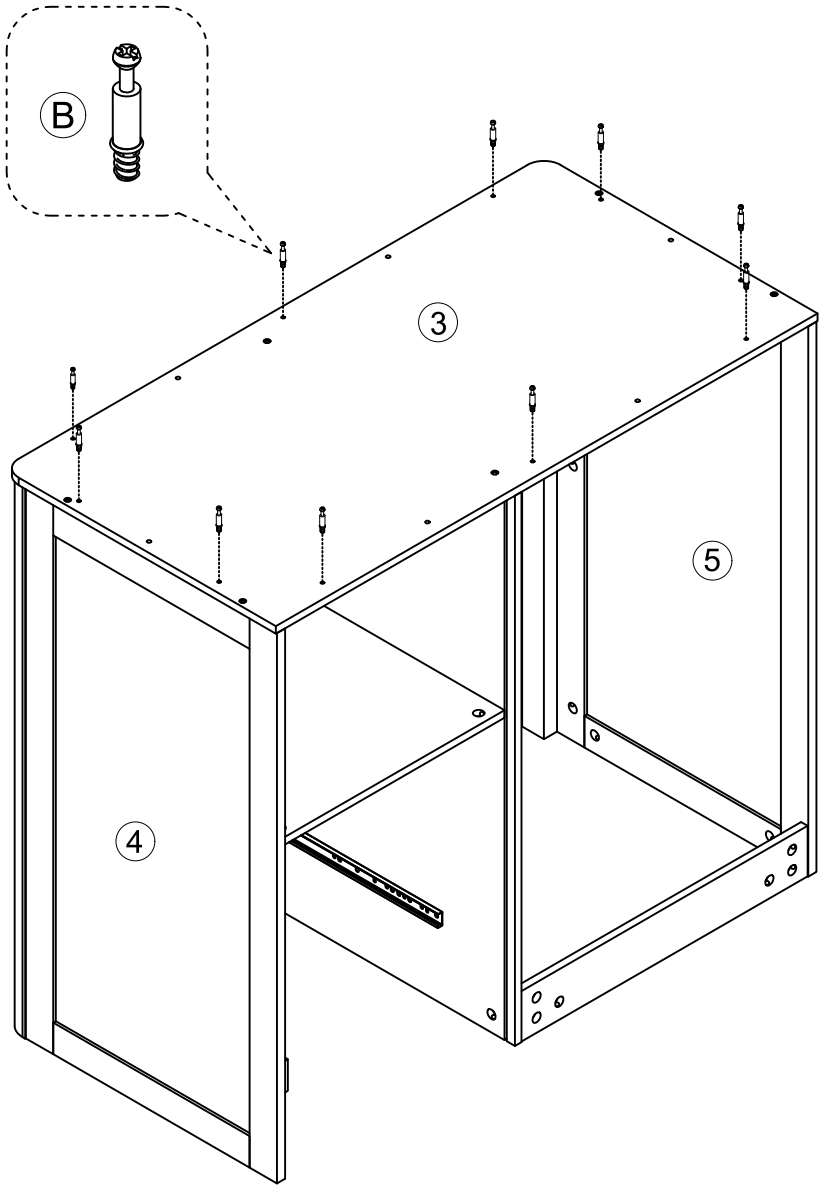


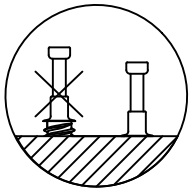


STEP17


Ø15X9.5mm	
A	X10

Ø6X30mm	
C	X6

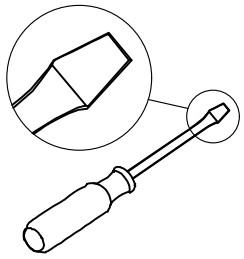

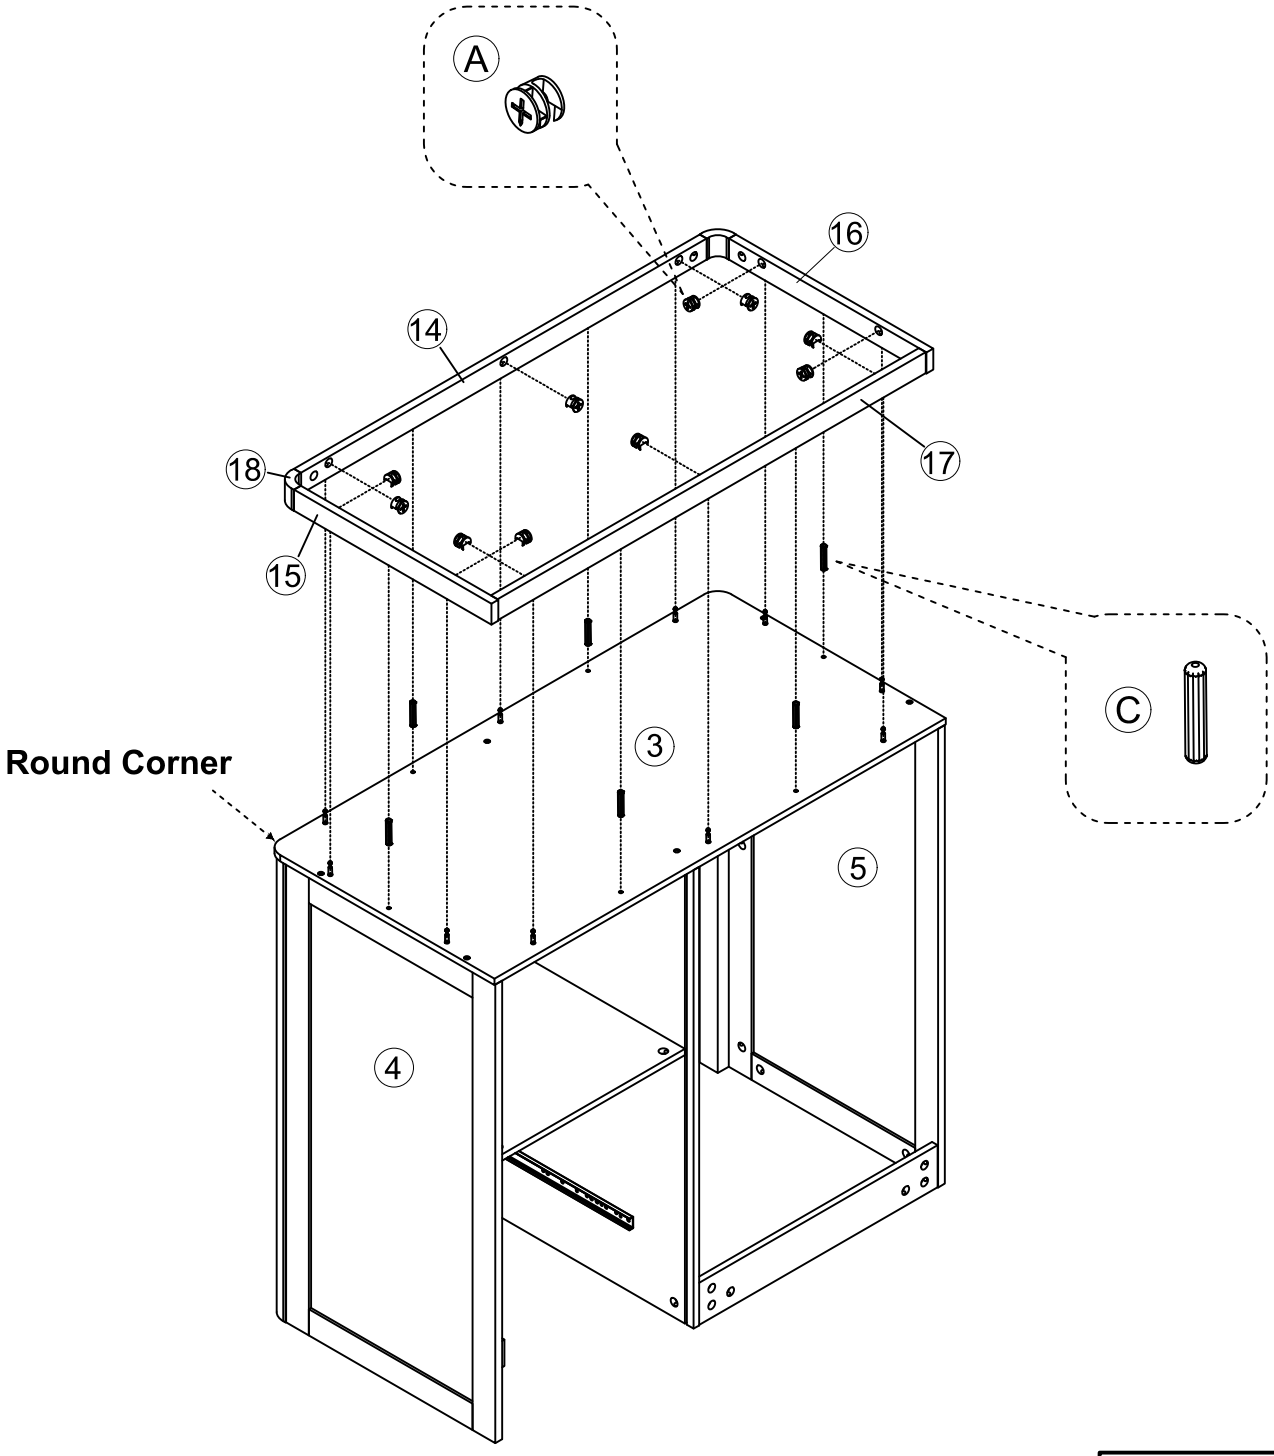

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

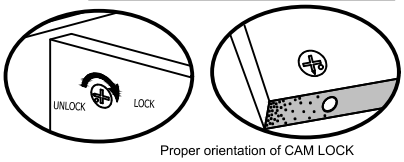


Proper orientation of CAM LOCK

STEP18




Ø6X30mm


C	X10

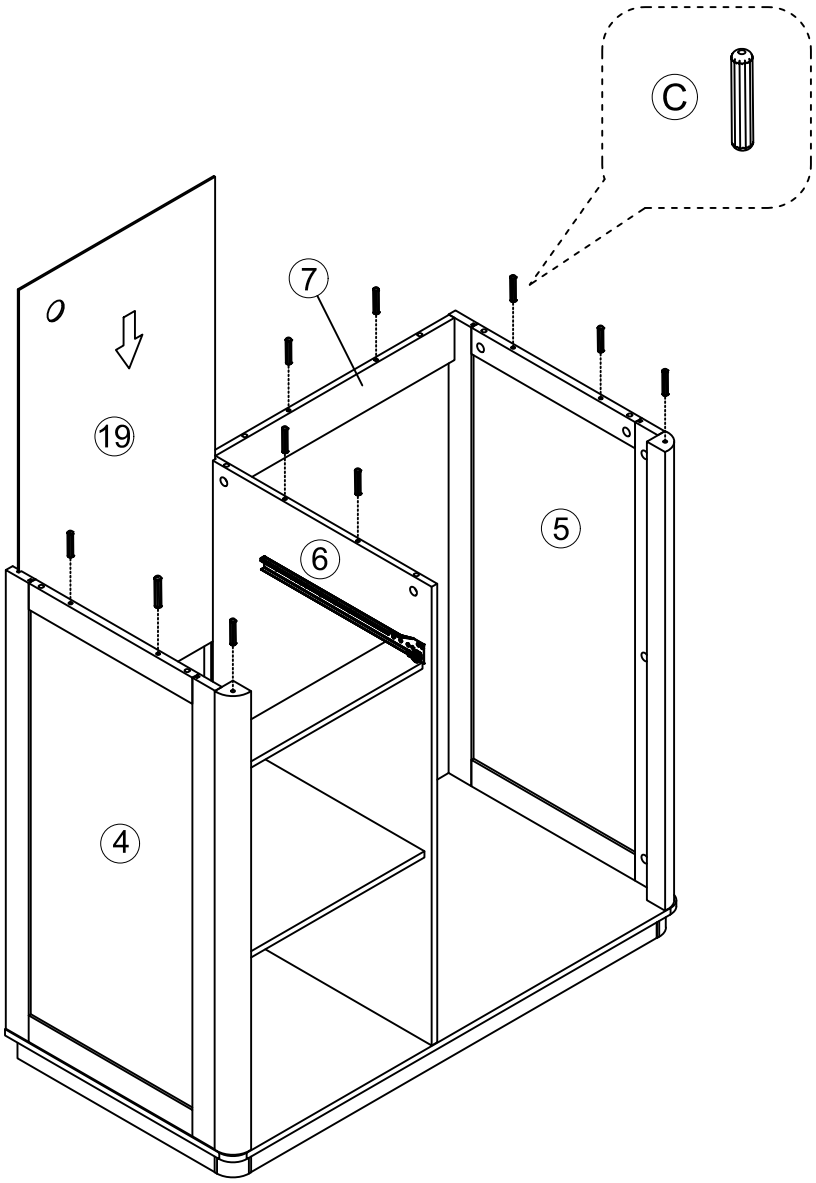



STEP19


Ø15X9.5mm		Ø6.5X35mm		Ø6X30mm		Ø21mm	
A	X2	B	X2	C	X2	L	X2

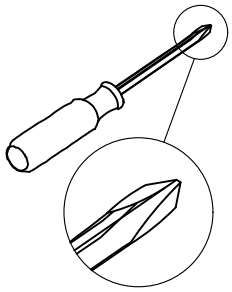

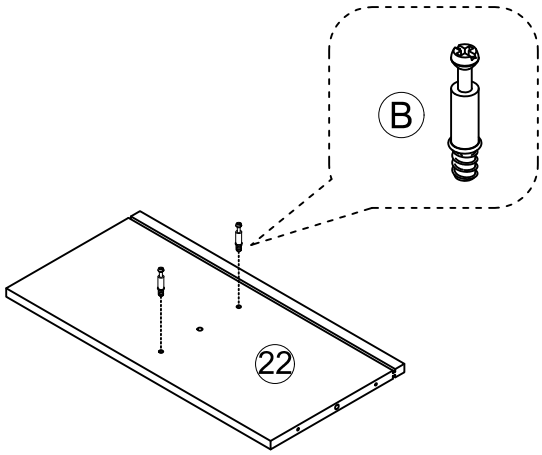


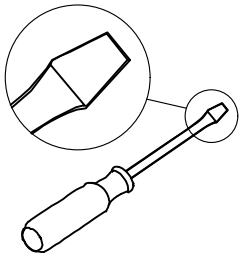


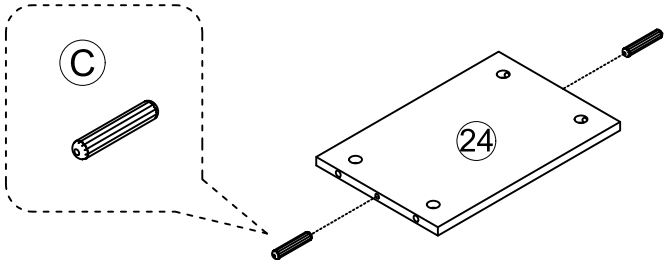

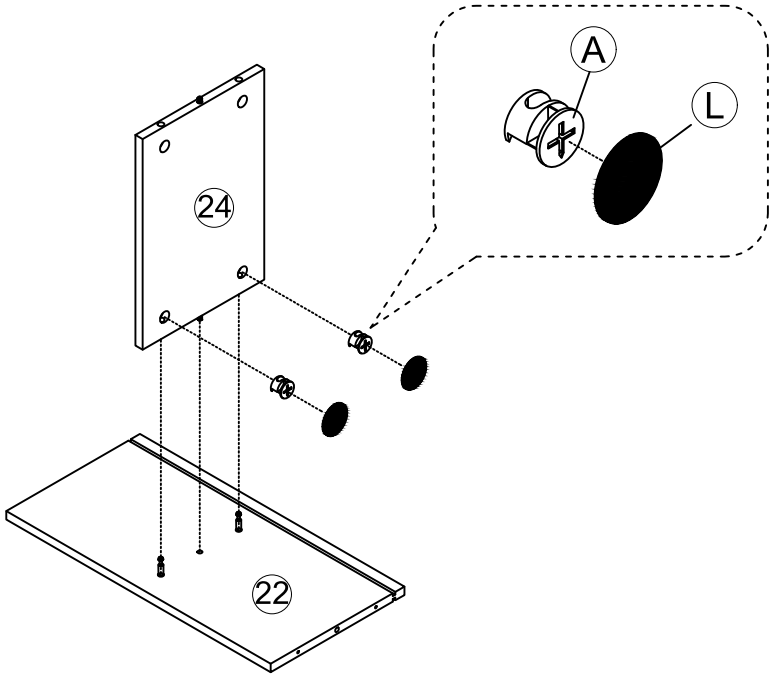

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

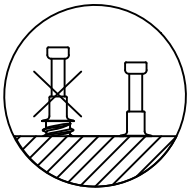


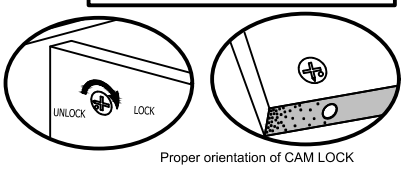



Proper orientation of CAM LOCK

STEP20


Ø15X9.5mm	Ø6.5X35mm	Ø21mm
A X2	B X2	L X2

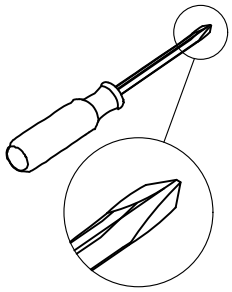


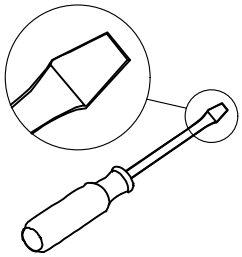

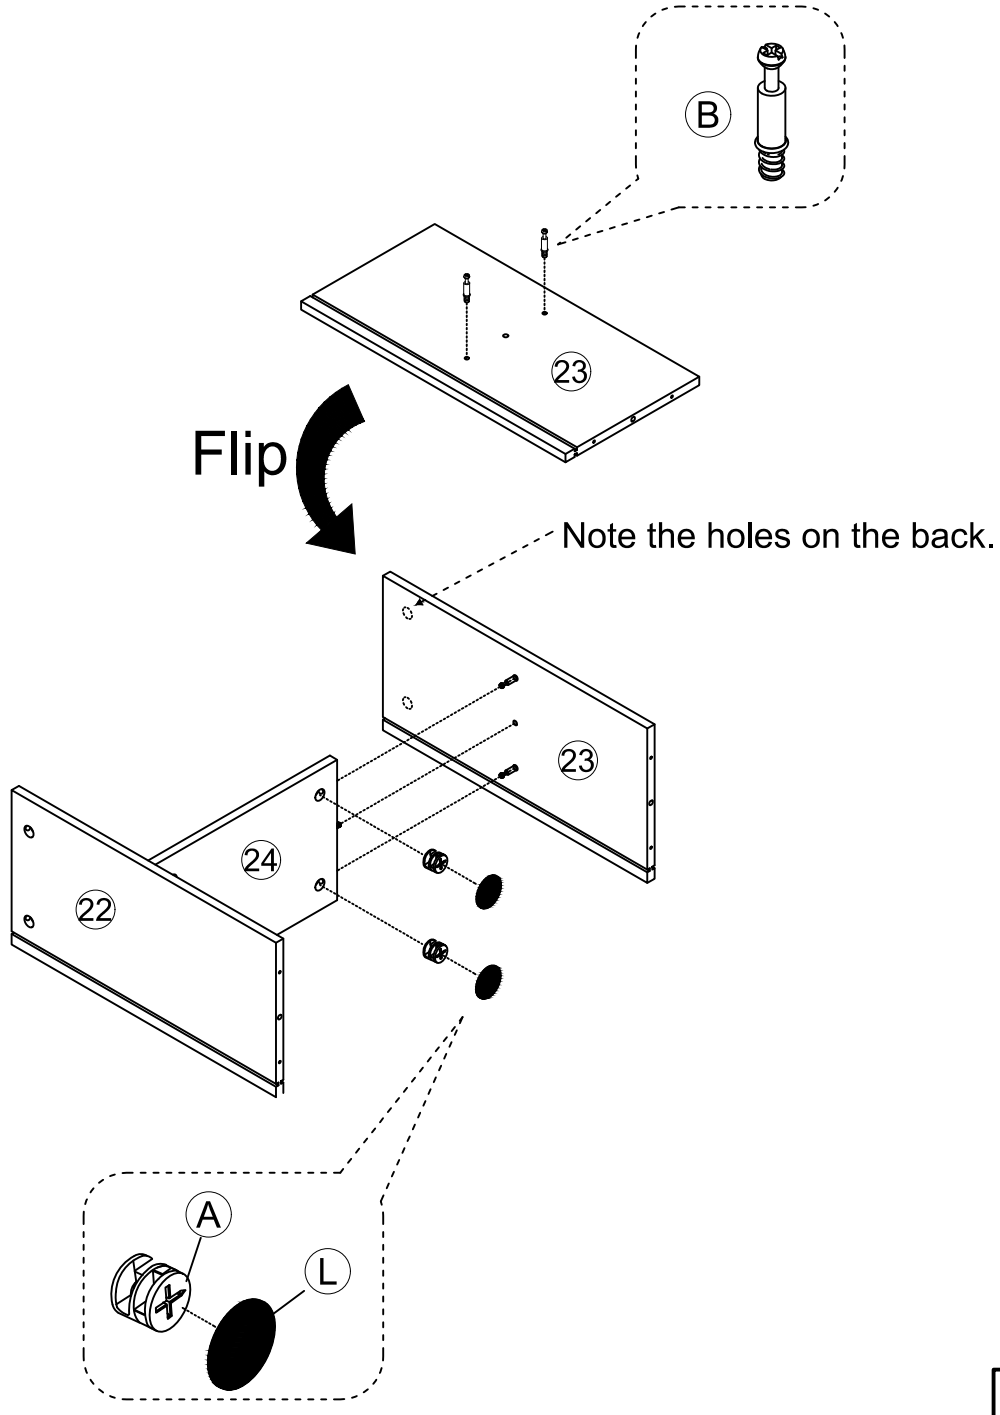

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

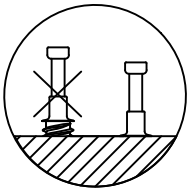

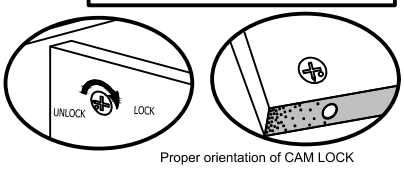



Proper orientation of CAM LOCK

STEP21

Ø6X30mm	
C	X2


Ø4X35mm	
F	X4

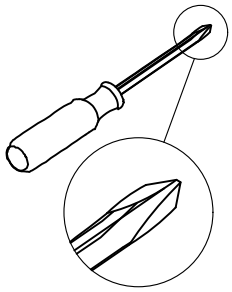


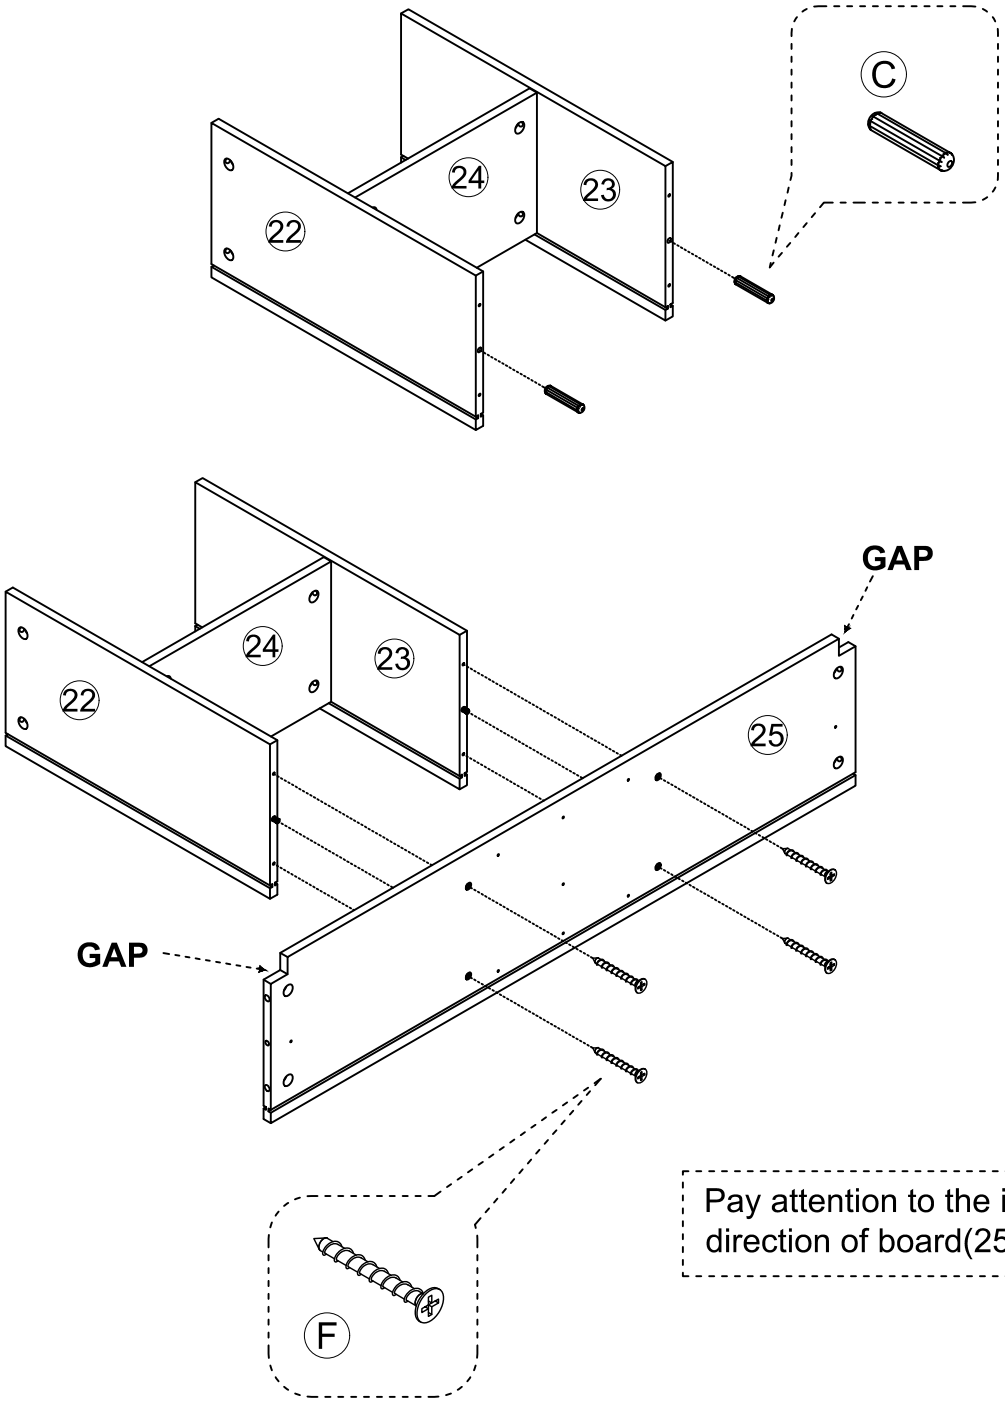


Pay attention to the installation direction of board(25).


STEP22

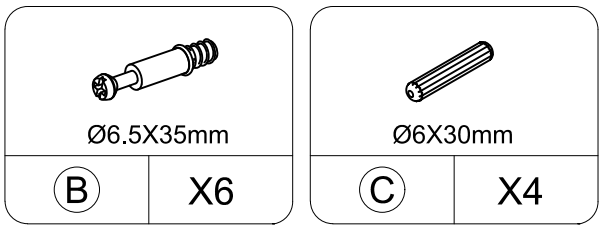


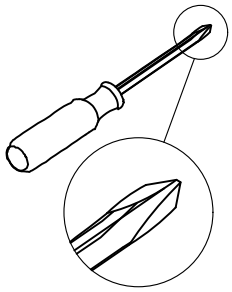


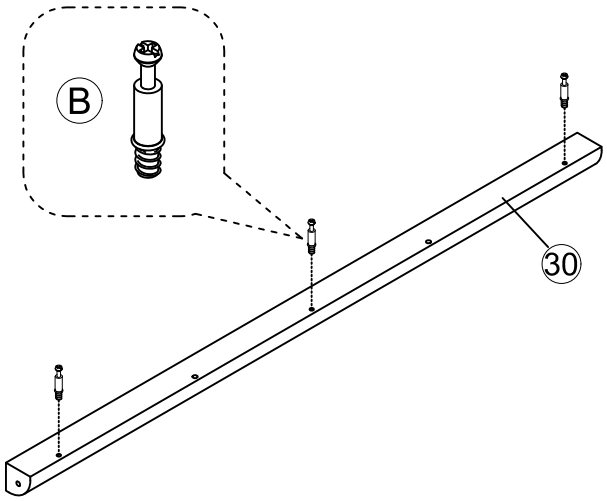


X2

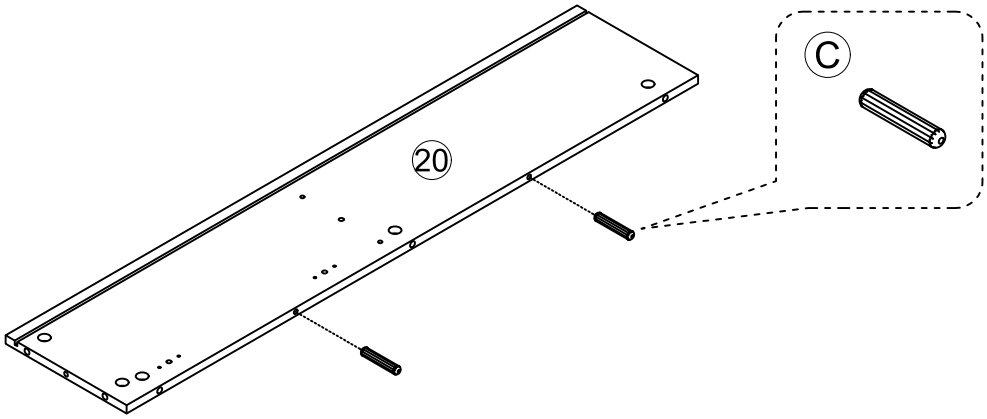


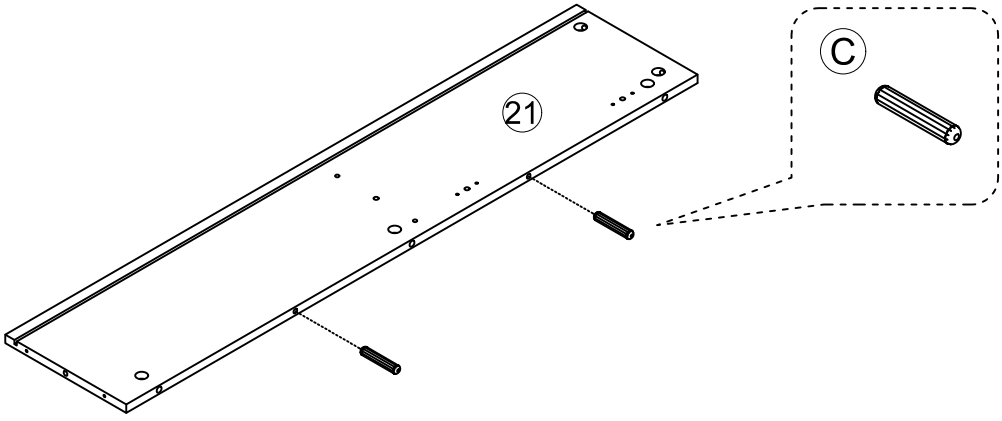


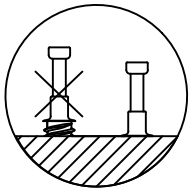


STEP23

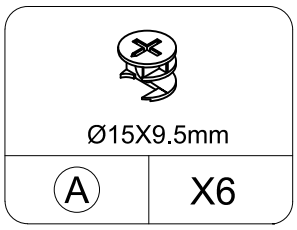


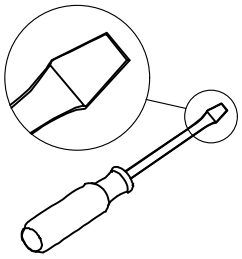

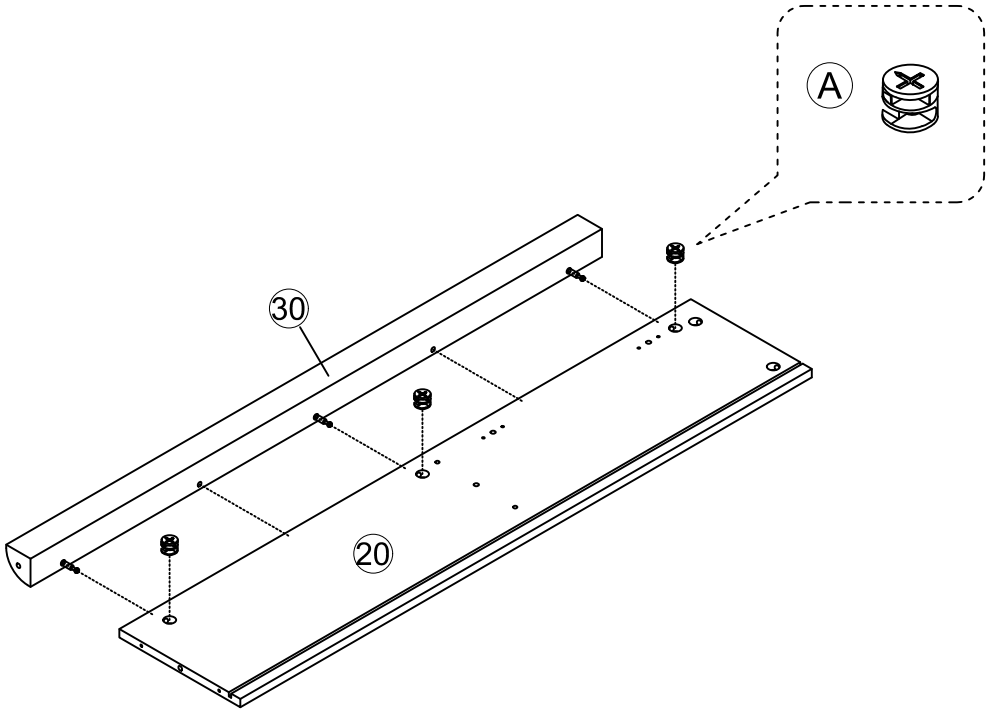

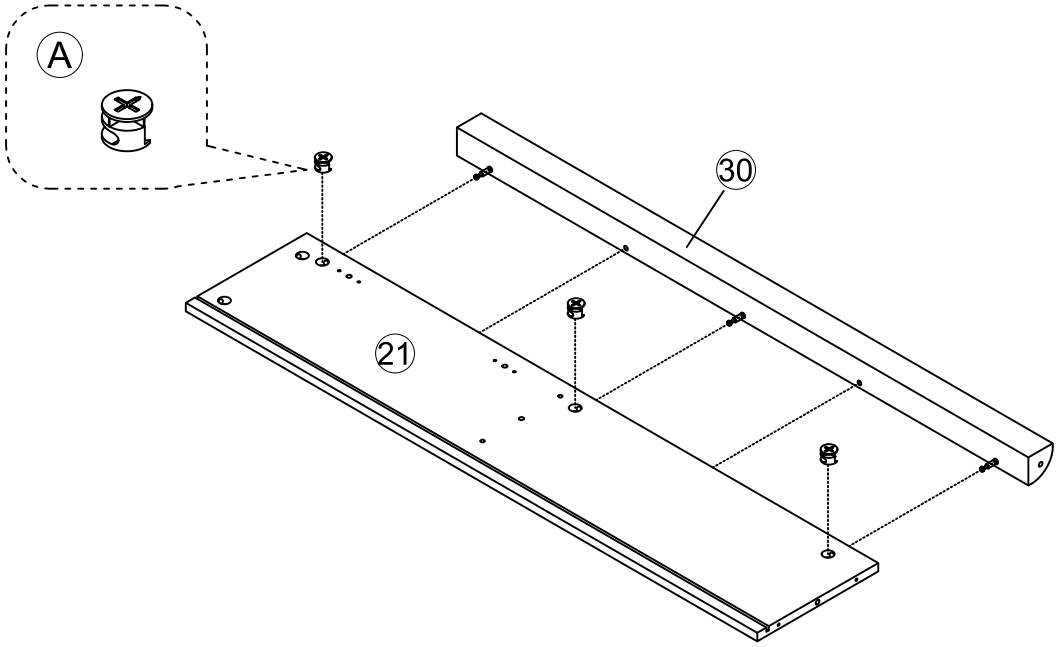



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

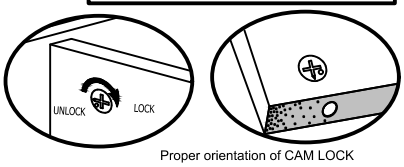


Proper orientation of CAM LOCK


STEP24

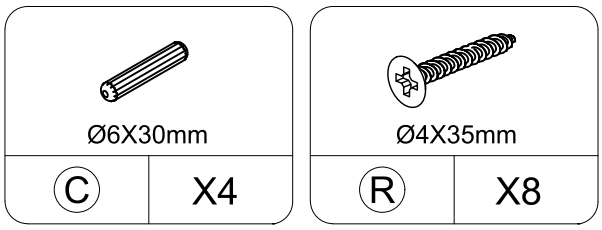


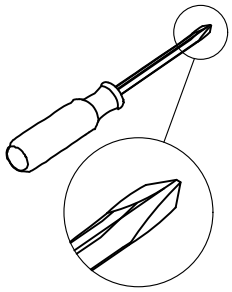


Pay attention to the installation direction of board(29).

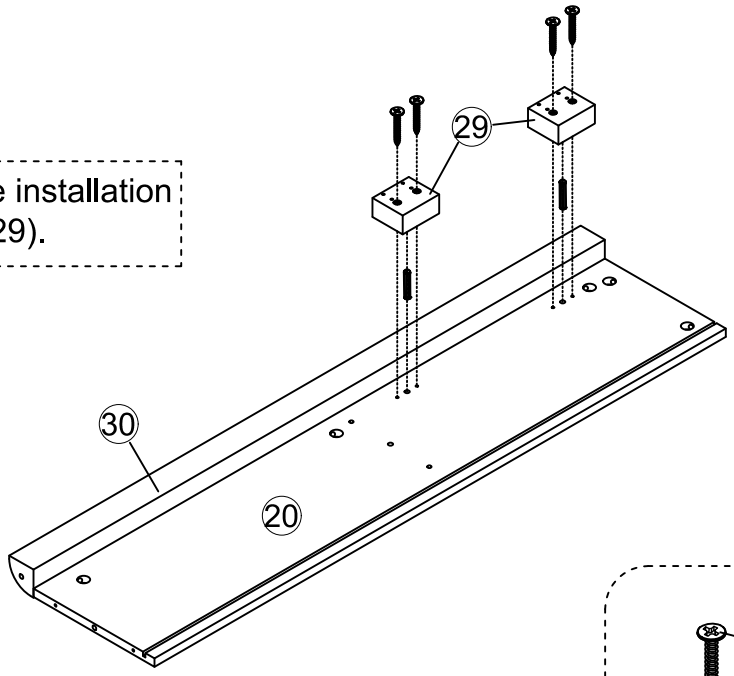


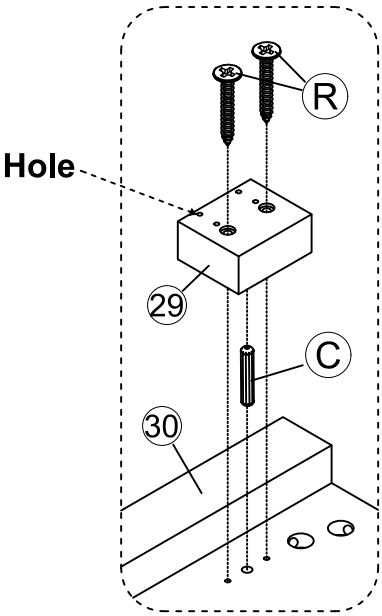


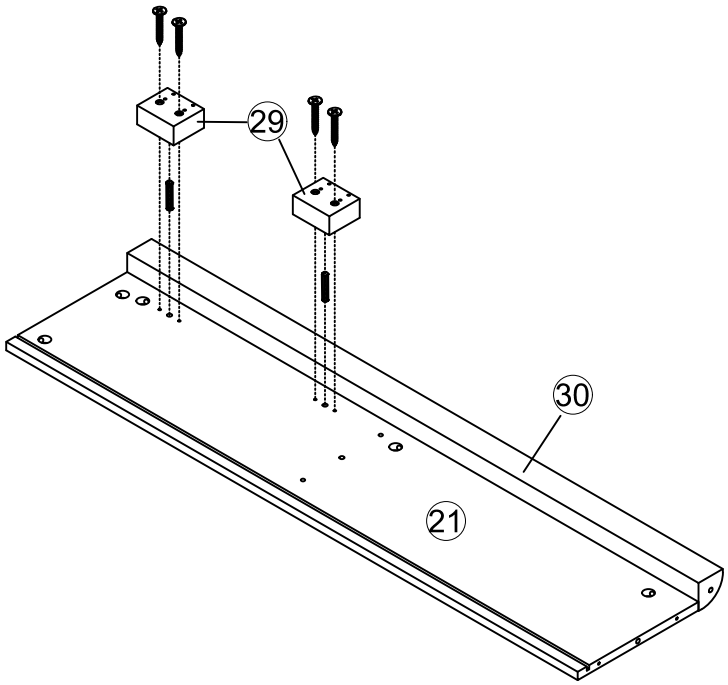


STEP25

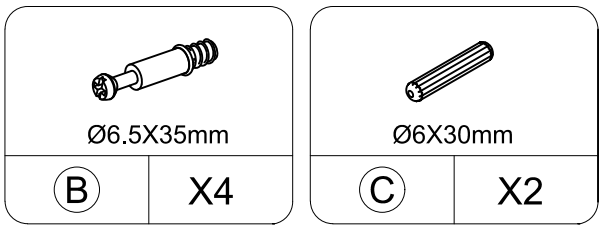


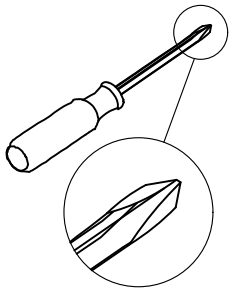


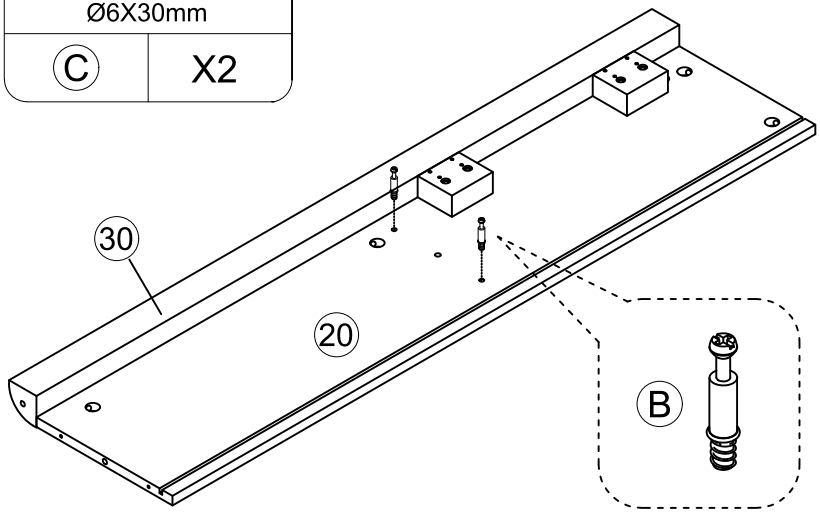

10

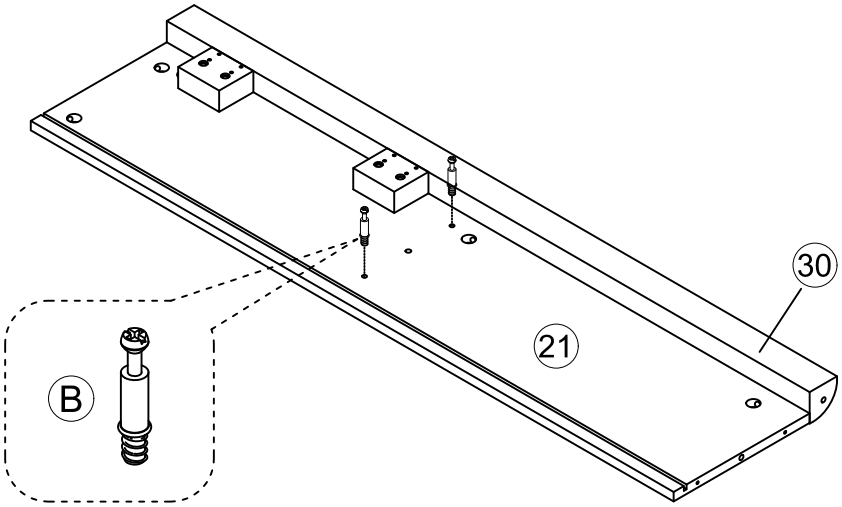

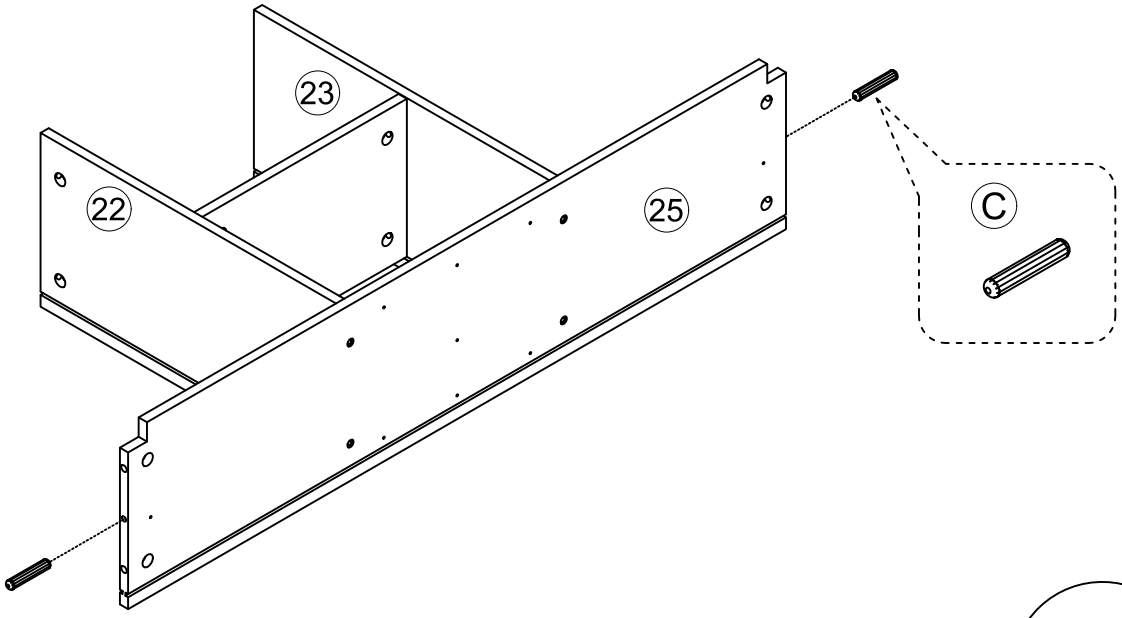


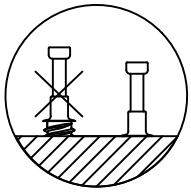



STEP26

Ø15X9.5mm	
A	X4


Ø21mm	
L	X4

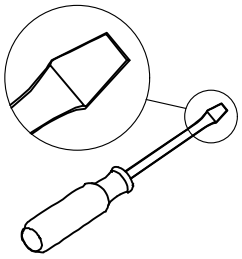

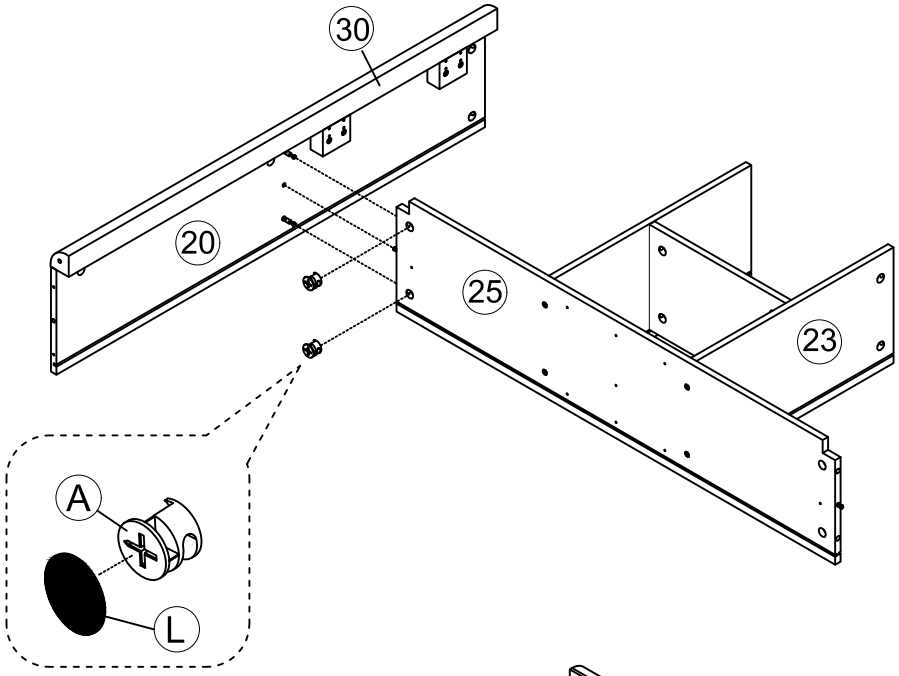

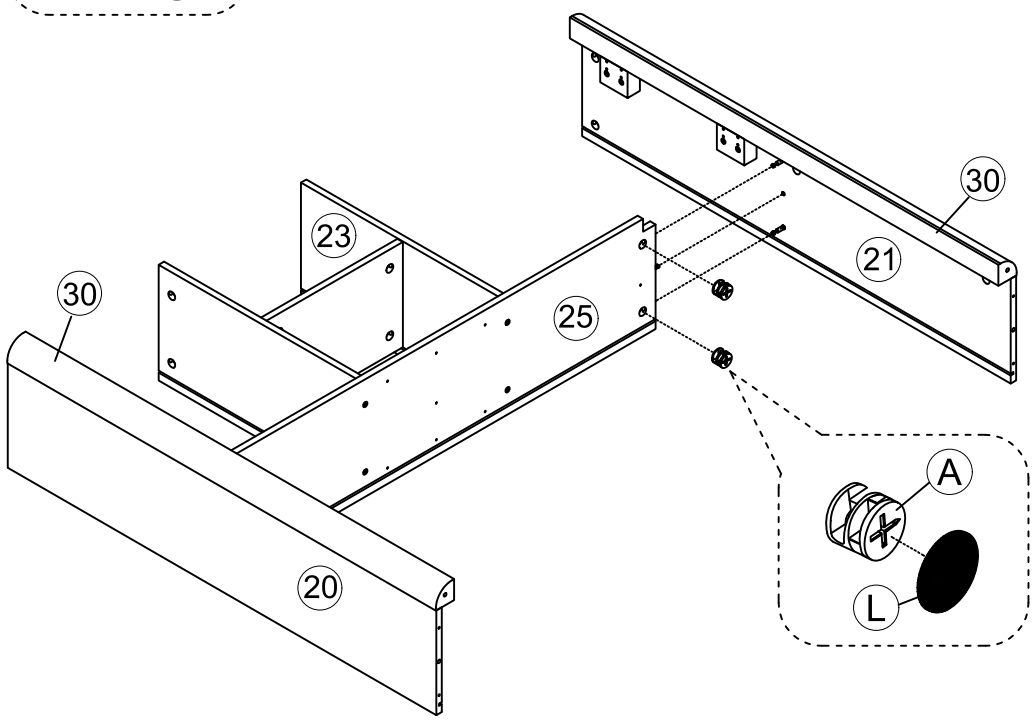



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

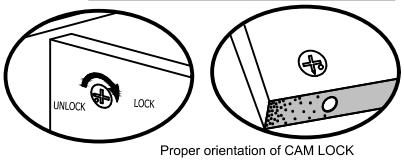


Proper orientation of CAM LOCK


STEP27

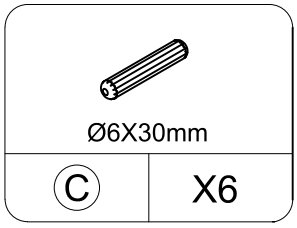


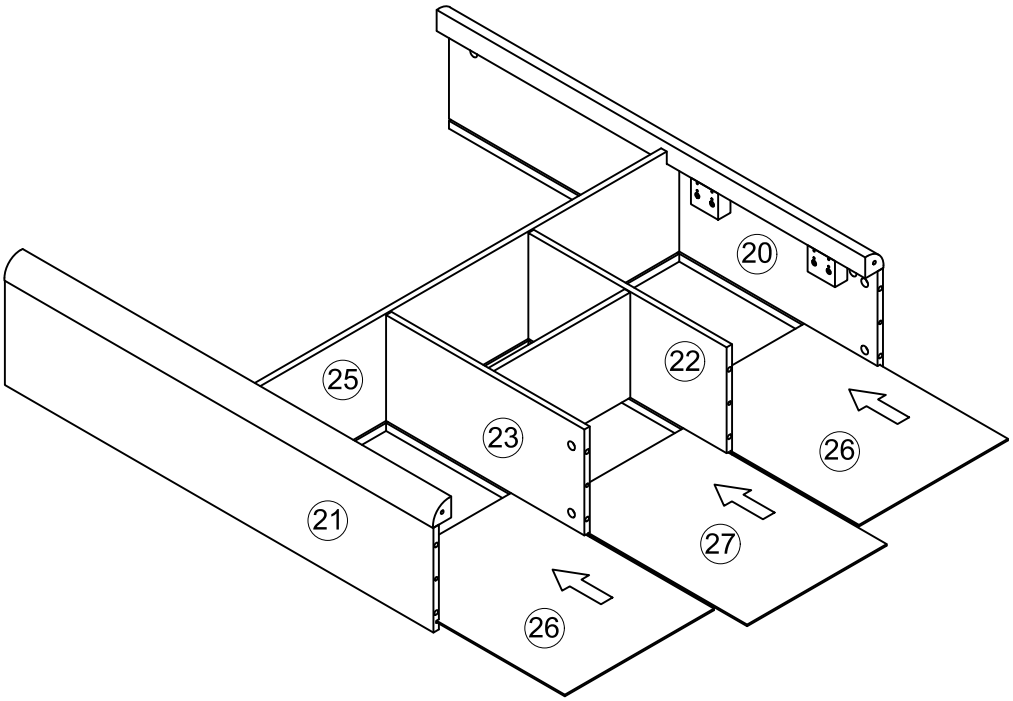


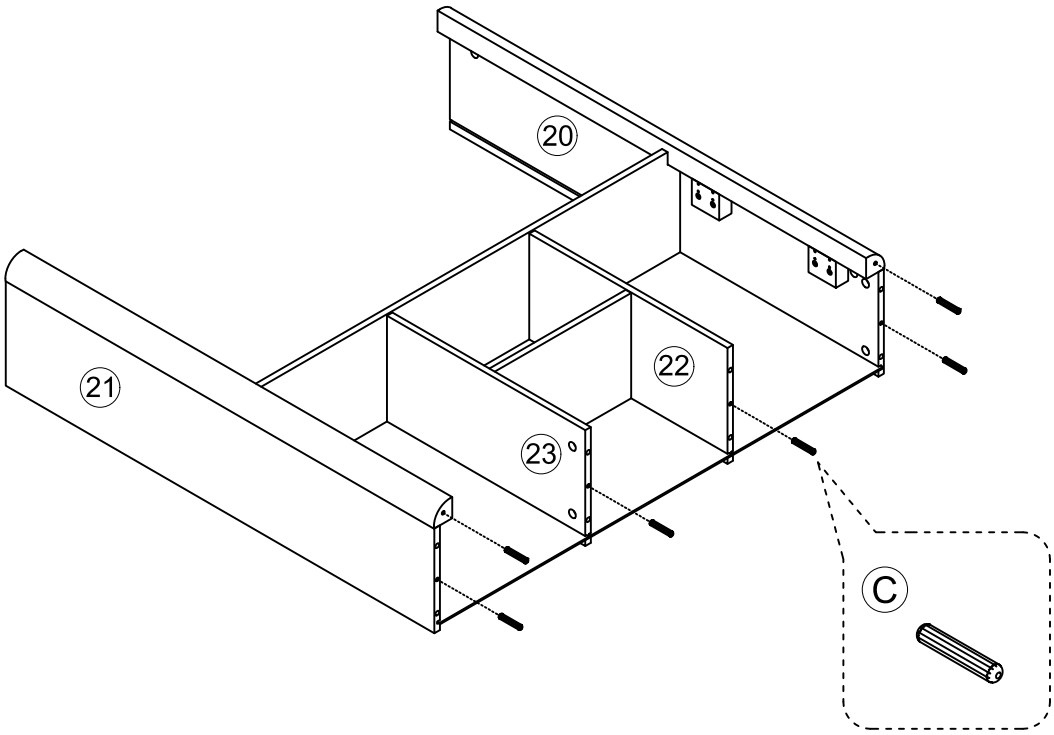



STEP28

 Ø15X9.5mm	 Ø6.5X35mm
A X8	B X8

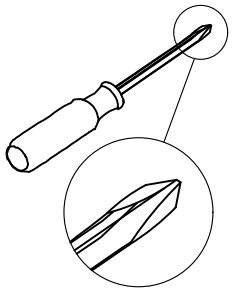

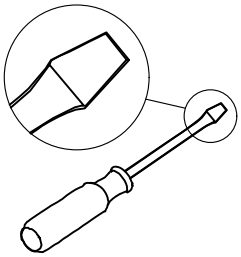

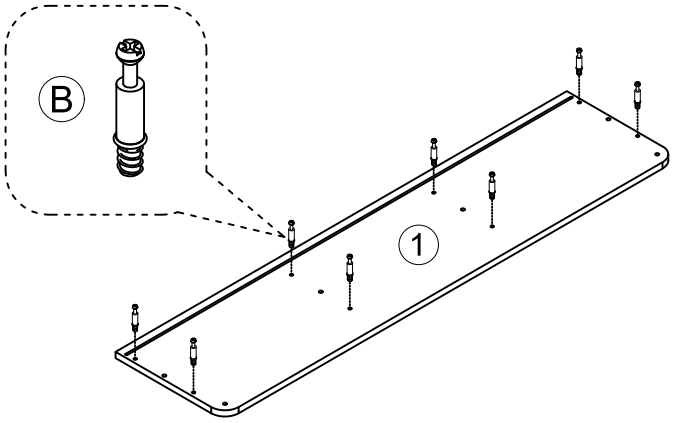


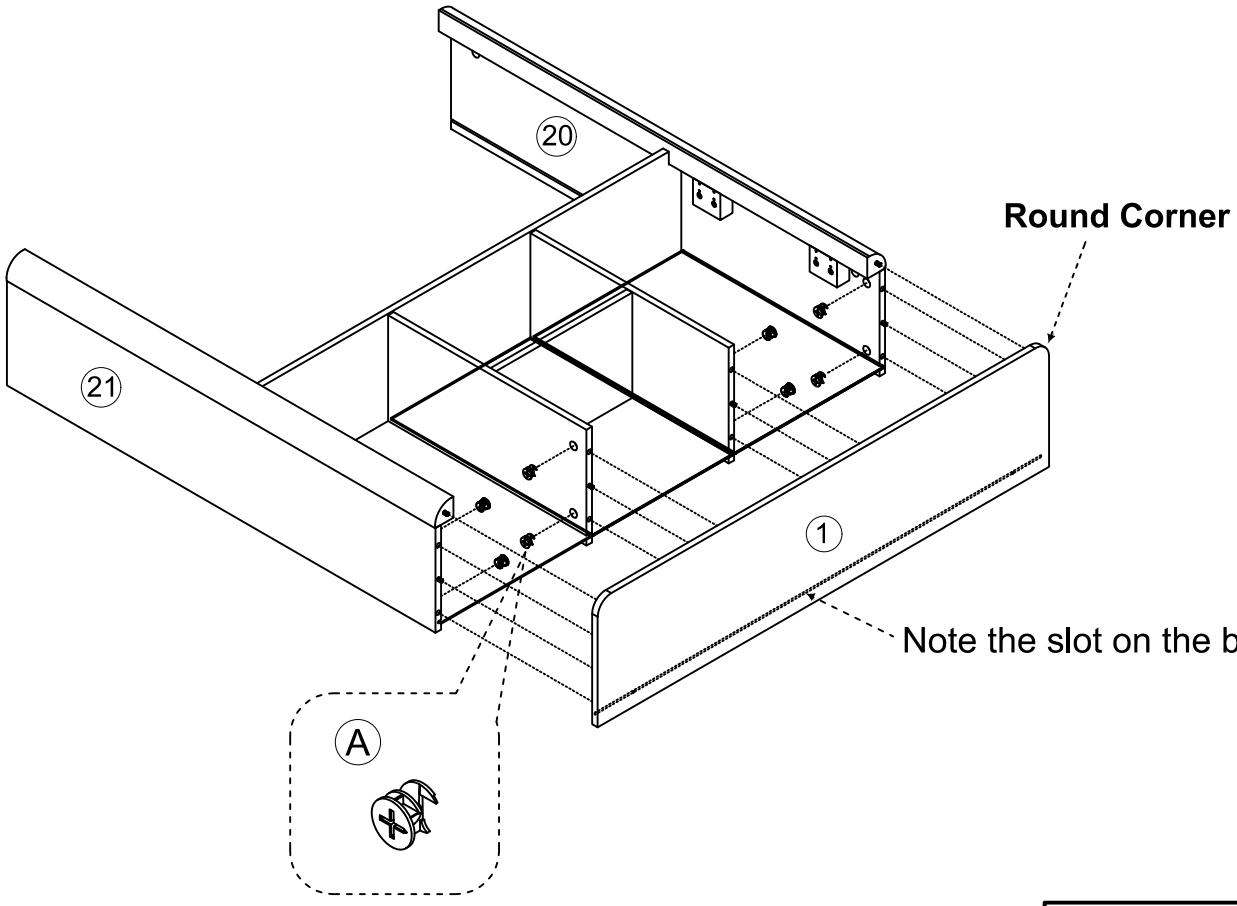


Round Corner

Note the slot on the back.

Pay attention to the installation direction of board(1).

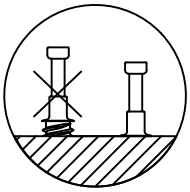


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

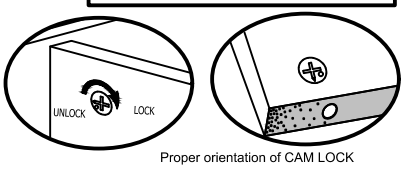

Proper orientation of CAM LOCK


STEP29


Pay attention to the installation direction of board(28).

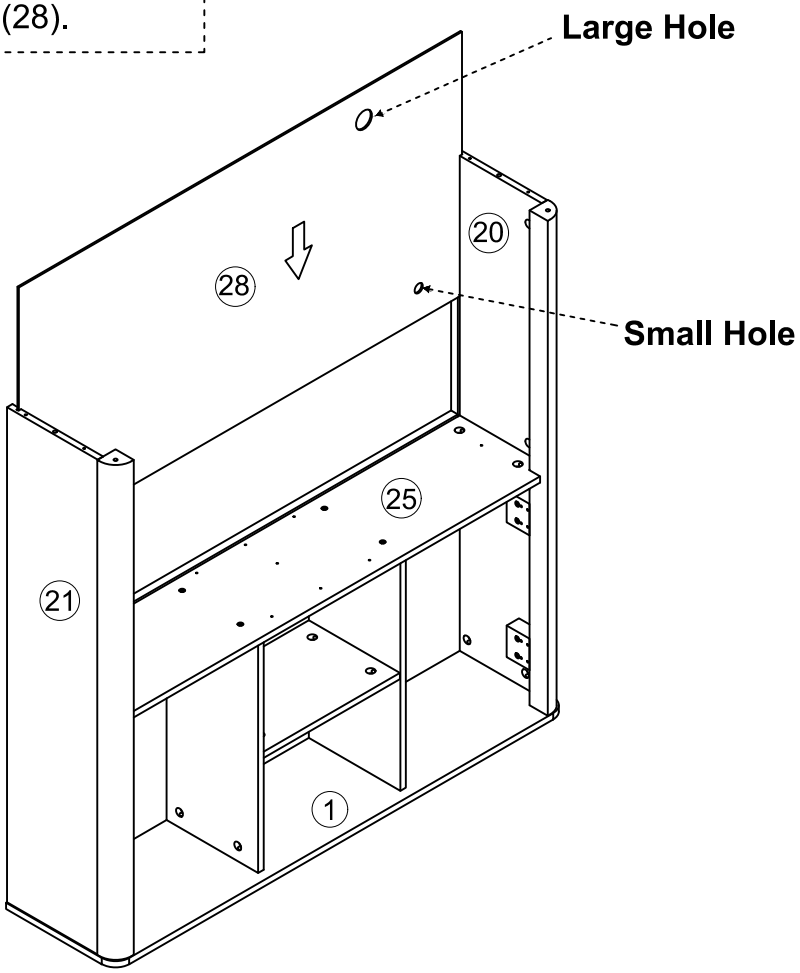


STEP30

Ø3X12mm		24X7X4.5mm			
D	X3	J	X3	O	X1

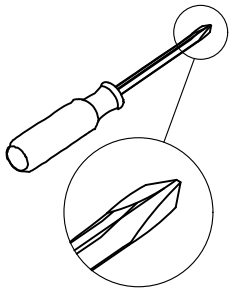

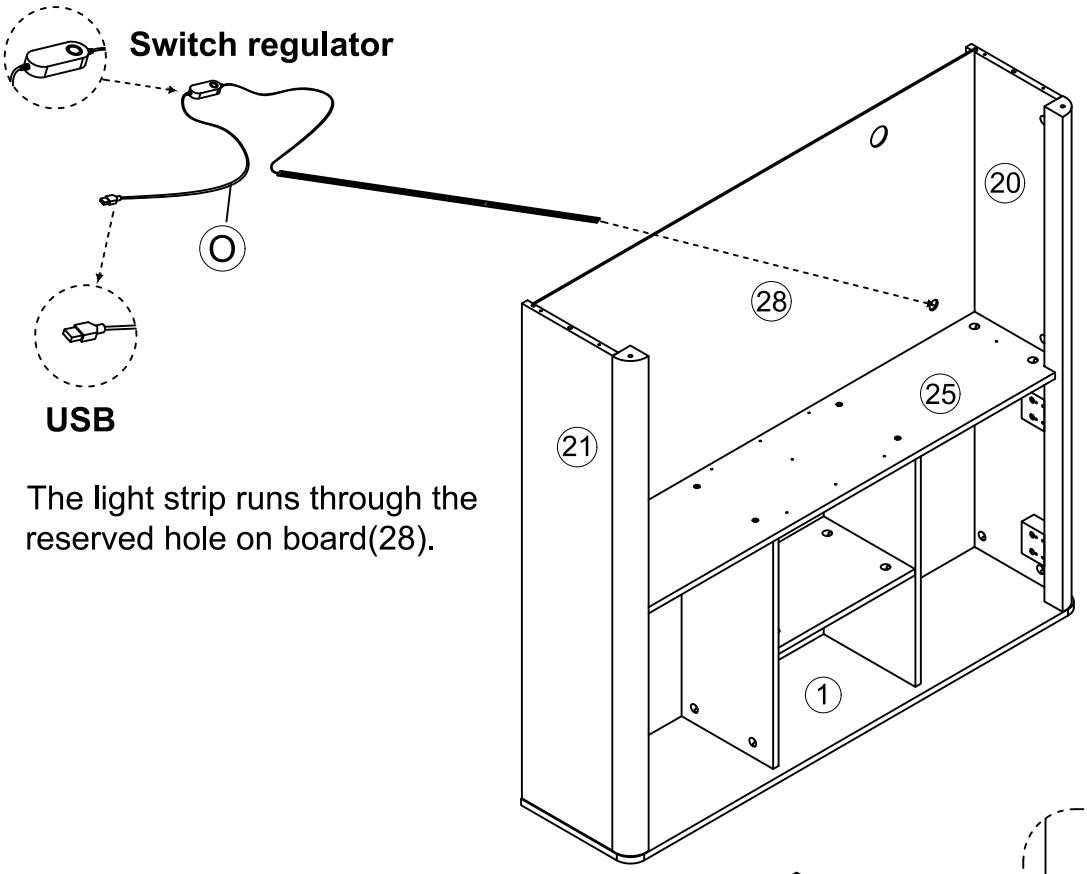


The light strip runs through the reserved hole on board(28).

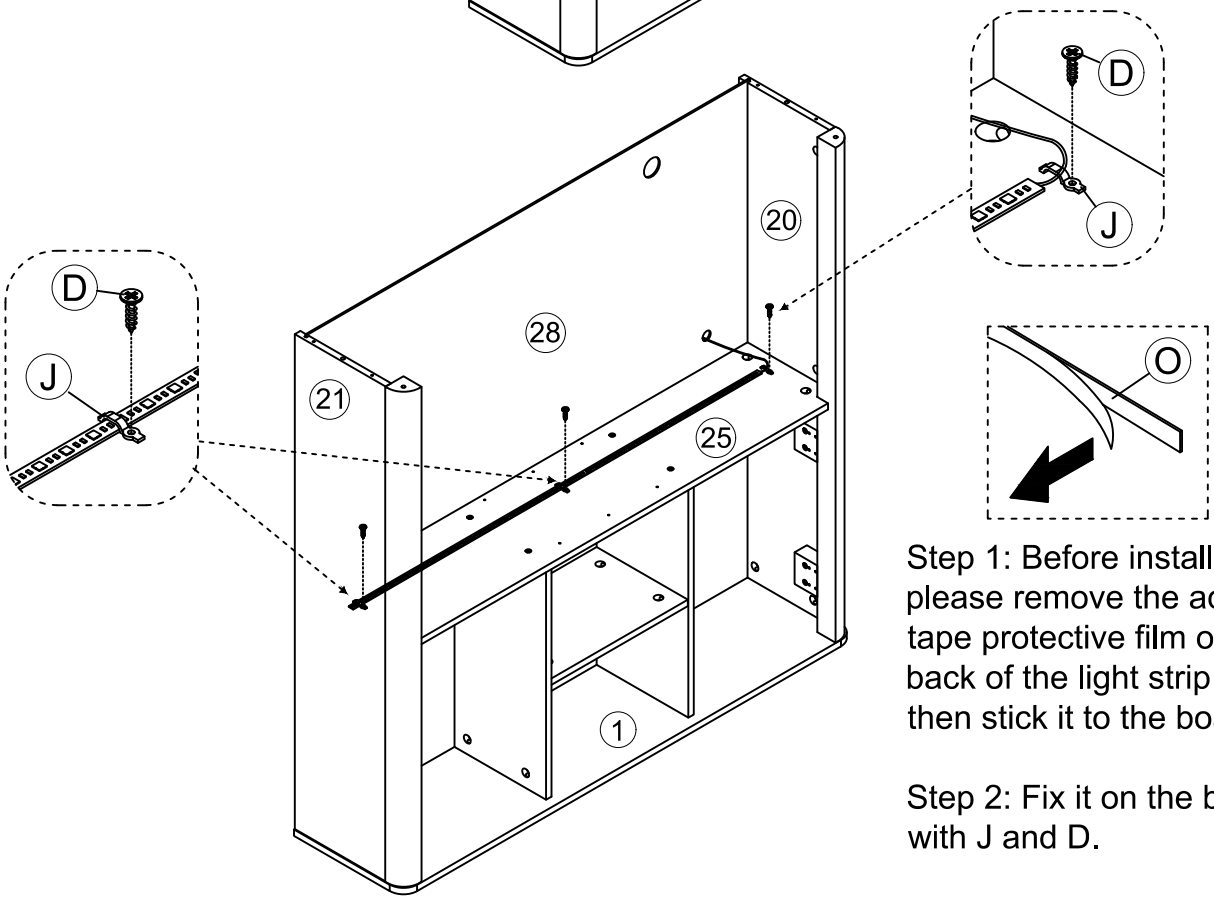

Step 1: Before installation, please remove the adhesive tape protective film on the back of the light strip and then stick it to the board(25).

Step 2: Fix it on the board(25) with J and D.

STEP31




335X180X42mm


N	X1




Ø4X12mm


P	X6

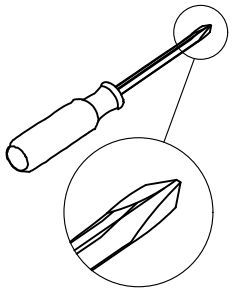


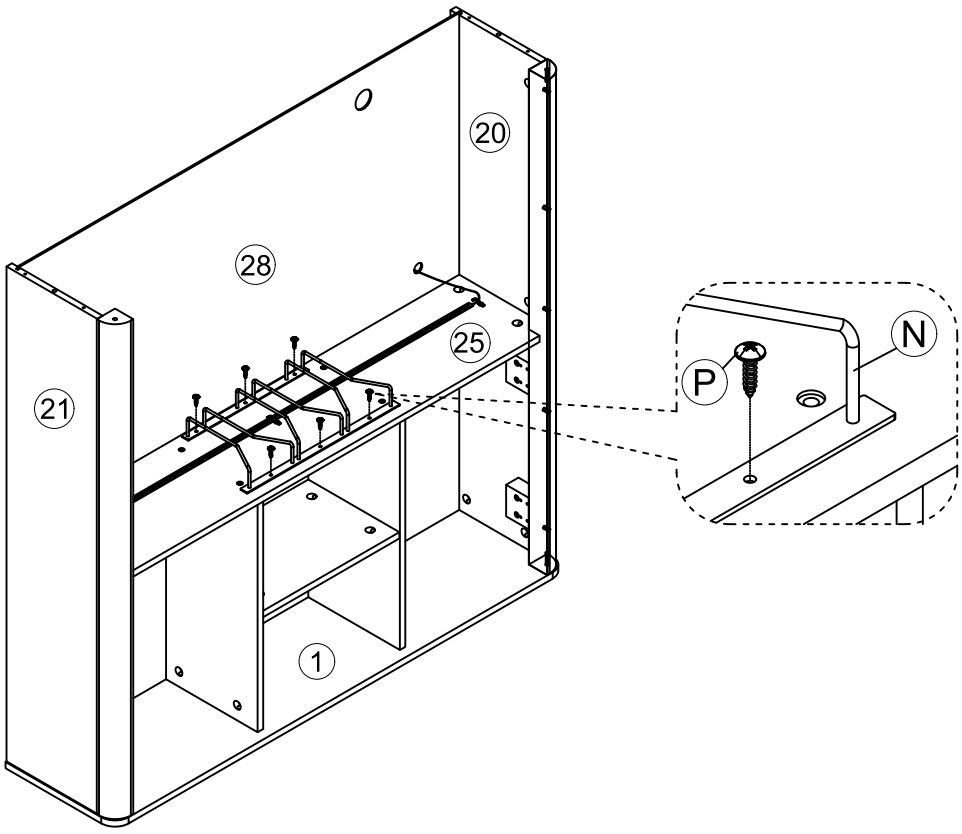


STEP32

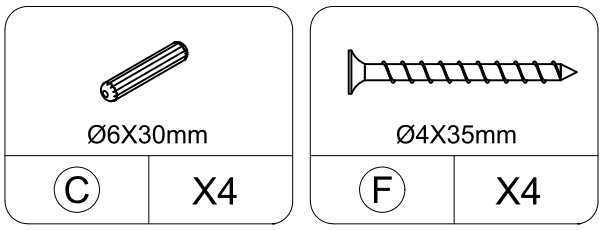

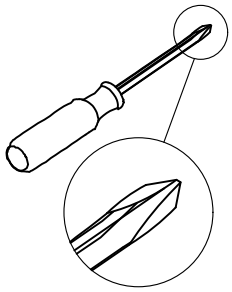


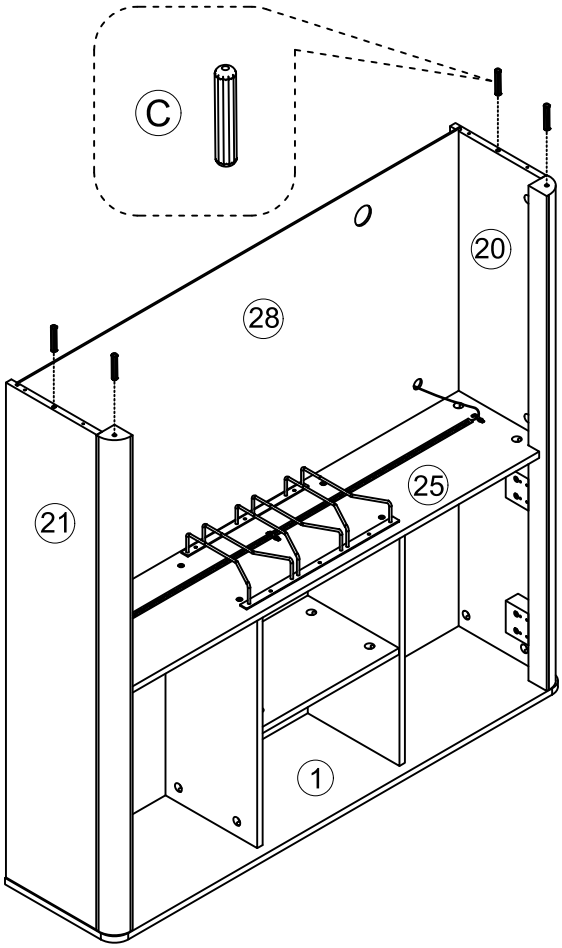


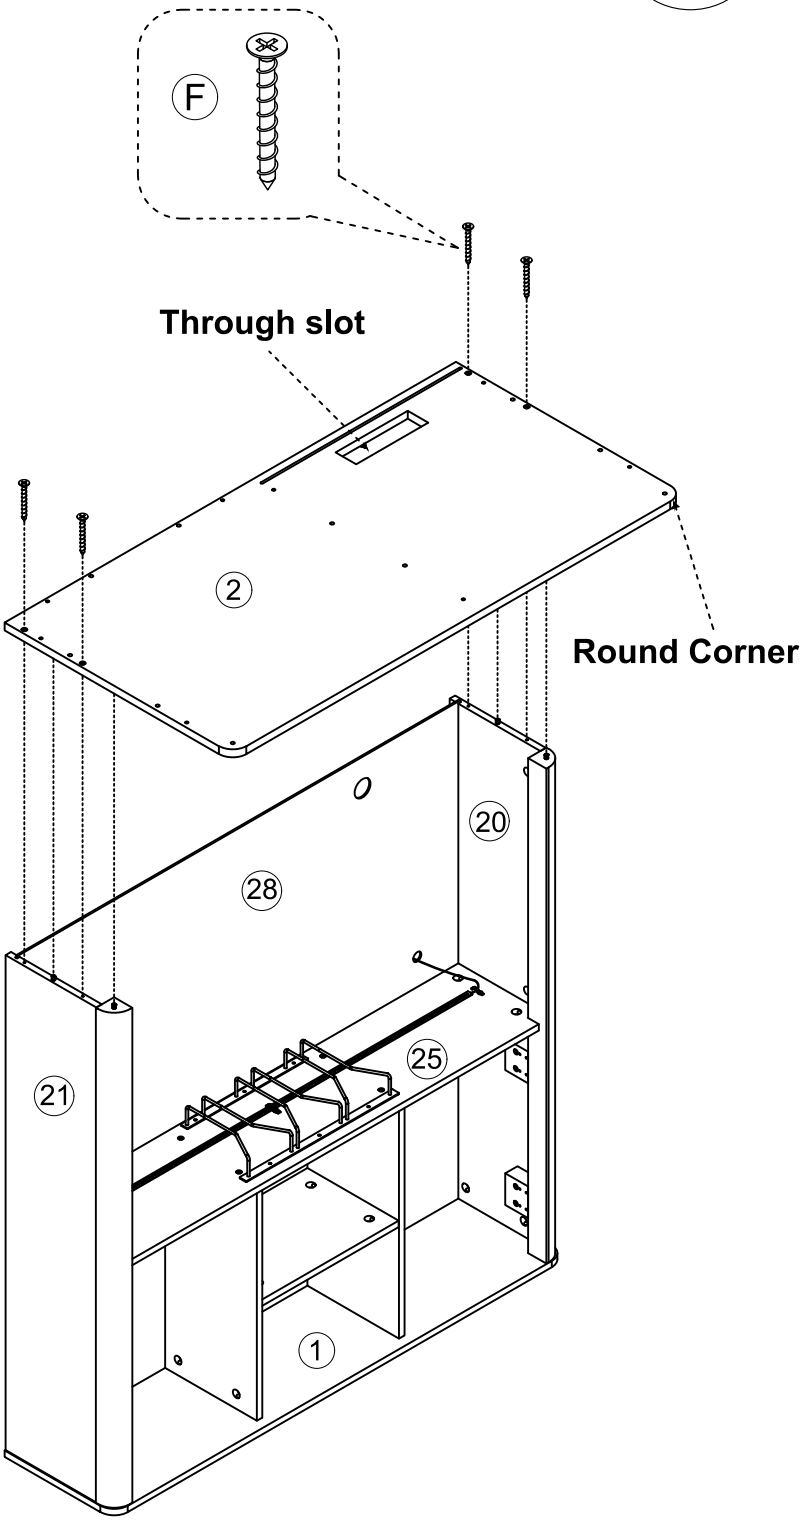



Pay attention to the installation direction of board(2).

STEP33

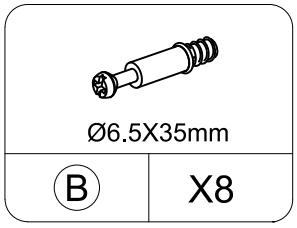


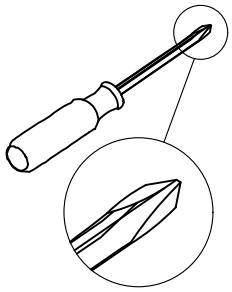


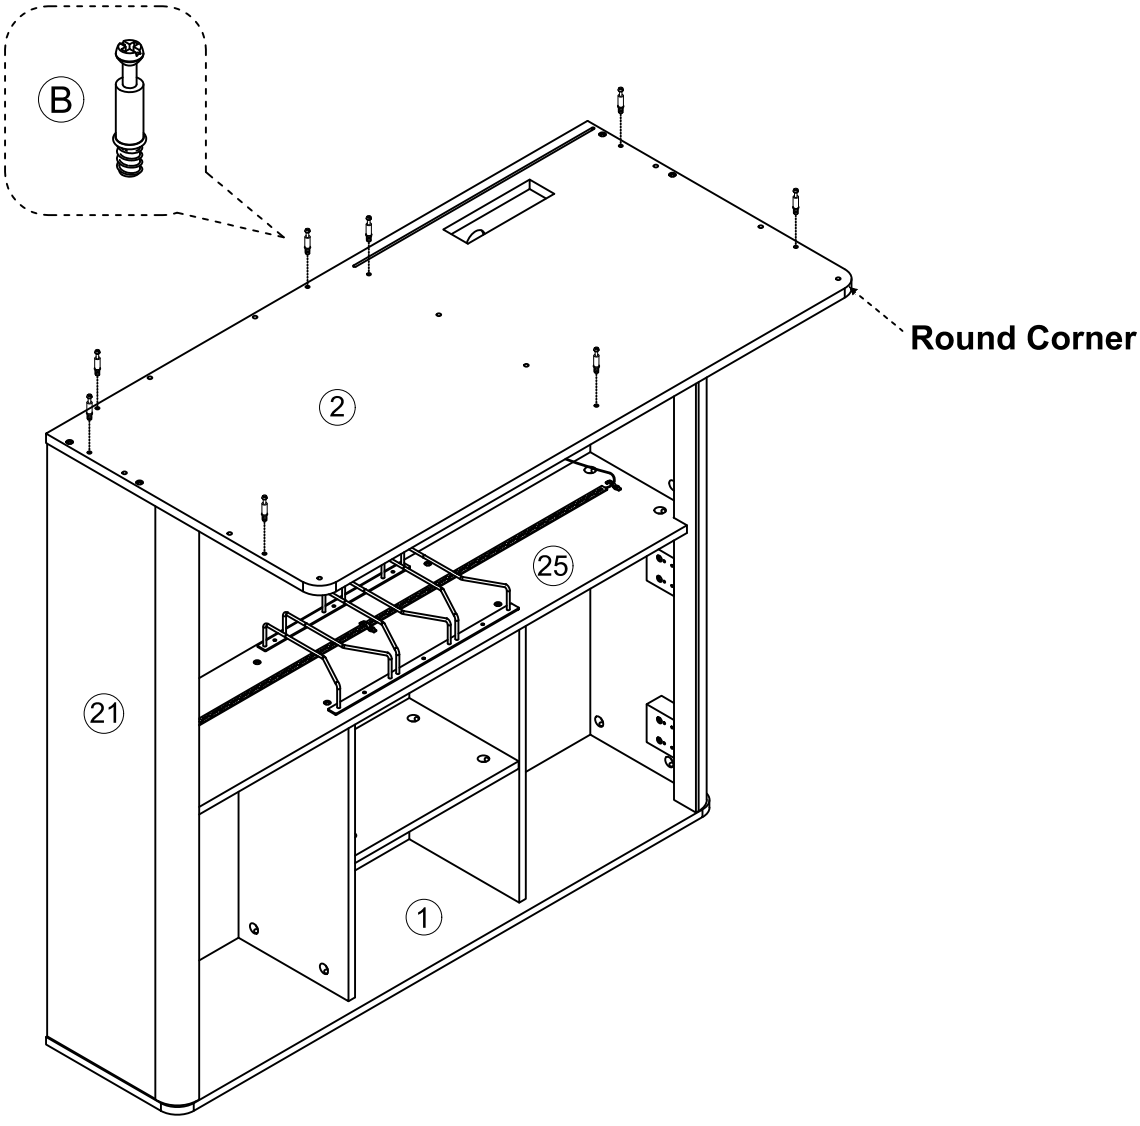


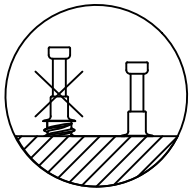

STEP34

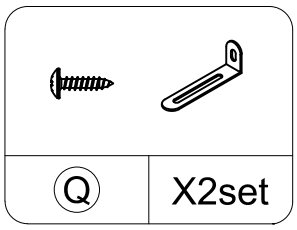

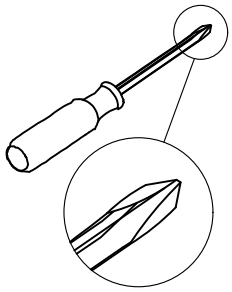


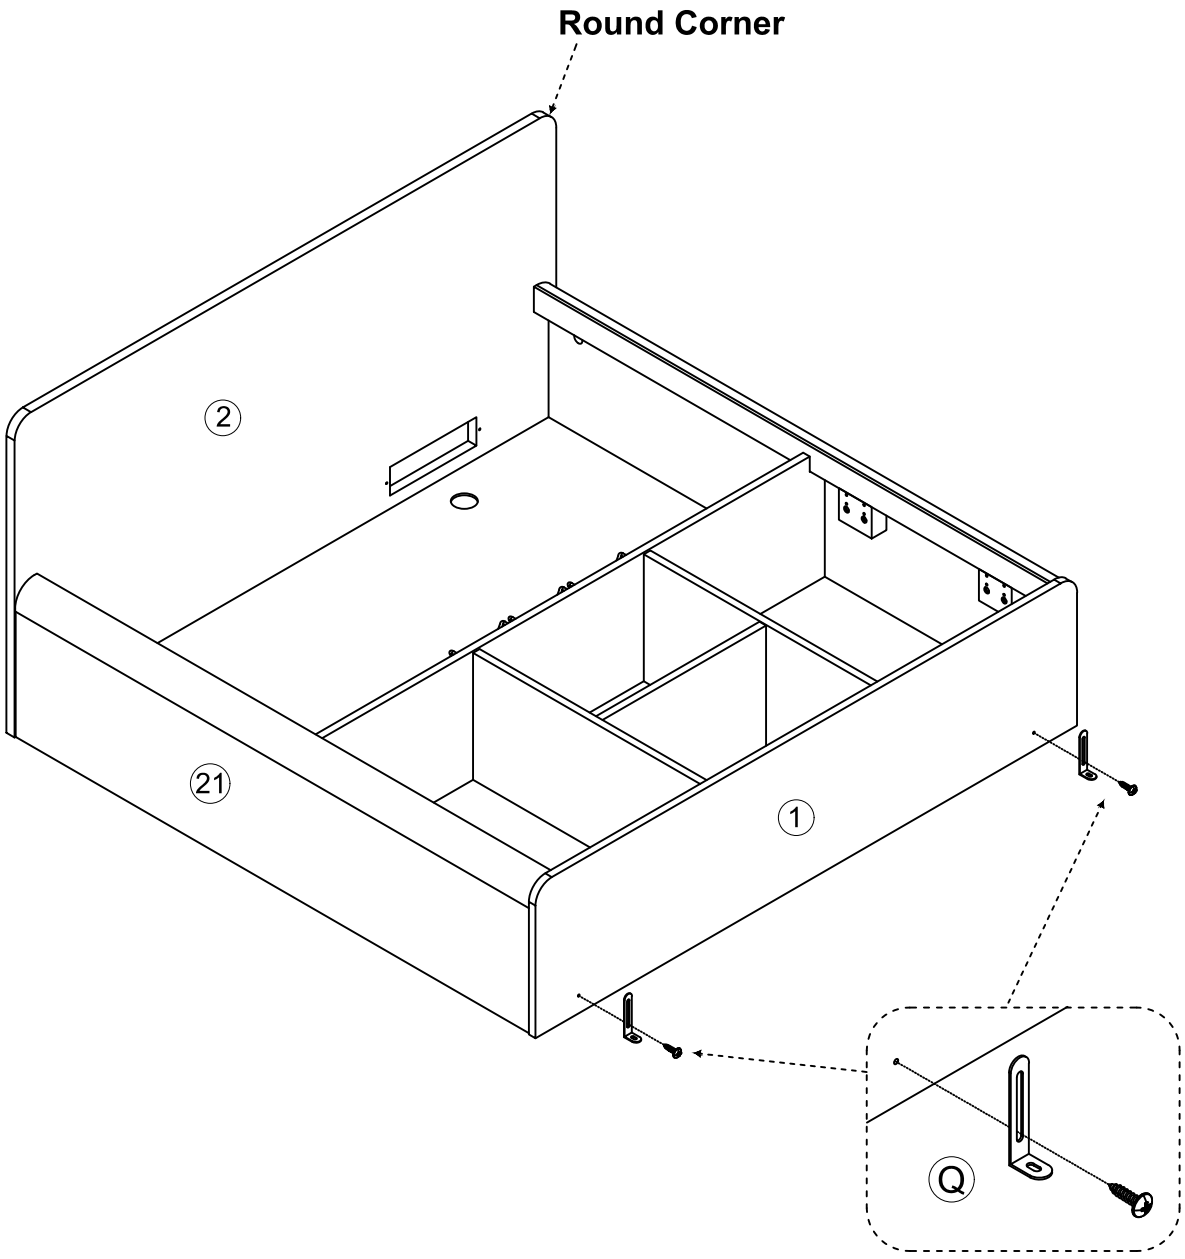


STEP35


Ø15X9.5mm	
A	X8

Ø21mm	
L	X10

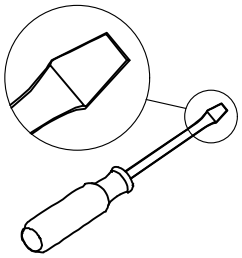

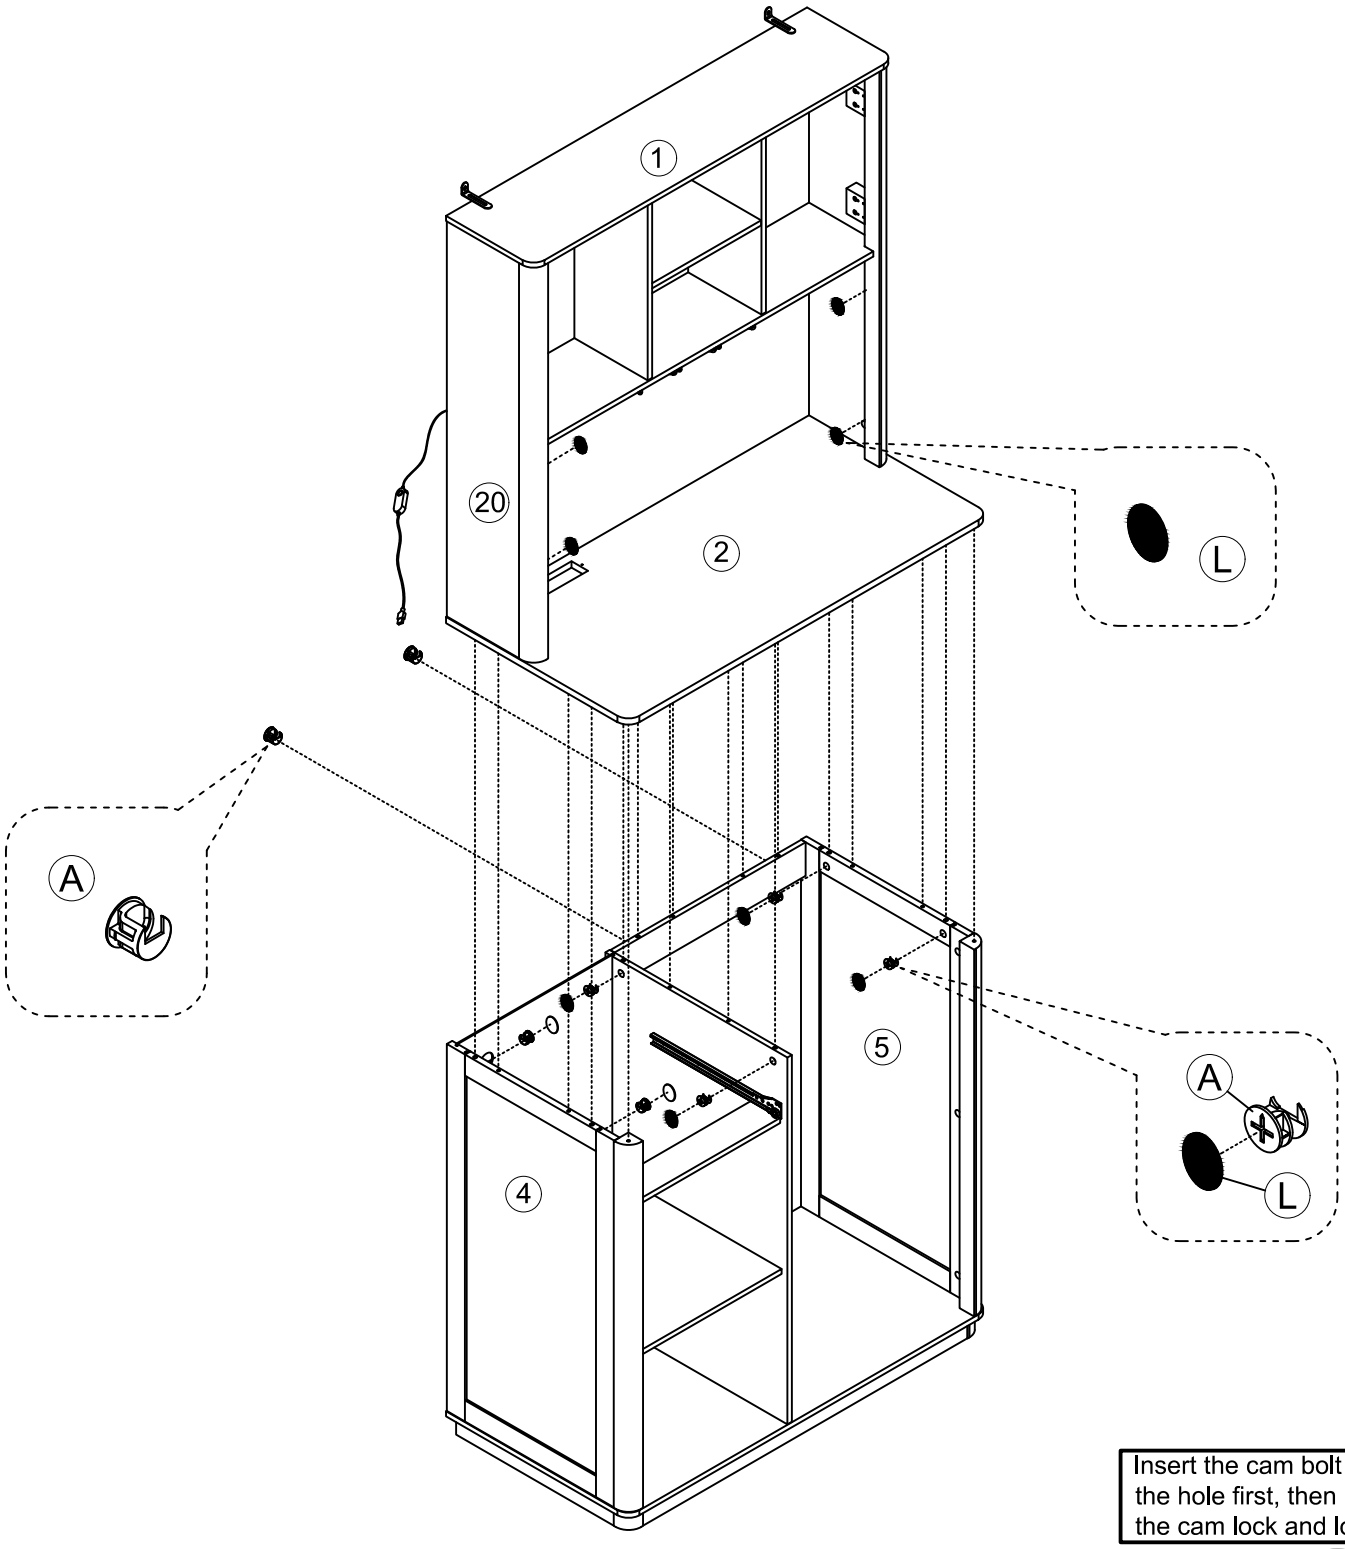

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

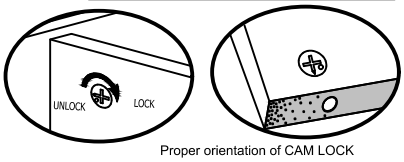



Proper orientation of CAM LOCK

STEP36


Ø3X12mm	
D	X2

185X50X47mm	
I	X1

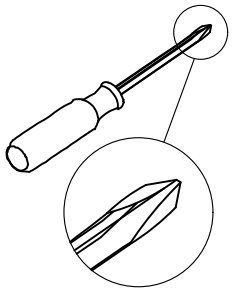

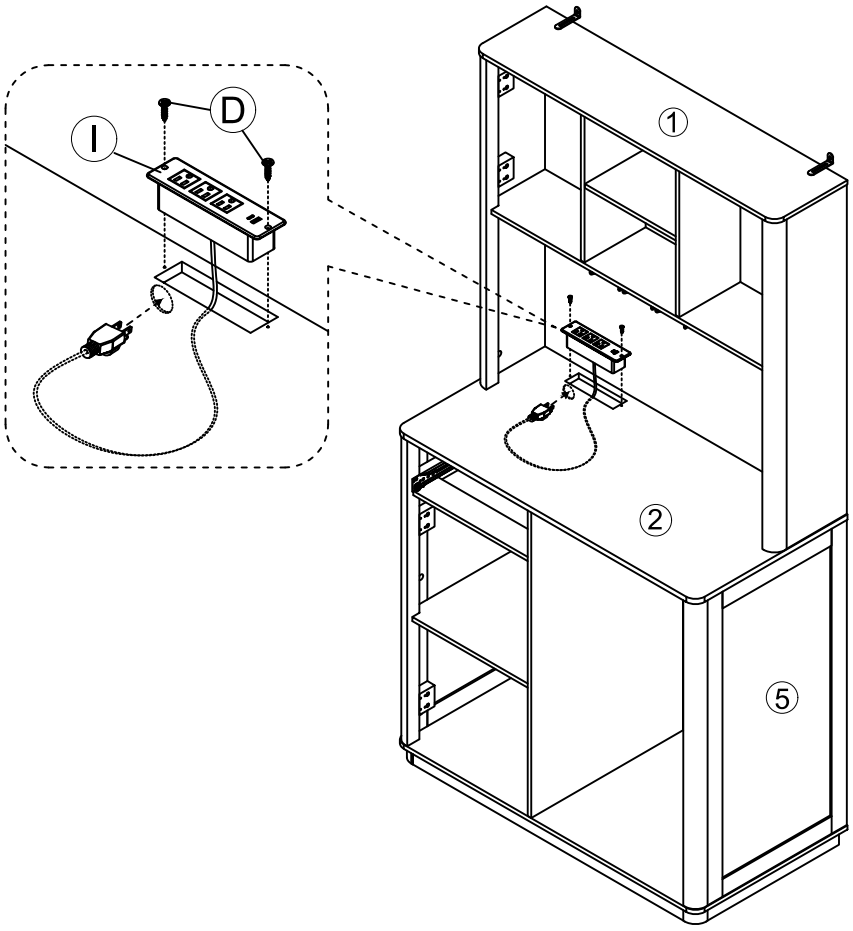


STEP37

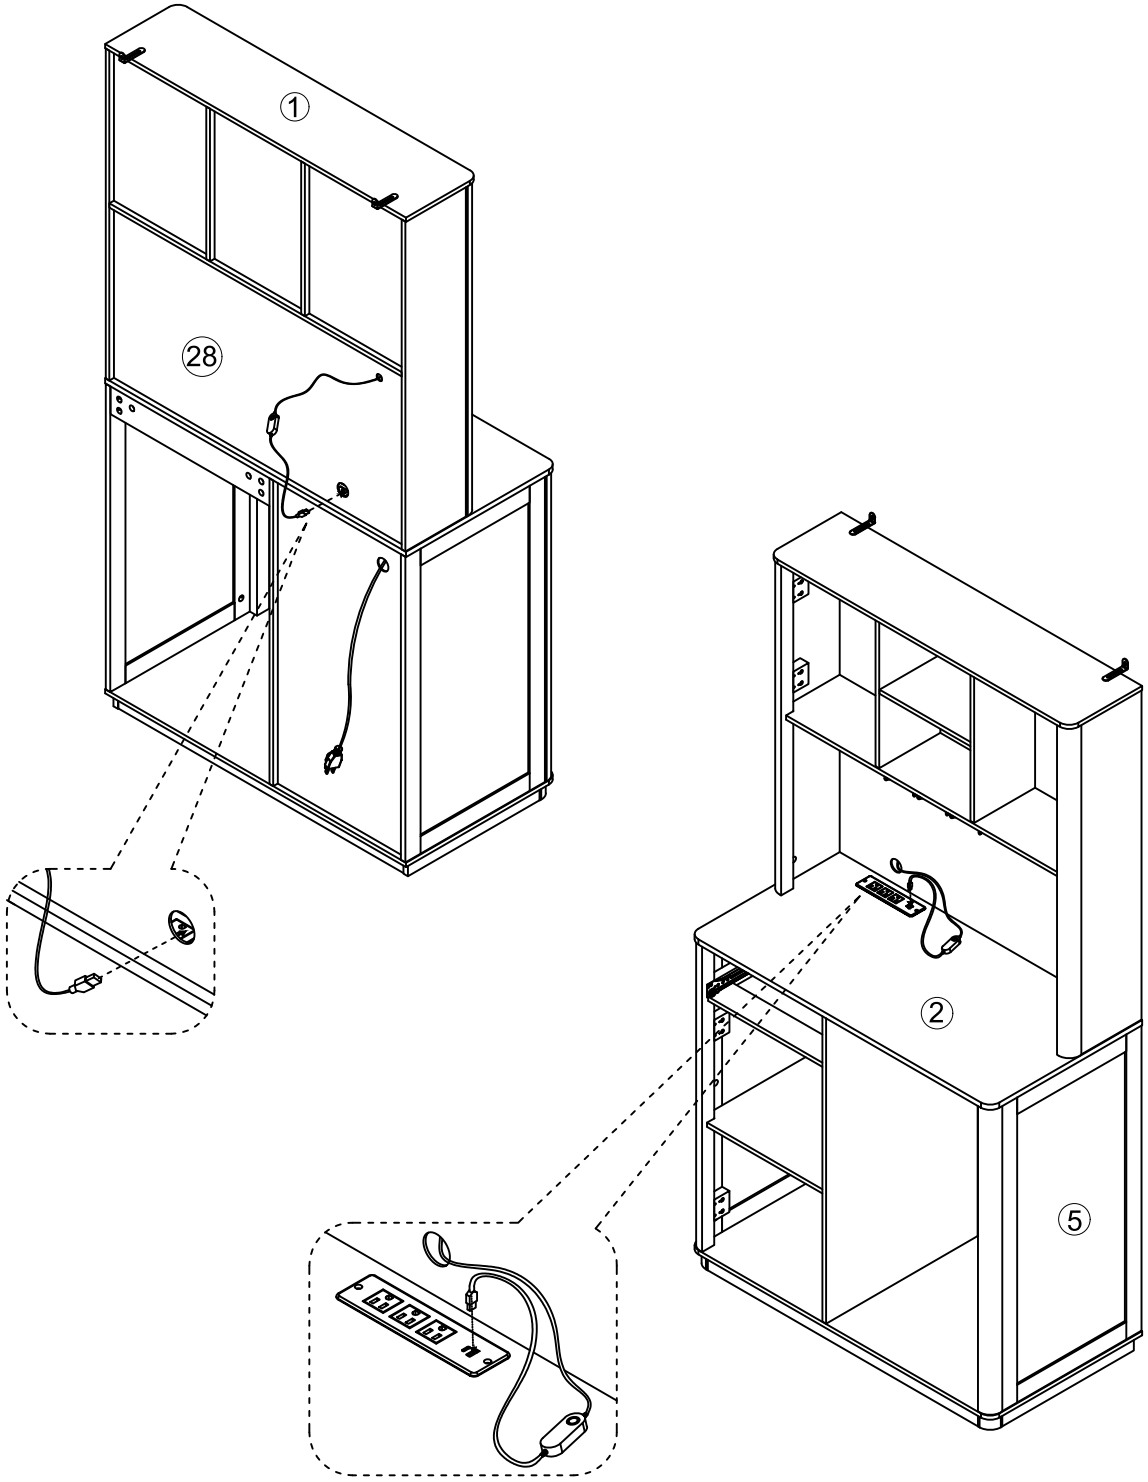



STEP38

Ø3.5X12mm	
E	X12


Ø35mm	
H	X6

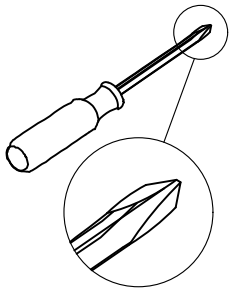


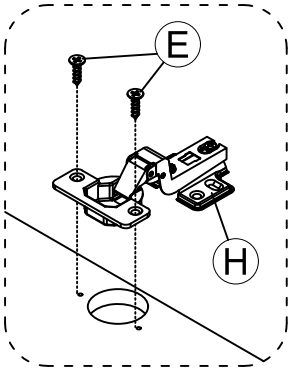


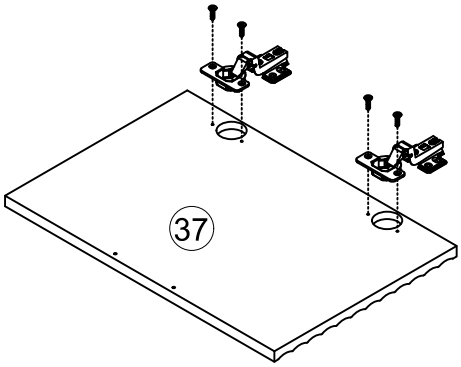



X2

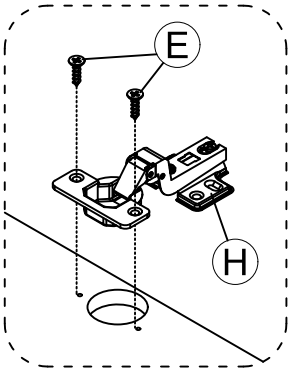


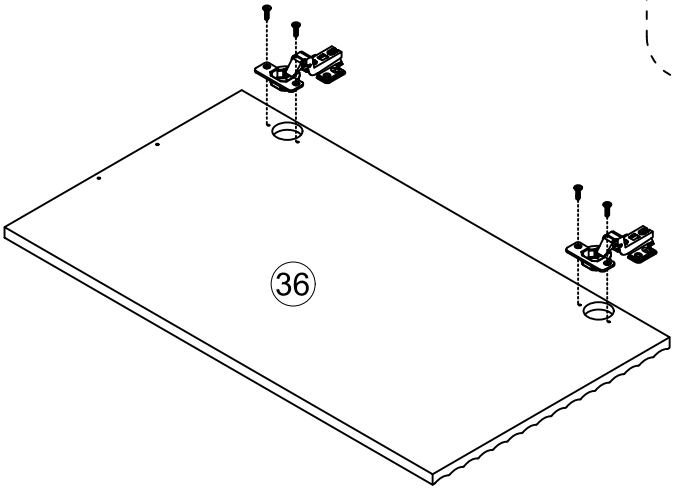

STEP39

 Ø3.5X12mm	 120X31X17mm
E X20	G X2

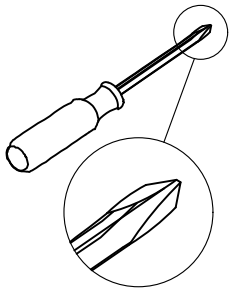


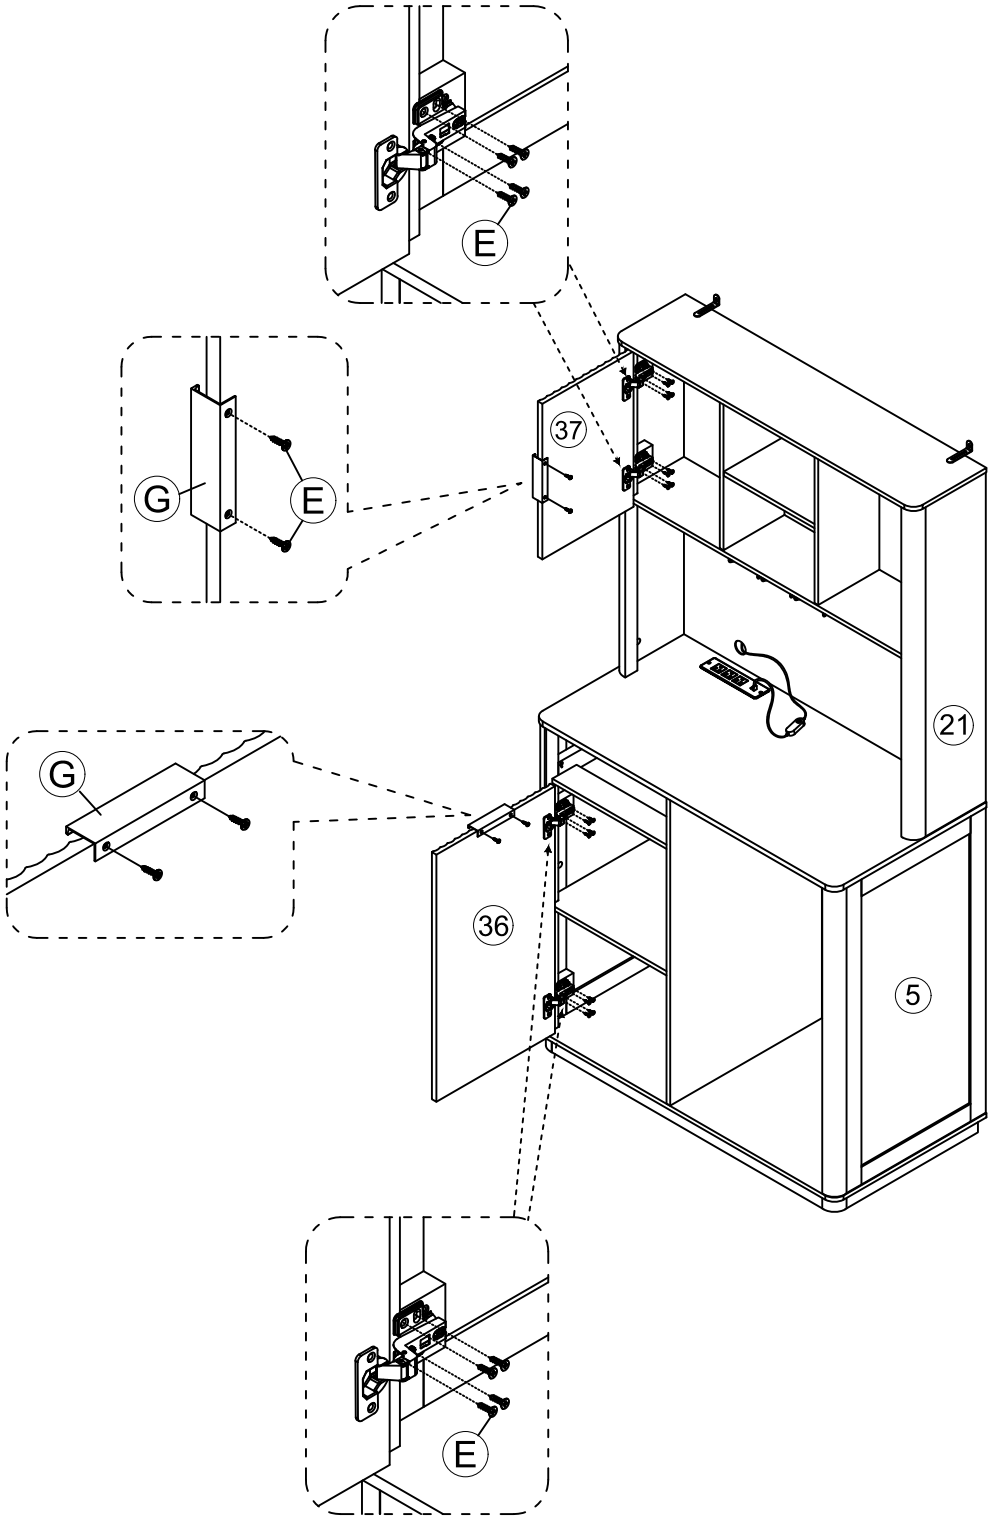


STEP40


Ø3.5X12mm	
E	X10


120X31X17mm	
G	X1

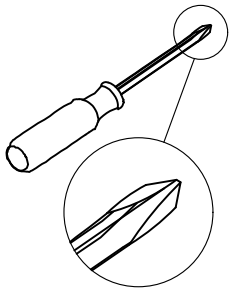

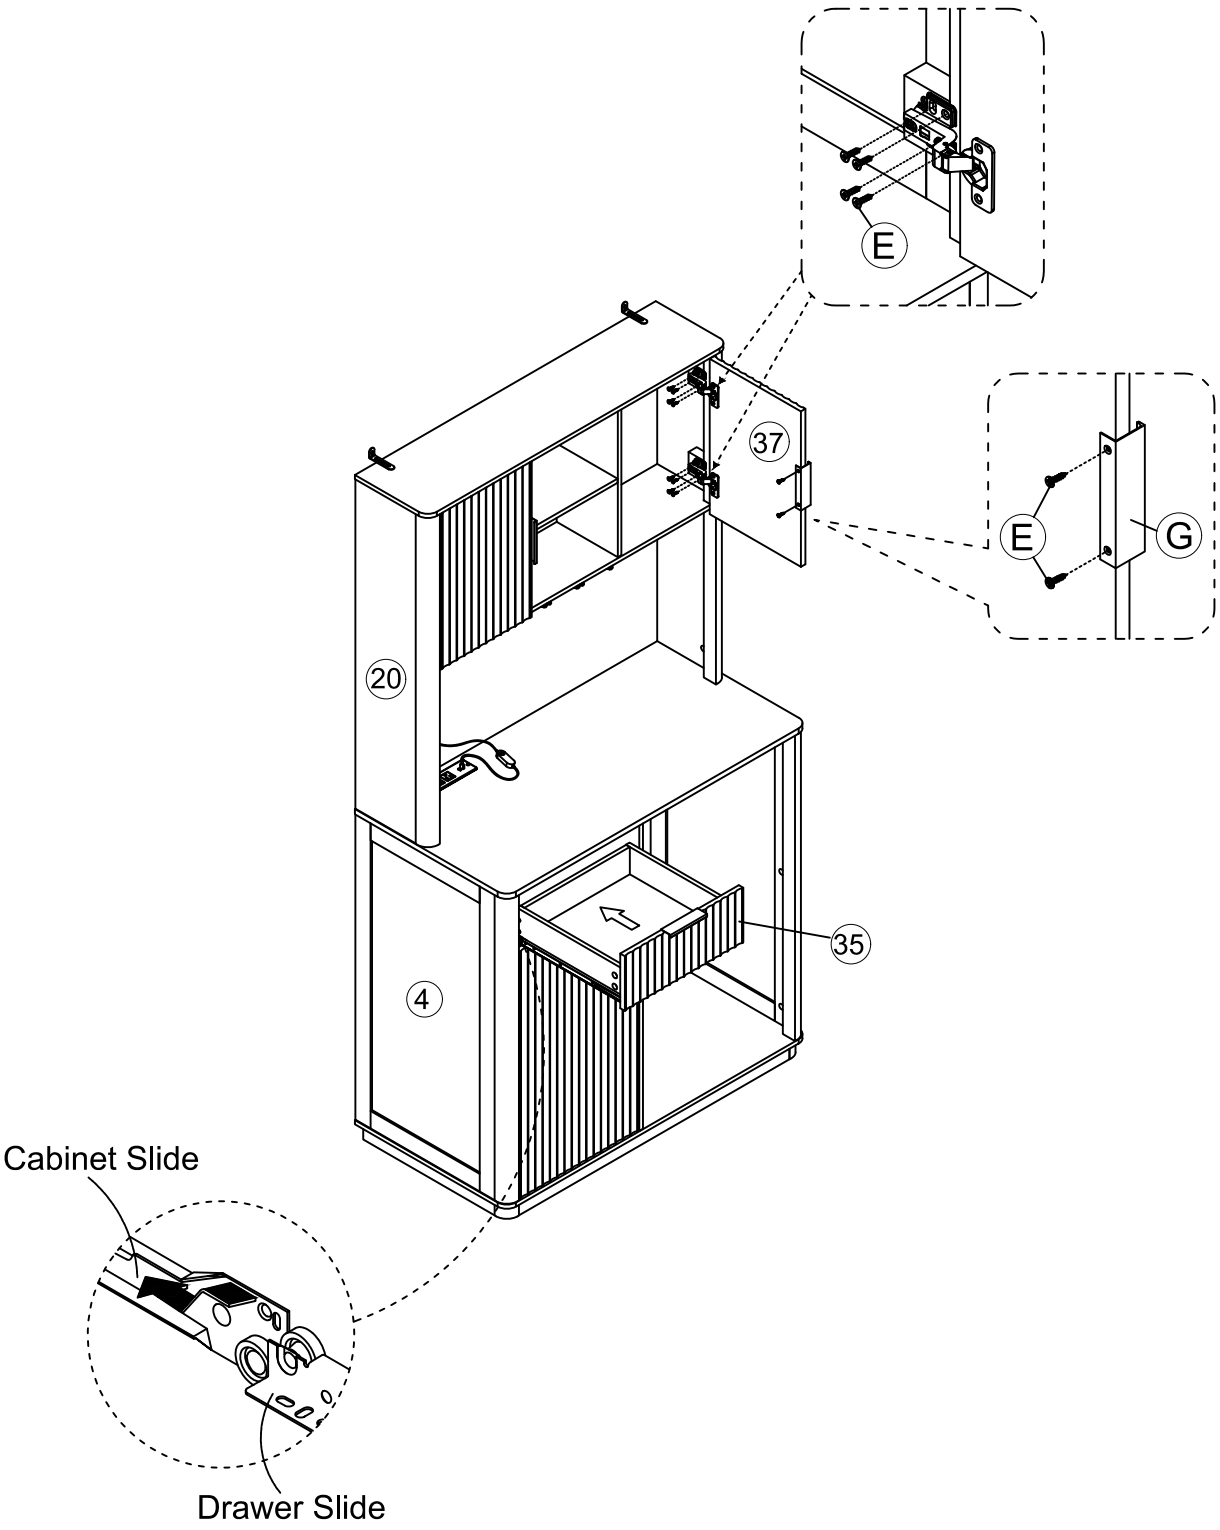


STEP41

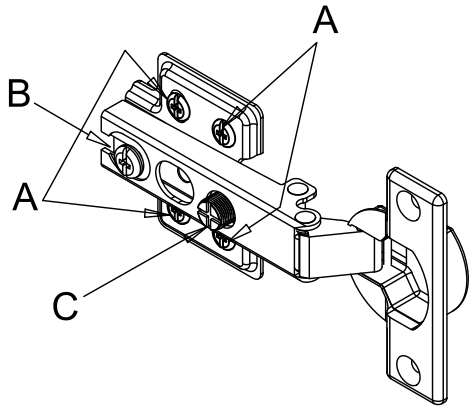


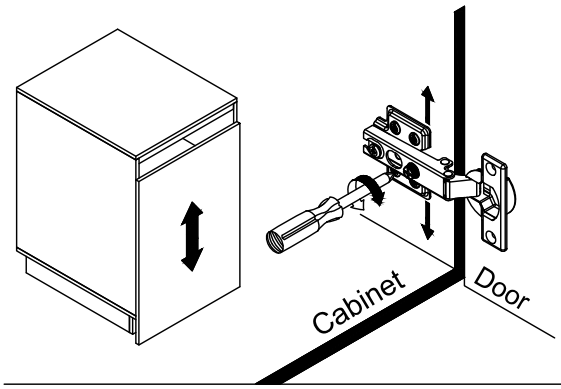

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

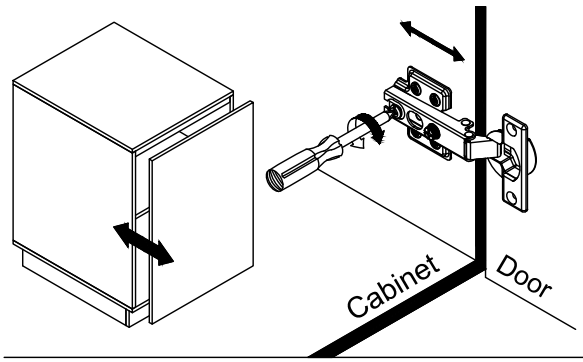



To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

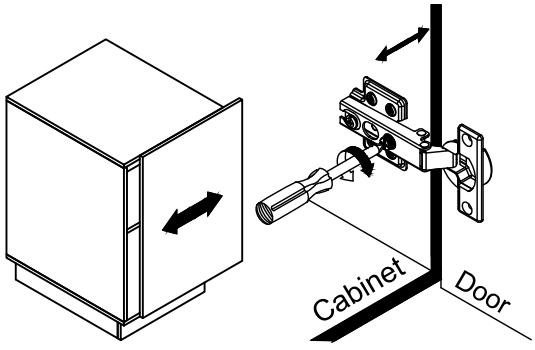


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP42

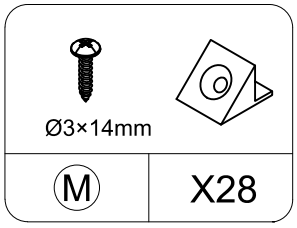


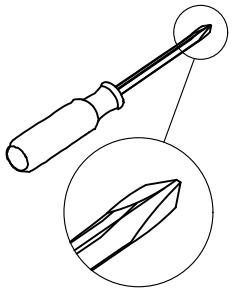

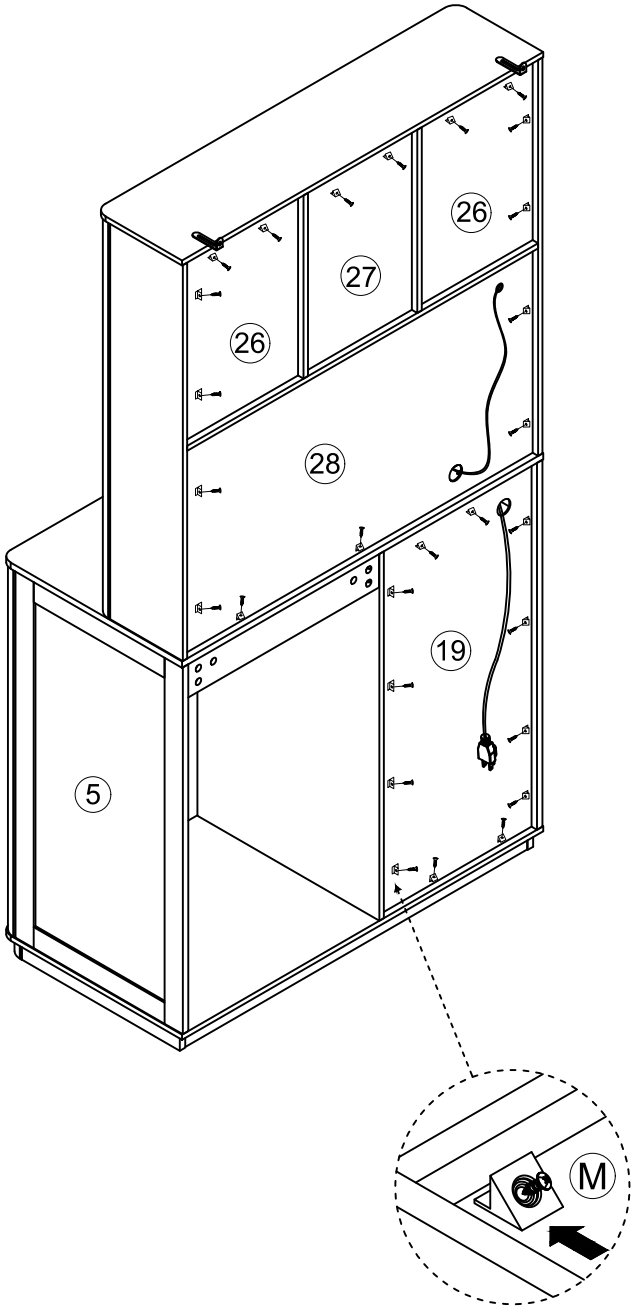

Insert the plastic buckle into the back plate slot , screw through the hole in the plastic buckle and lock it in place.

STEP43

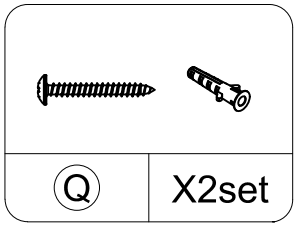


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.


NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

We have included a set of tipping restraint hardware for this unit.You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed,this restraint can provide protection against the unexpected tipping of the unit due to small tremors,bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




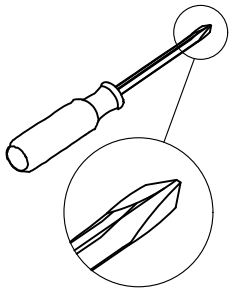


Install the tipping restraint hard ware

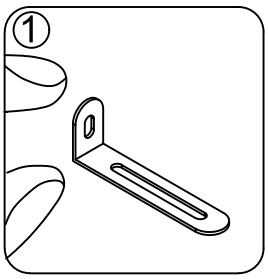


1.make mark on the wall

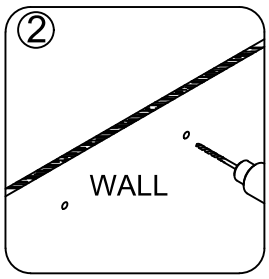


2.drill two Ø6 holes on the wall

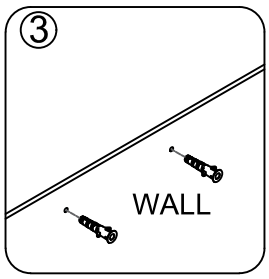



3.put two anchors in the holes

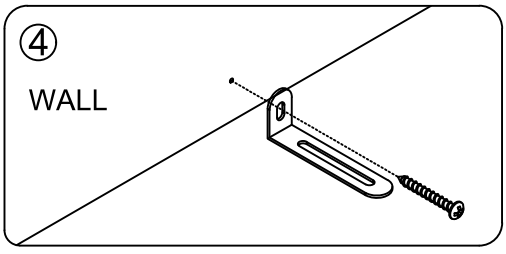


5.Push the cabinet close to the wall and then put on nylon tie to tighten it.

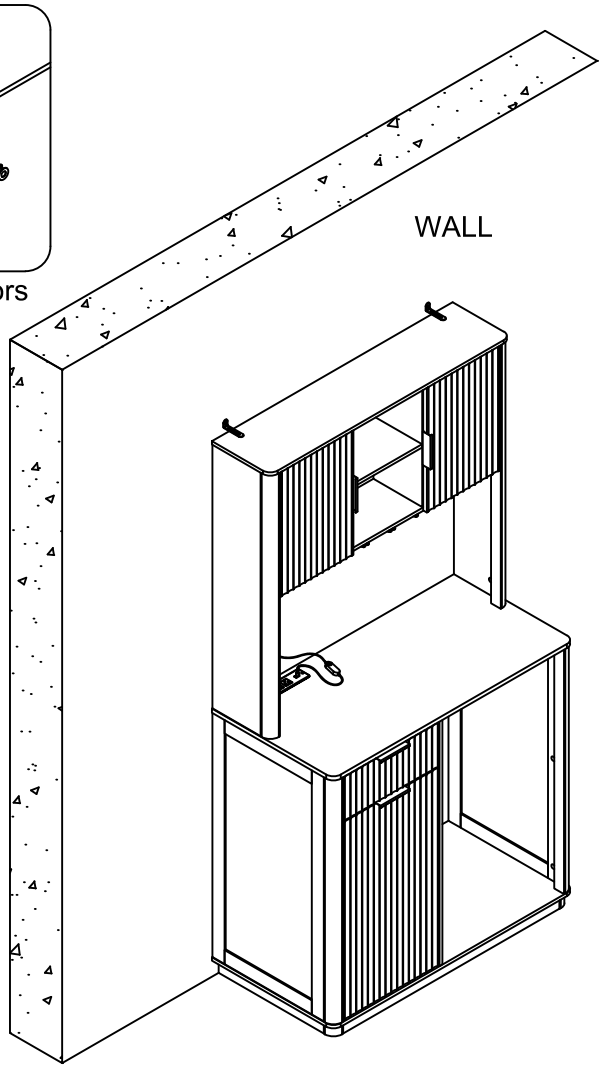

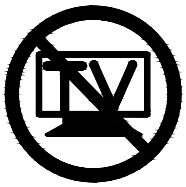⚠ WARNING		
		**Children have died from furniture tipover. To reduce the risk of furniture tipover:** •ALWAYS install anti-tip device provided. •NEVER put a TV on this product. •NEVER allow children to stand, climb or hang on drawers, doors, or shelves. •NEVER open more than one drawer at a time. •Place heaviest items in the lowest drawers. *This is a permanent label.* *Do not remove!*

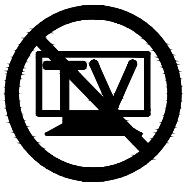⚠ AVERTISSEMENT		
		**Des enfants sont décédés à cause du basculement du meuble. Pour réduire le risque de la chute du meuble :** •TOUJOURS installer le dispositif anti-basculement fourni. •NE JAMAIS mettre un téléviseur sur ce produit. •NE JAMAIS laisser les enfants se tenir debout, grimper ni s'accrocher sur les tiroirs, les portes ou les tablettes. •NE JAMAIS ouvrir plus d'un tiroir à la fois. •Placer les articles les plus lourds sur les tiroirs inférieurs. *Cette étiquette est permanente.* *Ne pas retirer !*

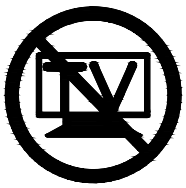⚠ ADVERTENCIA		
		**Los niños han muerto por el vuelco de los muebles. Para reducir el peligro de el mueble se vuelca:** •SIEMPRE instalar el dispositivo anti-volcadura suministrado. •NUNCA ponga un televisor en este producto. •NUNCA permita que los niños se paren, se suban o se cuelguen de los cajones, puertas o repisas. •NUNCA abra más de un cajón a la vez. •Coloque los artículos más pesados en los cajones inferiores. Esta es una etiqueta permanente. ¡No quitar!